









A

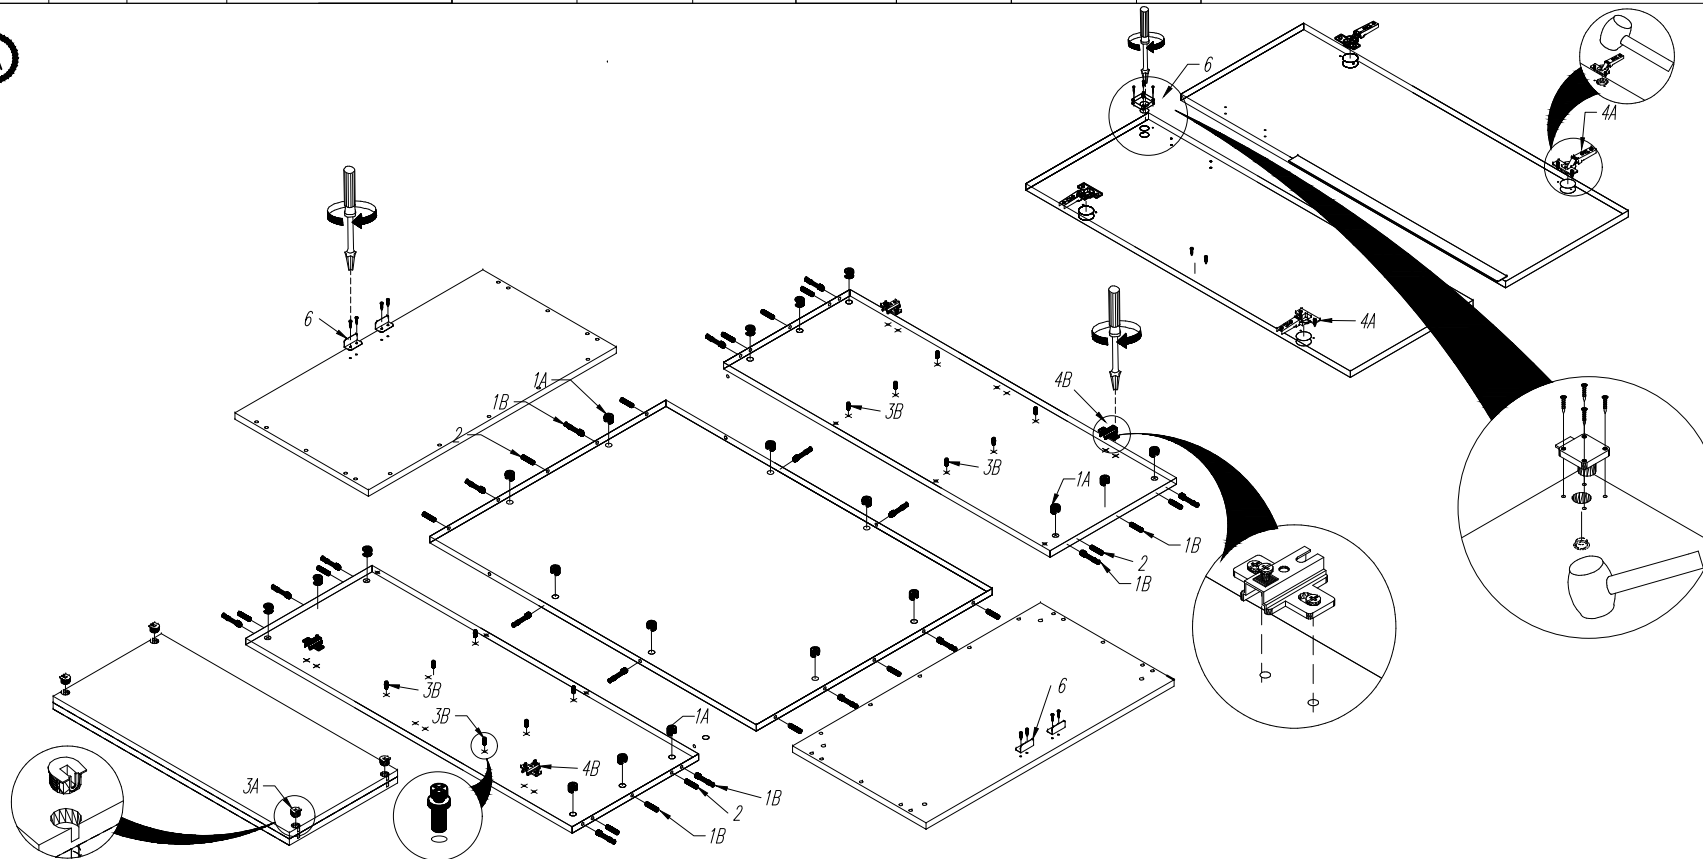



B

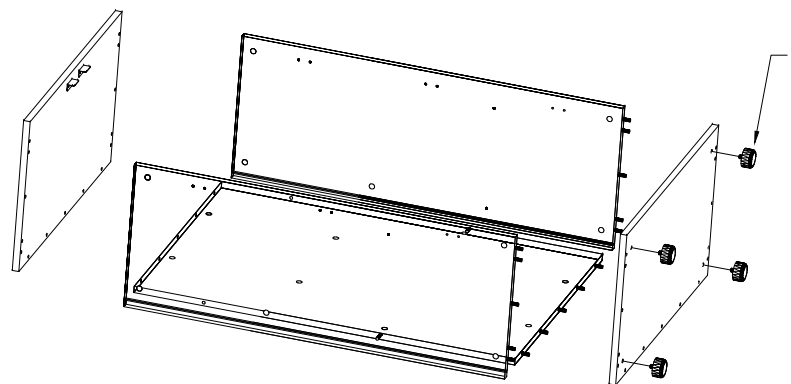






KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOLKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

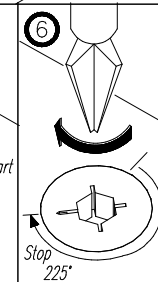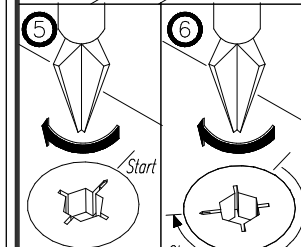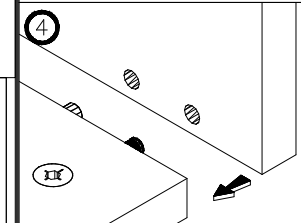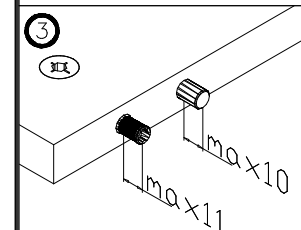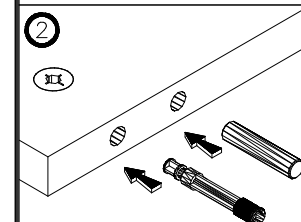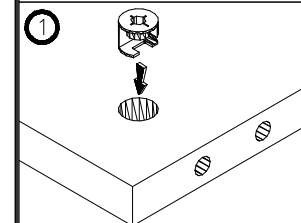


C

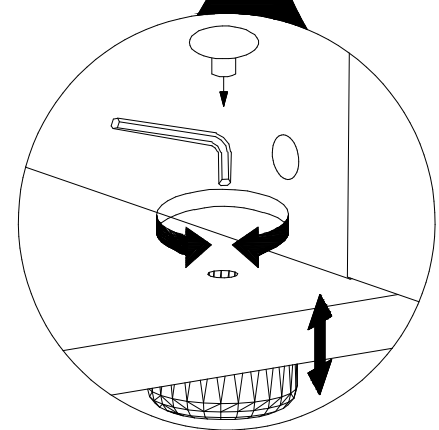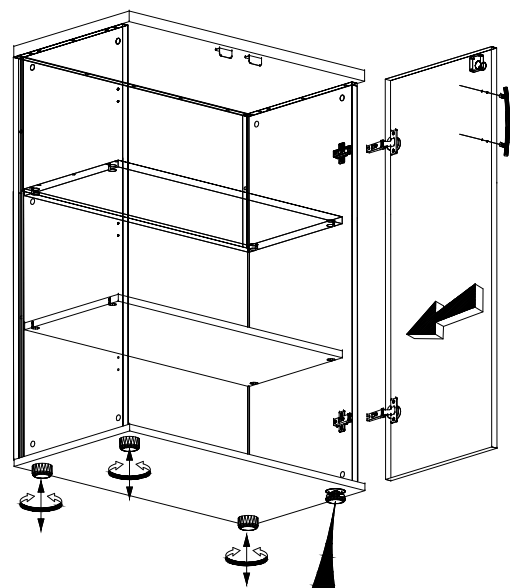


D

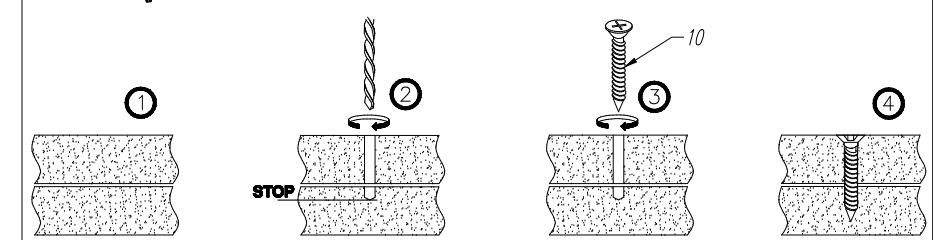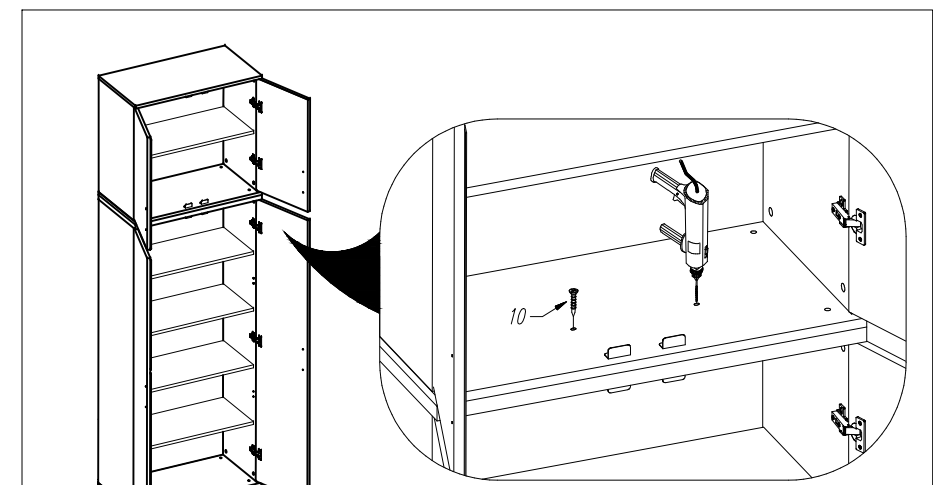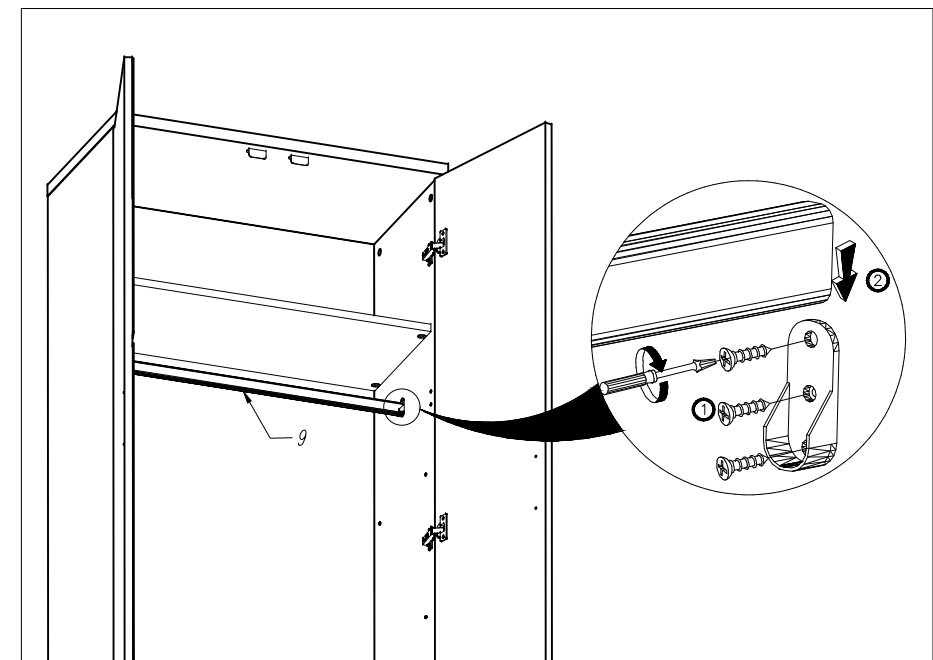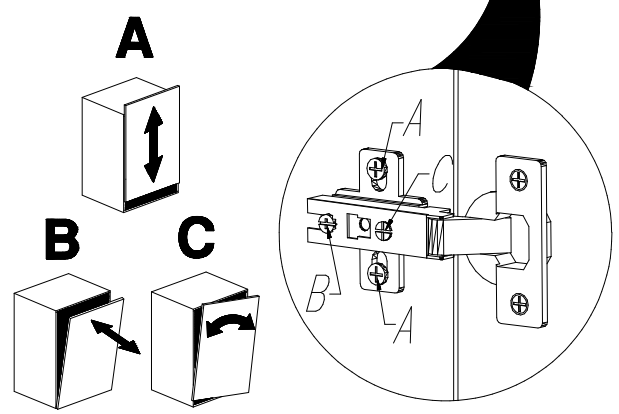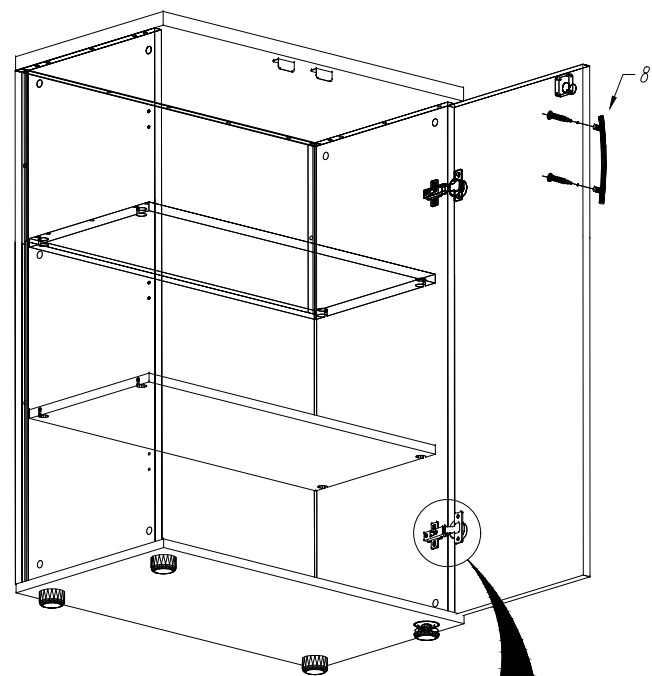





△

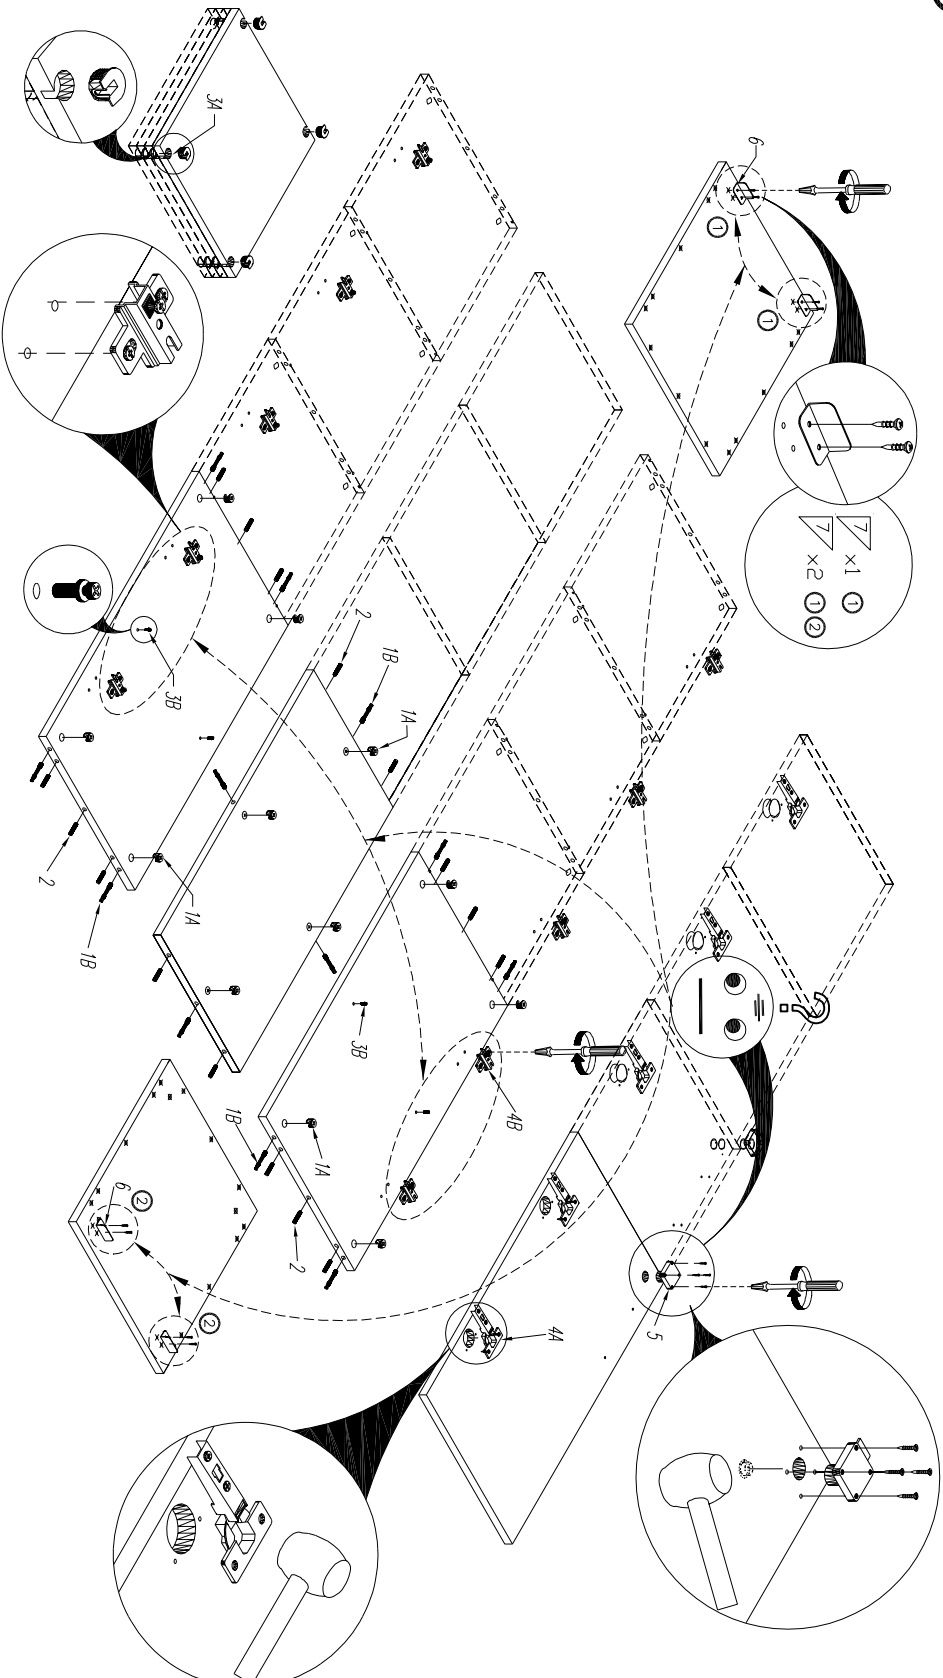

B

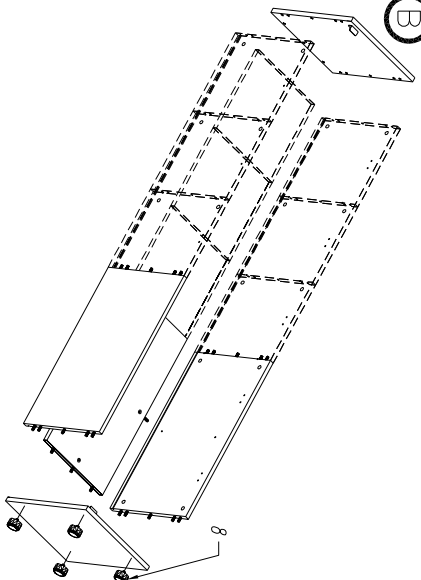

C

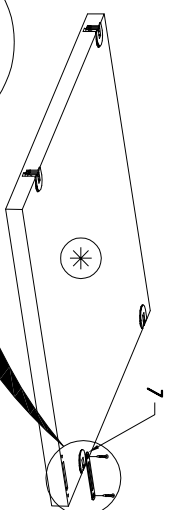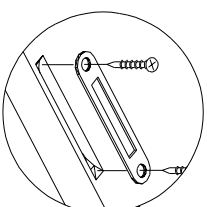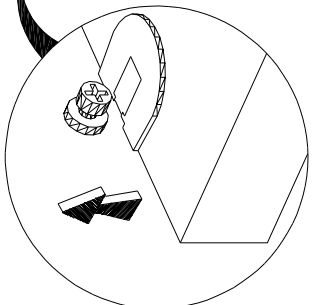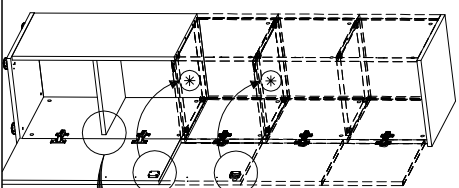


* - ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN

KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOŁKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEFOLGE VON
EXZENTERN UND DÜBELN.


1




2

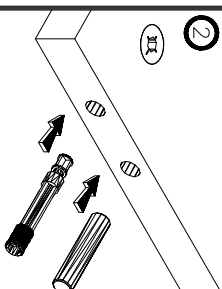


3

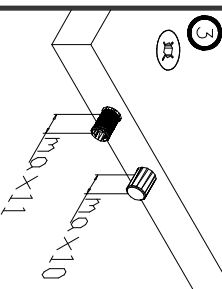


4

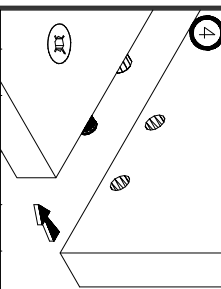

5



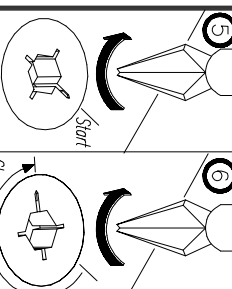




6

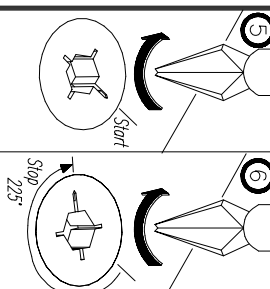

Start

Stop 225°

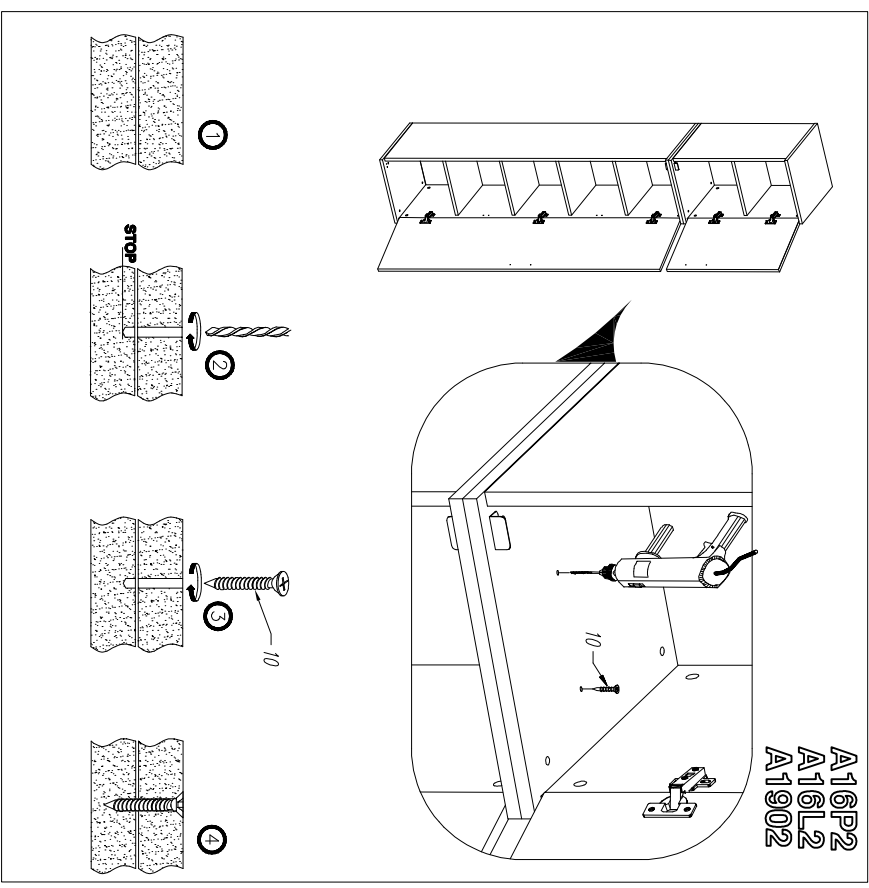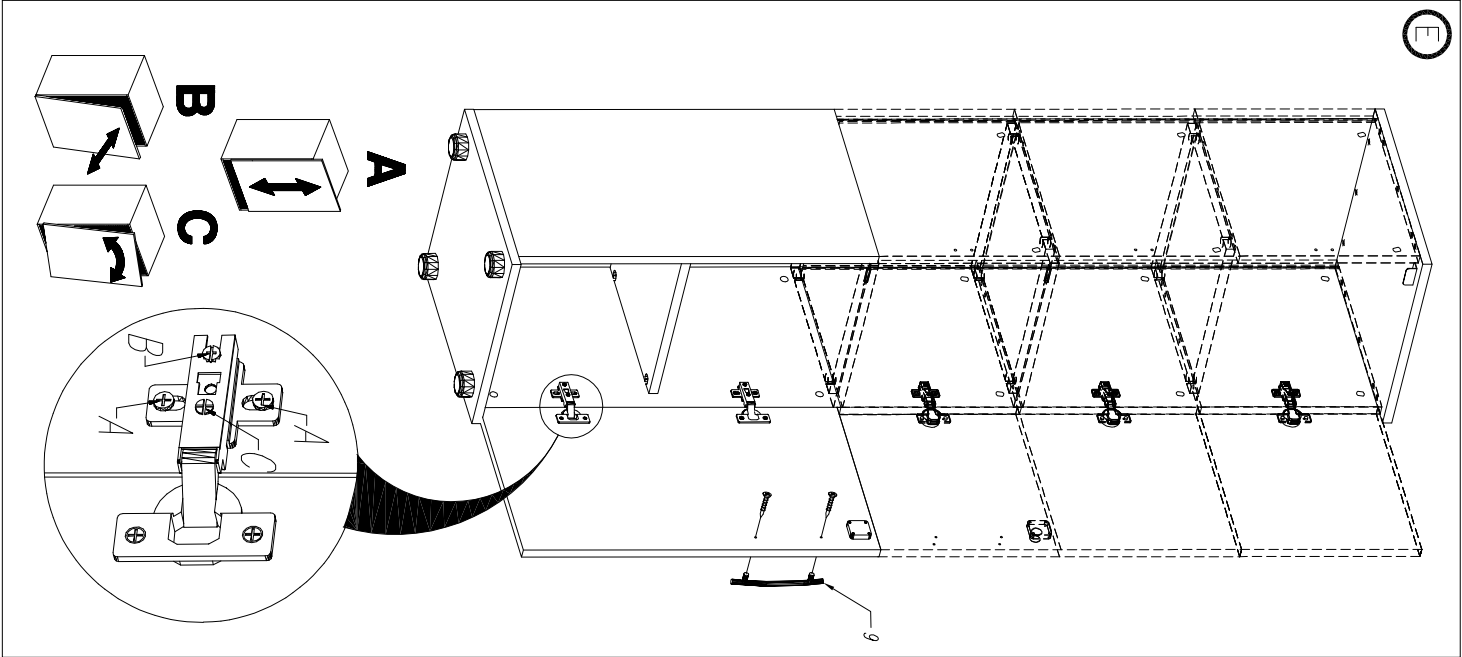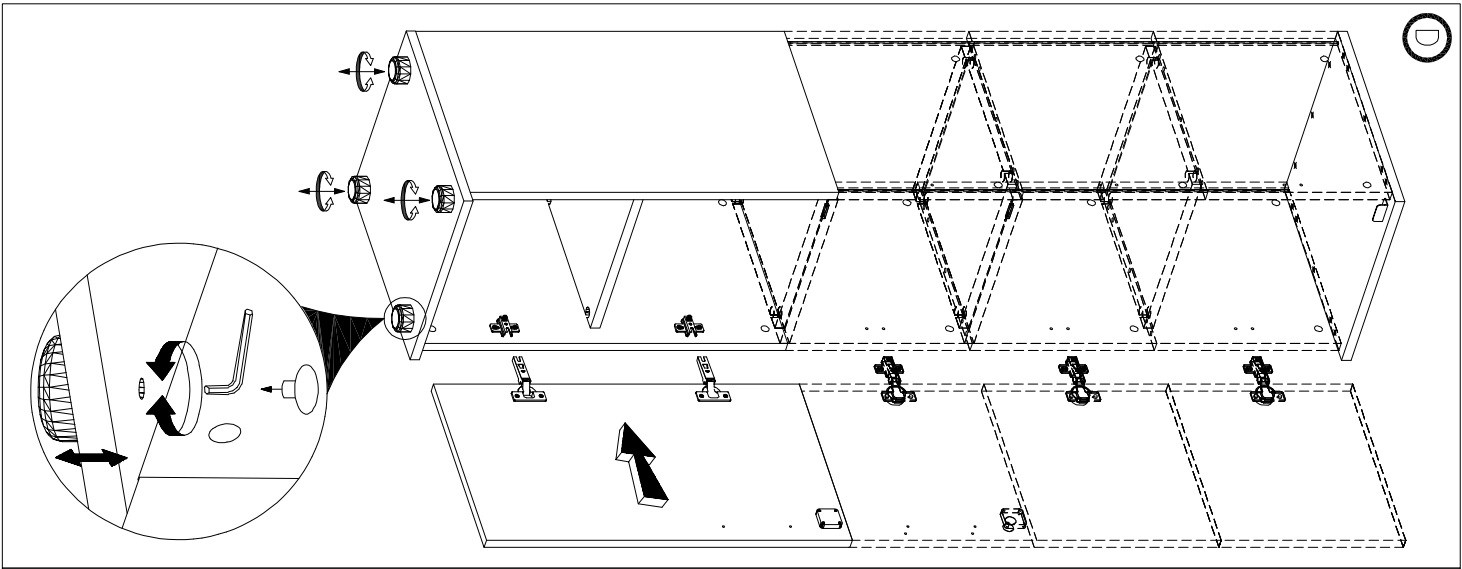

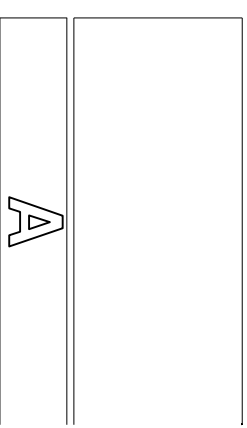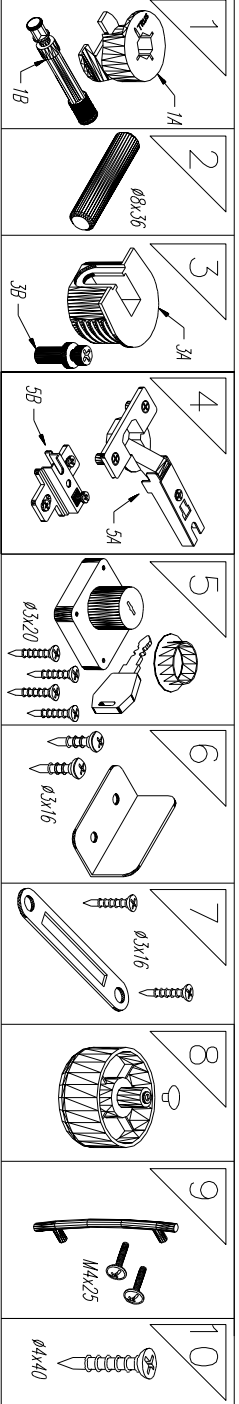


 A6902L2	 A66P2	 A66L2	 A58P2	 A58L2	 A56P2	 A56L2	 A5902L2	 A46P2	 A46L2	 A48P2	 A48L2
1 ×20 2 ×16 3 ×20 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×20 2 ×16 3 ×20 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×20 2 ×16 3 ×20 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×18 2 ×16 3 ×16 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×18 2 ×16 3 ×16 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×18 2 ×16 3 ×16 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×18 2 ×16 3 ×16 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×18 2 ×16 3 ×16 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×14 2 ×18 3 ×12 4 ×3 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×14 2 ×18 3 ×12 4 ×3 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×14 2 ×18 3 ×12 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10 1 ×14 2 ×18 3 ×12 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10											


 A4902L2	 A36P2	 A36L2	 A38P2	 A38L2	 A3902L2	 A26P2	 A26L2	 A2902L2	 A16P2	 A16L2	 A1902L2
1 ×14 2 ×18 3 ×12 4 ×4 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×8 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×8 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×8 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×8 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×1 7 ×1 8 ×4 9 ×1 10	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×2 7 ×1 8 ×1 9 ×1 10 ×2	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×2 7 ×1 8 ×1 9 ×1 10 ×2	1 ×12 2 ×16 3 ×4 4 ×2 5 ×1 6 ×2 7 ×1 8 ×1 9 ×1 10 ×2	

A




A

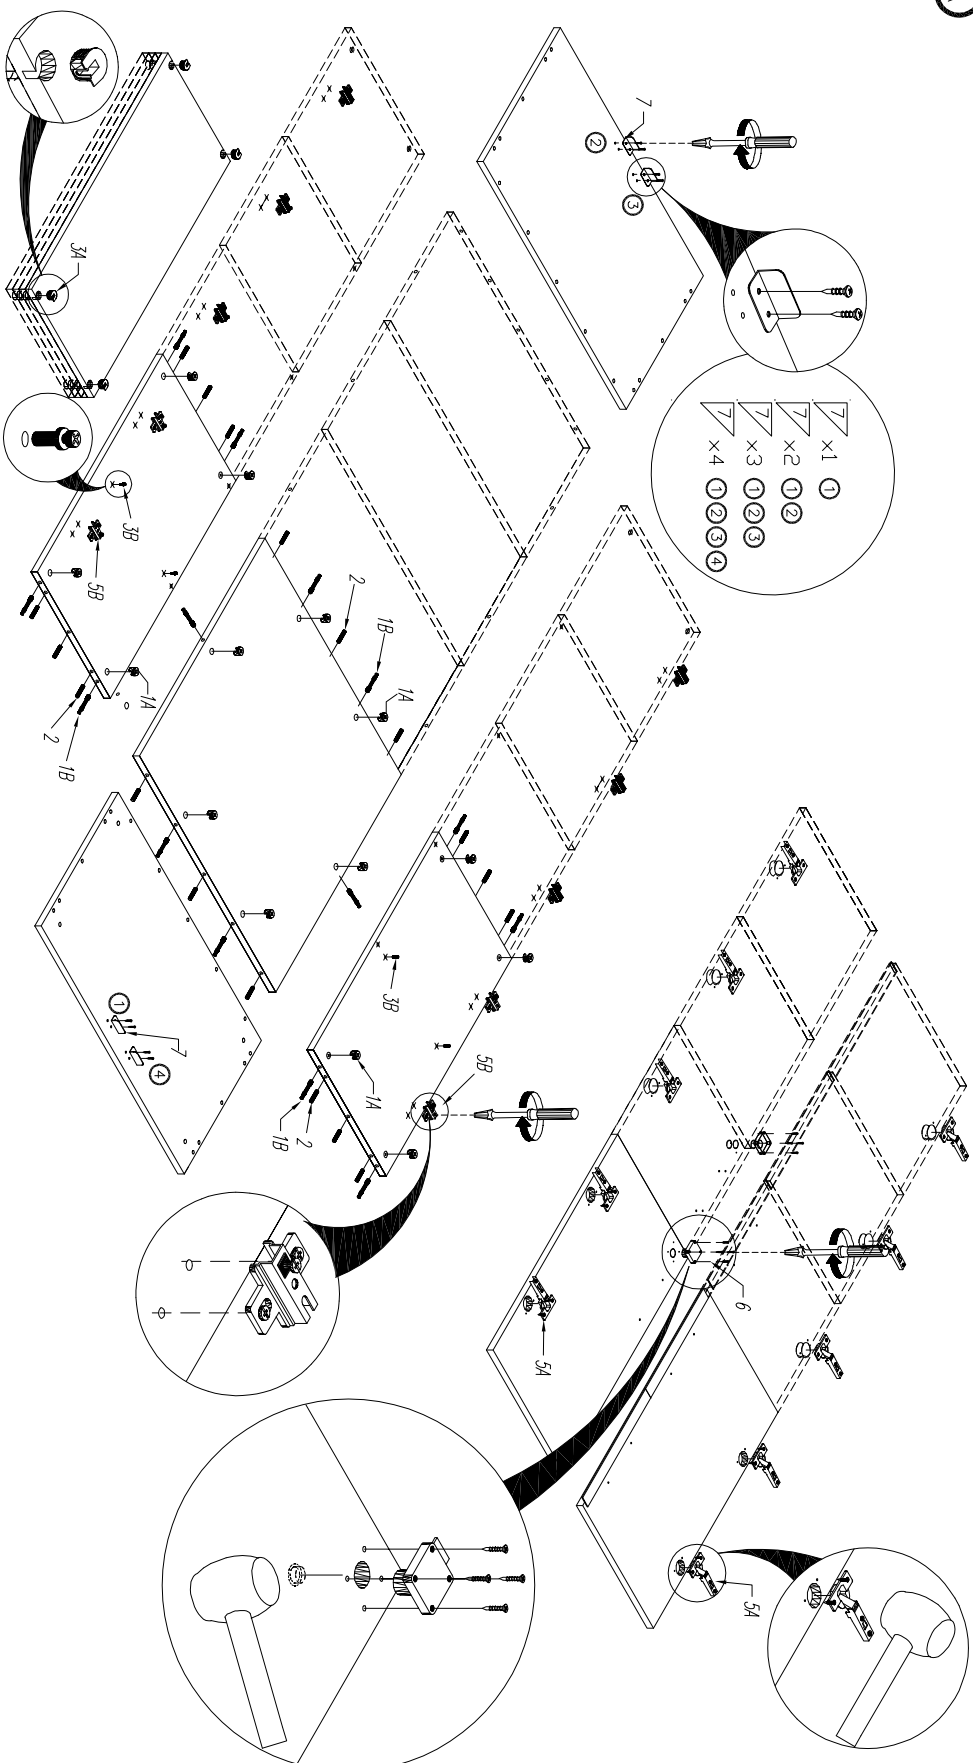

B






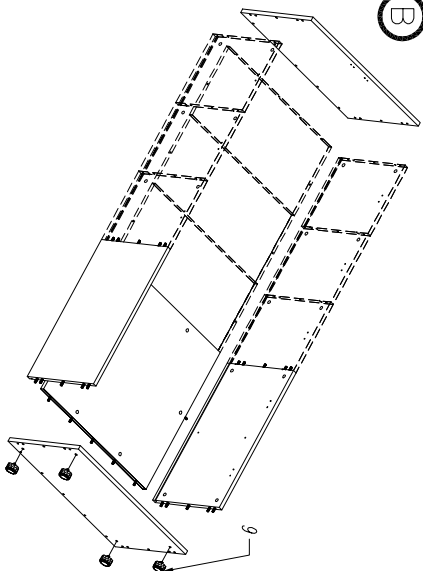


C

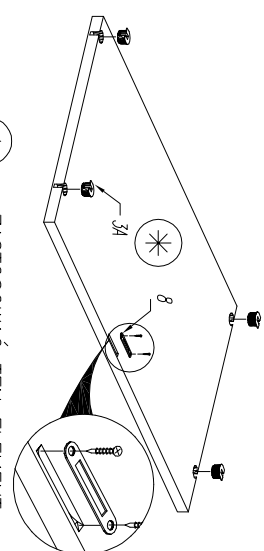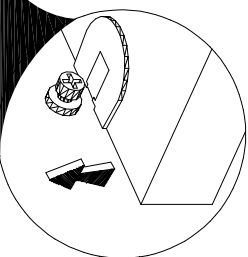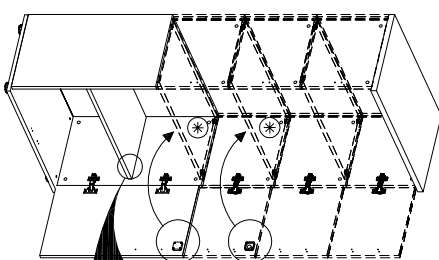


(*) – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

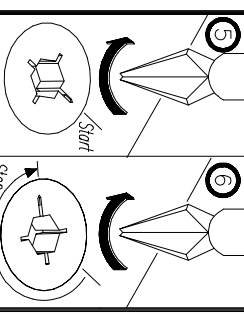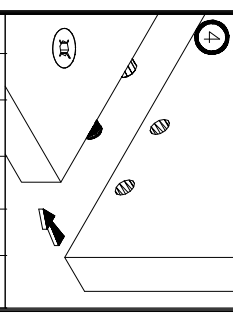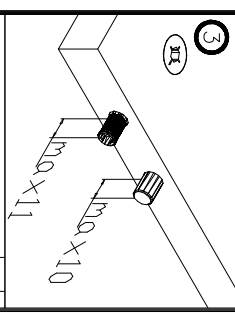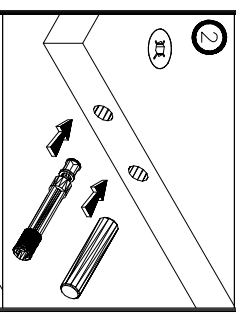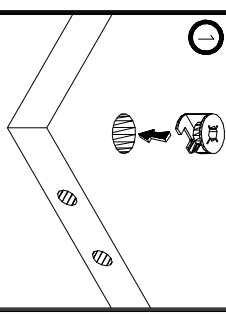


D

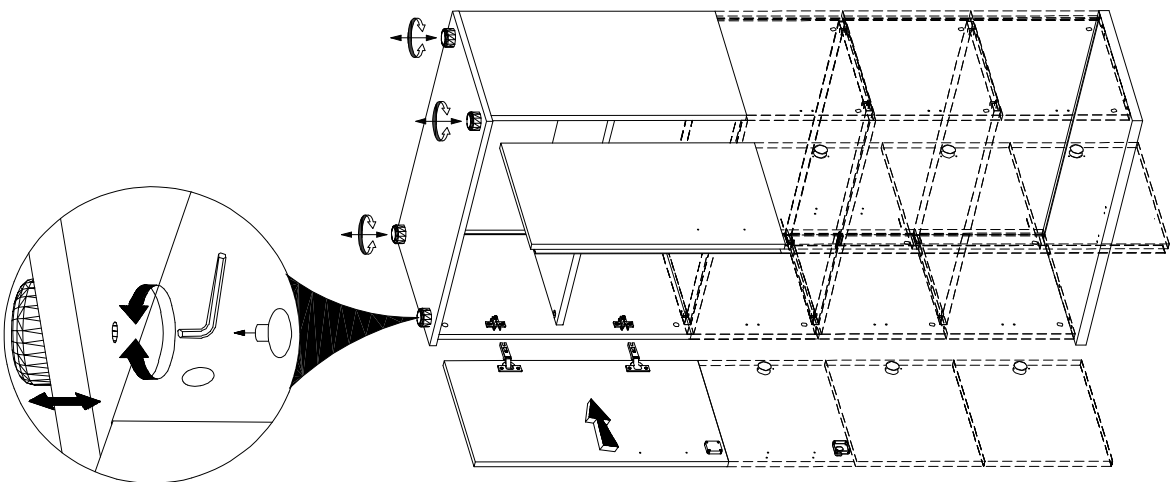

E

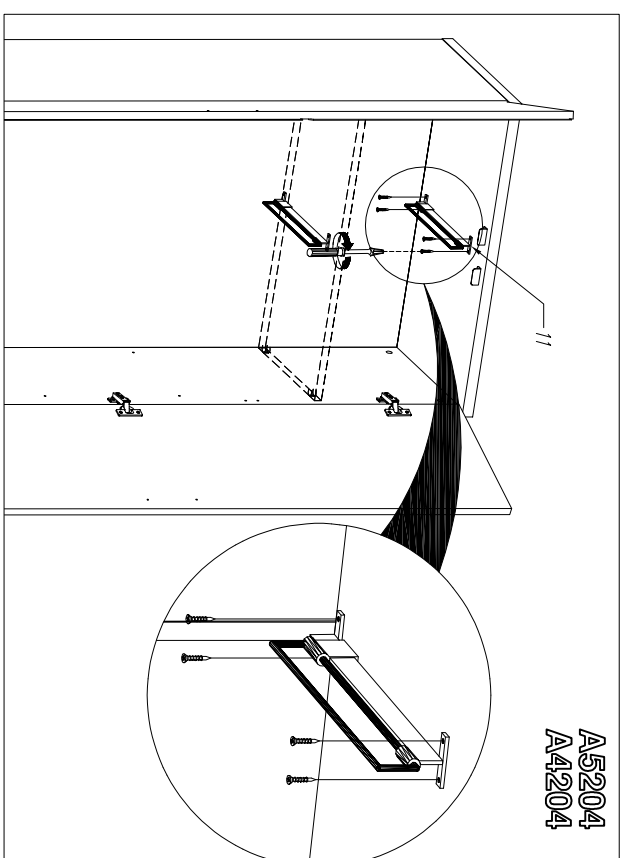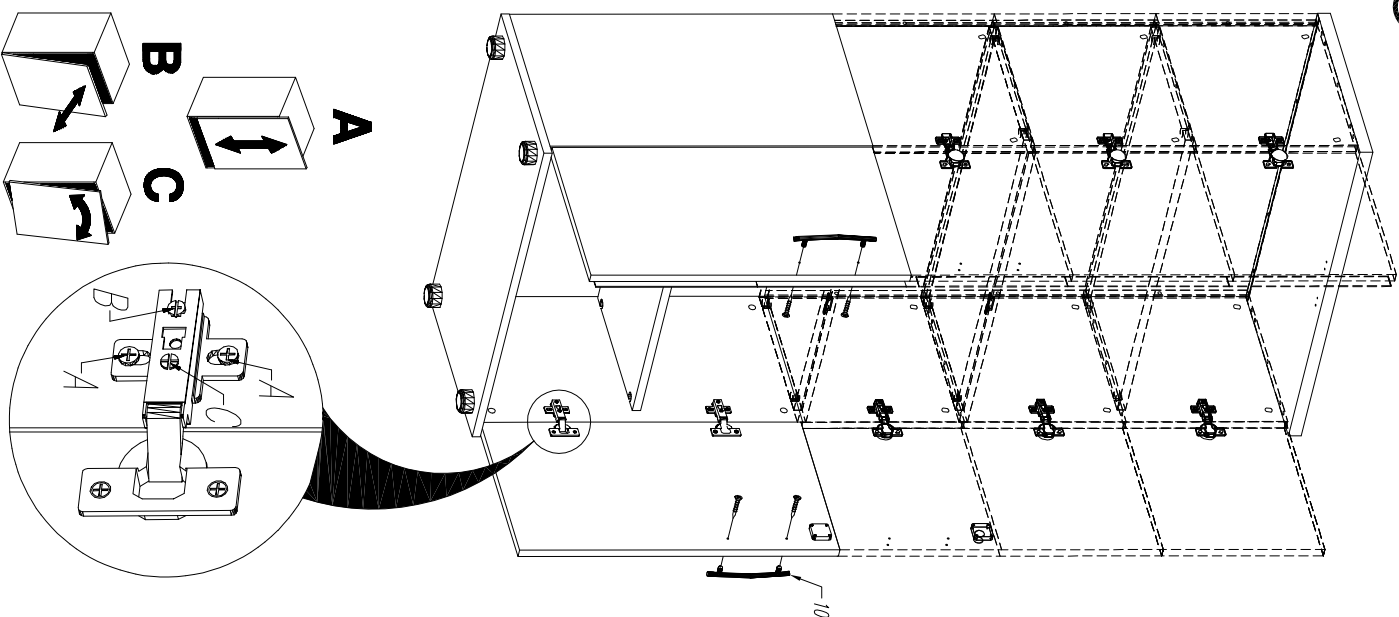

A5204
A4204

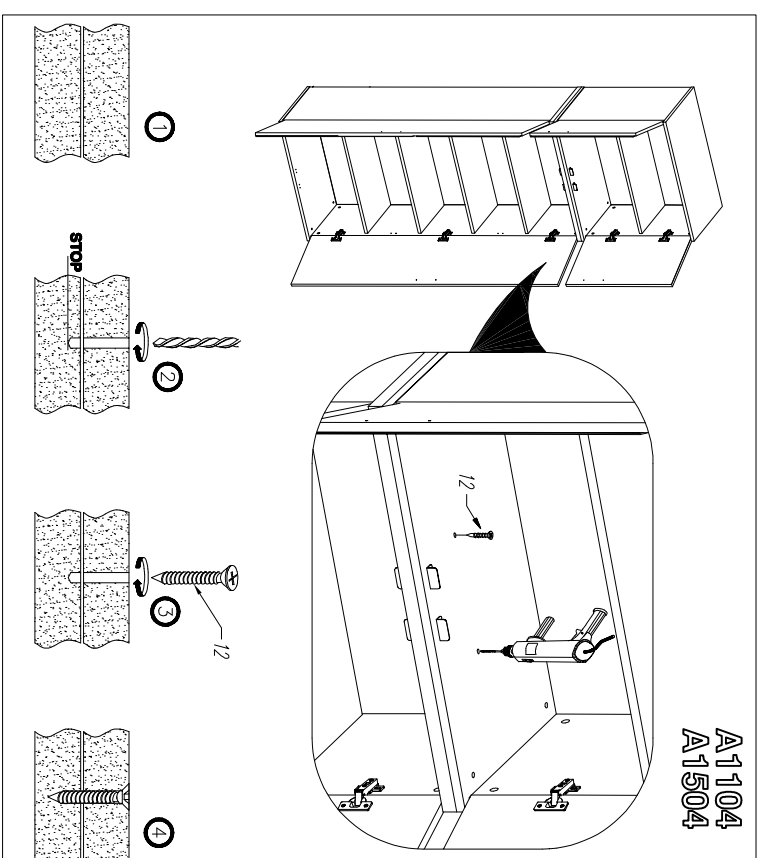

A1104
A1504

