

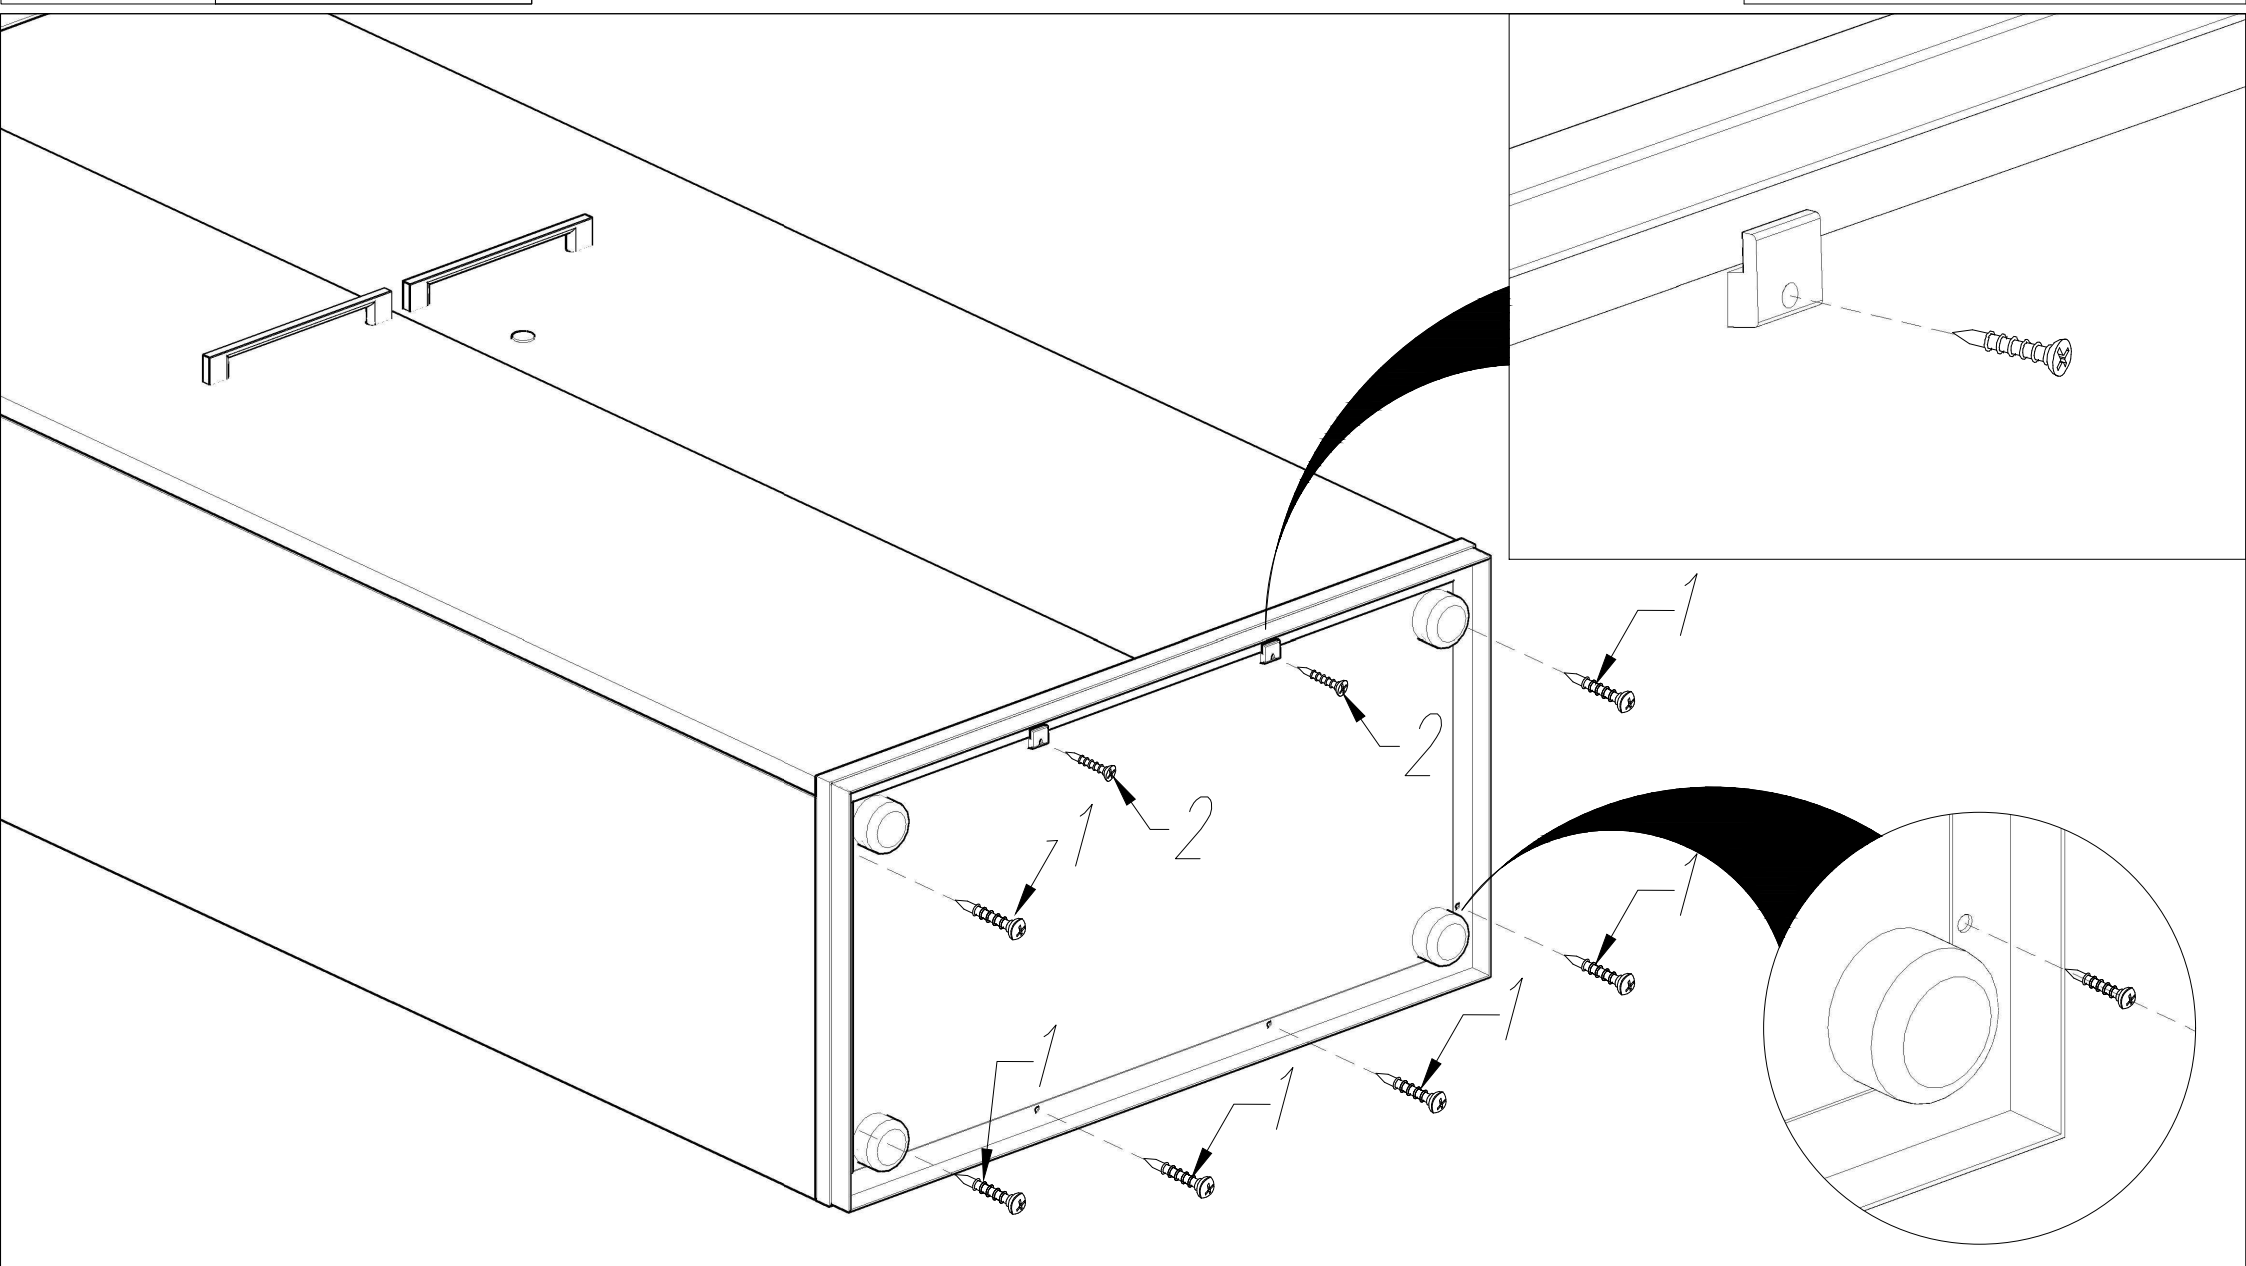
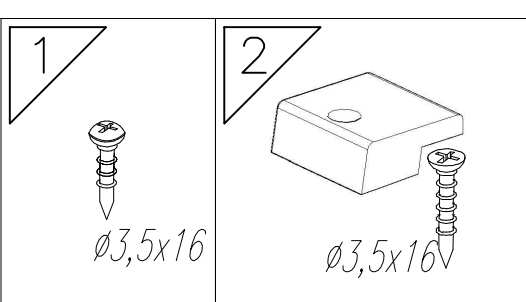
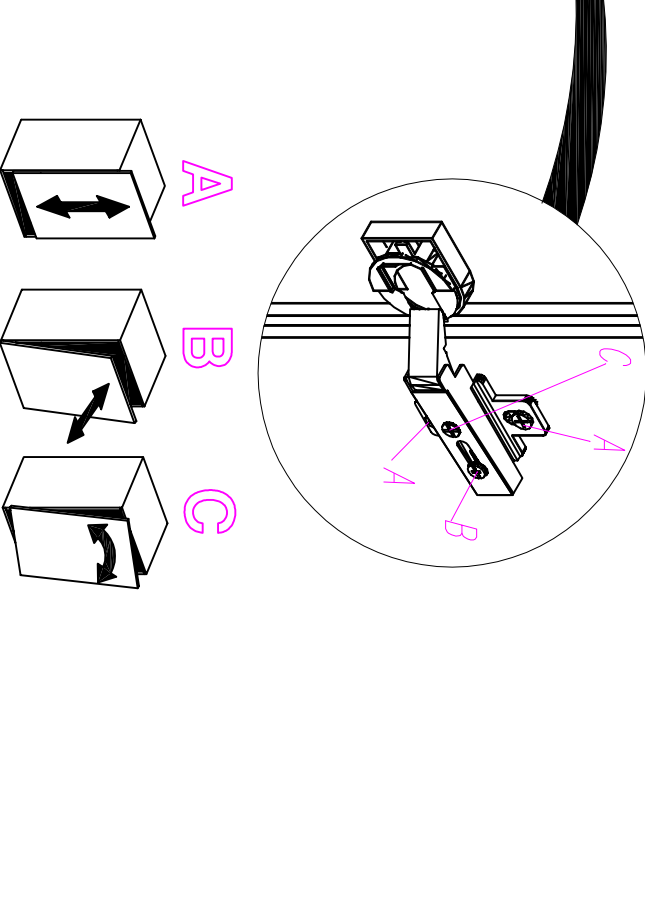
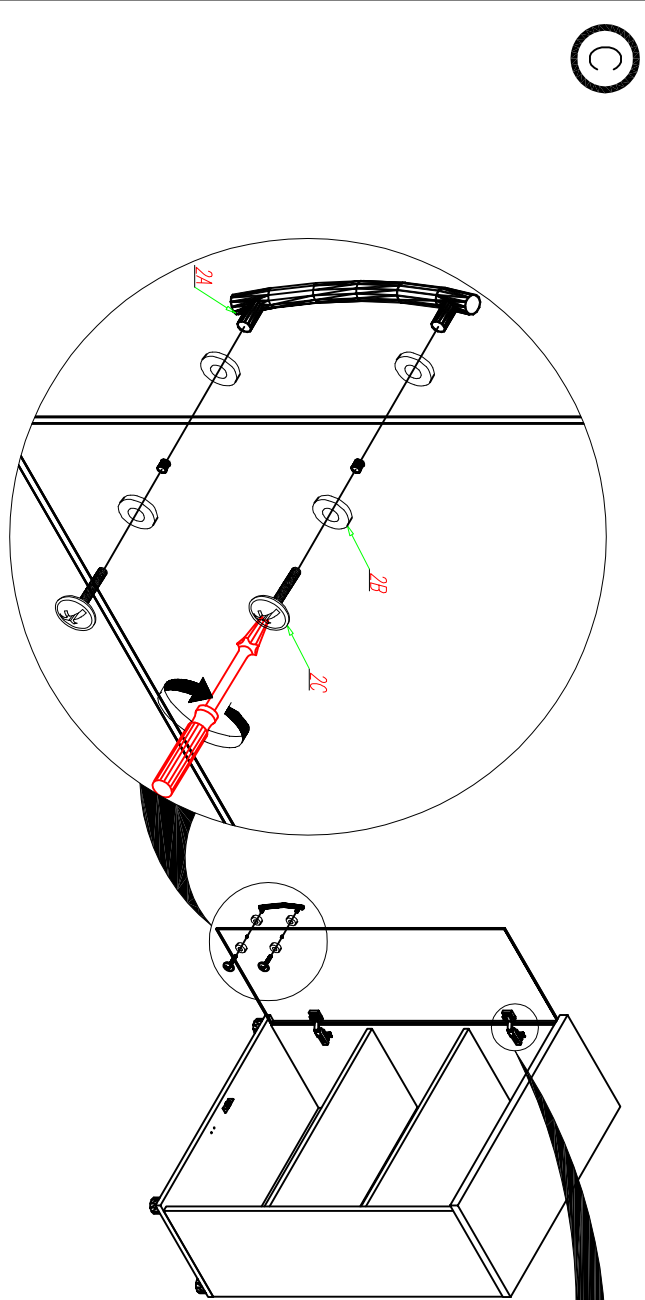


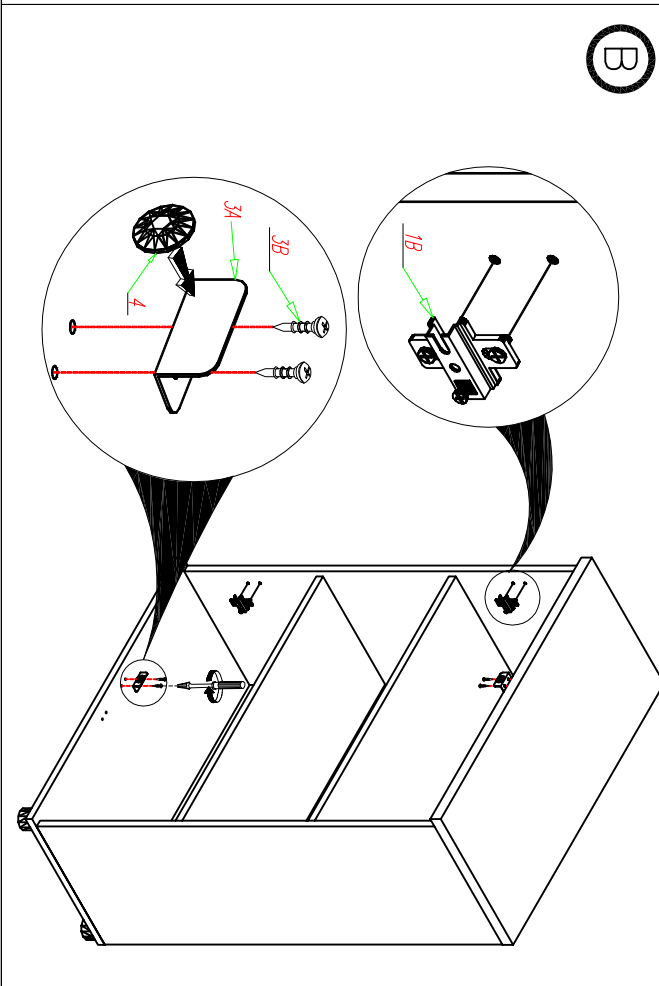


- 1
1D
1C
1E
1B
AS2 x2
AS3 x3
ø5x9
- 2
2A
2B
2C
M4x12
x1
- 3
3A
3B
ø3x16
x2
- 4
x2


	AS
--	-----------

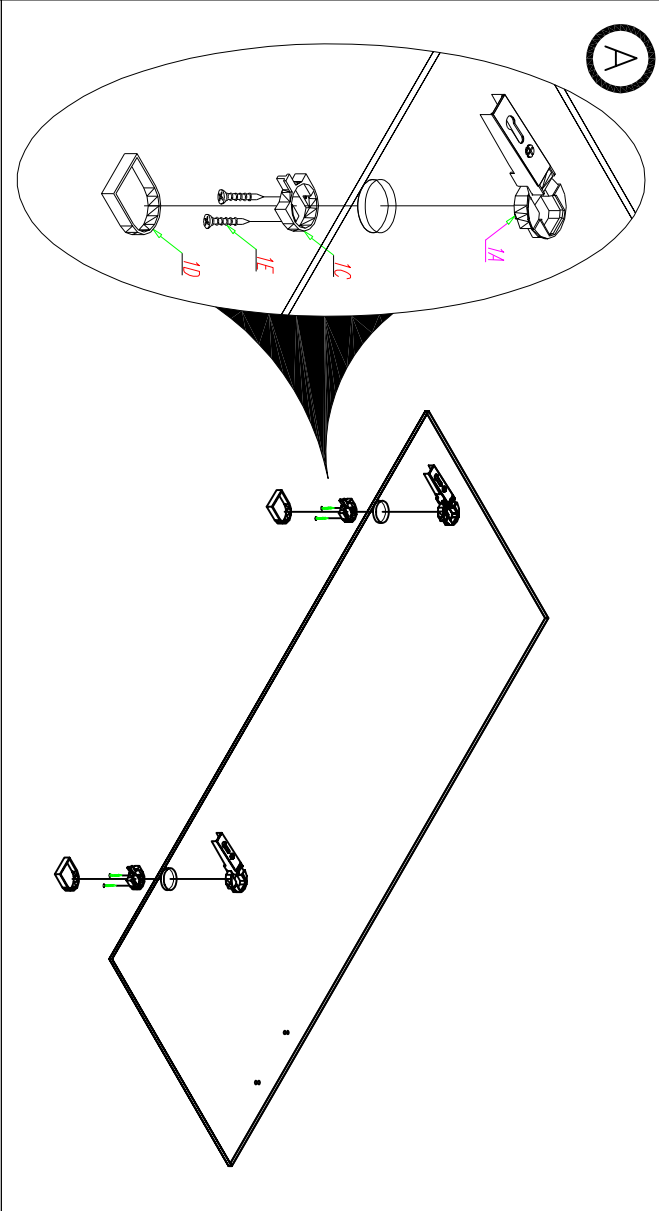




A

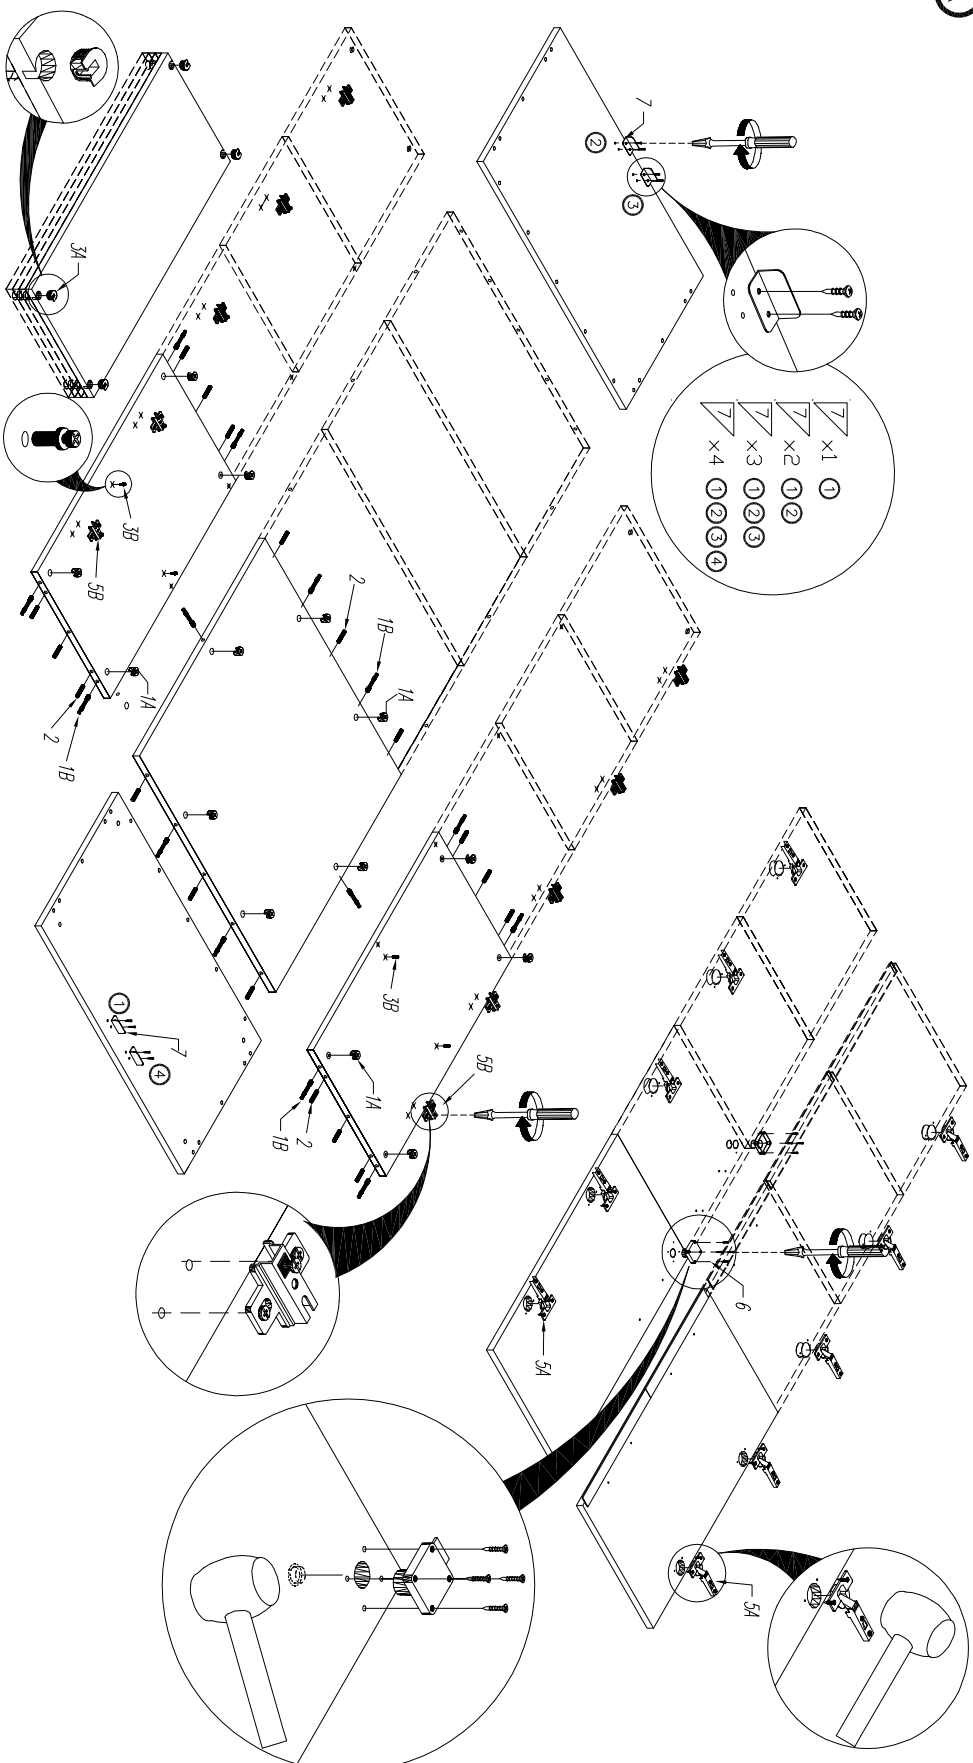

B





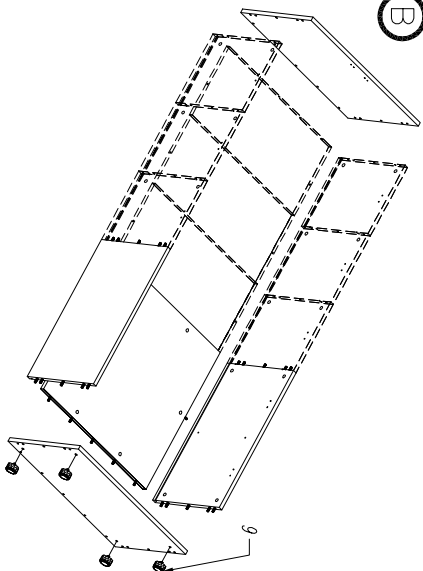


C

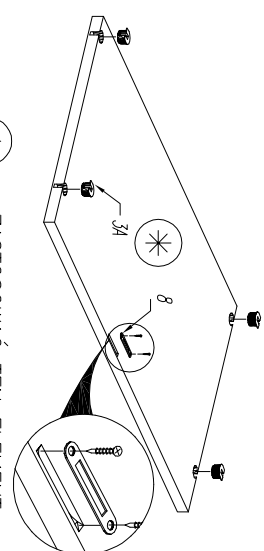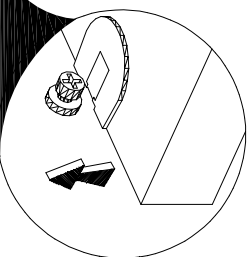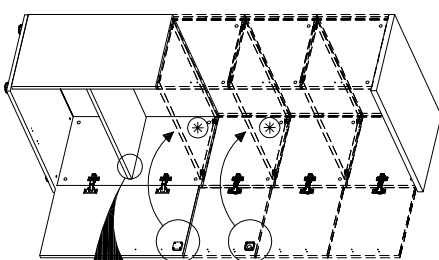


(*) – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

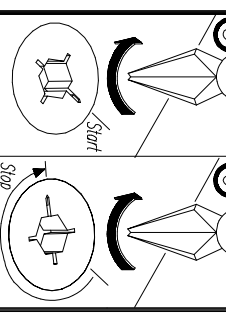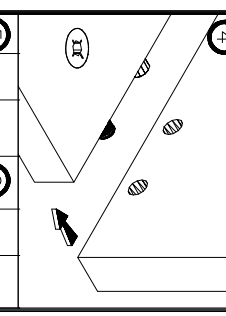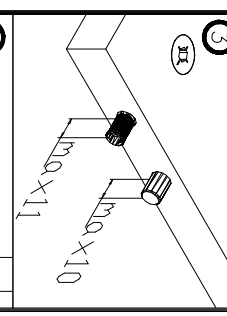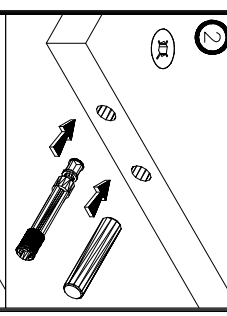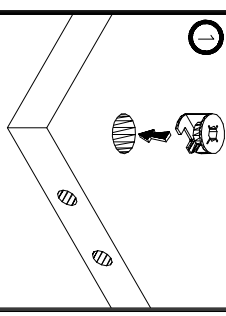


D

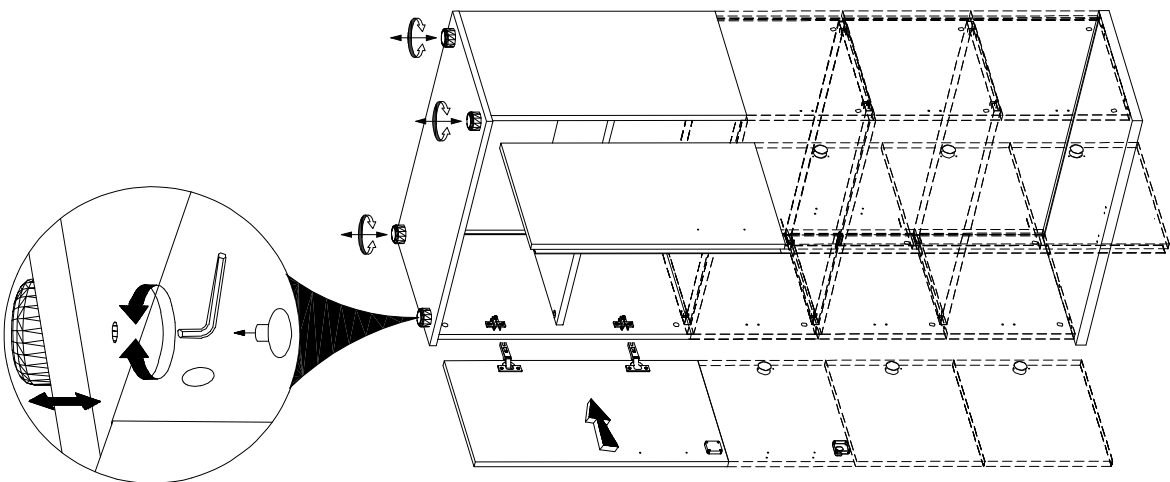

E

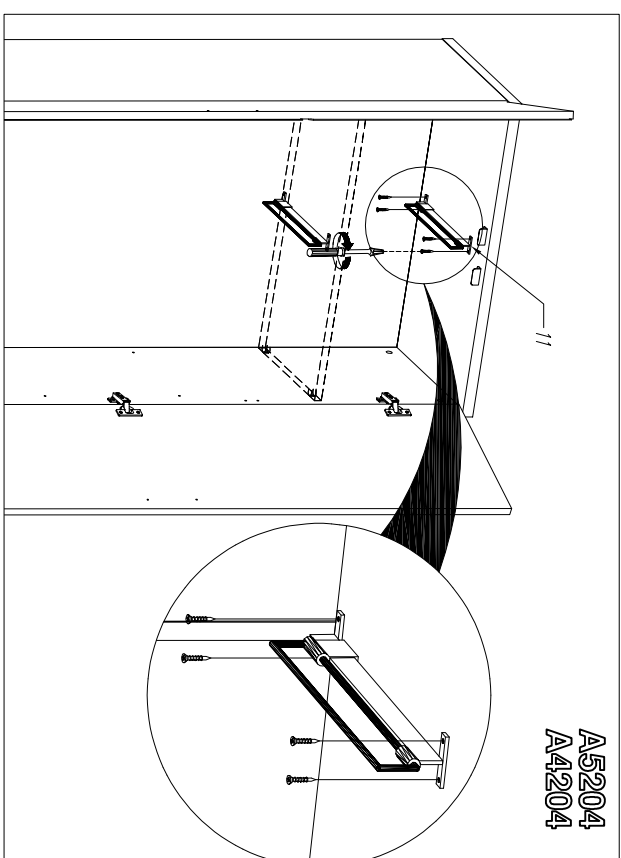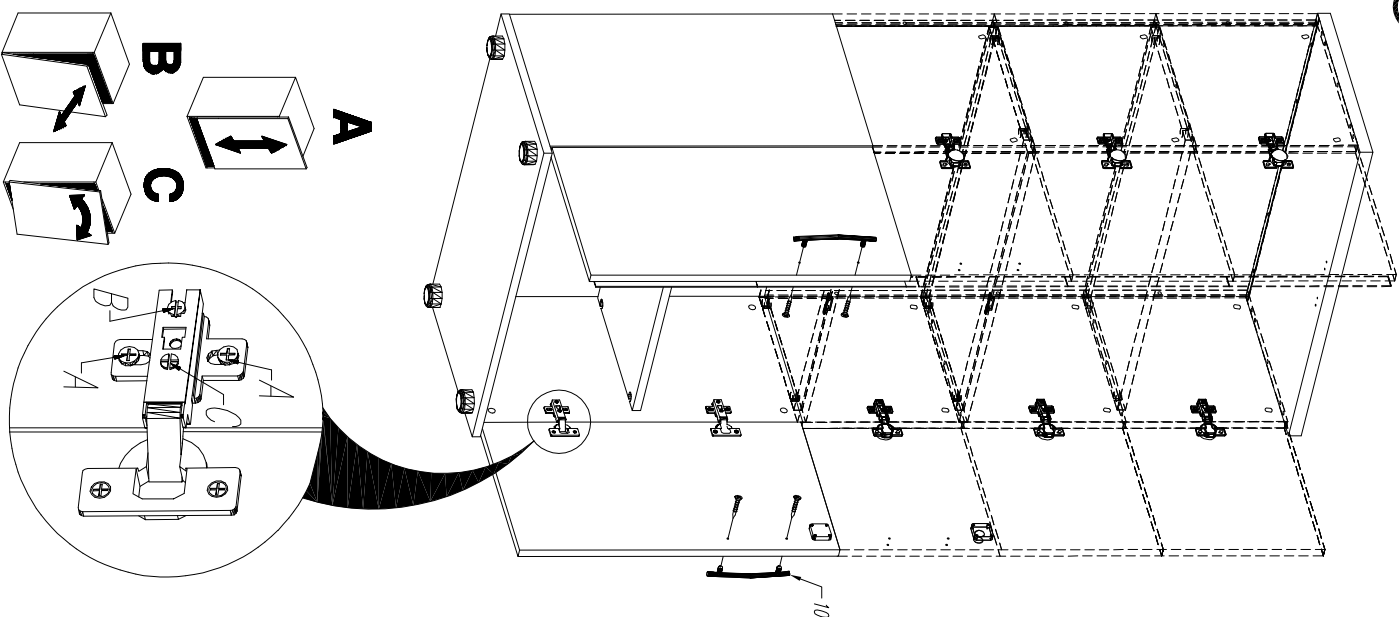


A5204
A4204

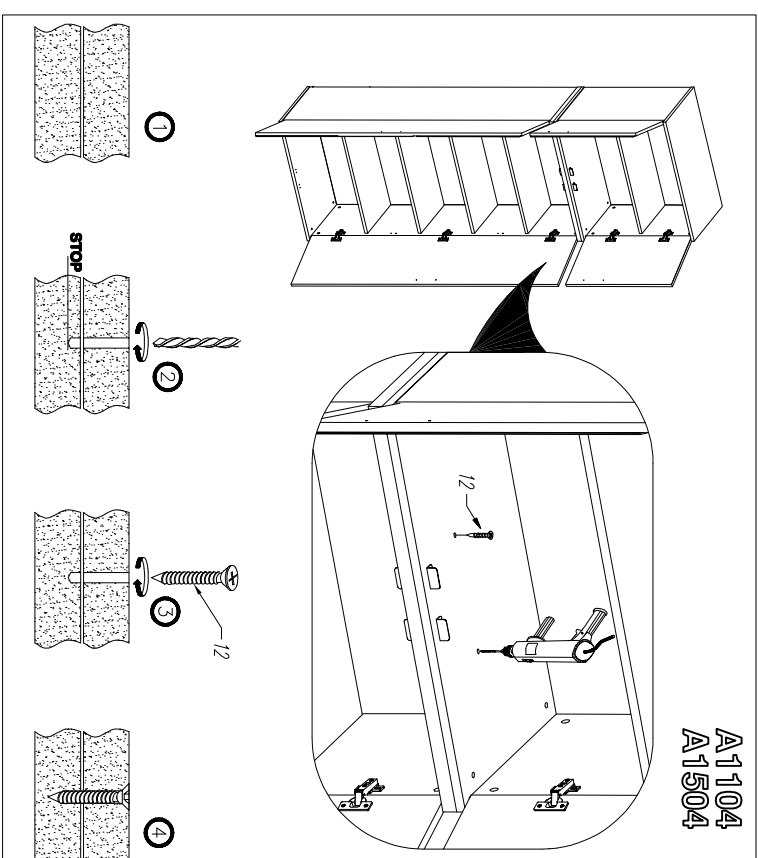


A1104
A1504


A

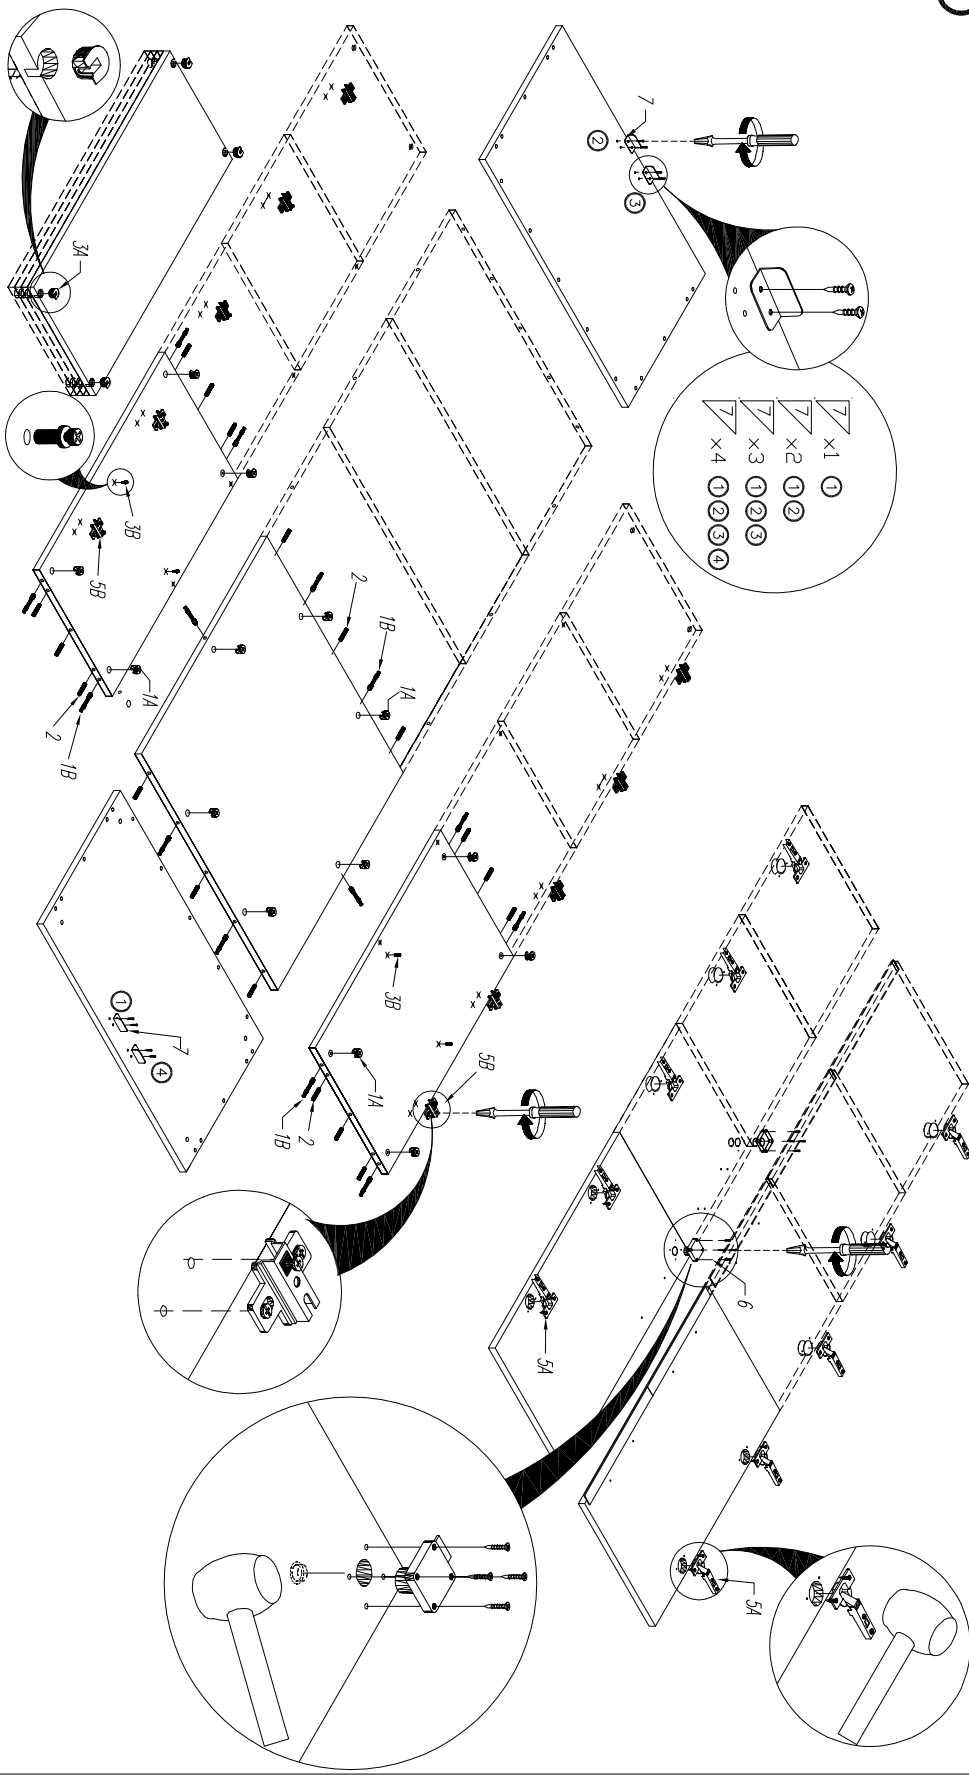


B

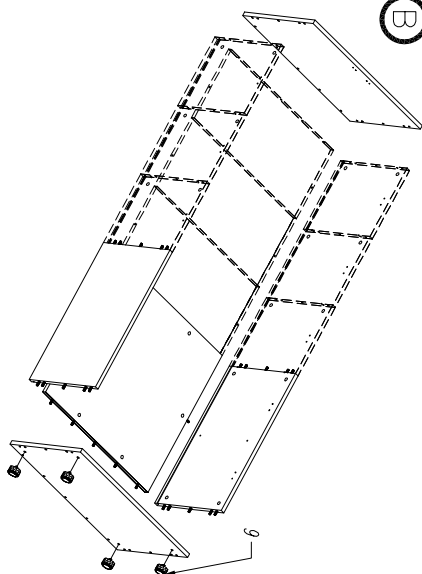


C

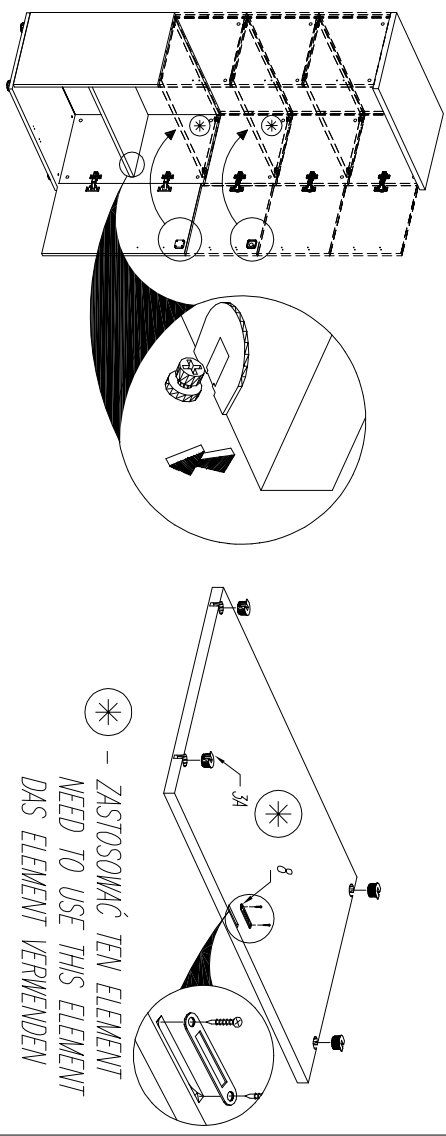



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

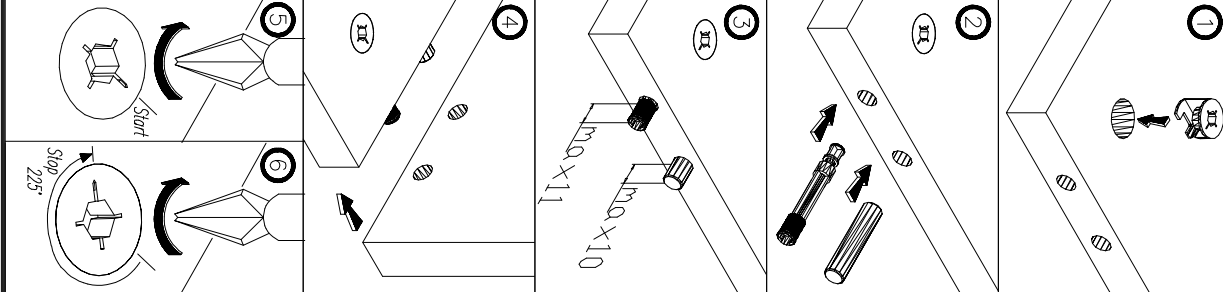


D

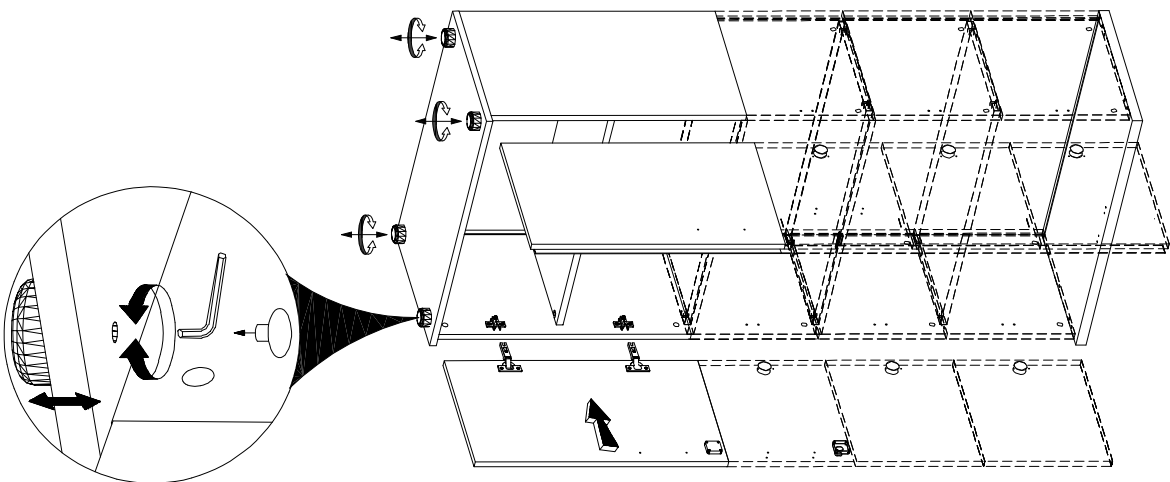

E

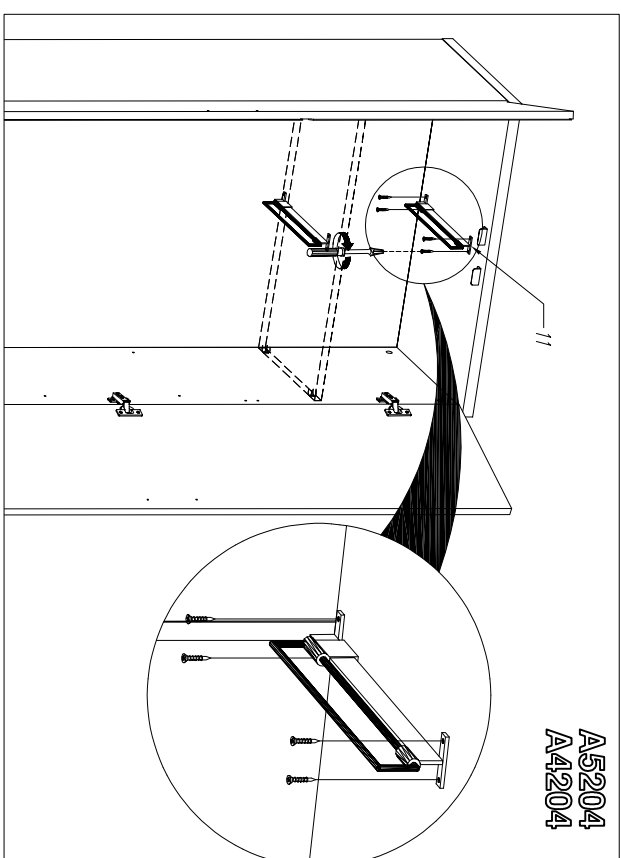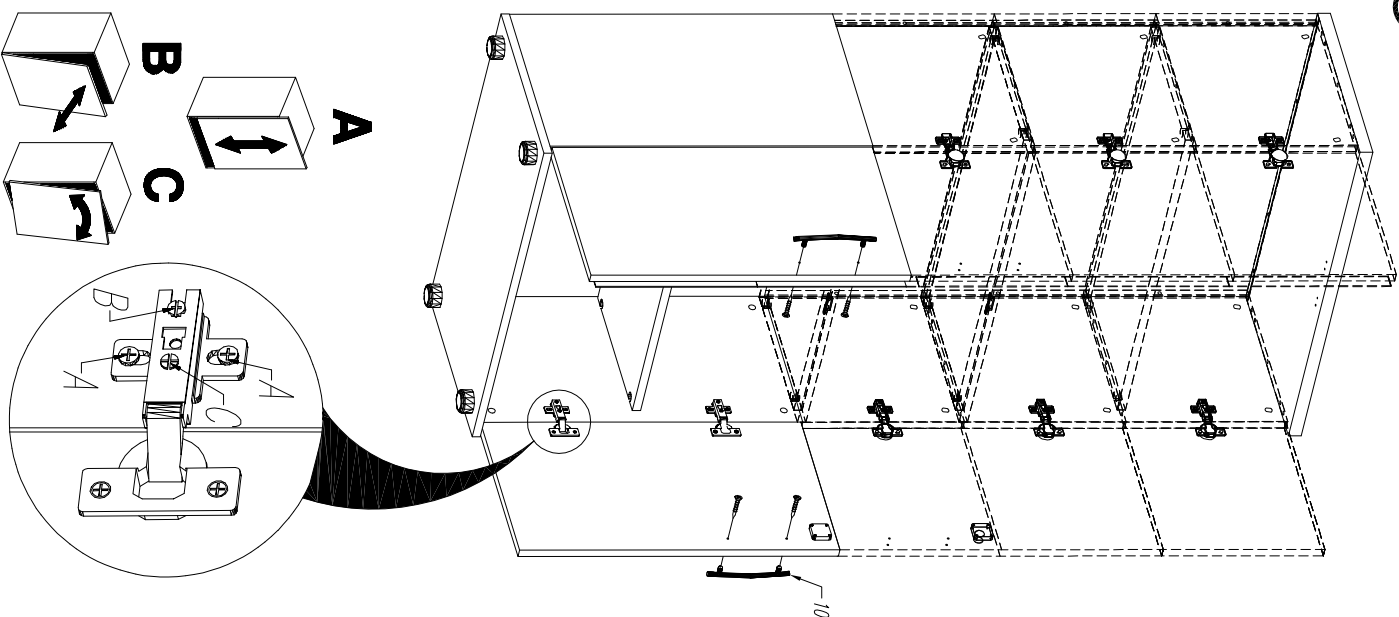

A5204
A4204

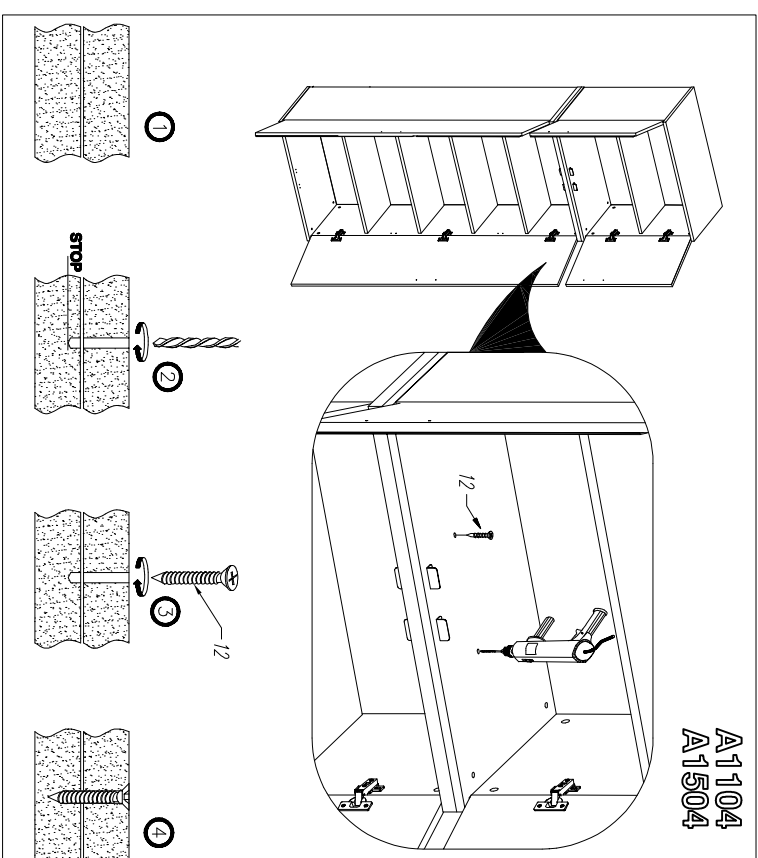

A1104
A1504

