


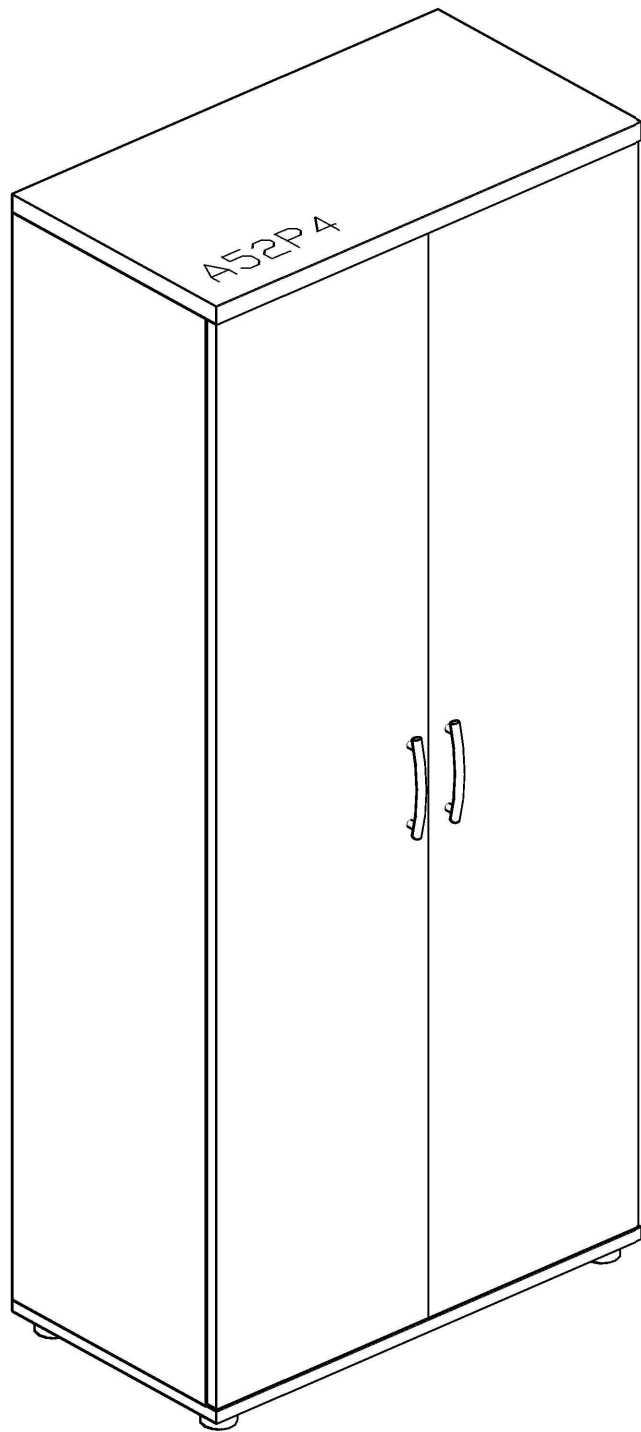



A52P4

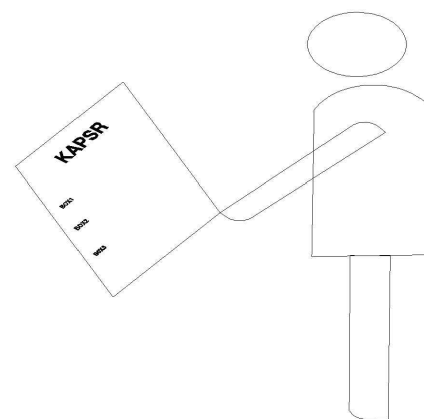


1

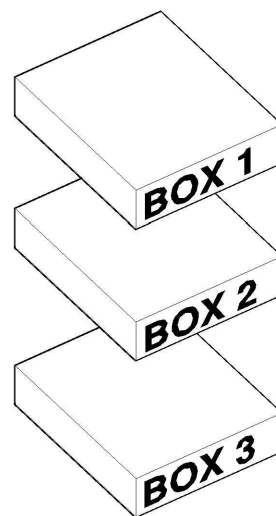


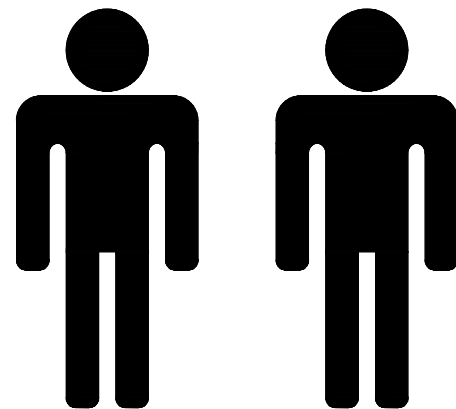

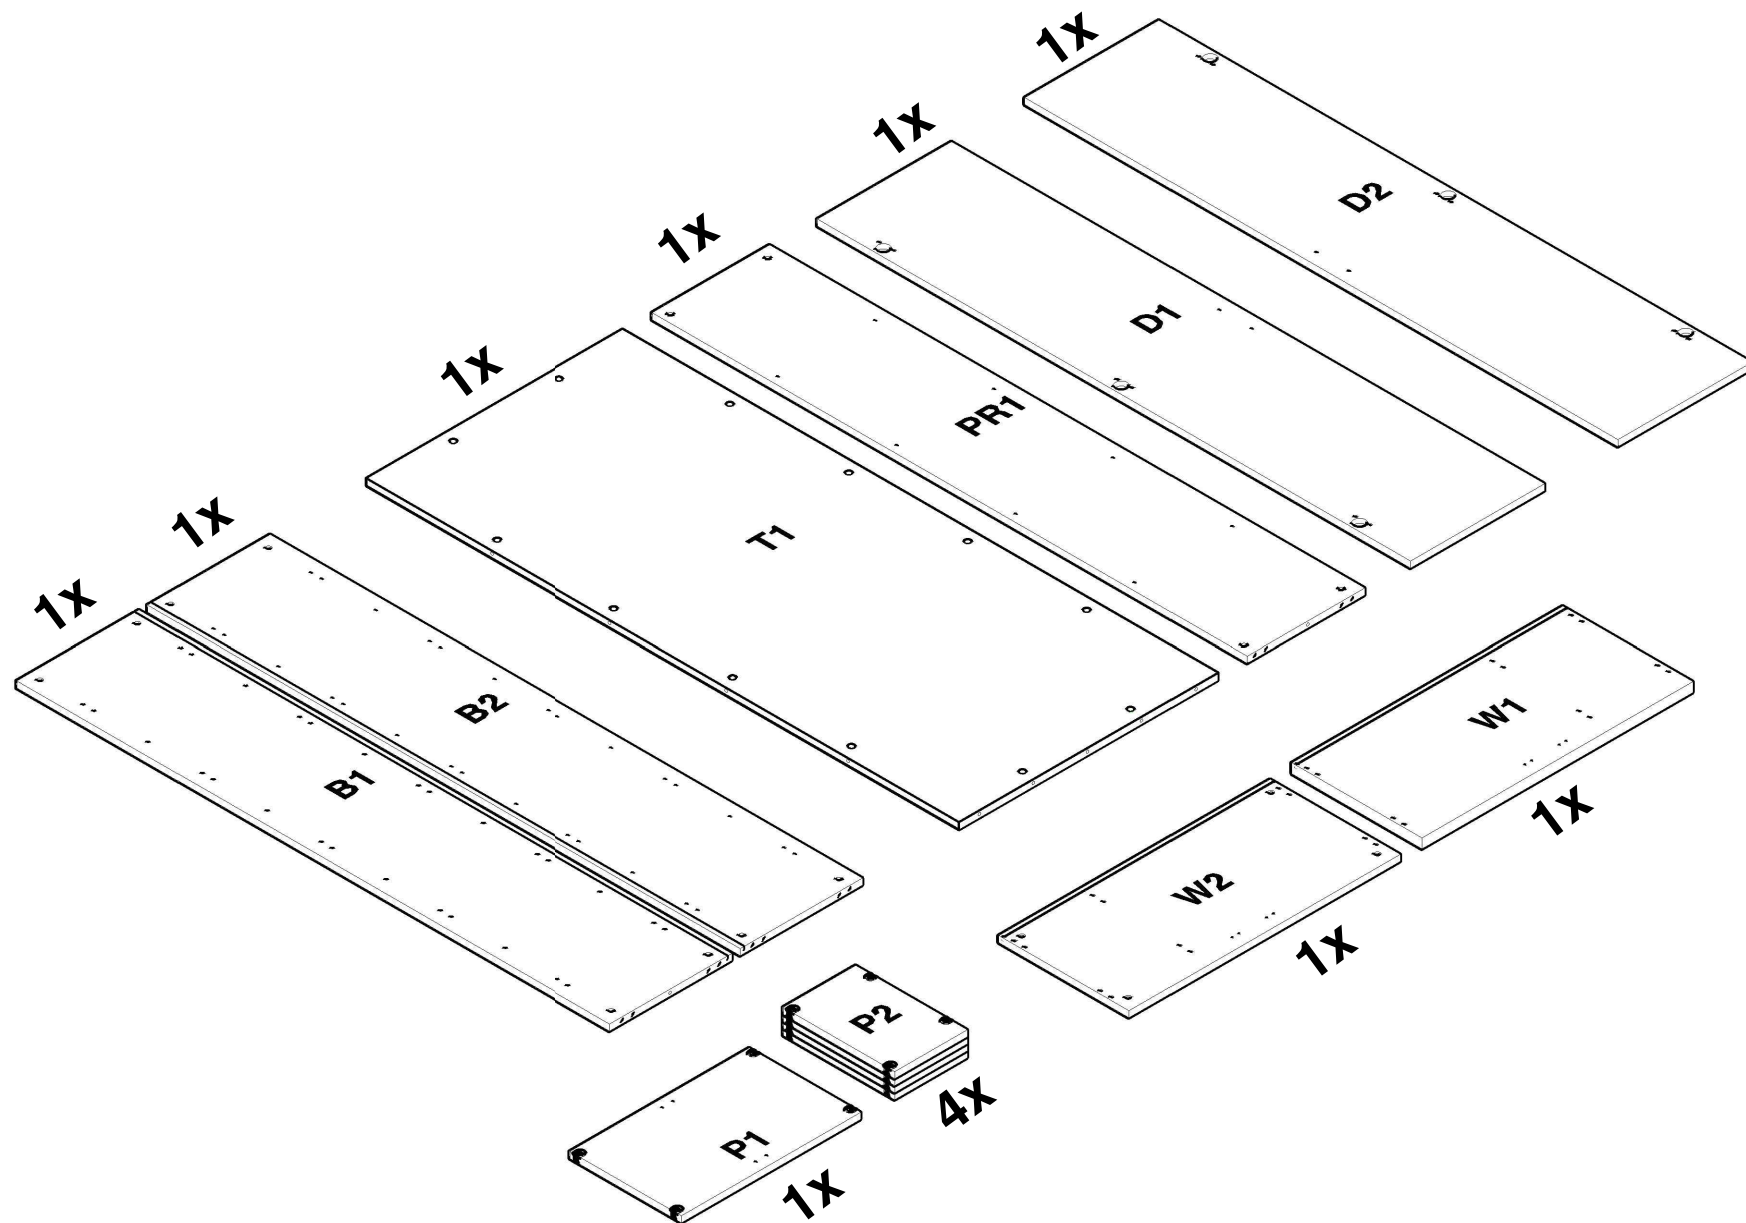





8x




4x

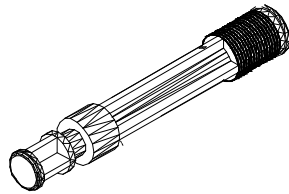

24x

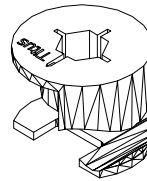


24x

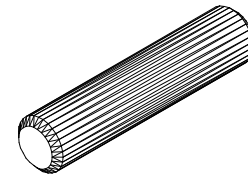


22x




20

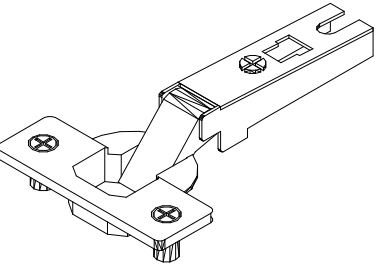


6x

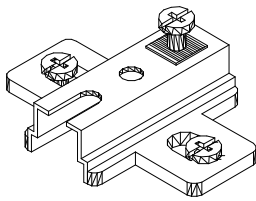


6x

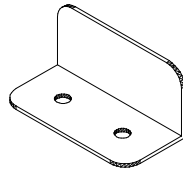

2x





2x

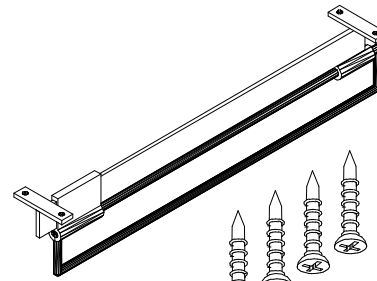



1x




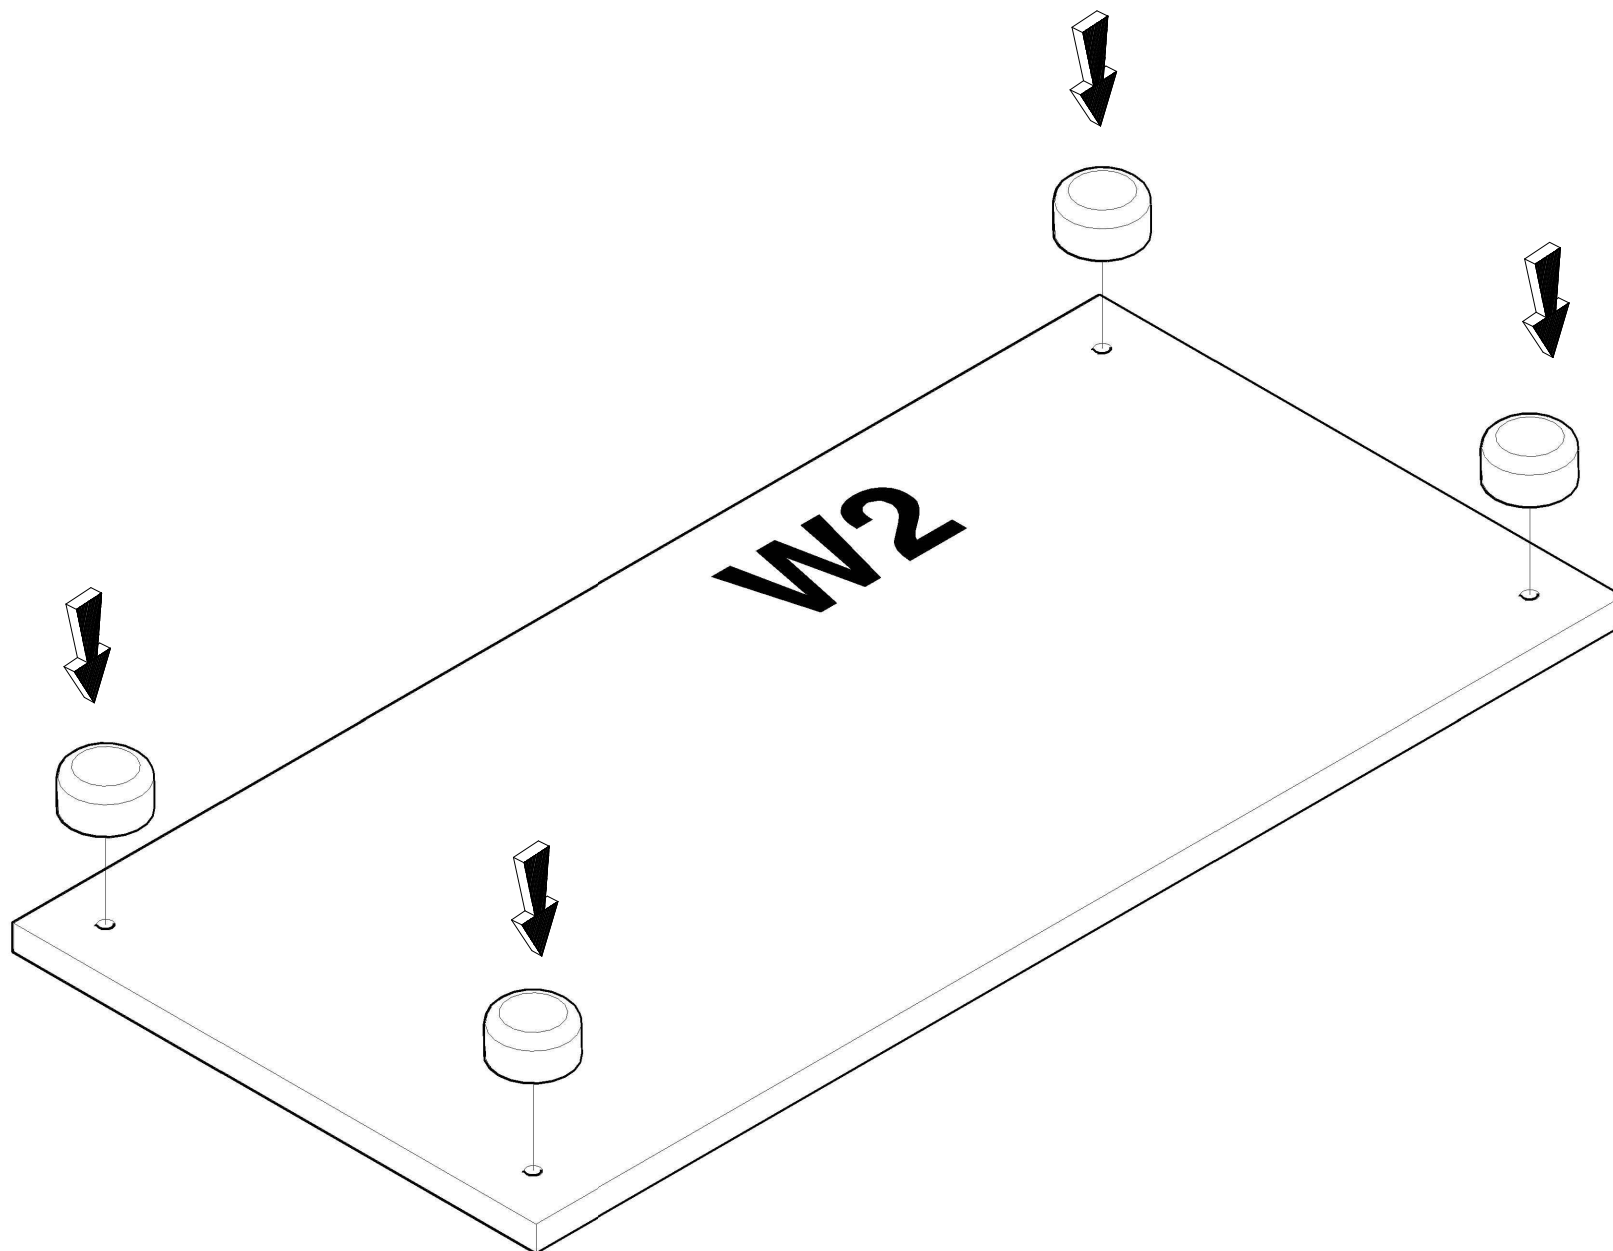


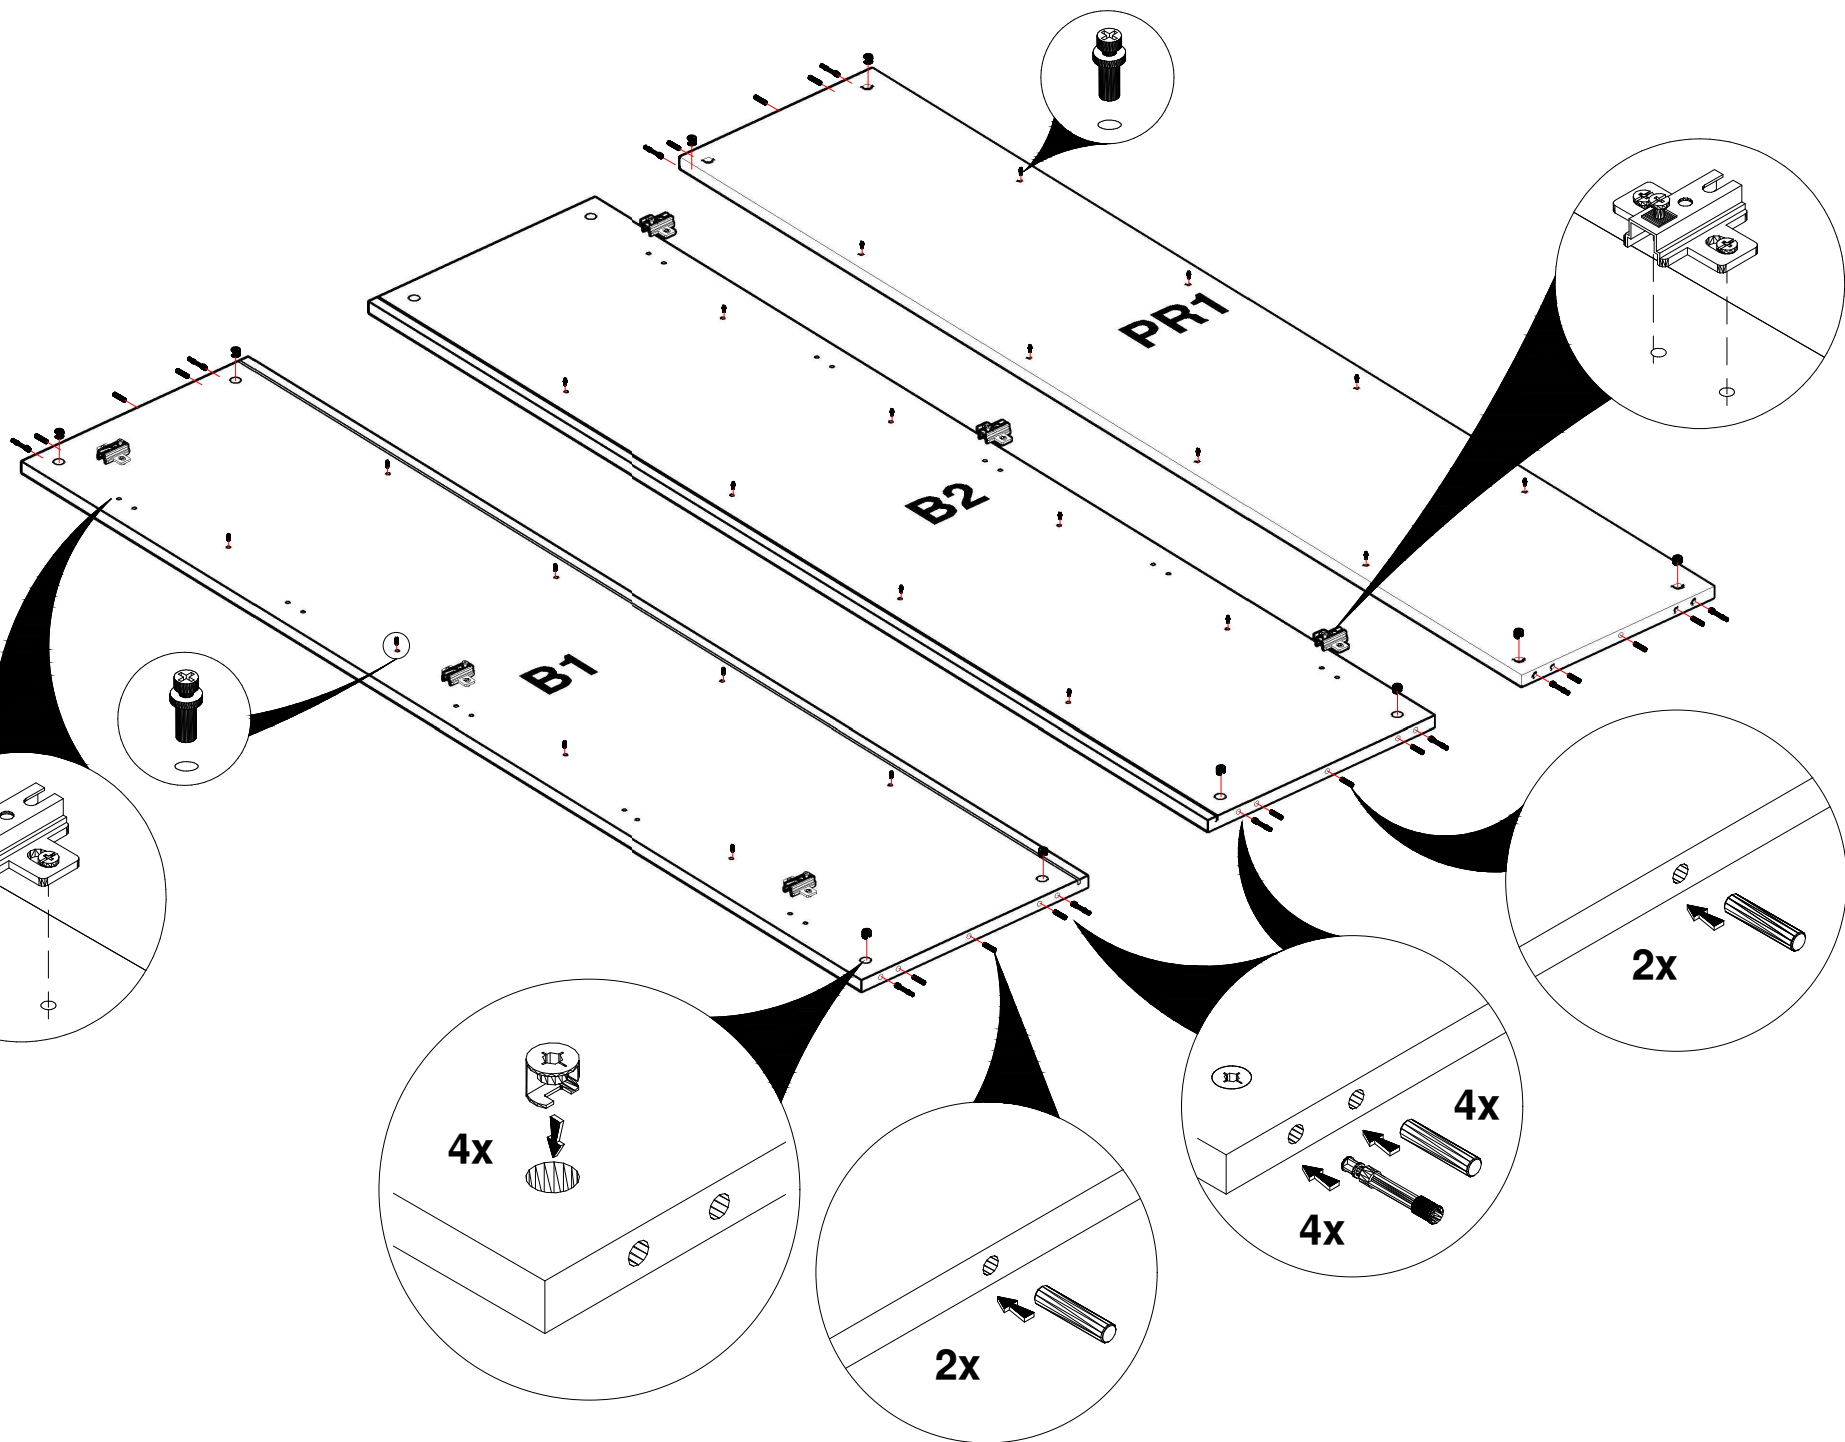

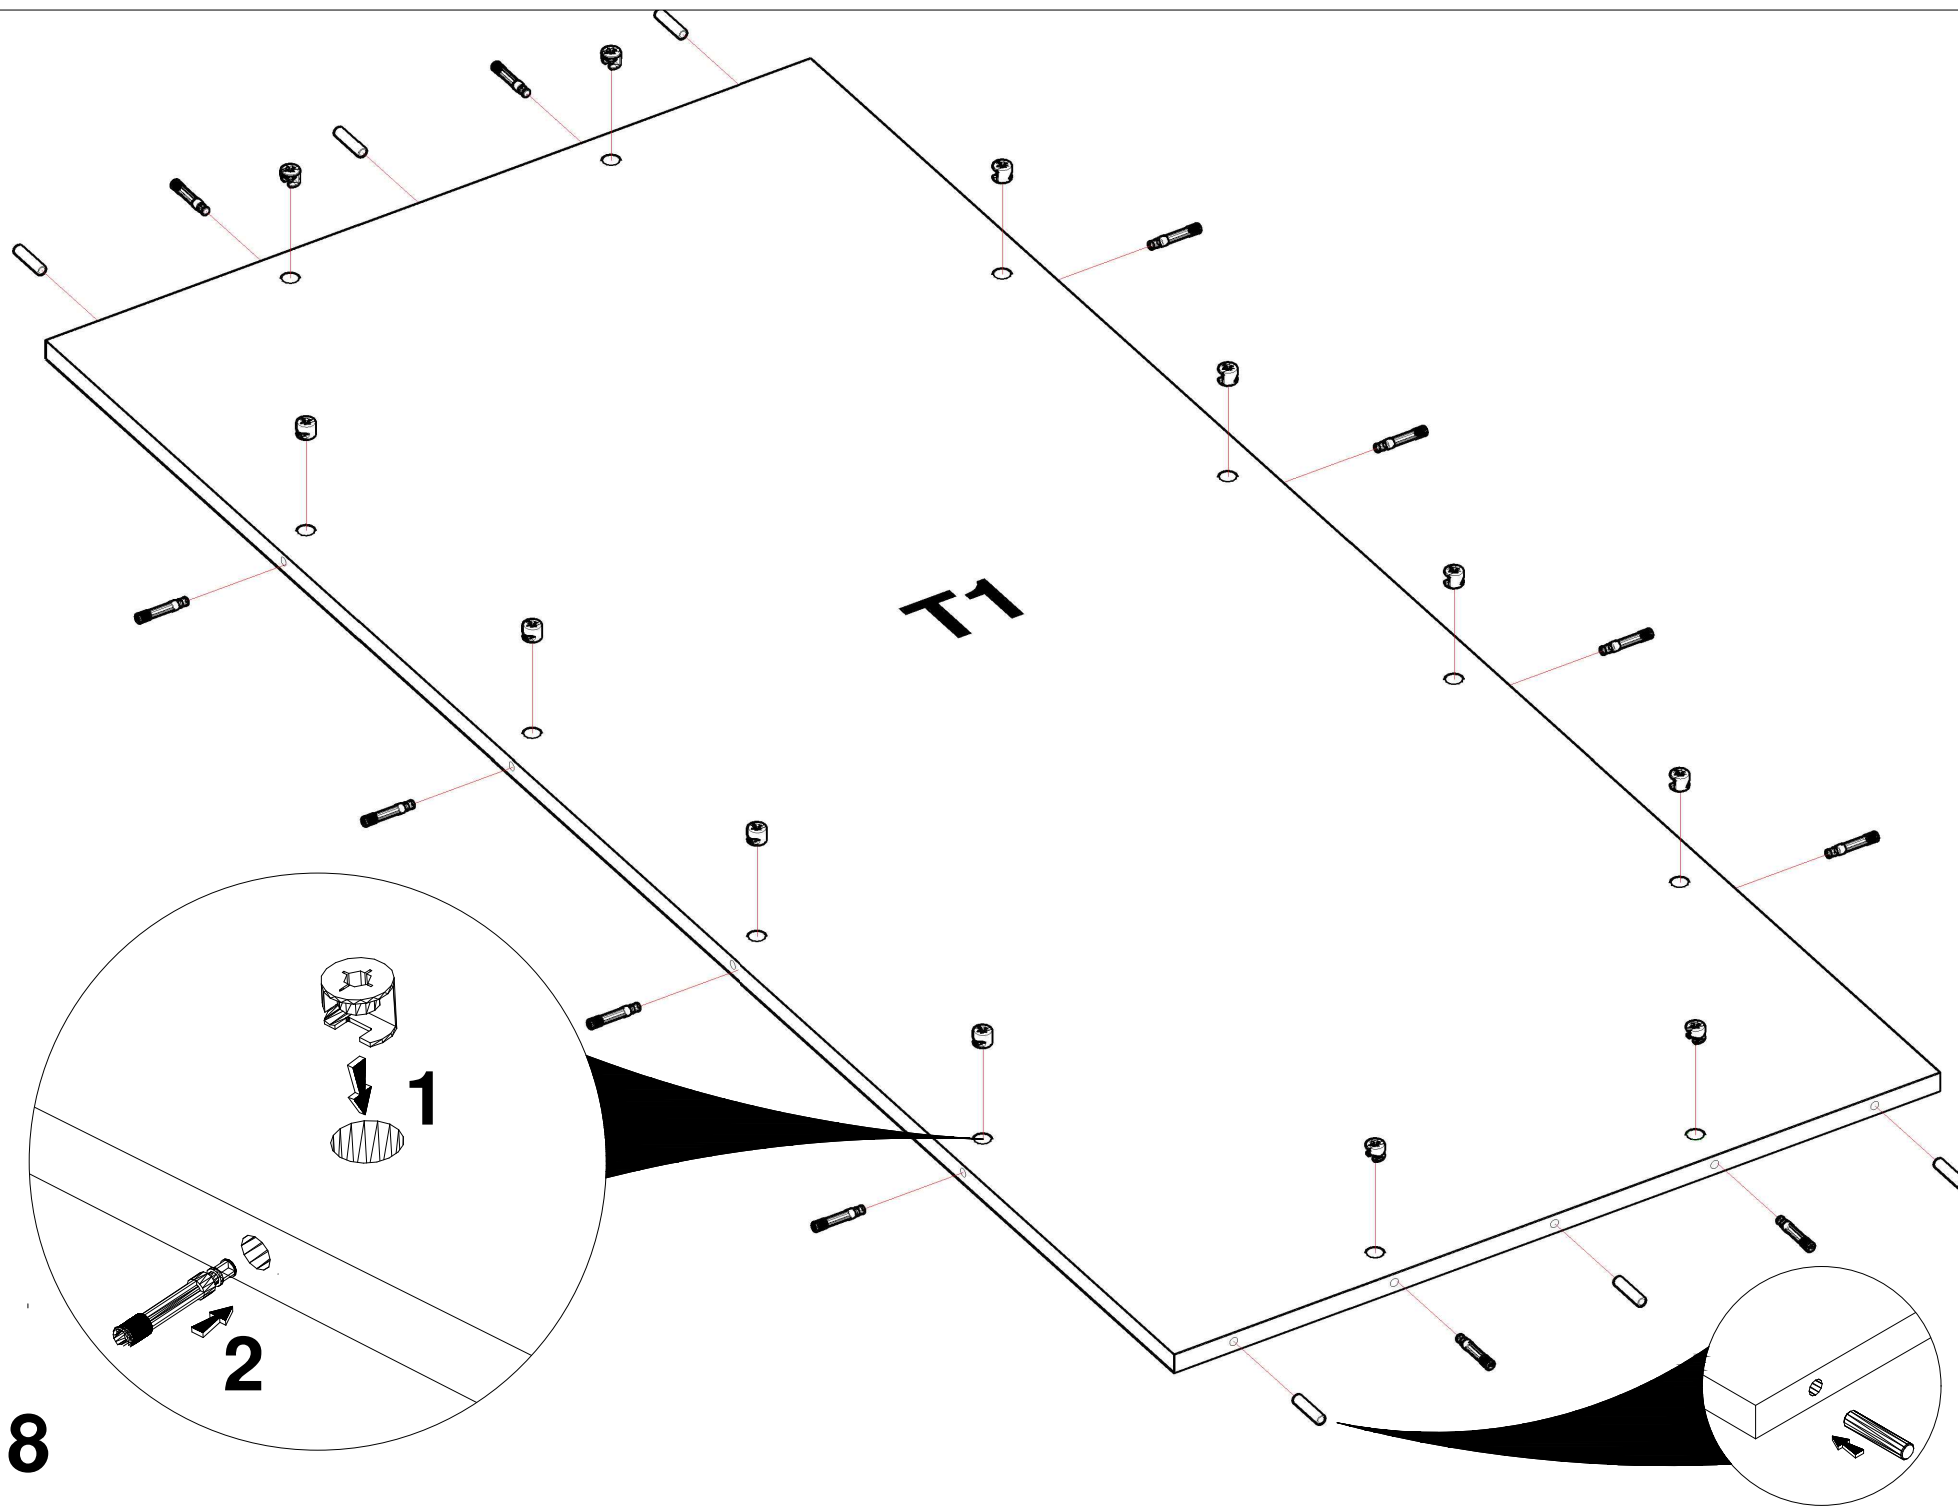


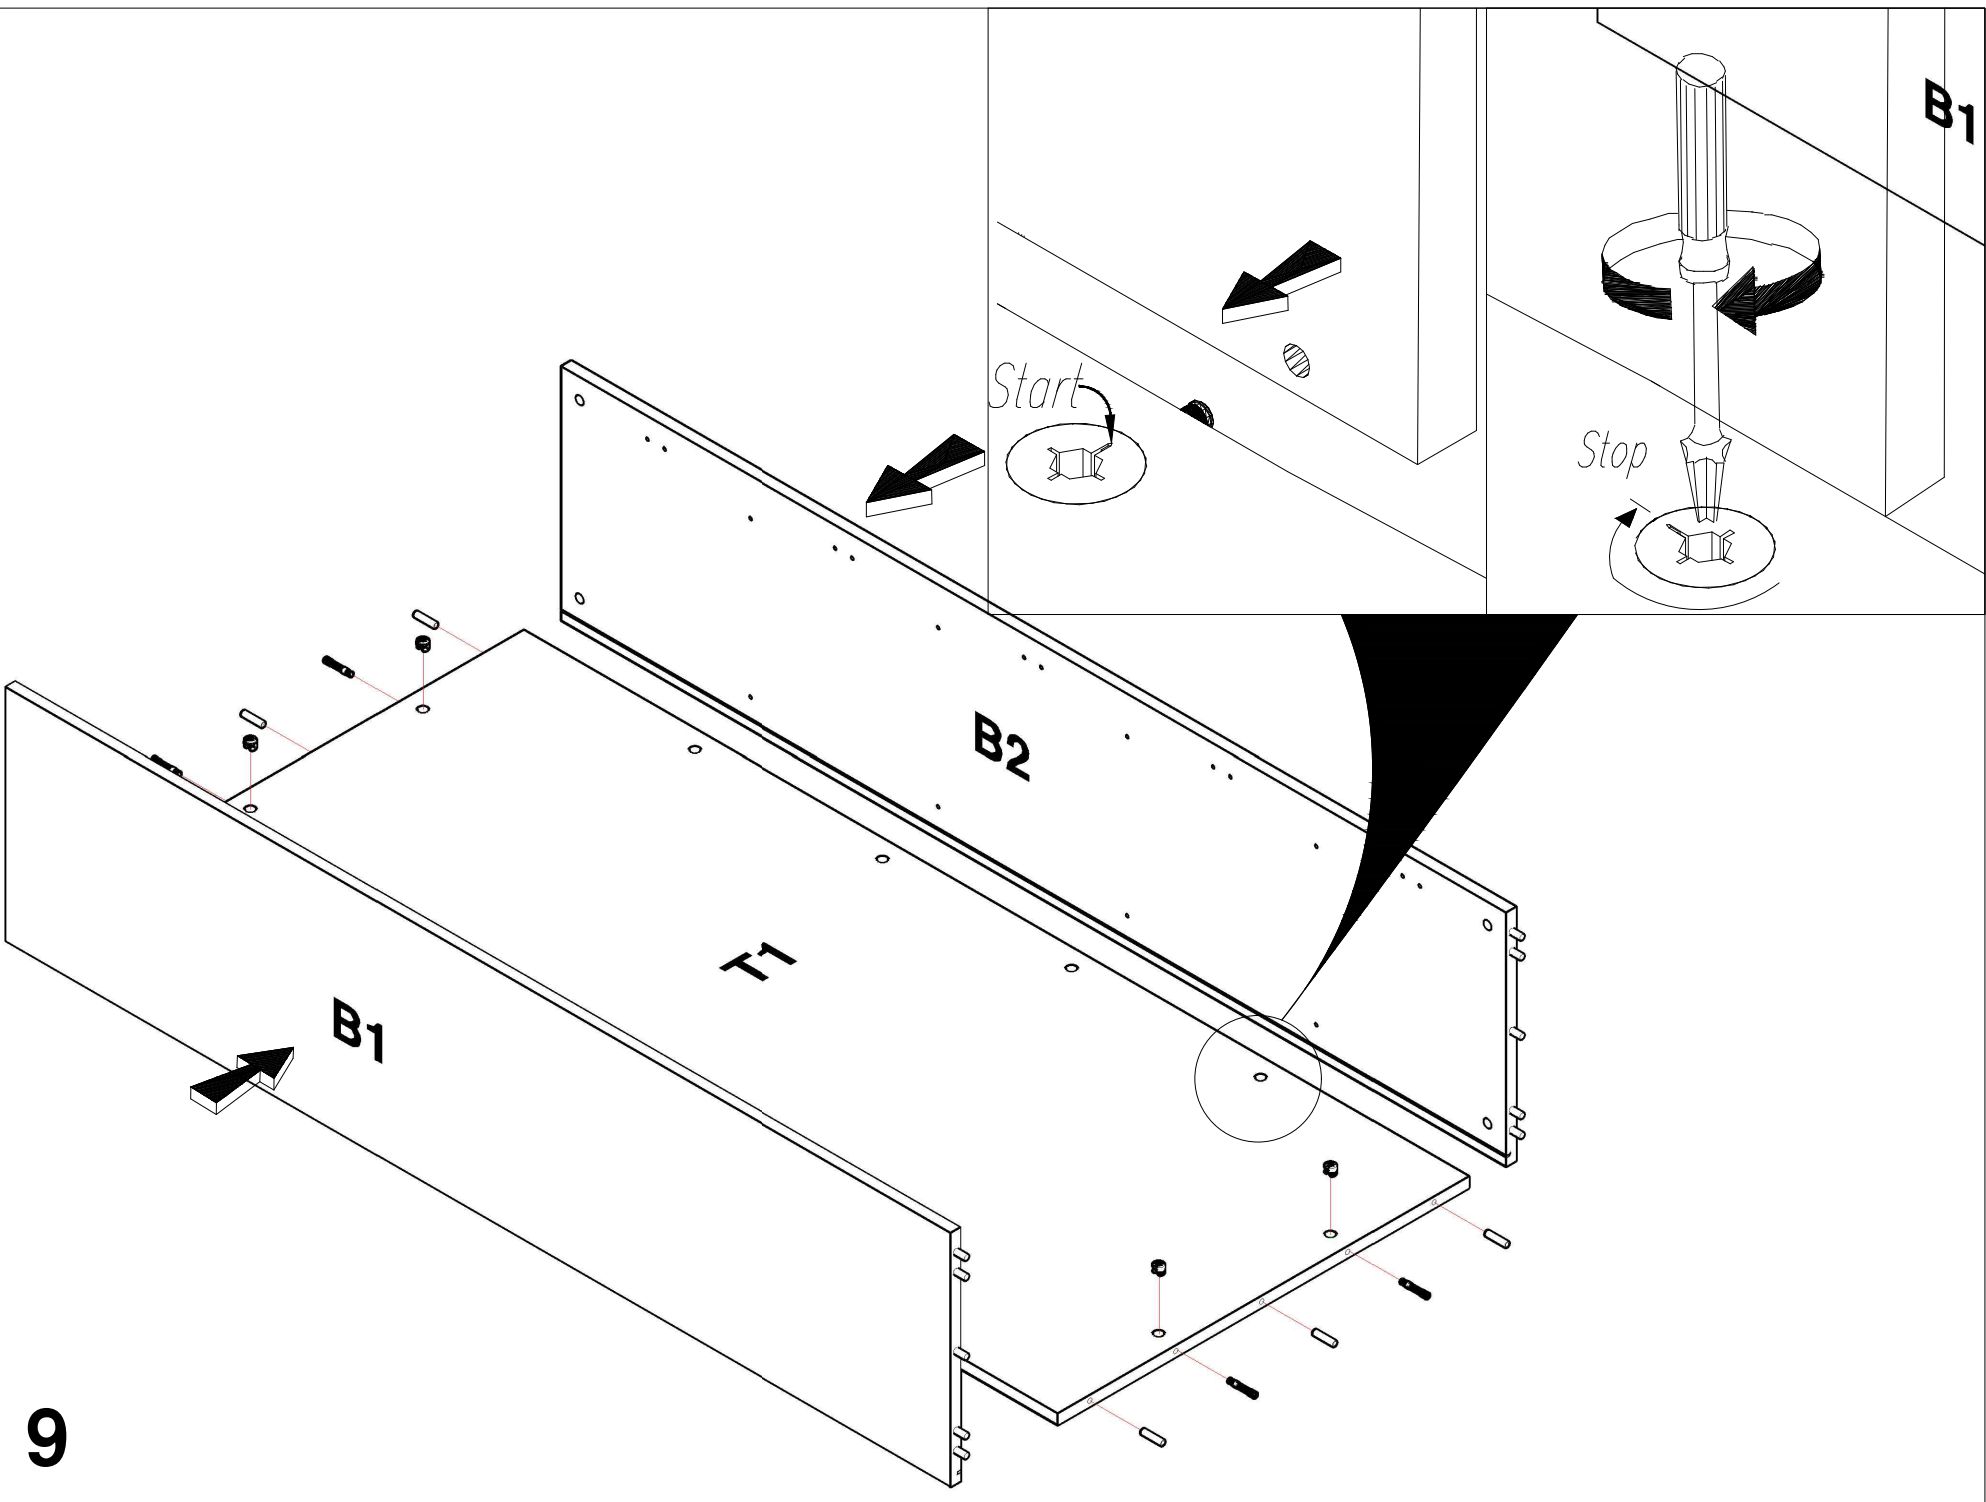




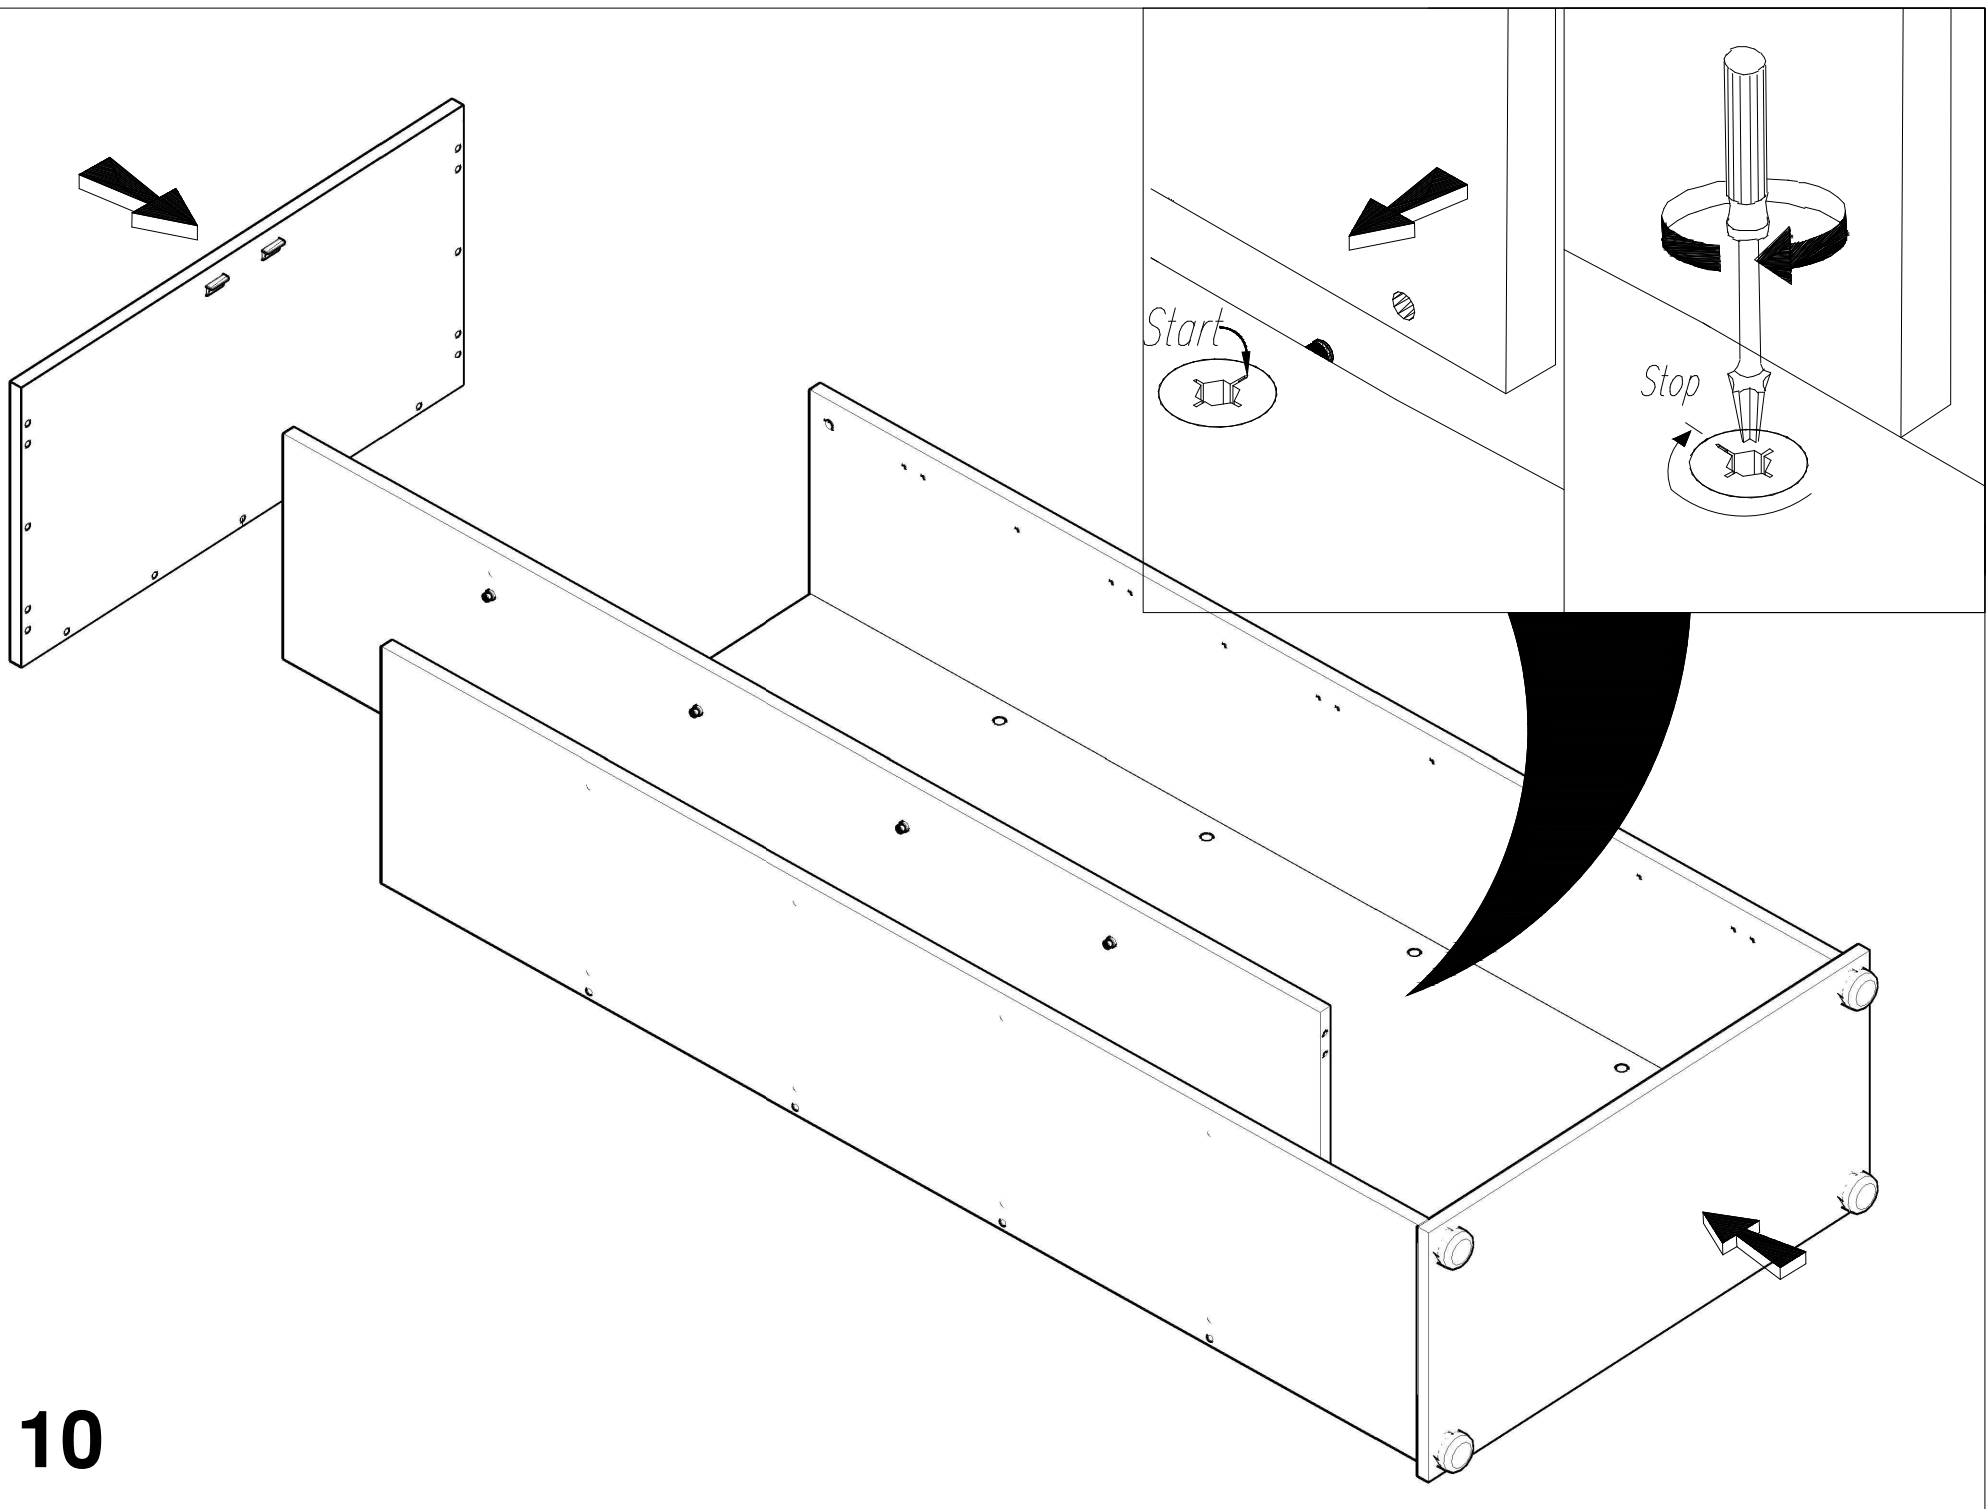


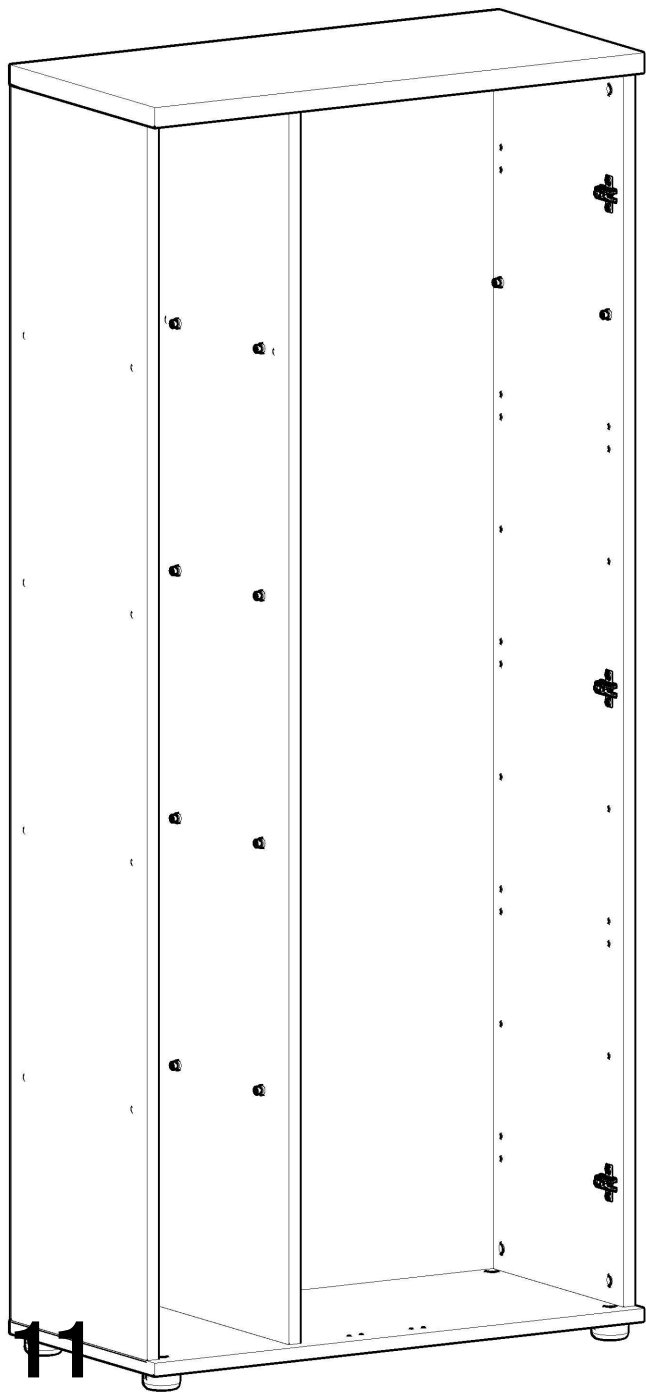


11

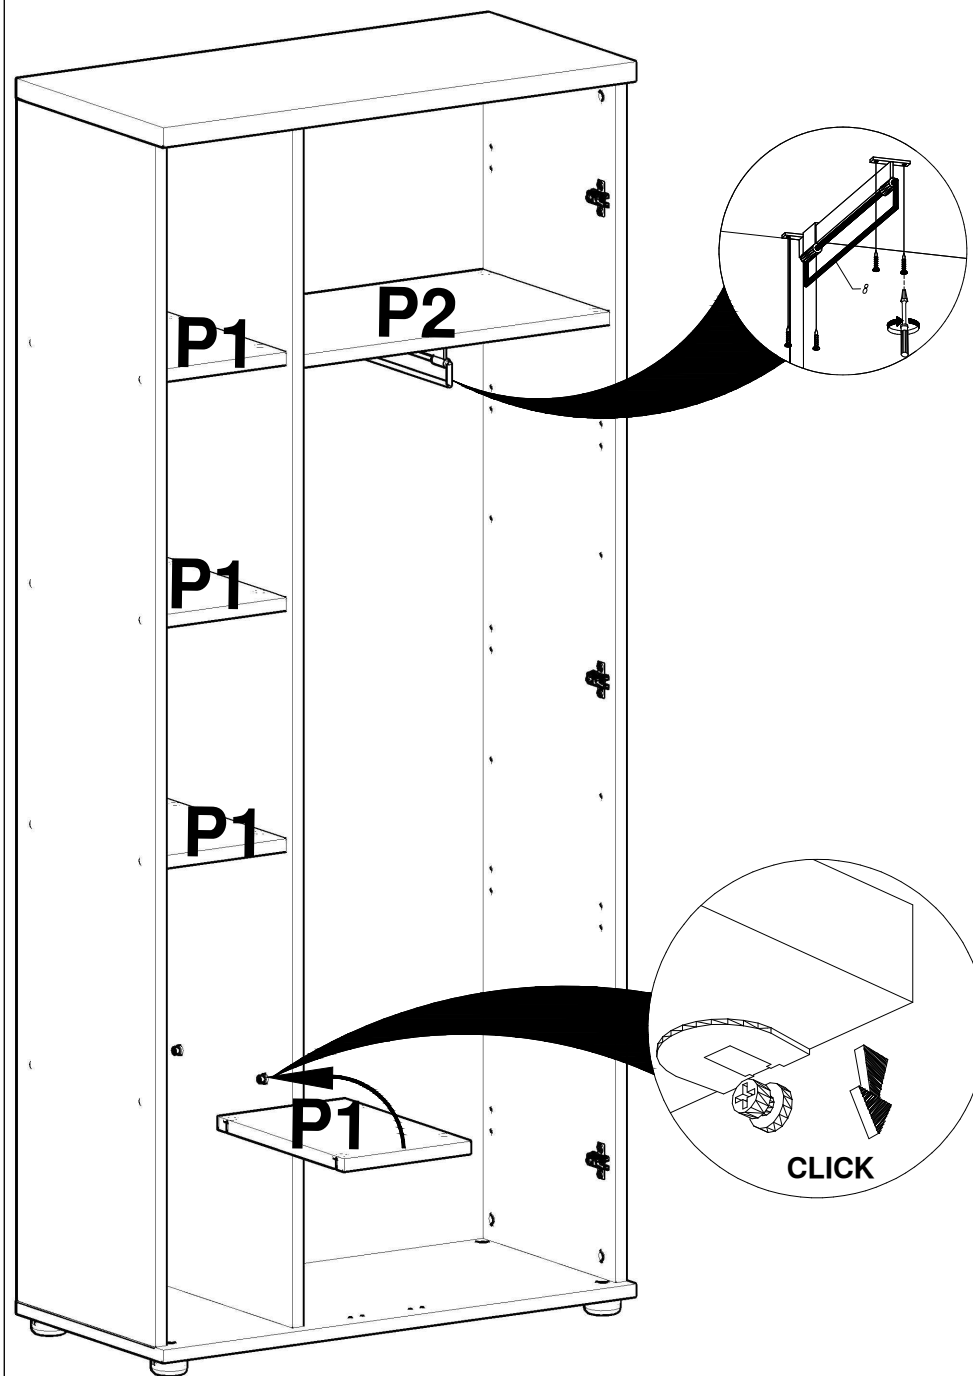



12

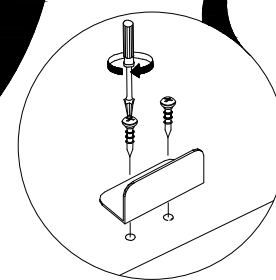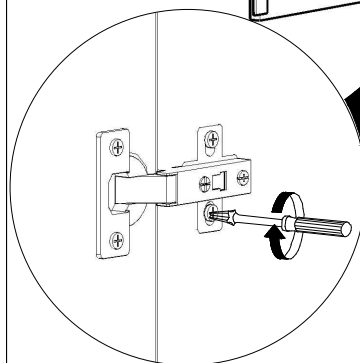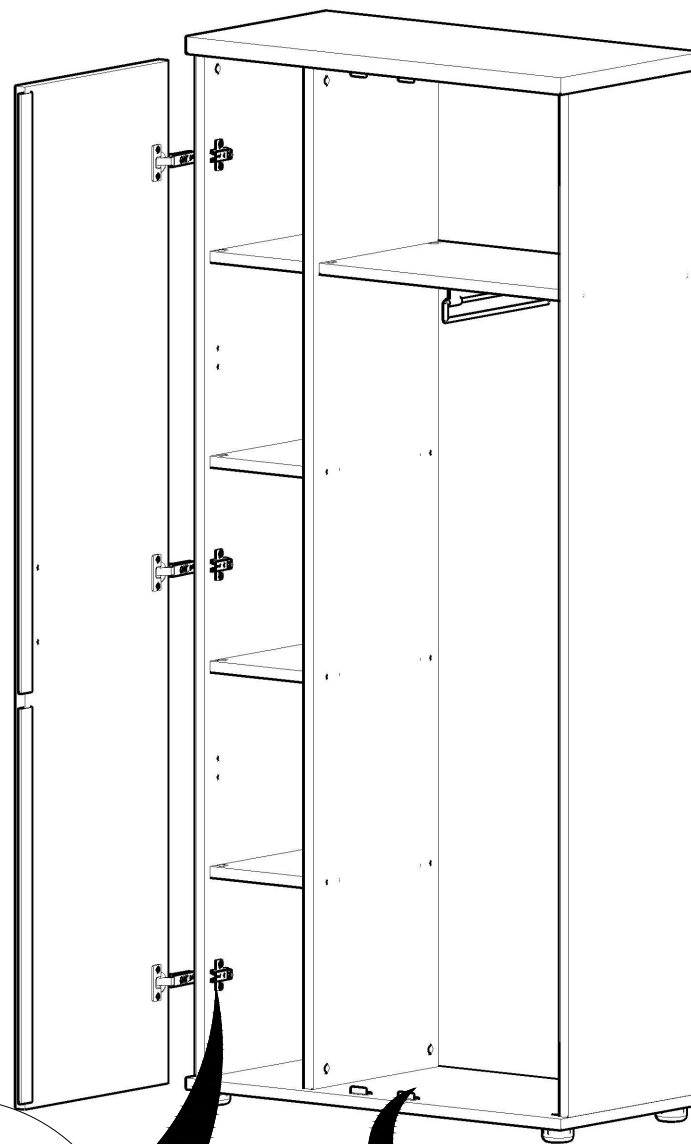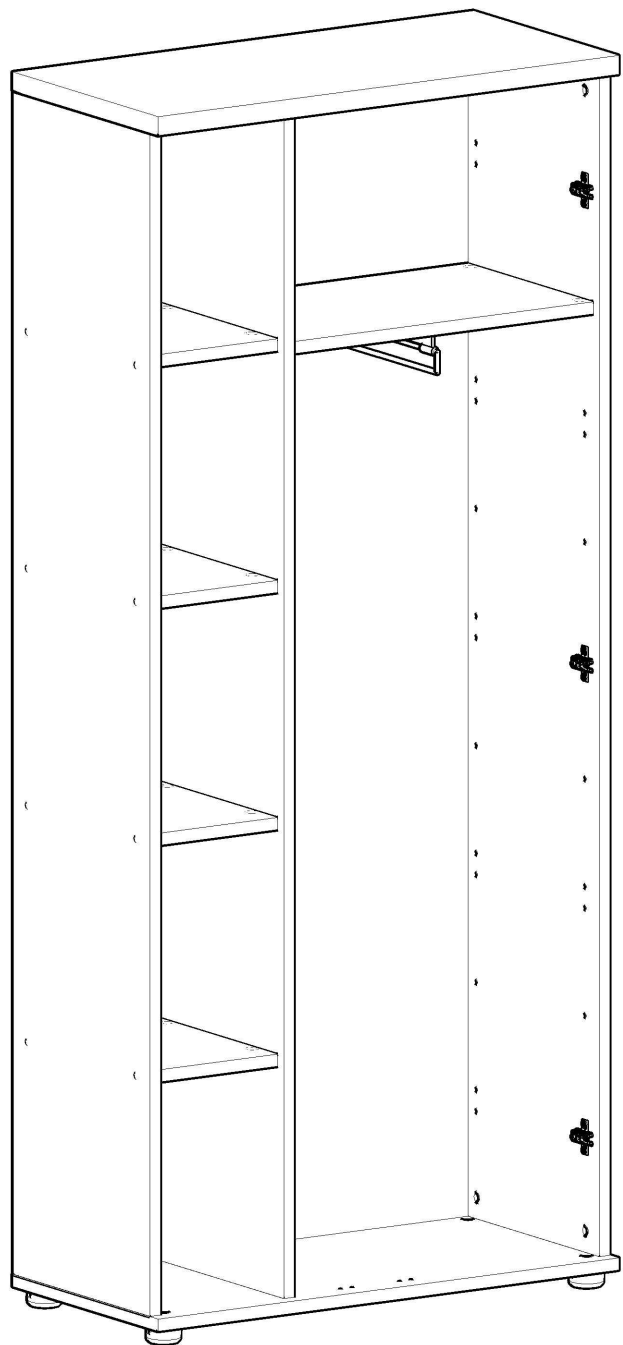

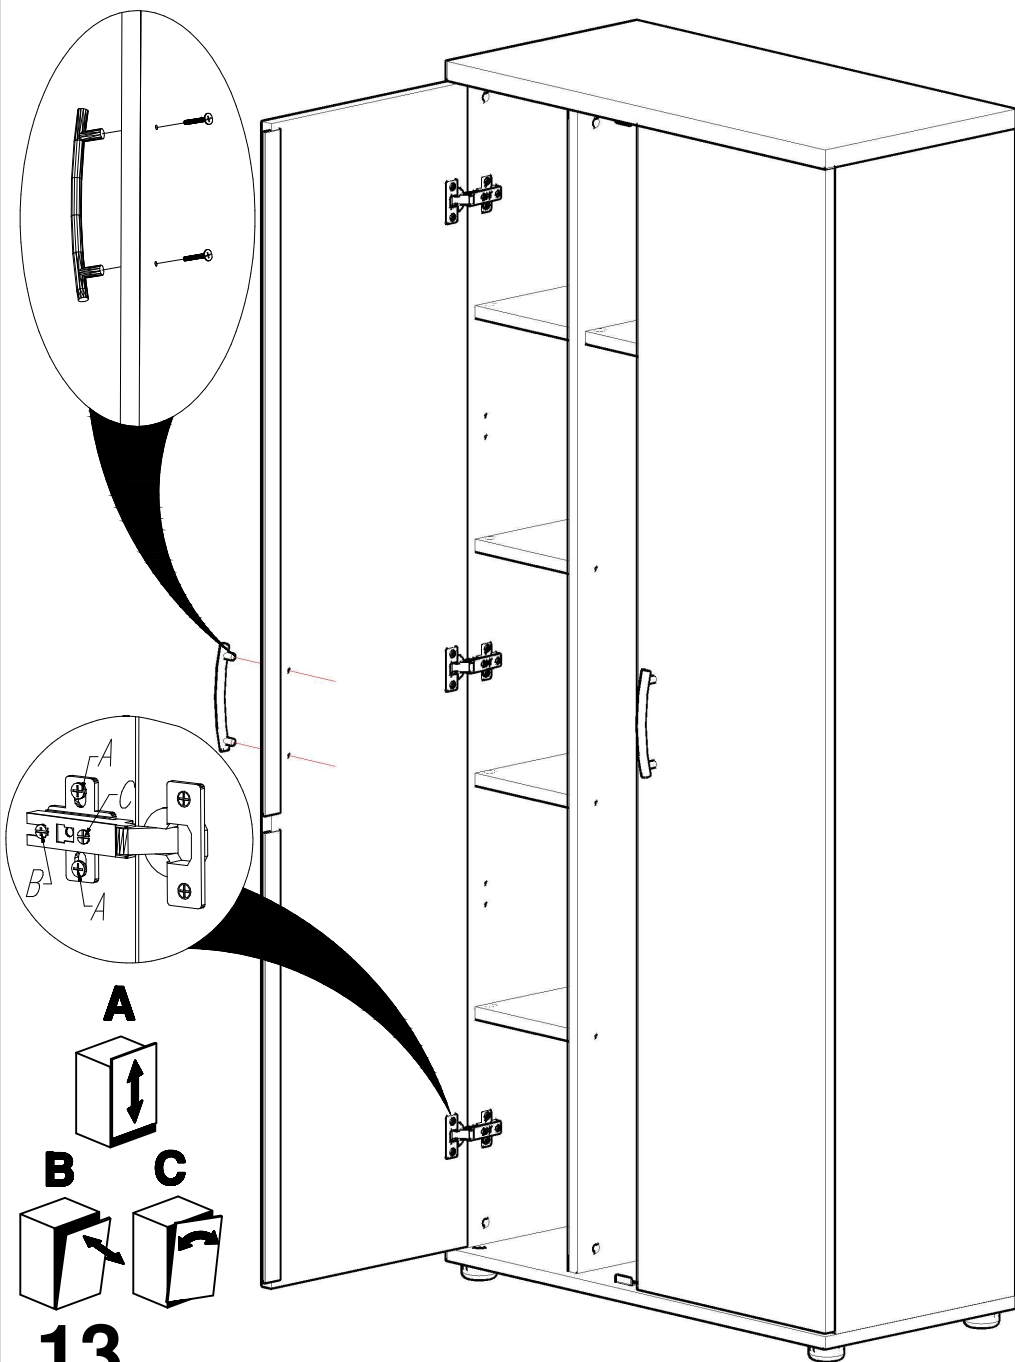





13

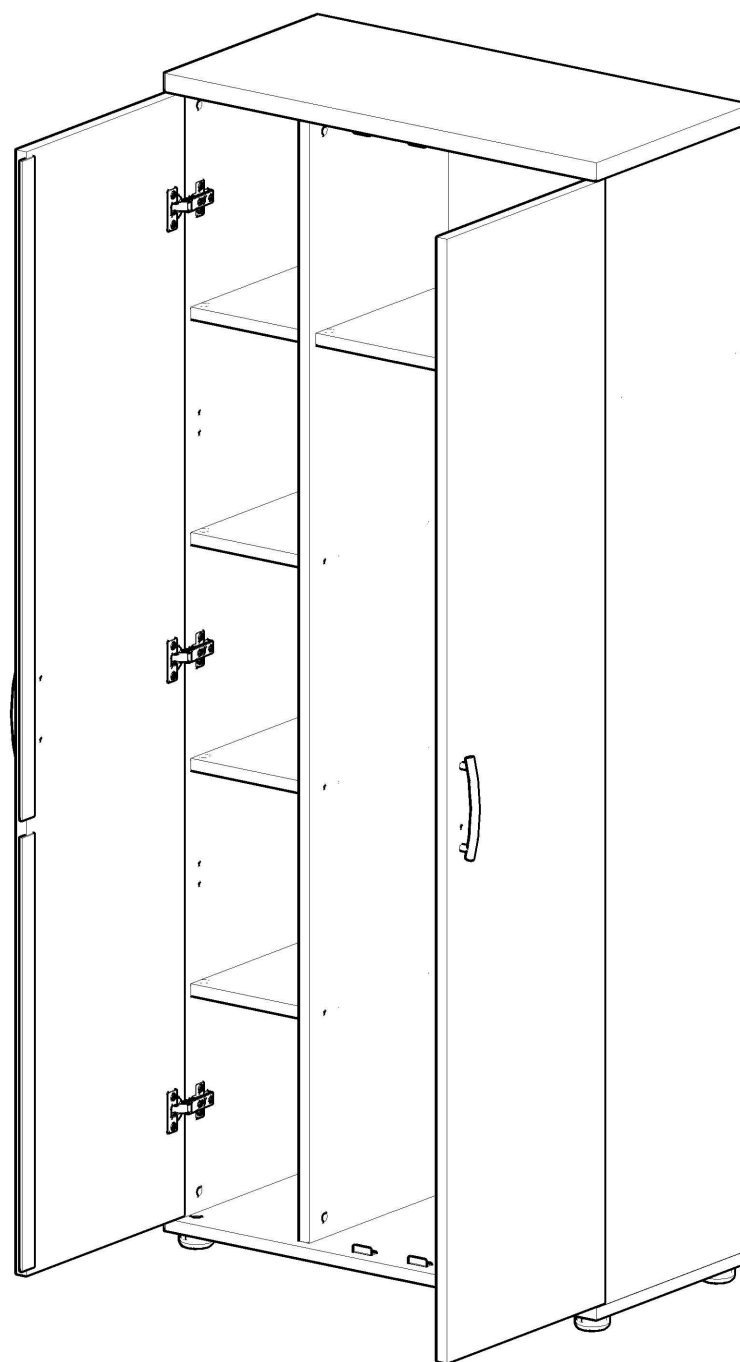


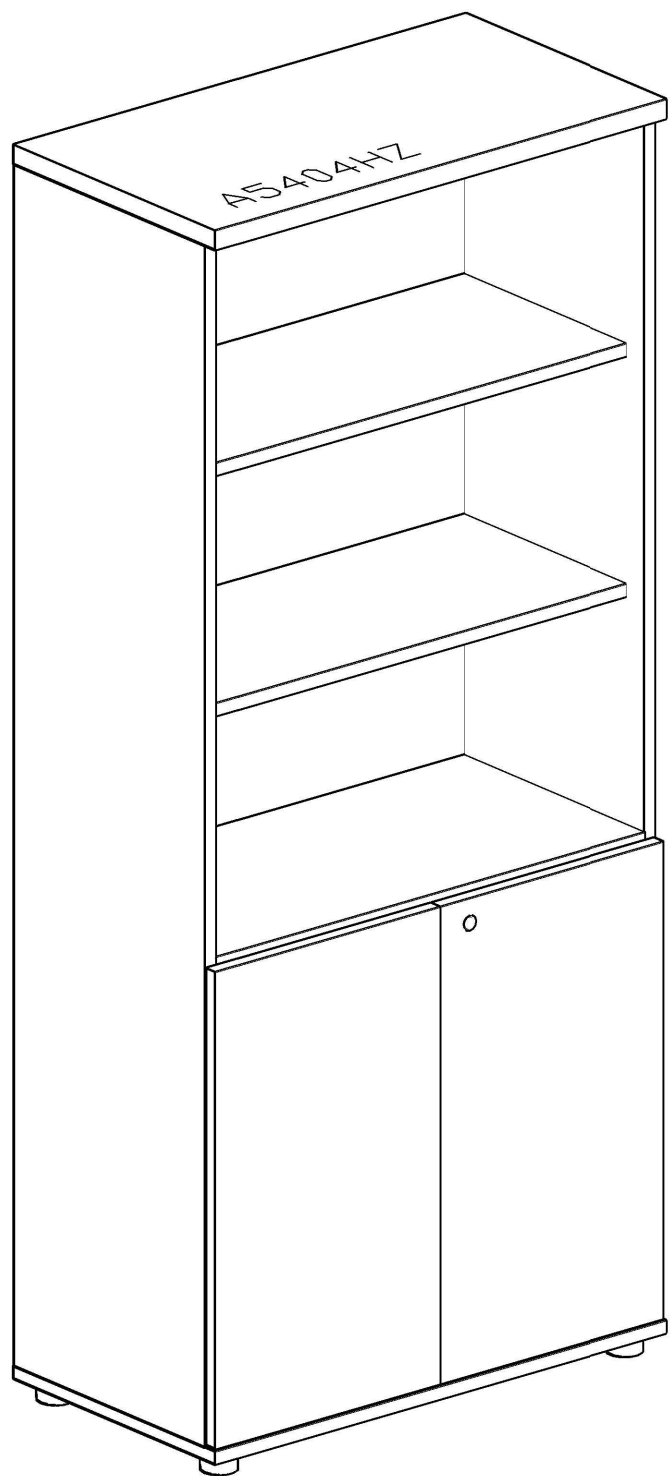


A5404HZ

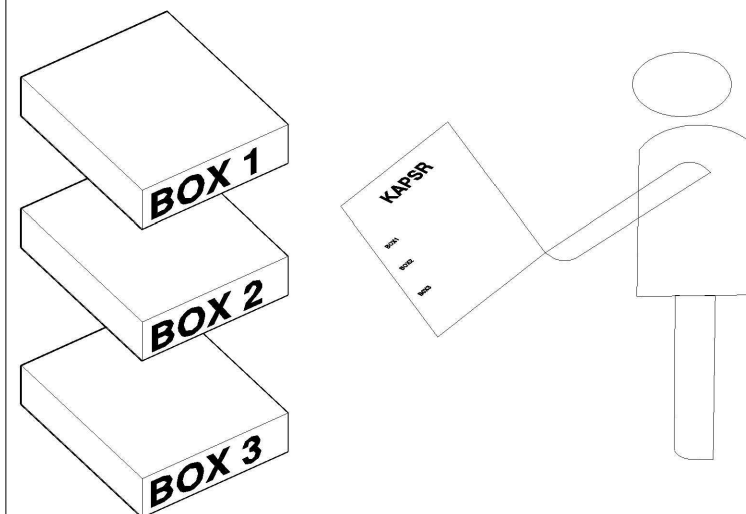


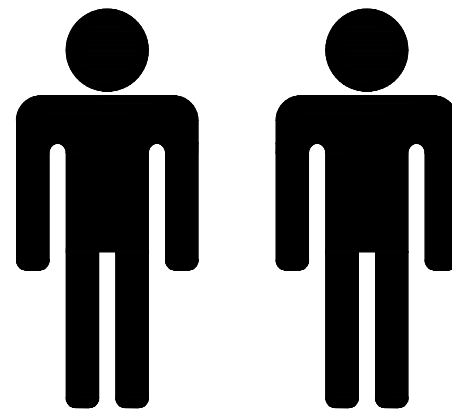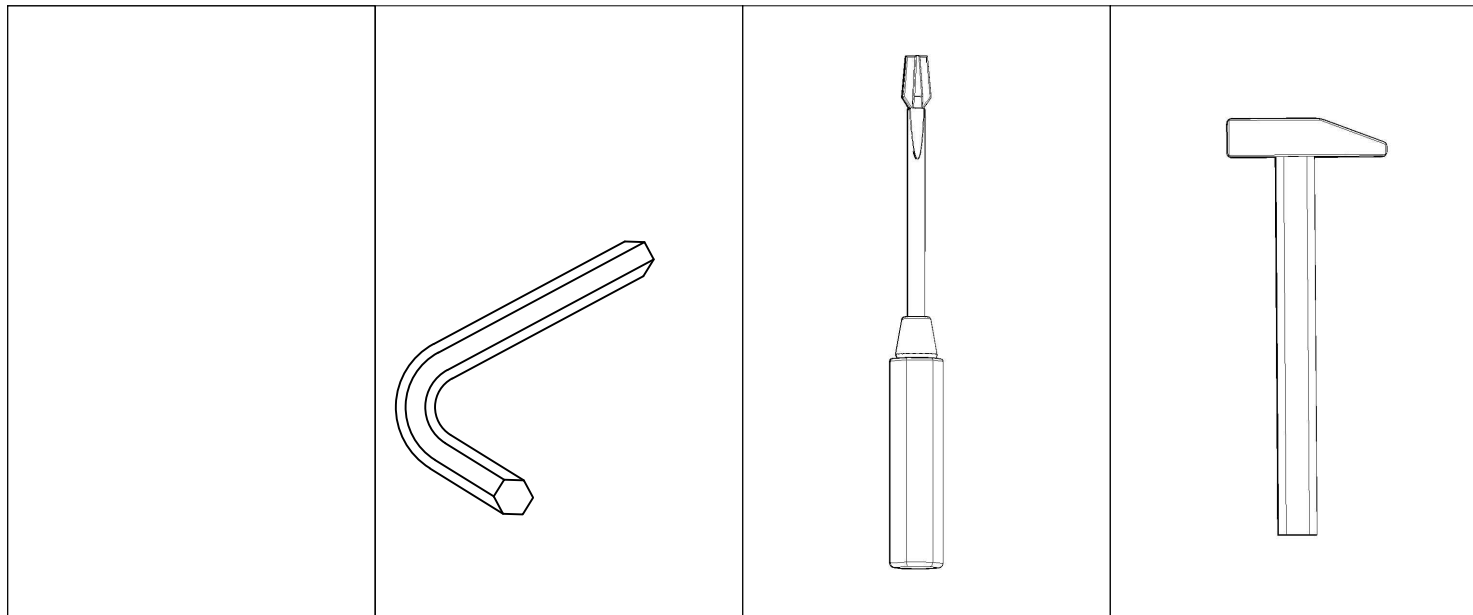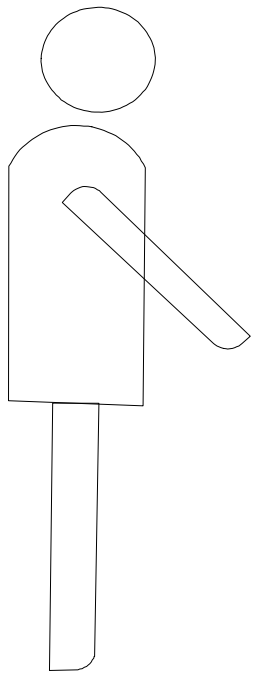

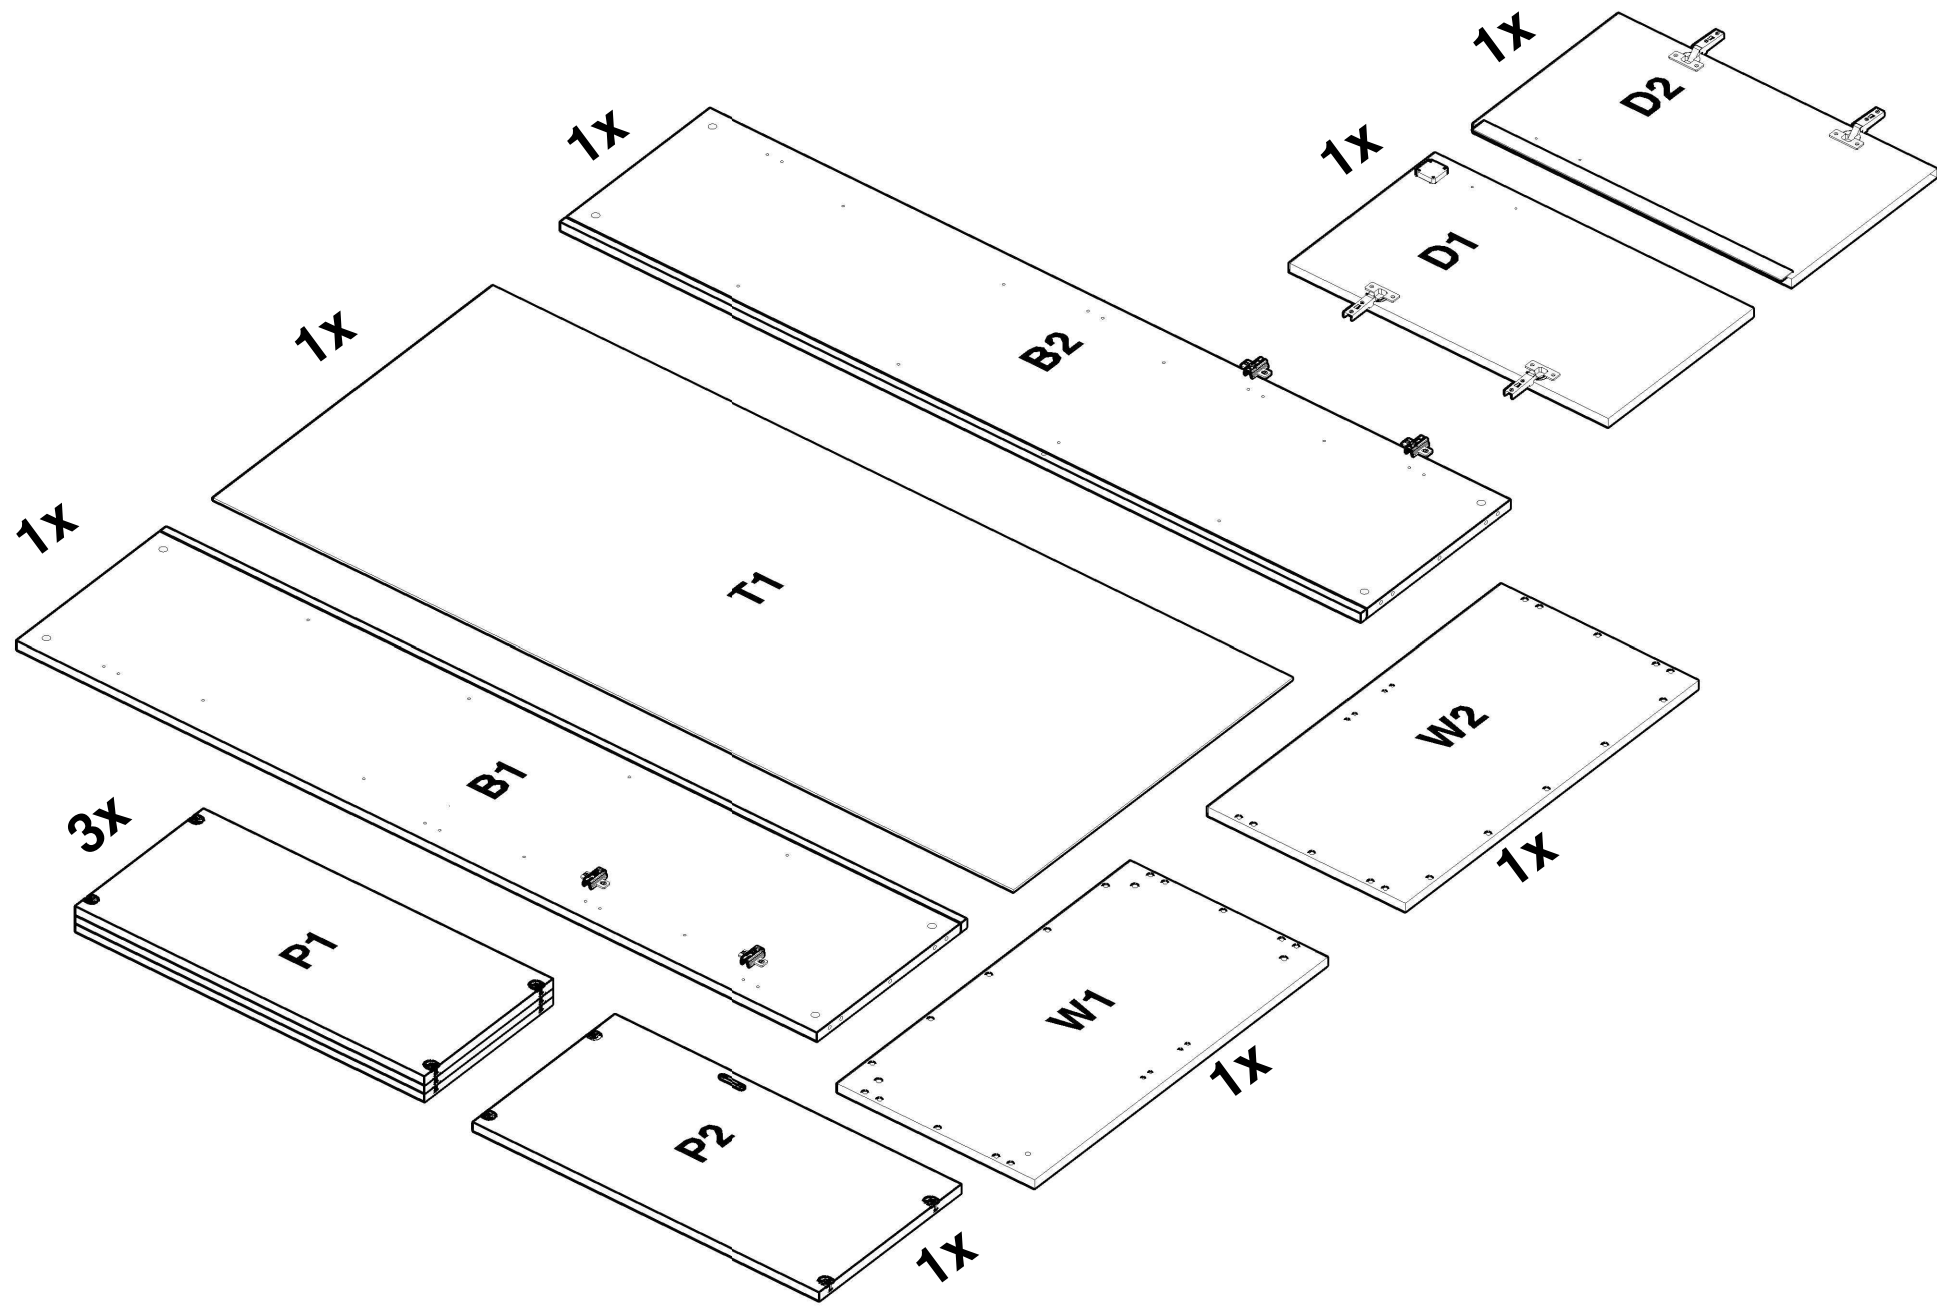





4x




6x

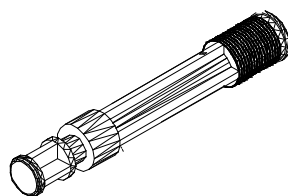

20x

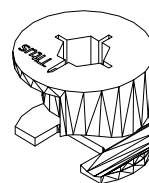


20x

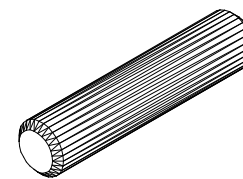


22x




16x

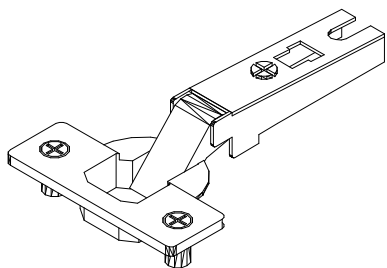


4x

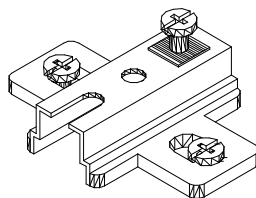


4x

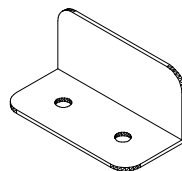


3x

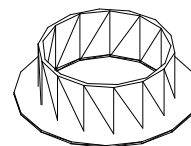


1x

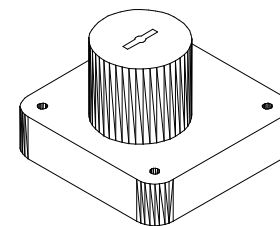


1x

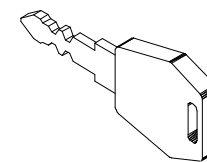


2x

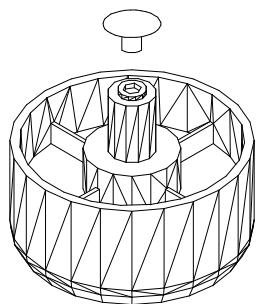


4x






1x

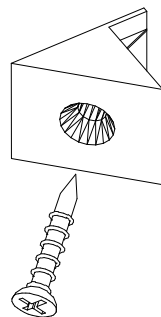





6x

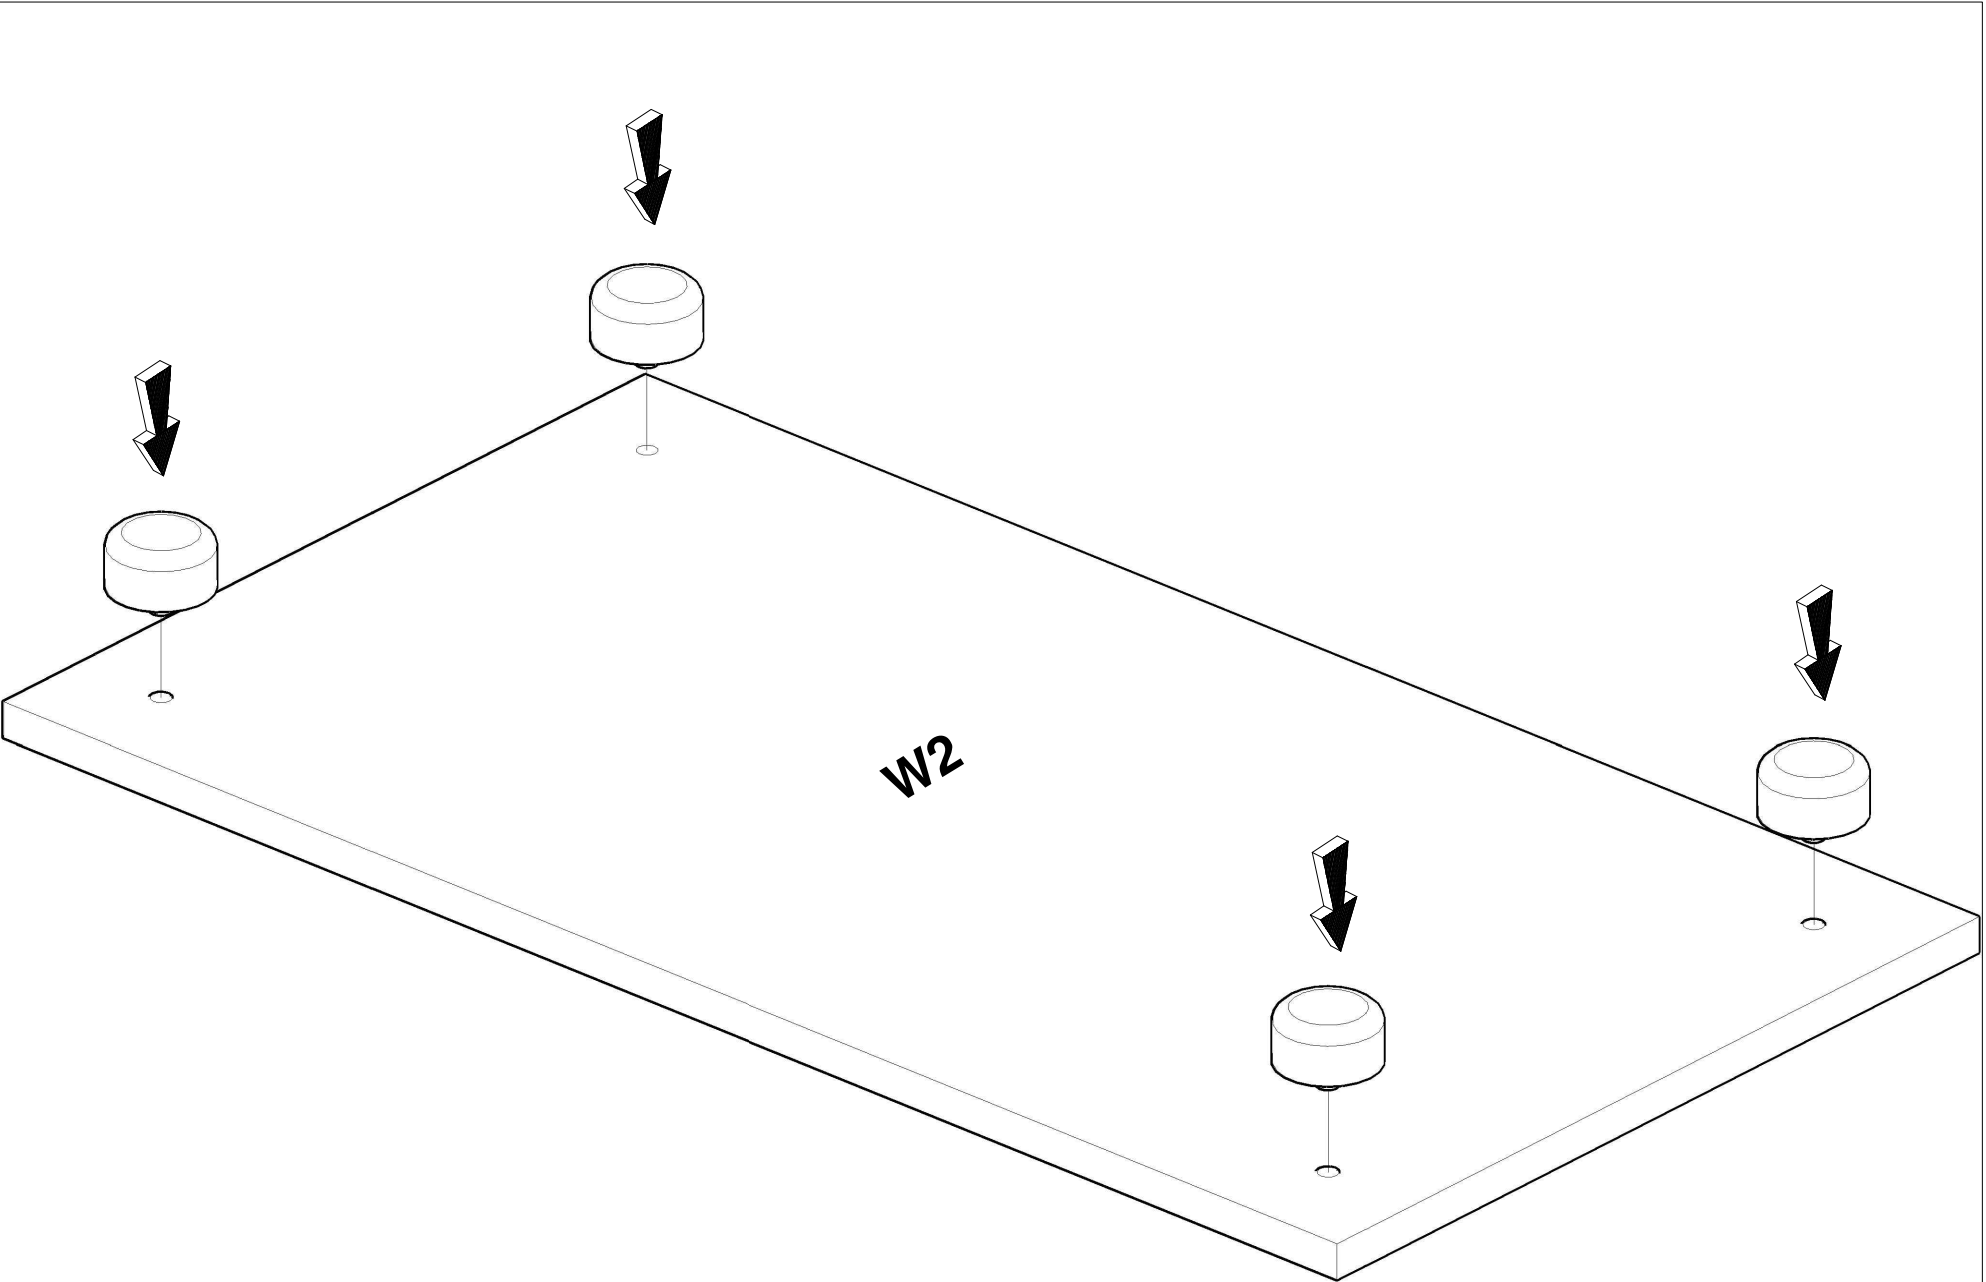

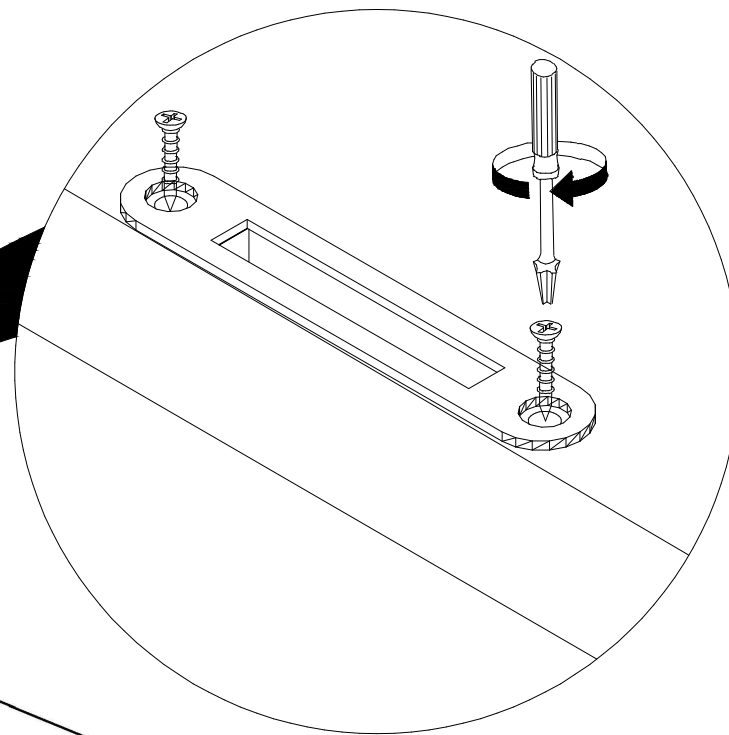
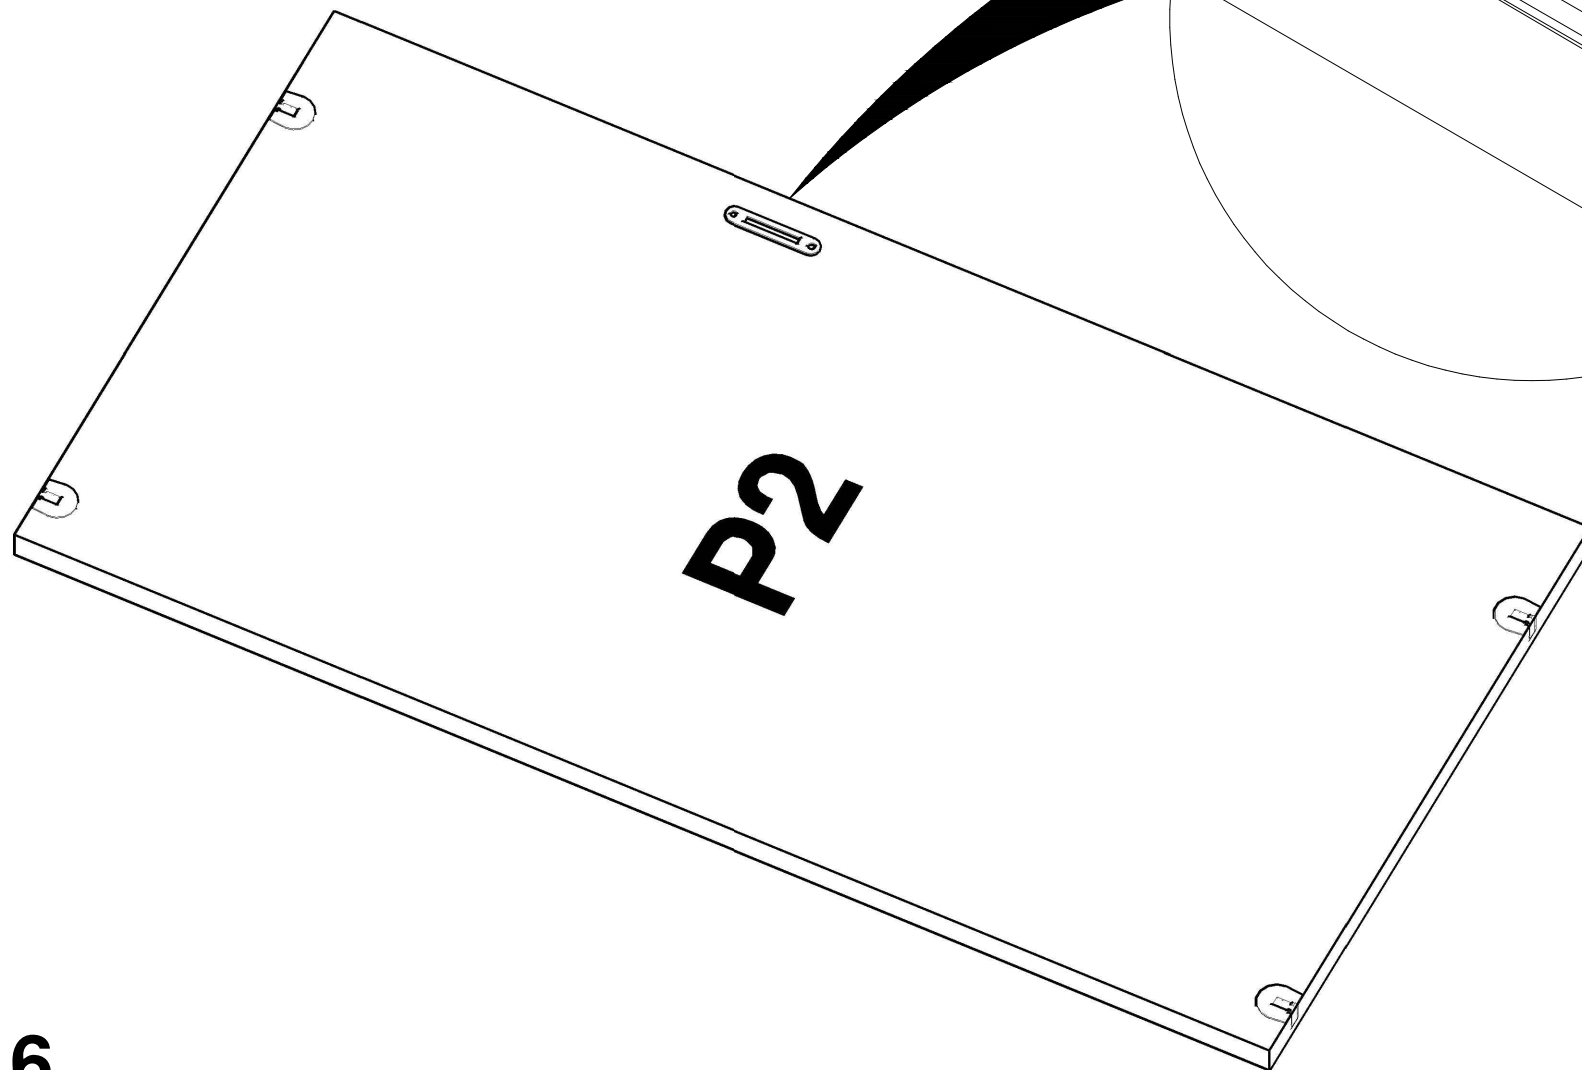


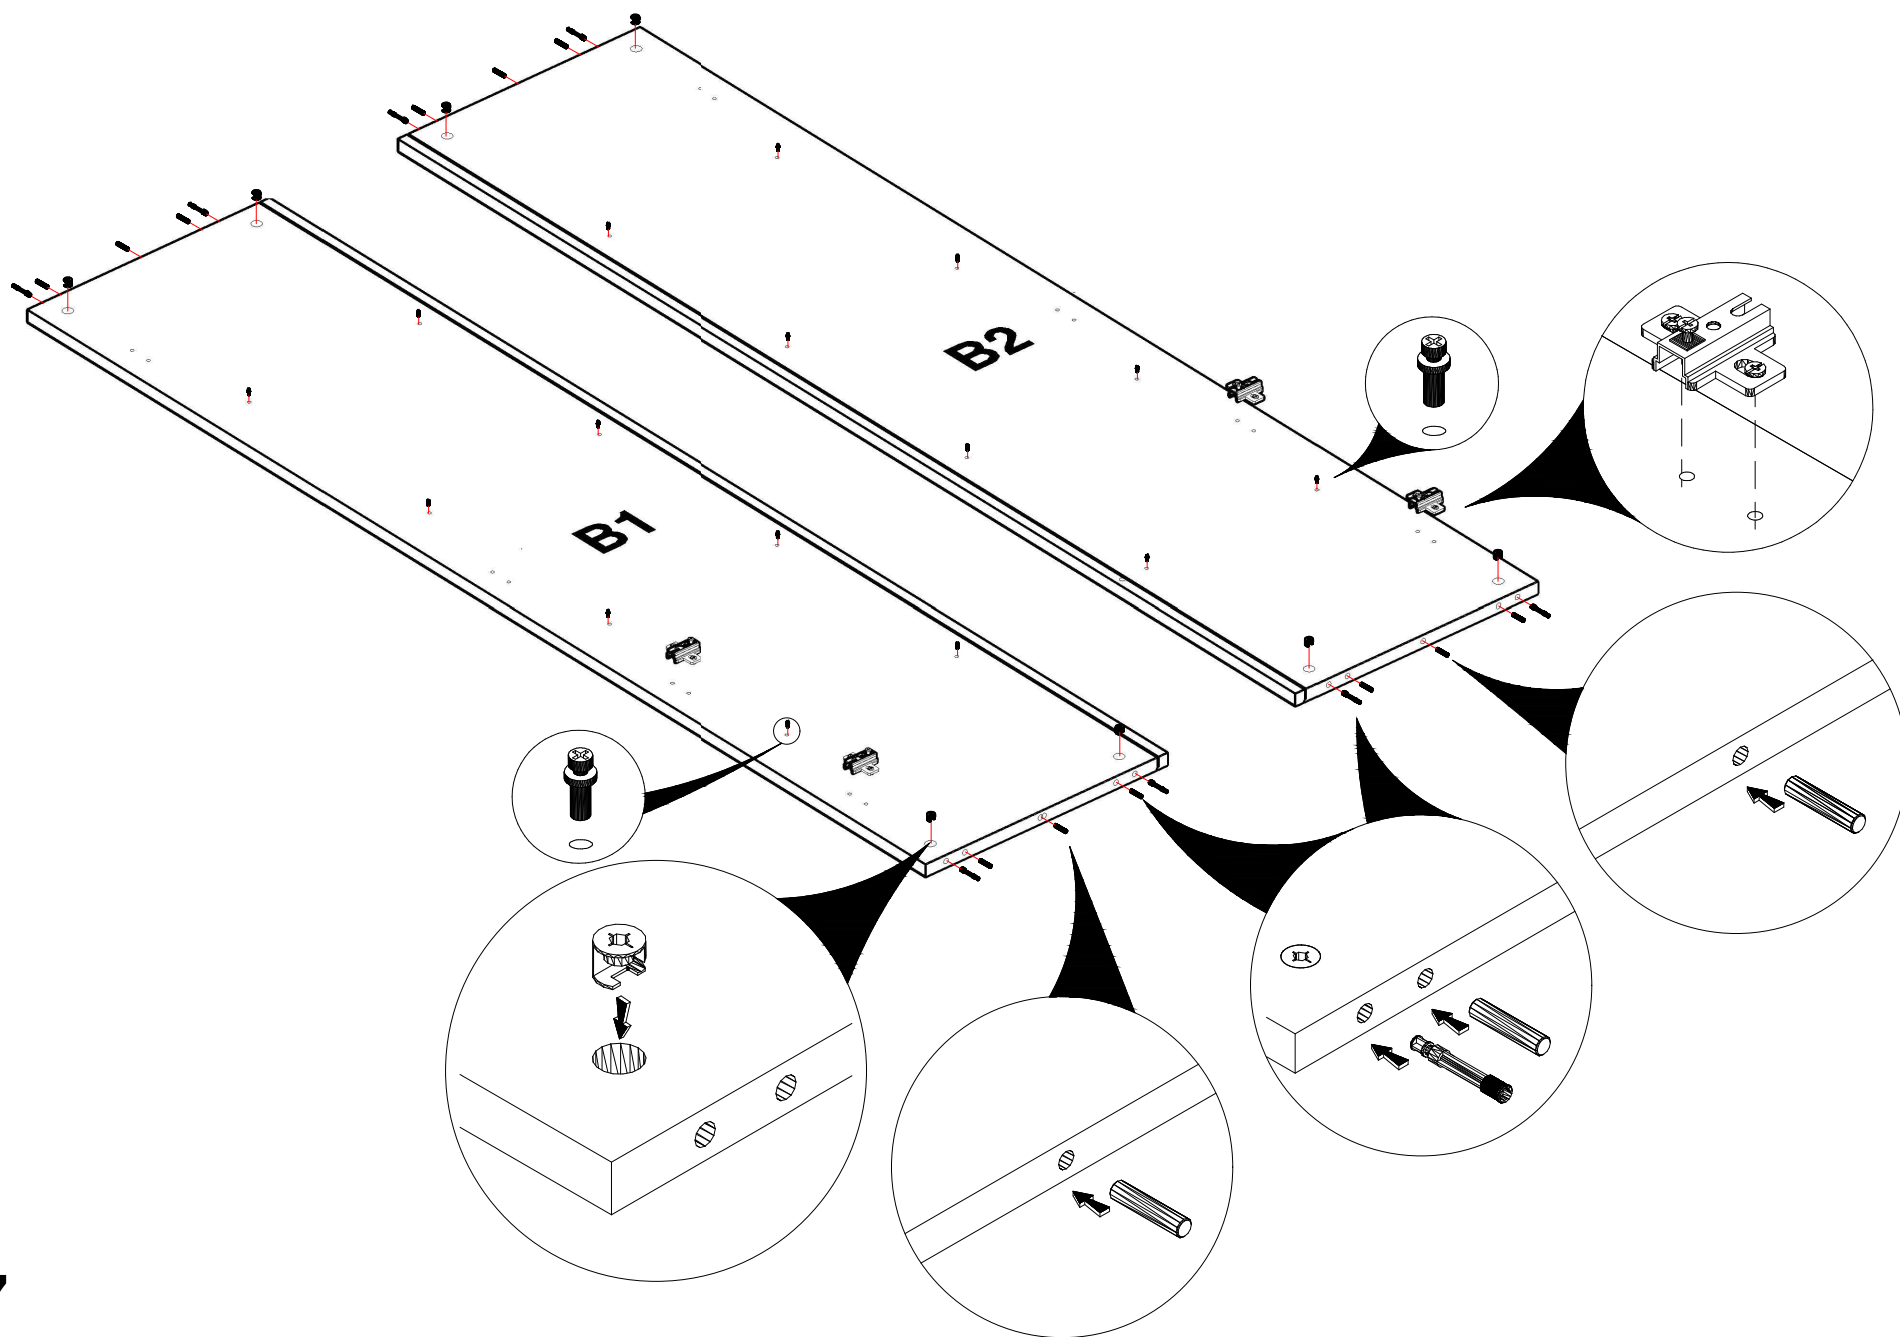


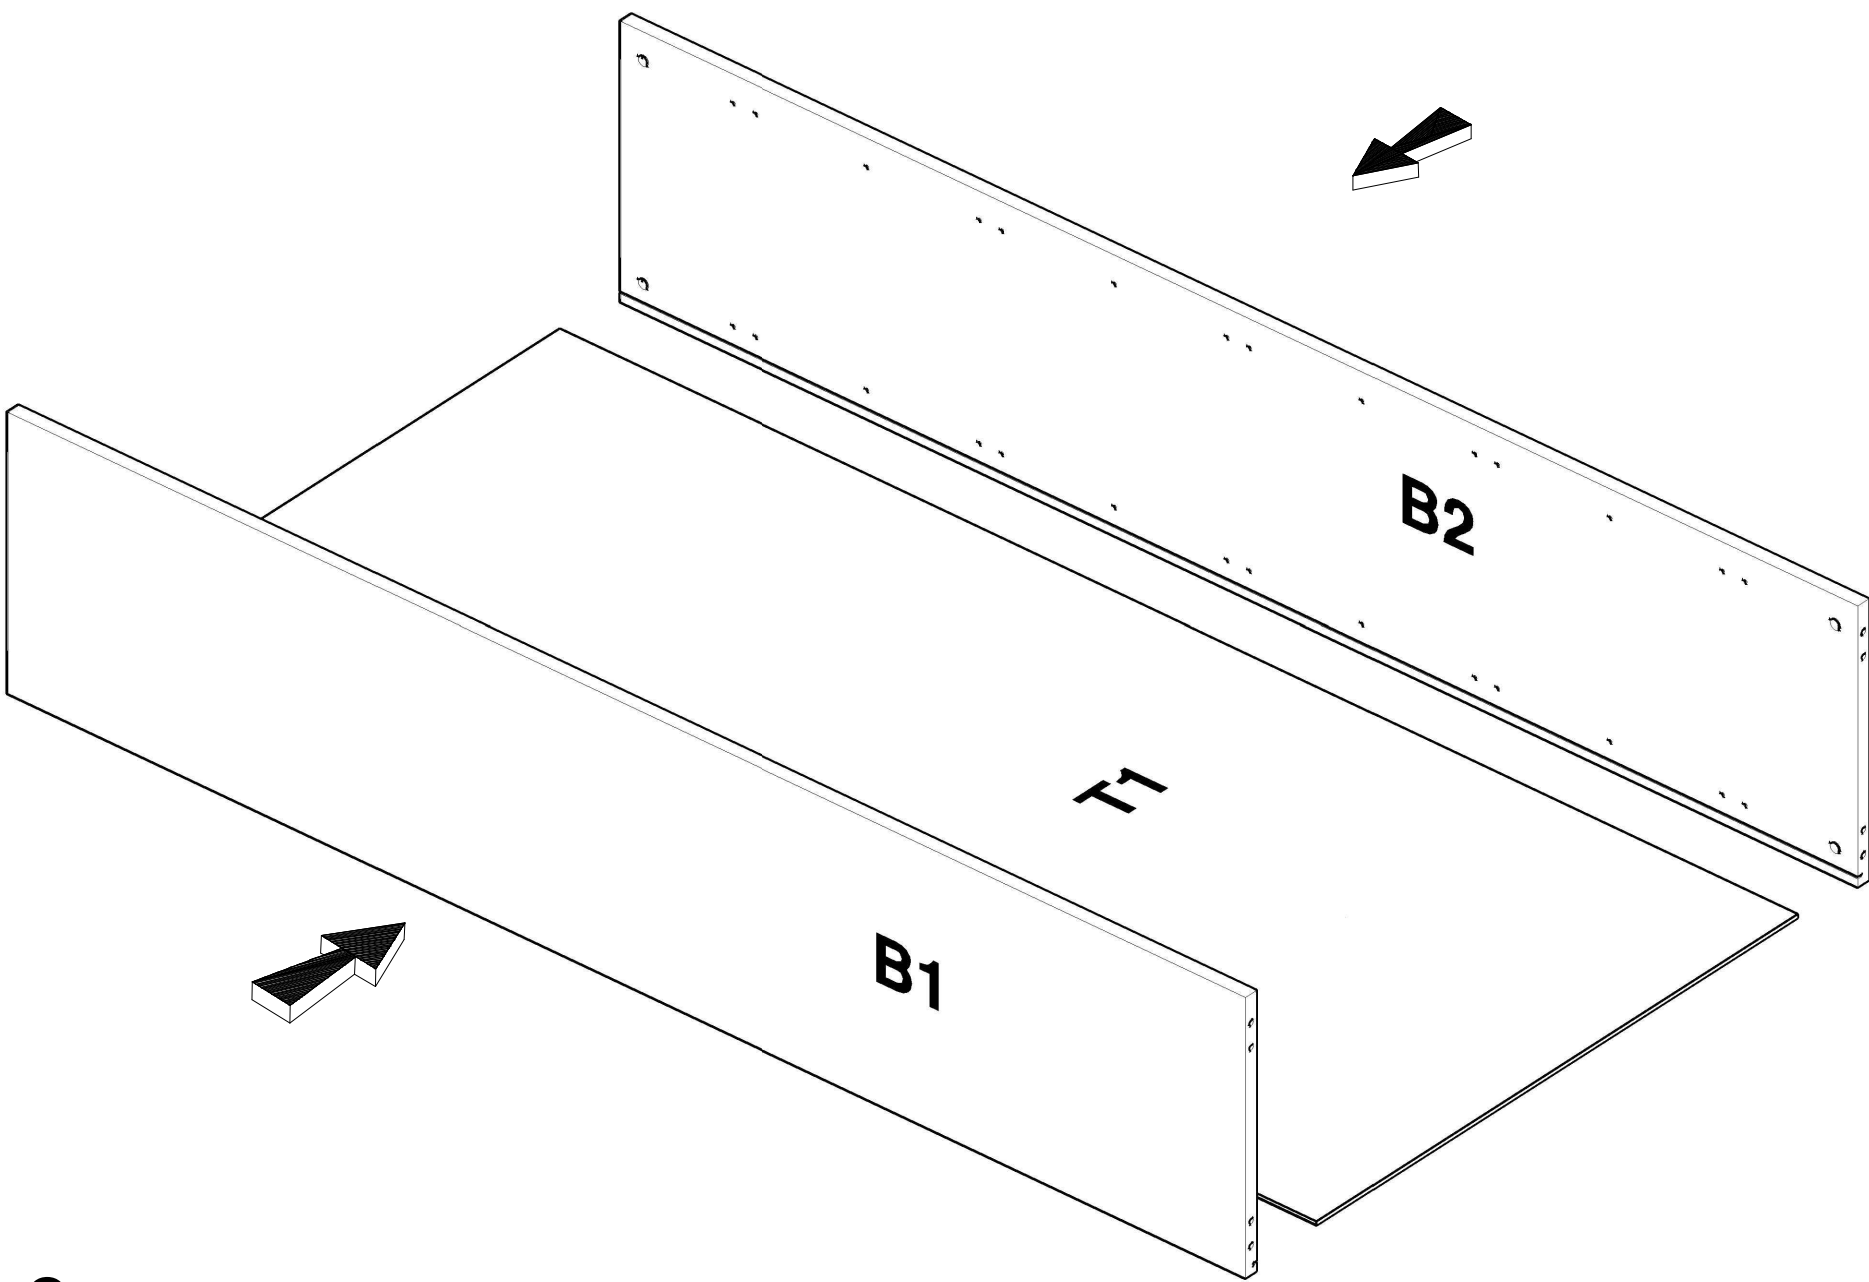


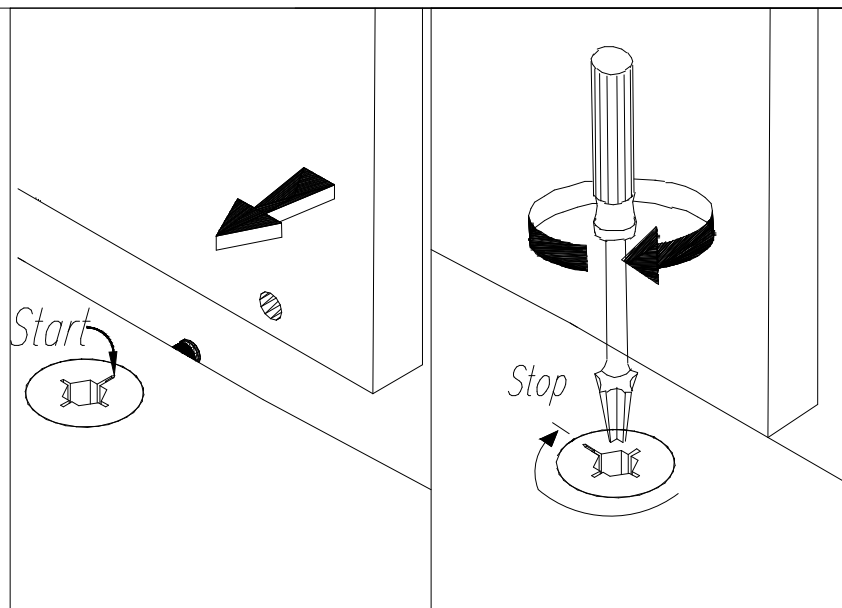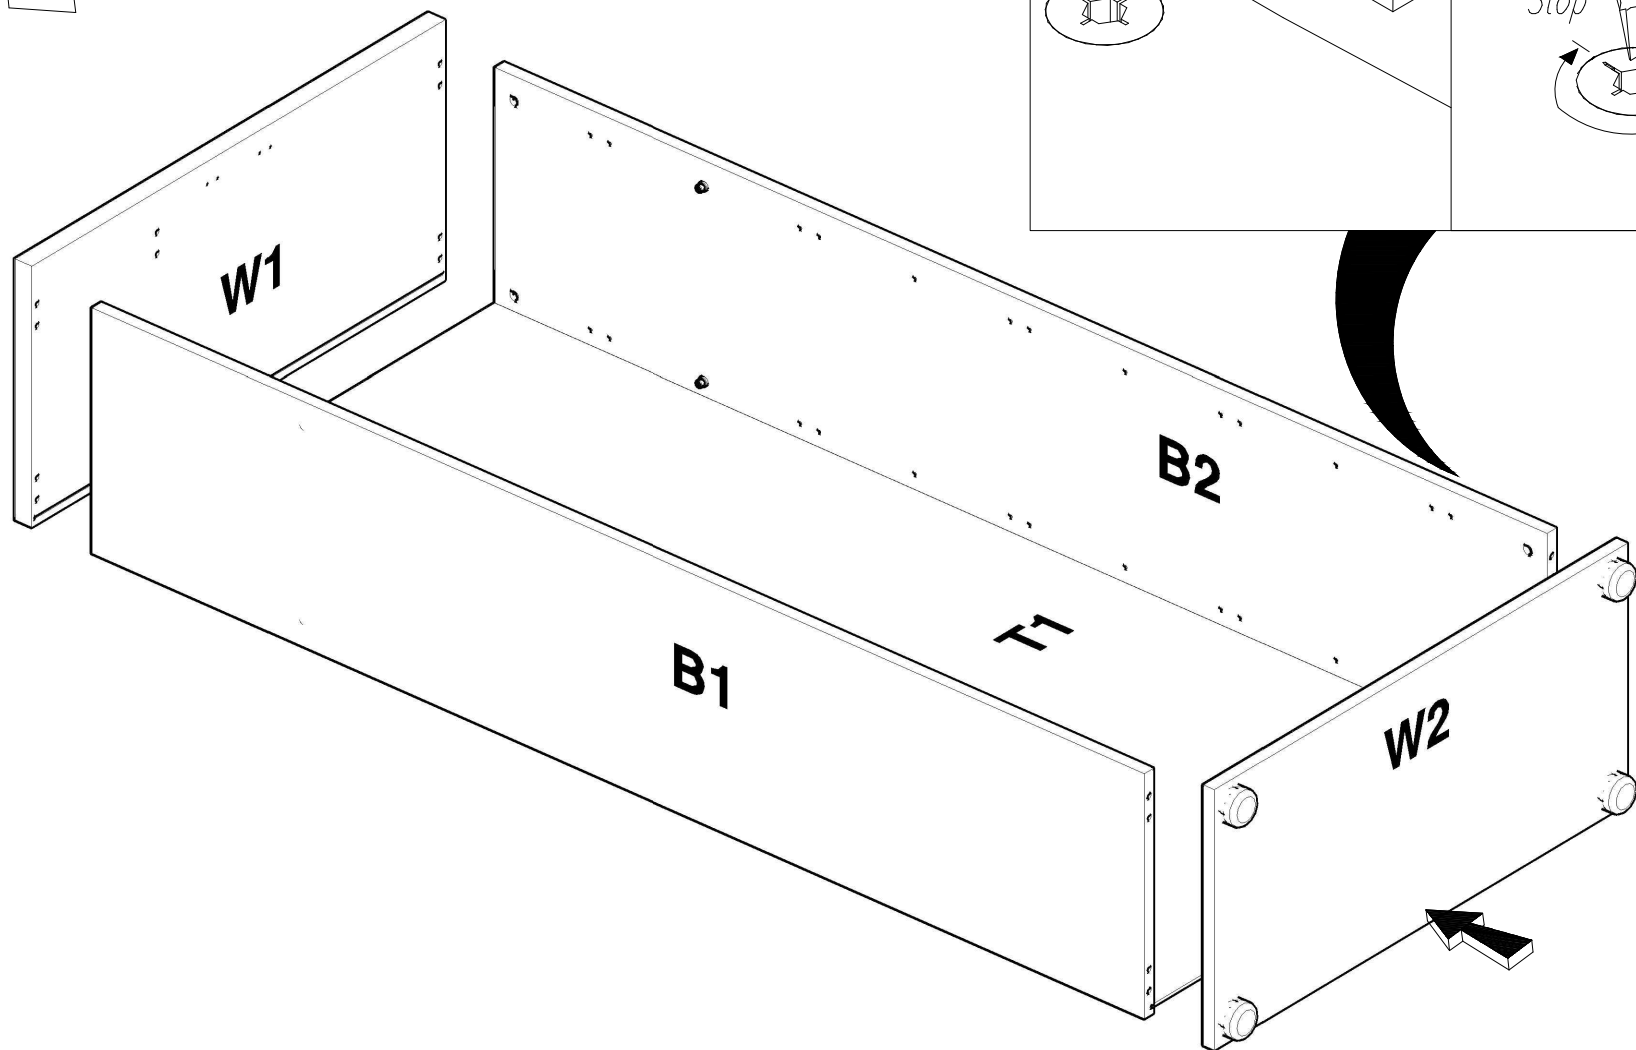




10

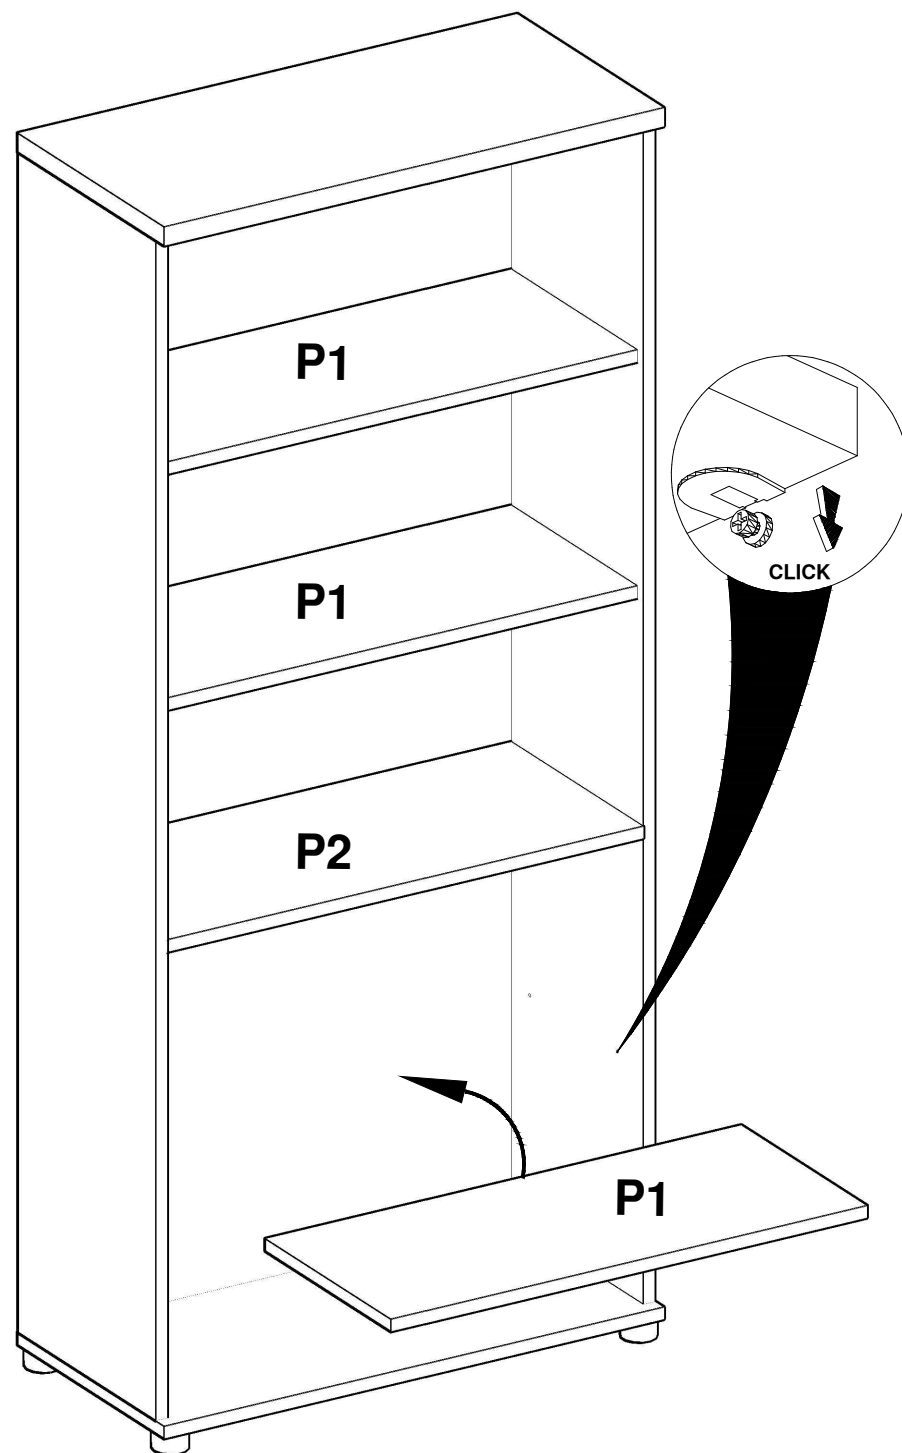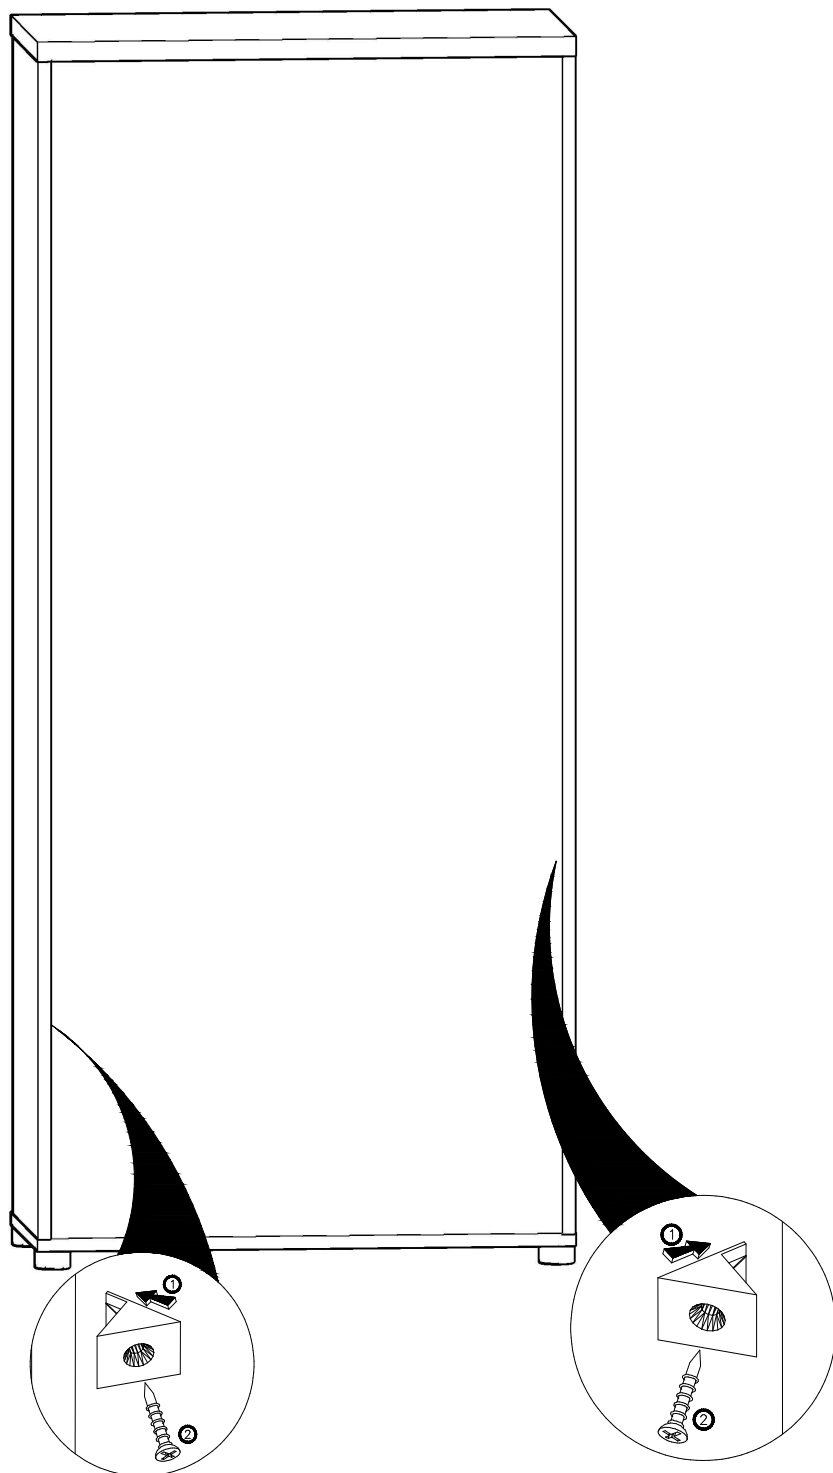


11

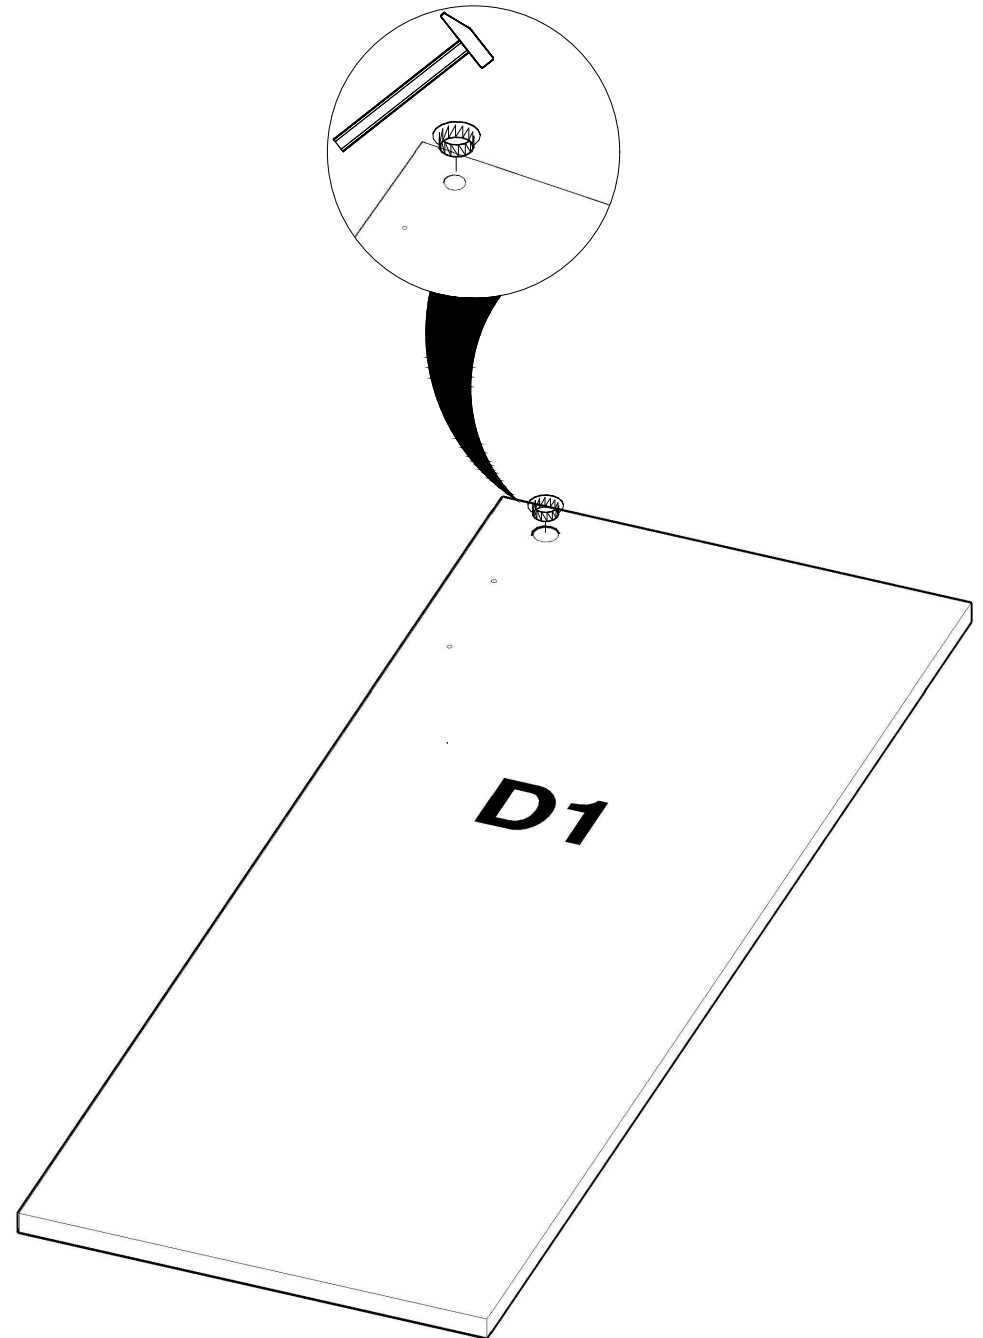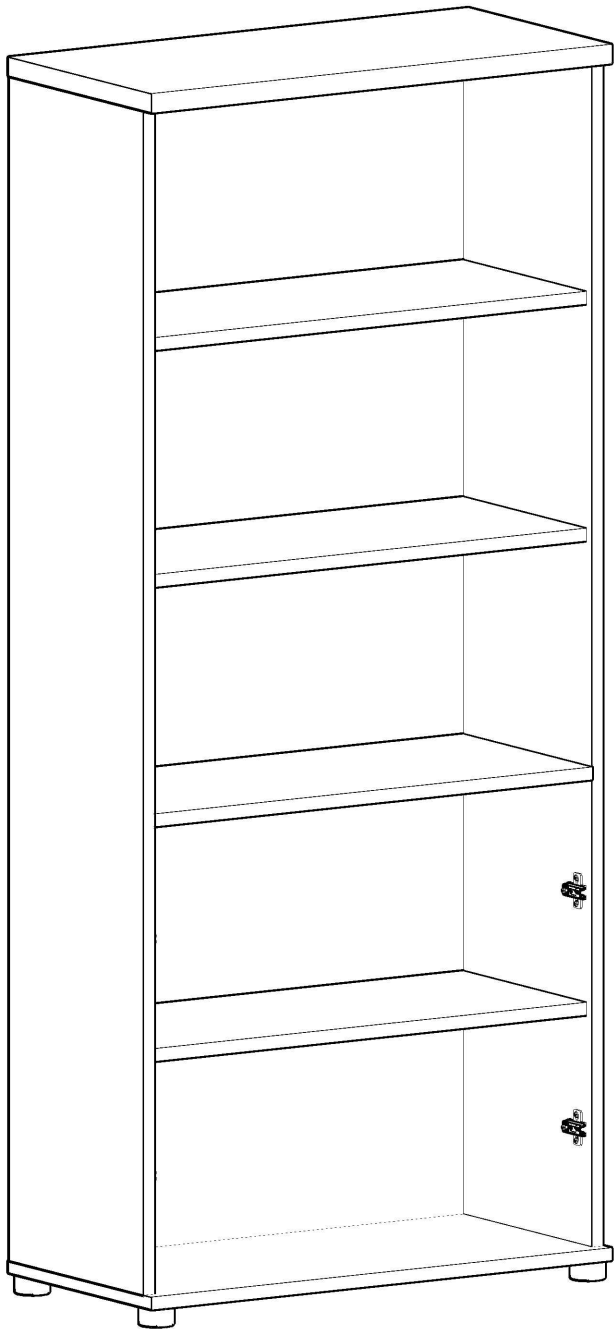

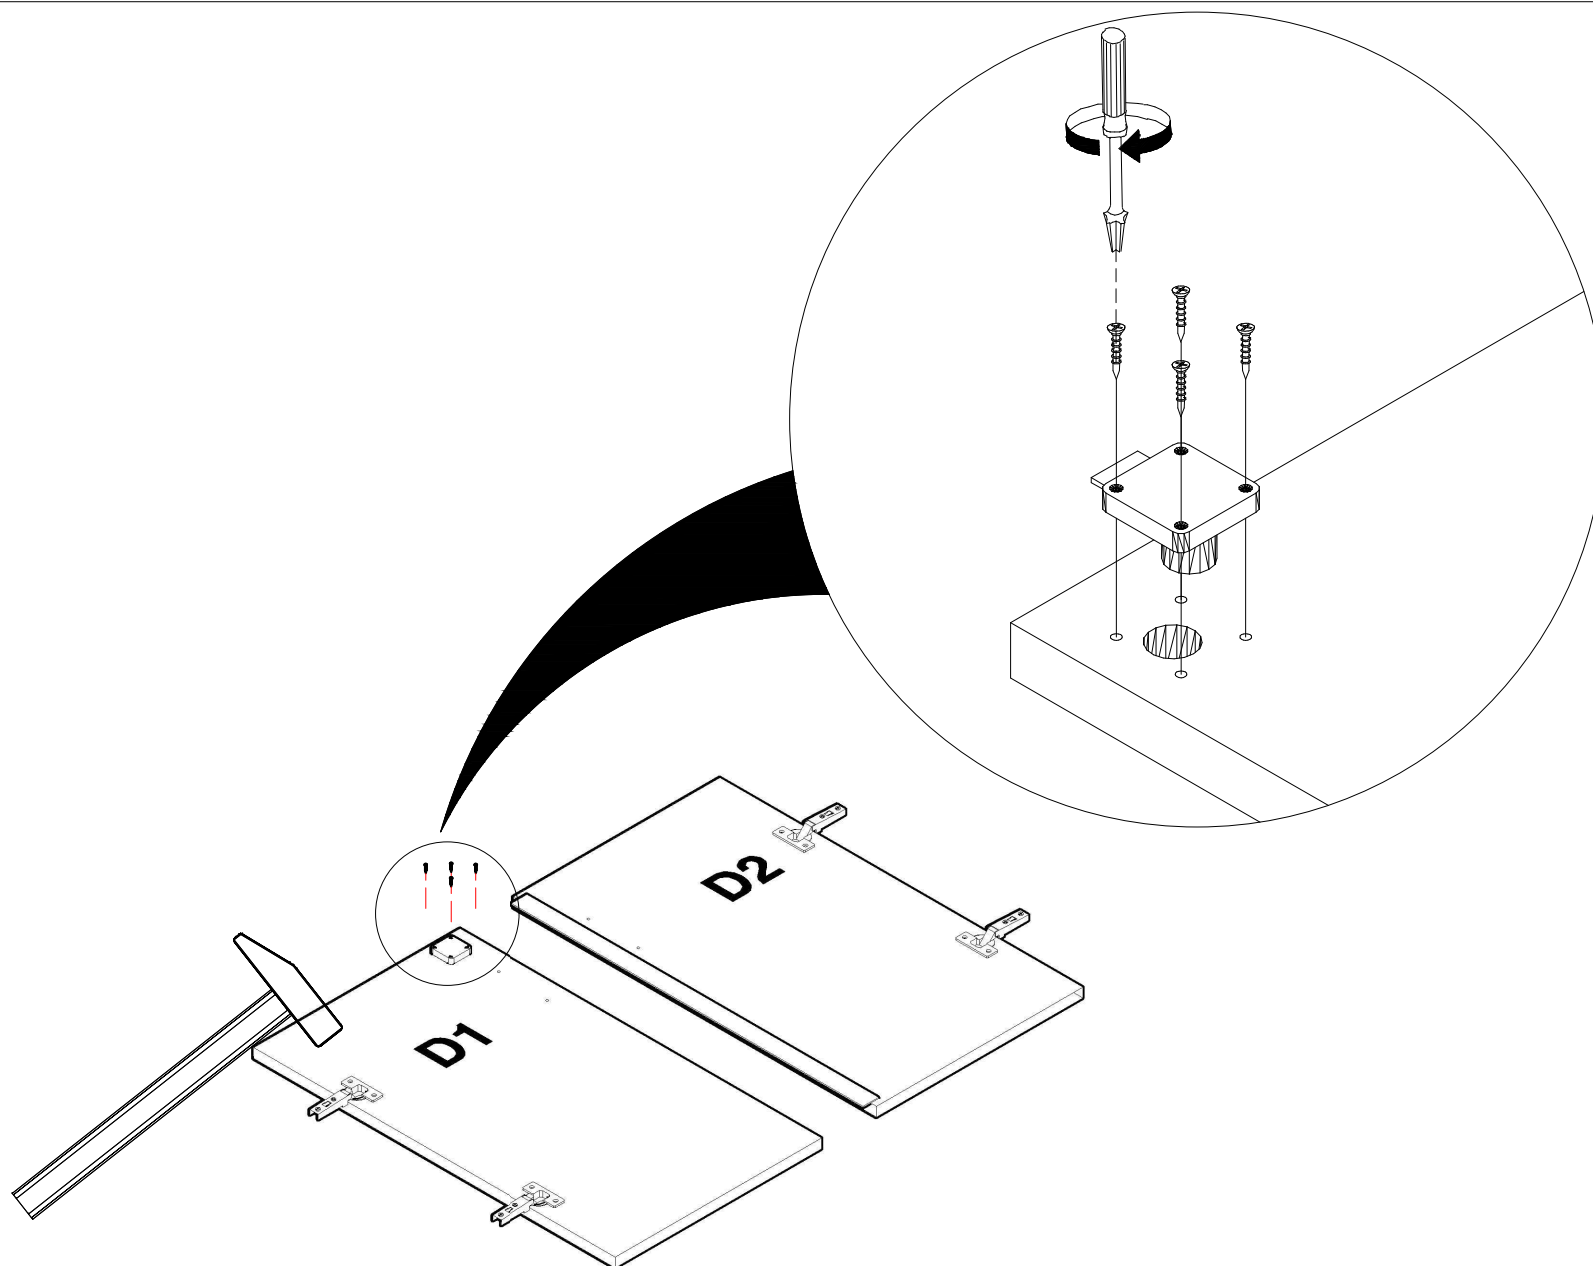


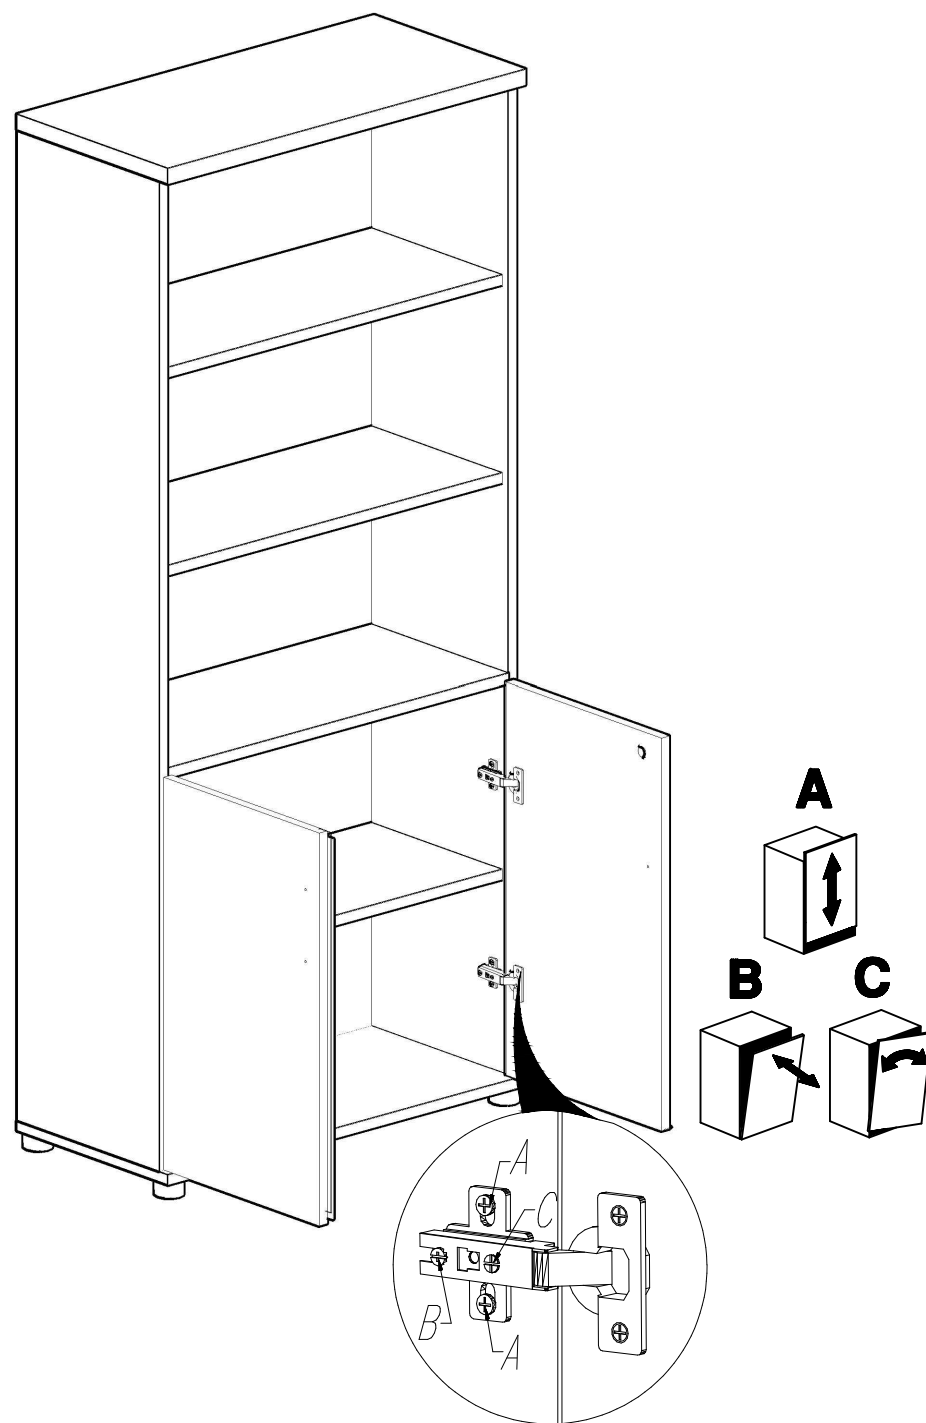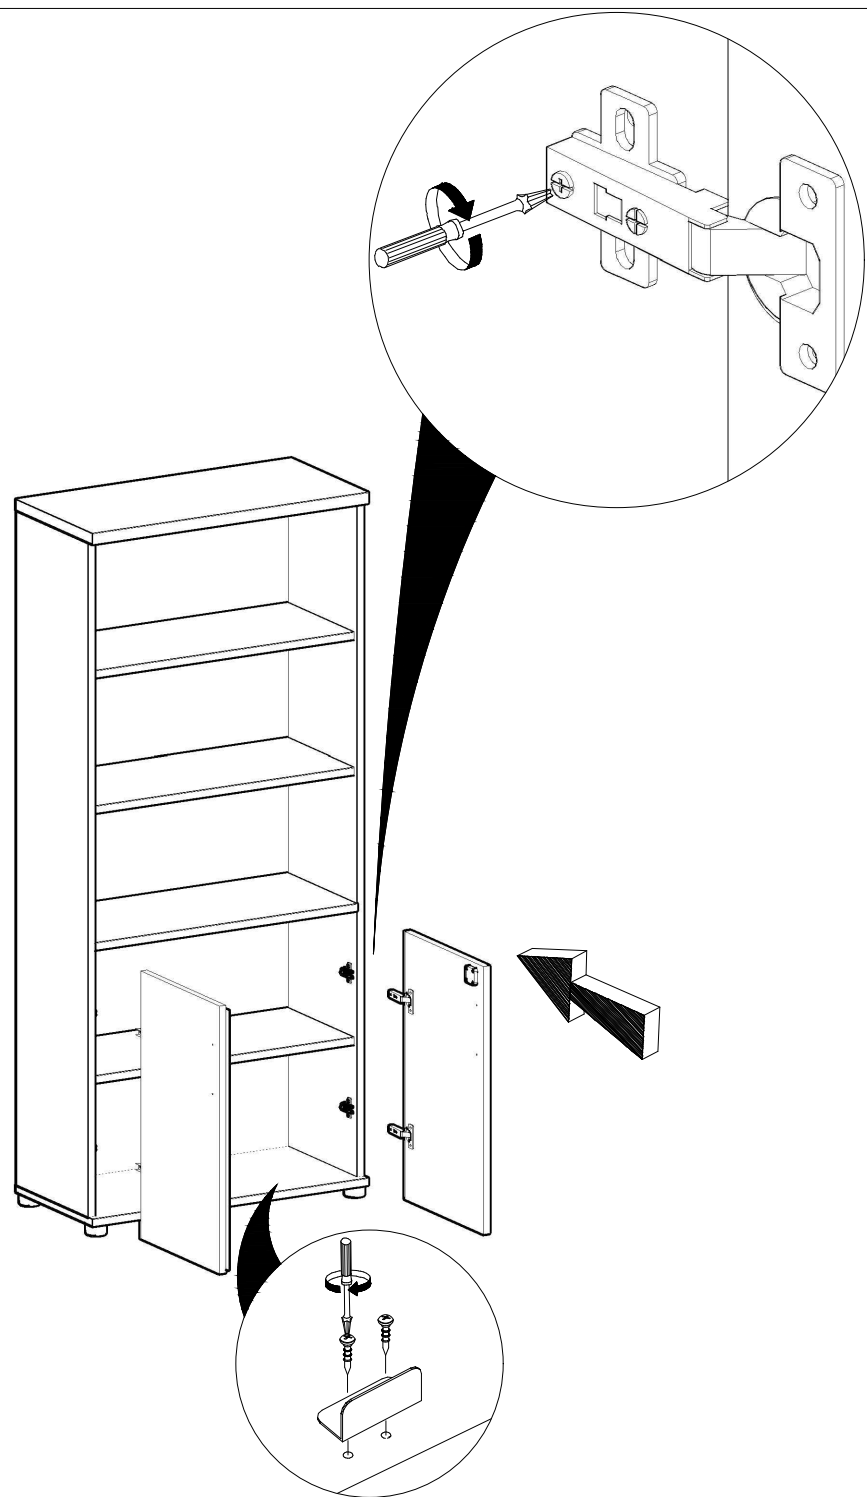




A

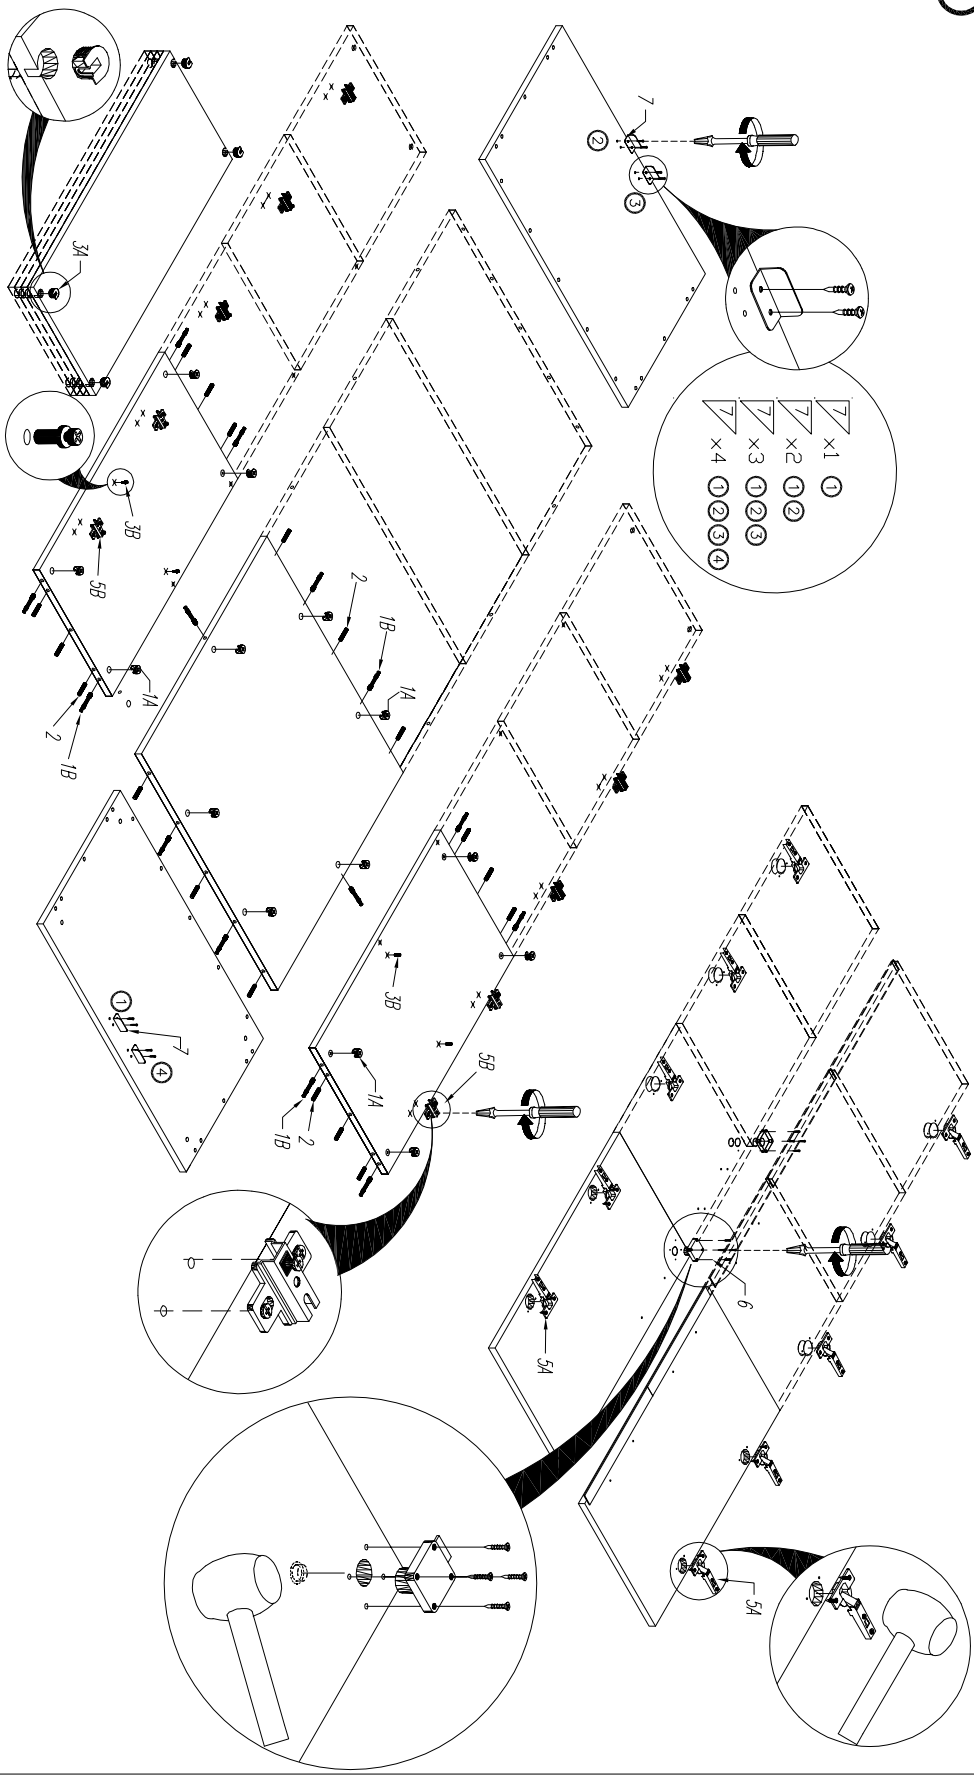

B





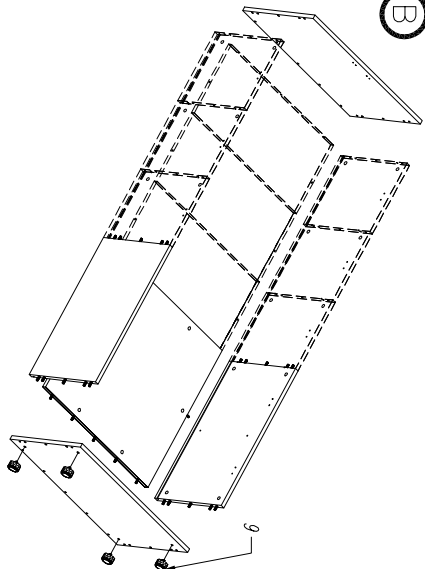


C

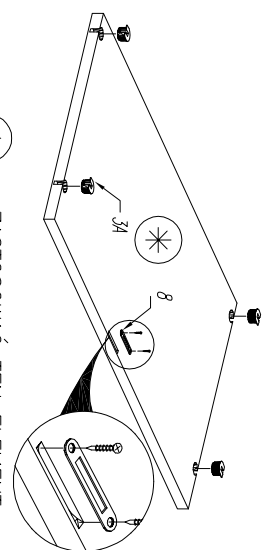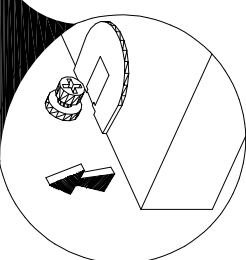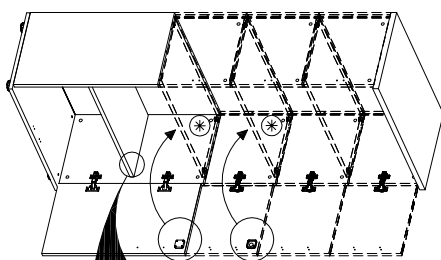


(*) – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

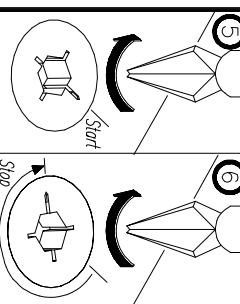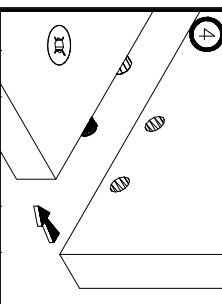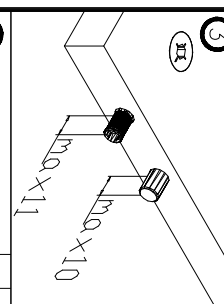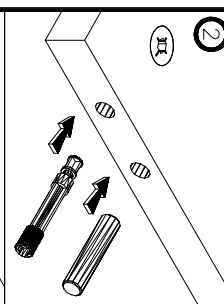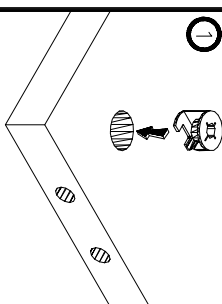


D

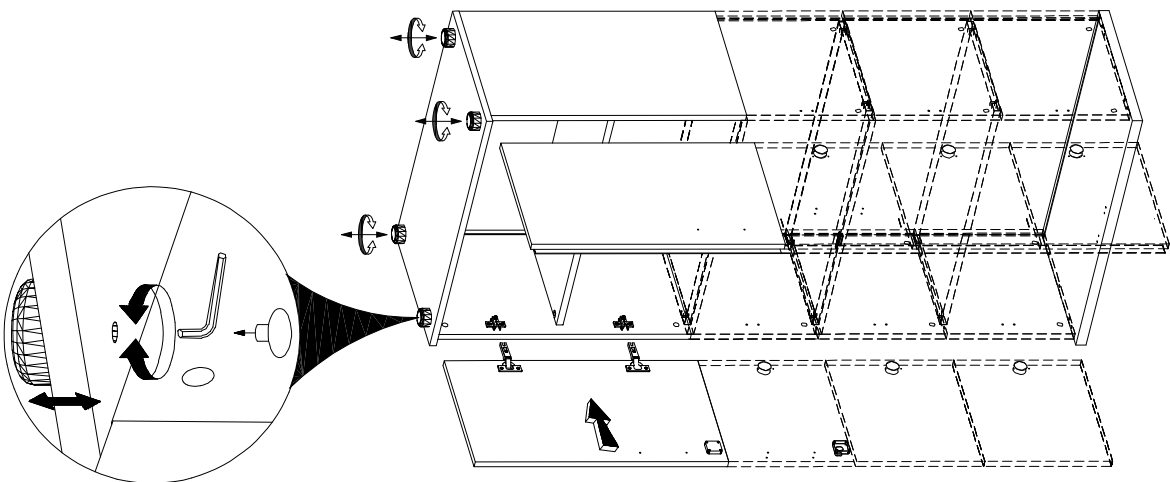

E

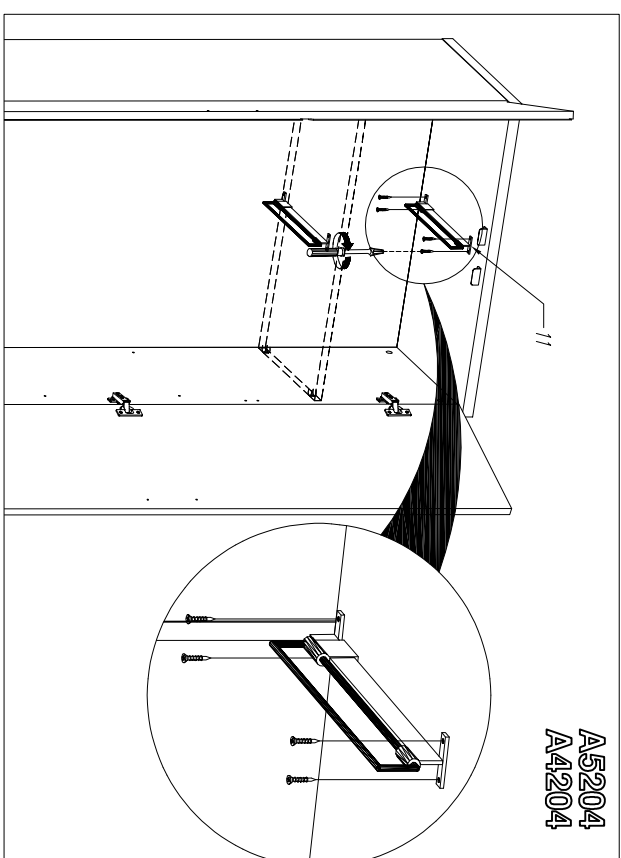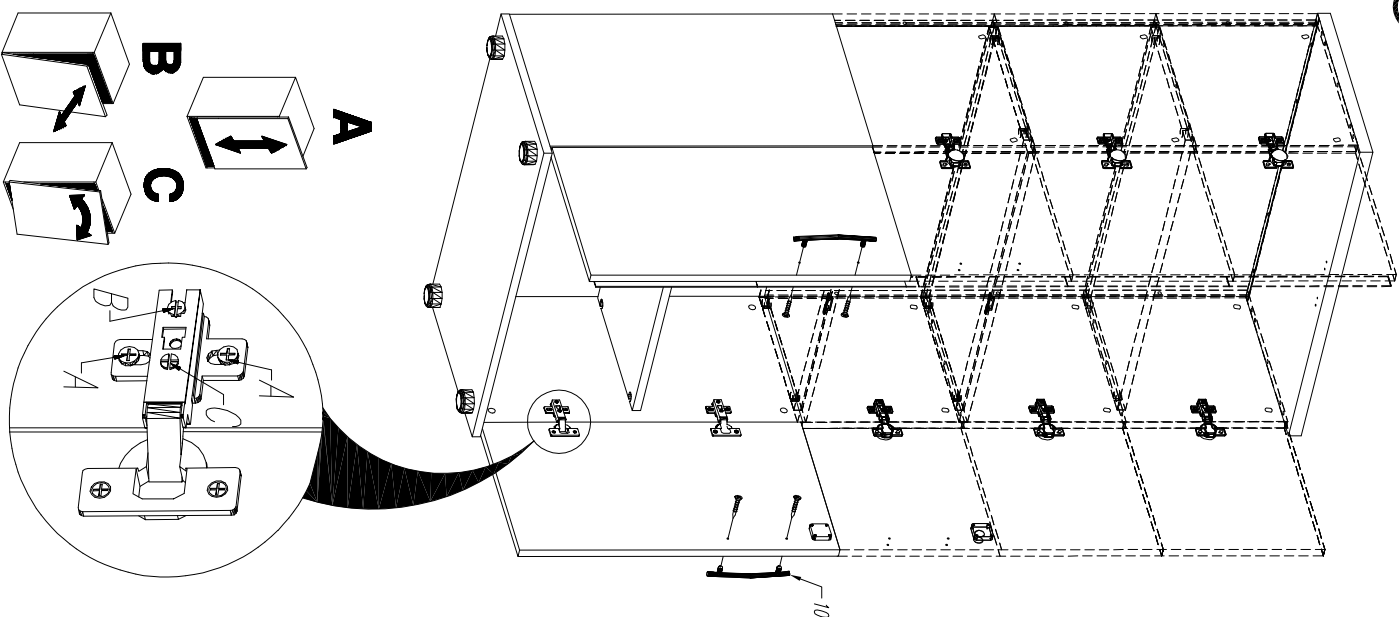

A5204
A4204

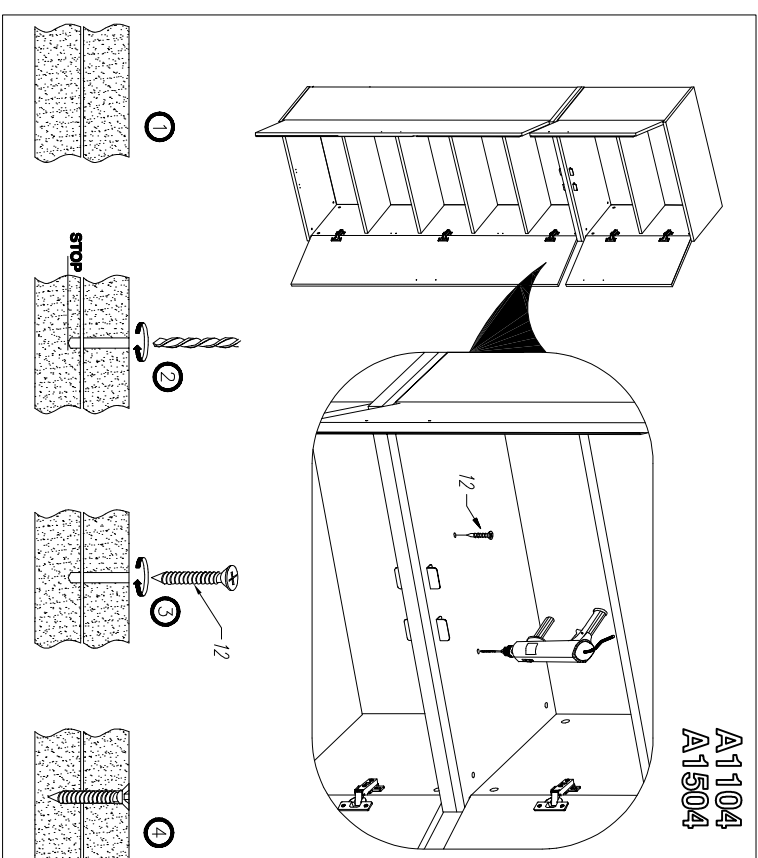

A1104
A1504

