




1

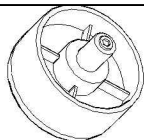


A54D4


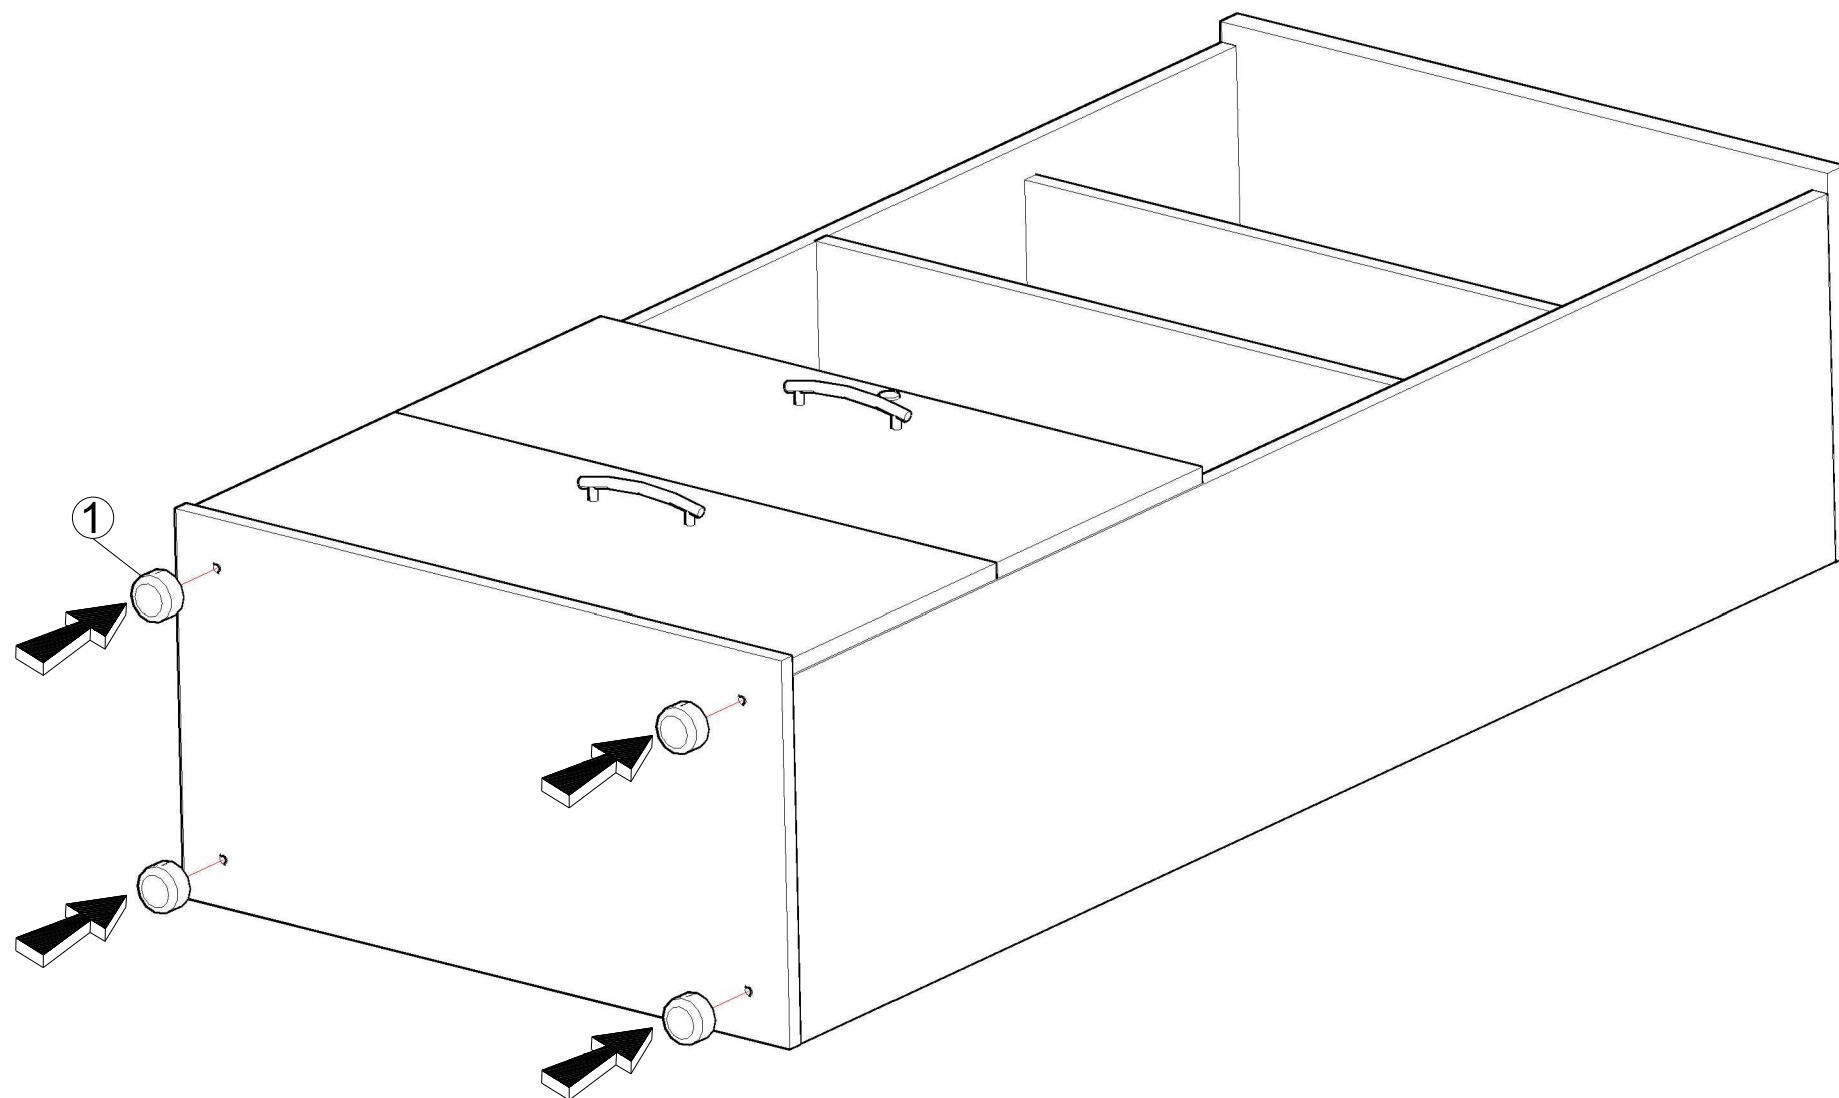







1

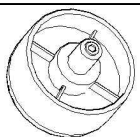

IA54D4





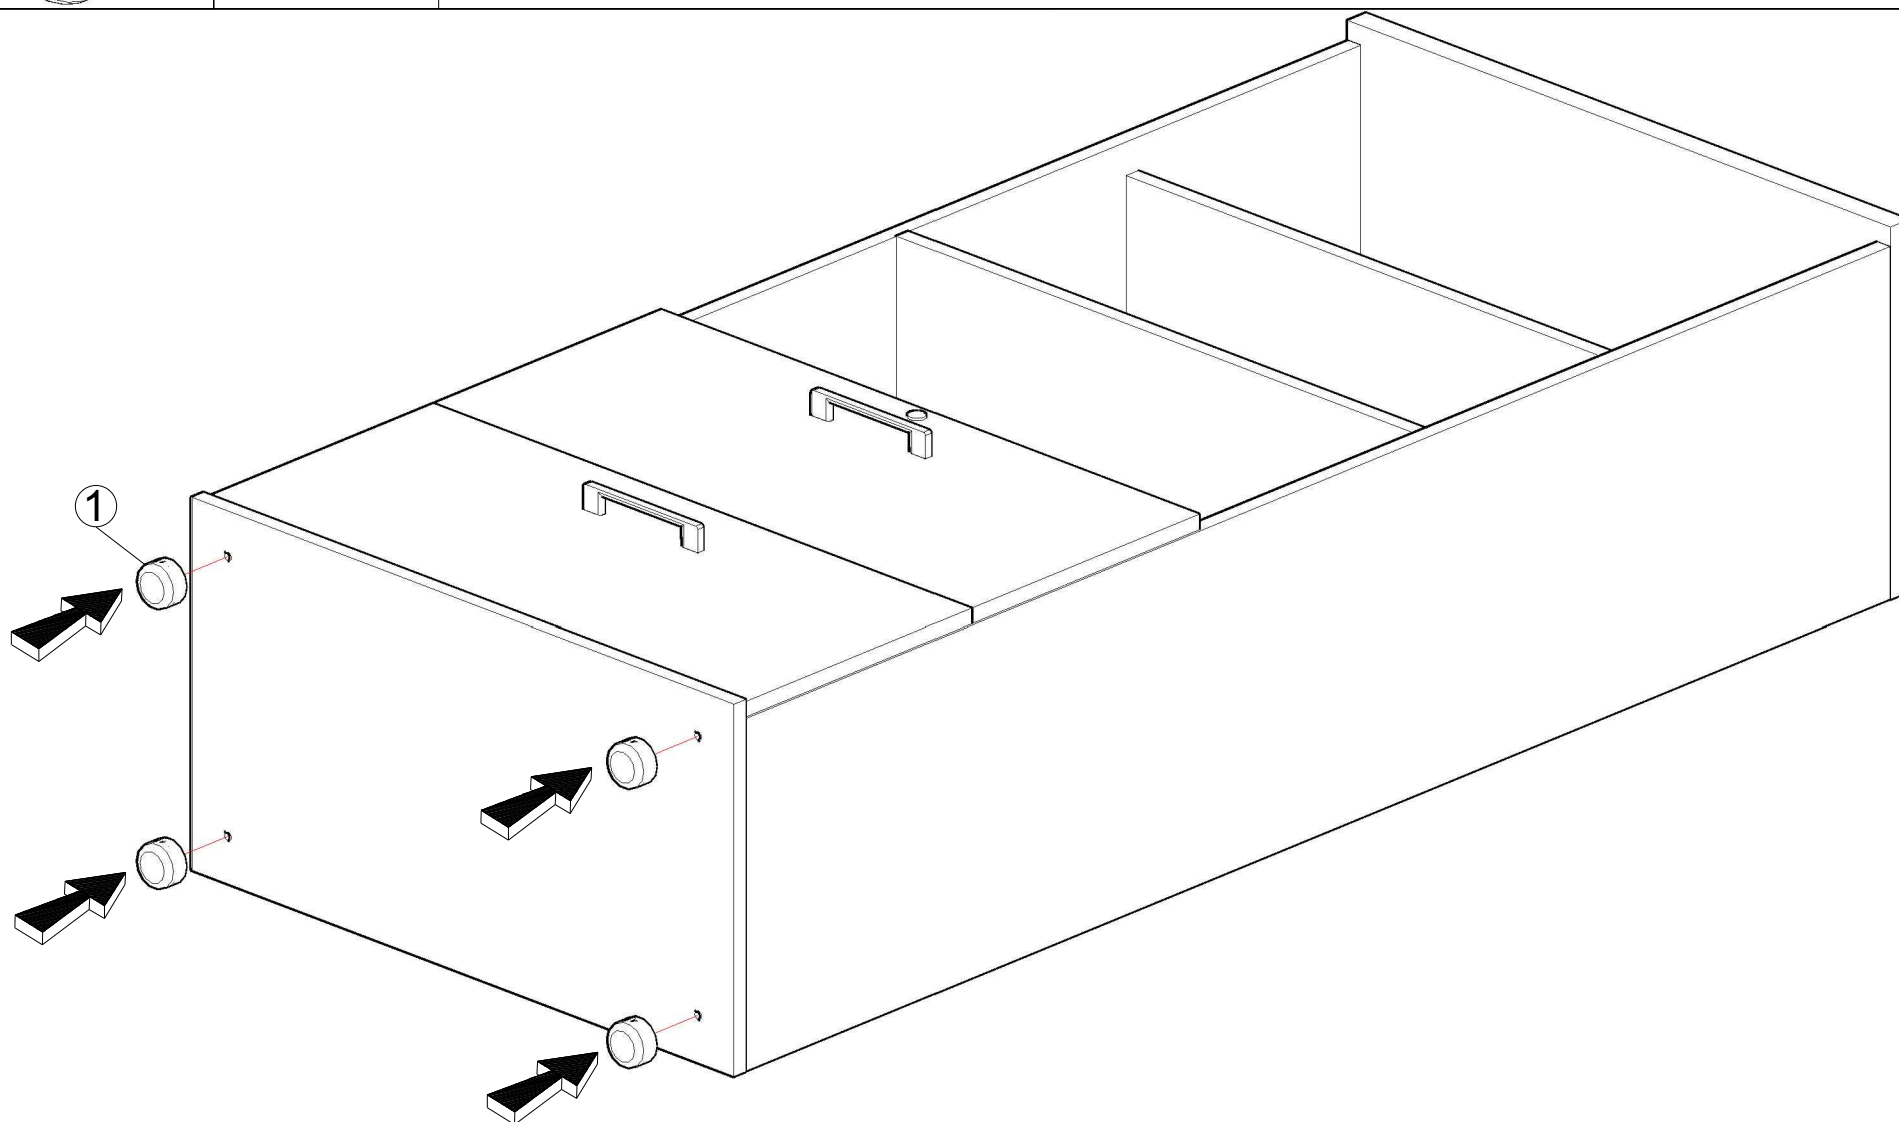


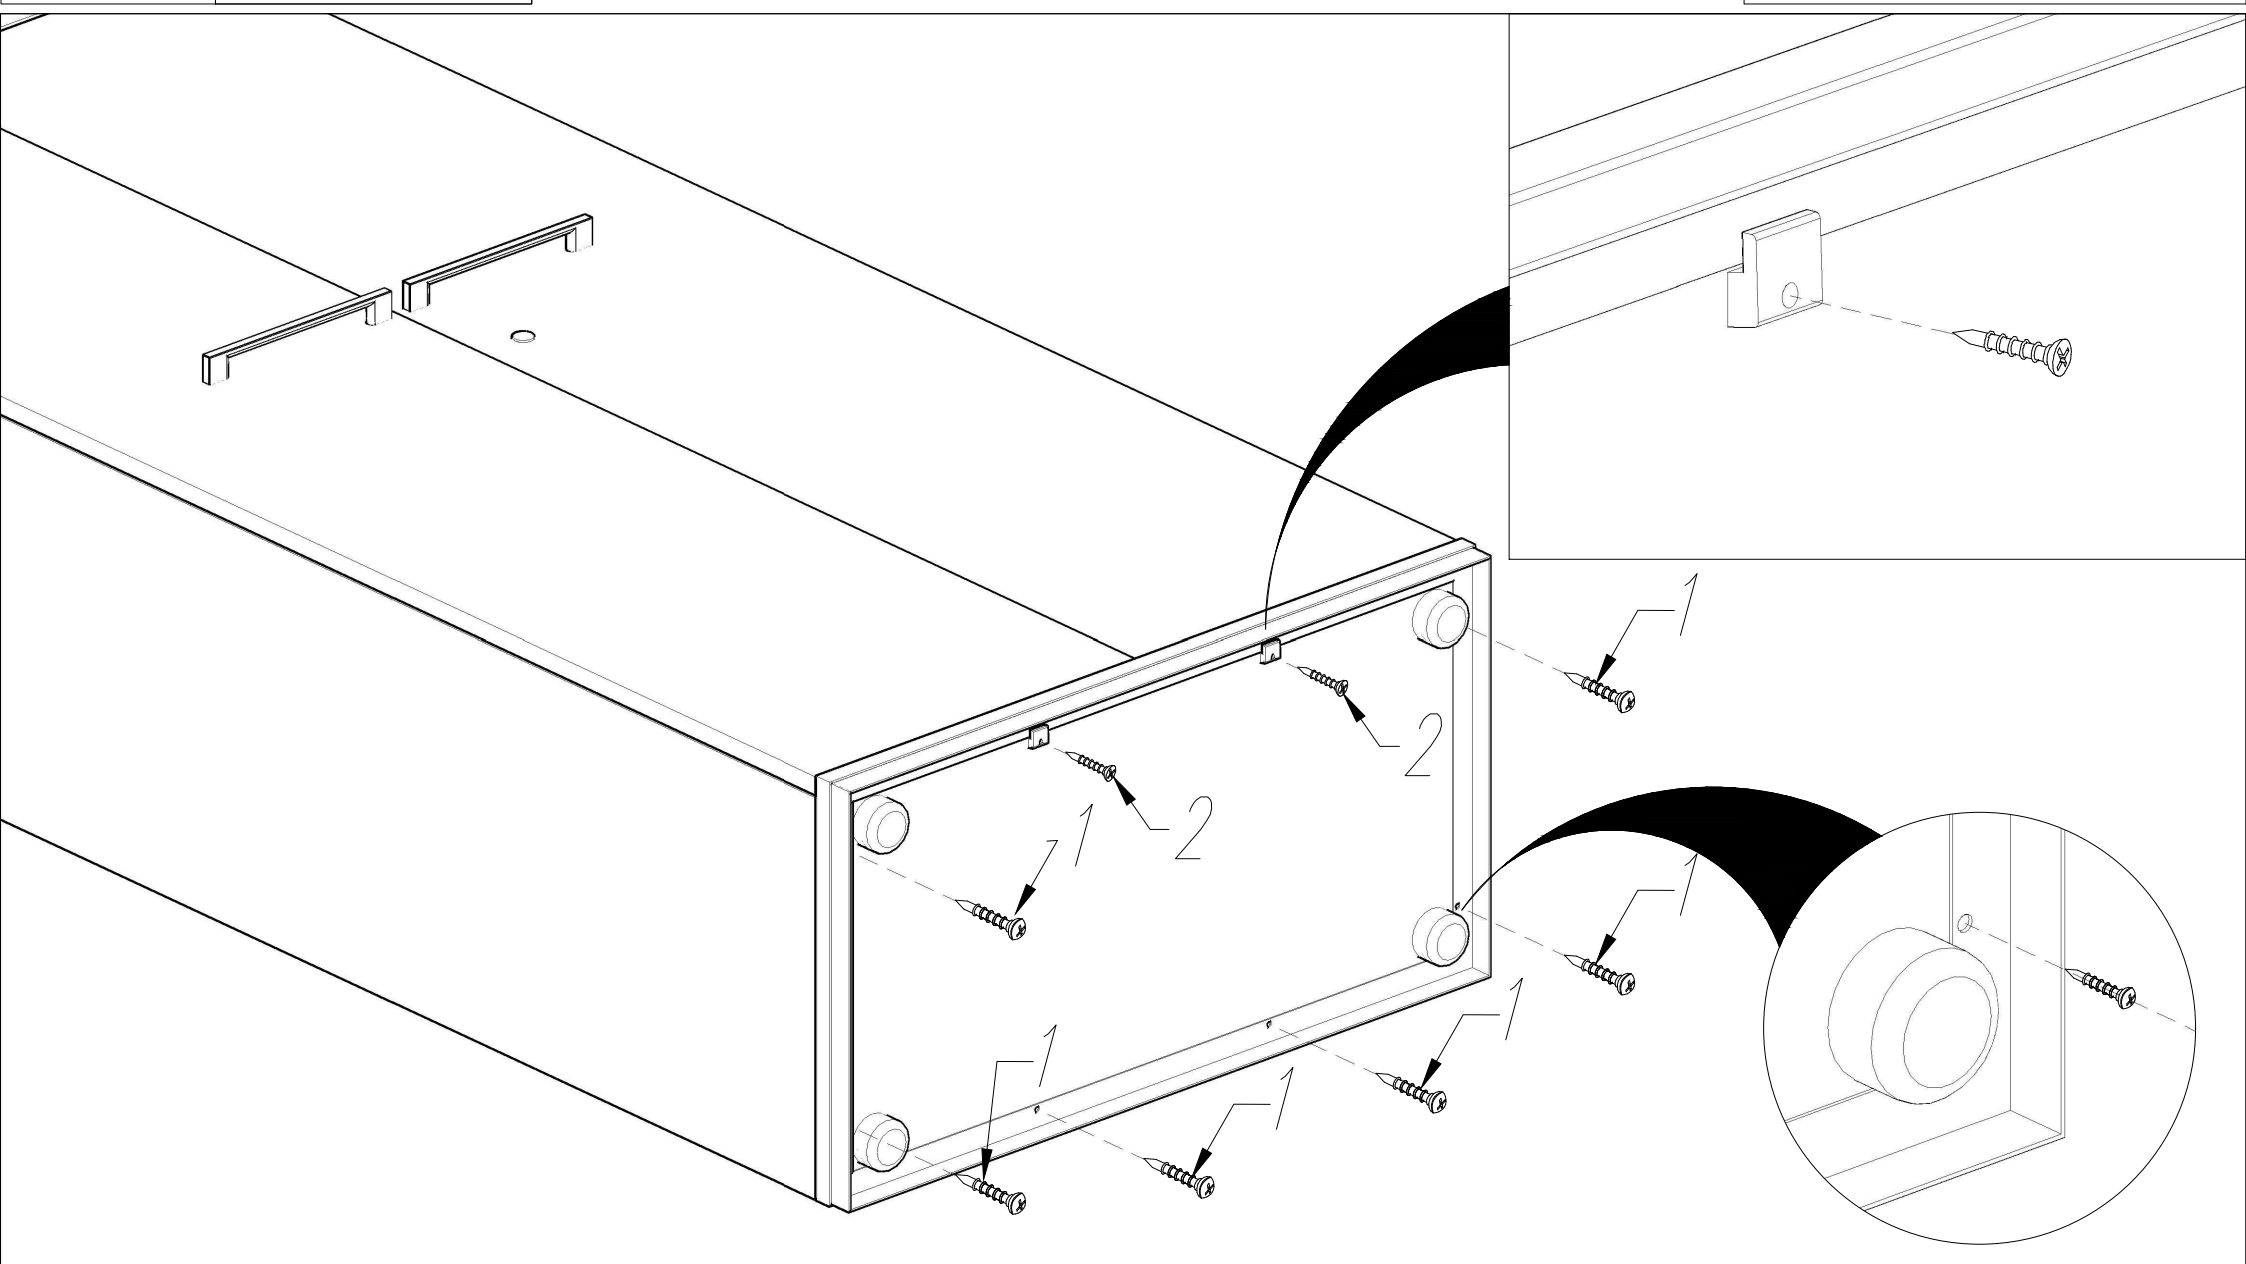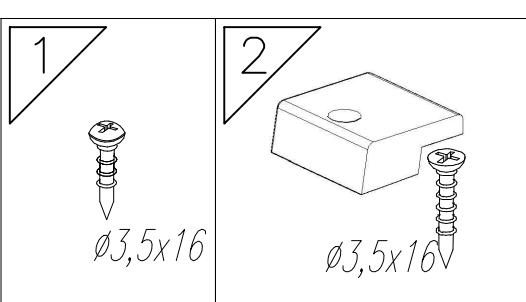

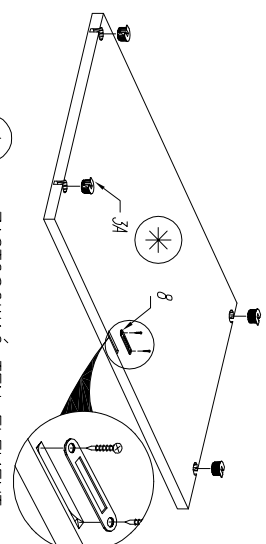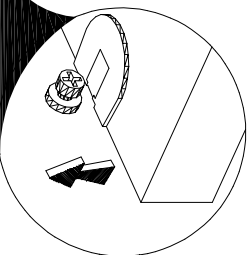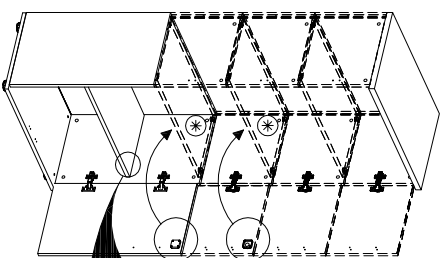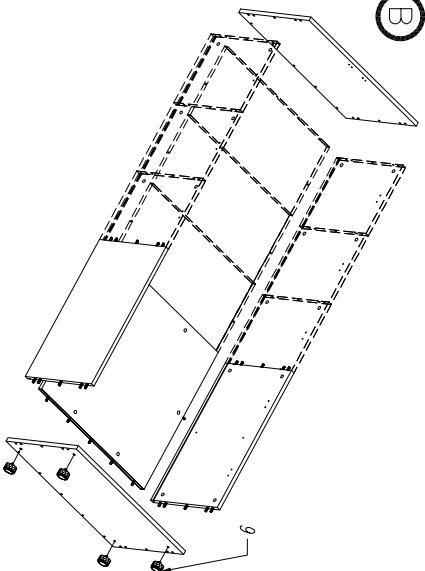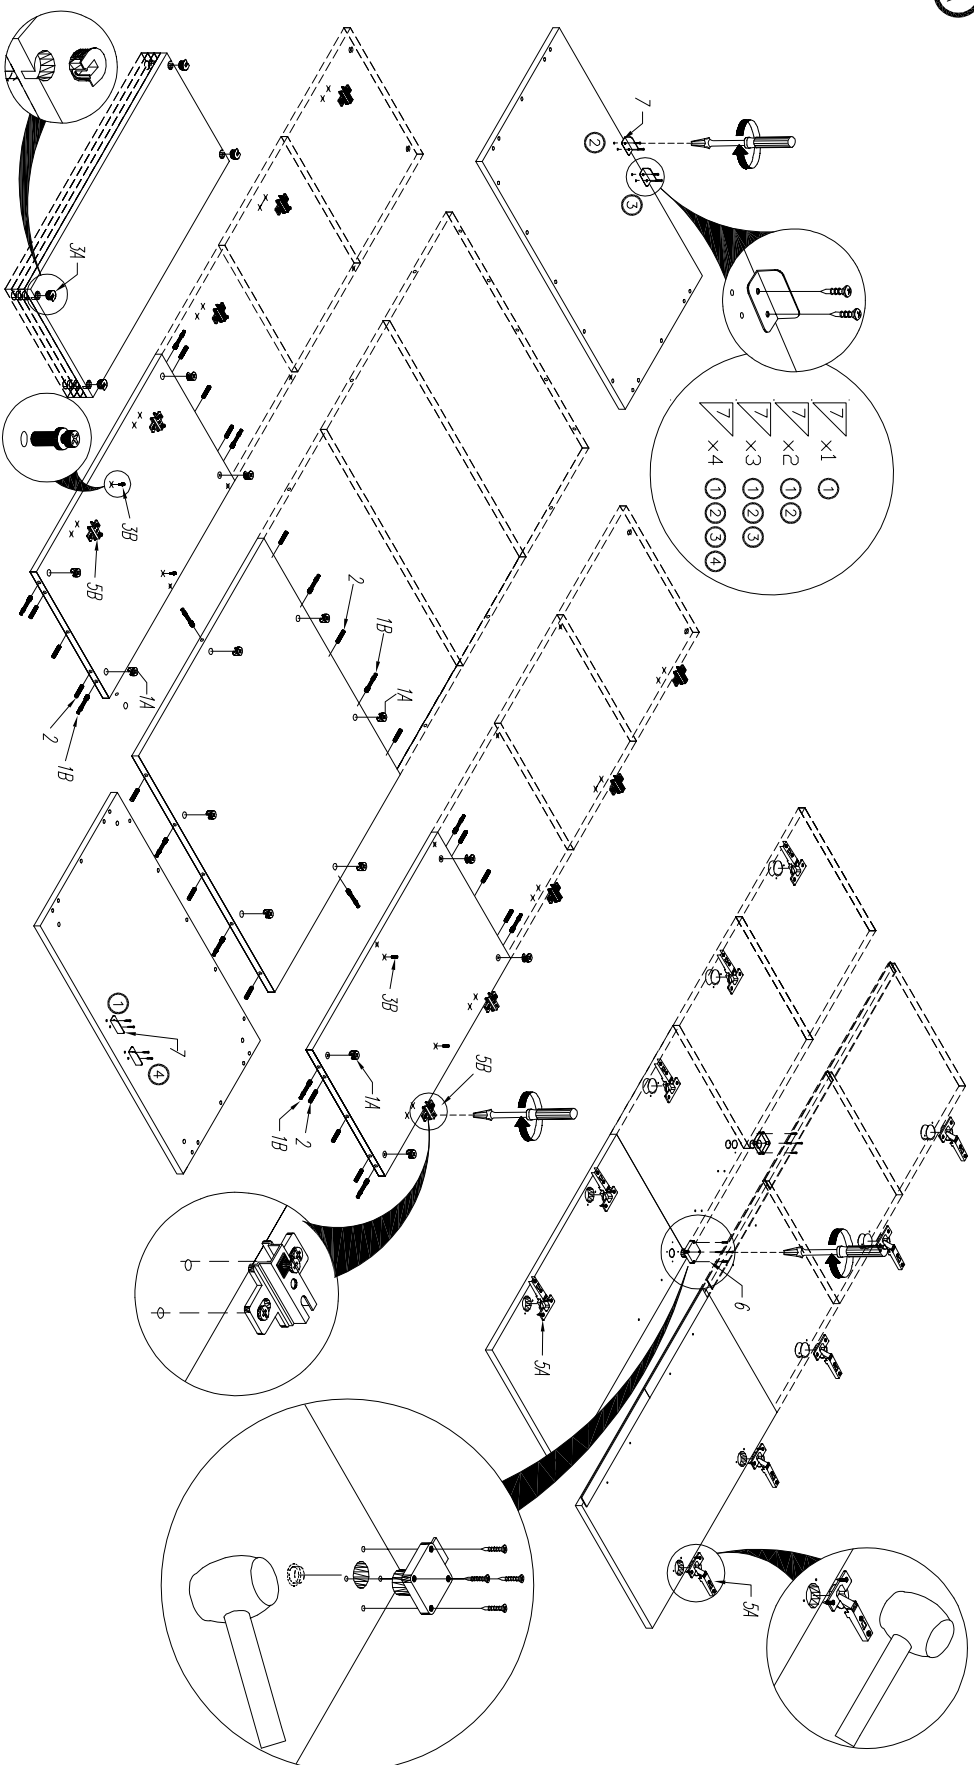


⊛ - ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOŚRODKÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

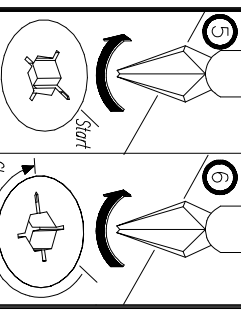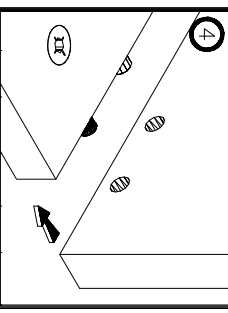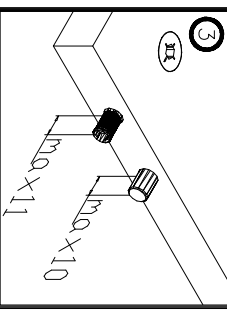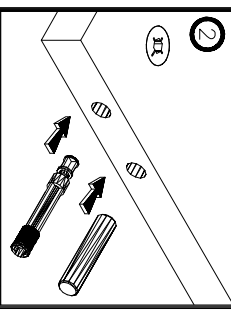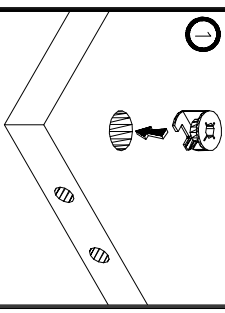


D

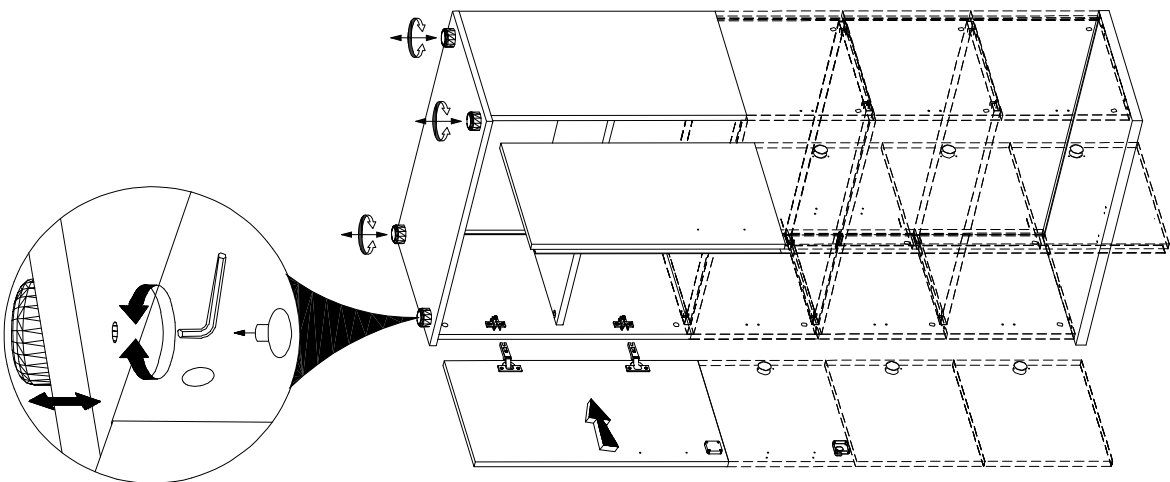

E

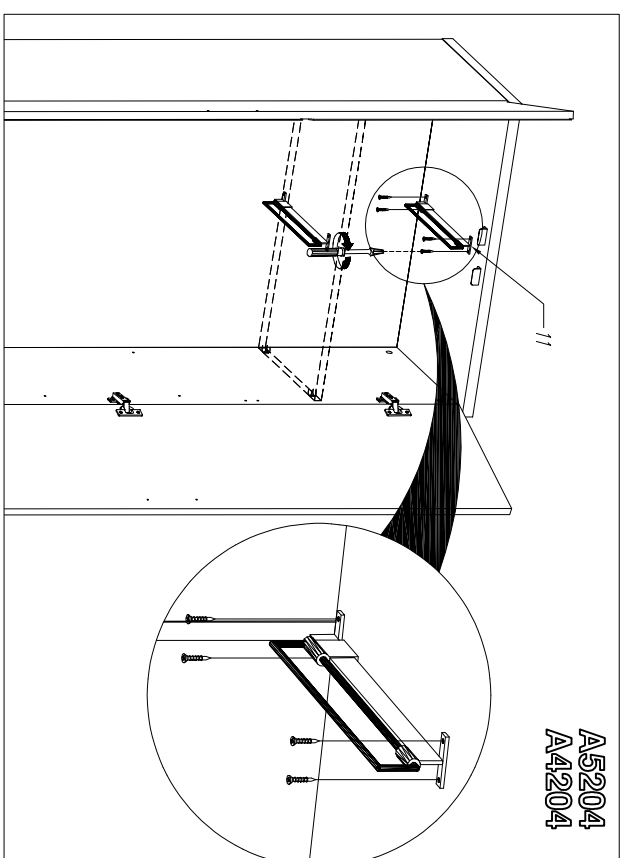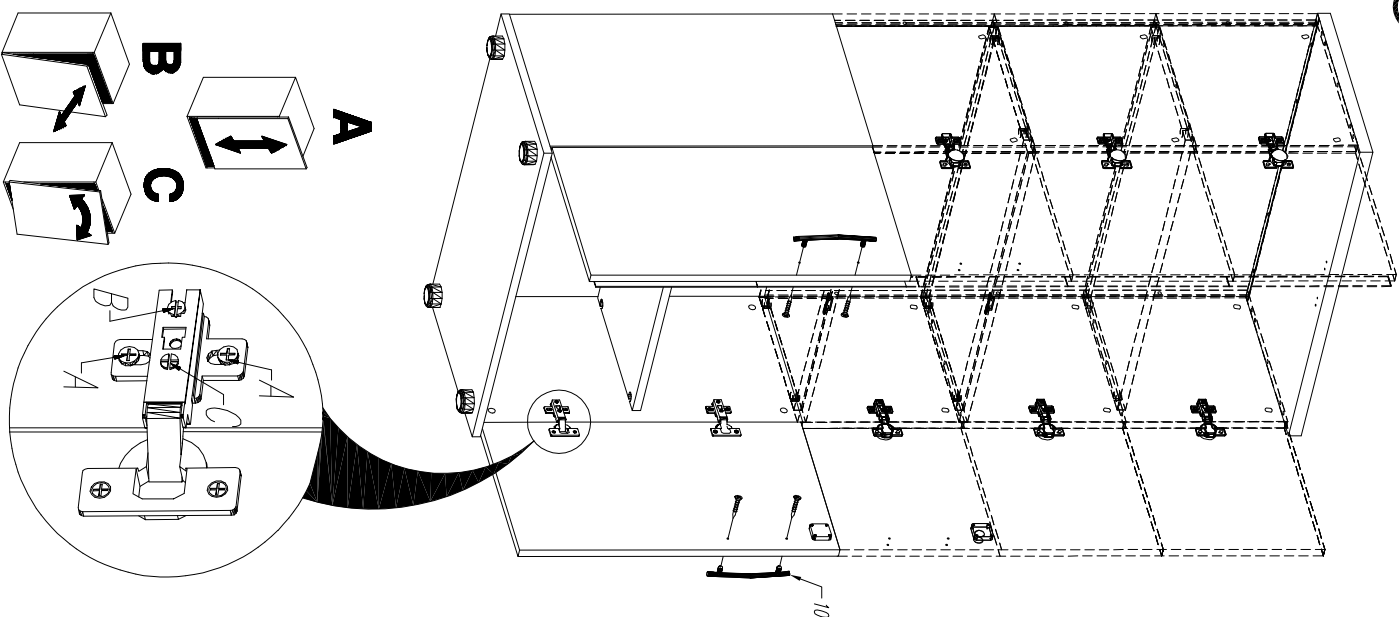

A5204
A4204

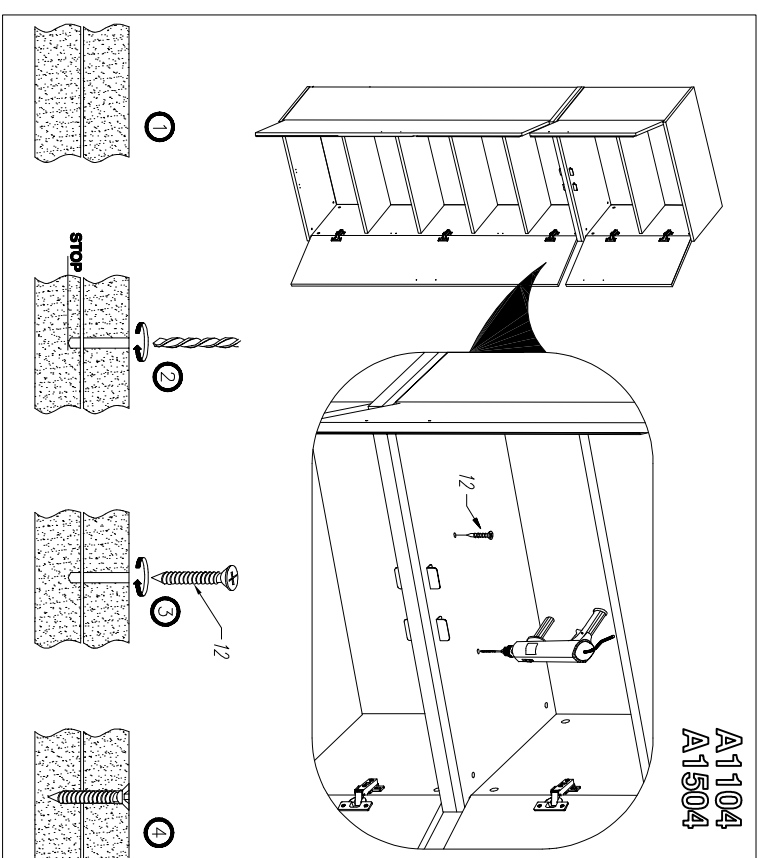

A1104
A1504

