

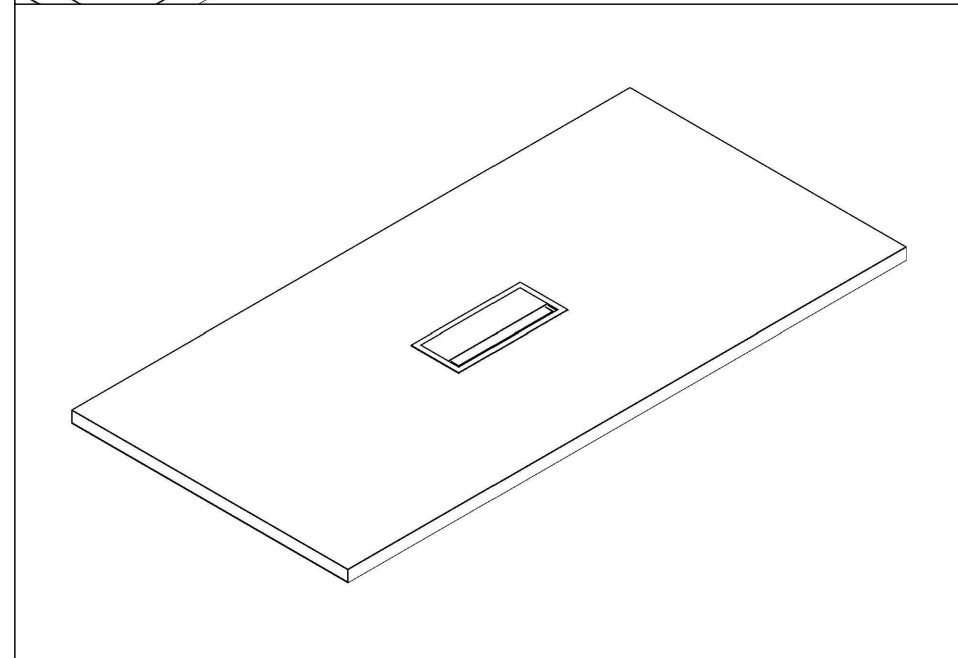


1

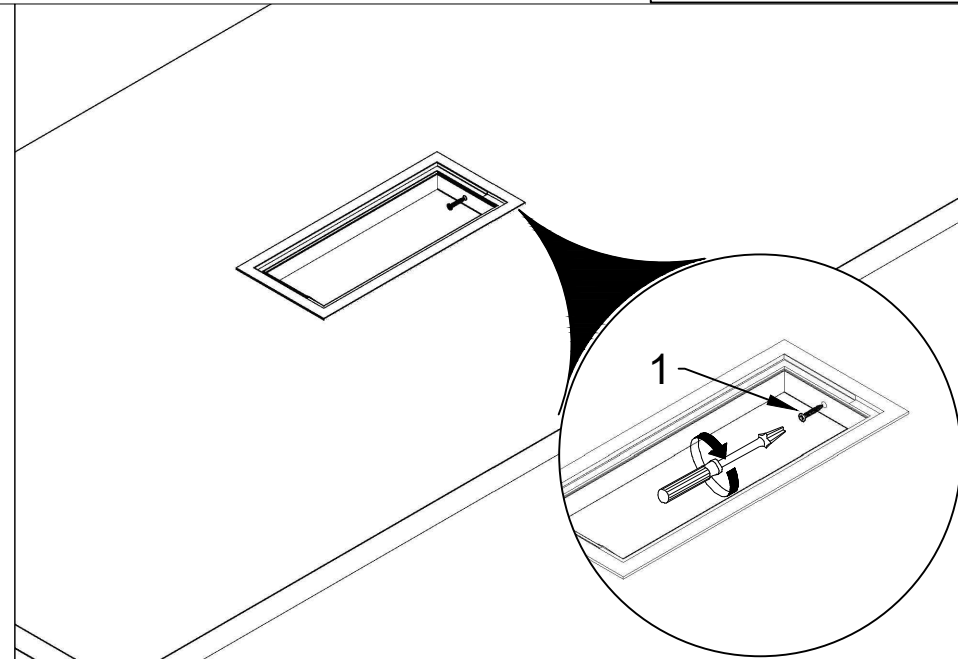







M05

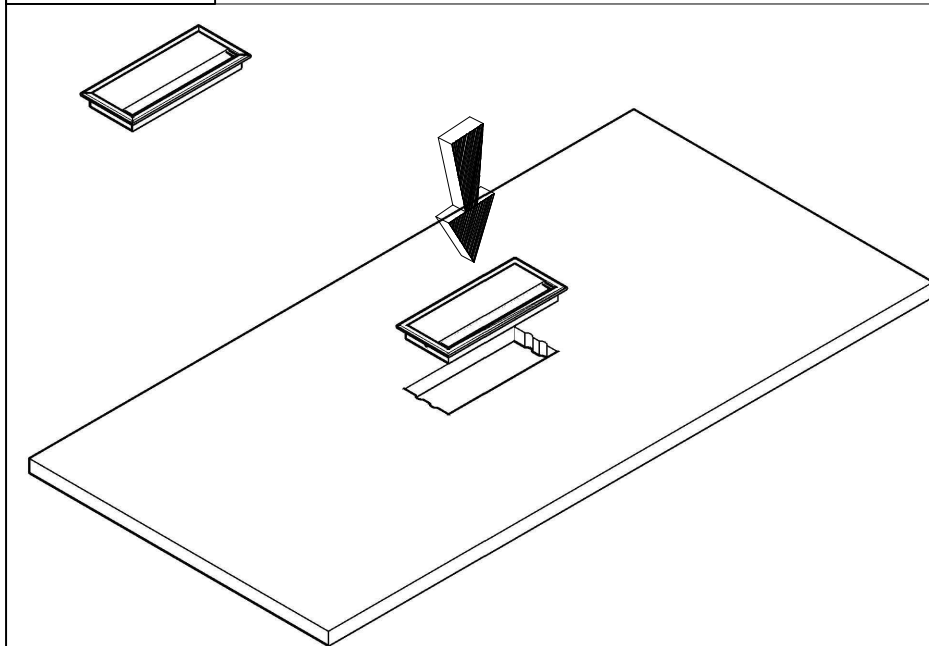

1









M04

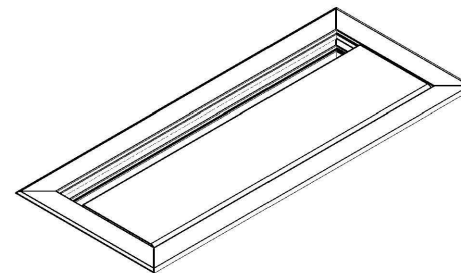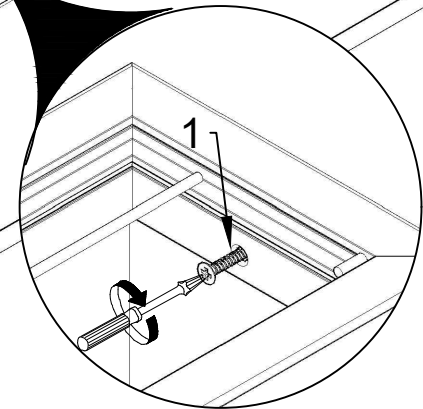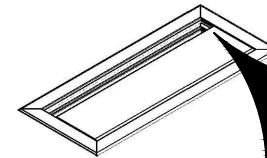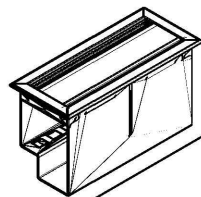

1



M04

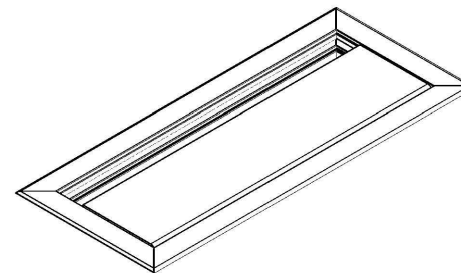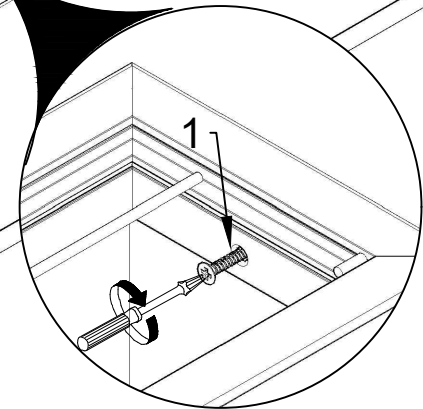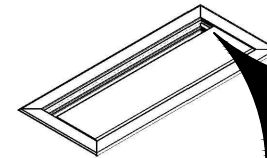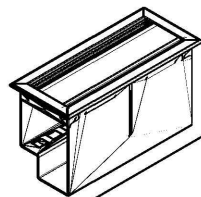


1
Ø5x20




OGI BENCH


A

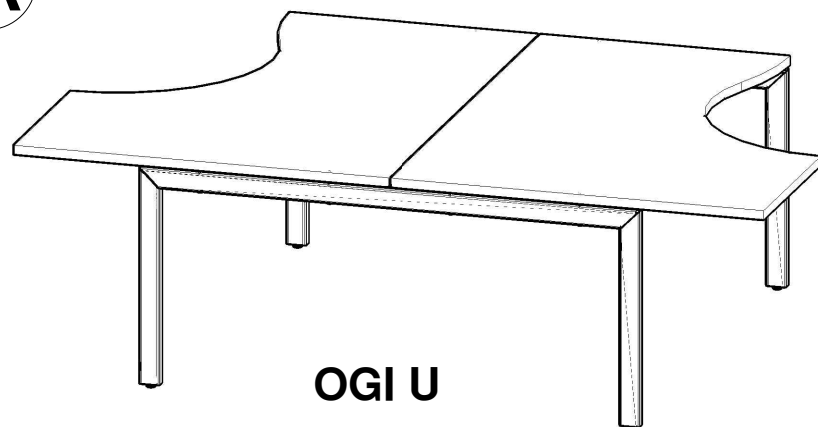


OGI U

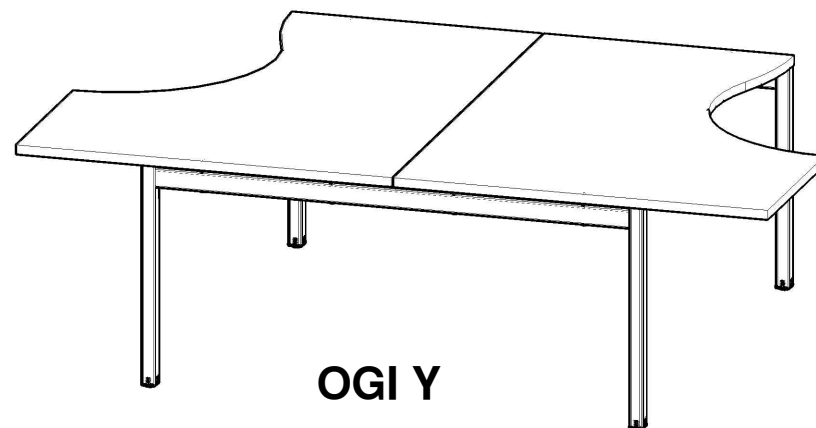


OGI Y

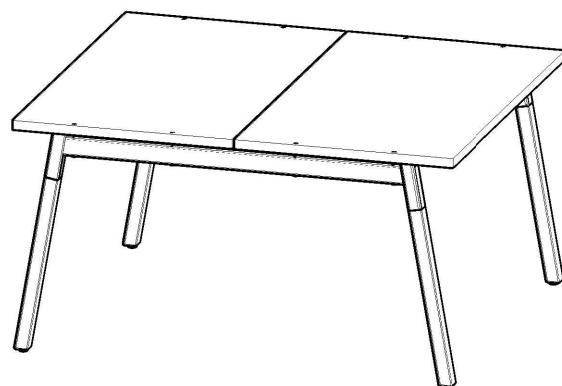

OGI W



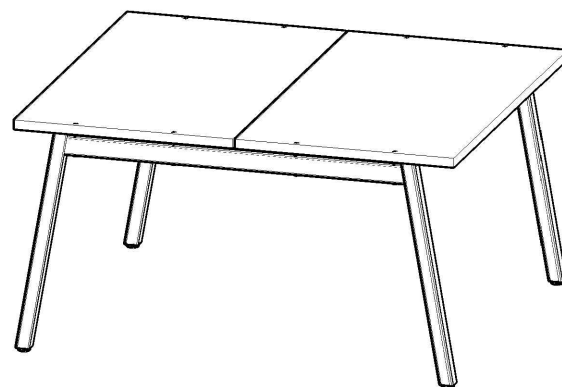


OGI M



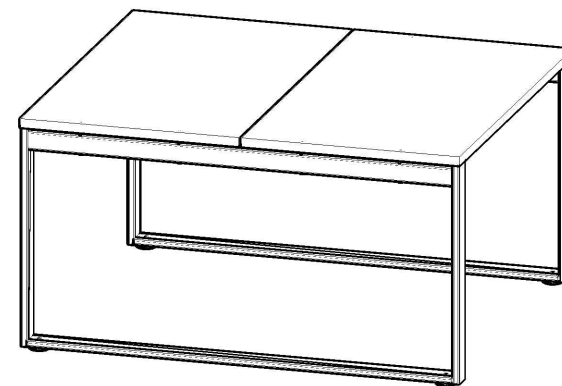


OGI Q


B

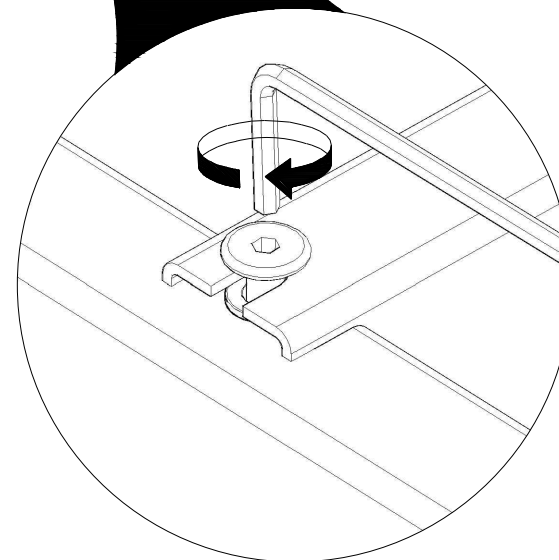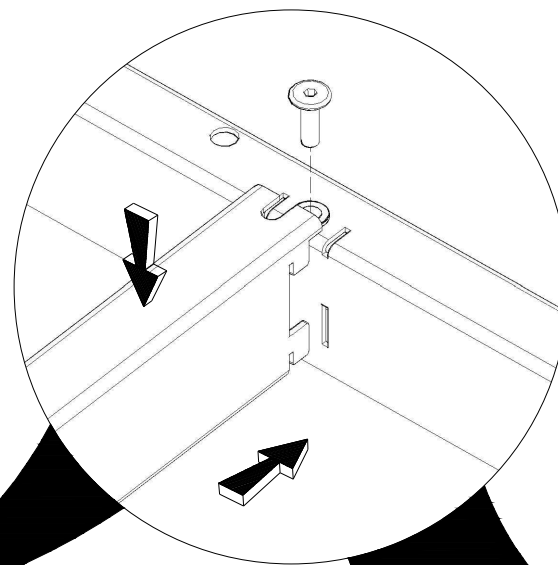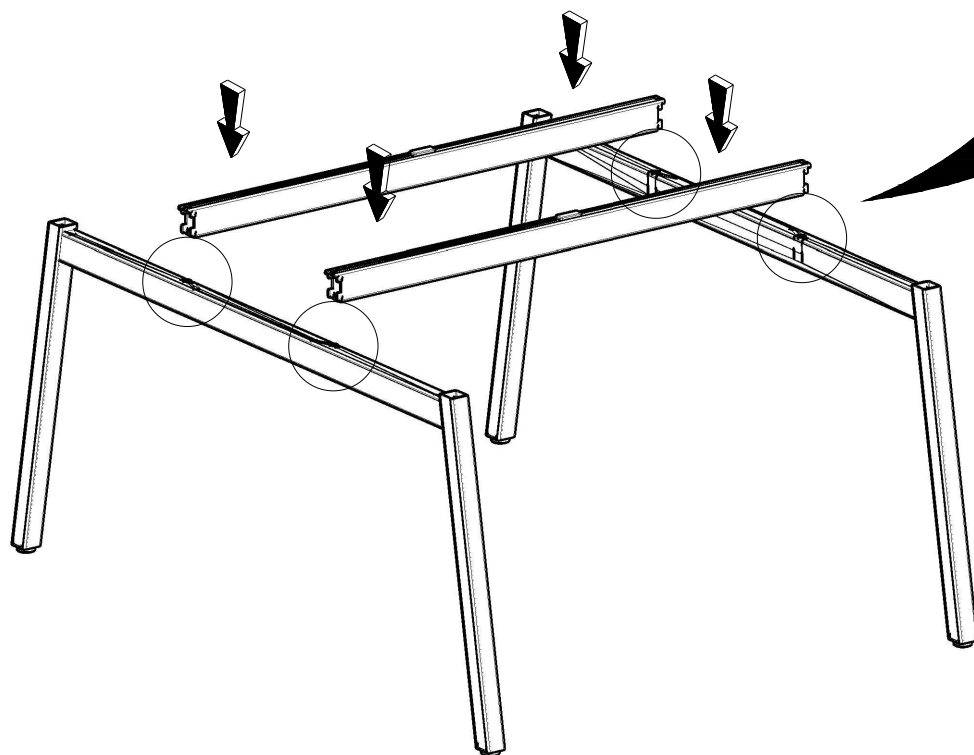




C

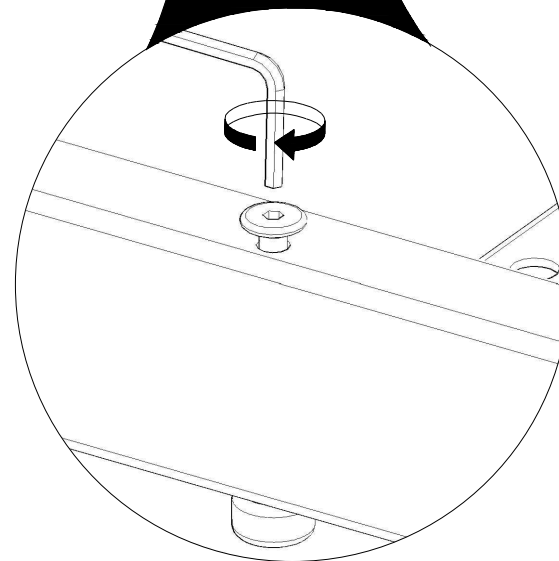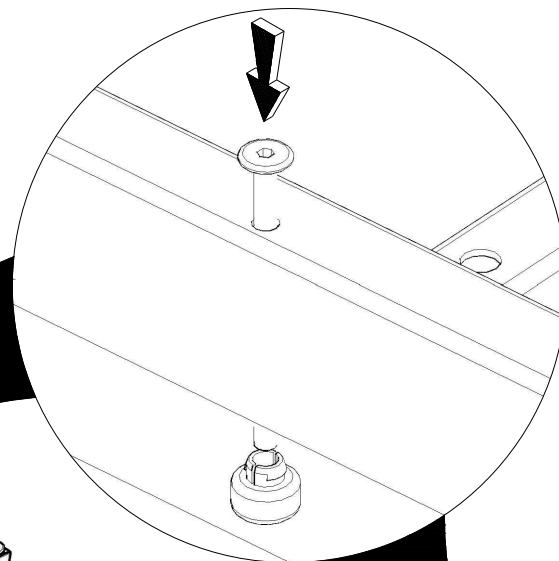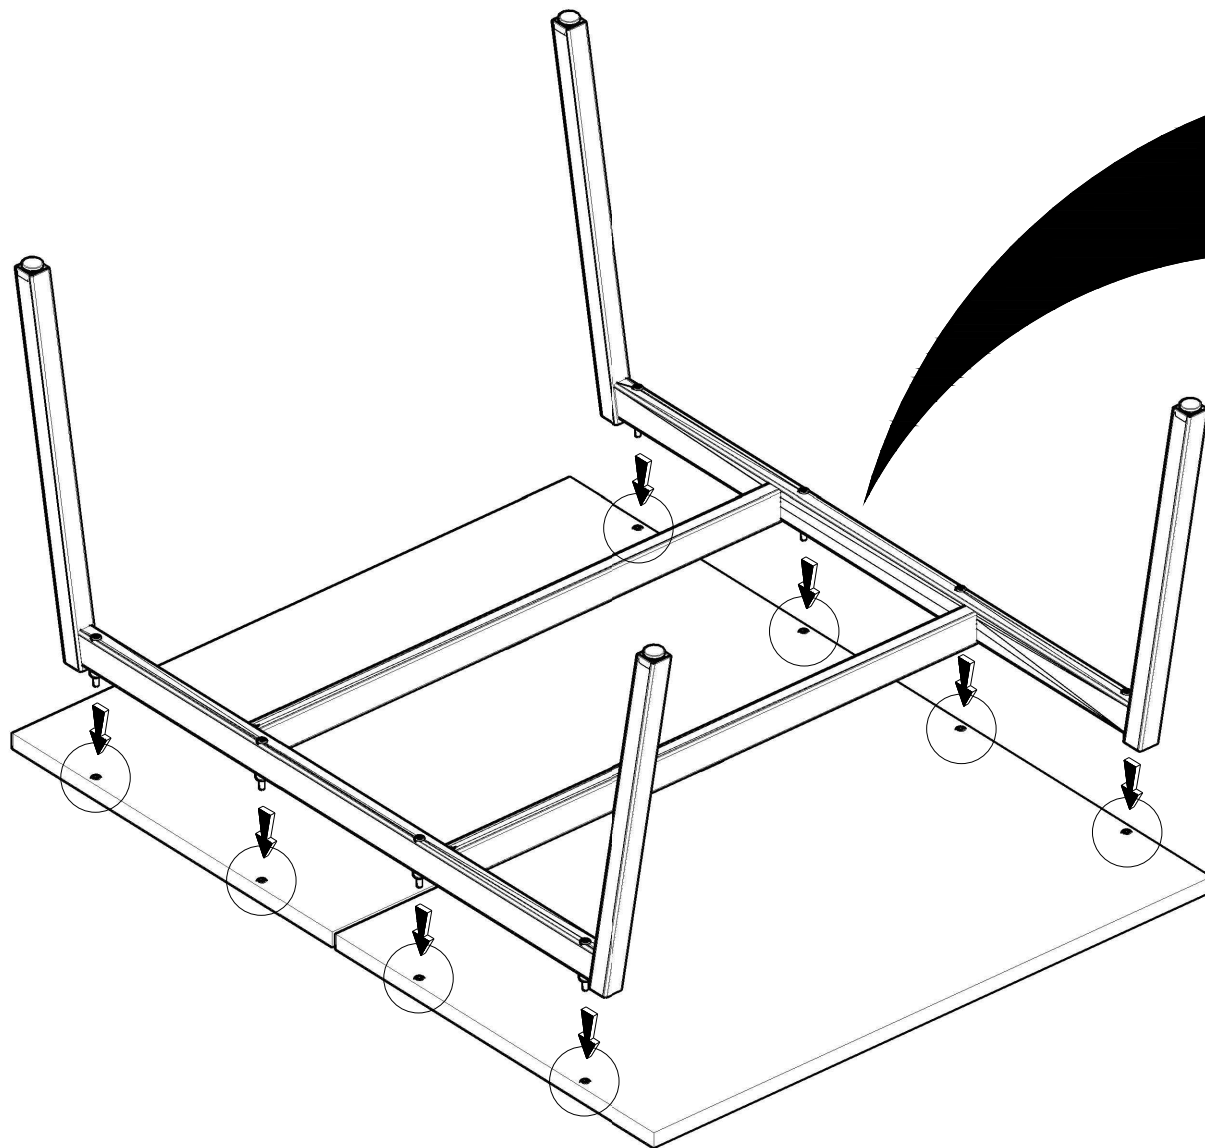

D

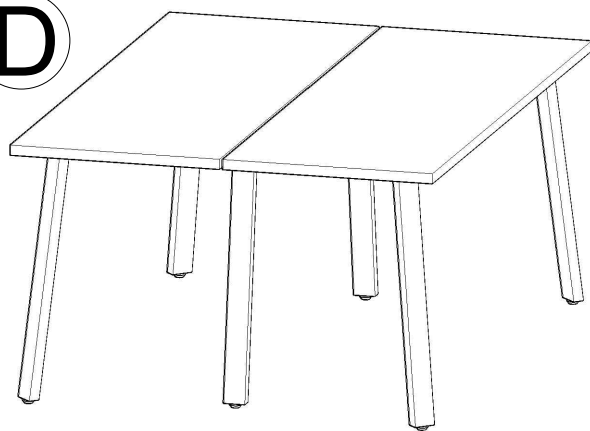

OGI A

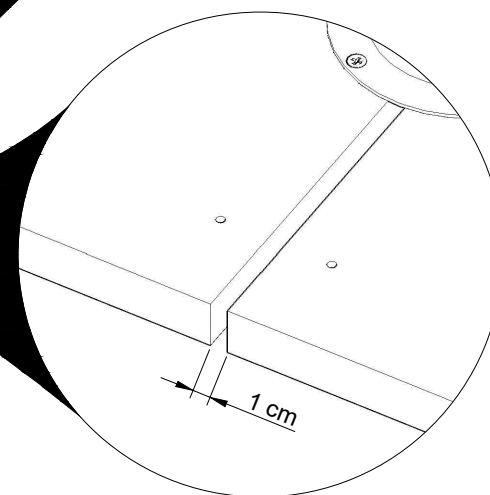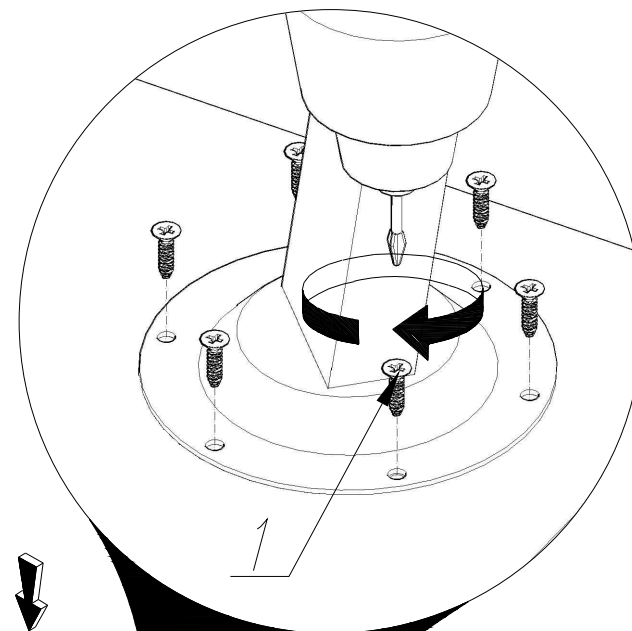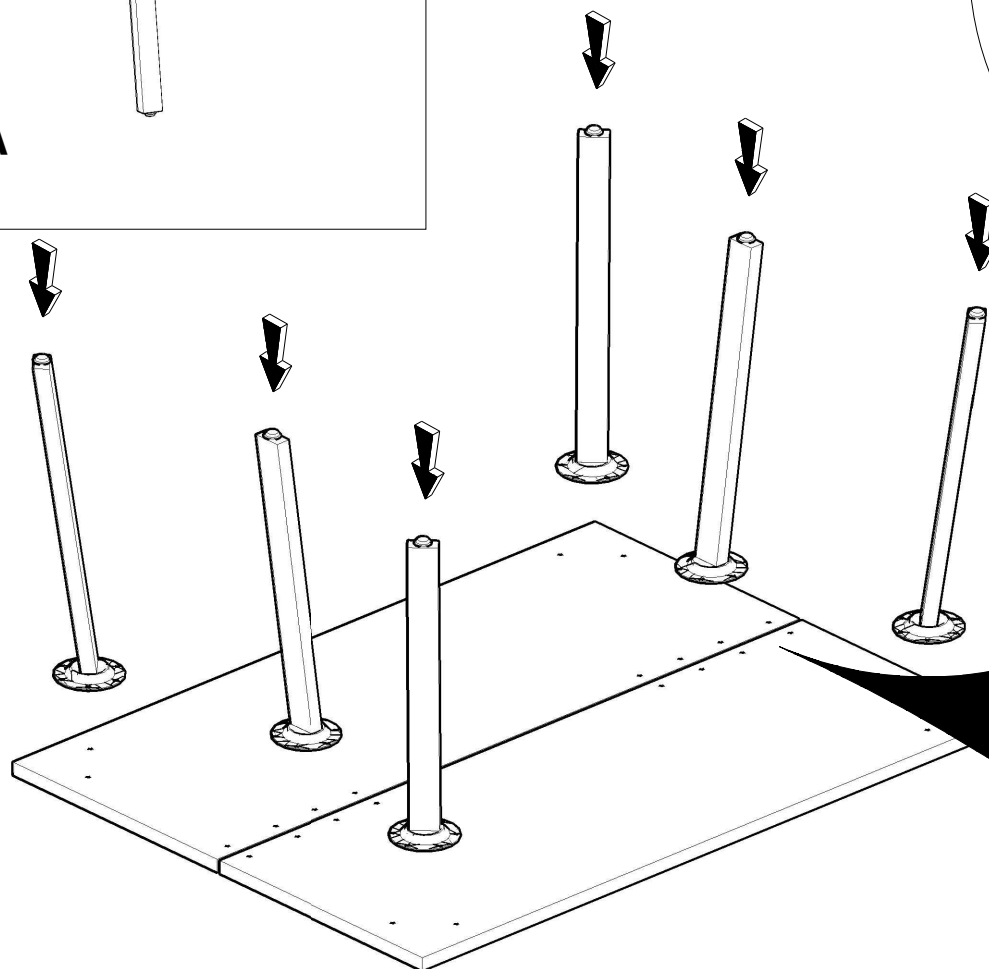




1
Ø5x20




OGI ATTACHMENT

A


OGI M
OGI W
OGI Q
OGI U
OGI Y

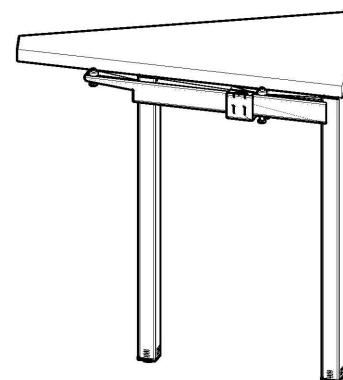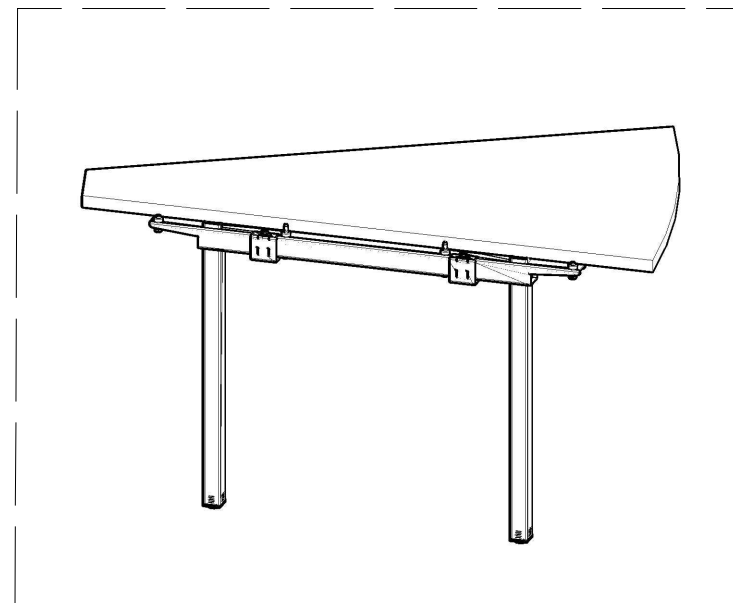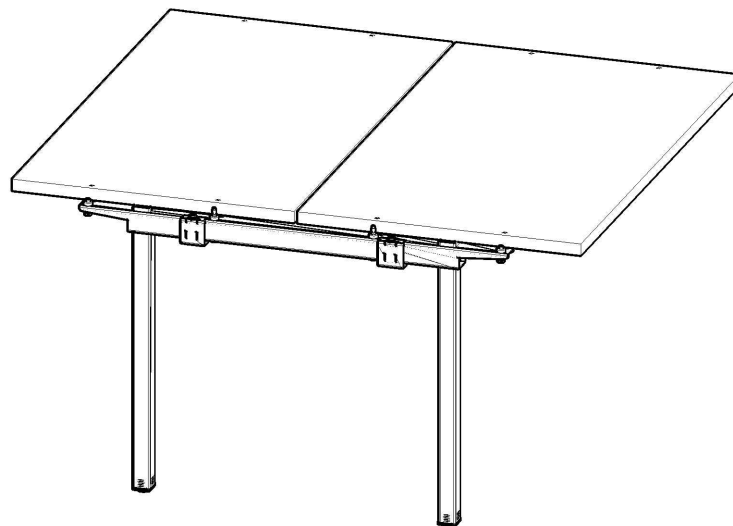




B

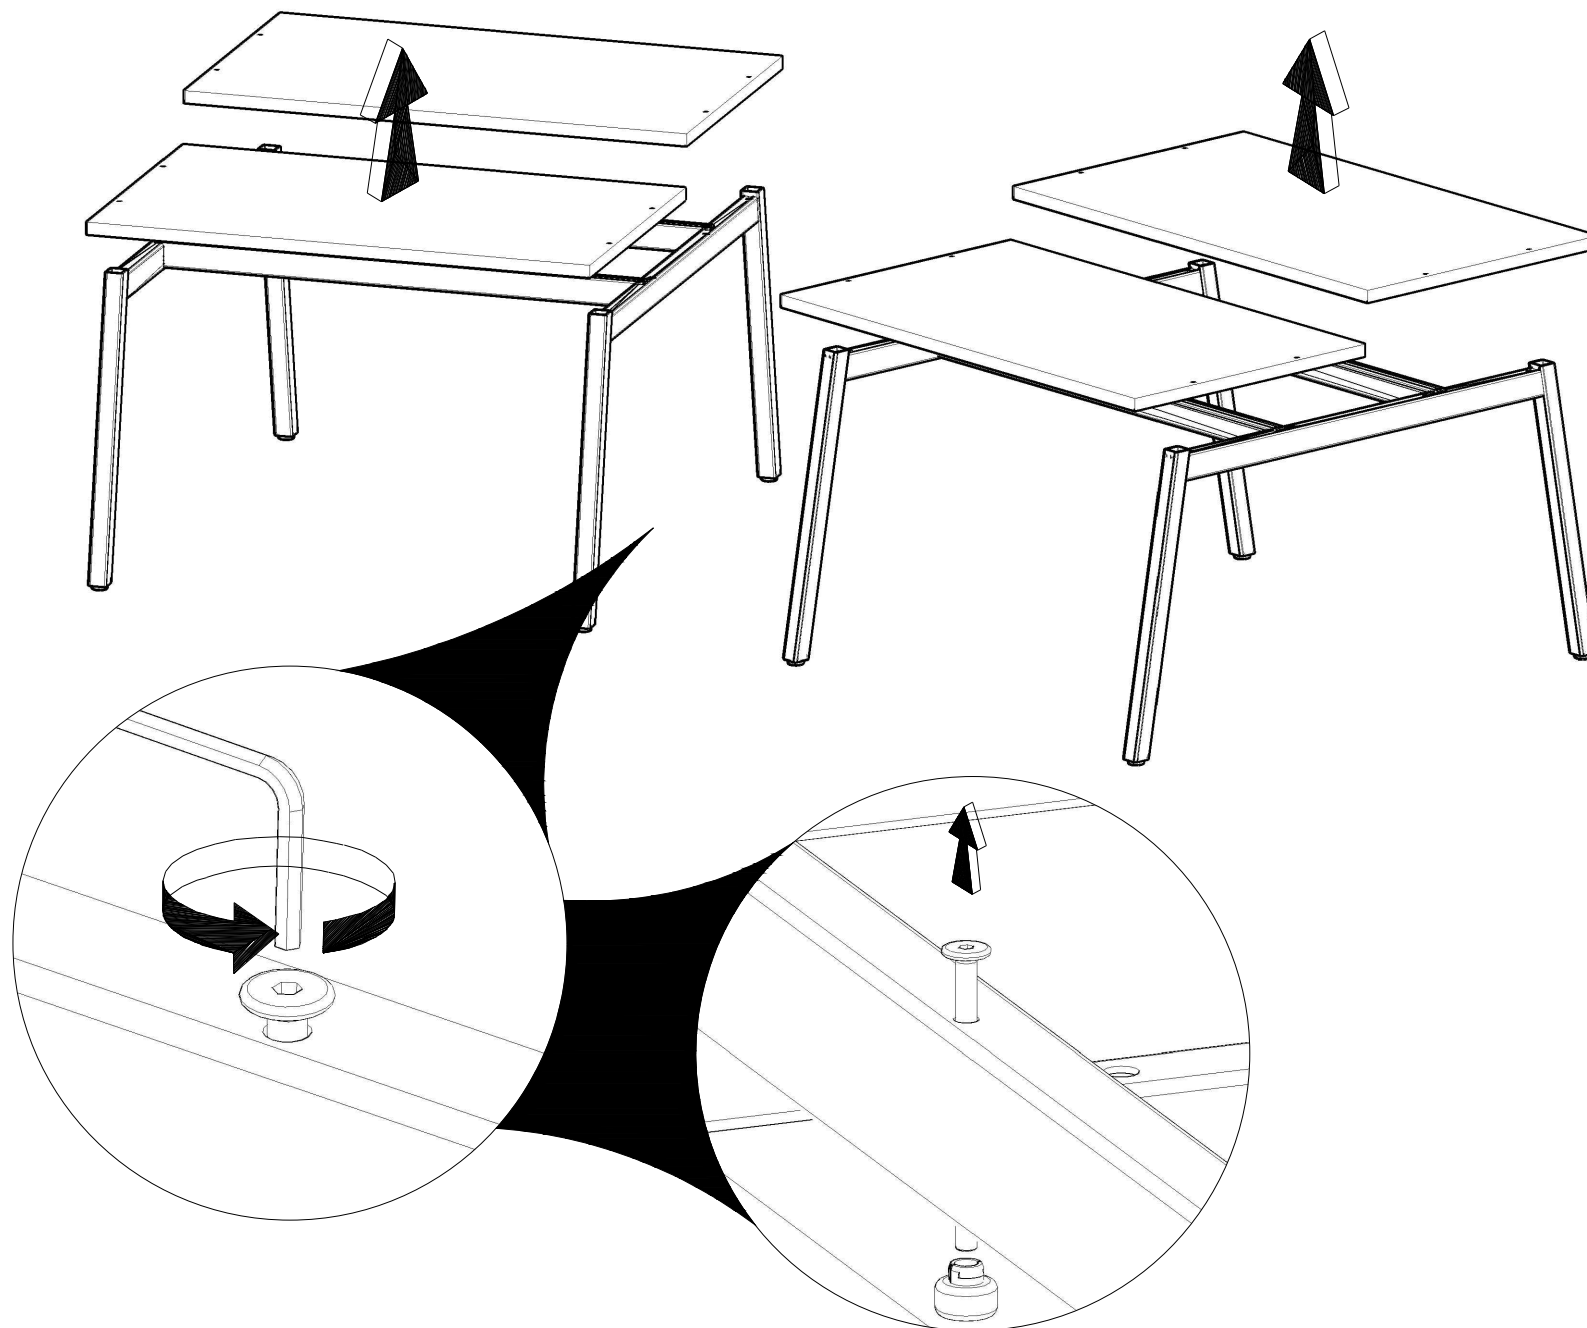


C

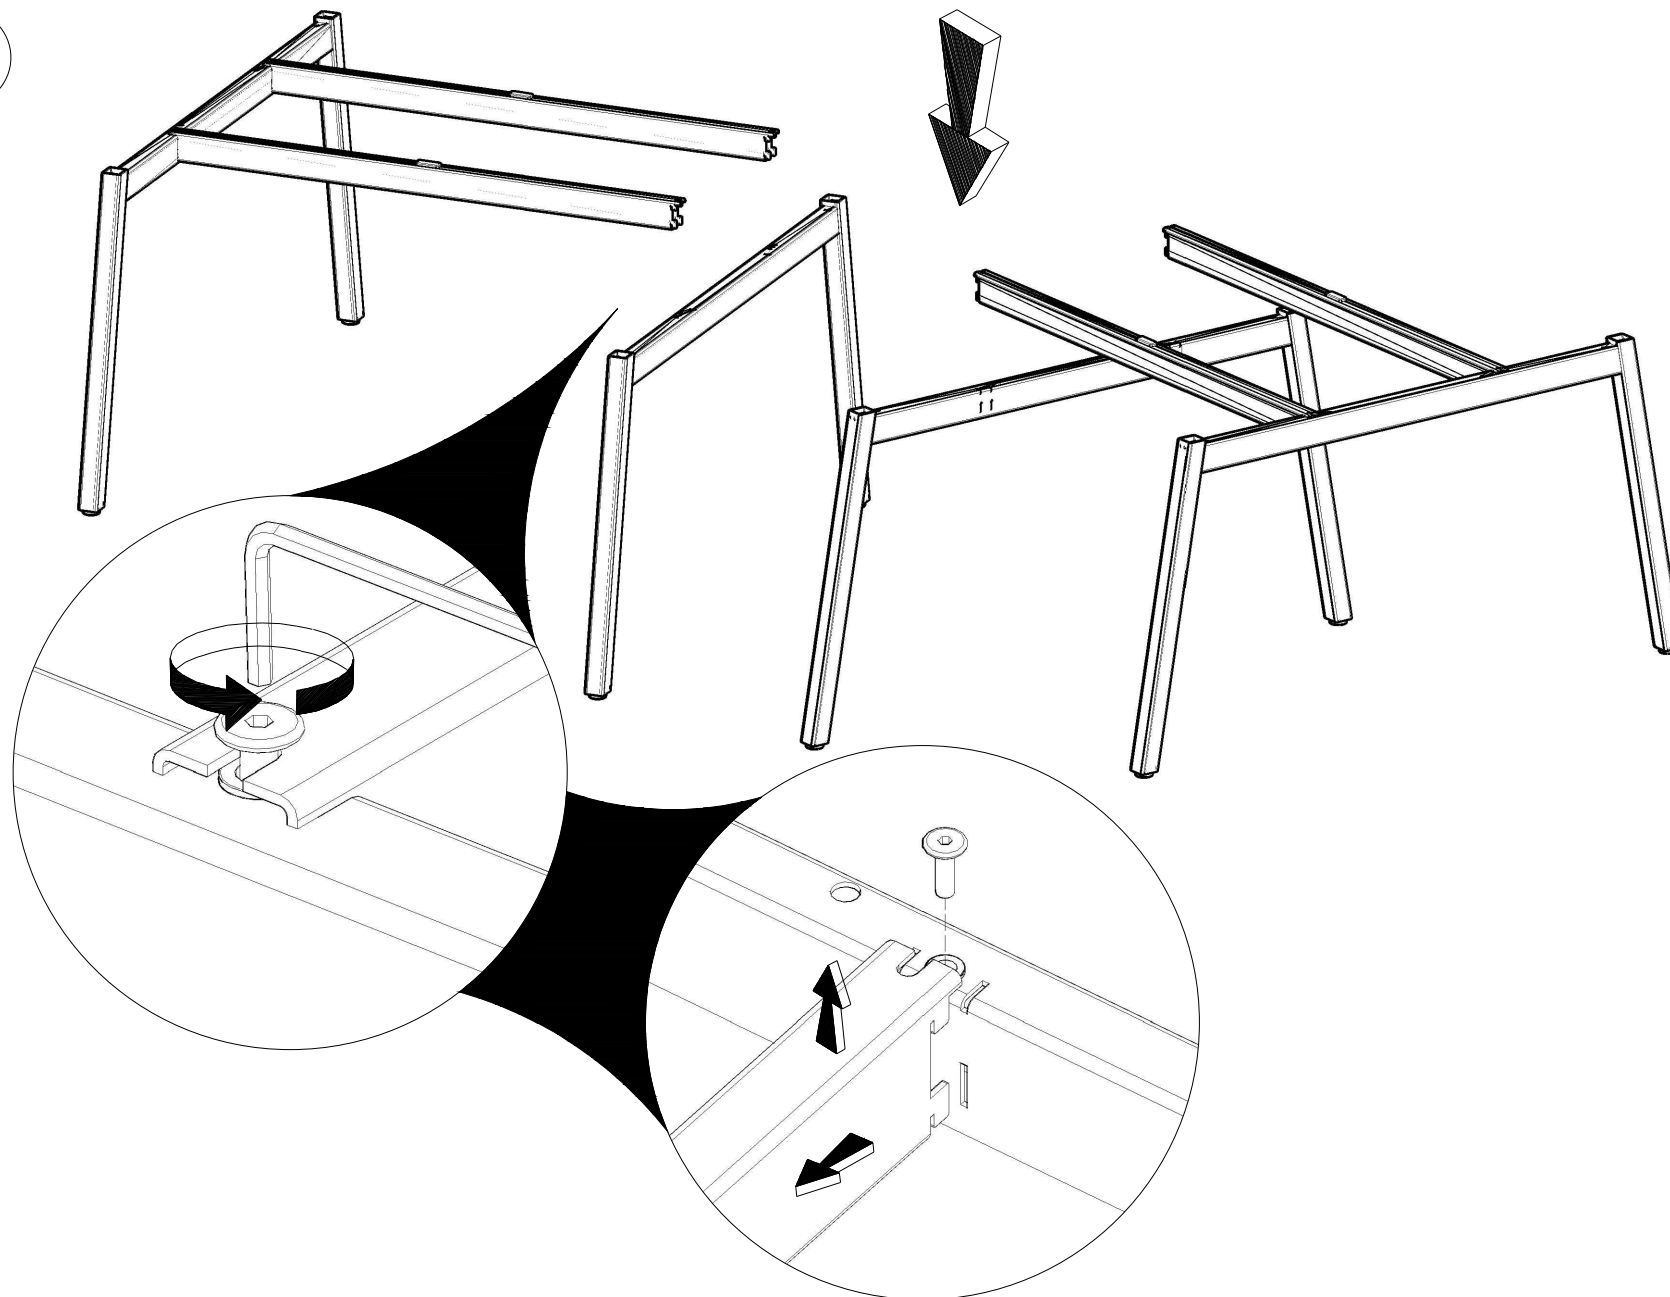


D

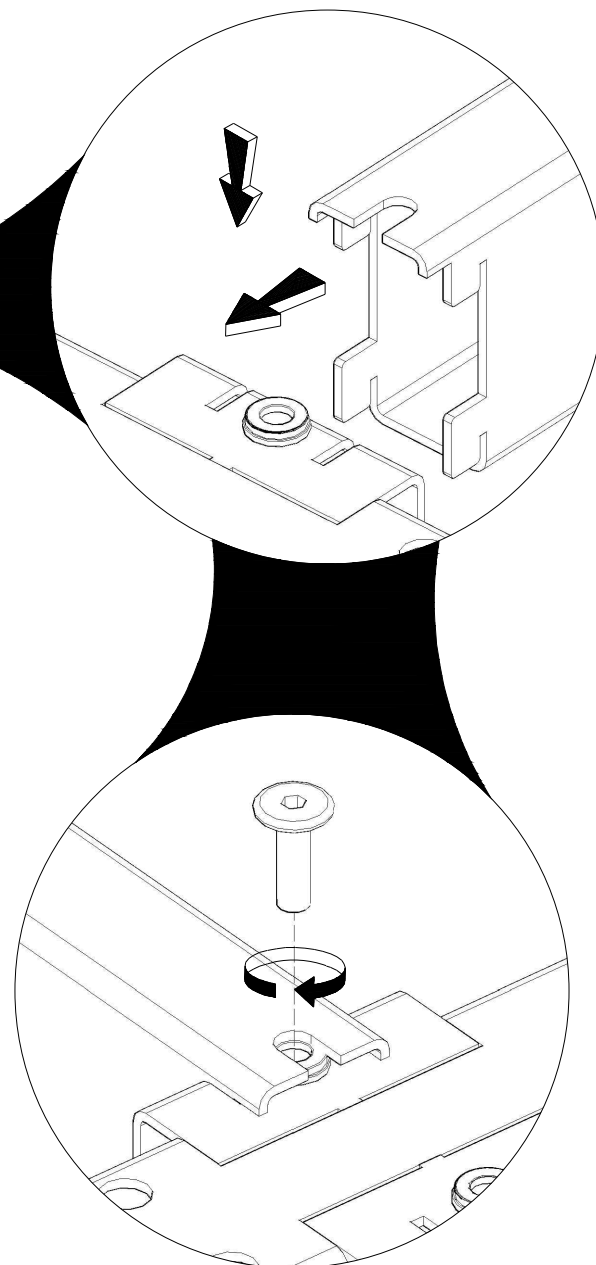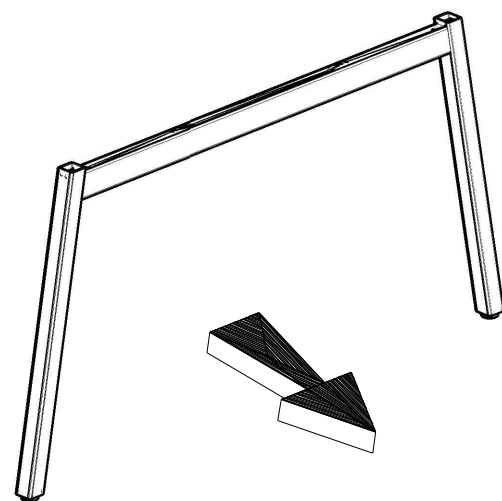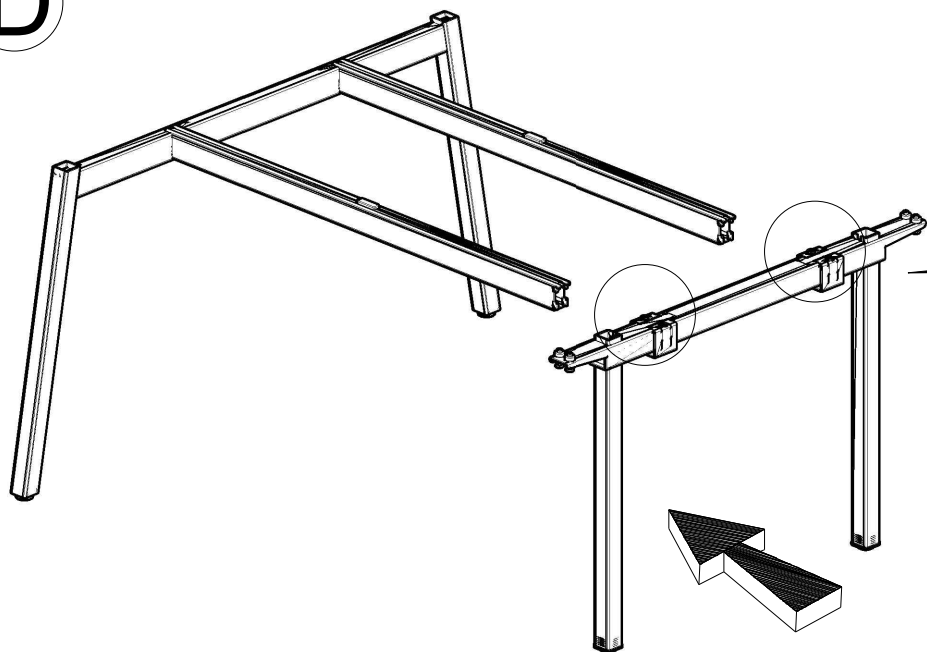



E

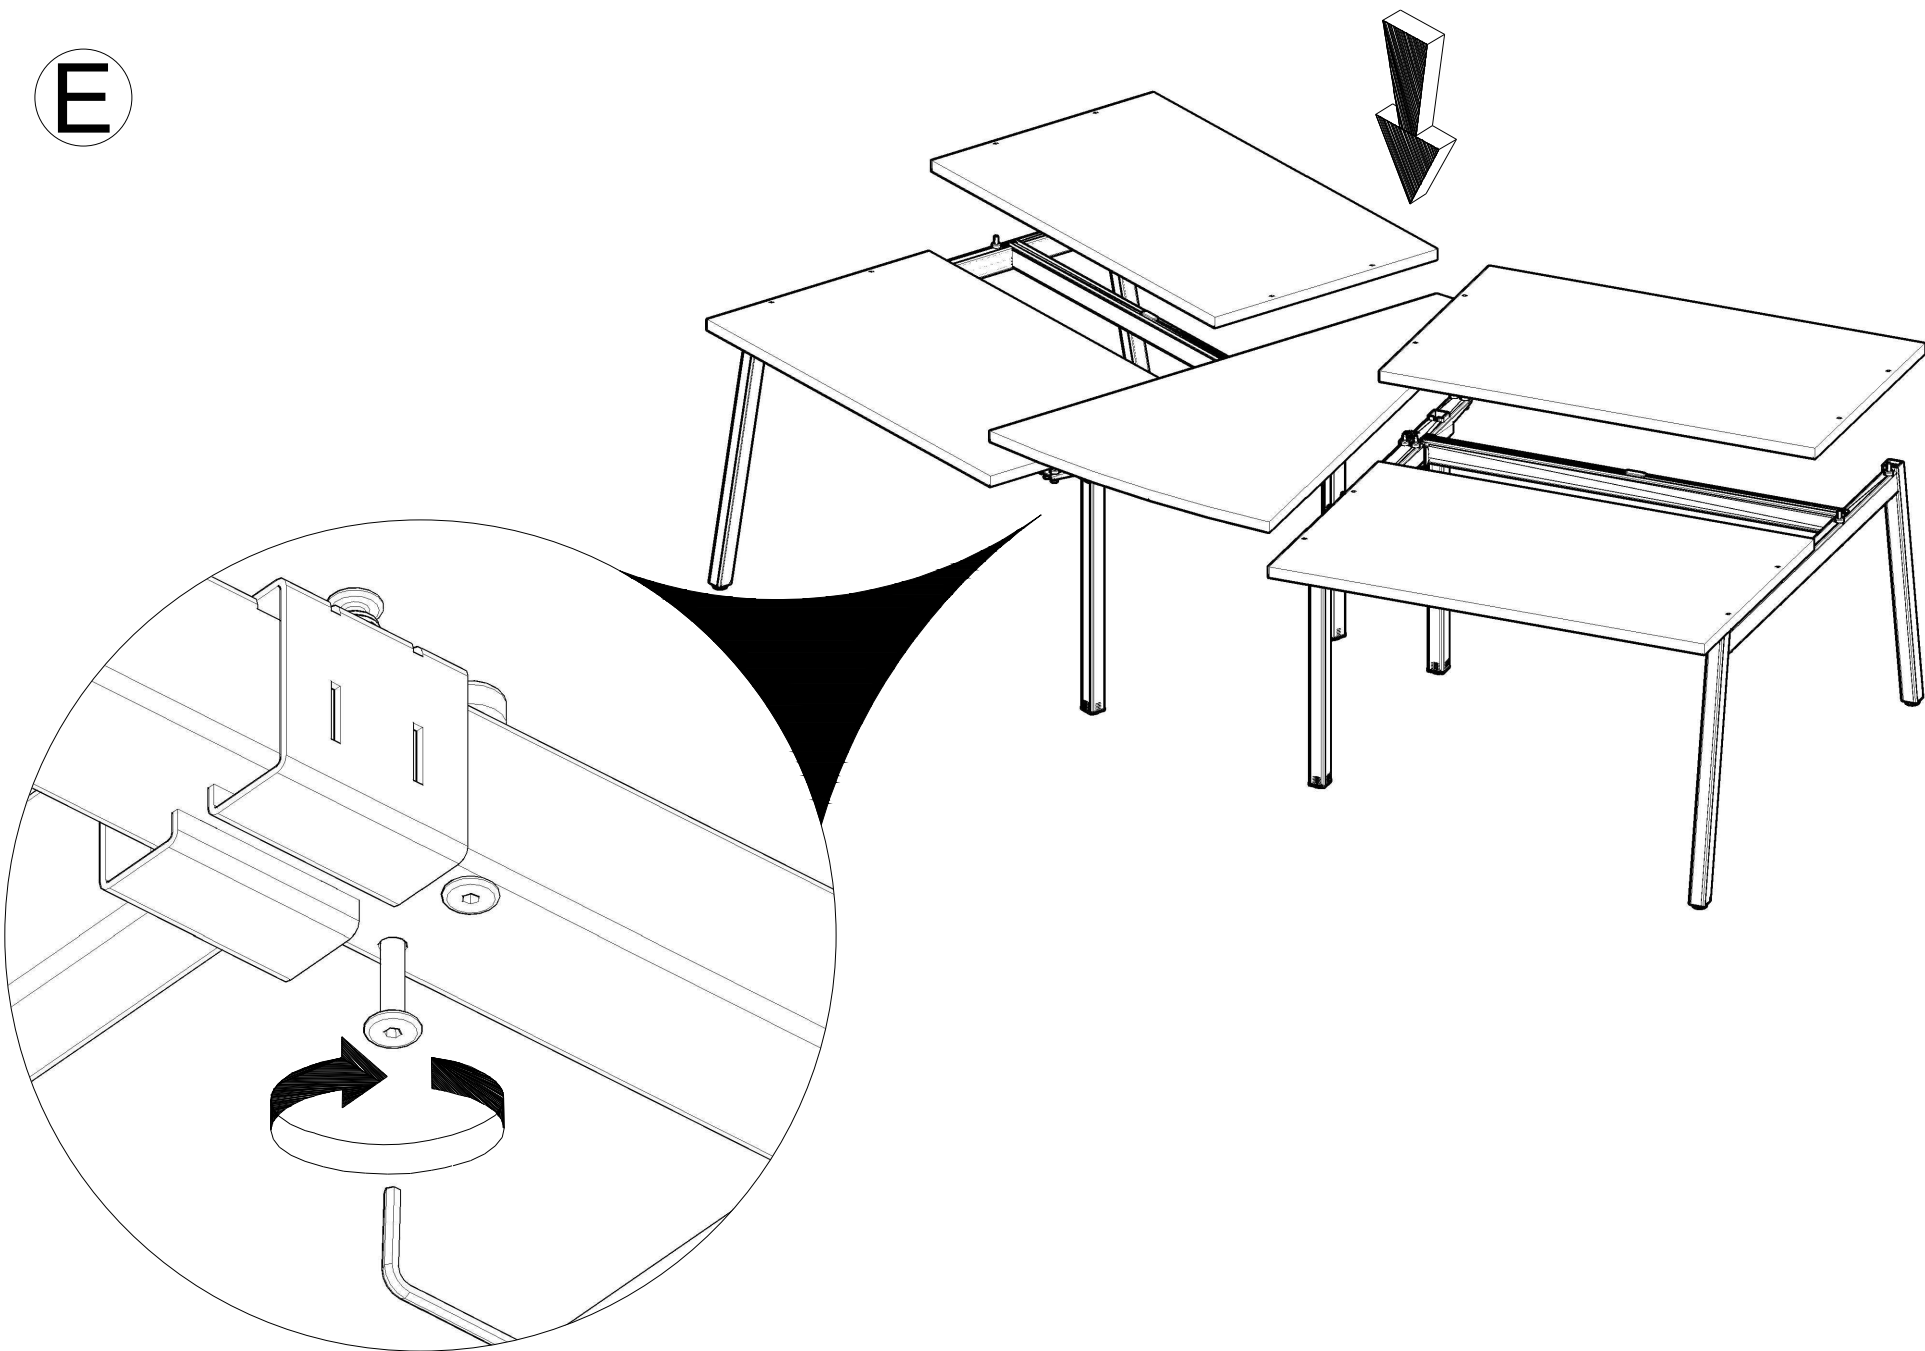

F

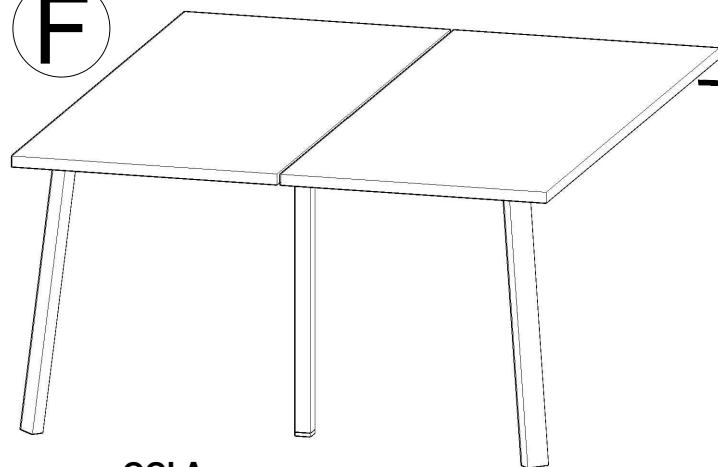

OGI A

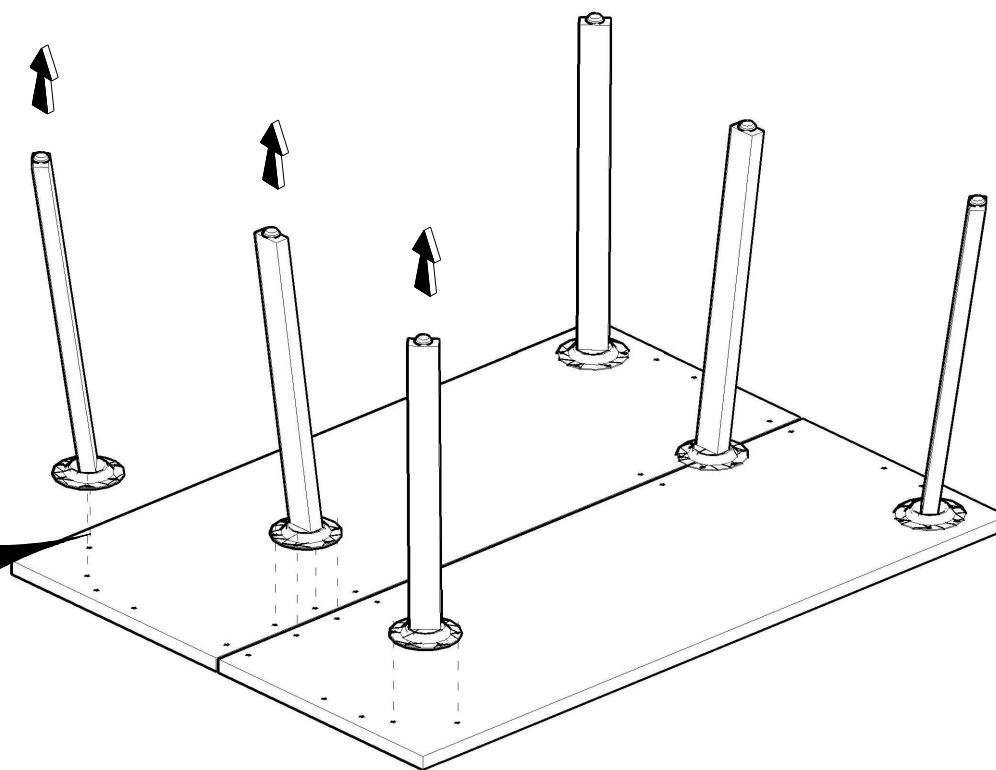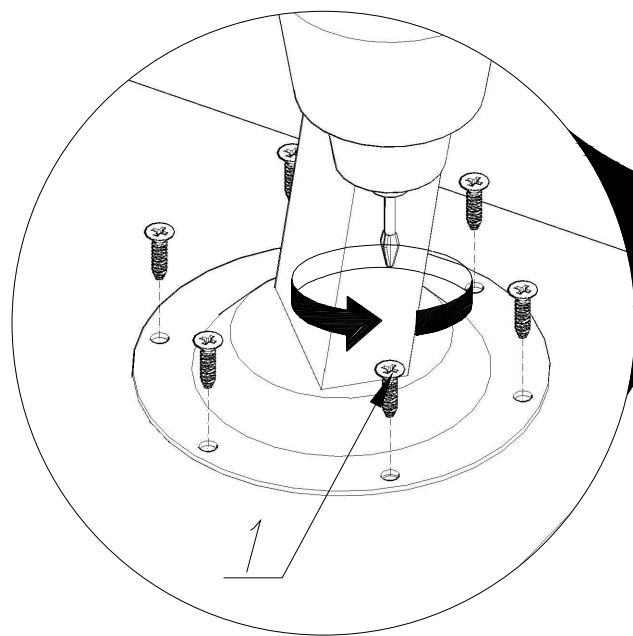

G

