

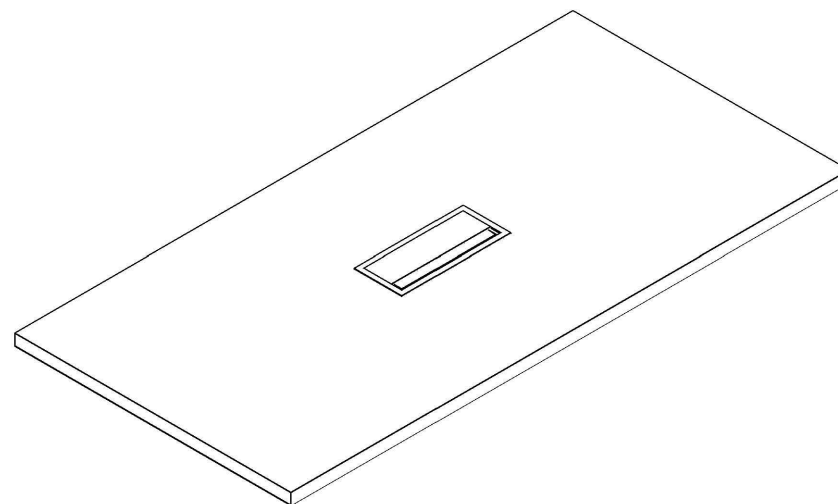



1

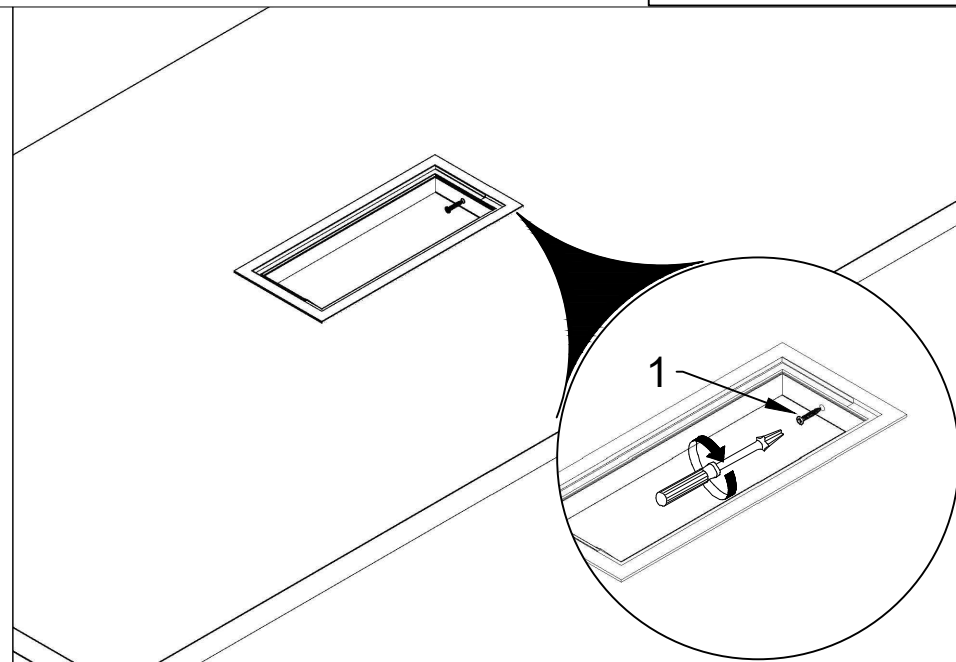

M05






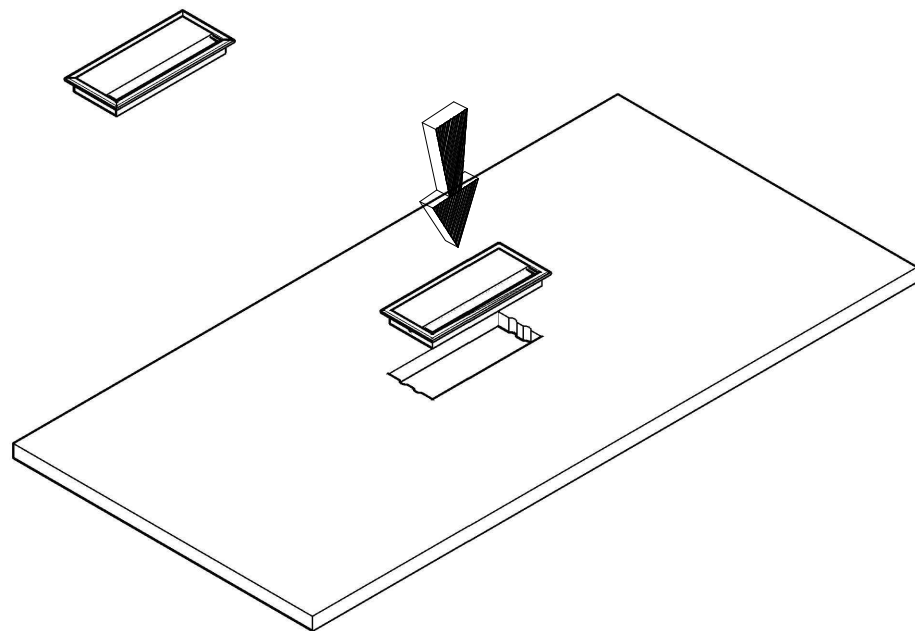


1



3x20







M04

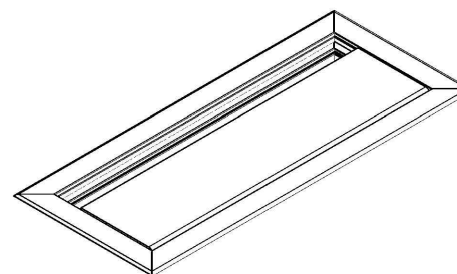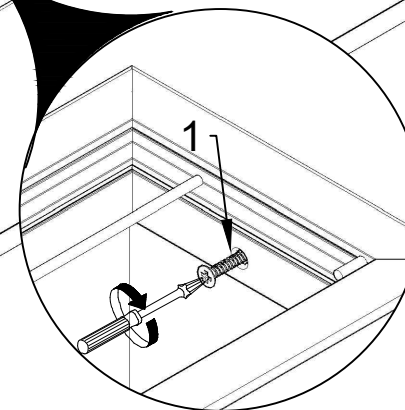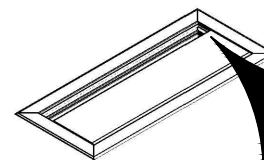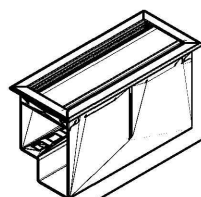


1









M04

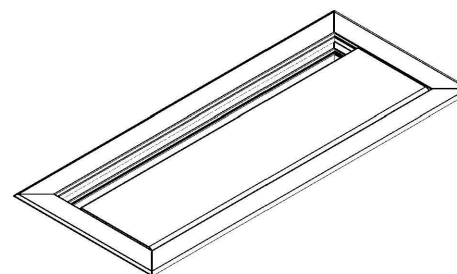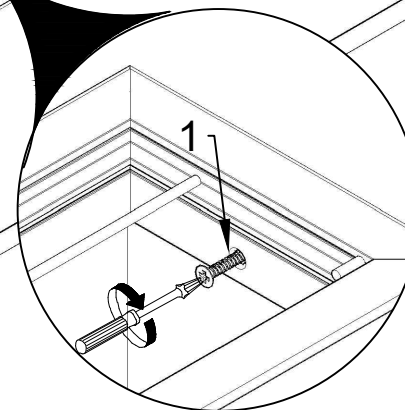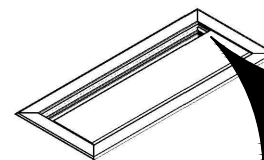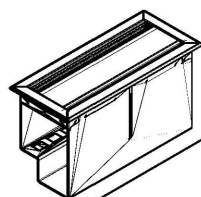

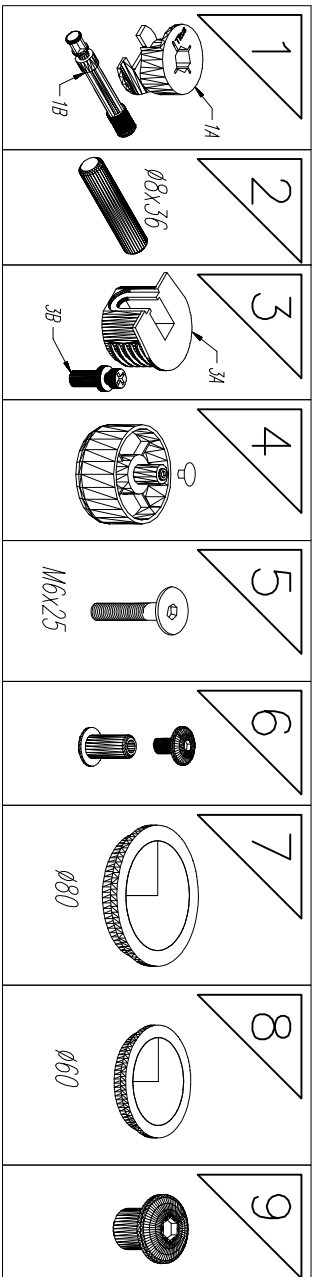


A12M

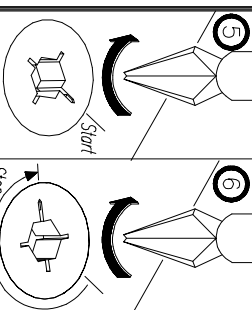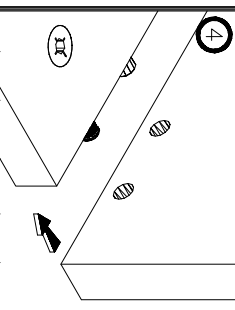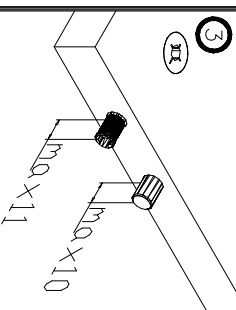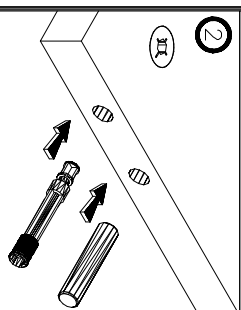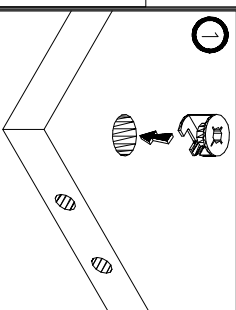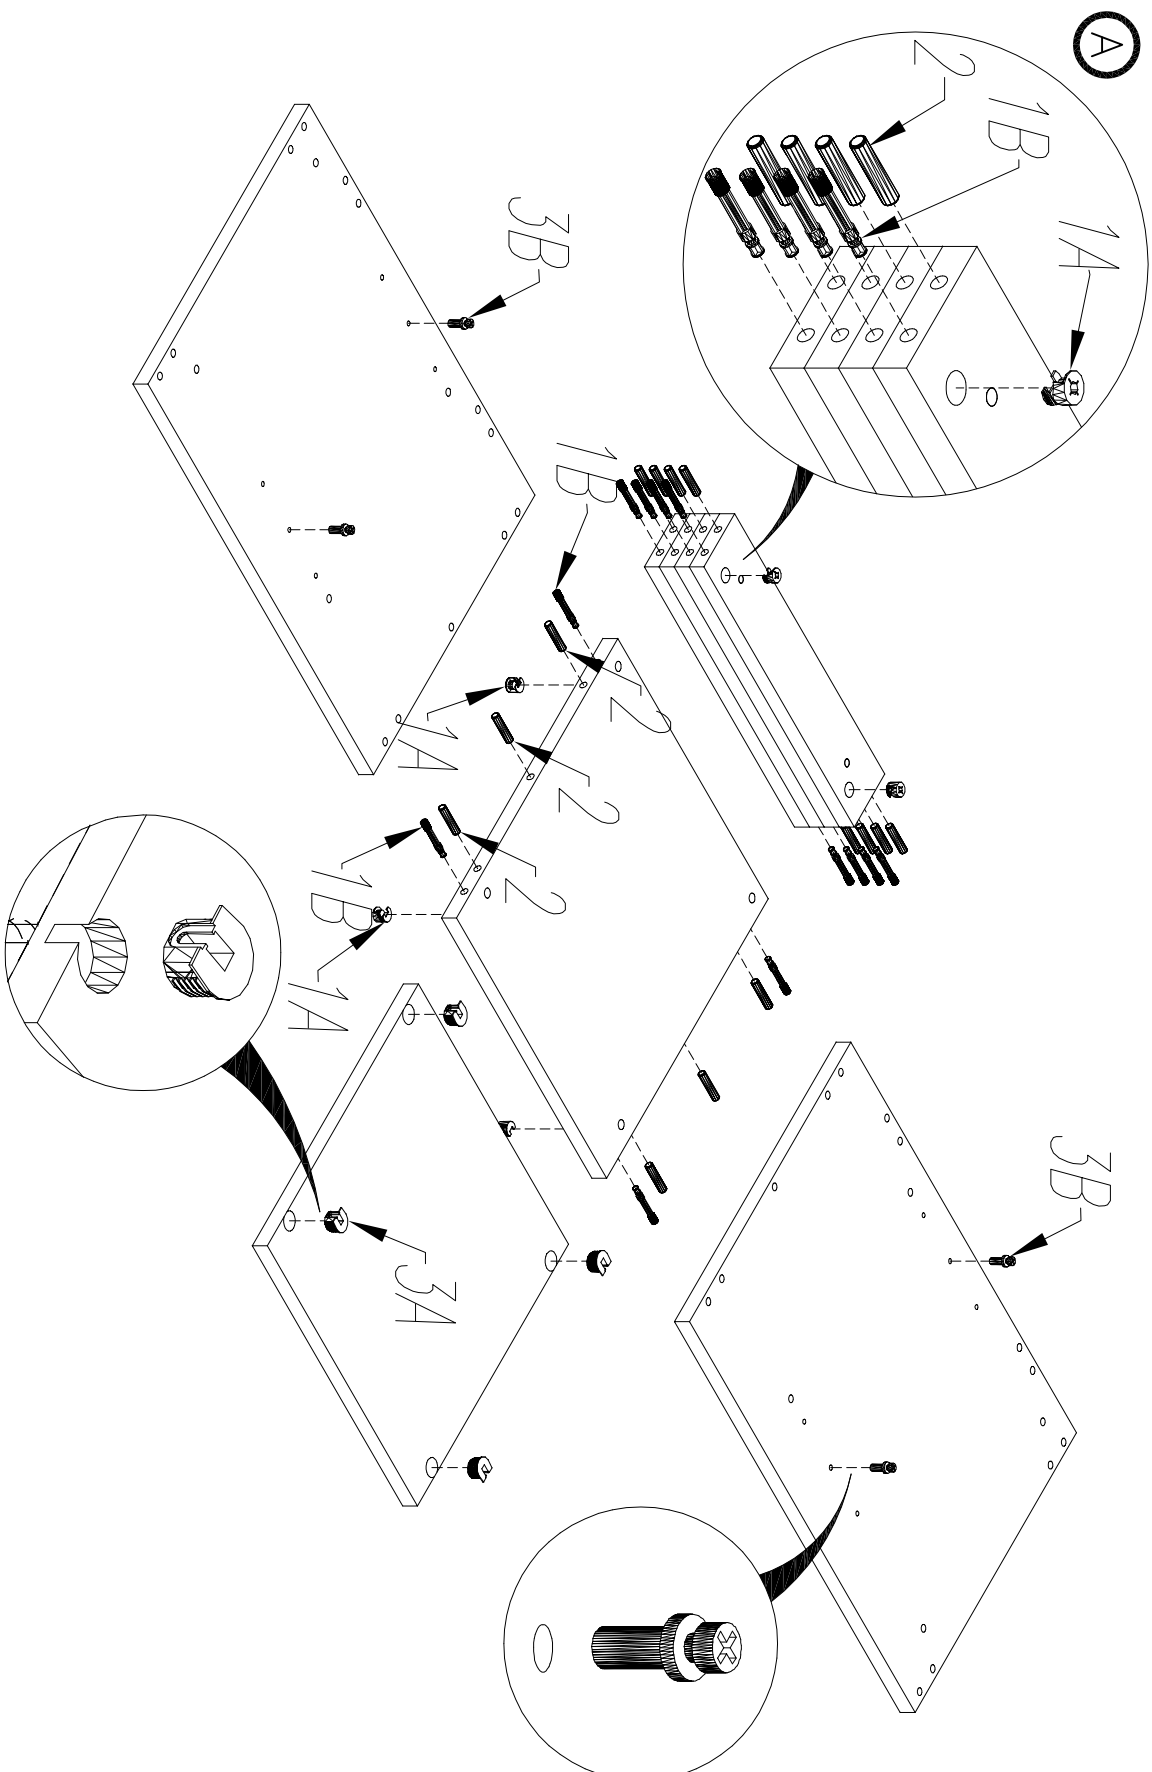


KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOLKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

B

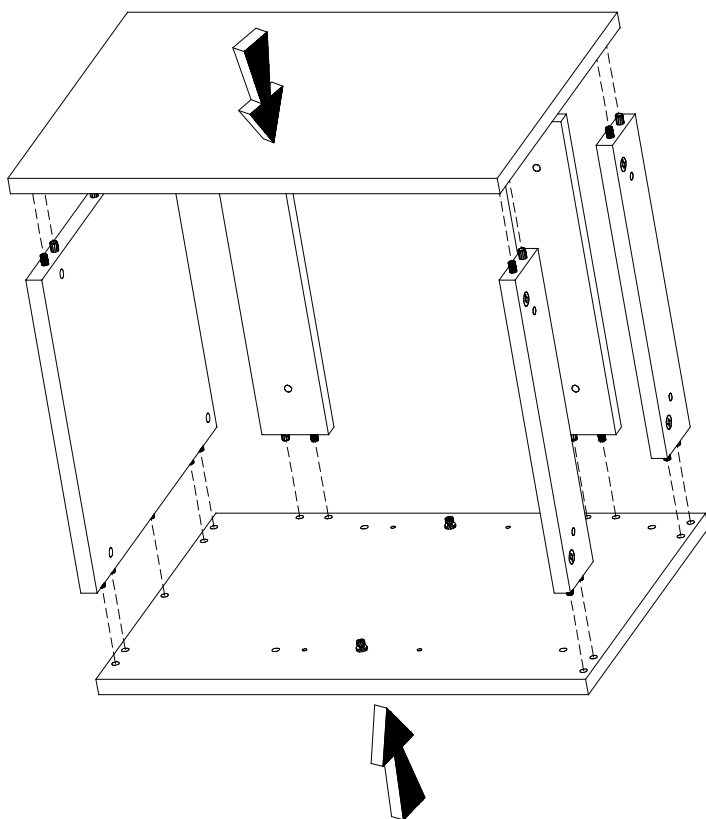

C

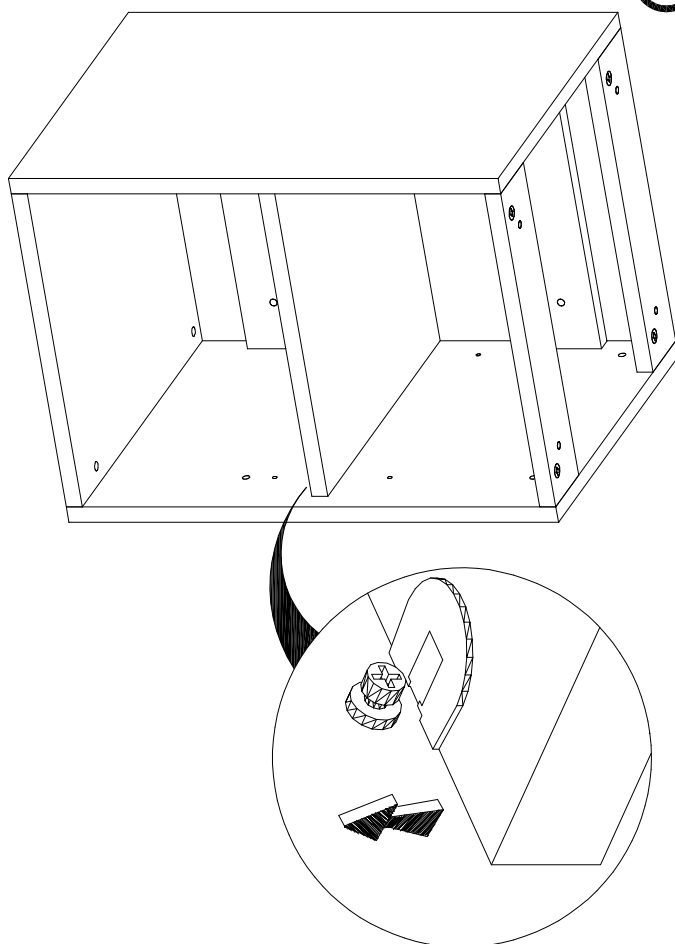

D

