



1

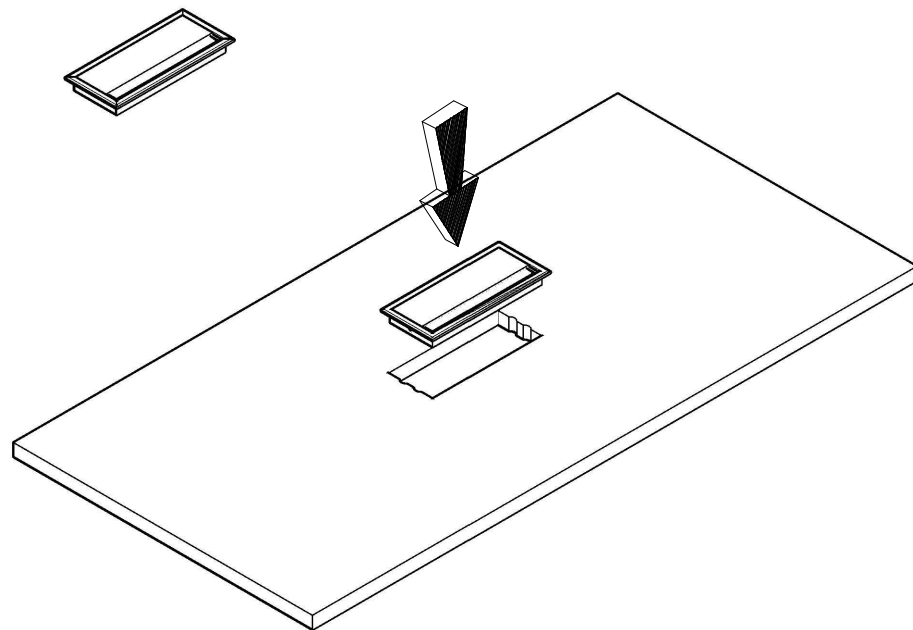

M05









1




3x20

M04

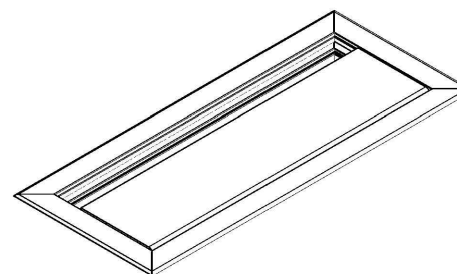
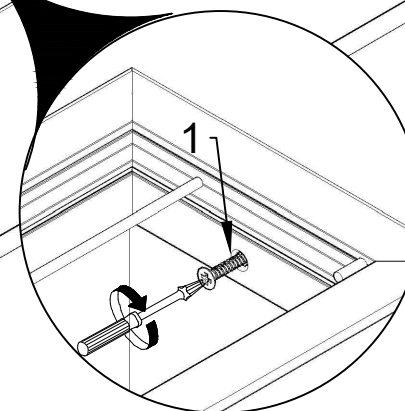
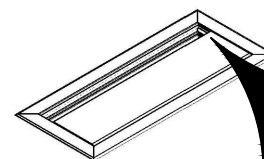

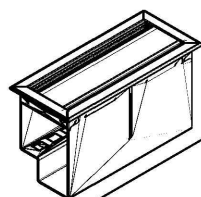



1




3x20

M04

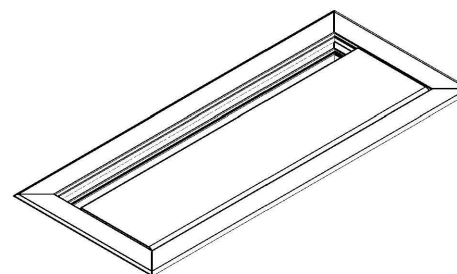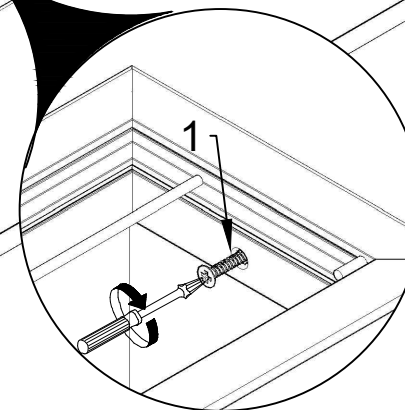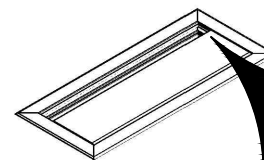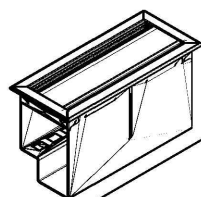


1	
2	
3	
4	
5	
6	
7	
8	
9	

A12M

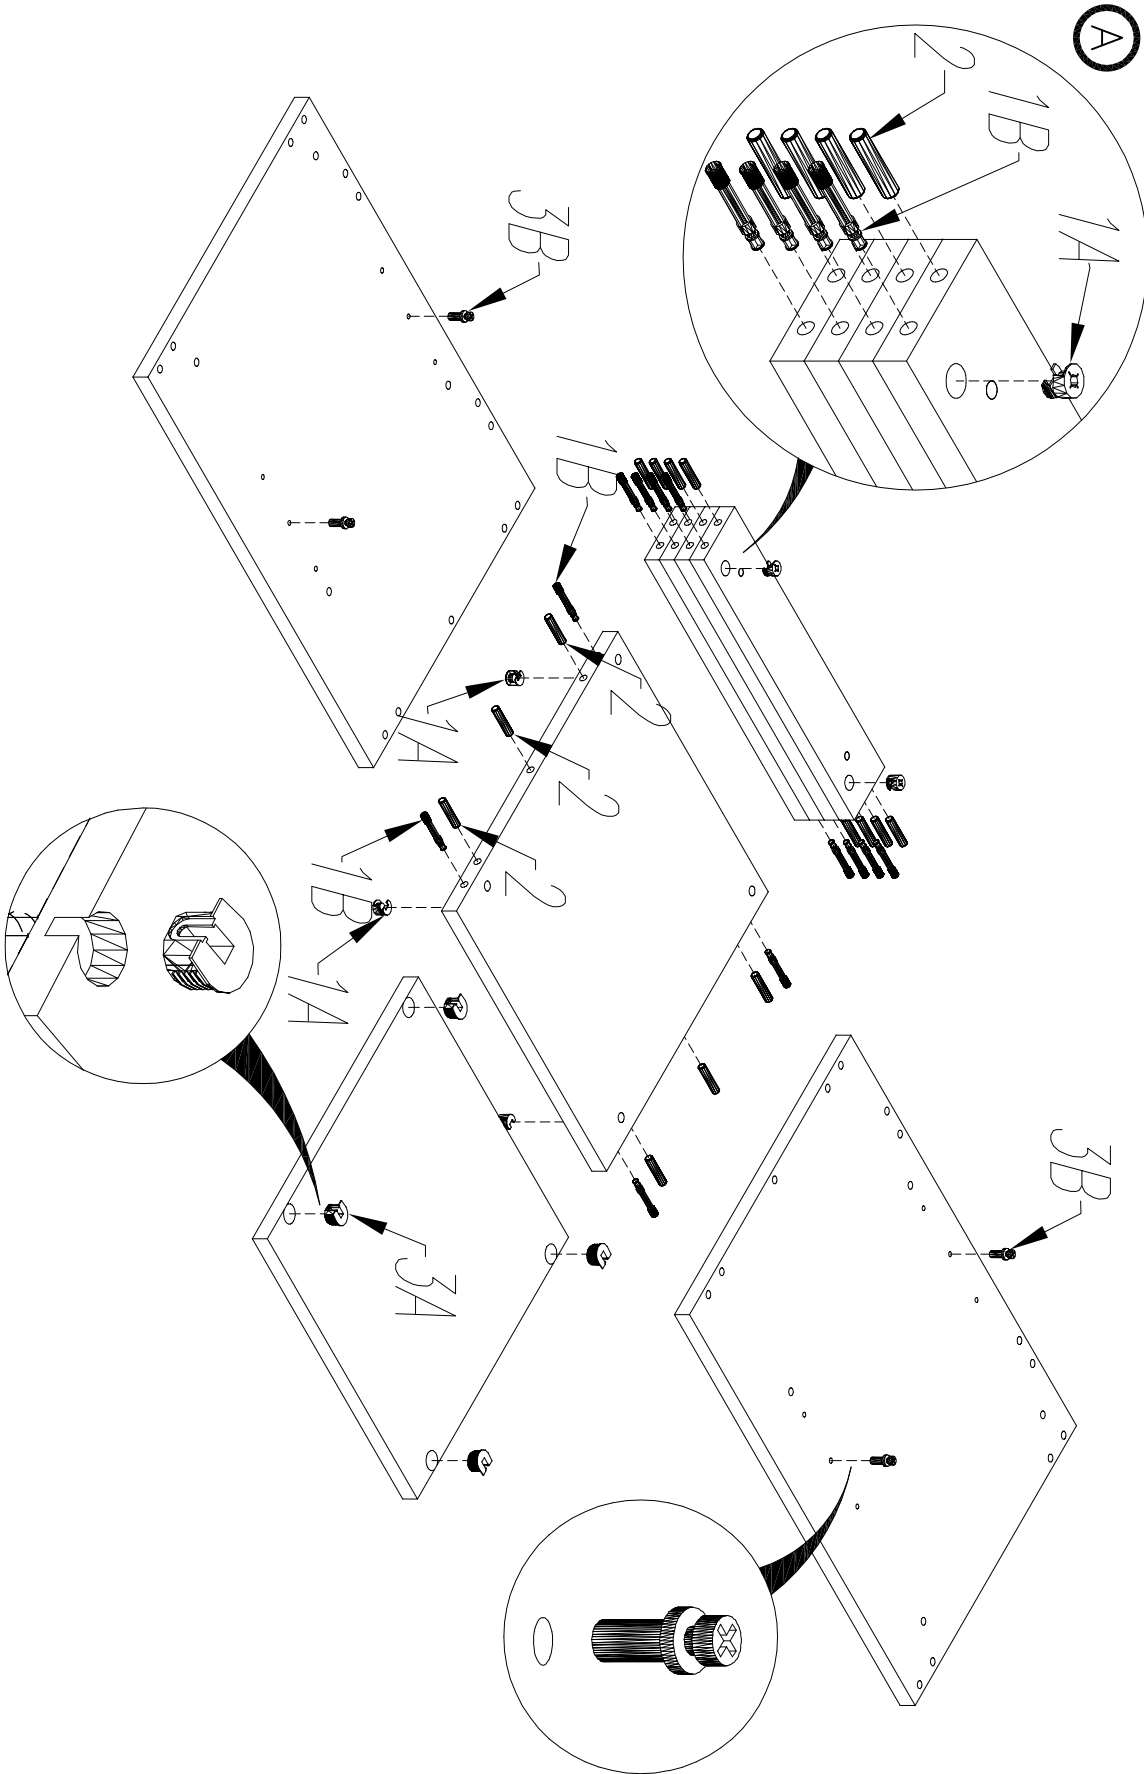

KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

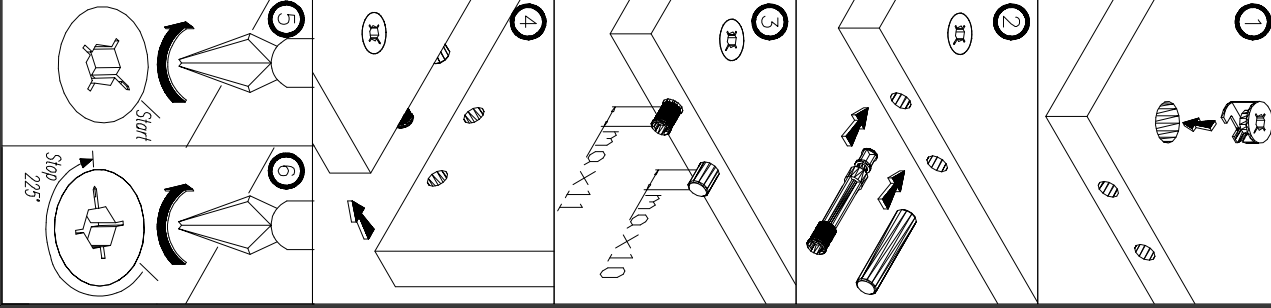

B



C



D

