

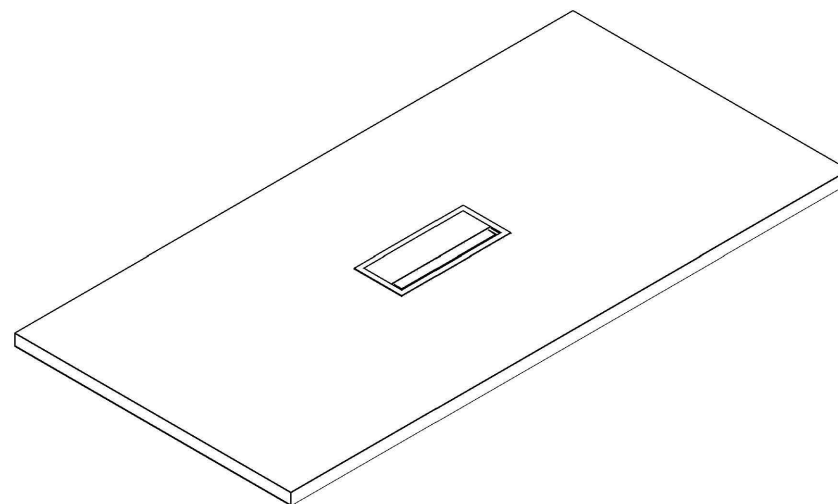


1

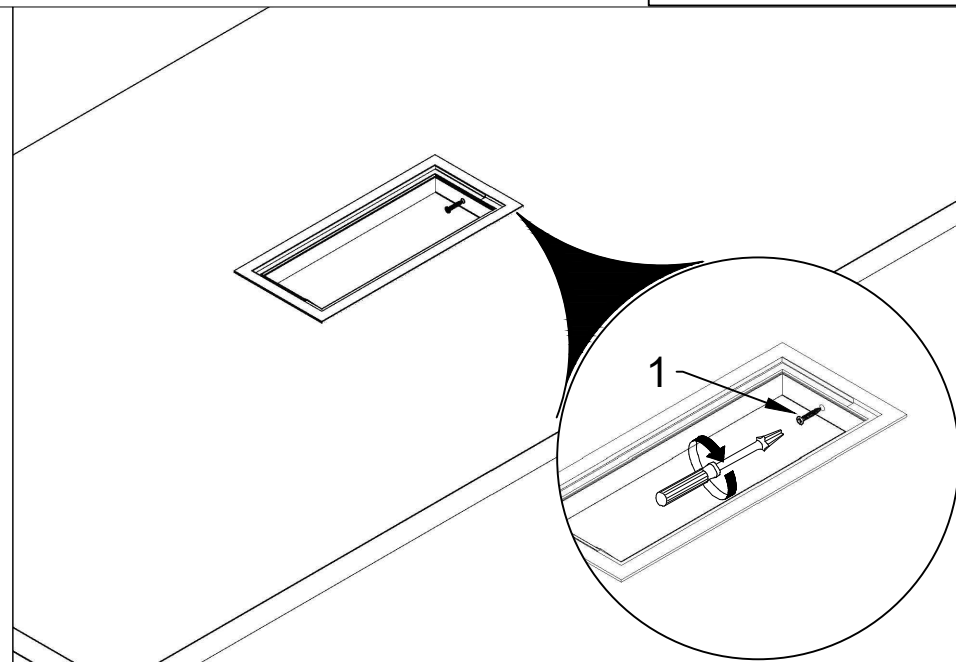







M05

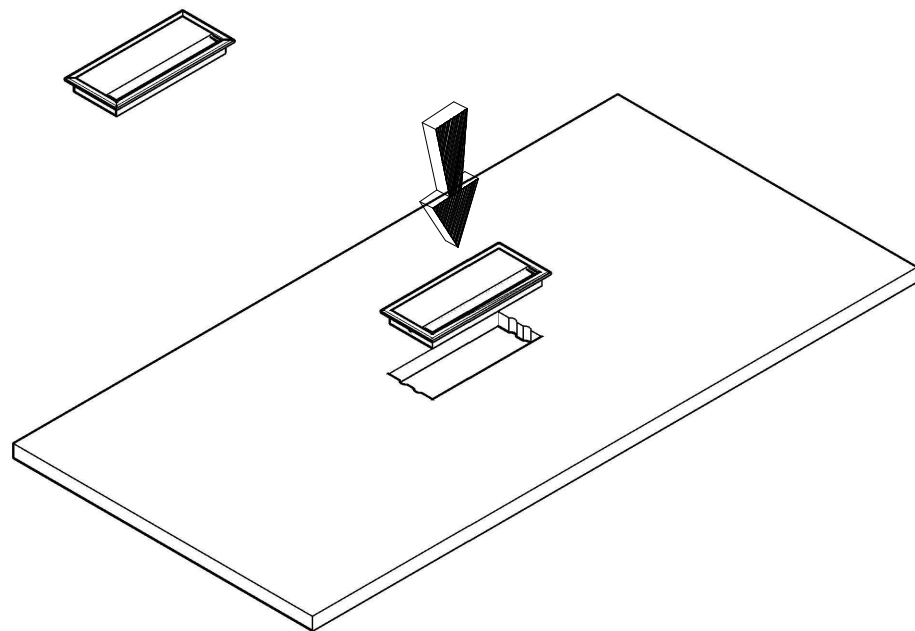

1









M04

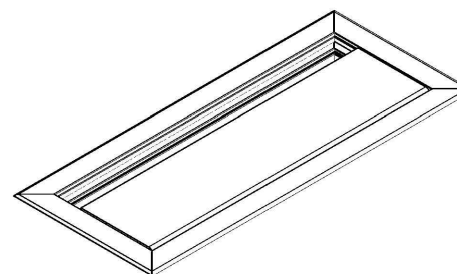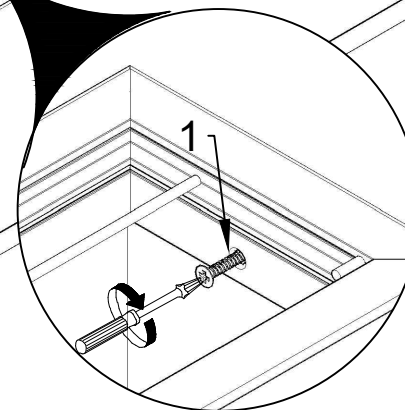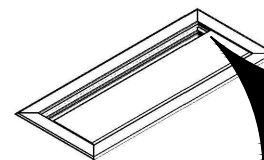

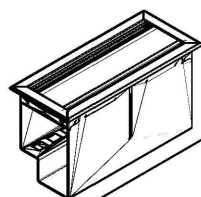



1





M04

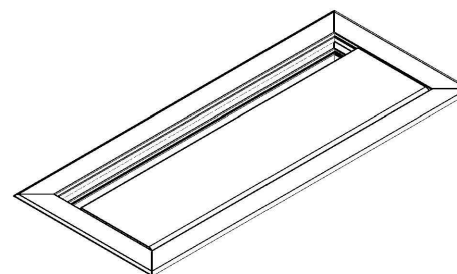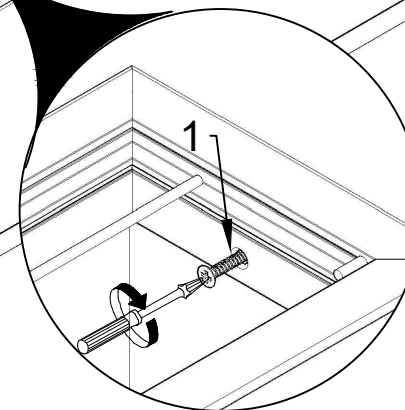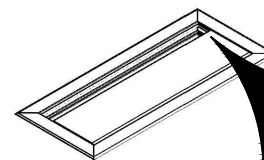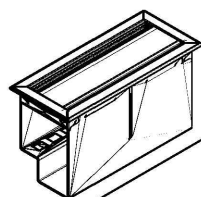



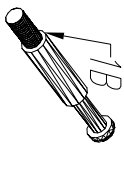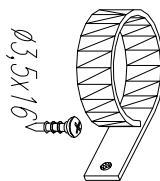- | | | |
|---|---|----|
| 1 |  1A
1B | x5 |
| 2 |  M6x14 | x8 |
| 3 |  ø5x20 | x4 |
| 4 |  ø3,5x16 | x3 |

A

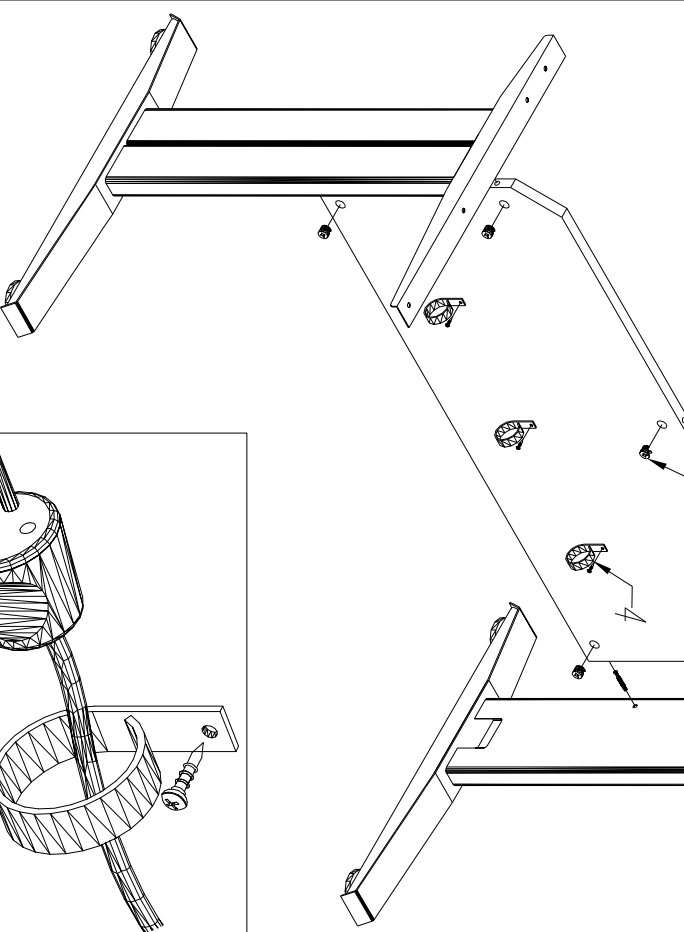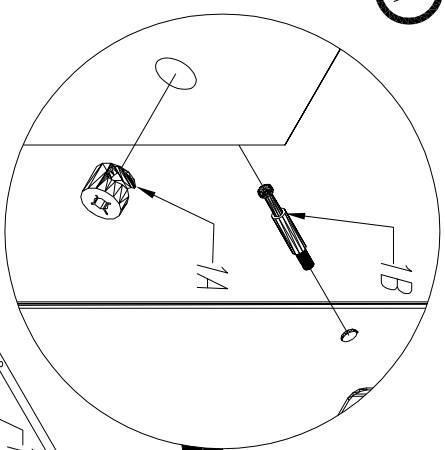

B

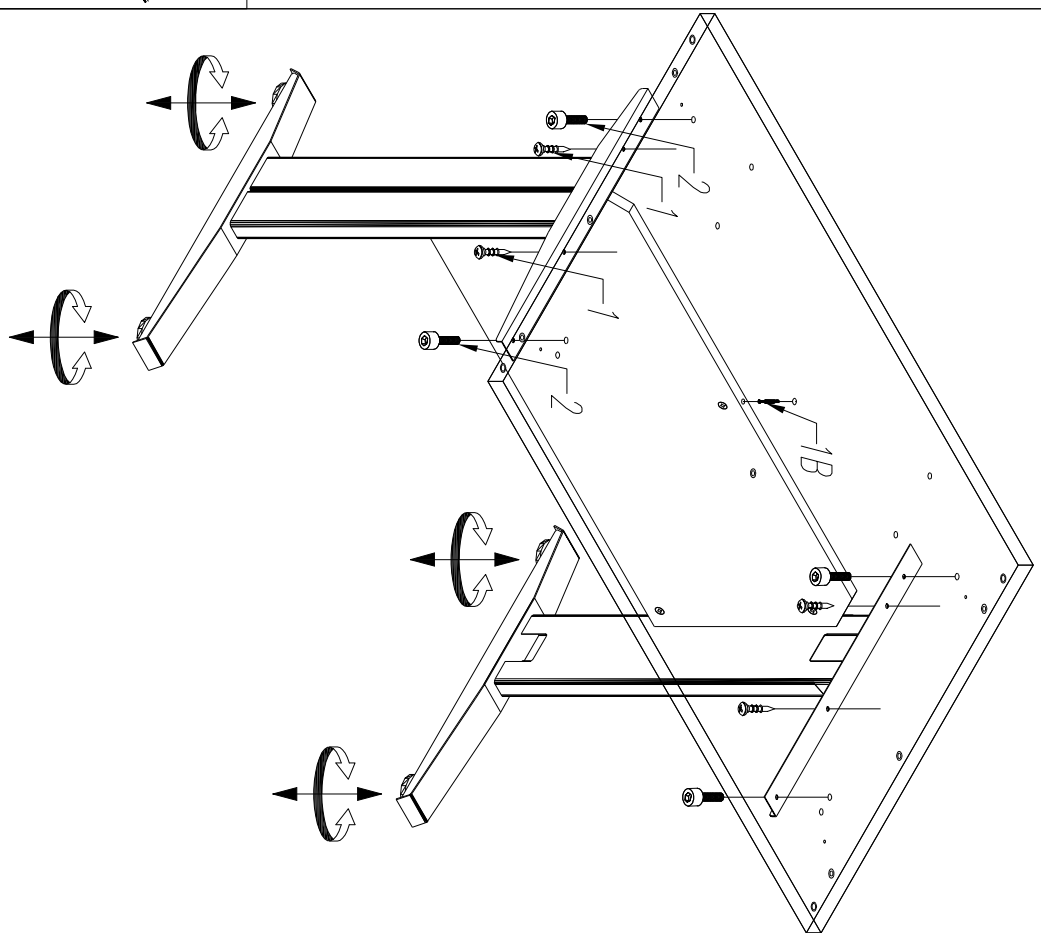


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DUEBELN.


1




2

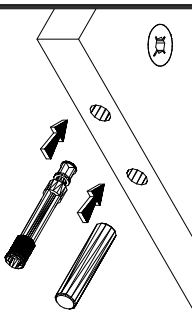


3

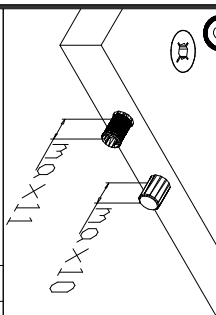

4

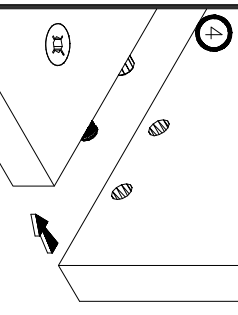

5

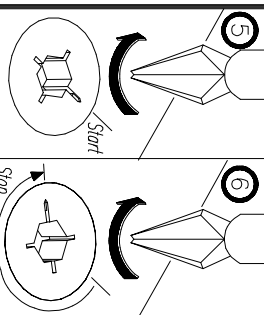

6

