

1



M05



1



M04







1





M04

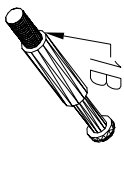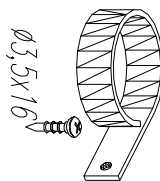


1	 1A 1B	x5
2	 M6x14	x8
3	 ø5x20	x4
4	 ø3,5x16	x3

A

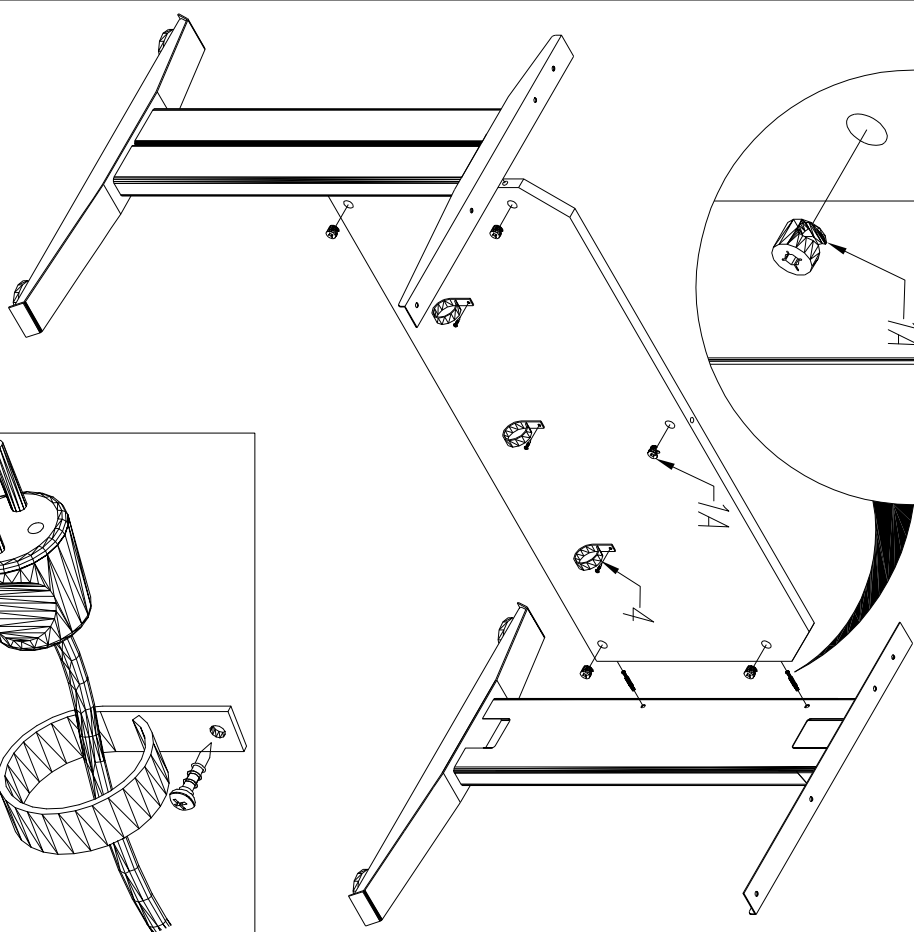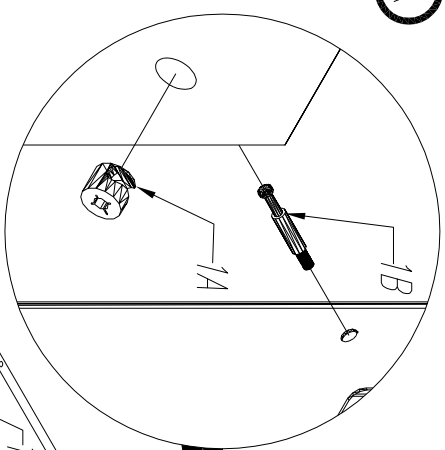





B

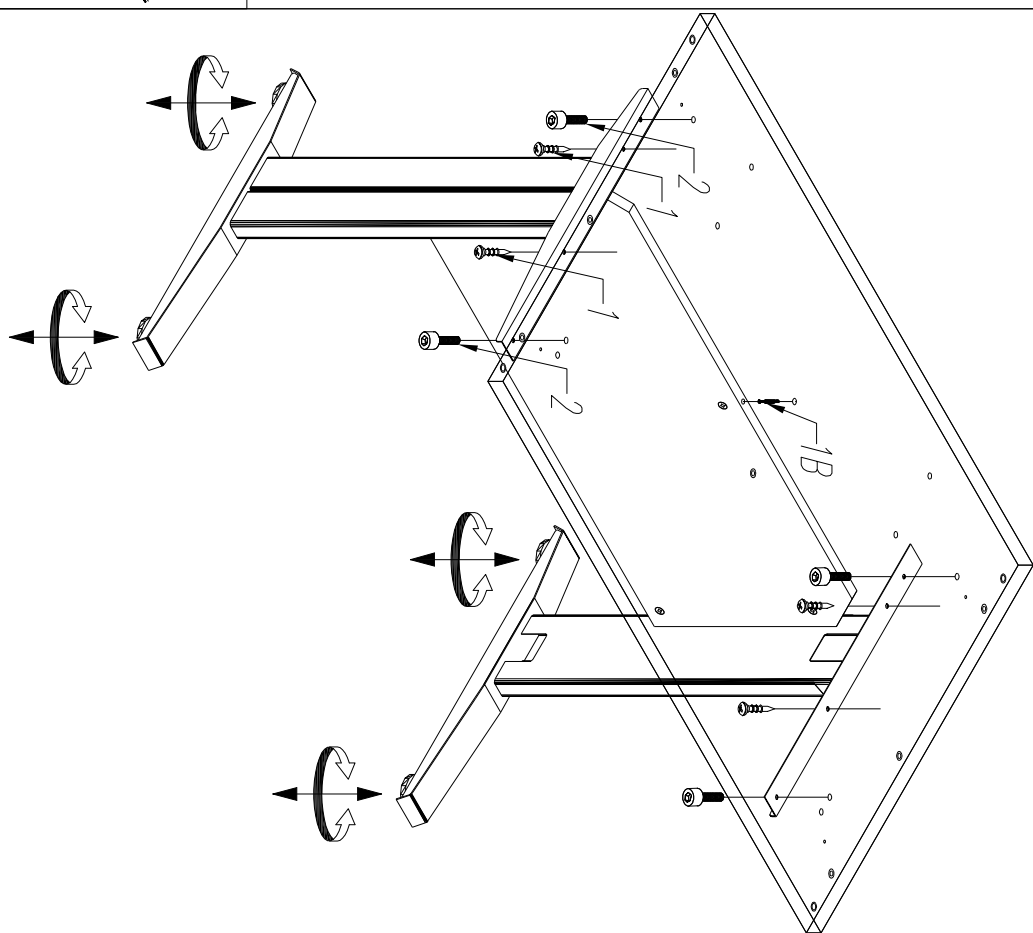




OGIN

KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLEKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DUEBELN.

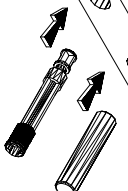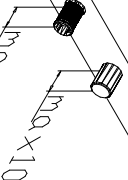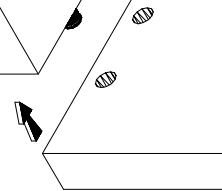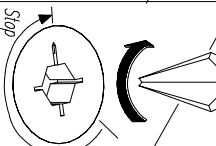1	
2	
3	 m _a ×10 m _a ×11
4	
5	 Start
6	 Stop 225°