

1



M05



1




M04







1





M04


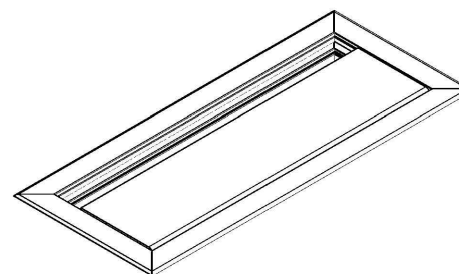


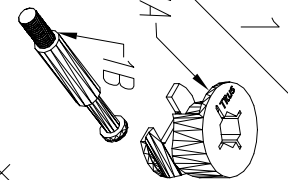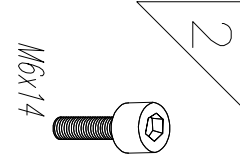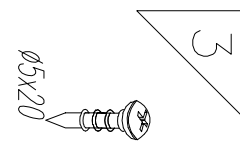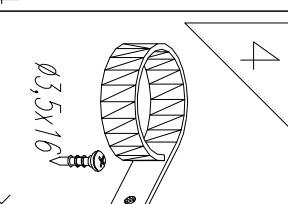1	 1A 1B x5
2	 M6x14 x8
3	 ø5x20 x4
4	 ø3,5x16 x3

A

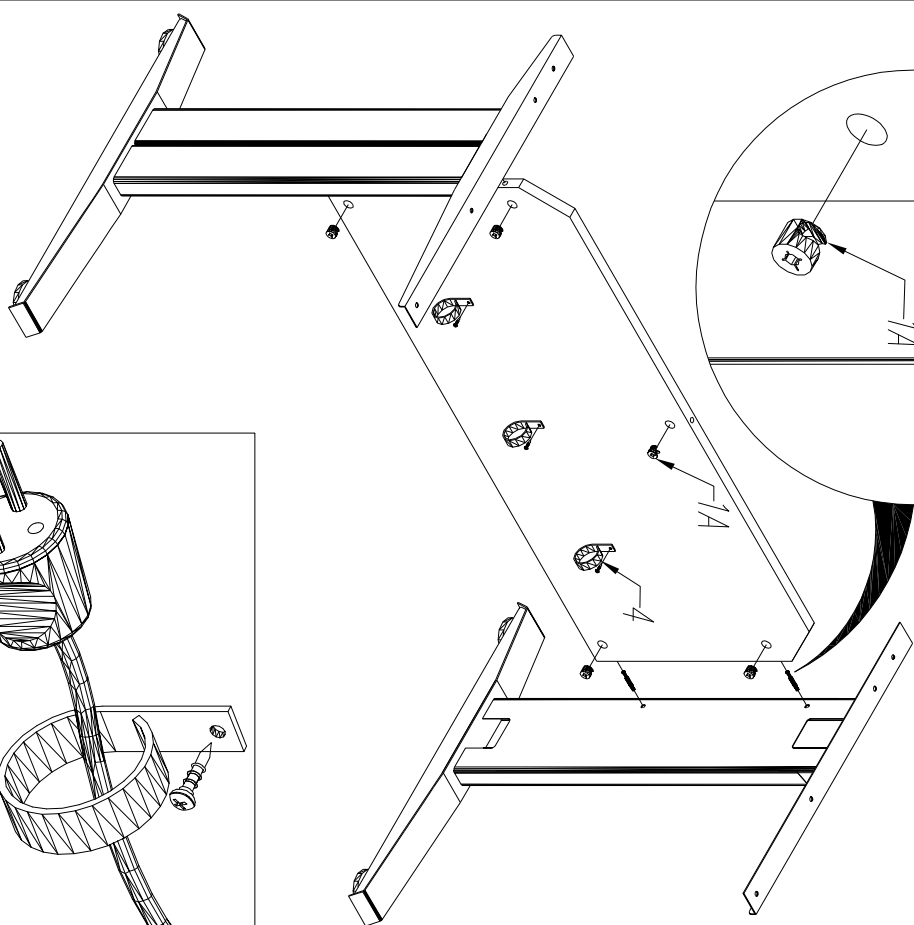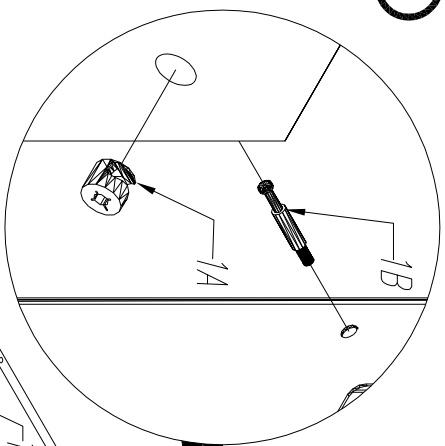

B

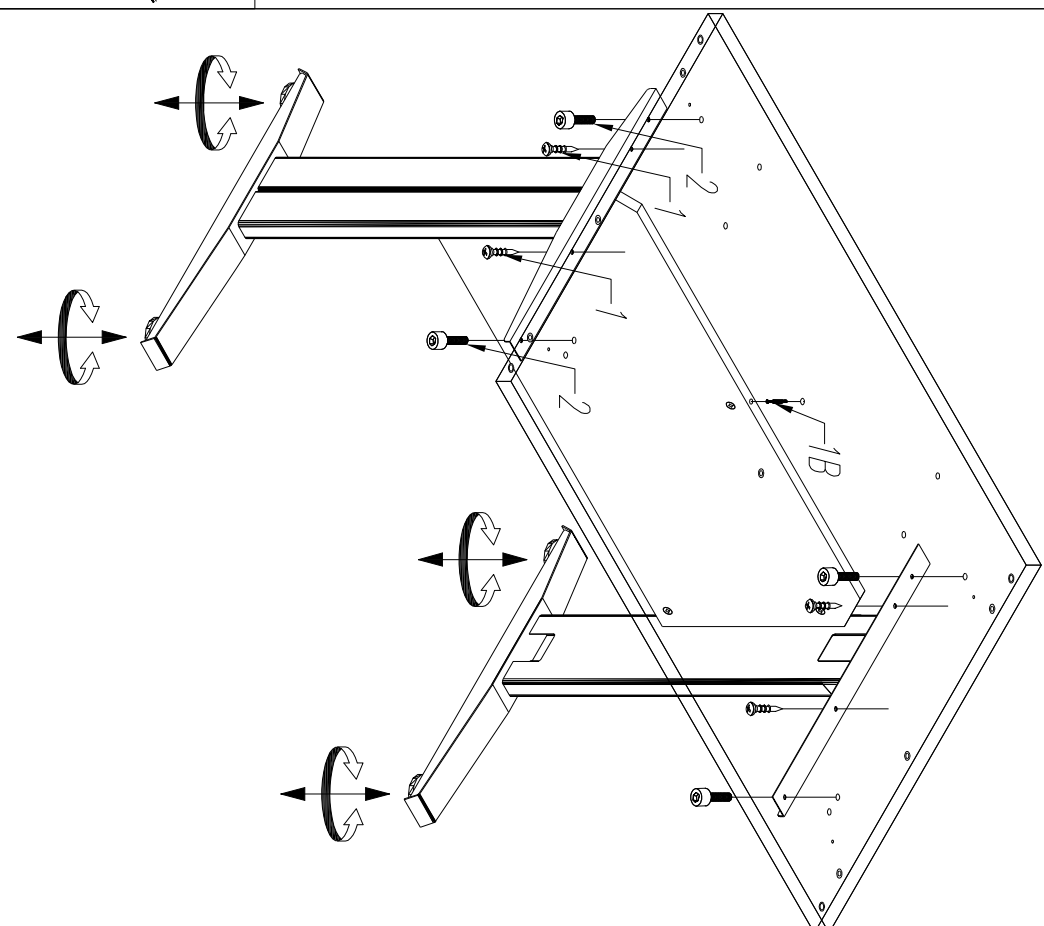


KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLEKOW.
THE FITTINGS SEQUENCE OF THE
CHAIRS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DUEBELN.


1




2

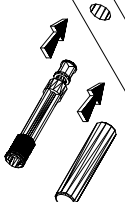

3

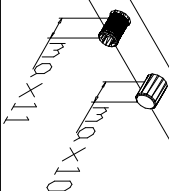


4

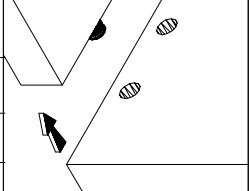

5



6

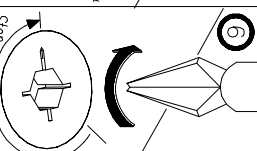

Start

Stop

225°