


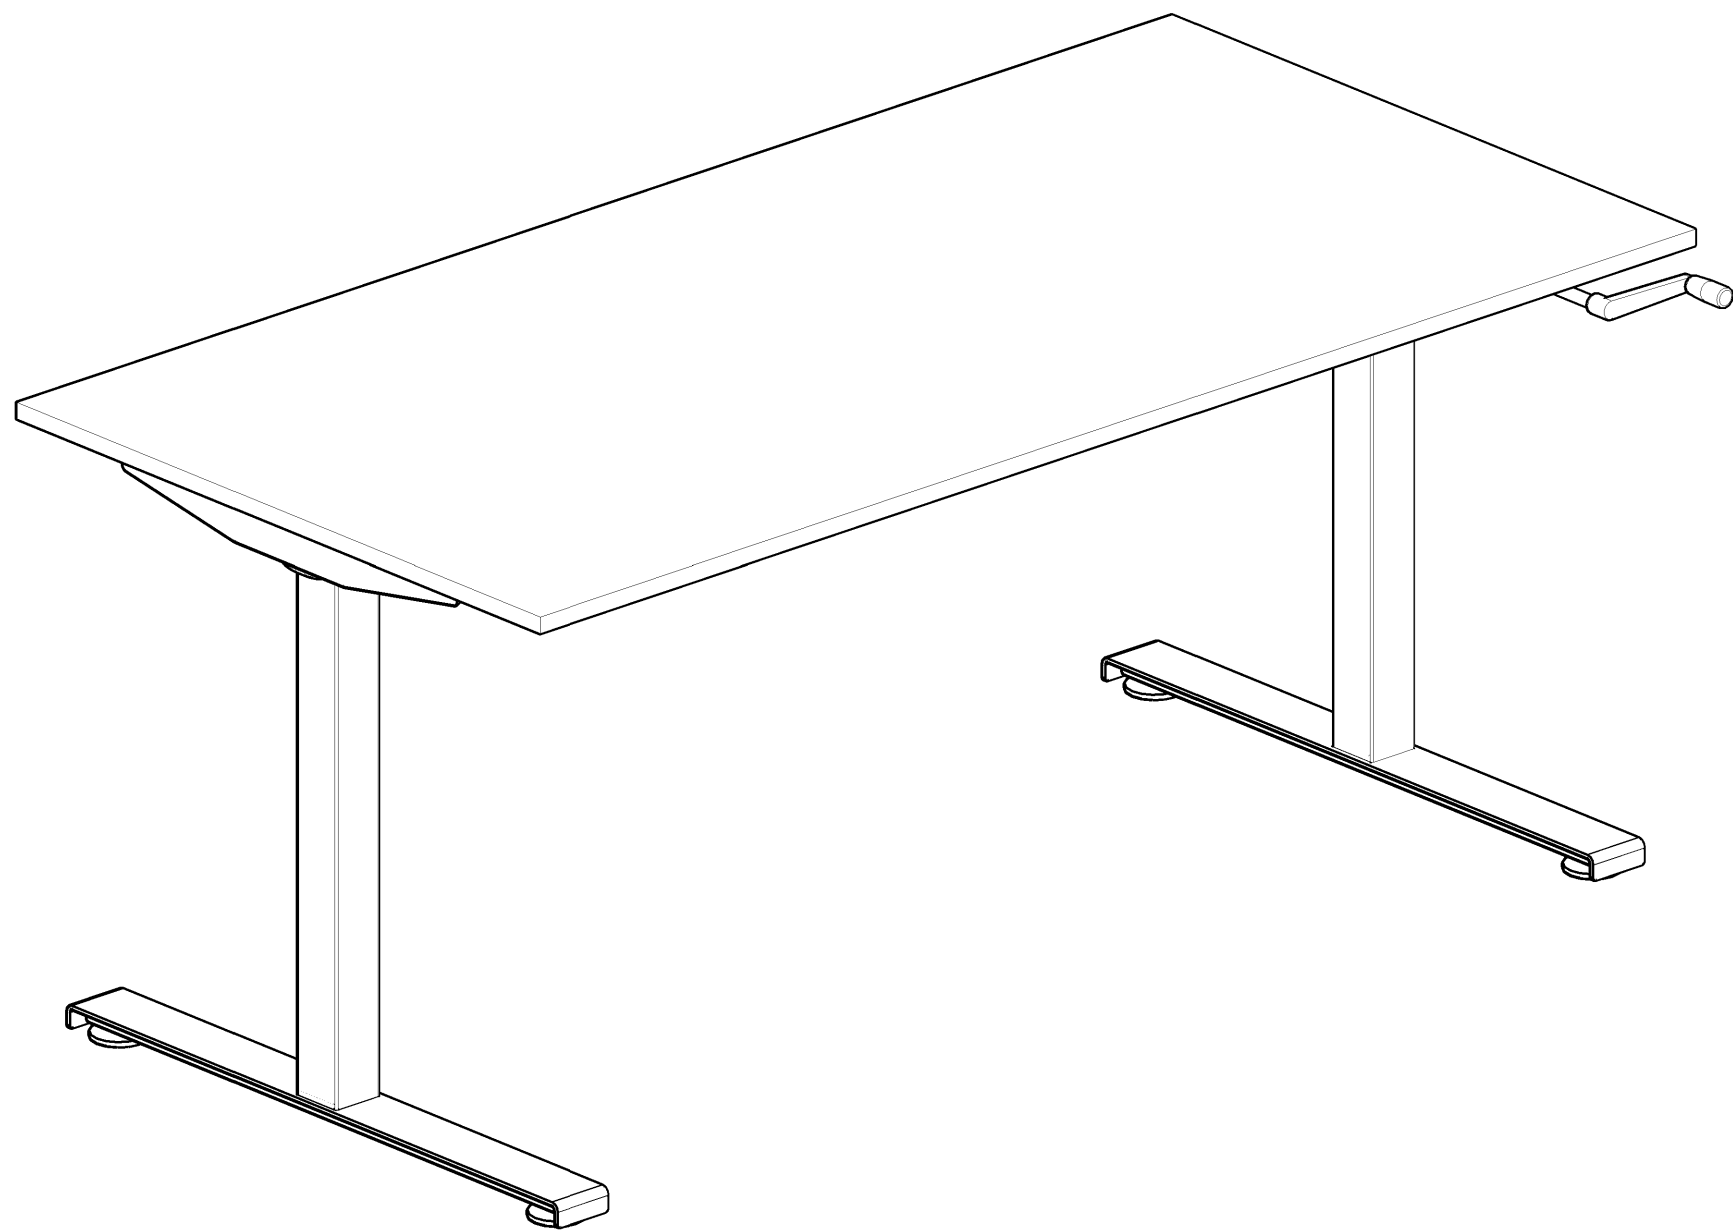





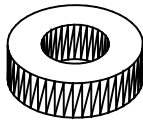
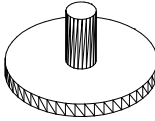

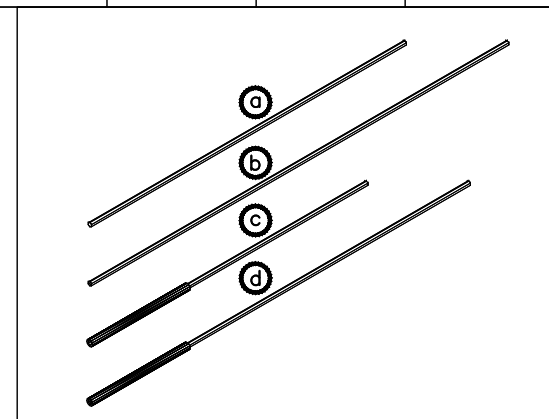


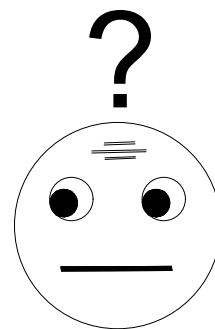

12-306	06-205	06-059	06-097	06-105			1	2	3	4	5	6	7
											 300mm		
M6x18I	M6x15K	M8x16S	5x17W	5.0x60S									

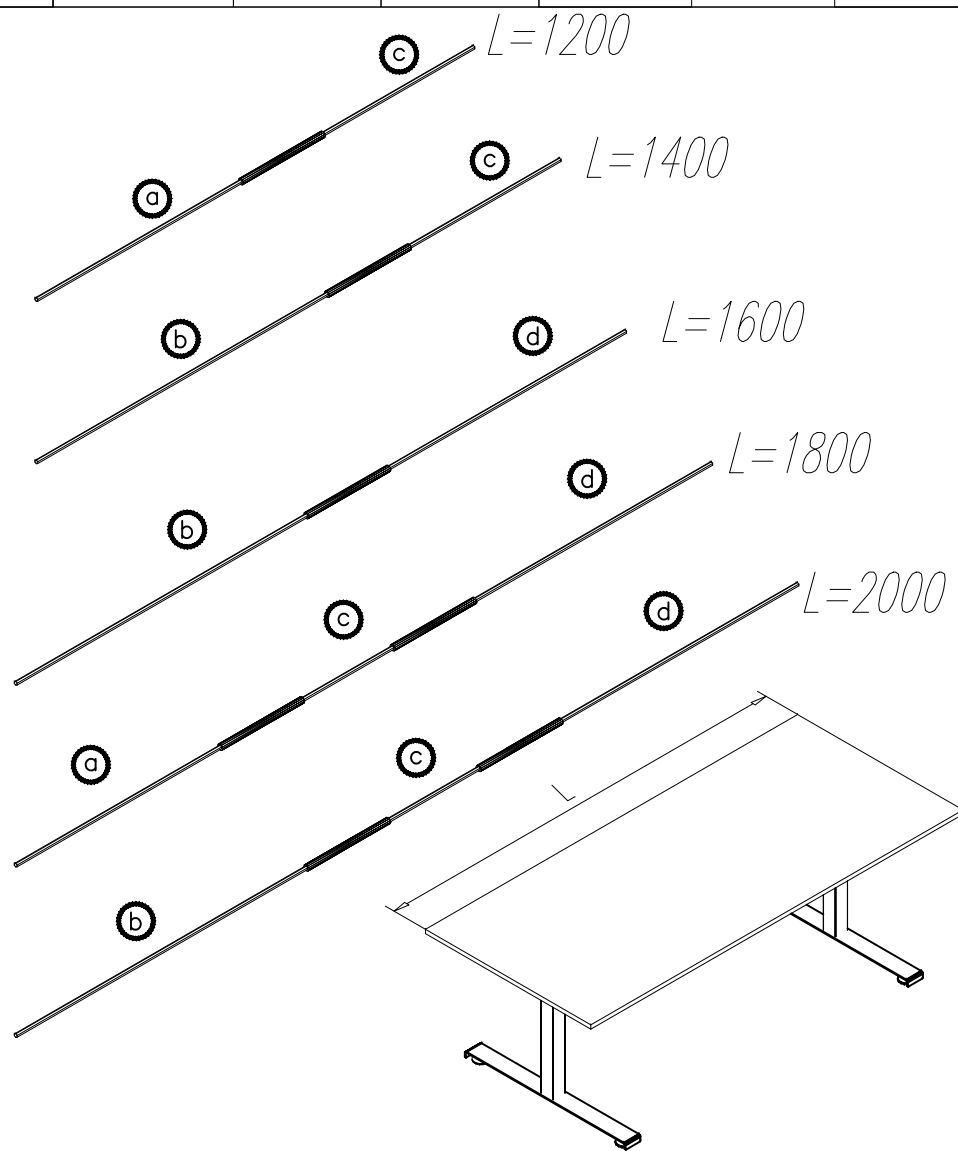






A

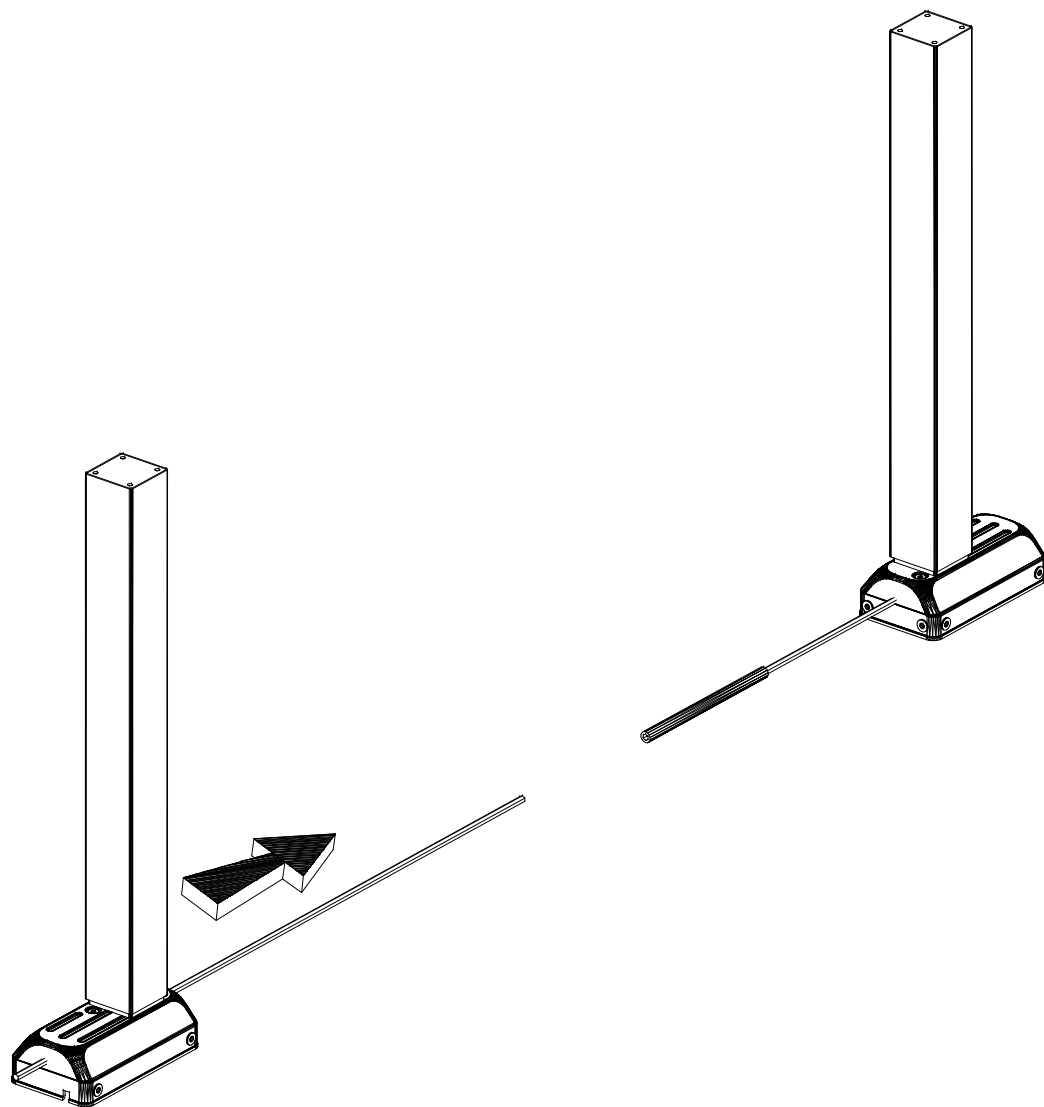

B

*Przykręcić śruby z dużą siłą.
Put the screws strongly.
Anschrauben die Schrauben
staerklich.*

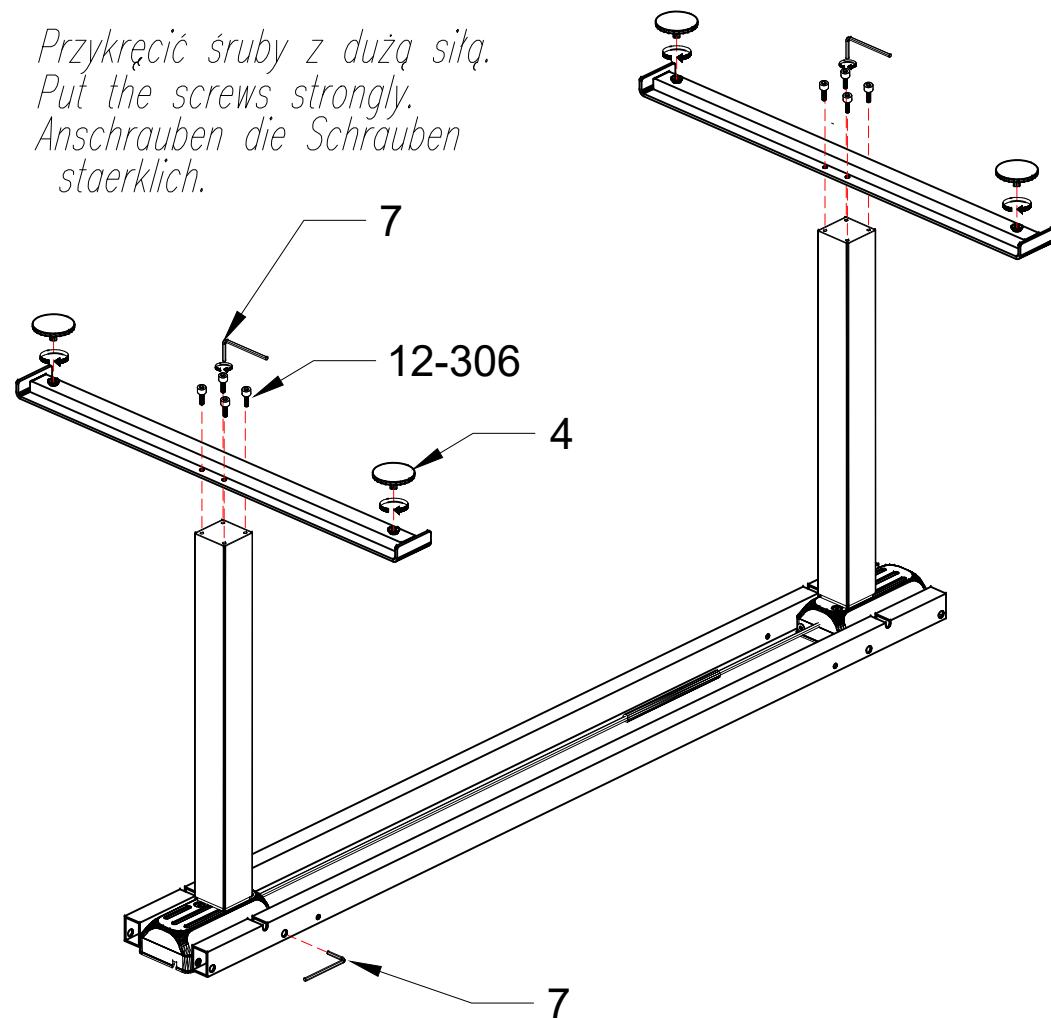

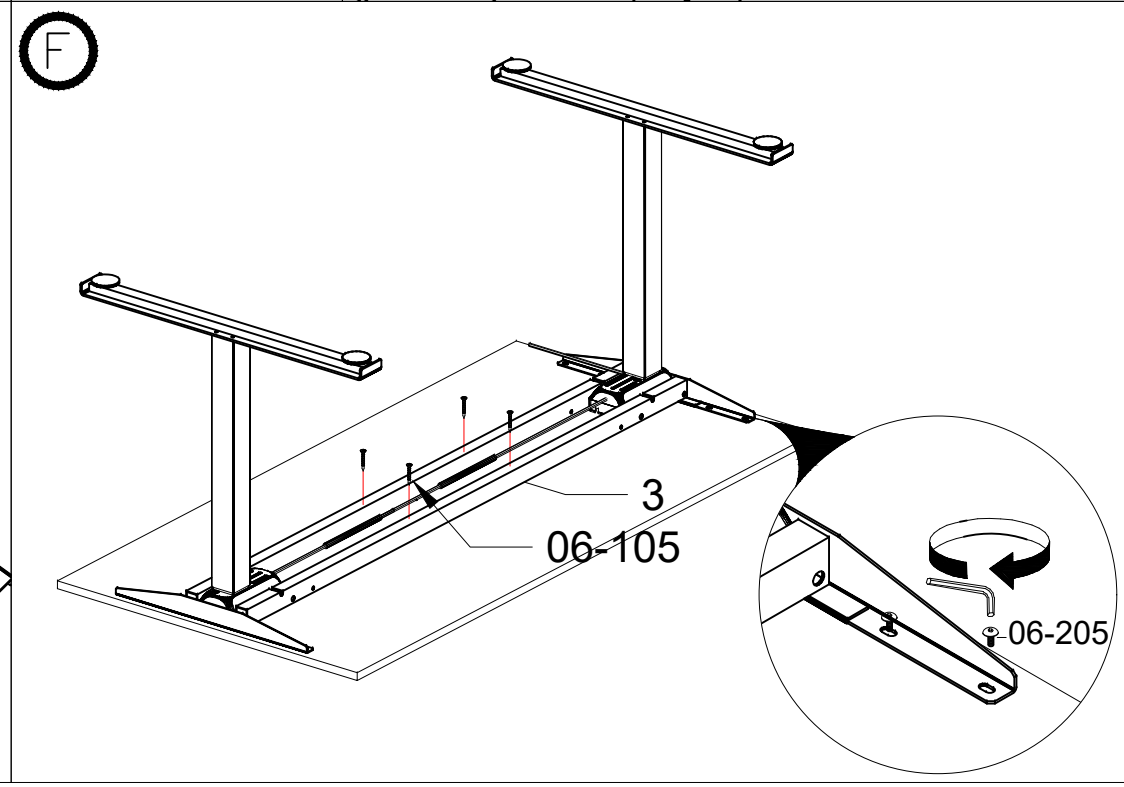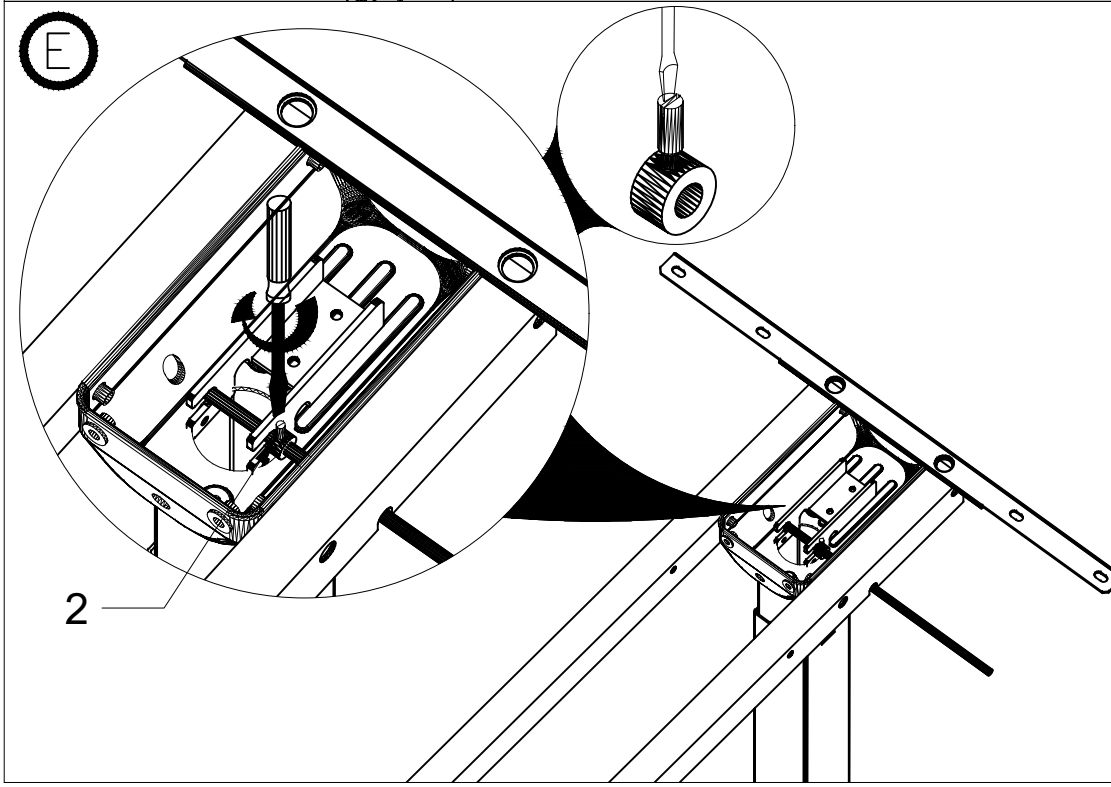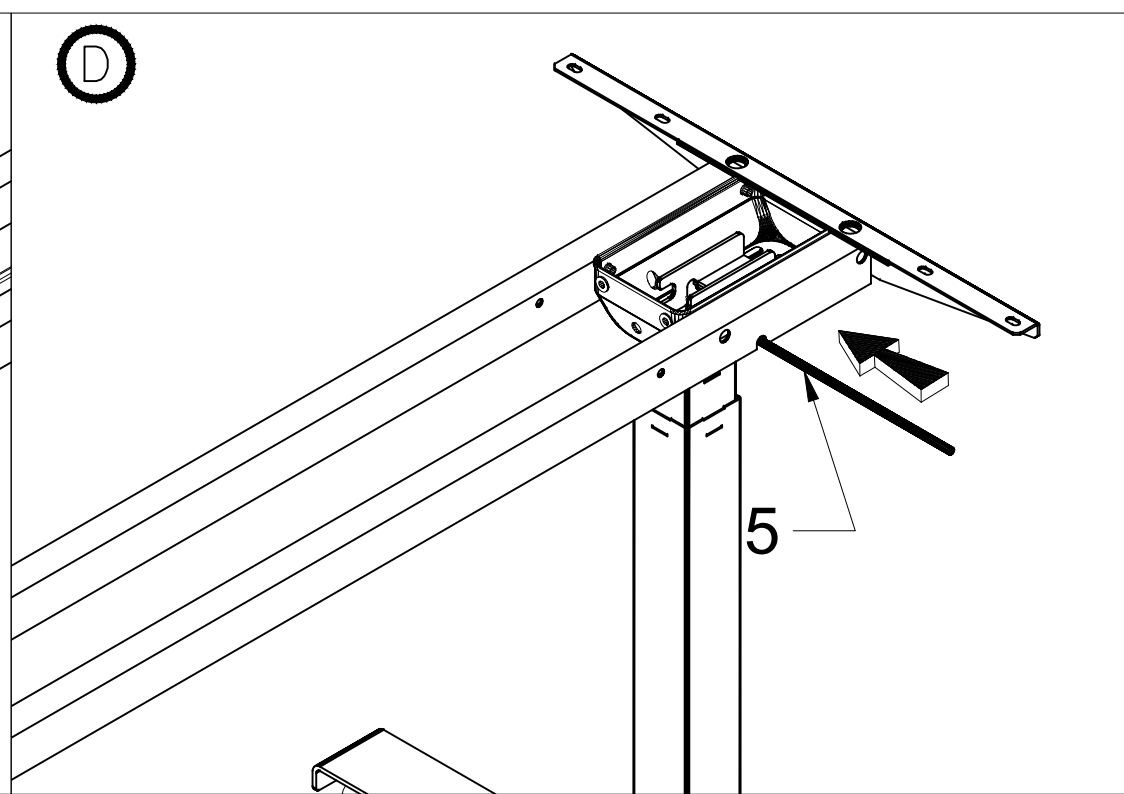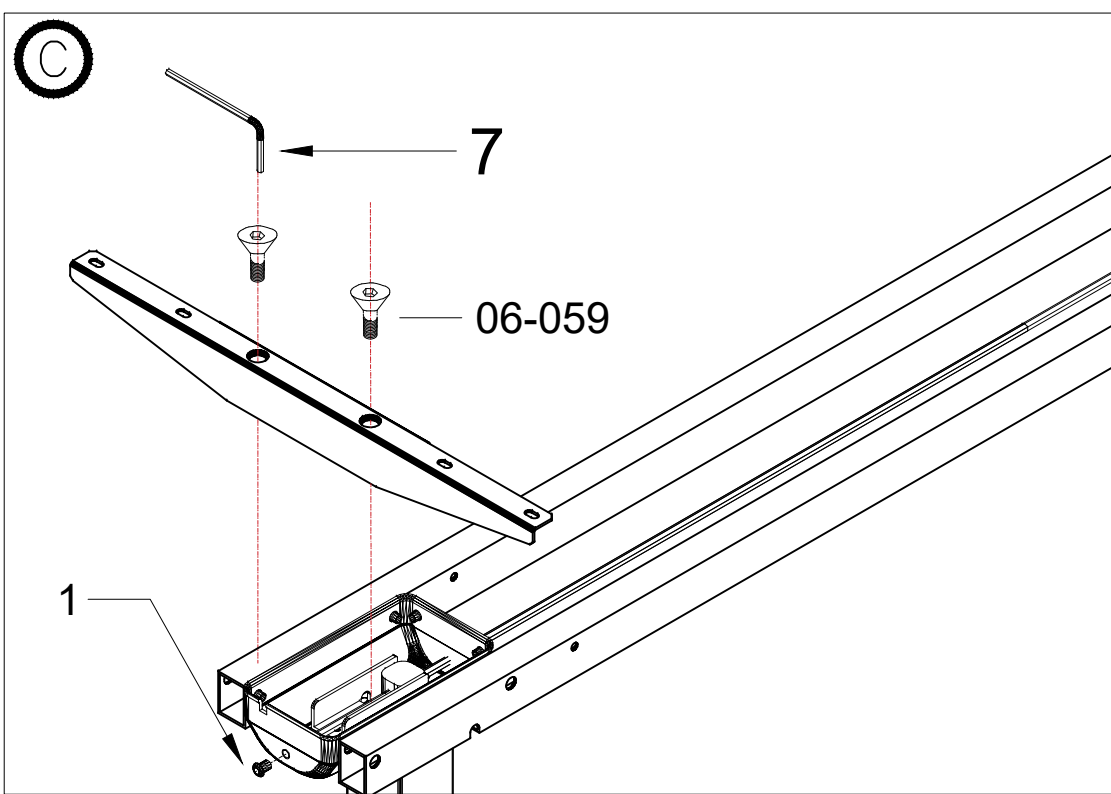

G

