

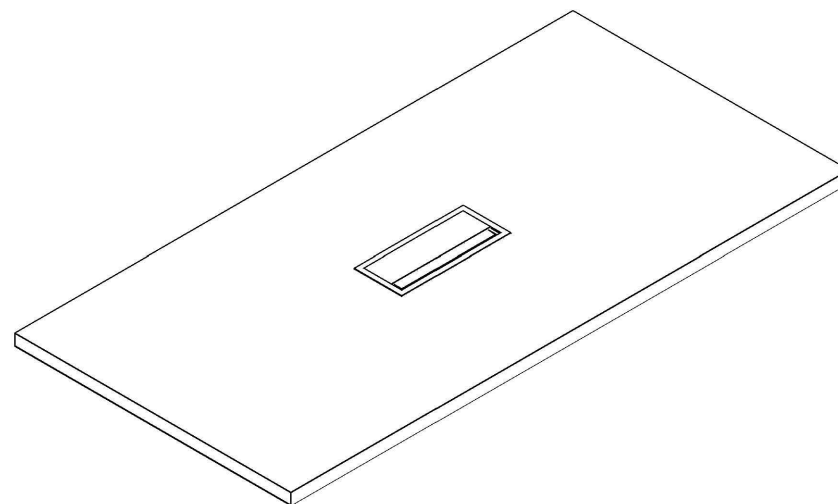


1

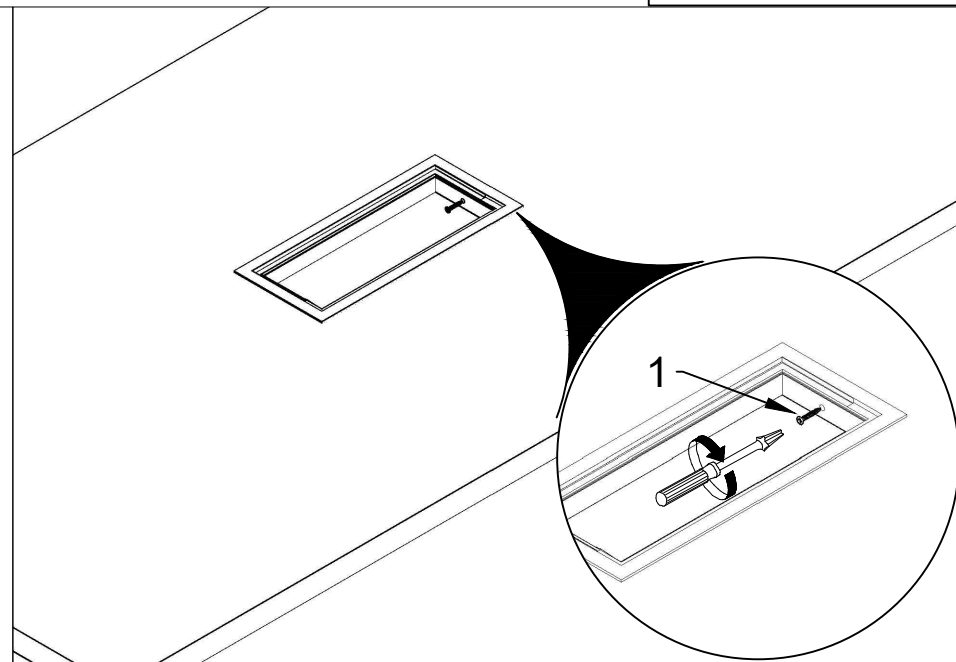







M05

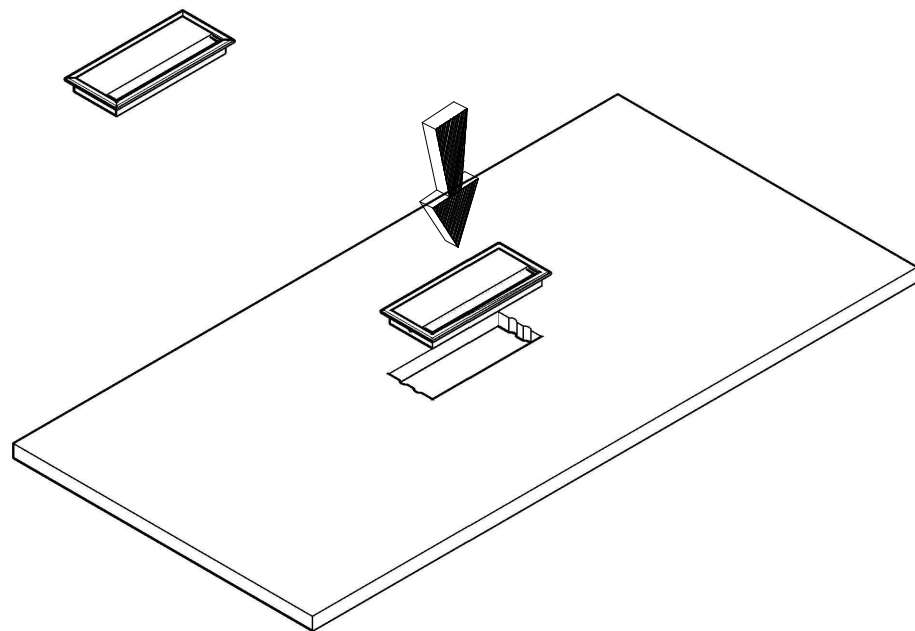

1









M04

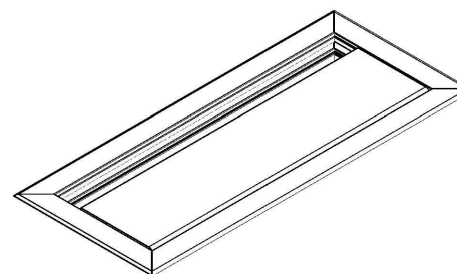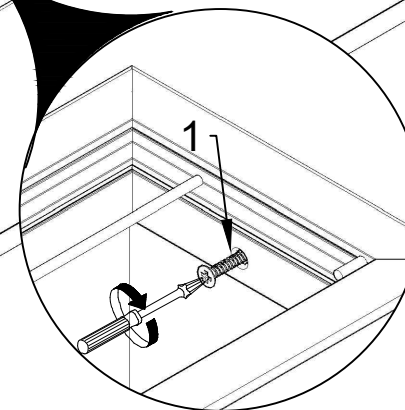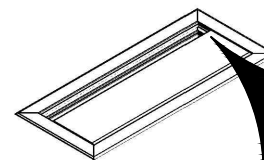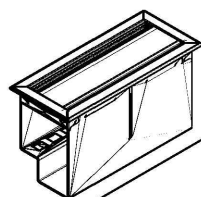




1




M04

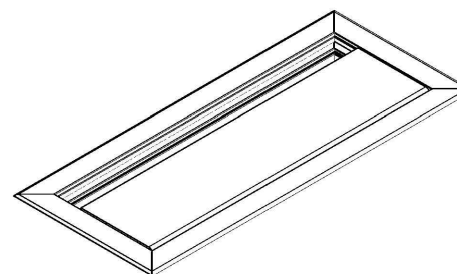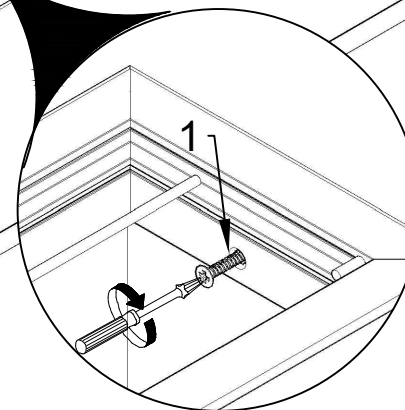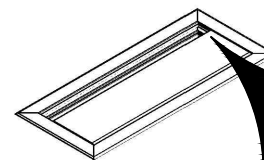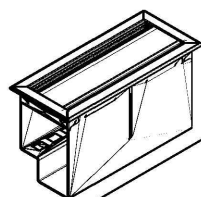




M07

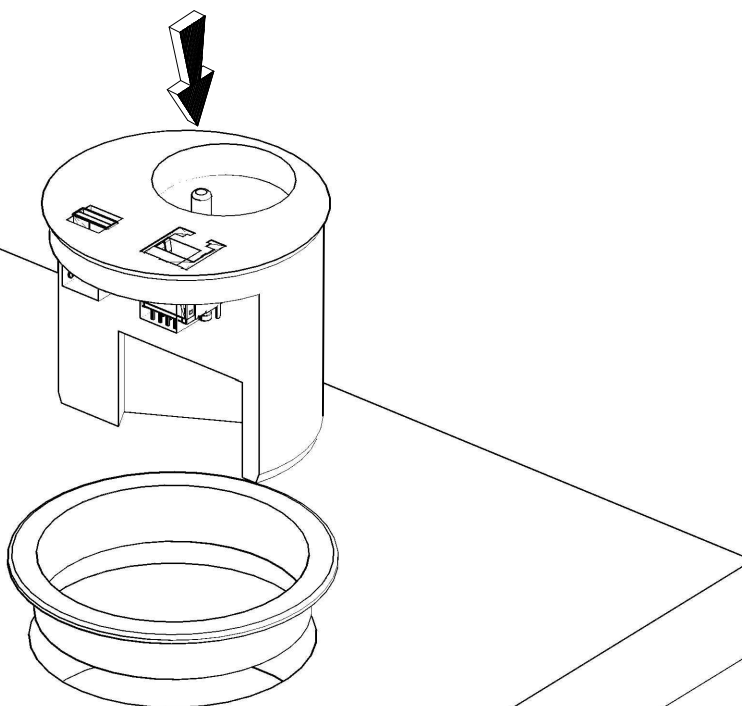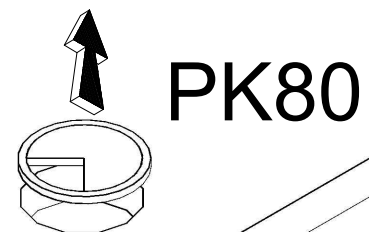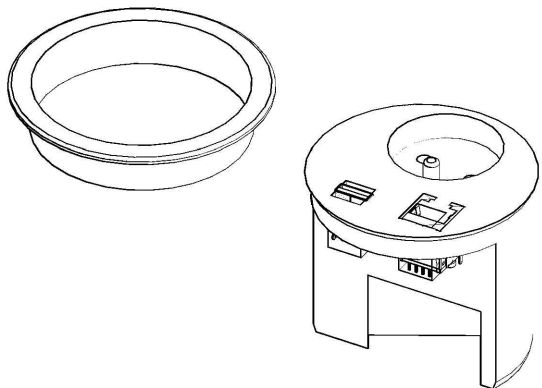






BOW/BOM BENCH


A

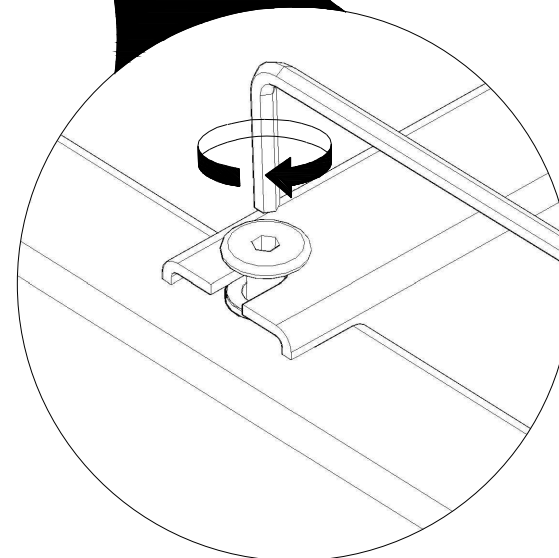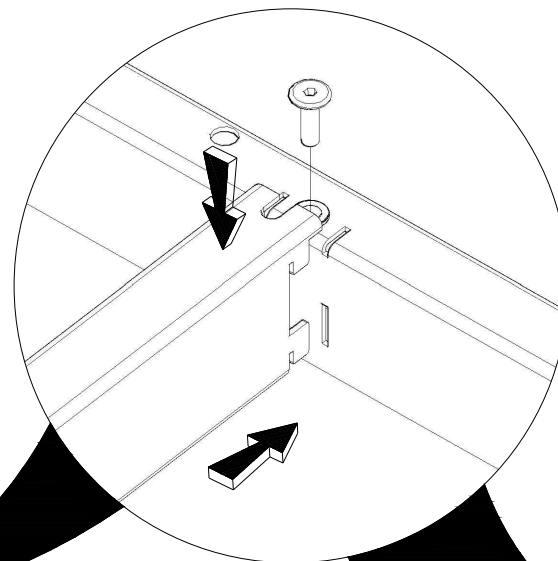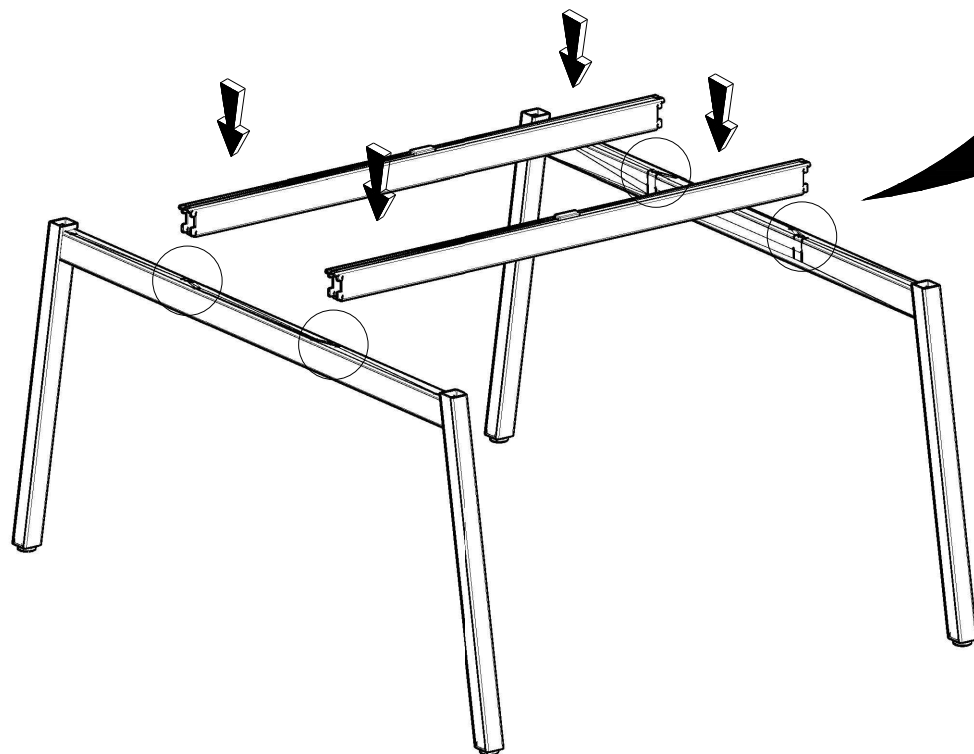



B

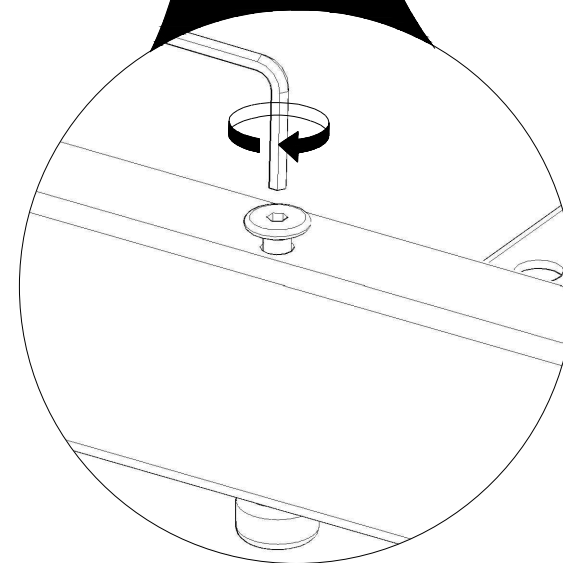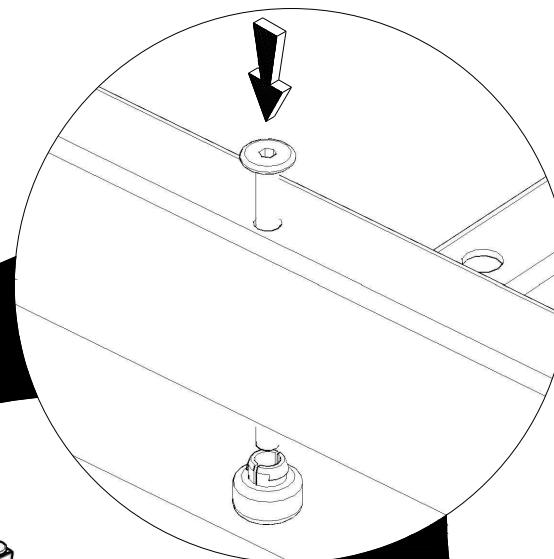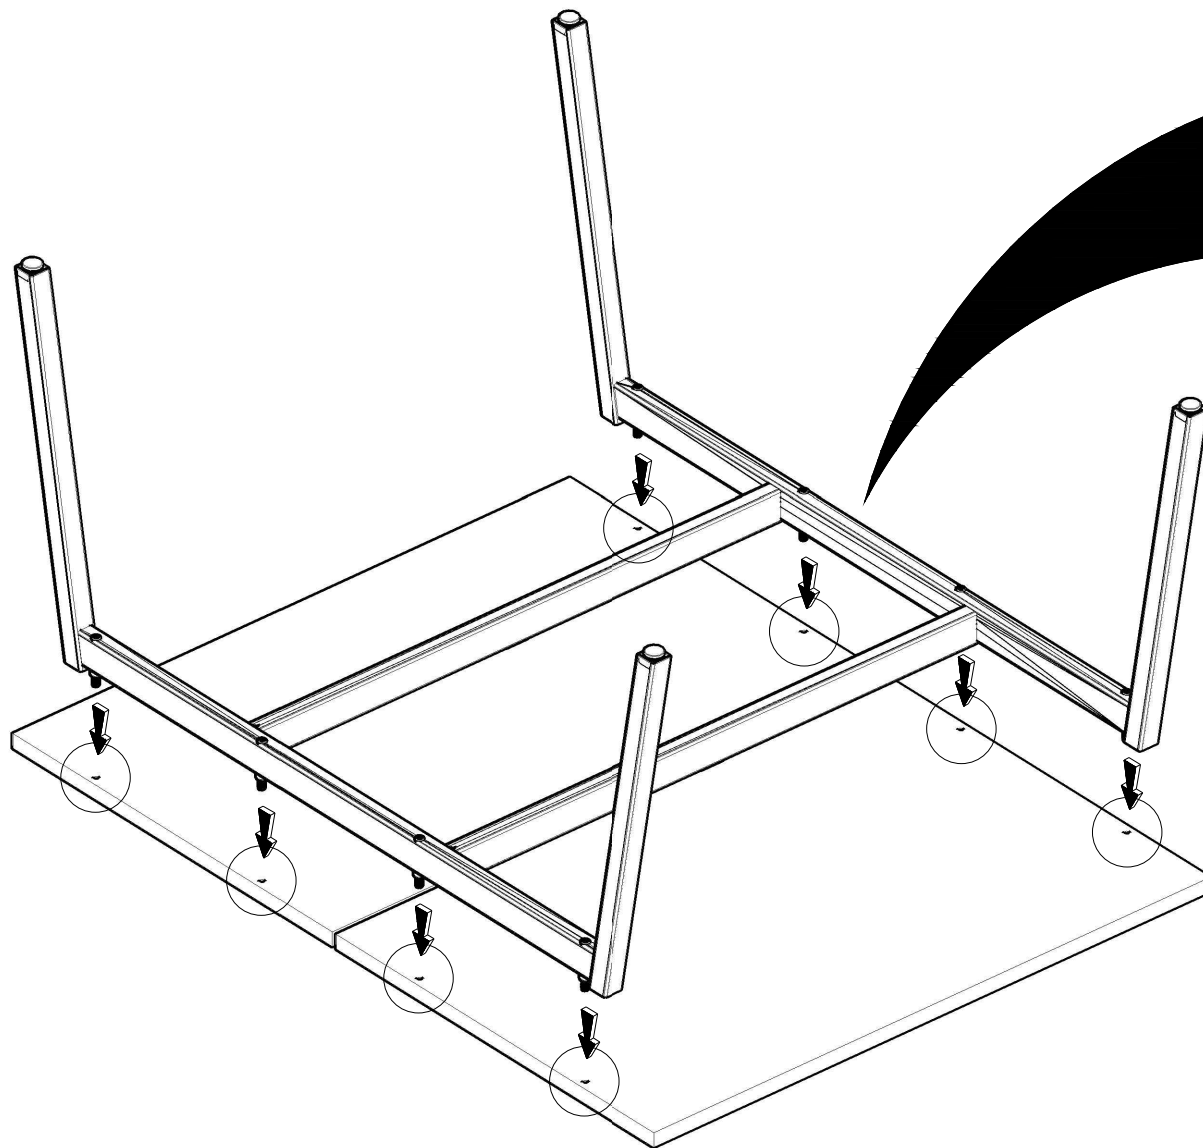


C

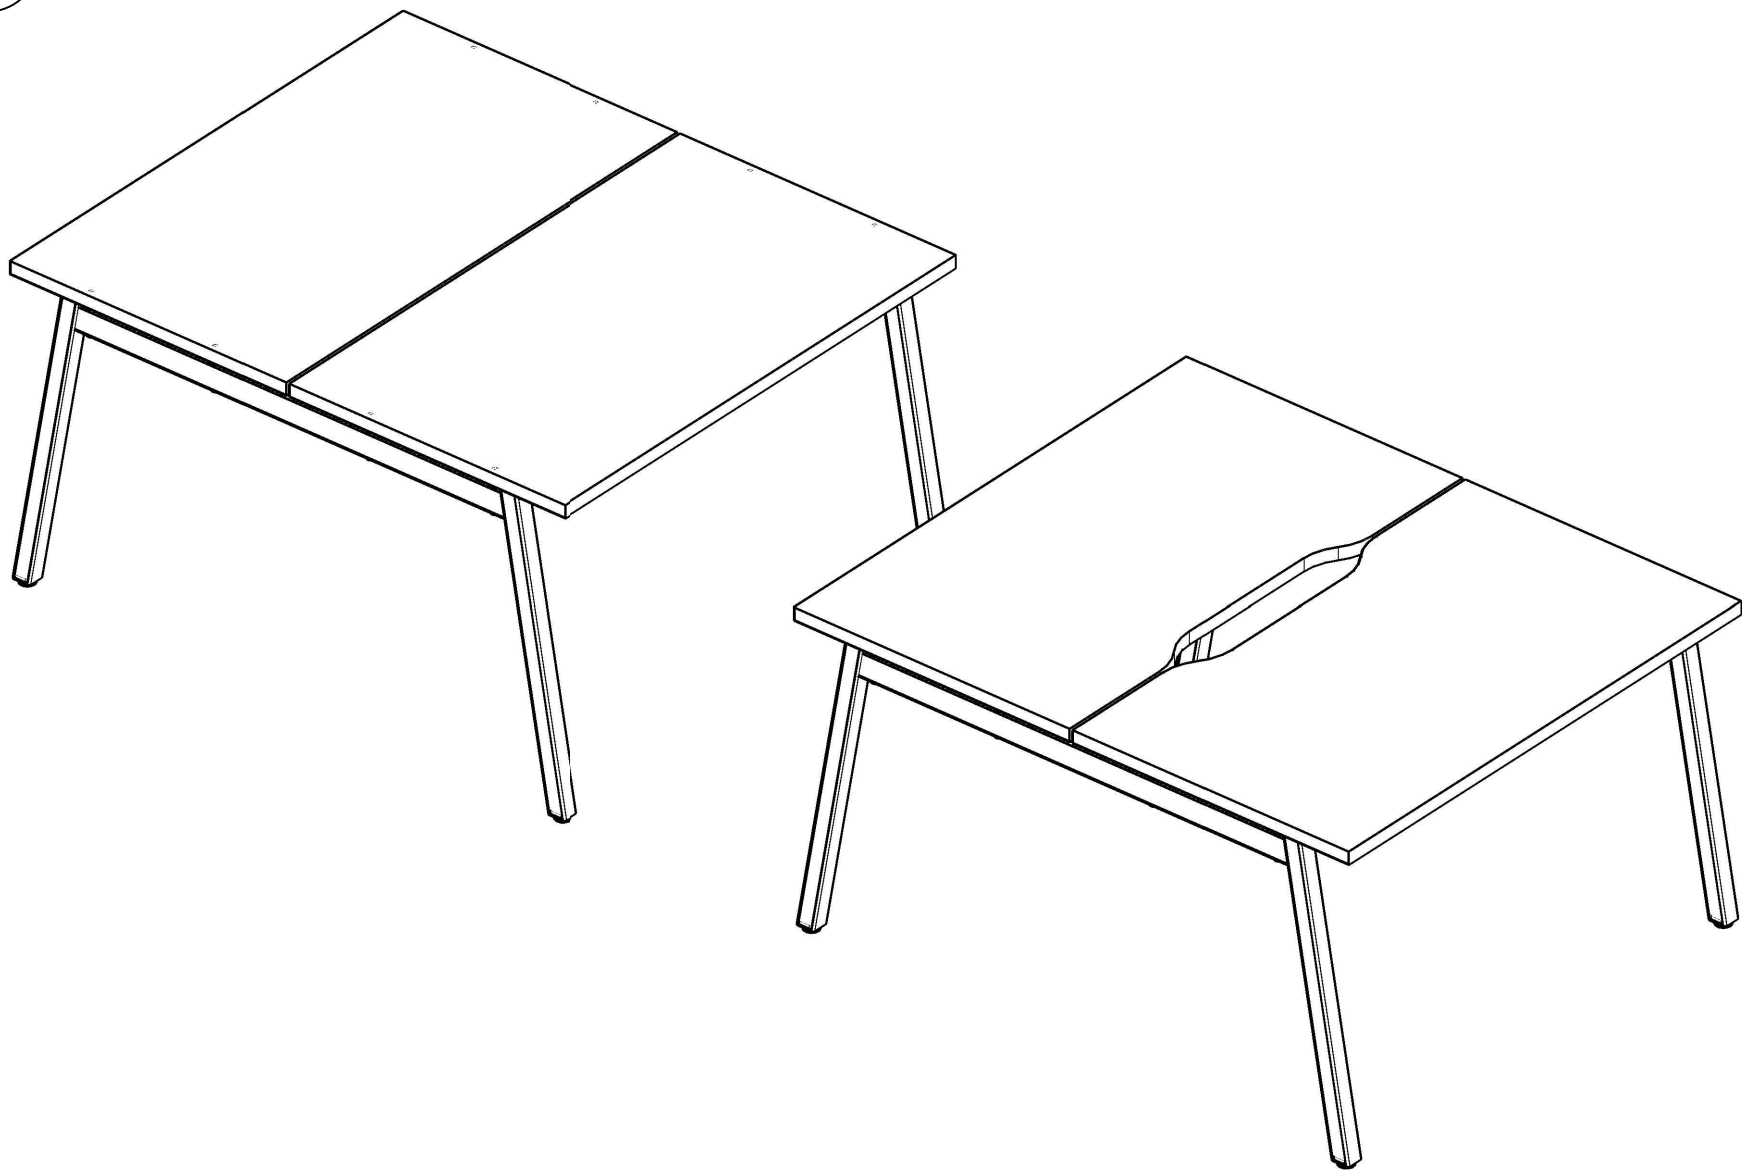


A

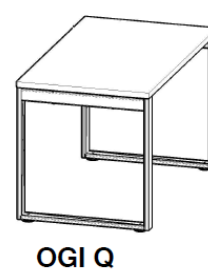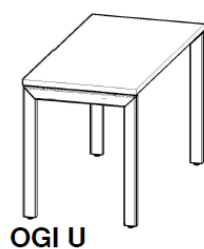


B

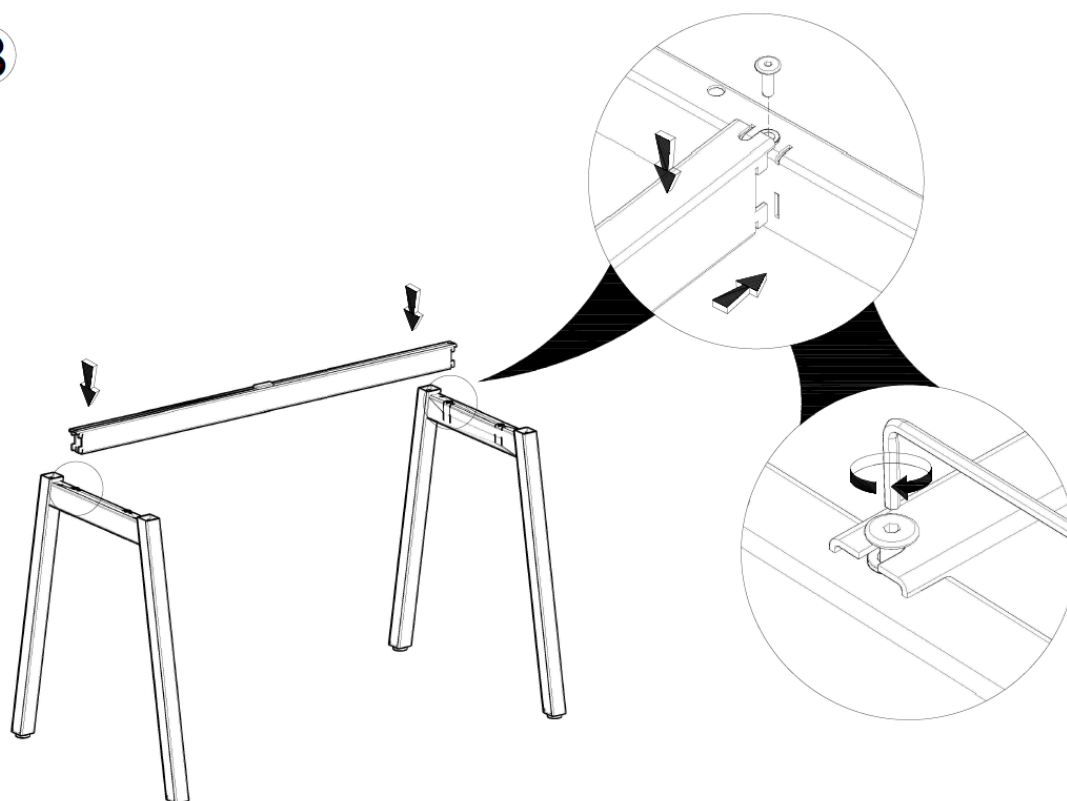


C

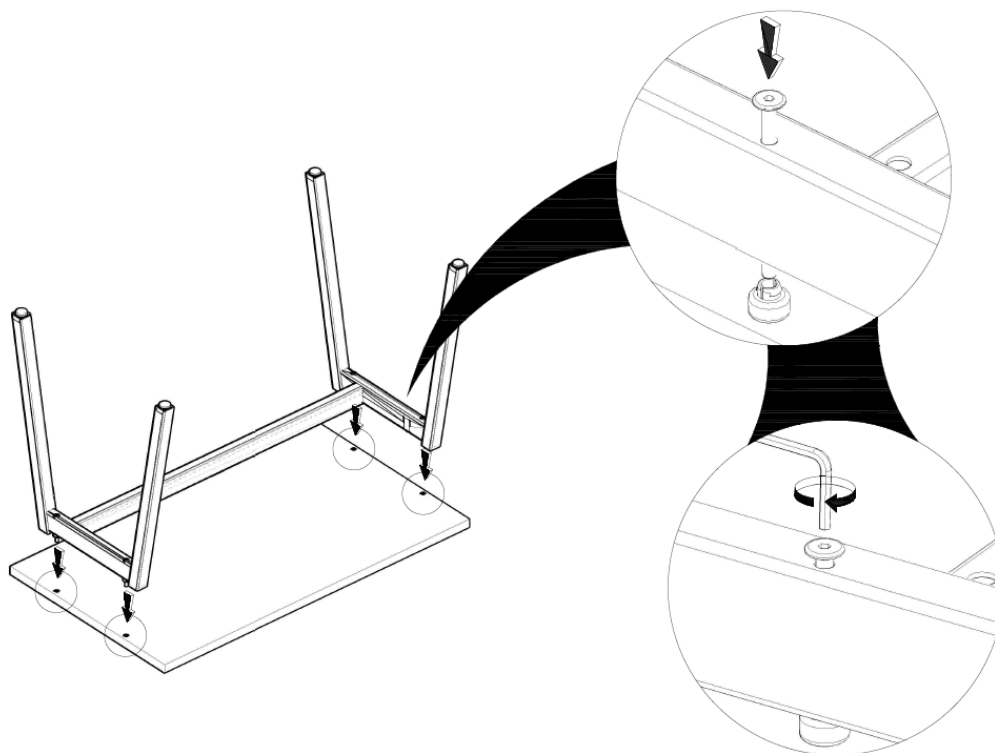

D

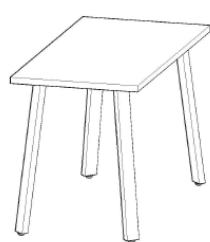

OGI A

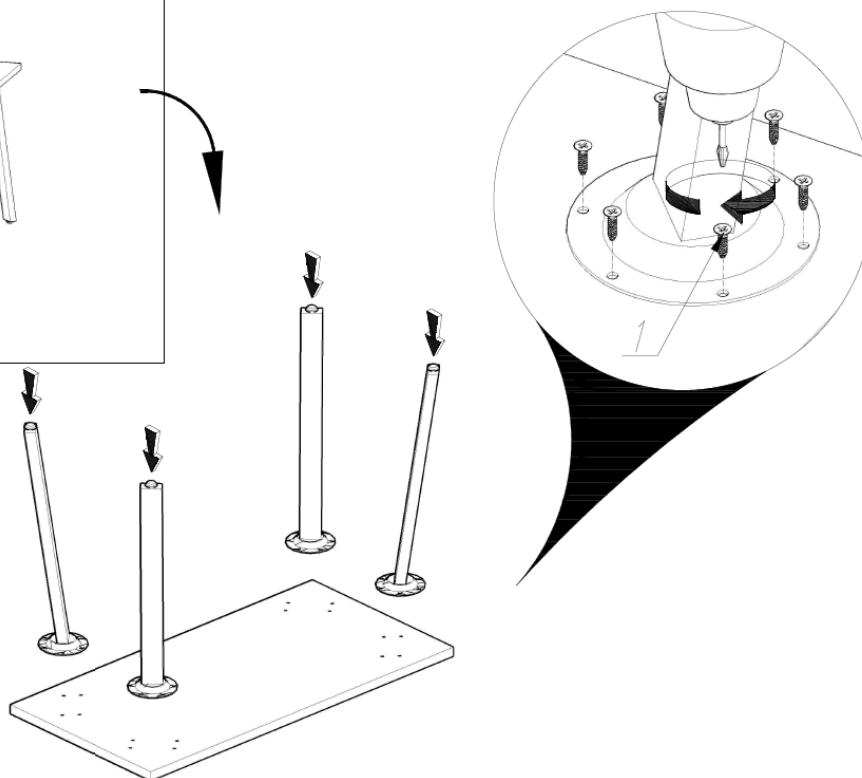




1
Ø5x20




OGI ATTACHMENT

A


OGI M
OGI W
OGI Q
OGI U
OGI Y

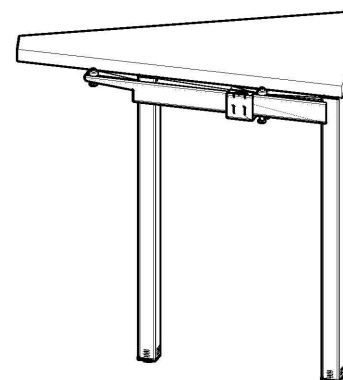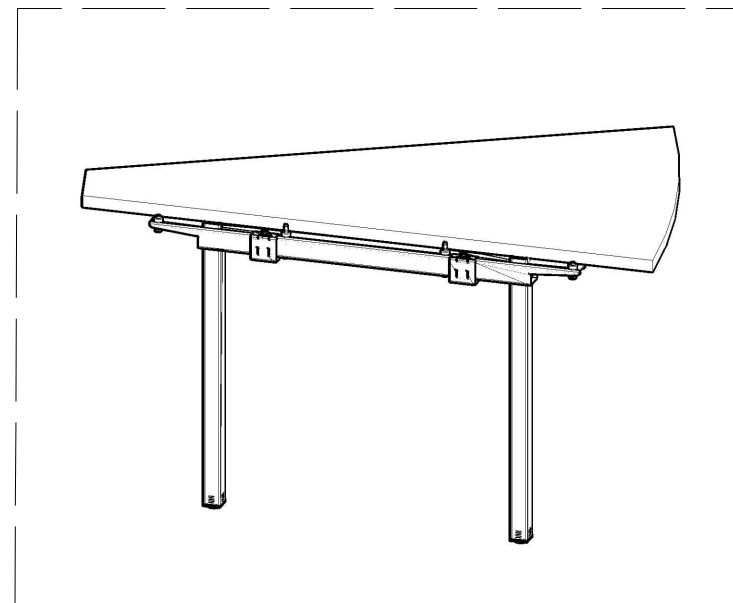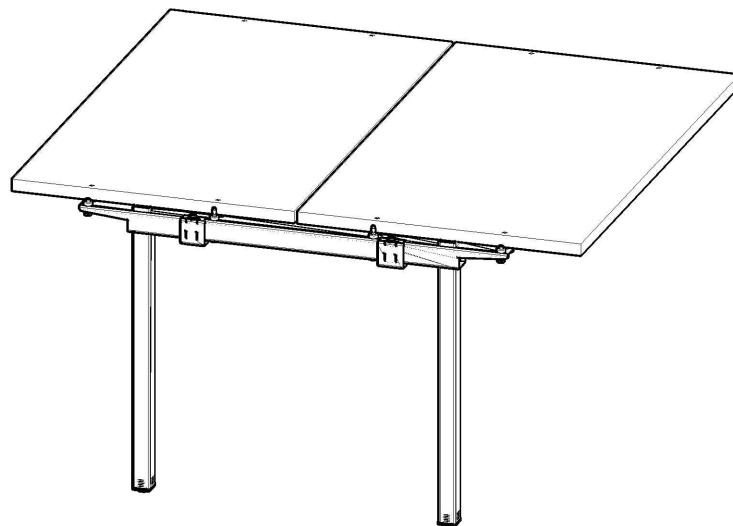




B

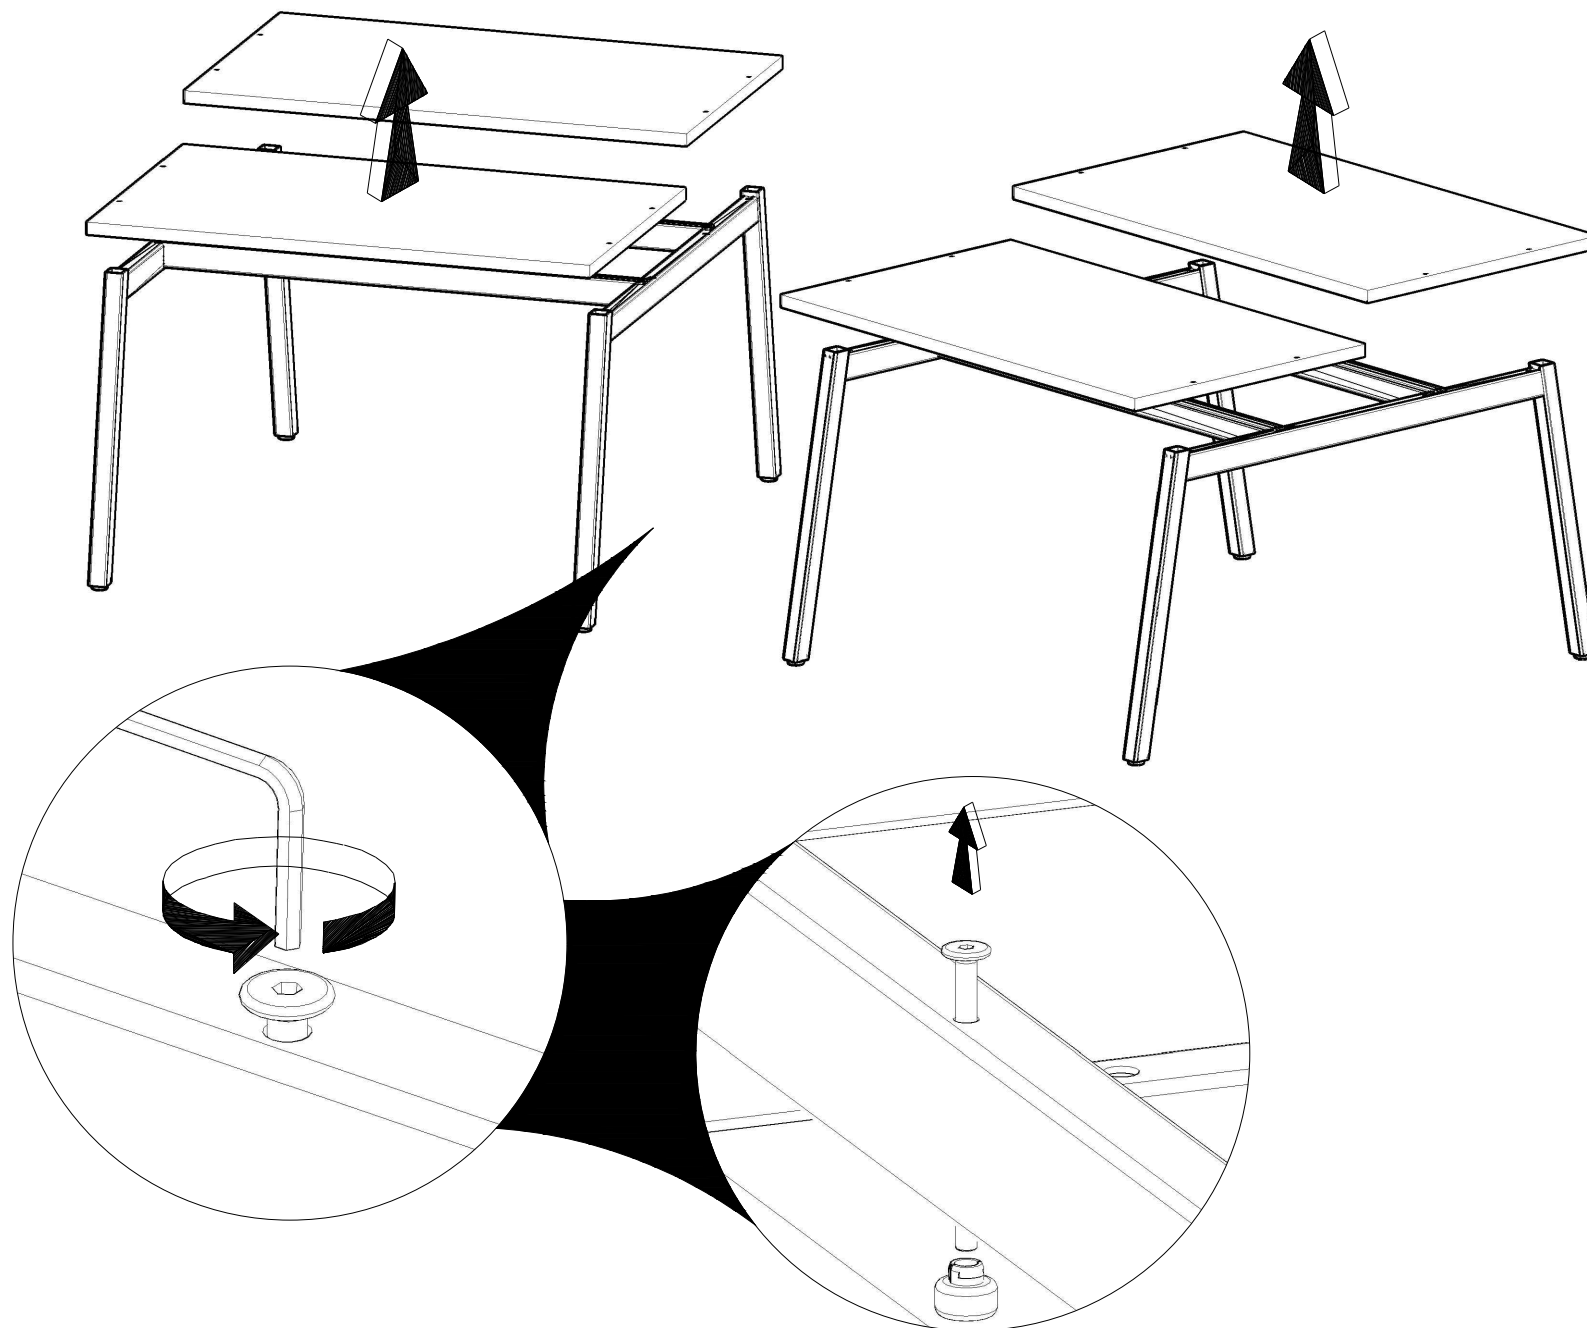


C

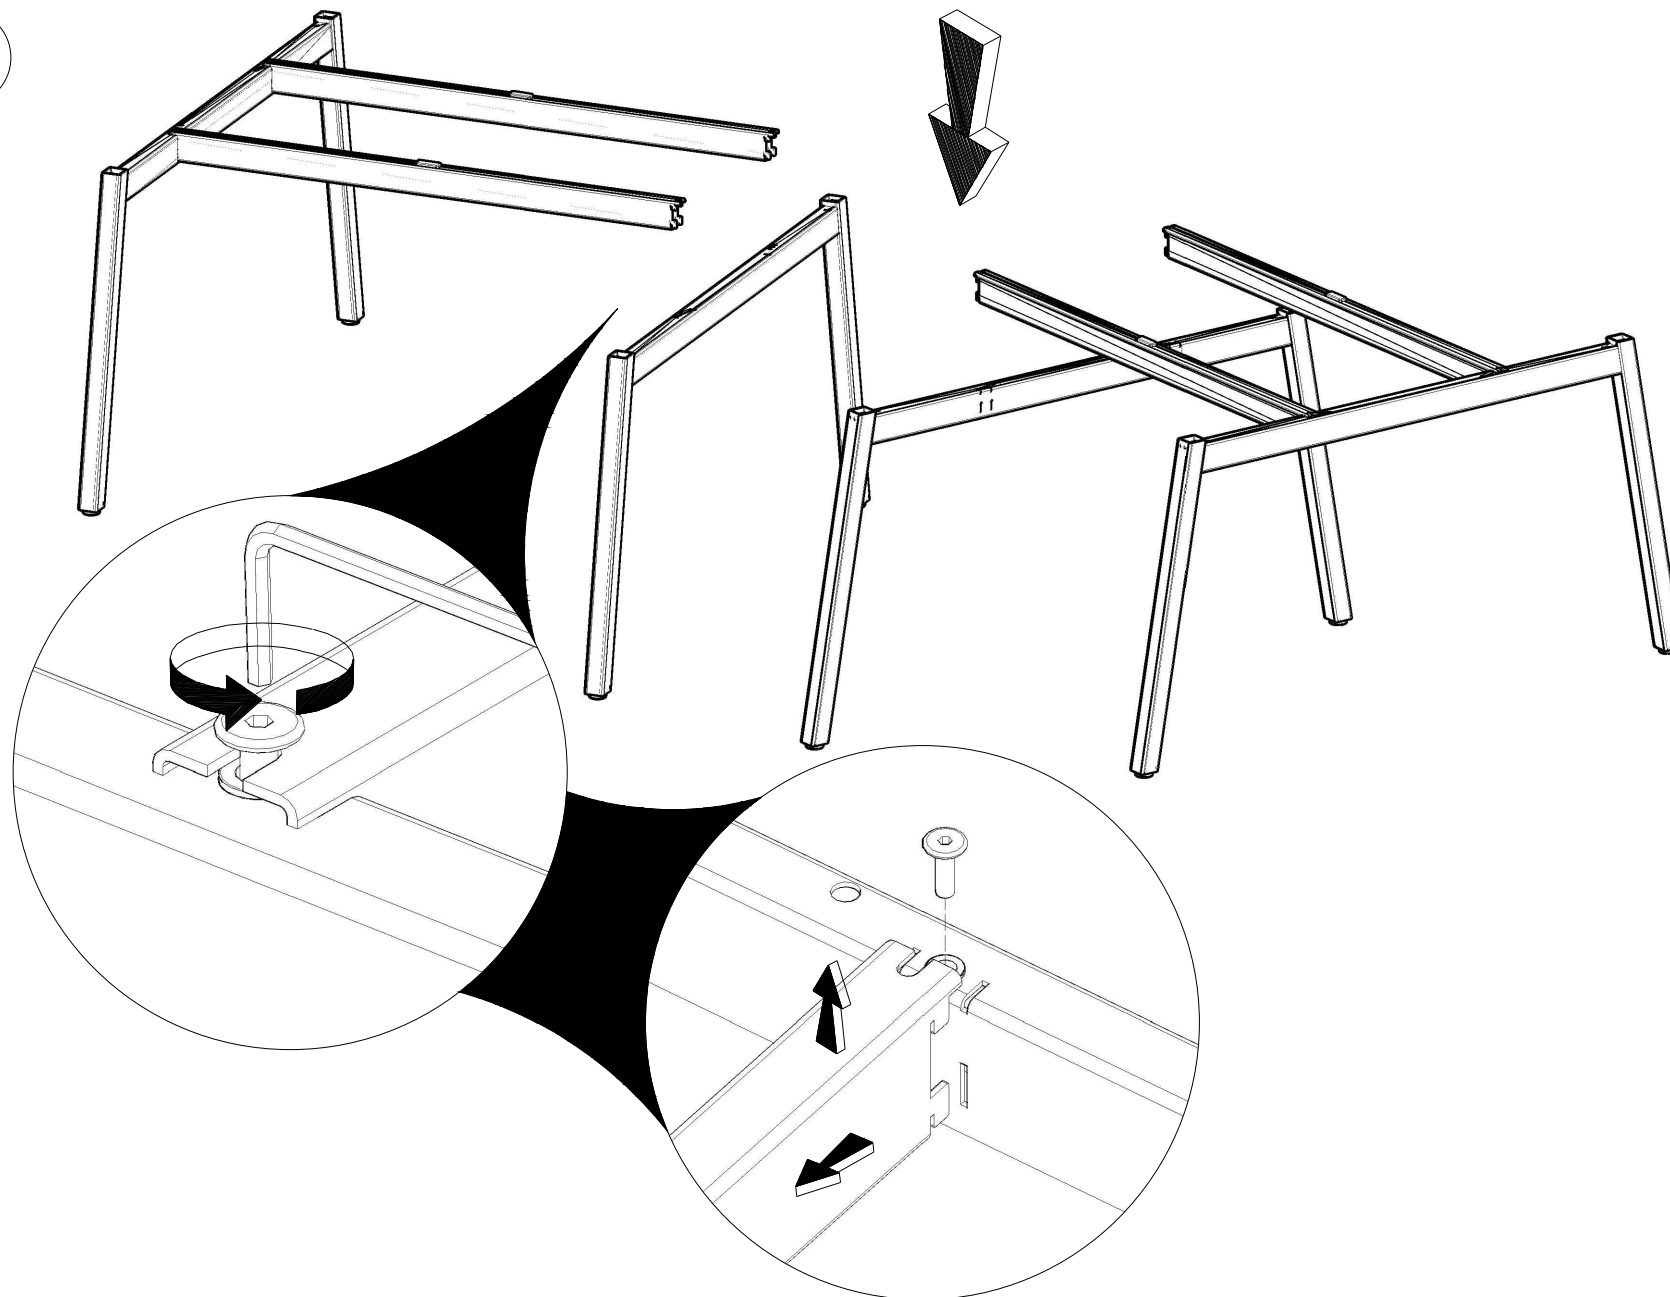


D

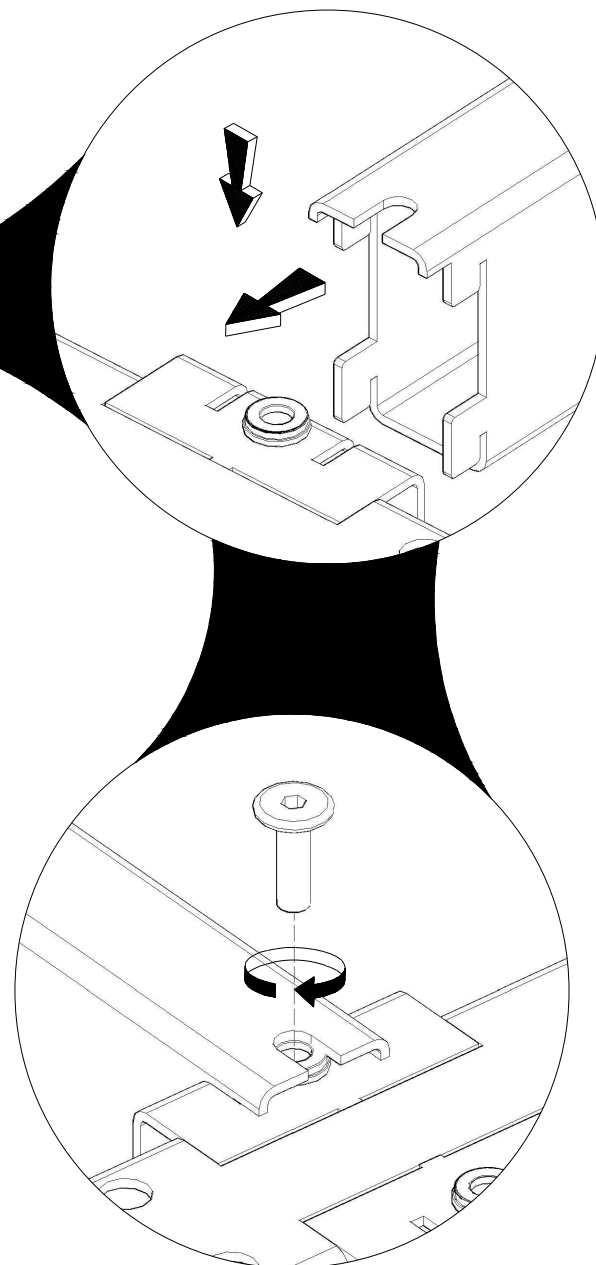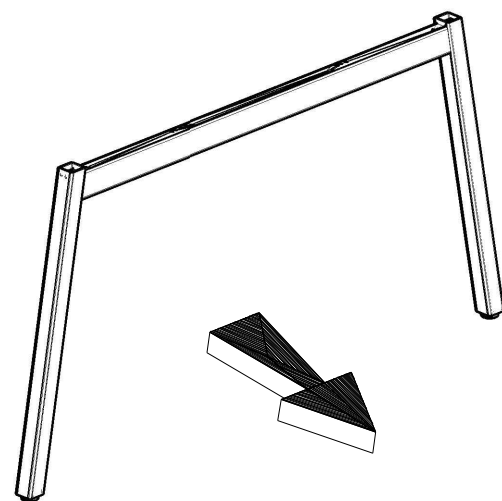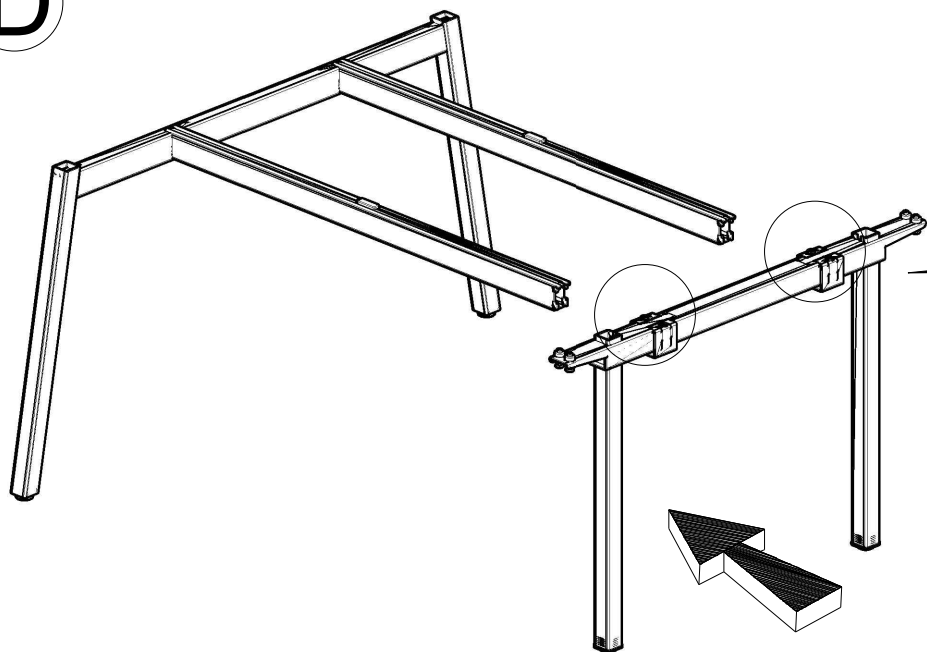



E

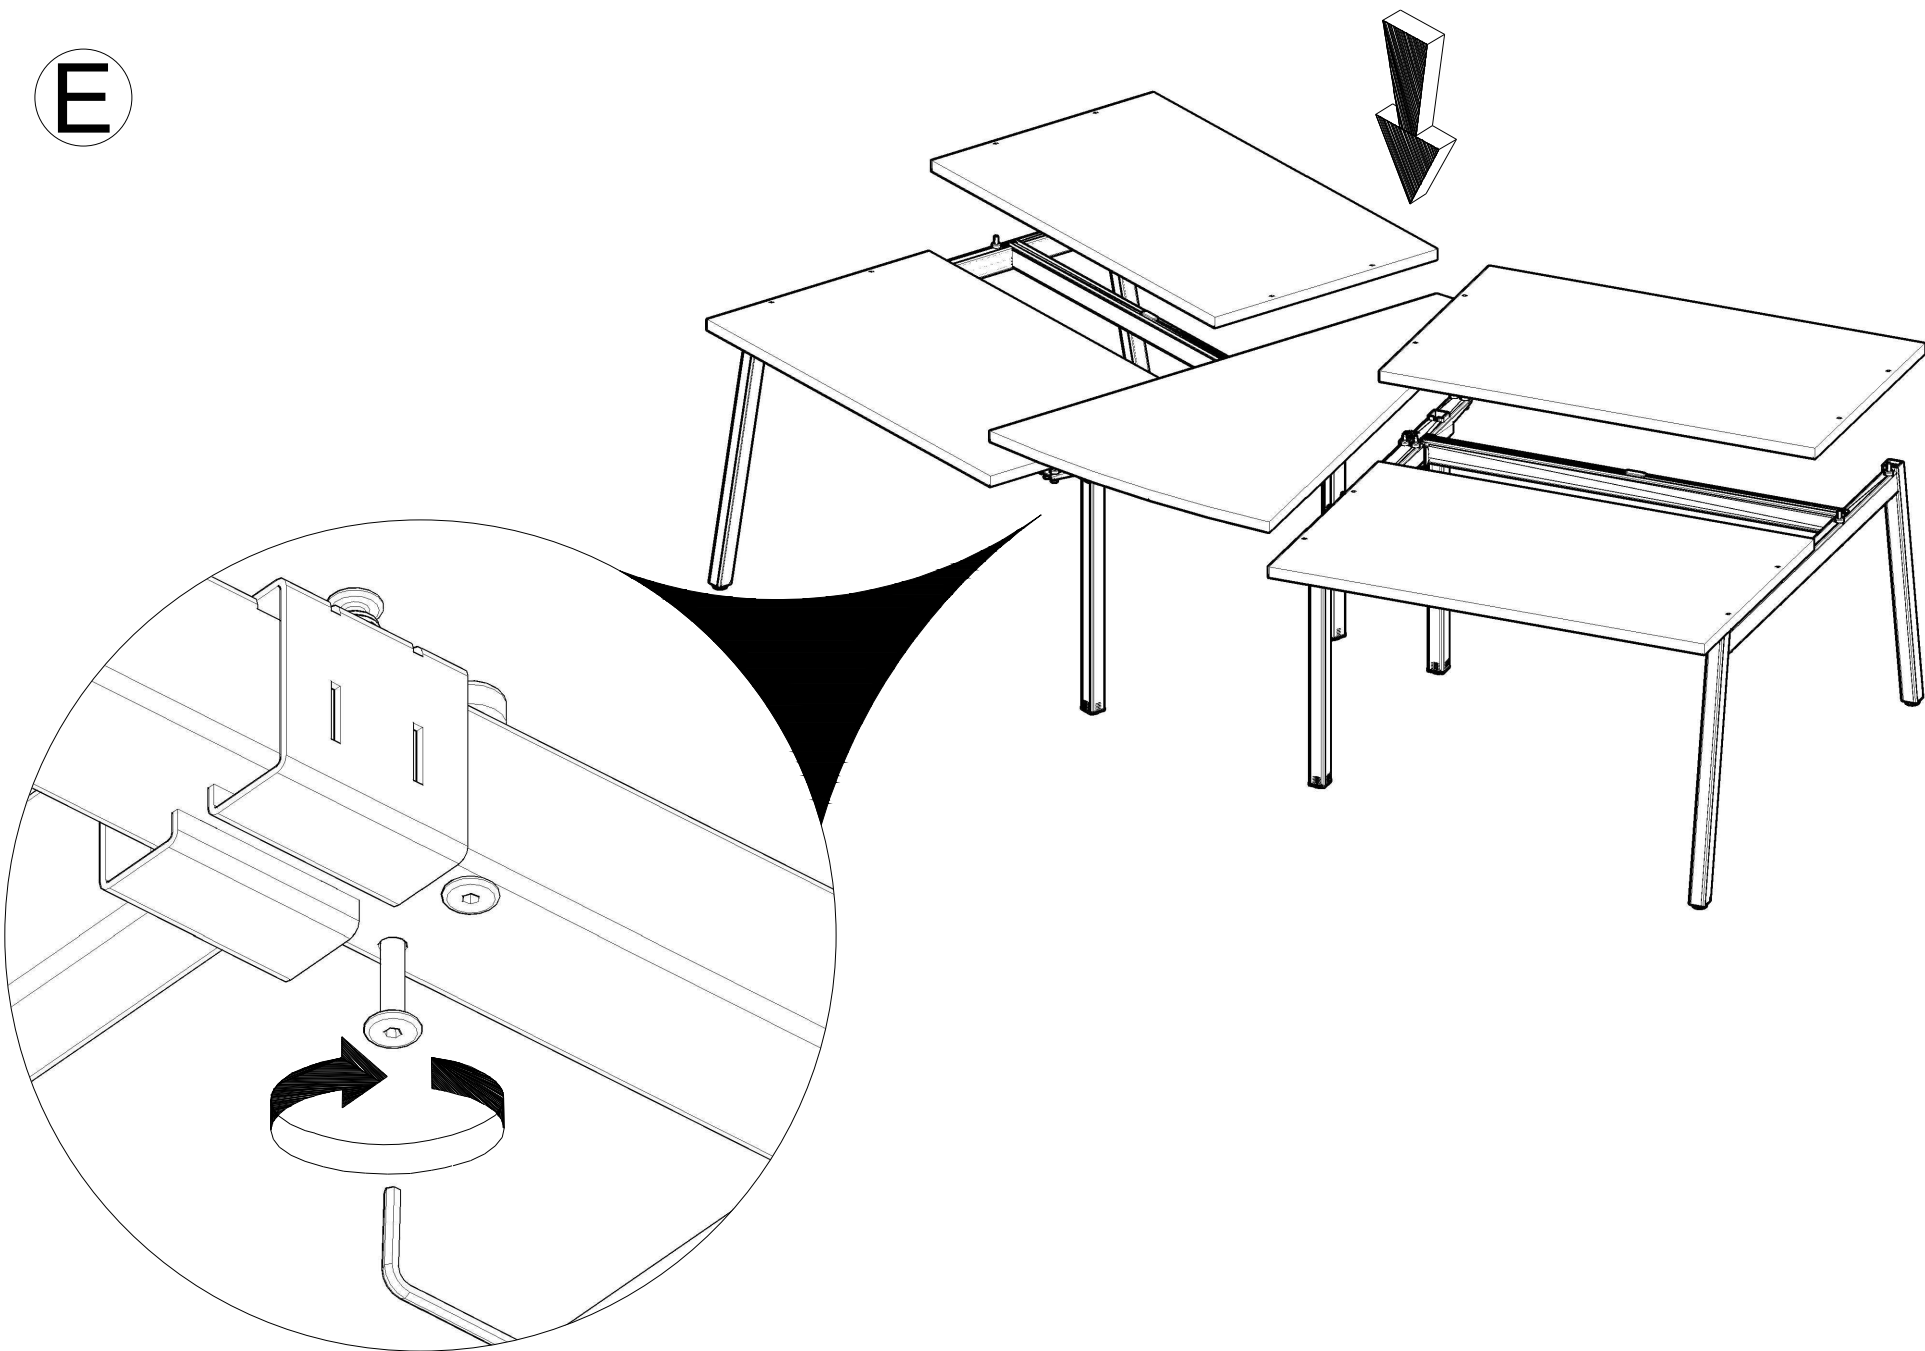

F

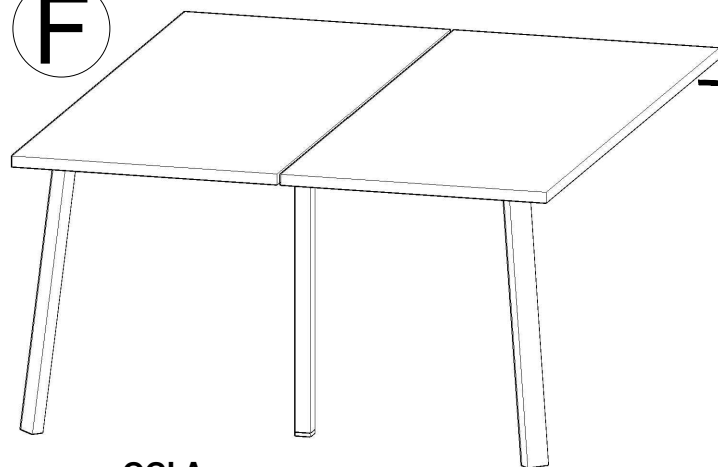

OGI A

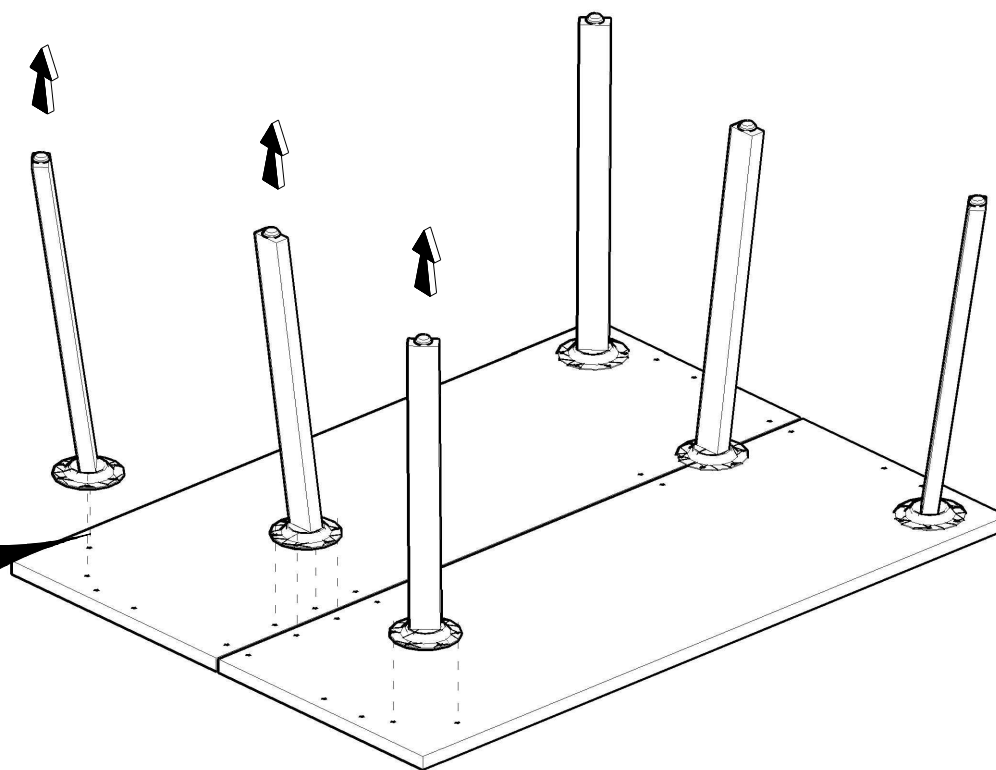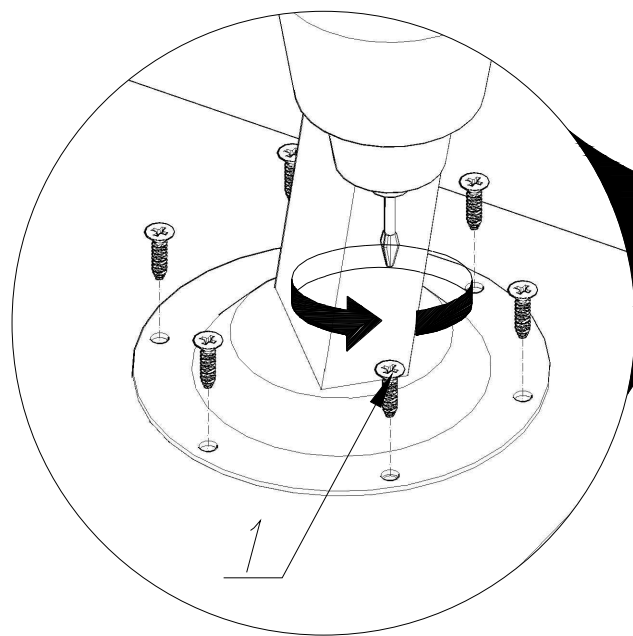

G

