




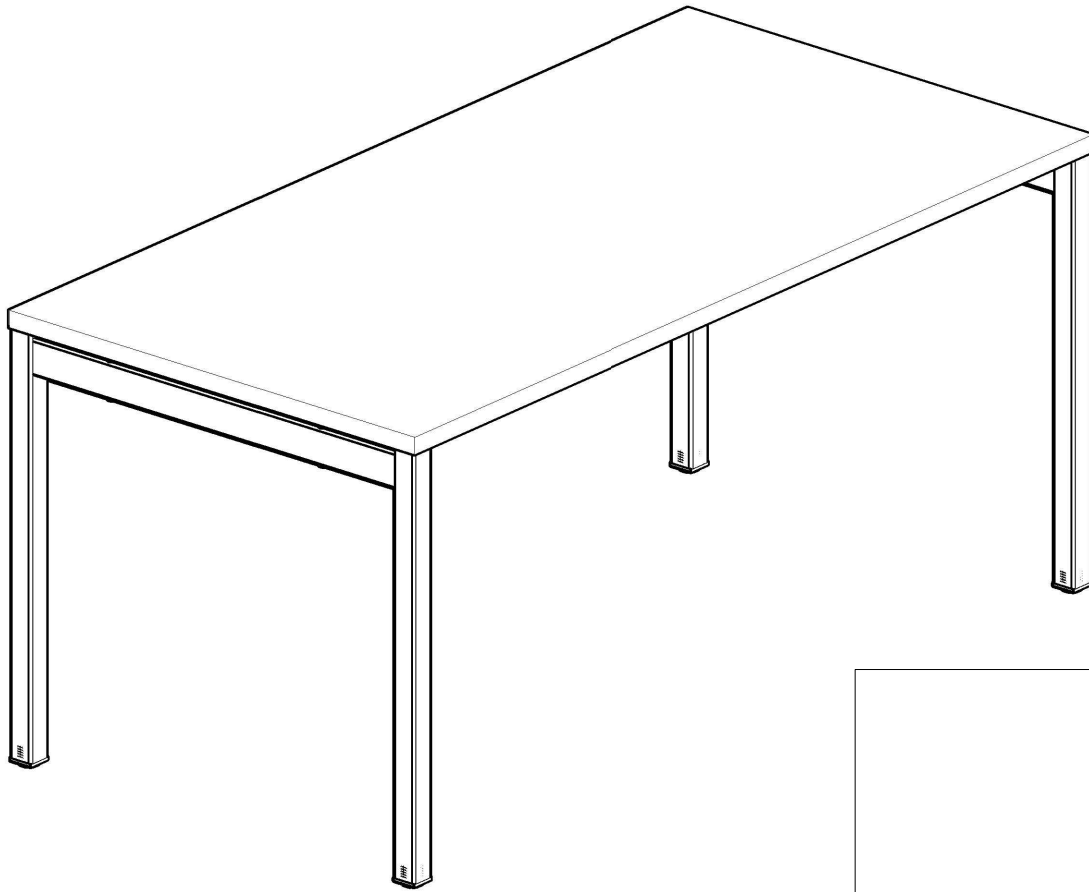


# OGI SLIDE

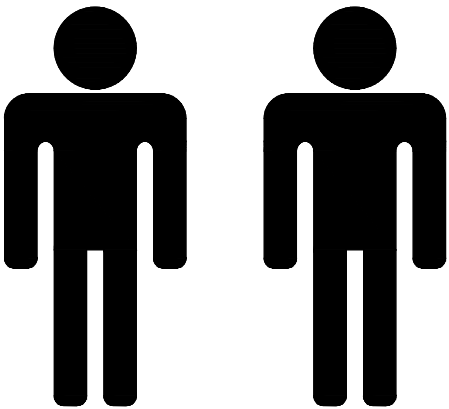

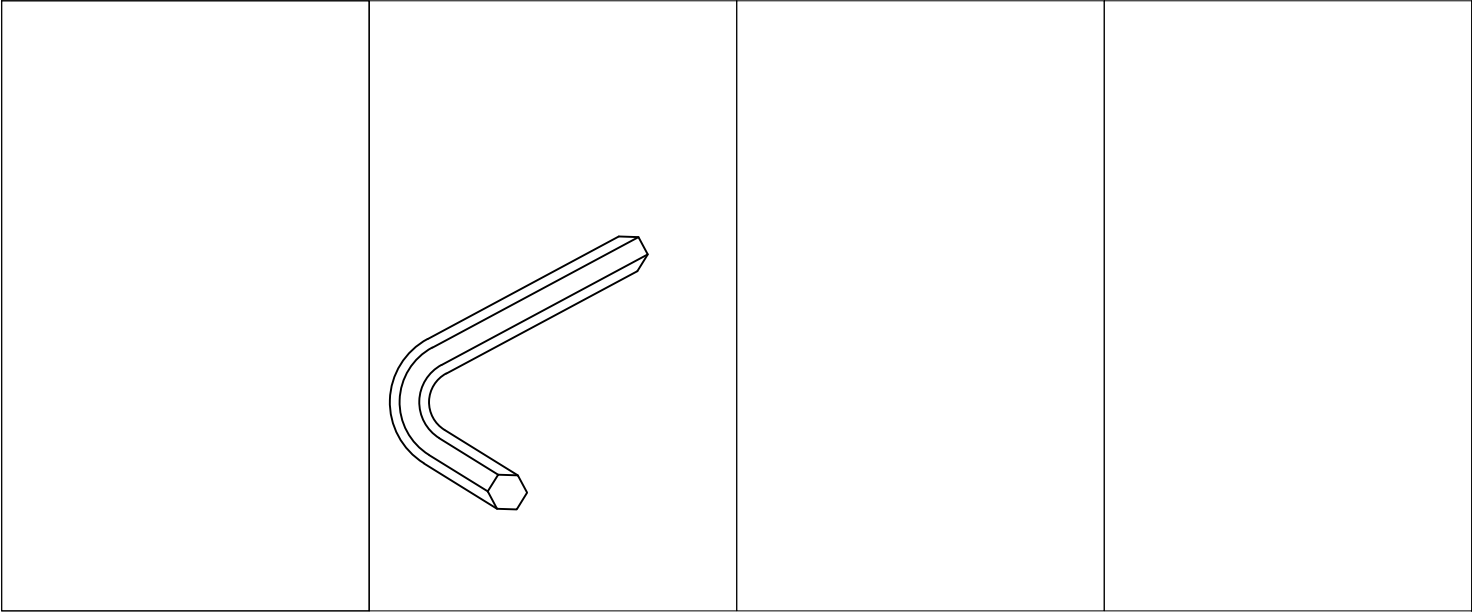


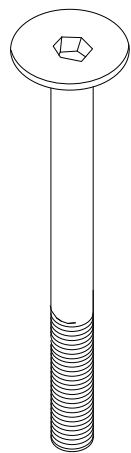

M6x68

**4x**


**1**

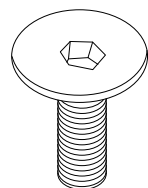

M6x10


**2x**

**2**

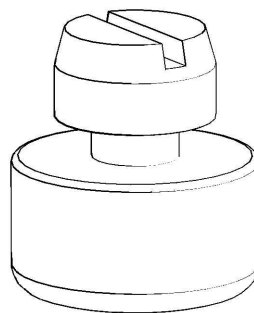


**4x**

**3**

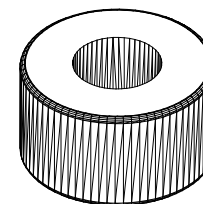


**2x**

**4**

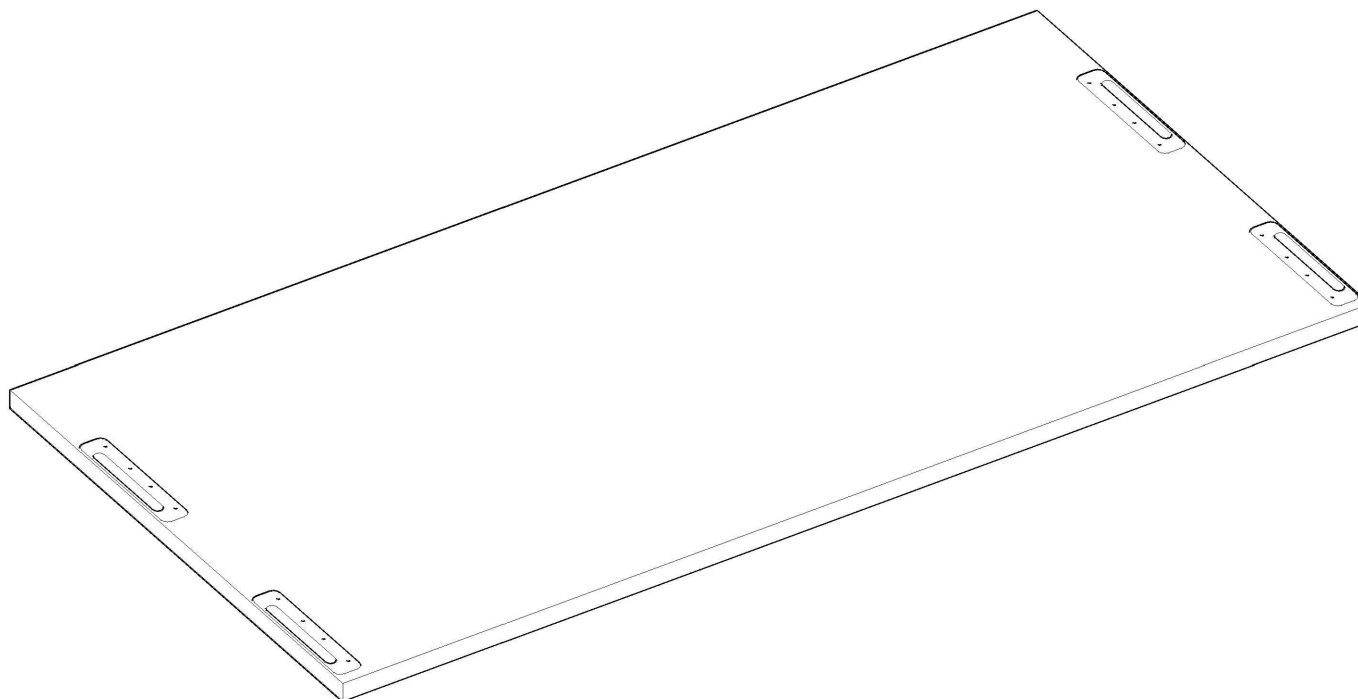


**3**


**5**

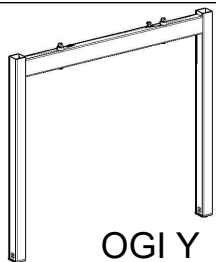


OGI Y

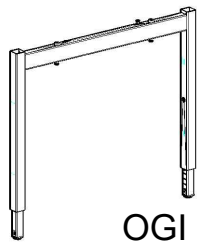


OGI Y

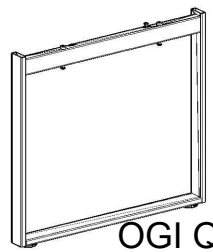


OGI Q

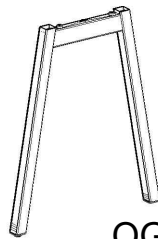


OGI M


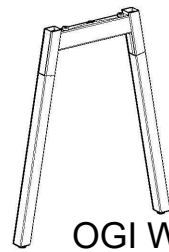




OGI W


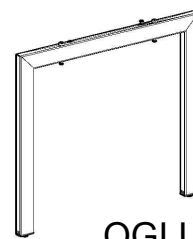


OGI U

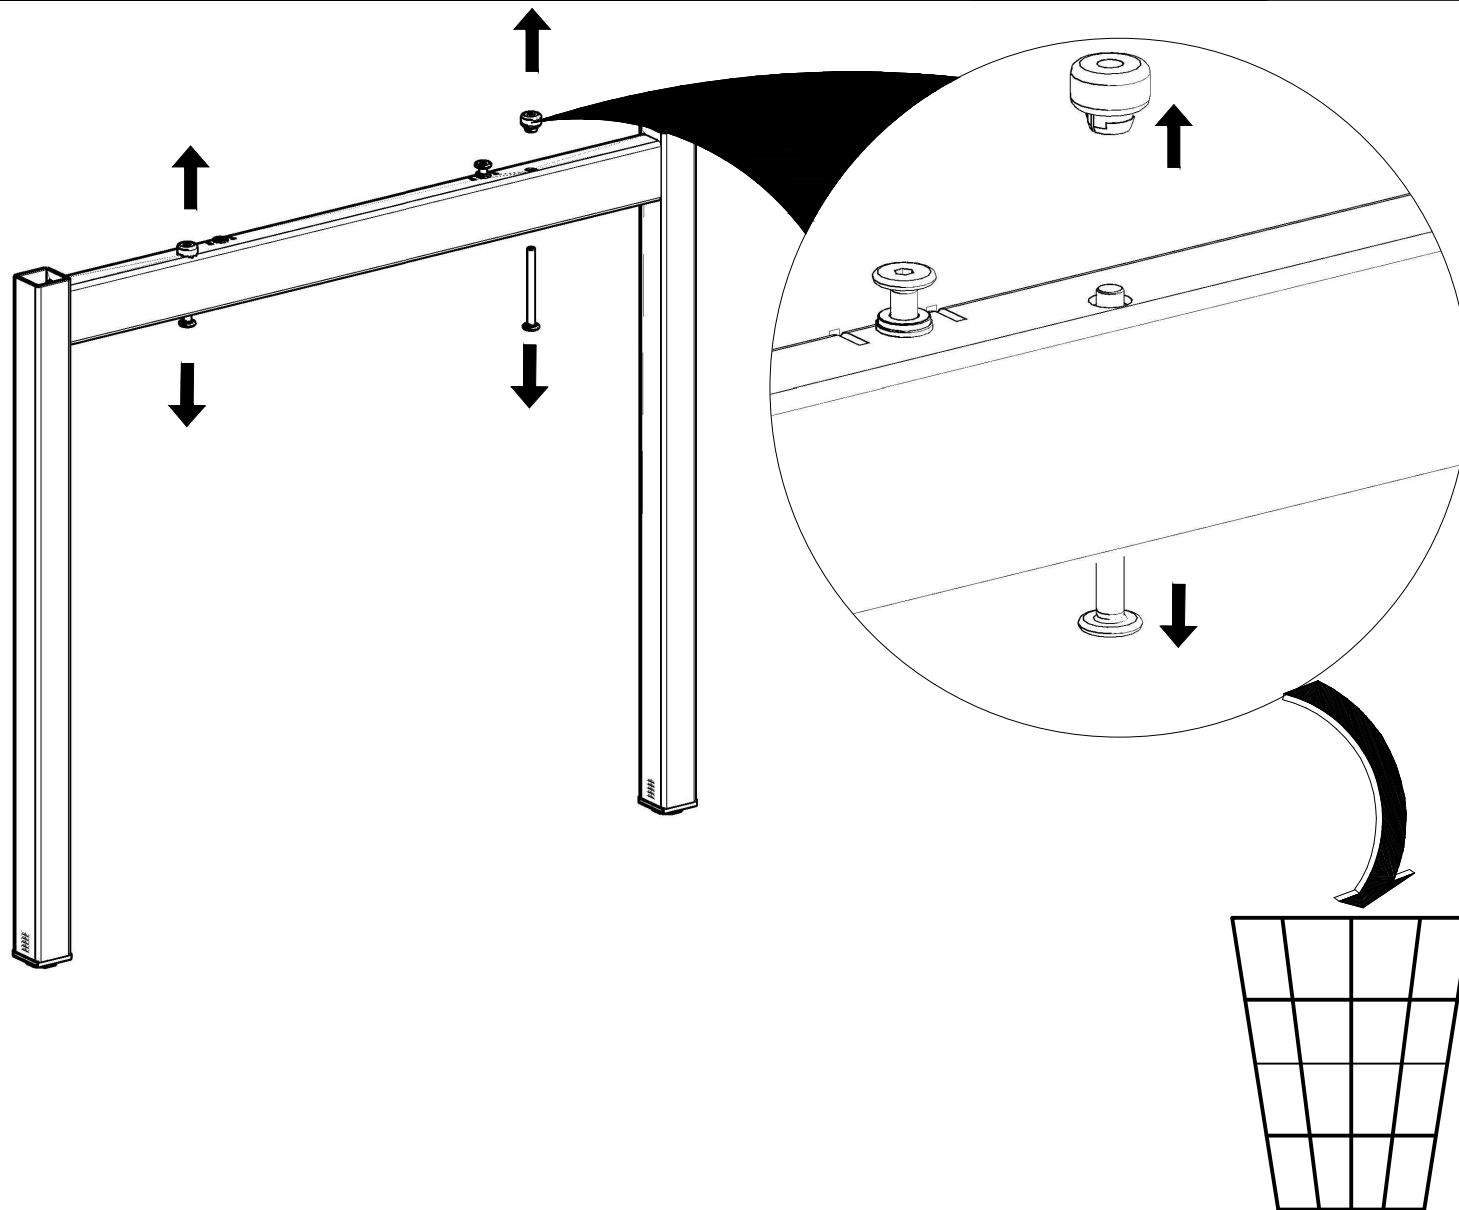


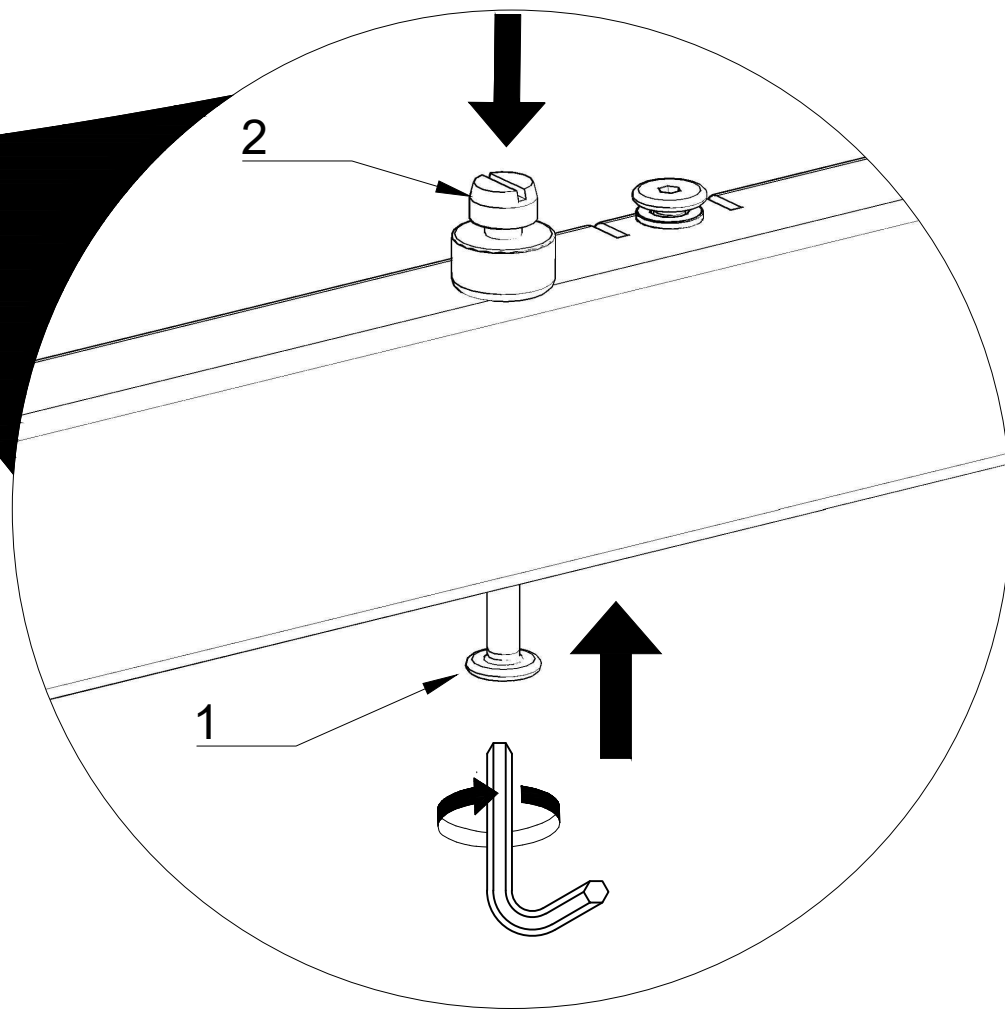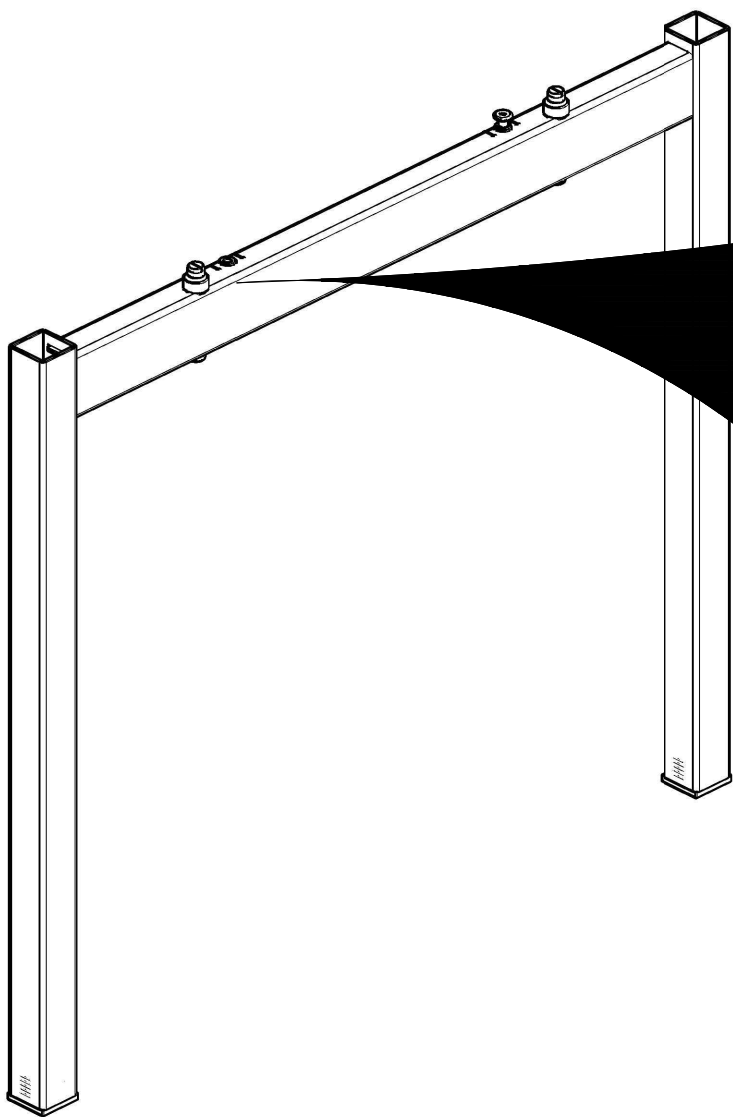


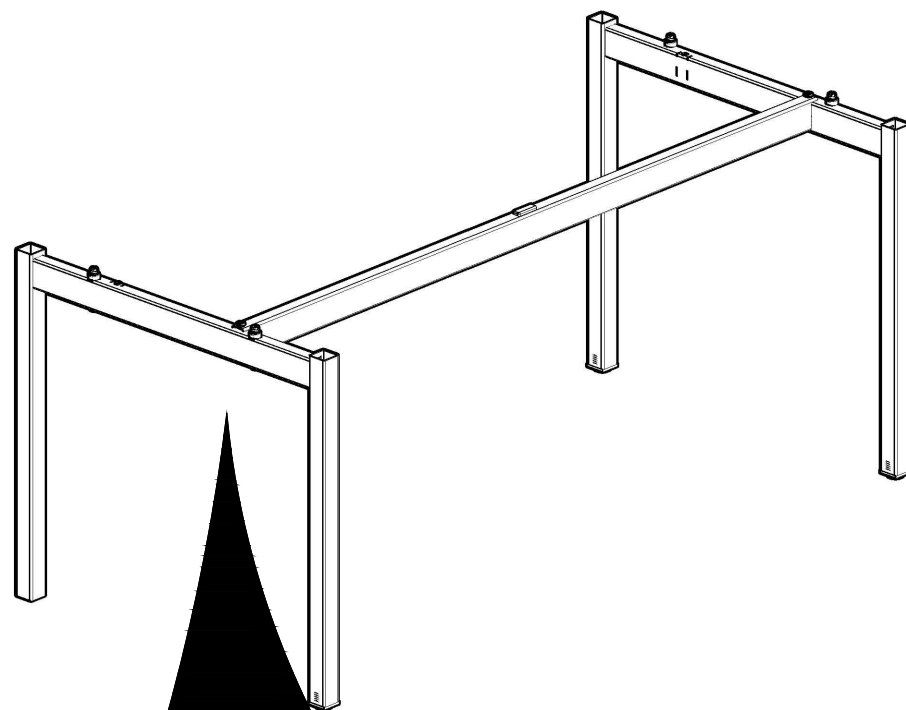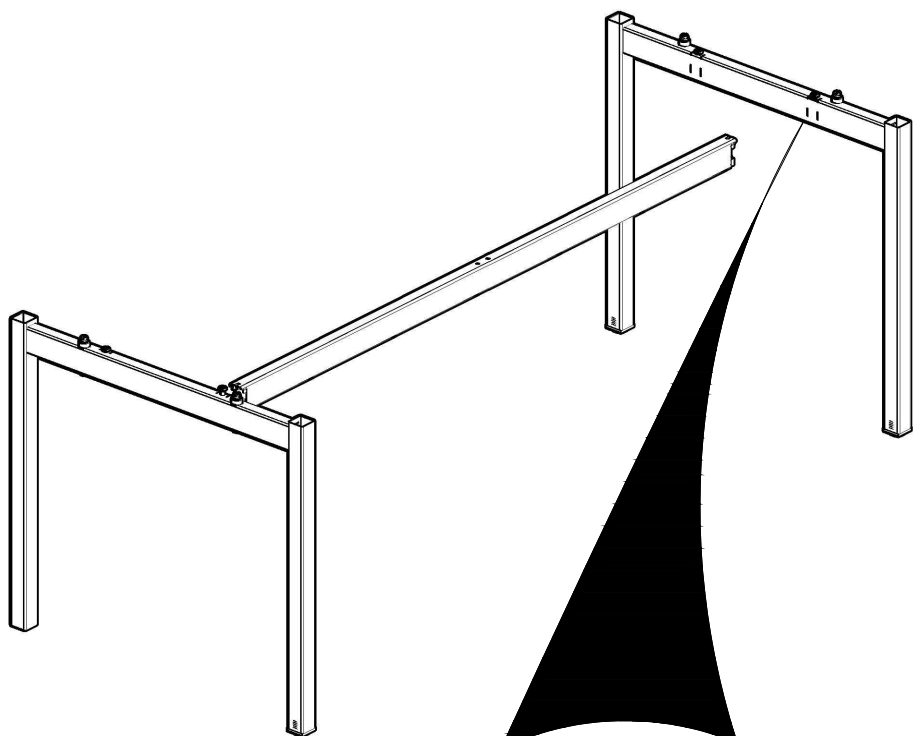

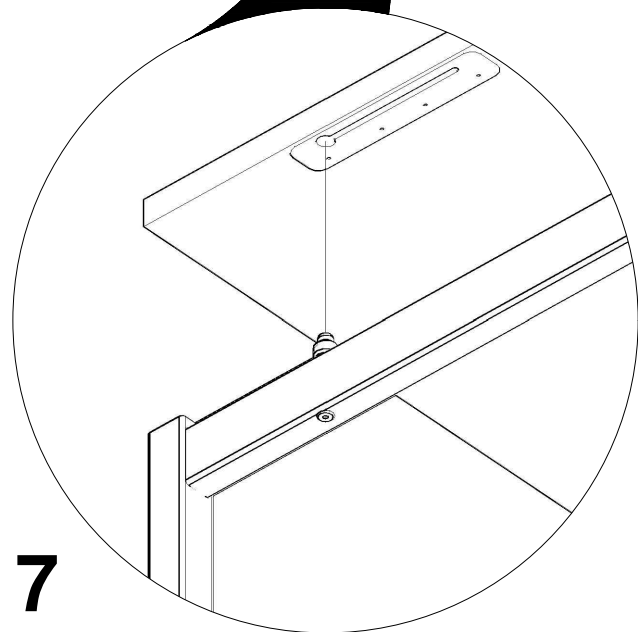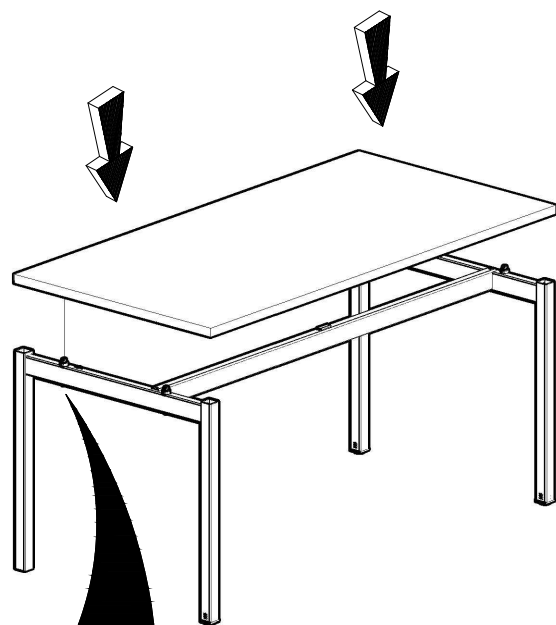


7

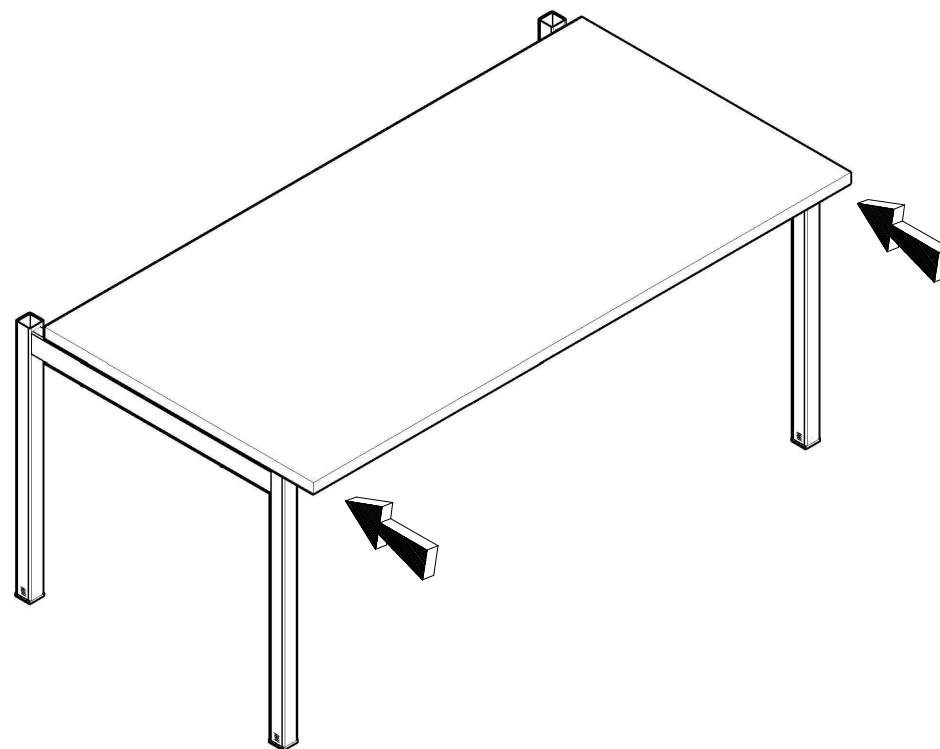

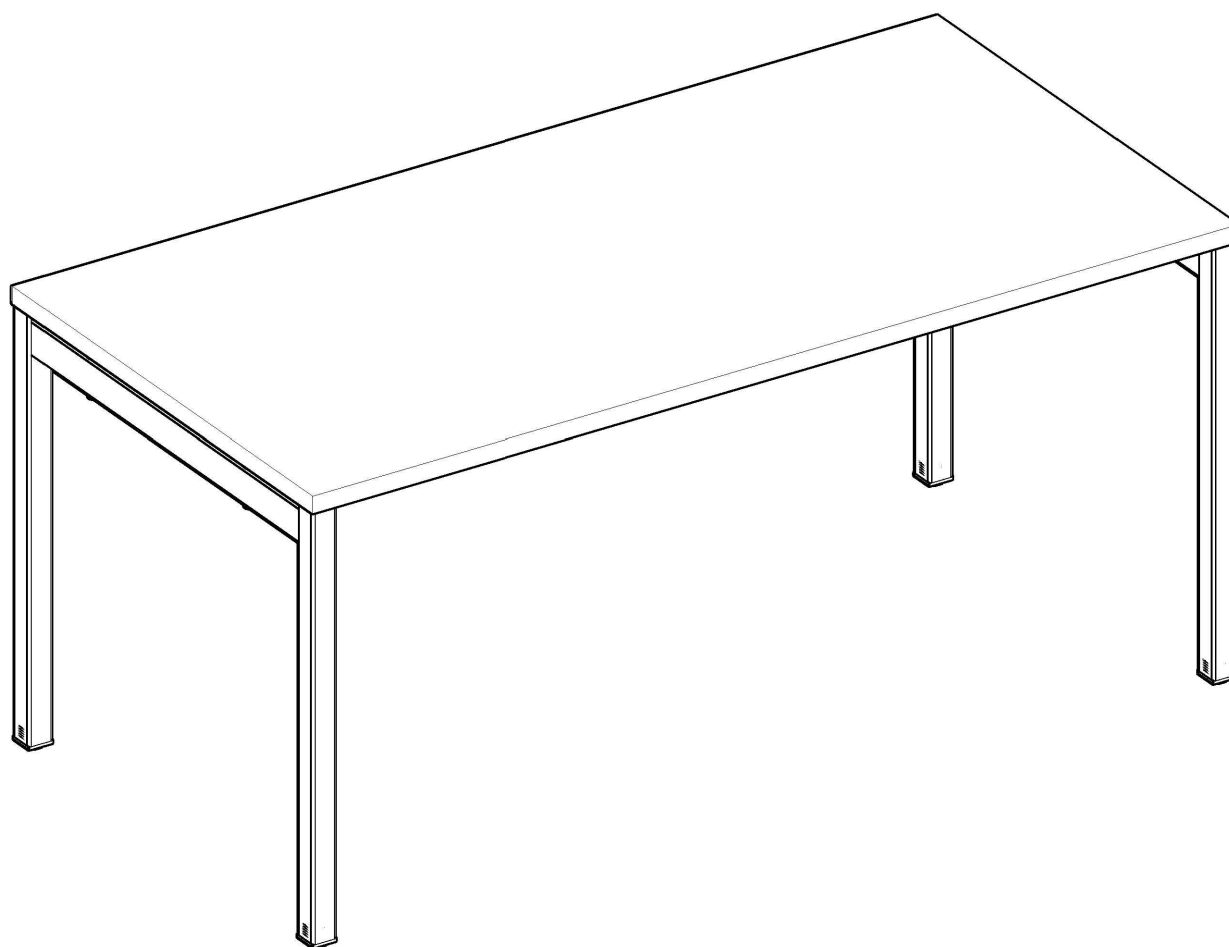


# OGI SLIDE


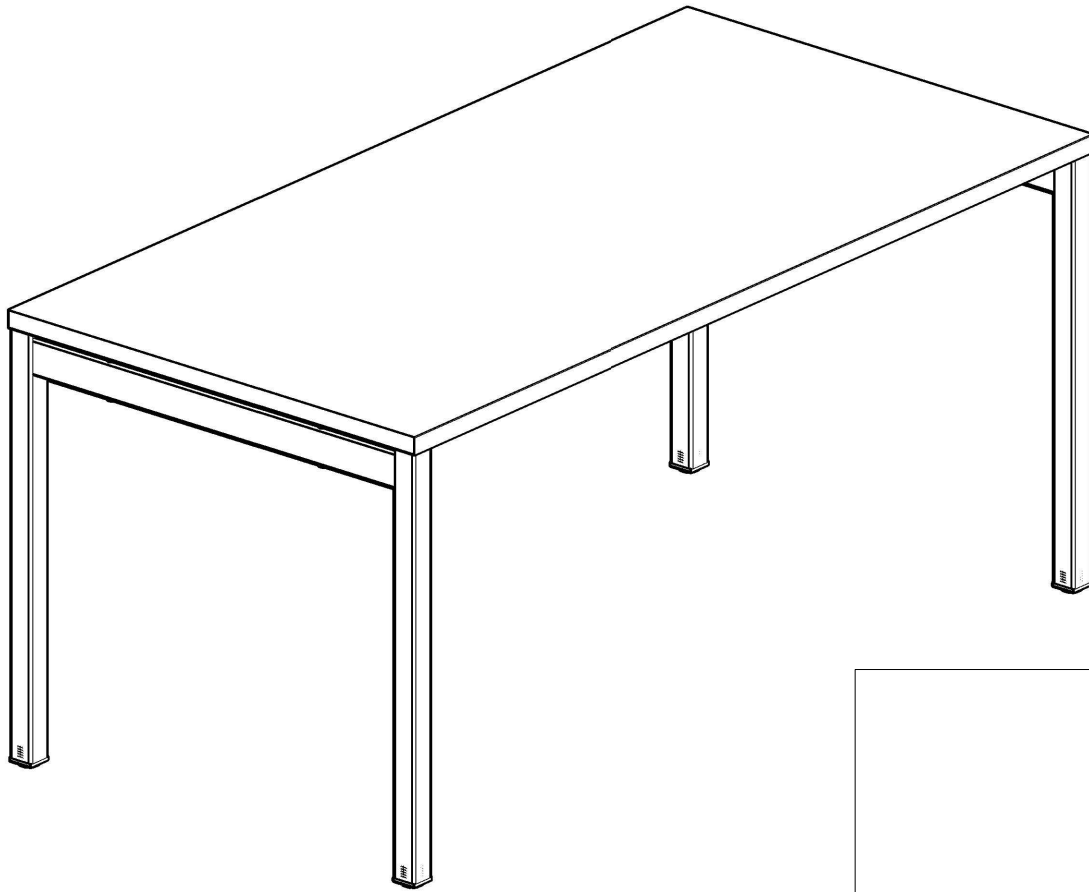



BOX 1

BOX 2

BOX 3

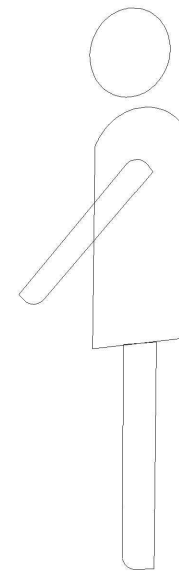

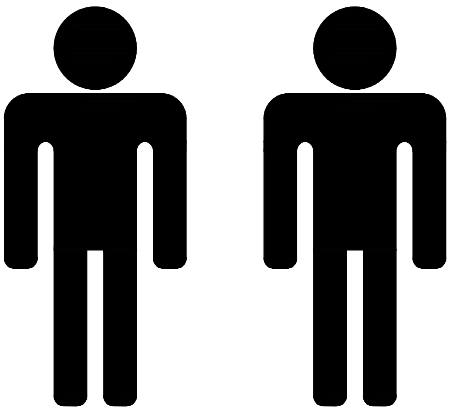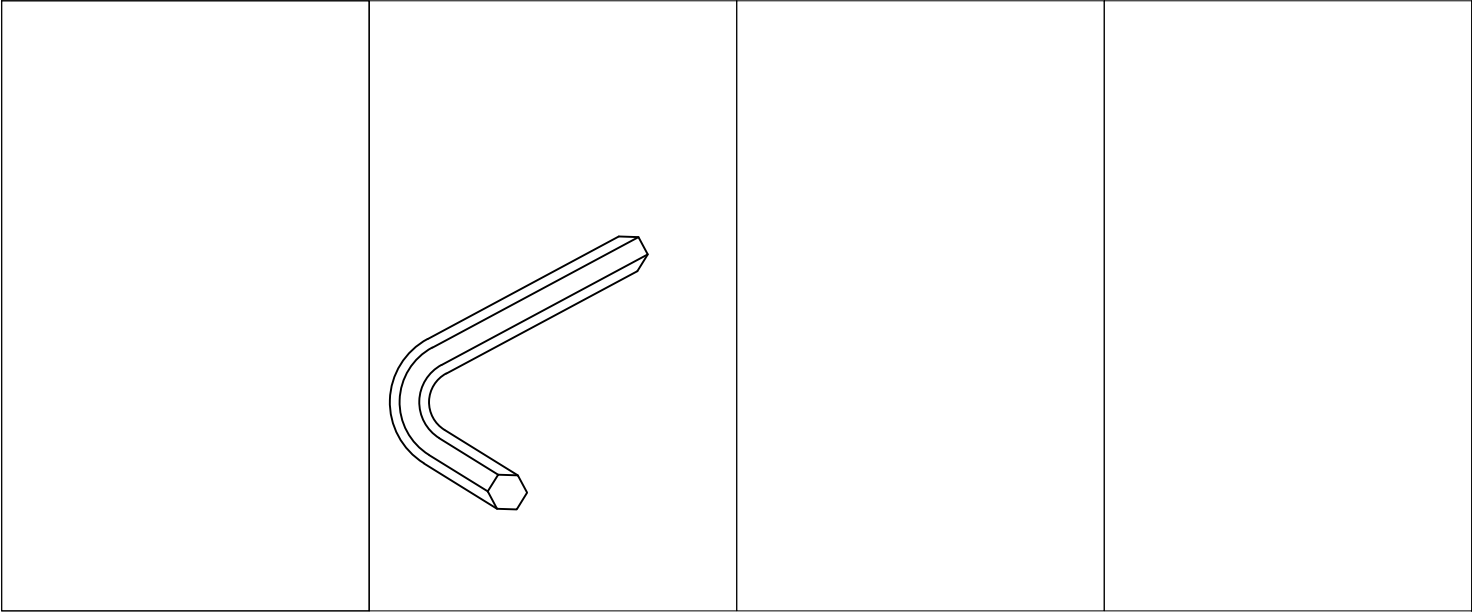


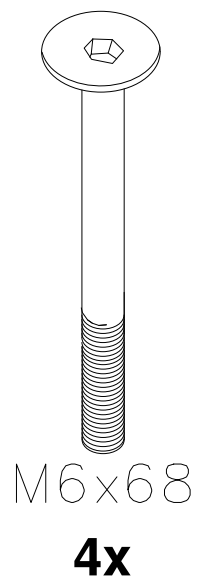


1




2

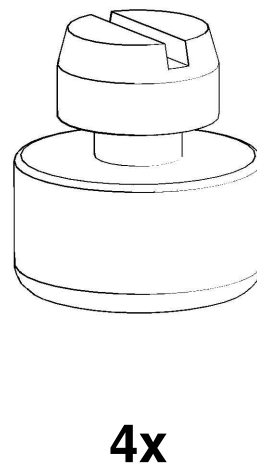


3

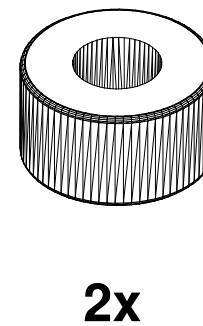


4

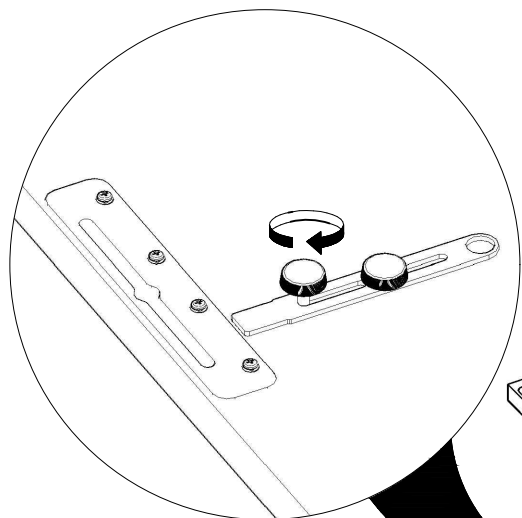


3

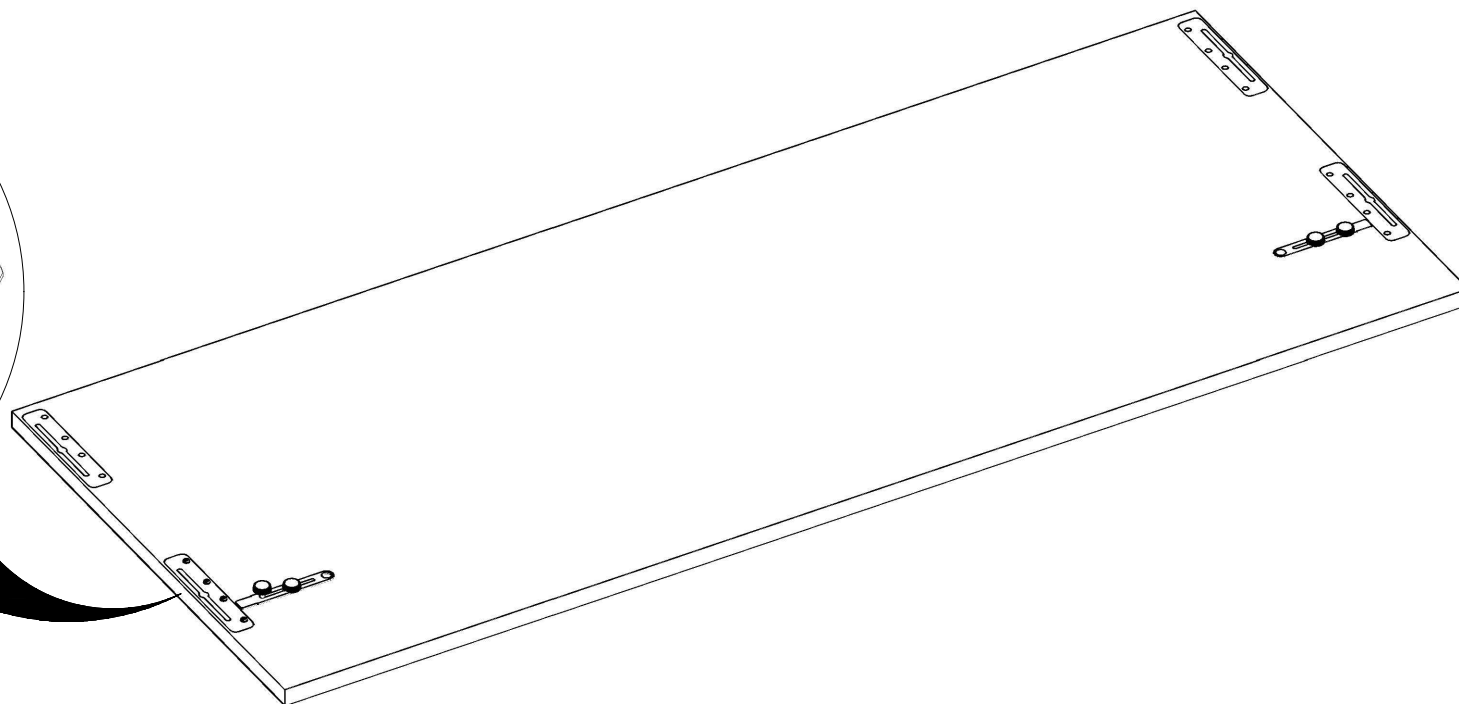


5

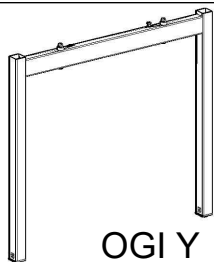


OGI Y

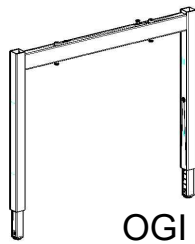


OGI Y

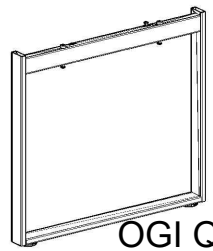


OGI Q

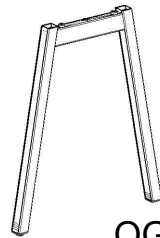


OGI M


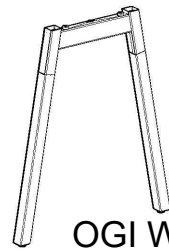




OGI W


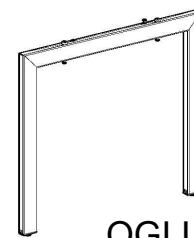


OGI U

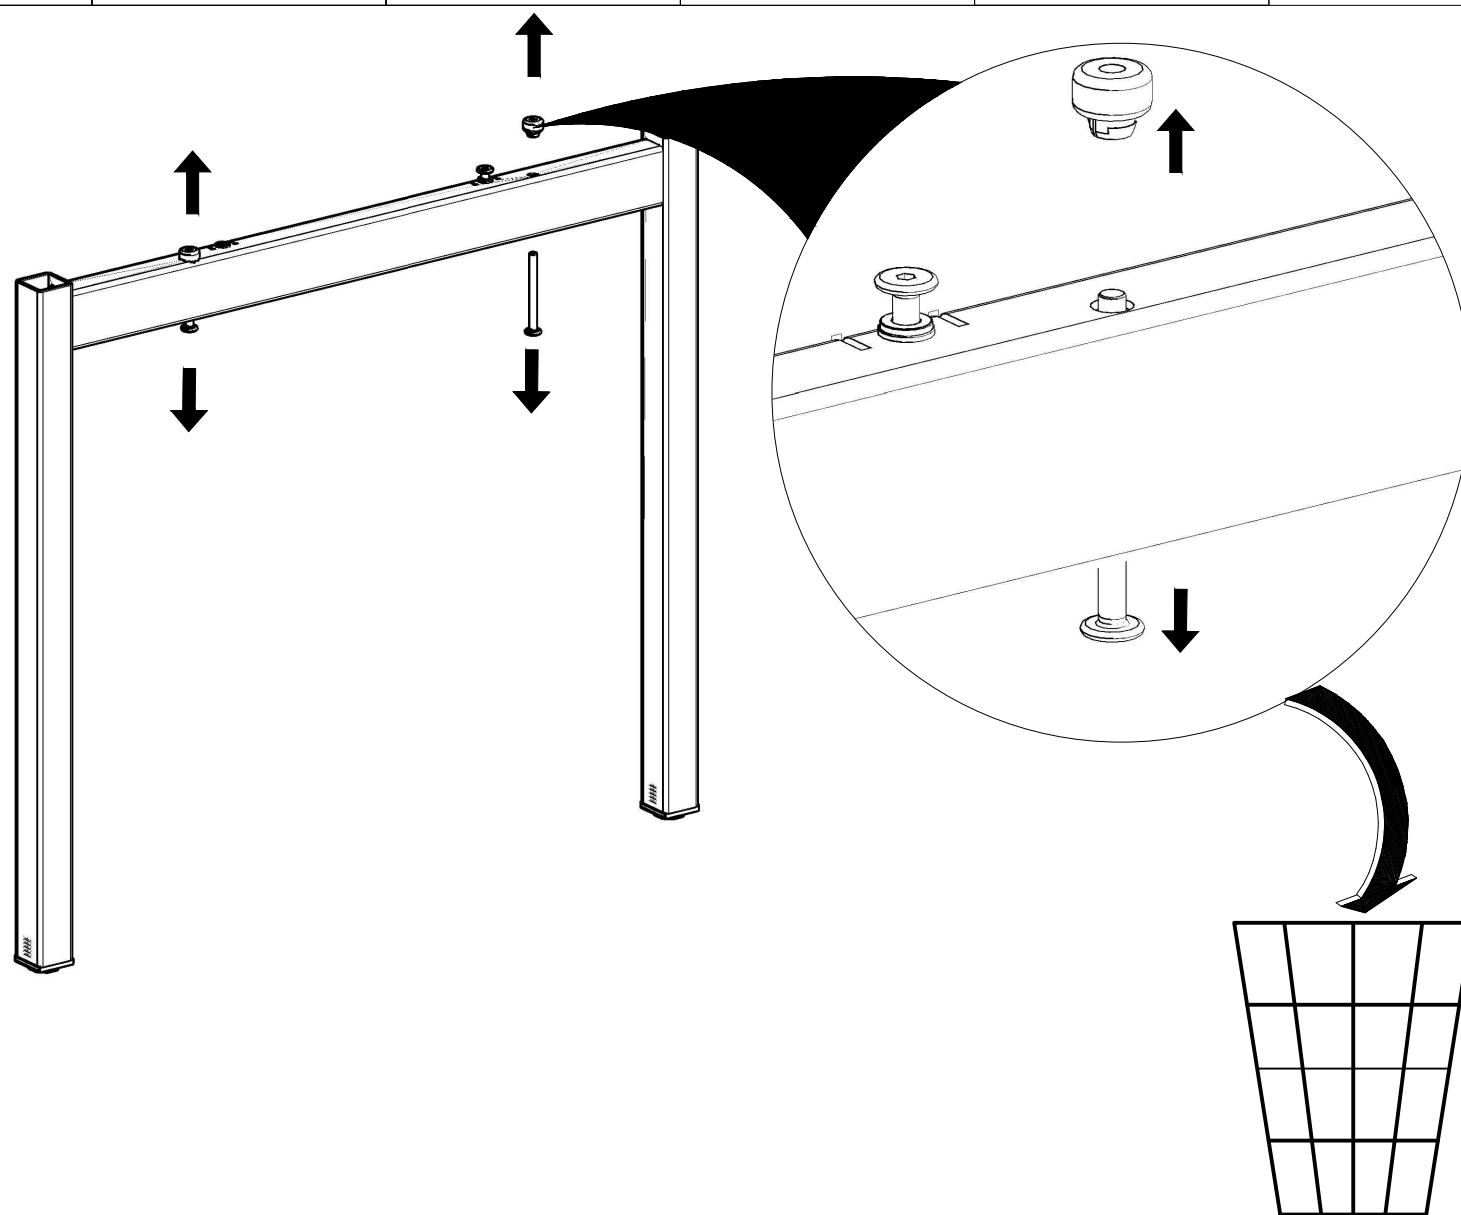


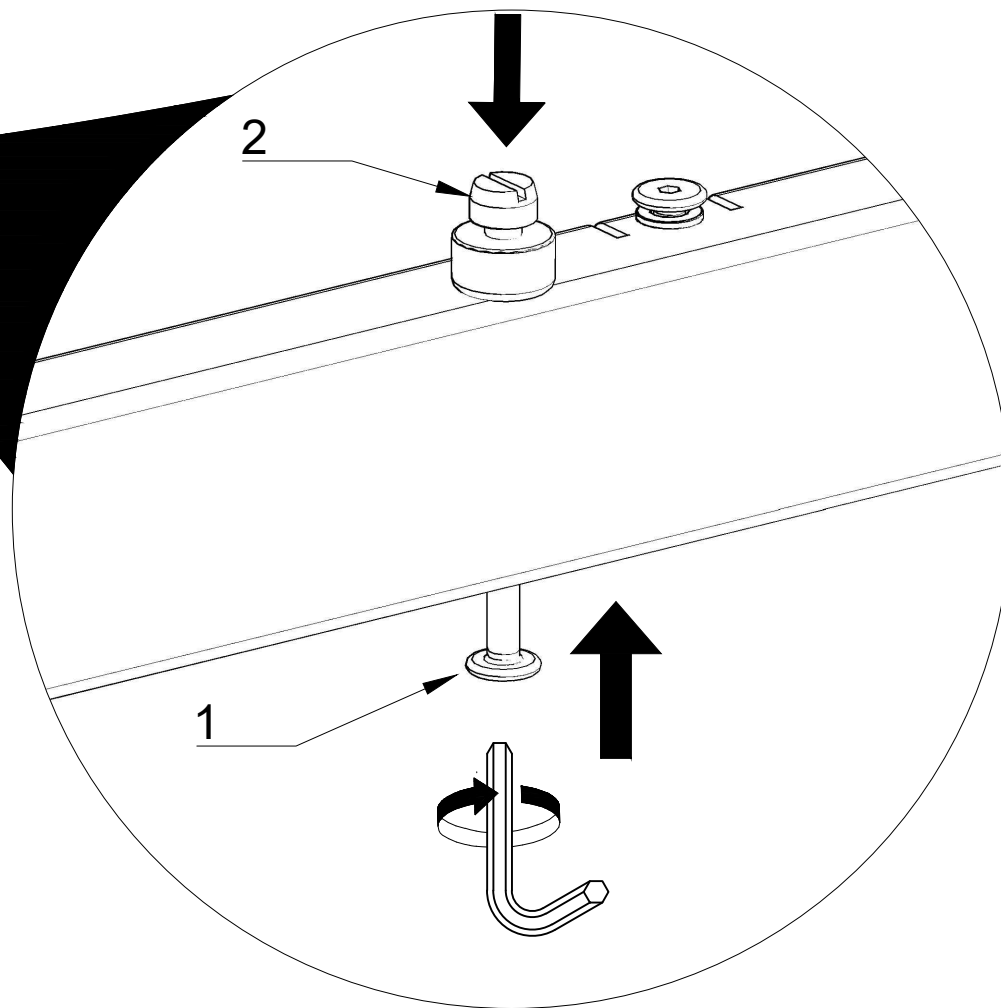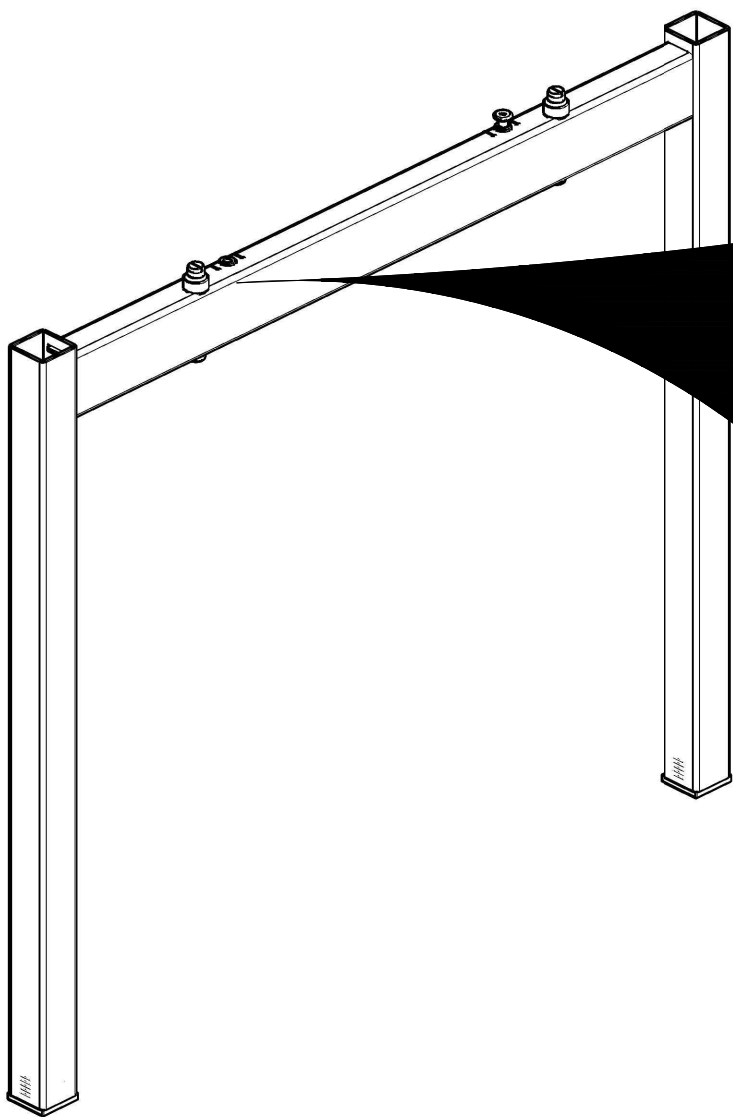


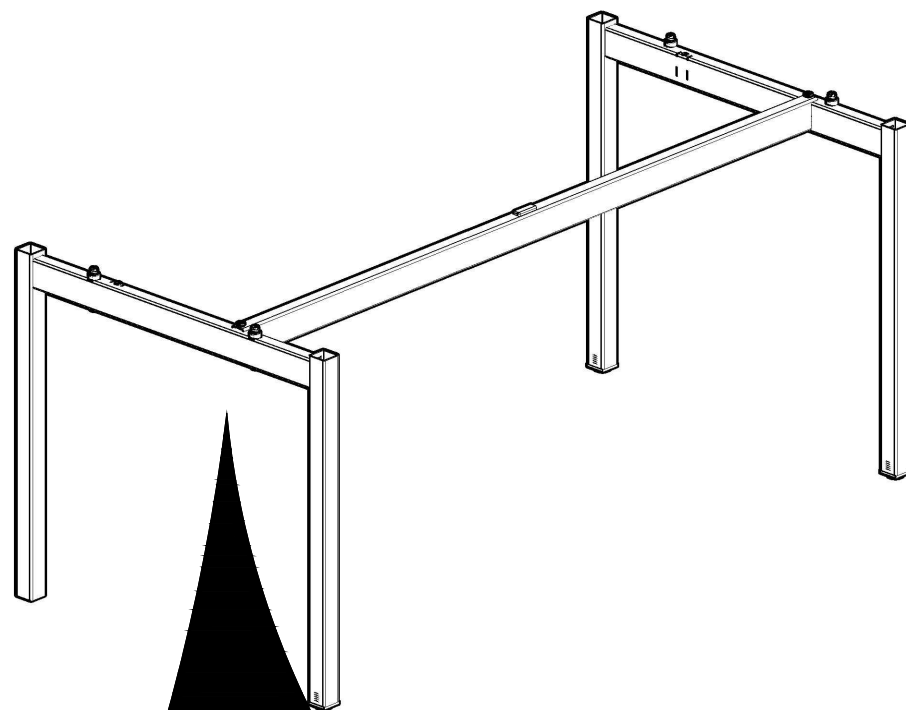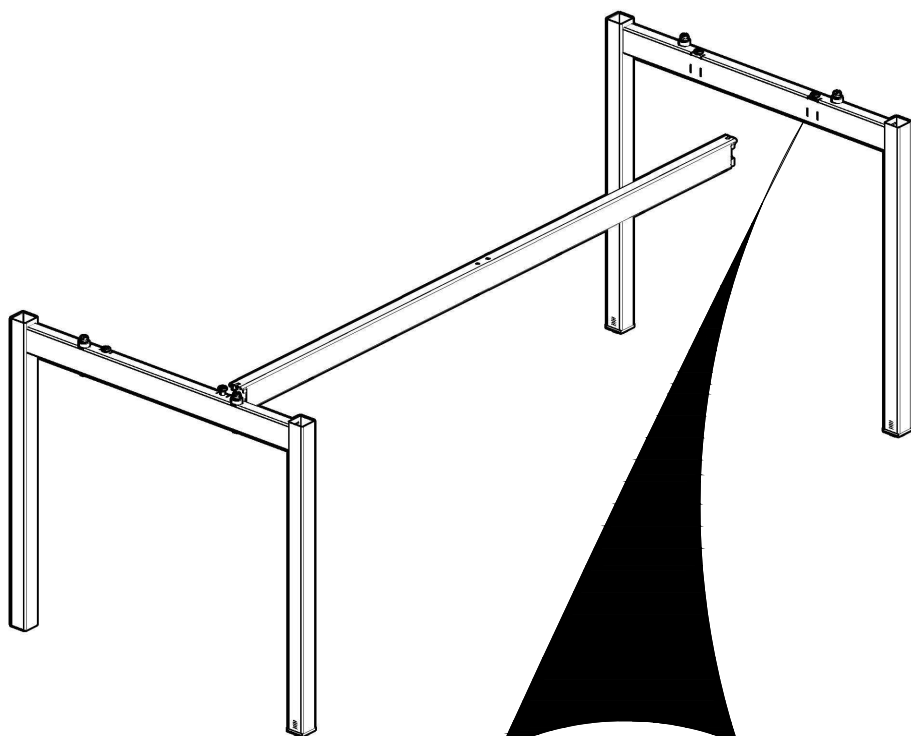

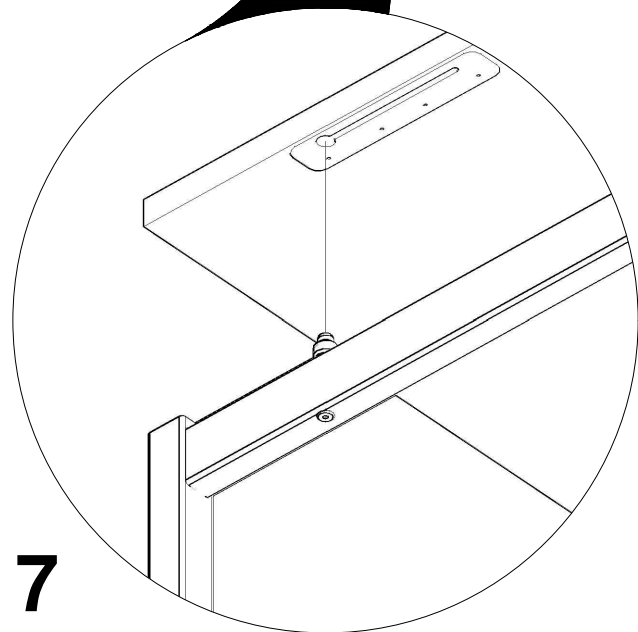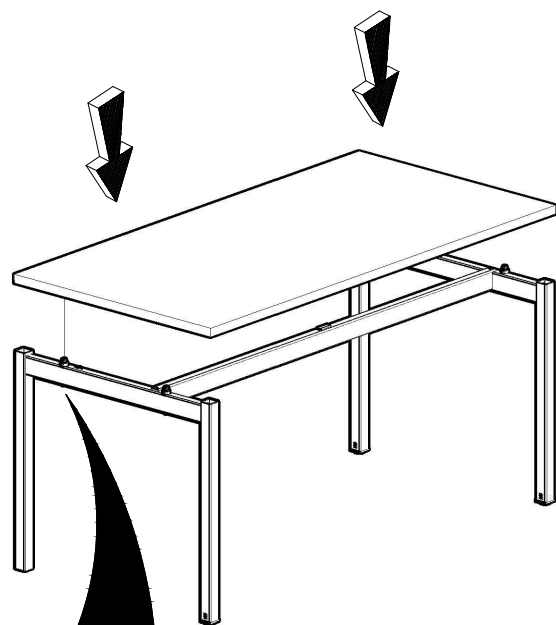


7

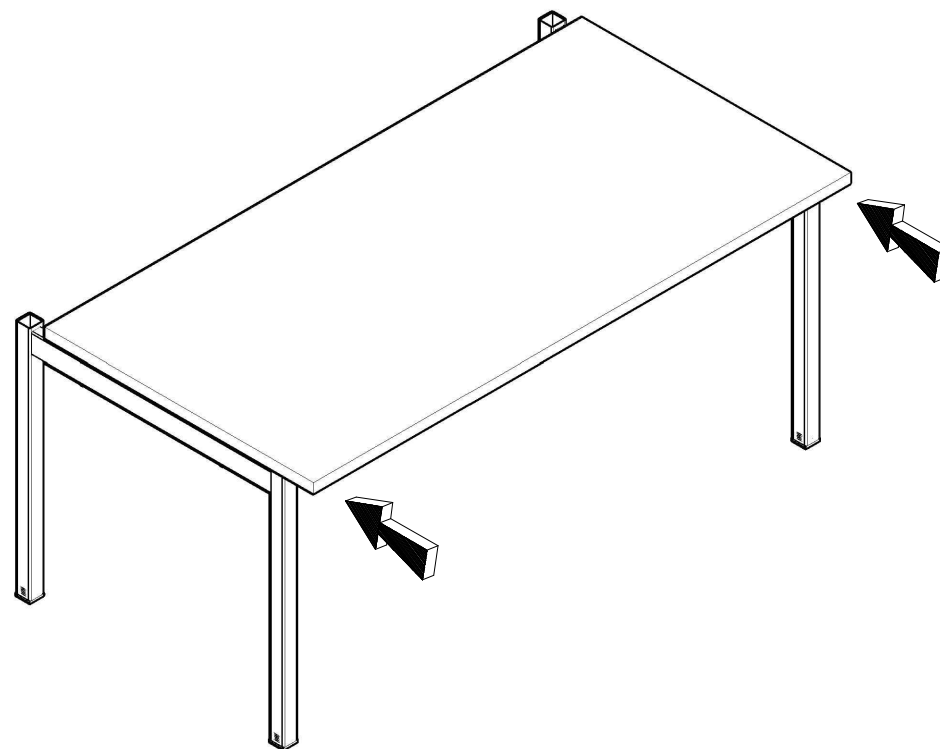

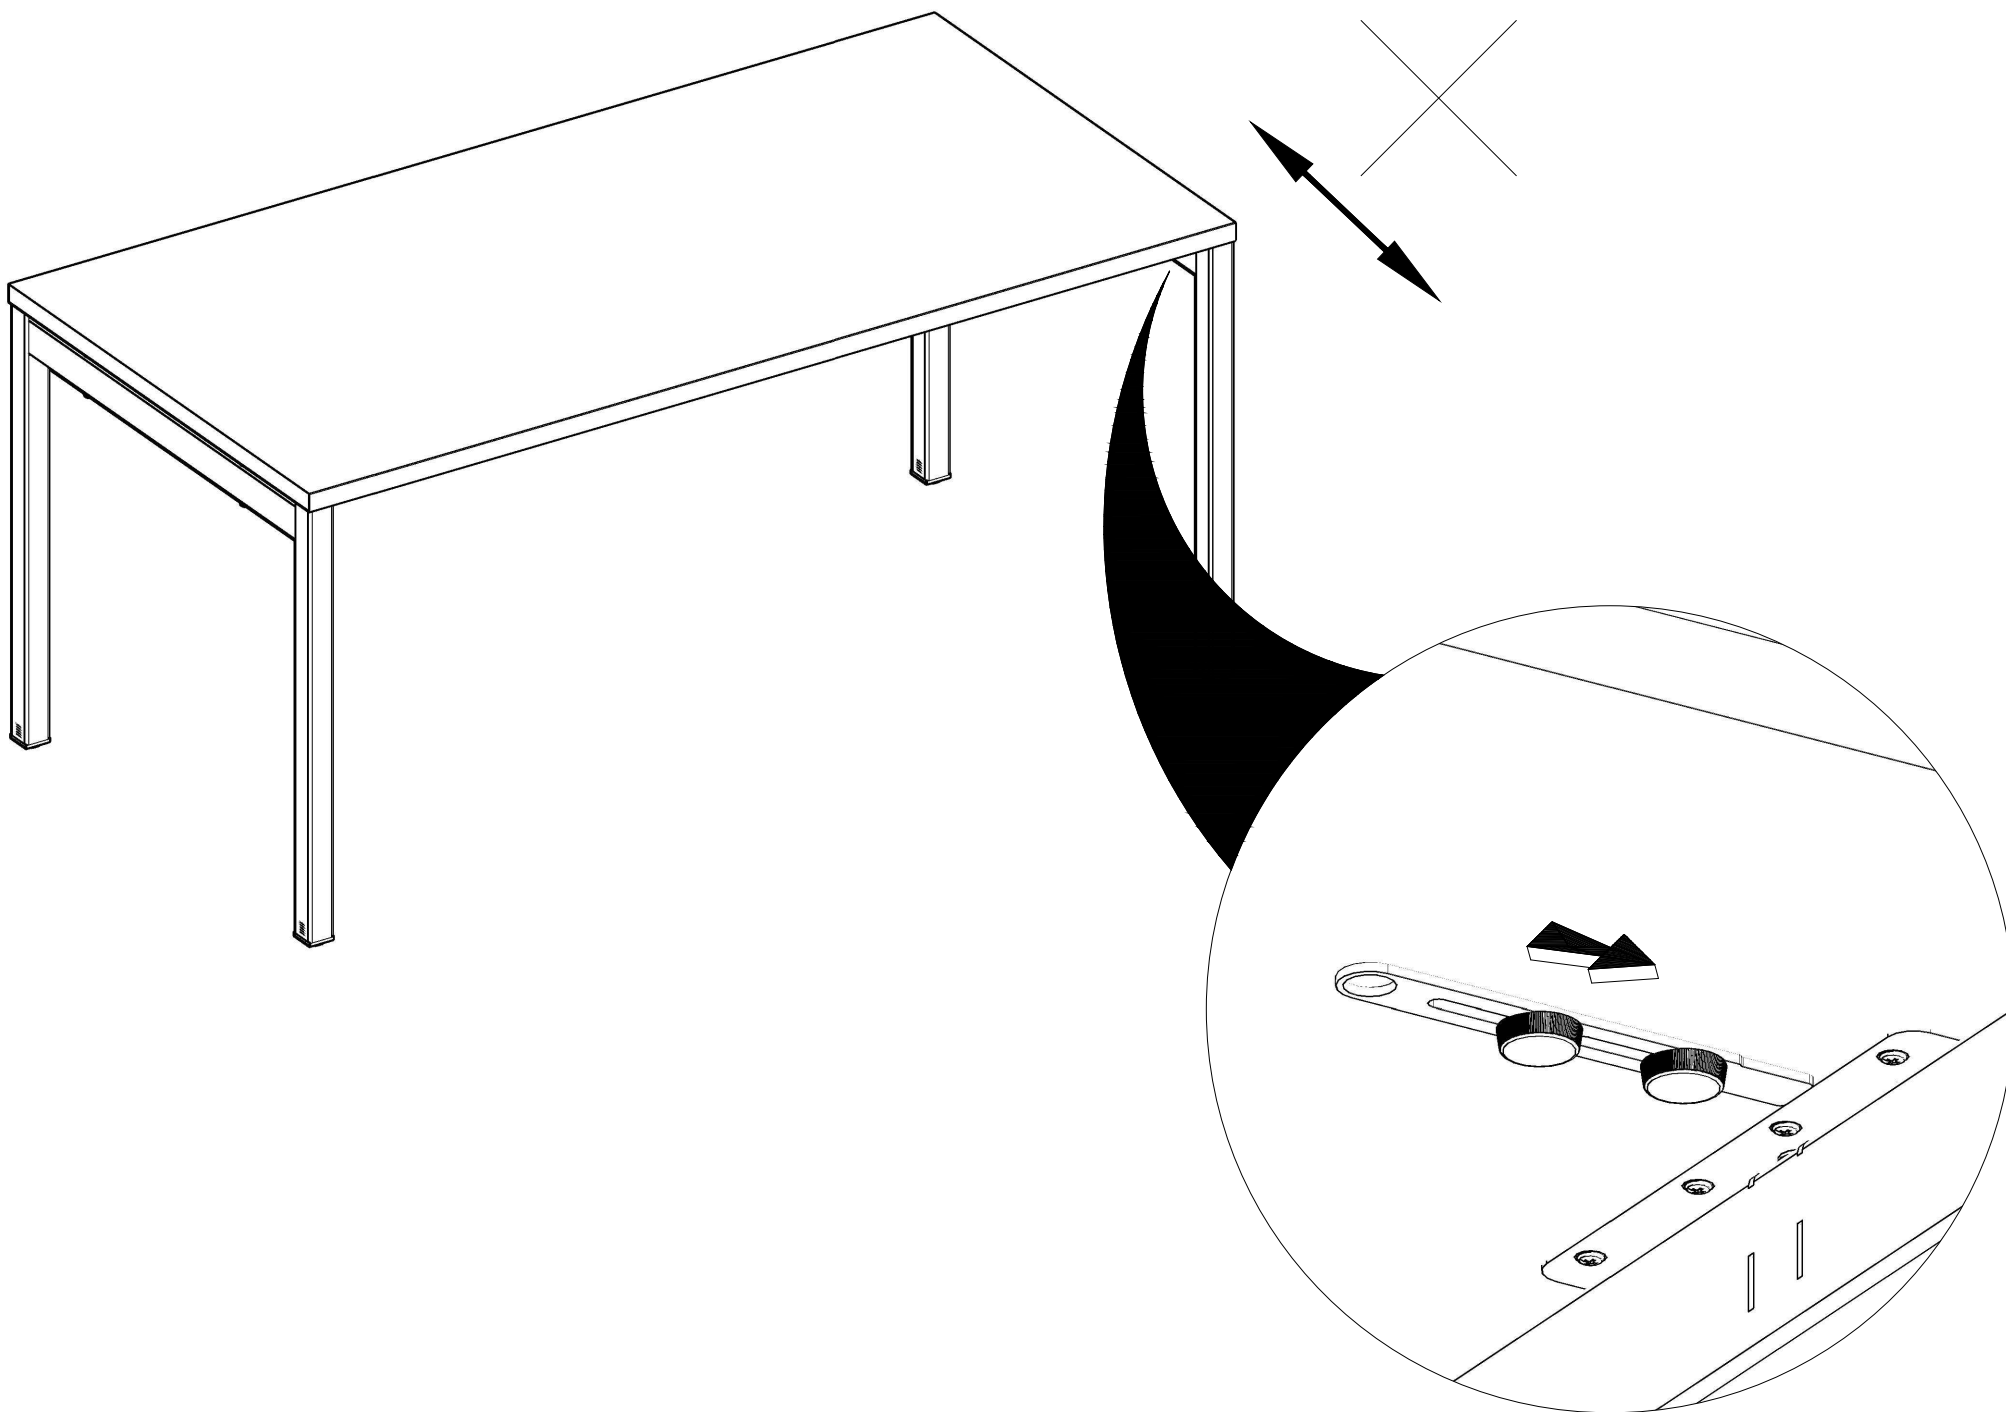


# OGI SLIDE


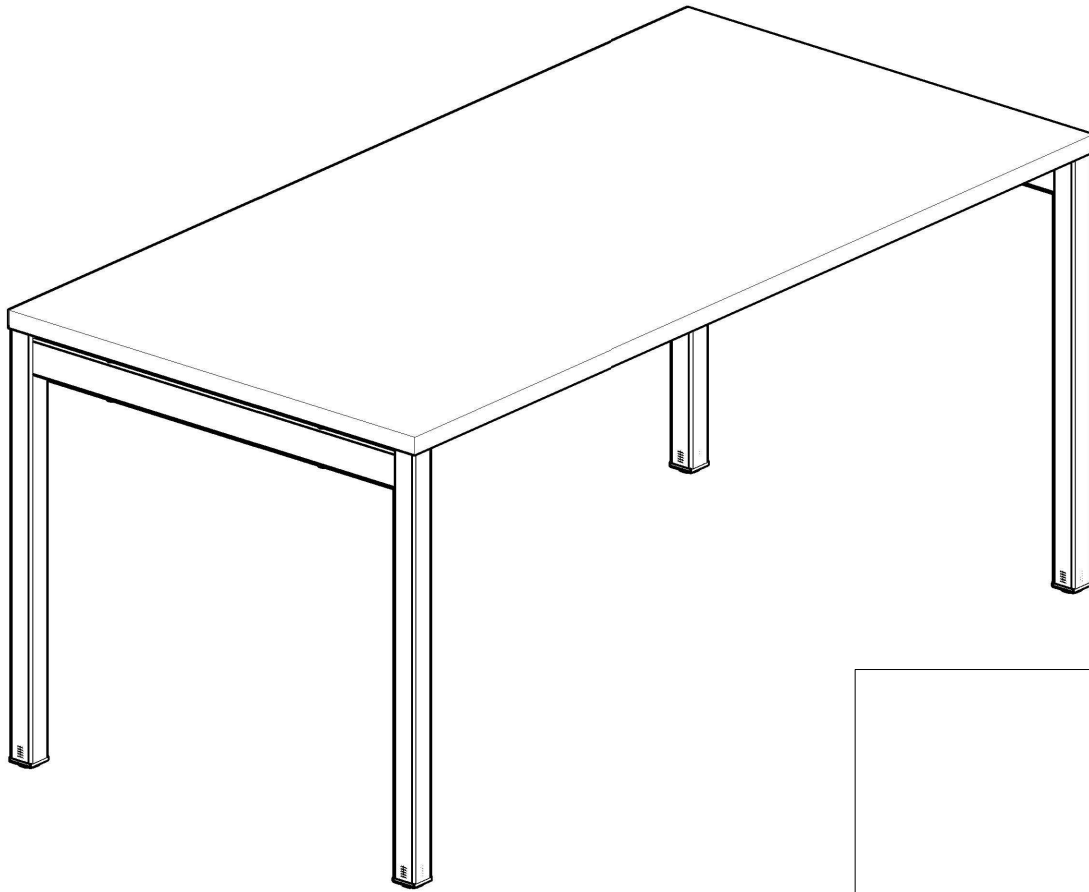



BOX 1

BOX 2

BOX 3

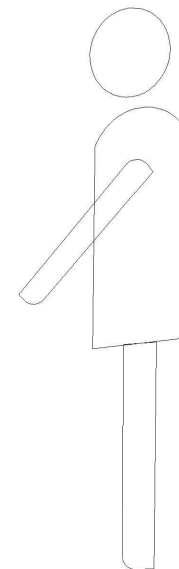

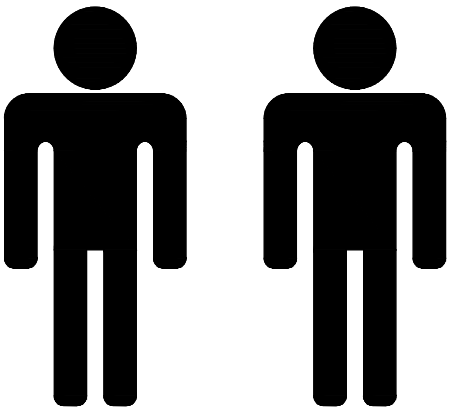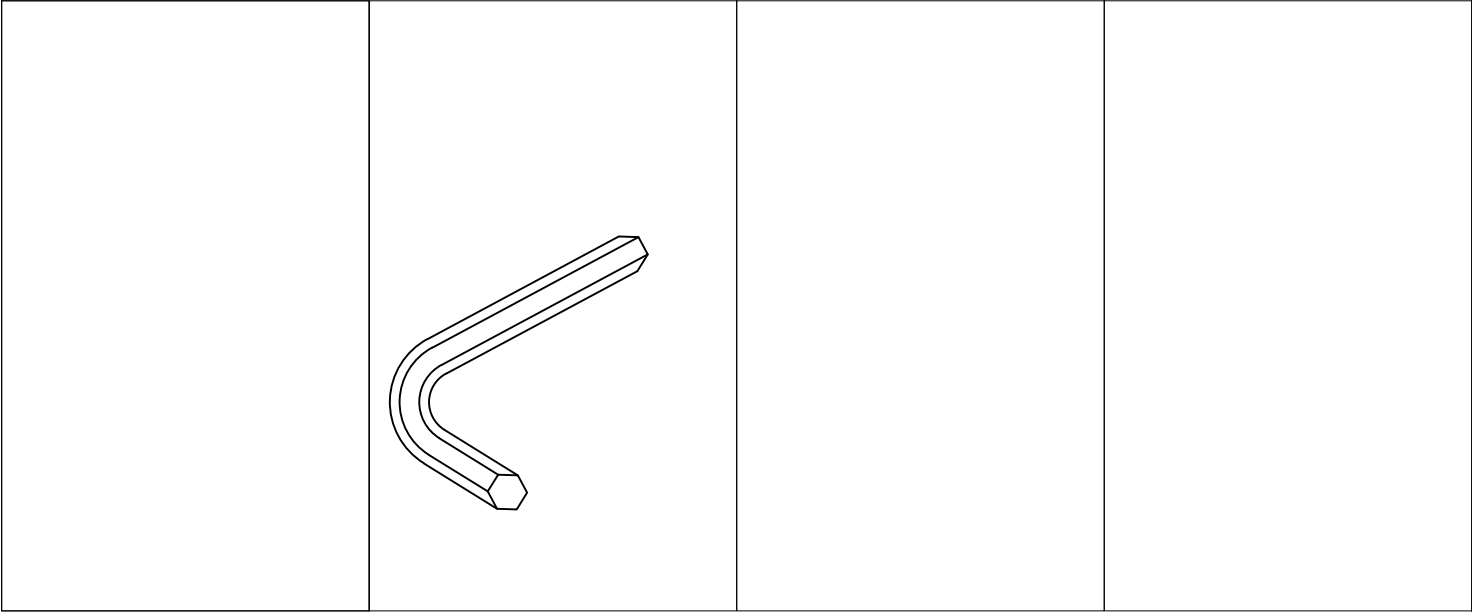


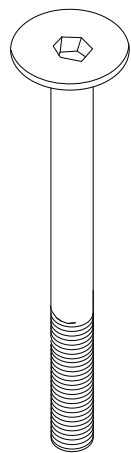

M6x68

**4x**


**1**

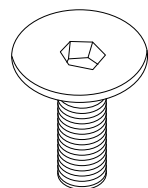

M6x10


**2x**

**2**

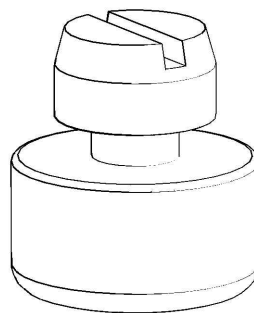


**4x**

**3**

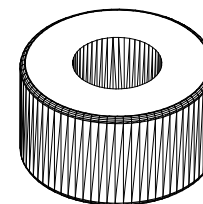


**2x**

**4**

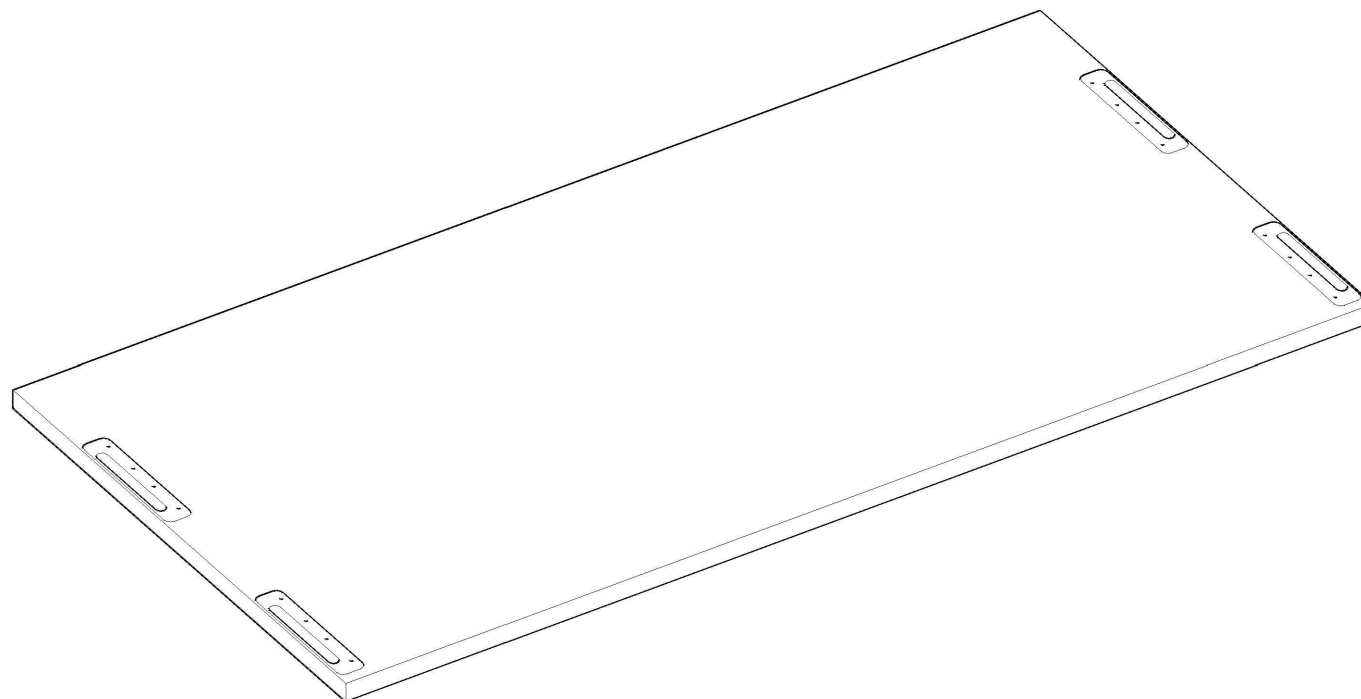


**3**


**5**

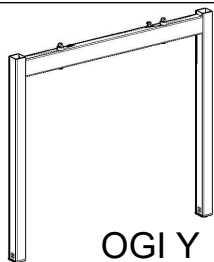


OGI Y

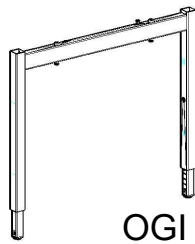


OGI Y

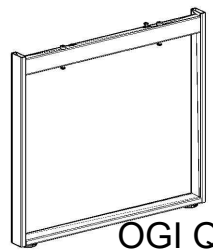


OGI Q

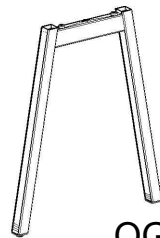


OGI M


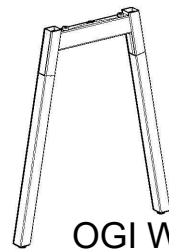




OGI W


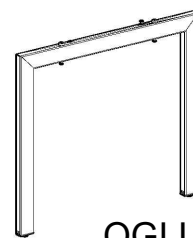


OGI U

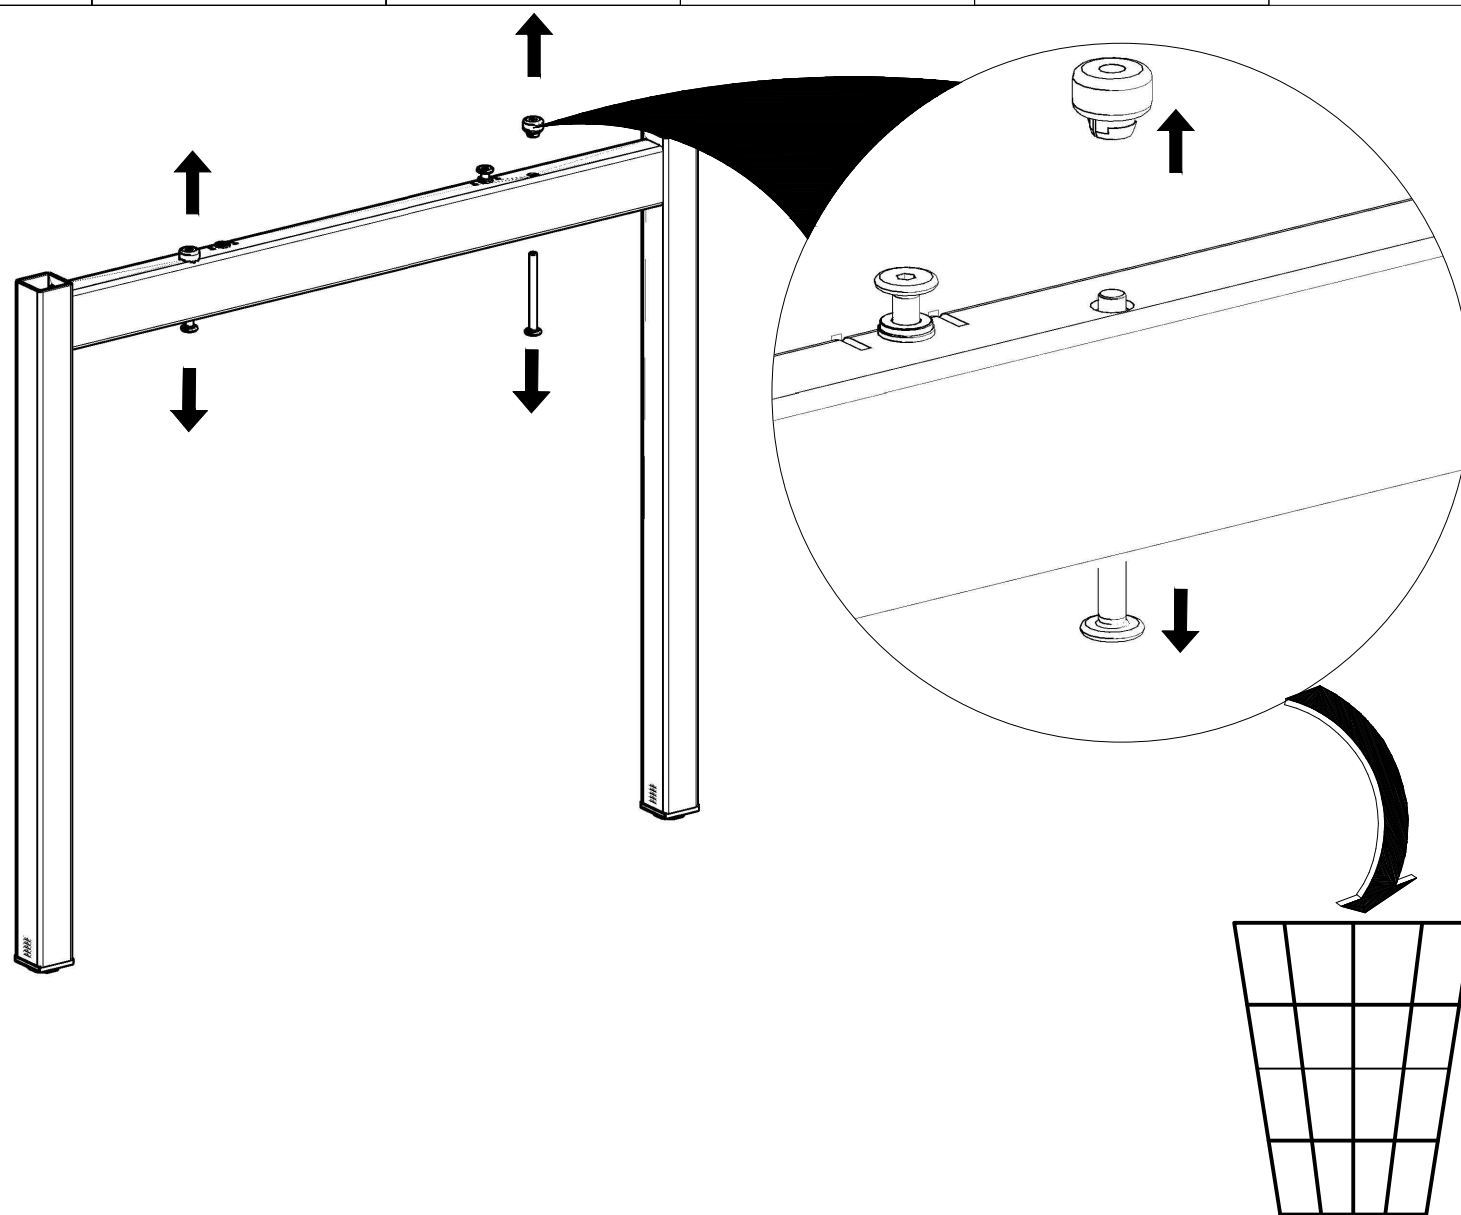


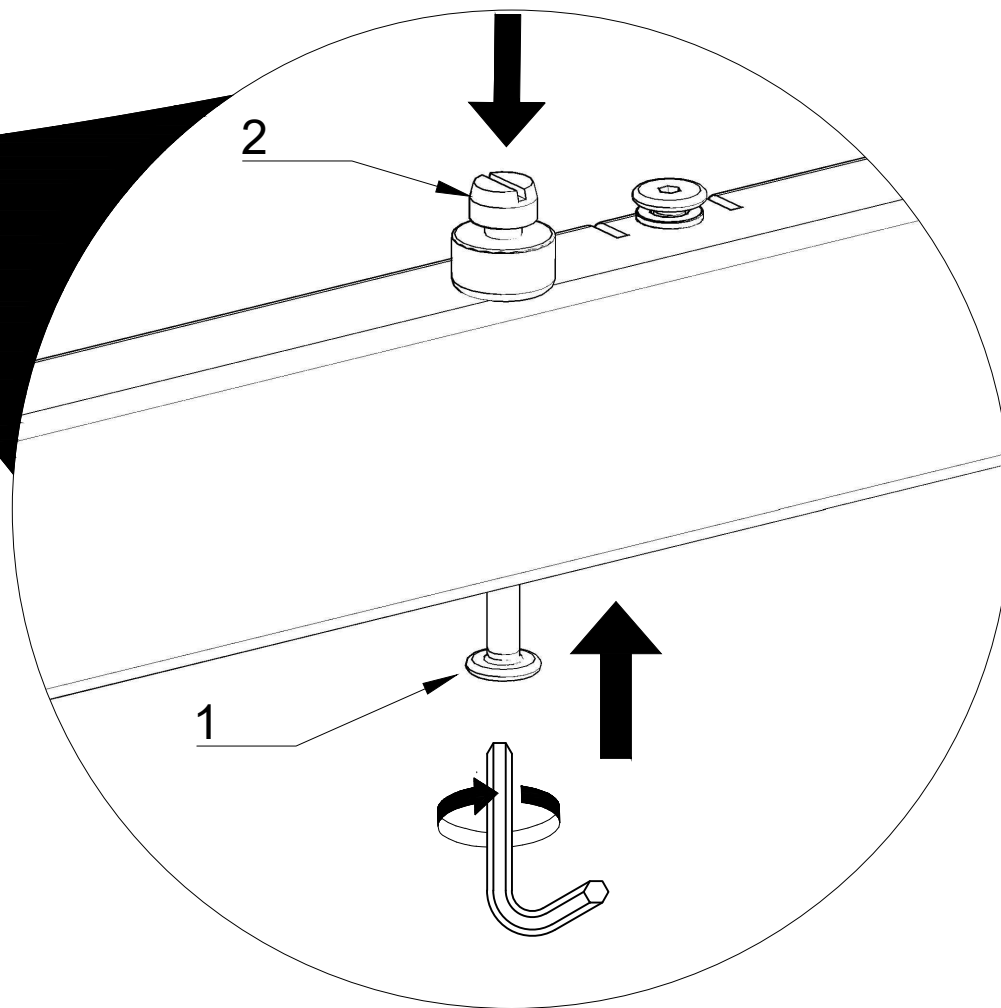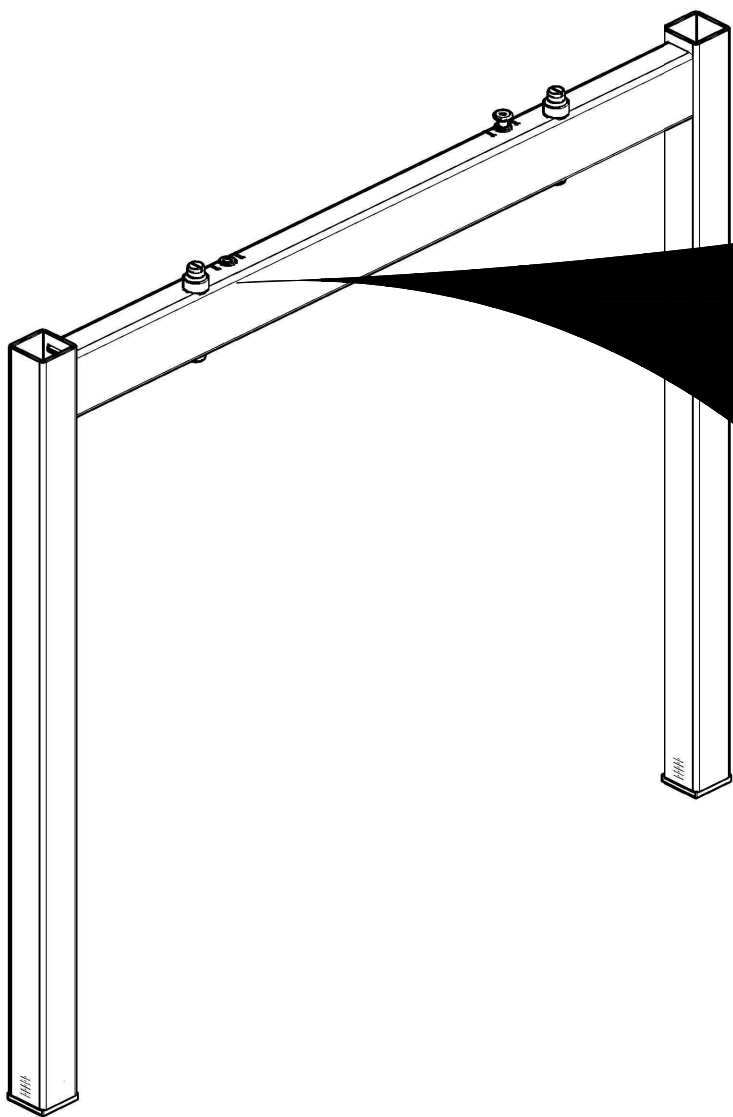


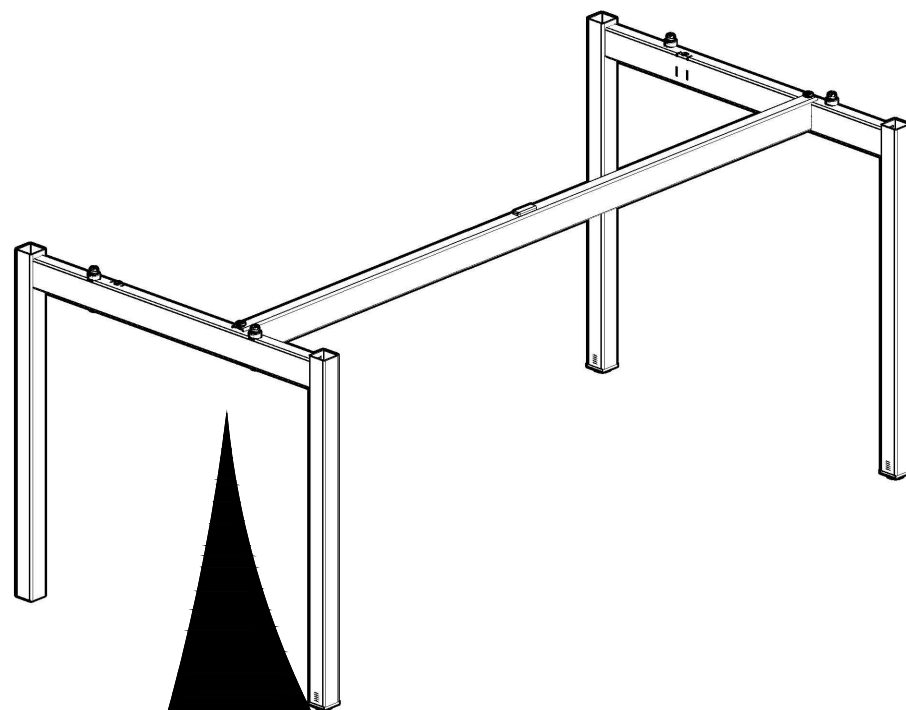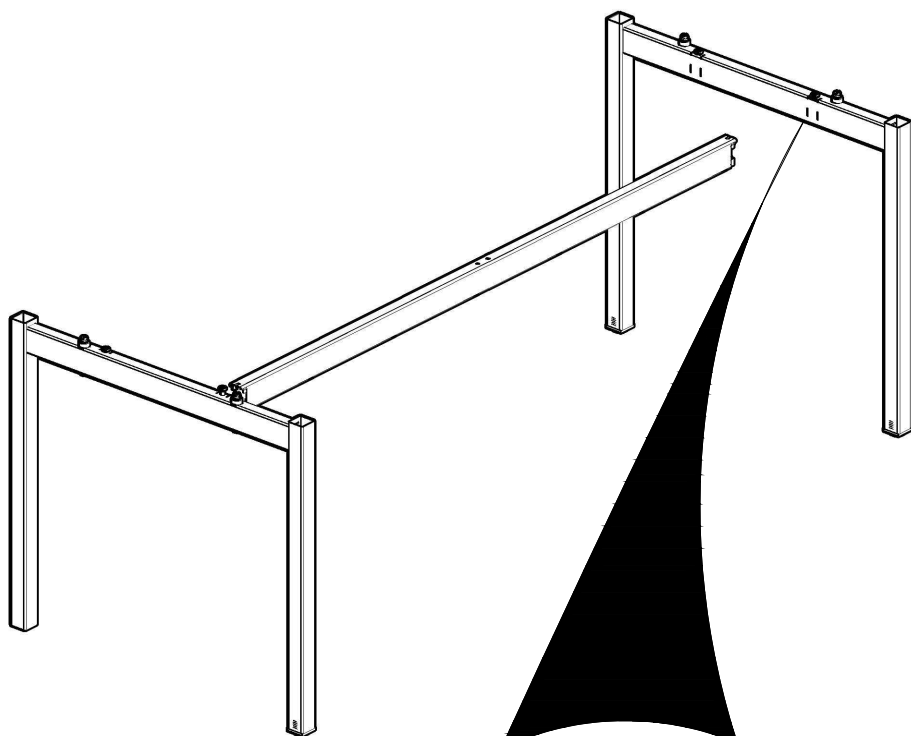


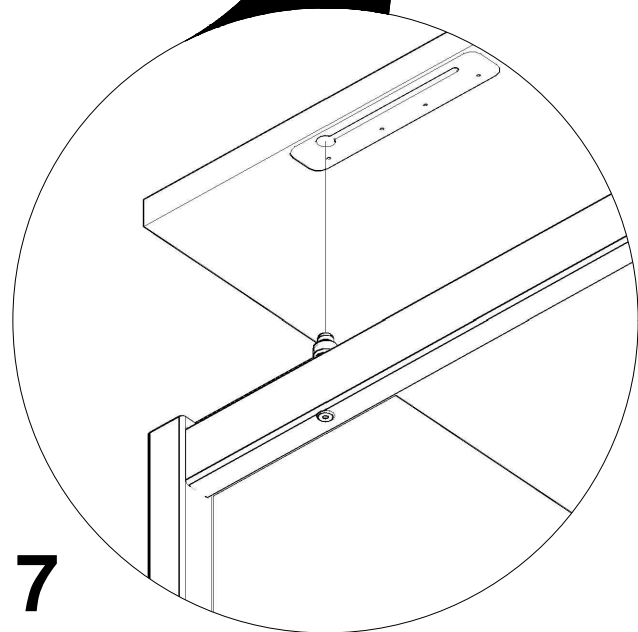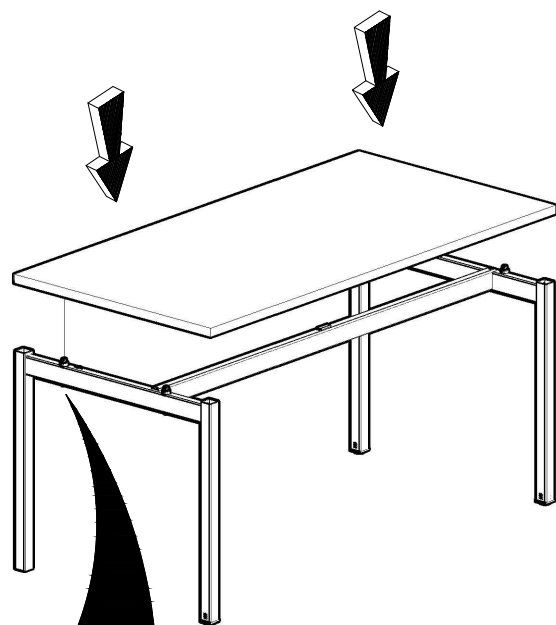


7

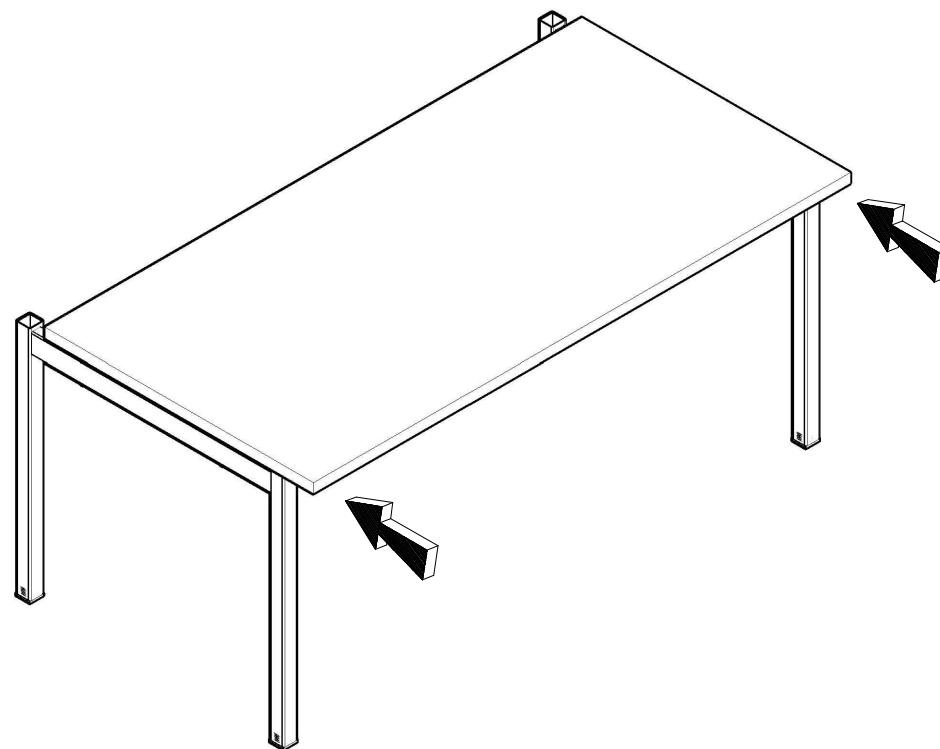

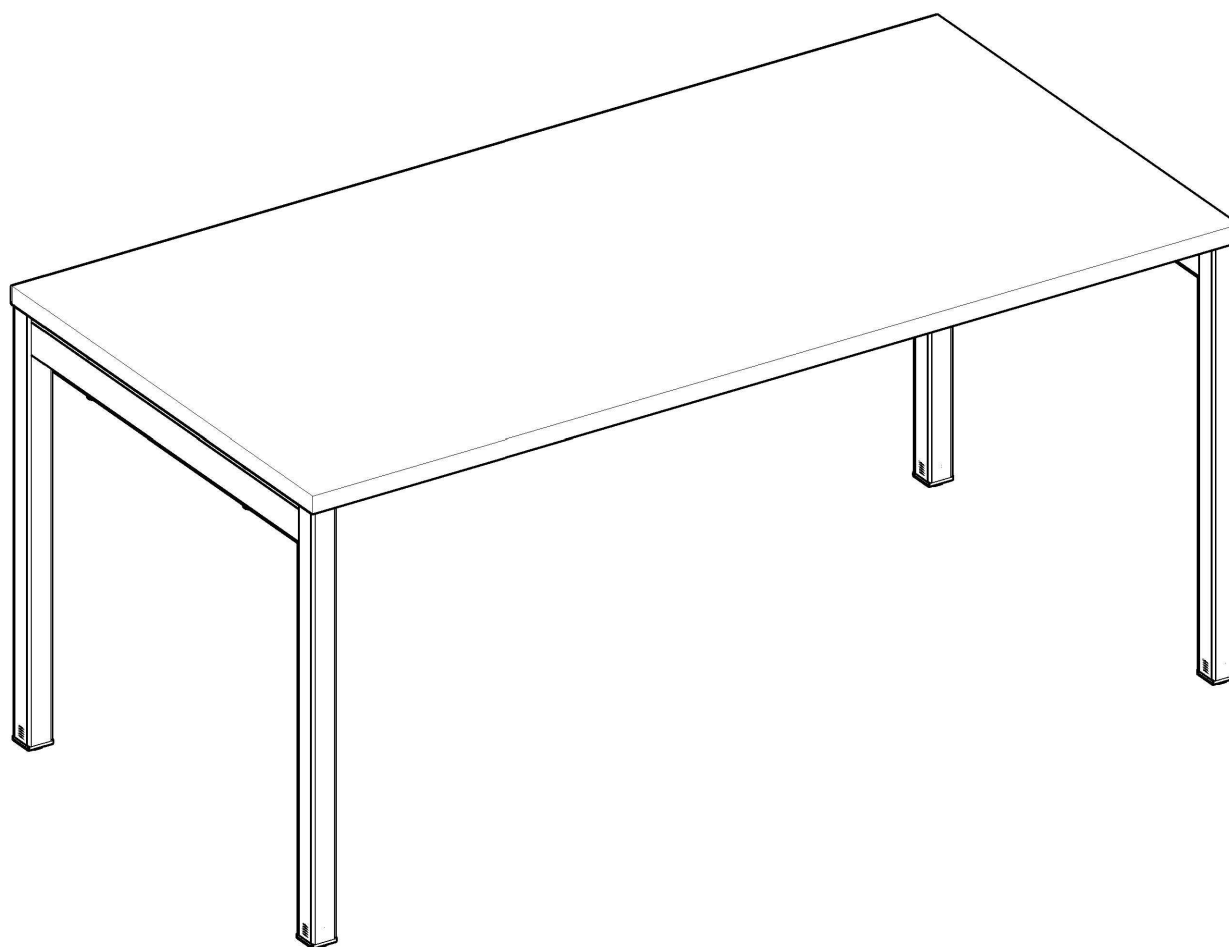


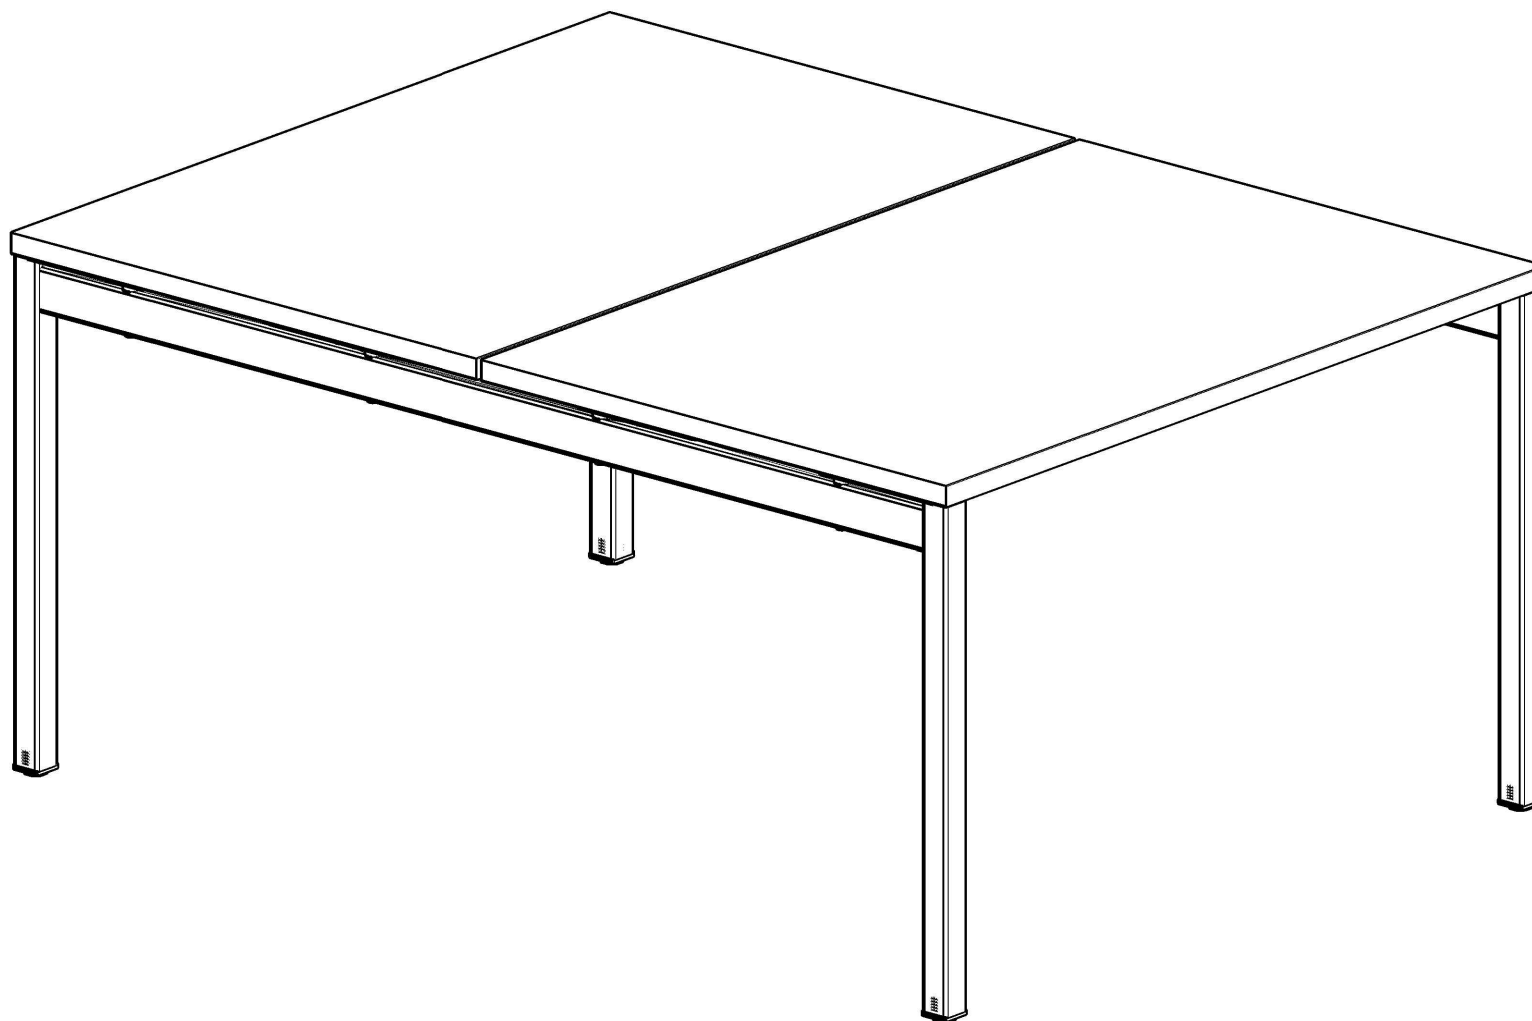

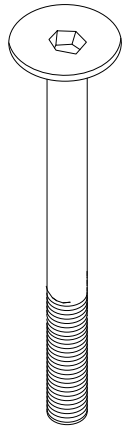


M6x68  
**8x**

**1**

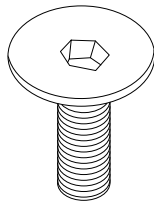


M6x10  
**2x**

**2**

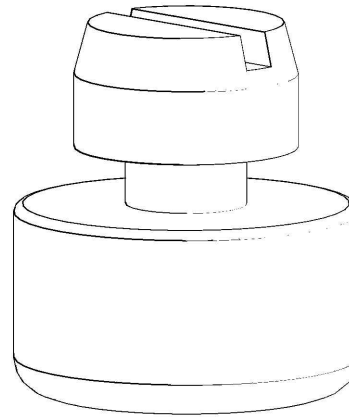


**4x**

**3**

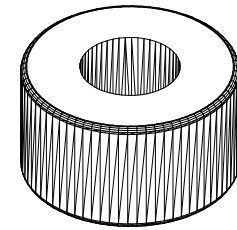



**2x**





**4**



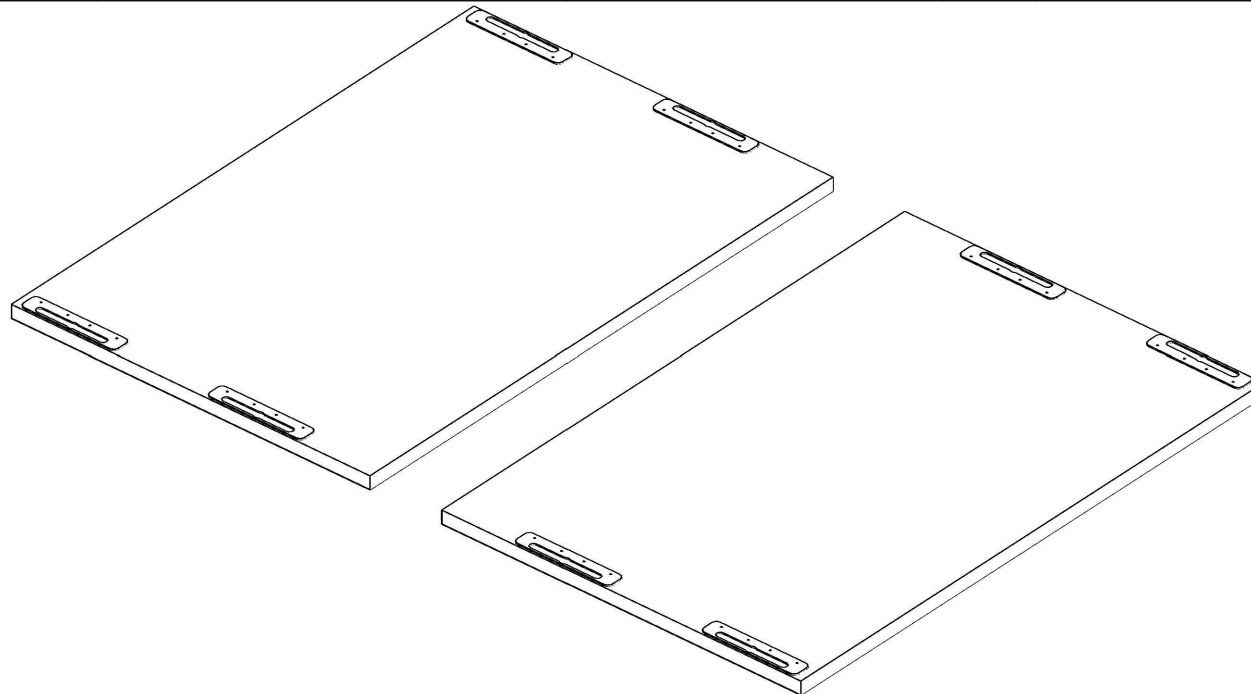


**5**

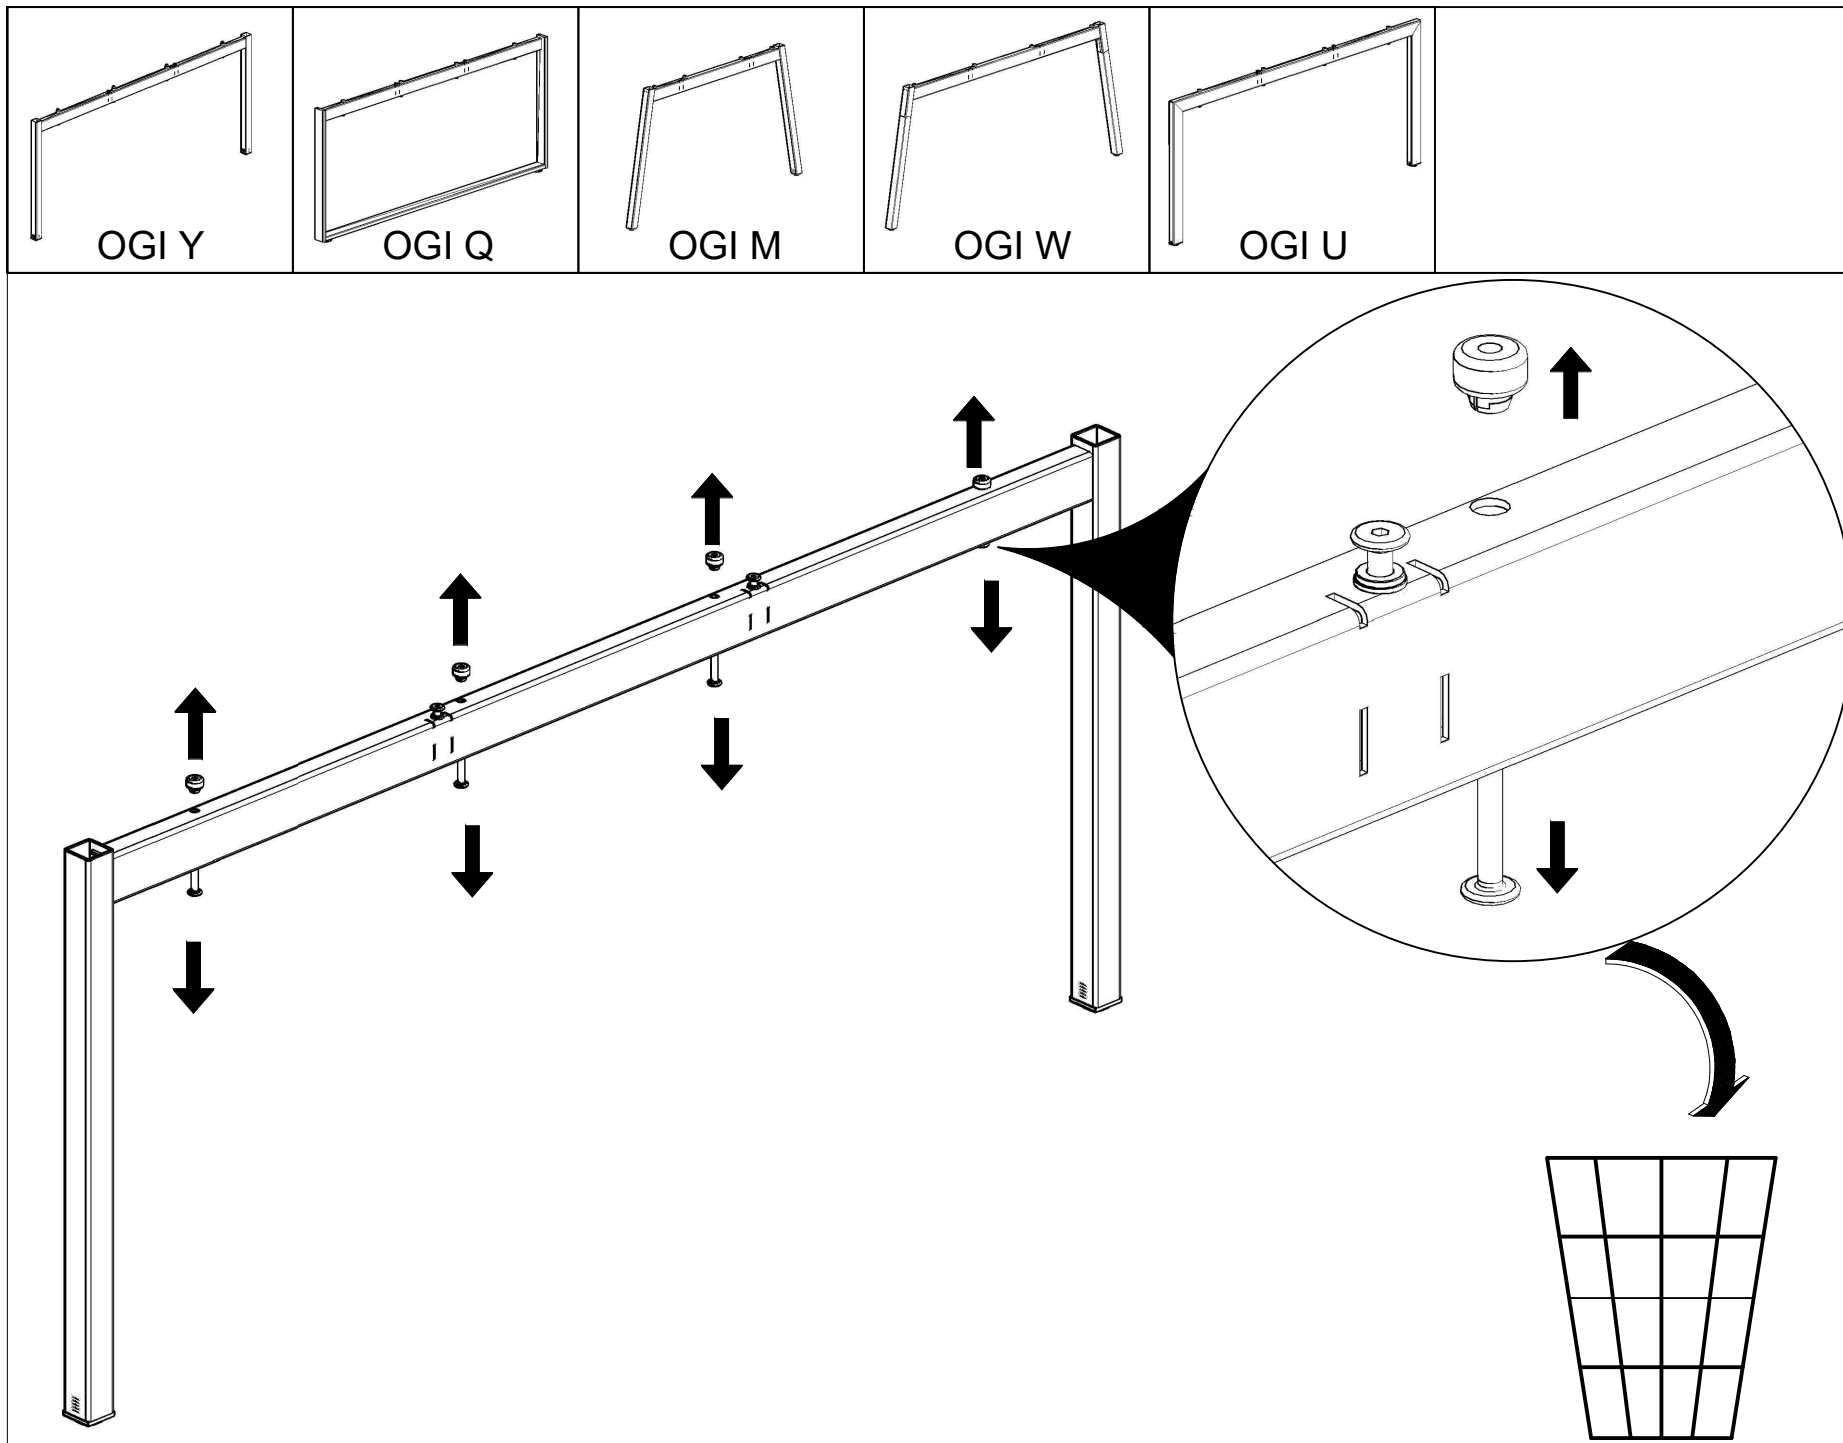

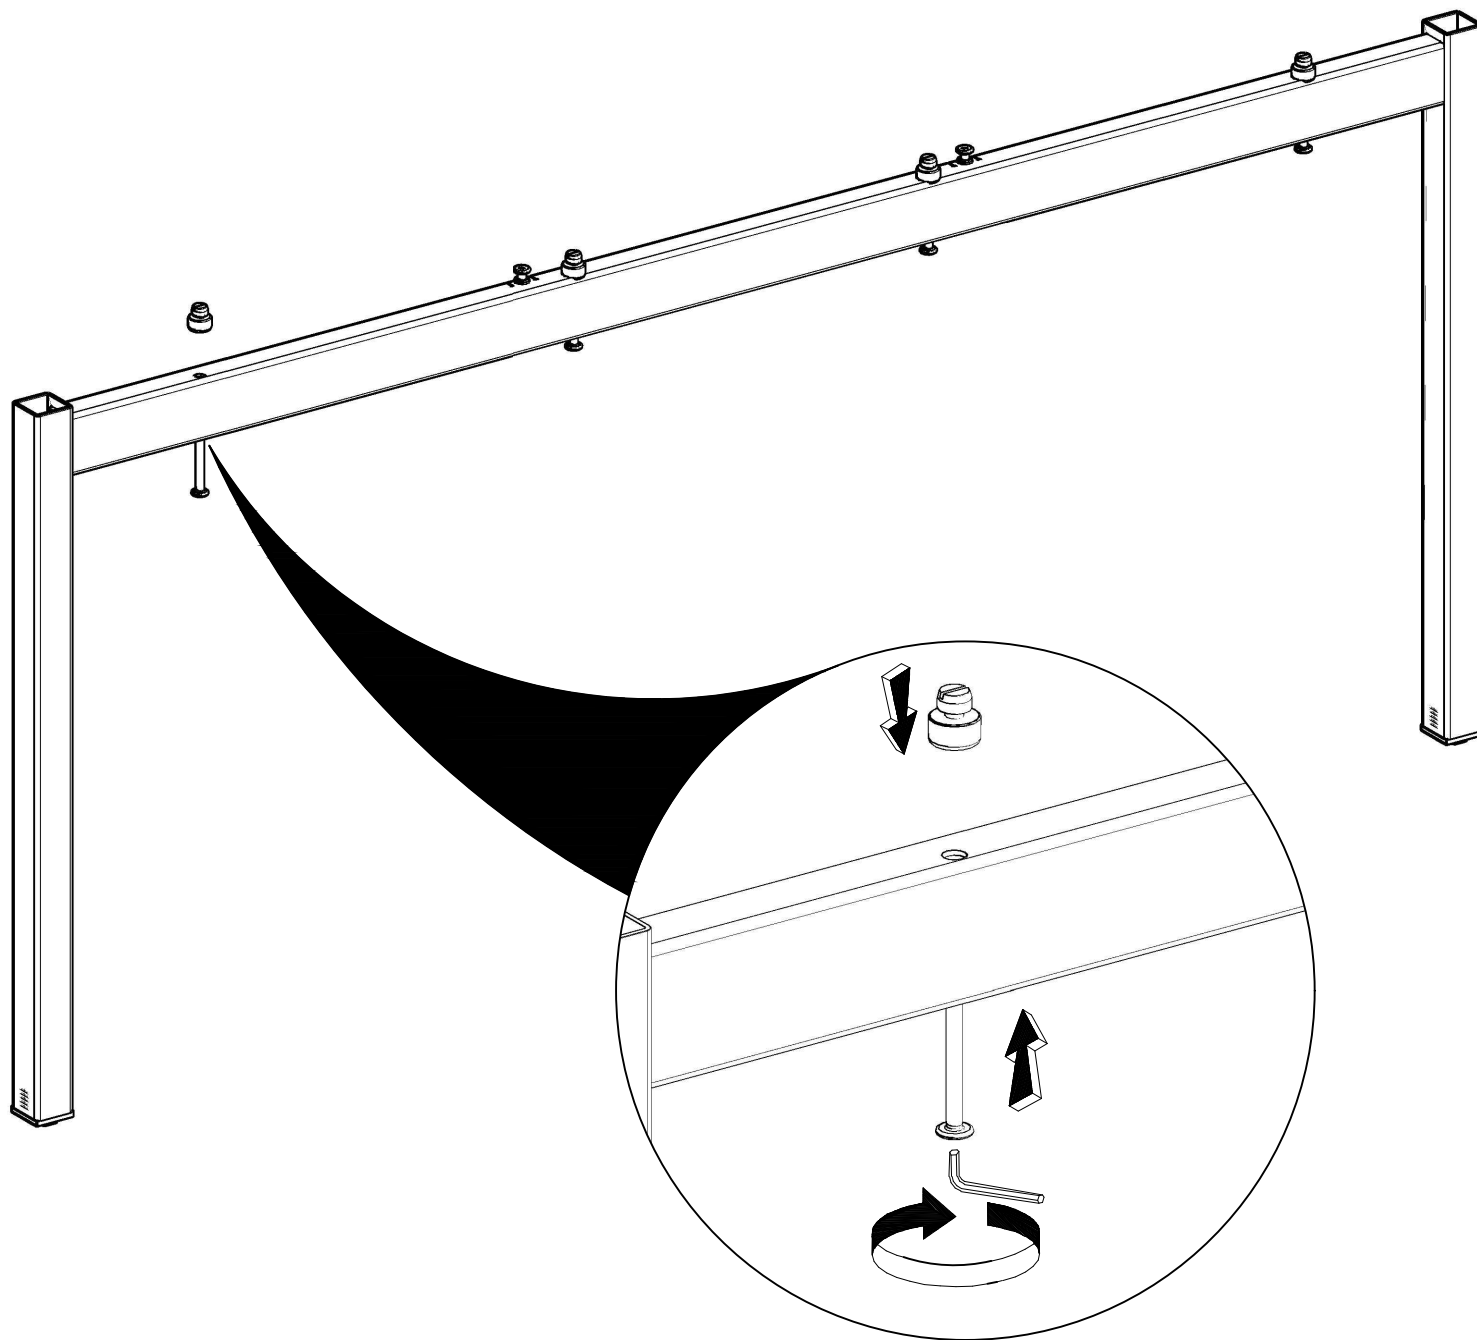

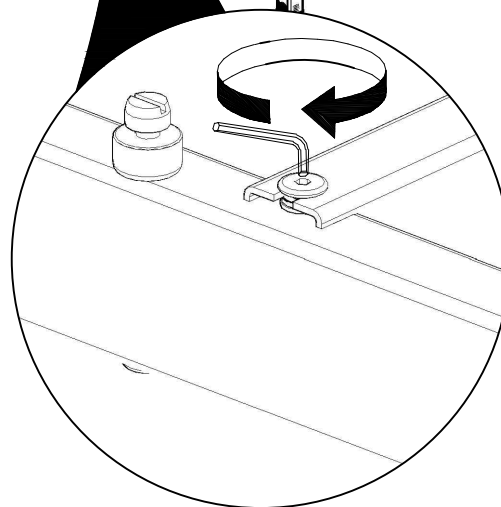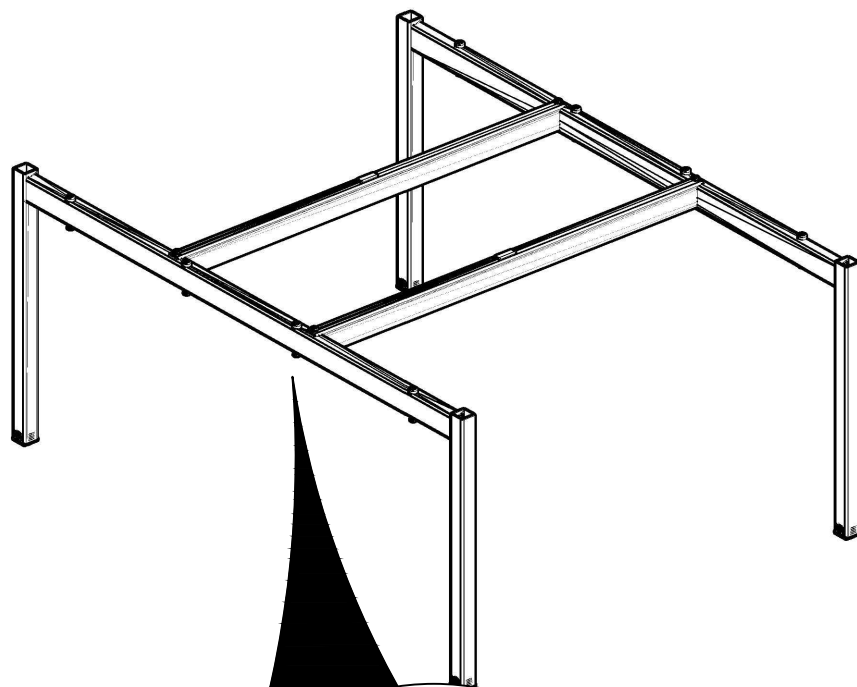
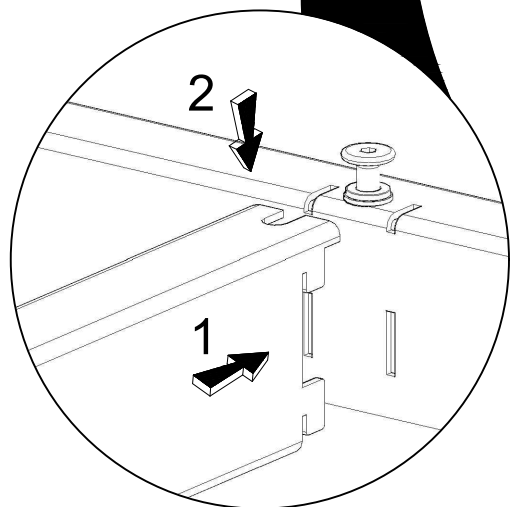
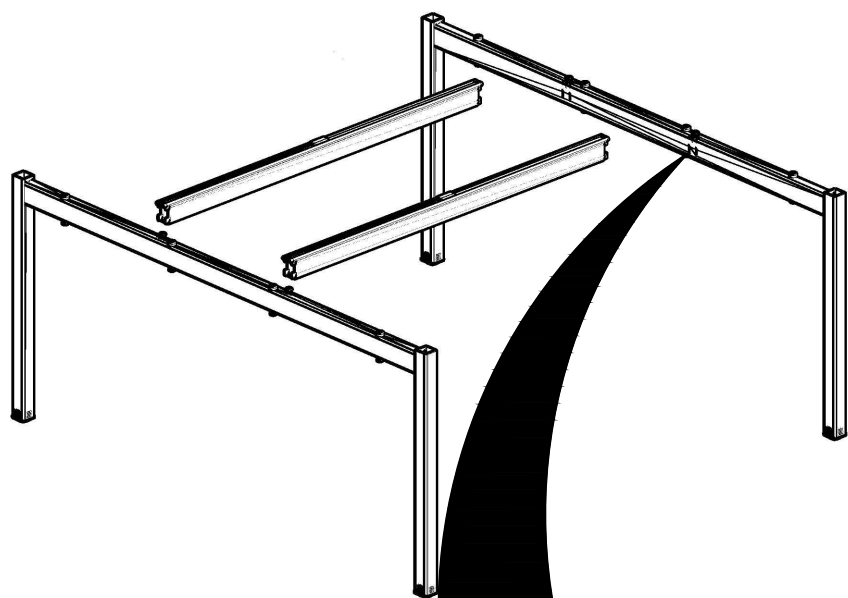


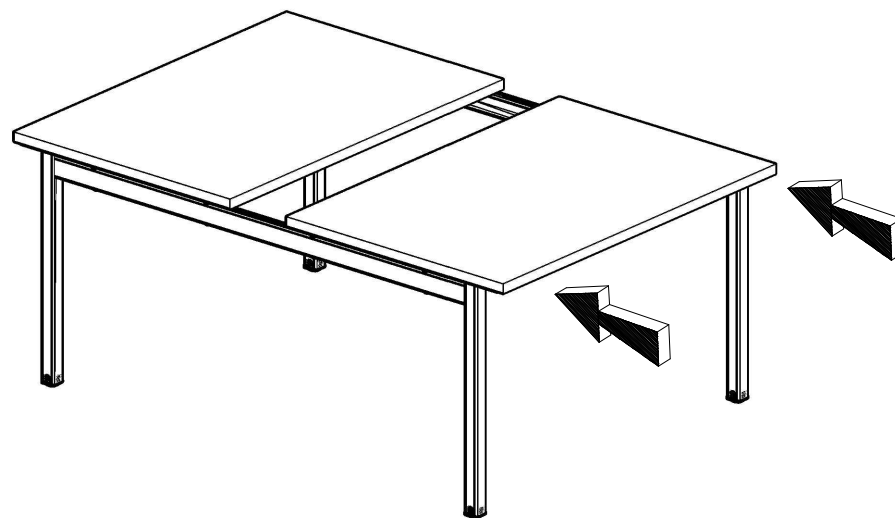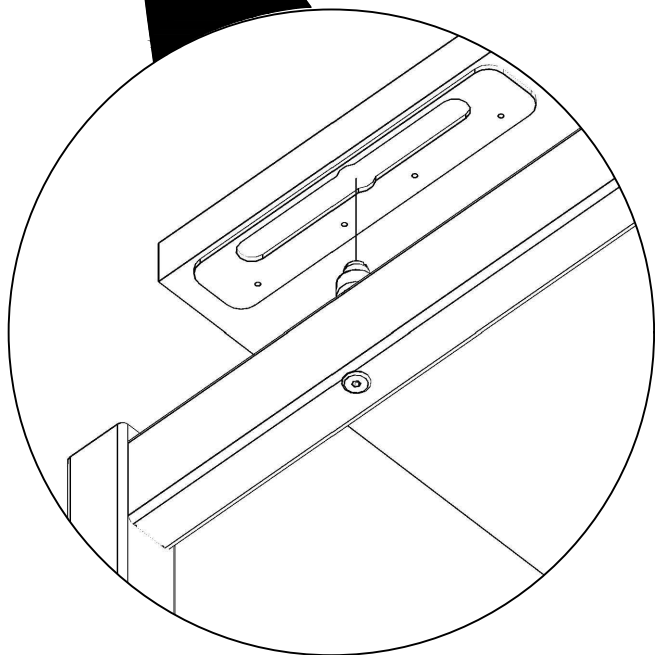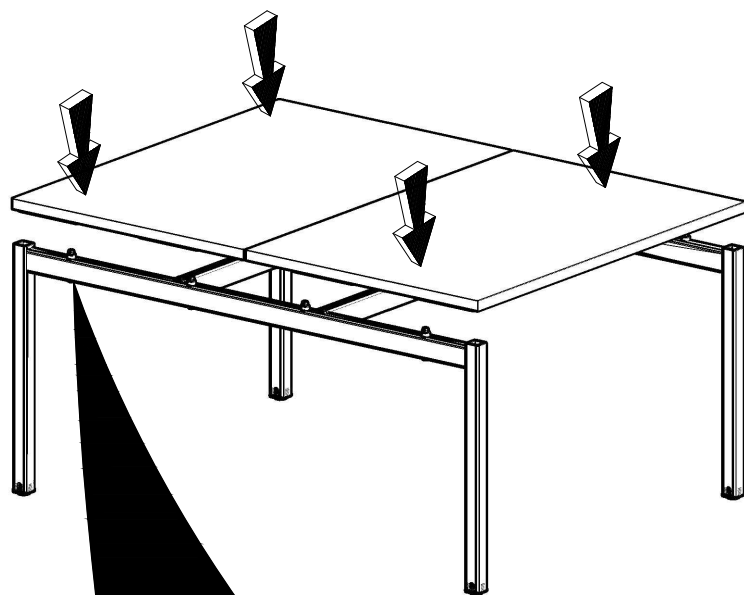

1









M05

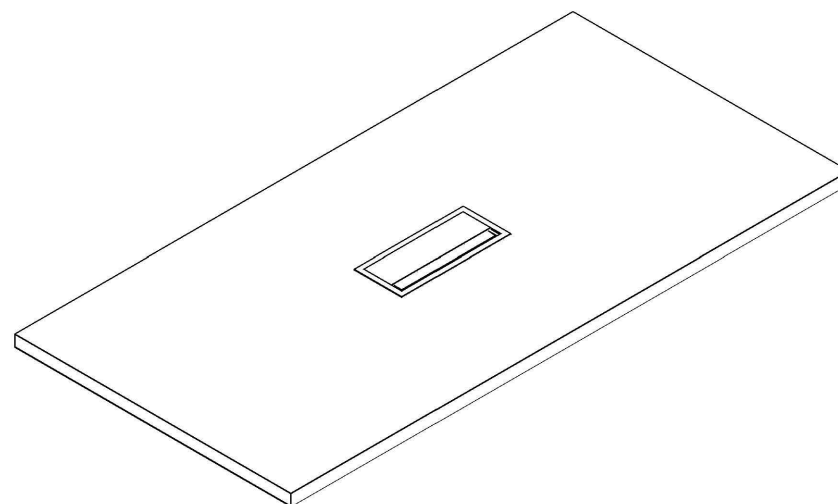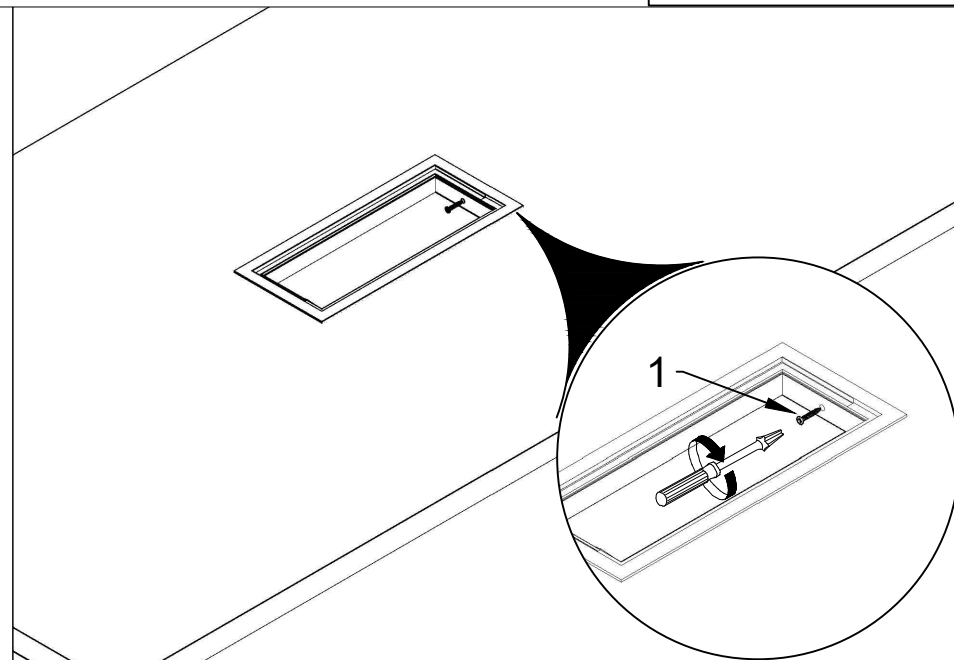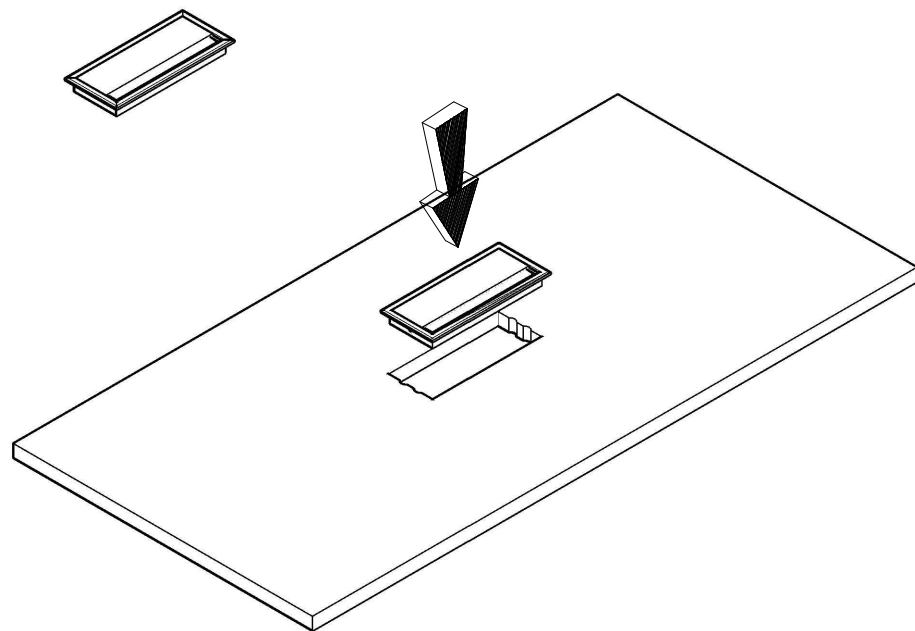

1









M04

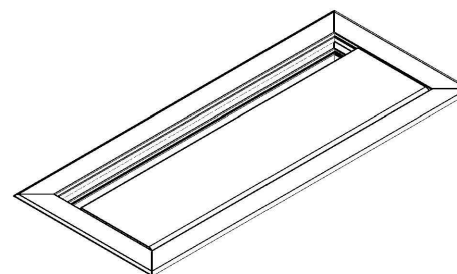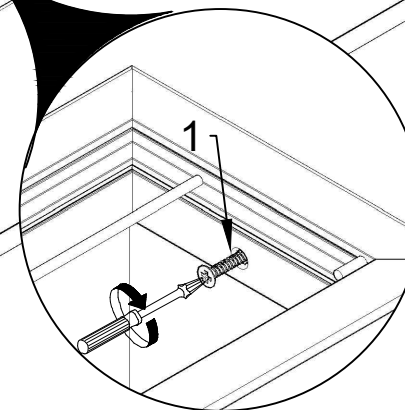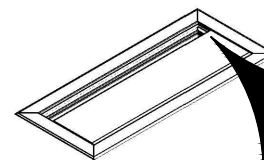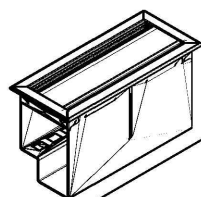




1




M04

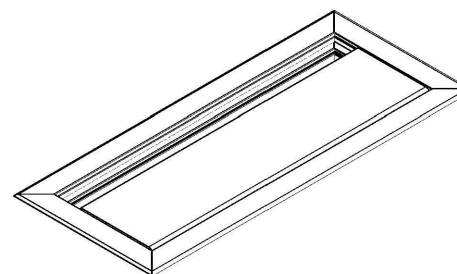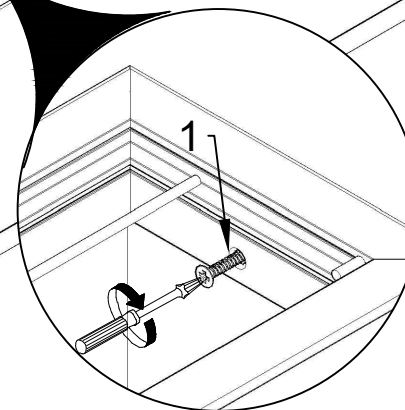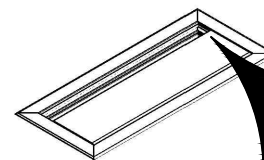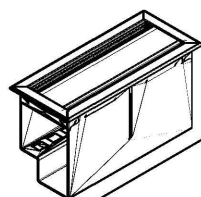

M07

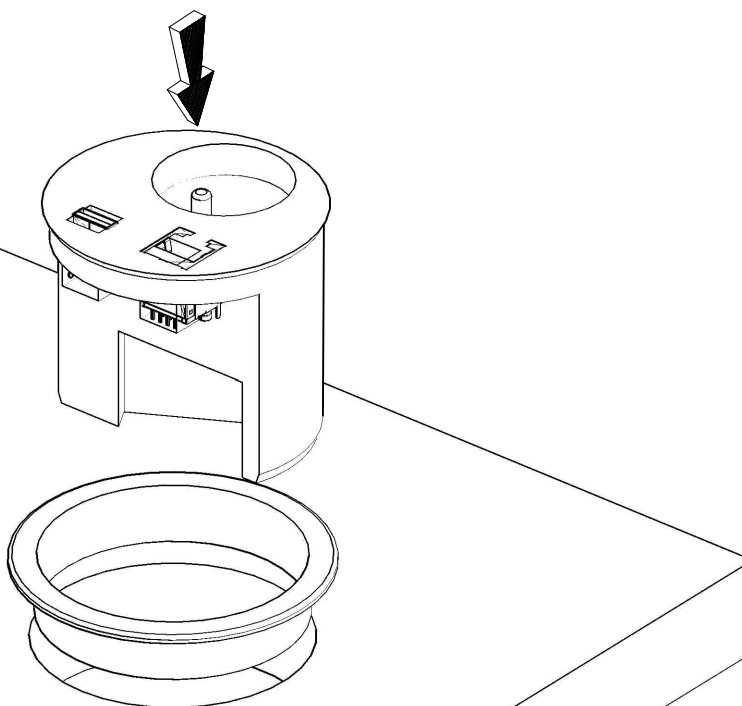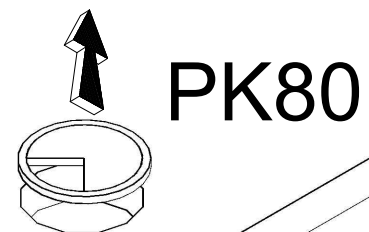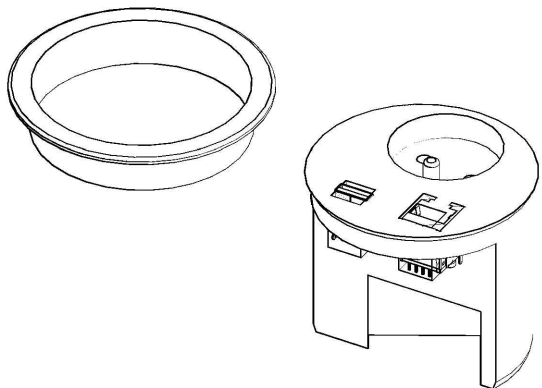

|    |  |
|----|--|
| 1  |  |
| 2  |  |
| 3  |  |
| 4  |  |
| 5  |  |
| 6  |  |
| 7  |  |
| 8  |  |
| 9  |  |
| 10 |  |

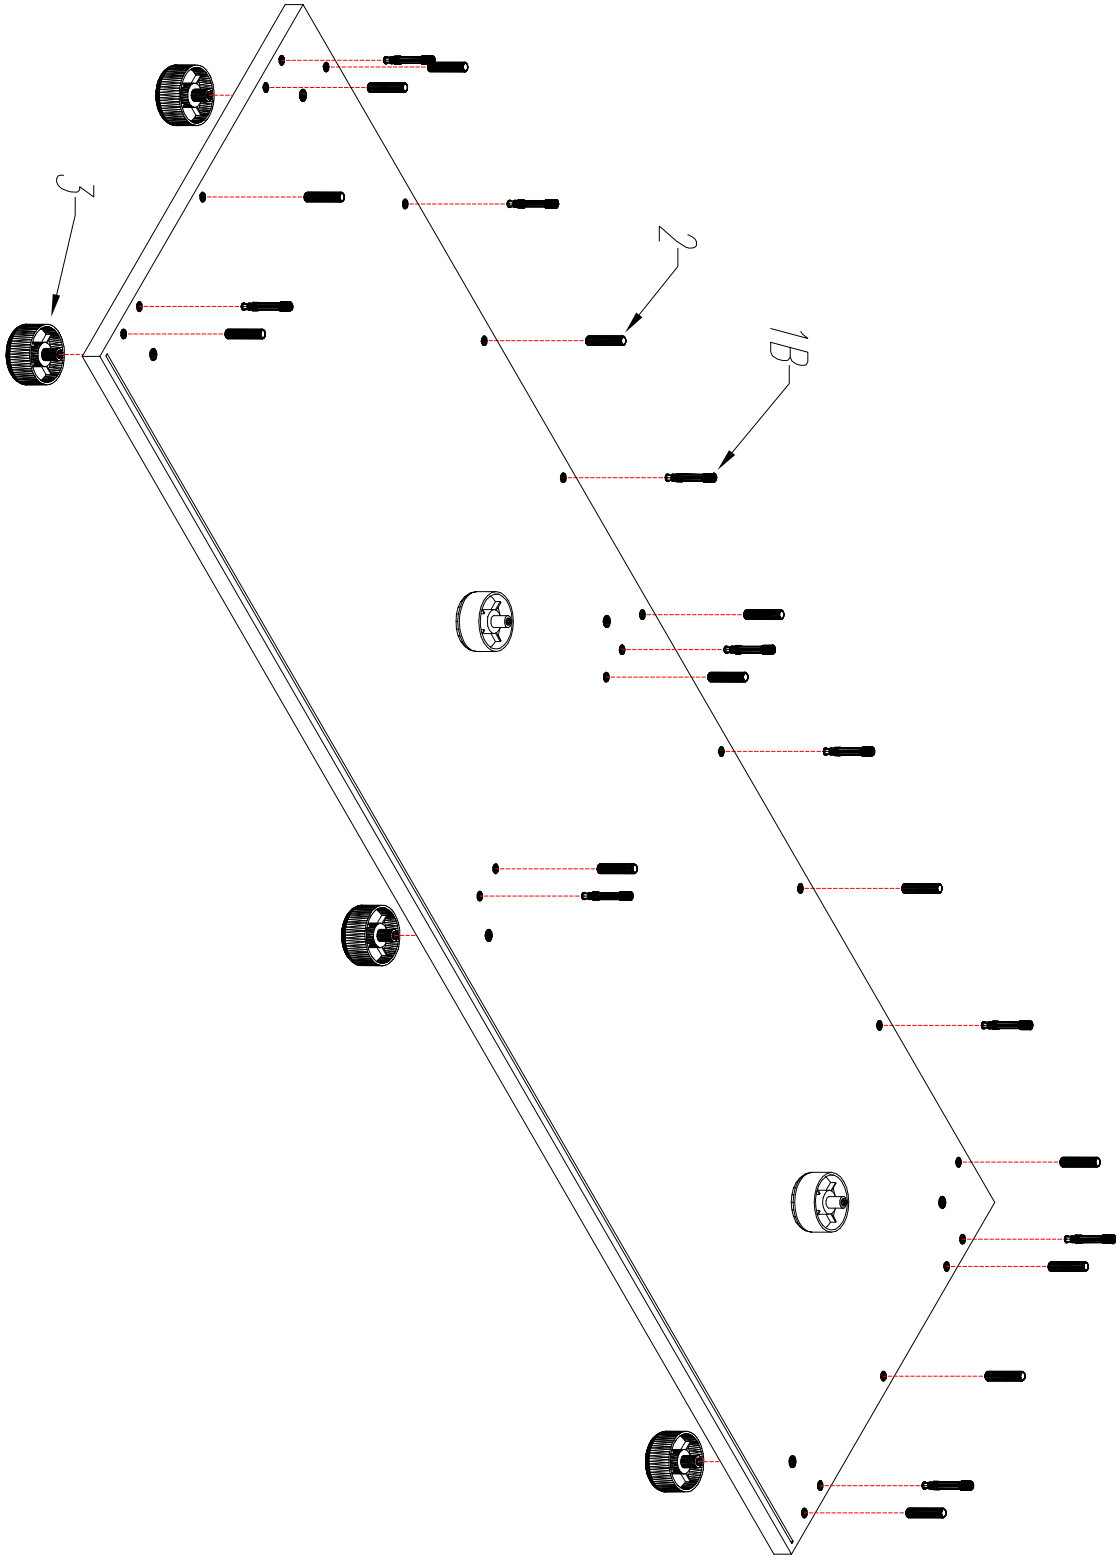

KOLEJNOŚĆ MONTAŻU  
 ИМООРООДОВ I КООКОВ.  
 THE FITTINGS SEQUENCE OF THE  
 CAMS AND DOWELS.  
 DIE MONTAGEFOLGE VON  
 EXZENTERN UND DIBBELN.

1


2


3


4

5


6

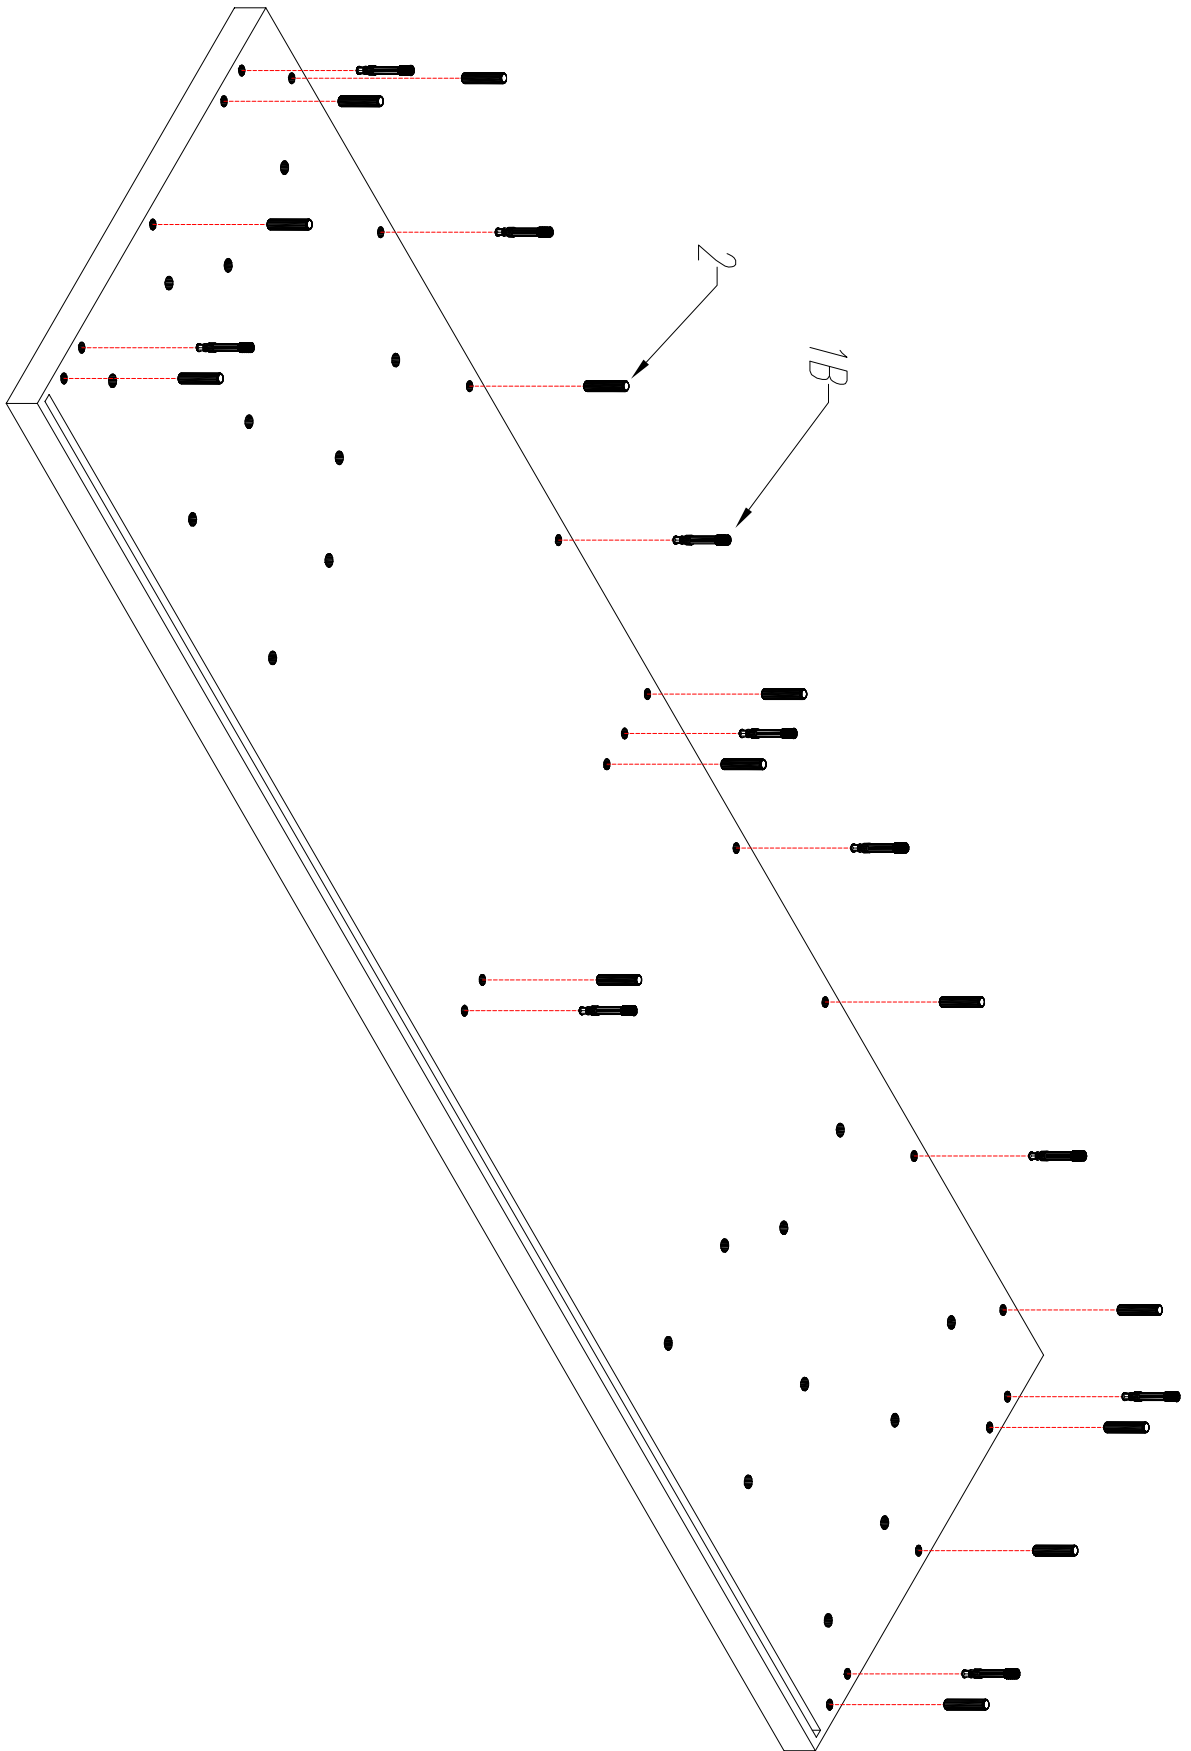

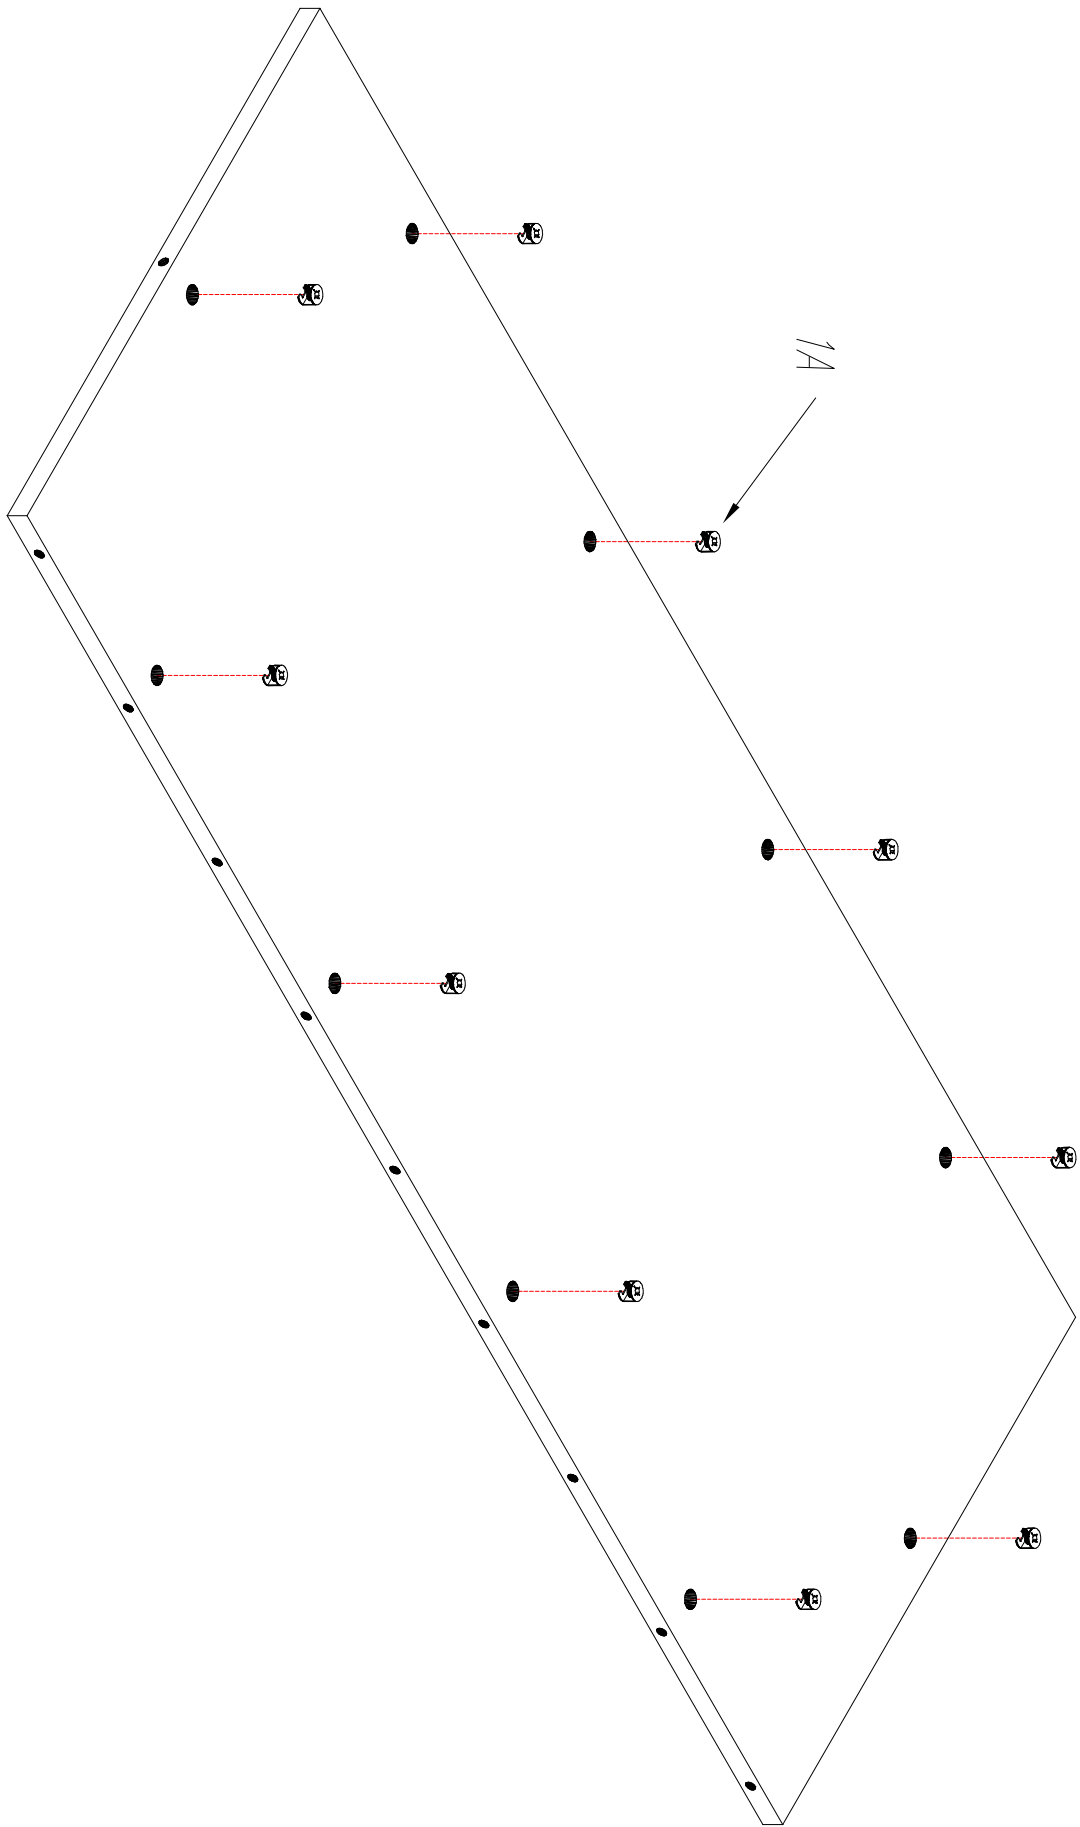


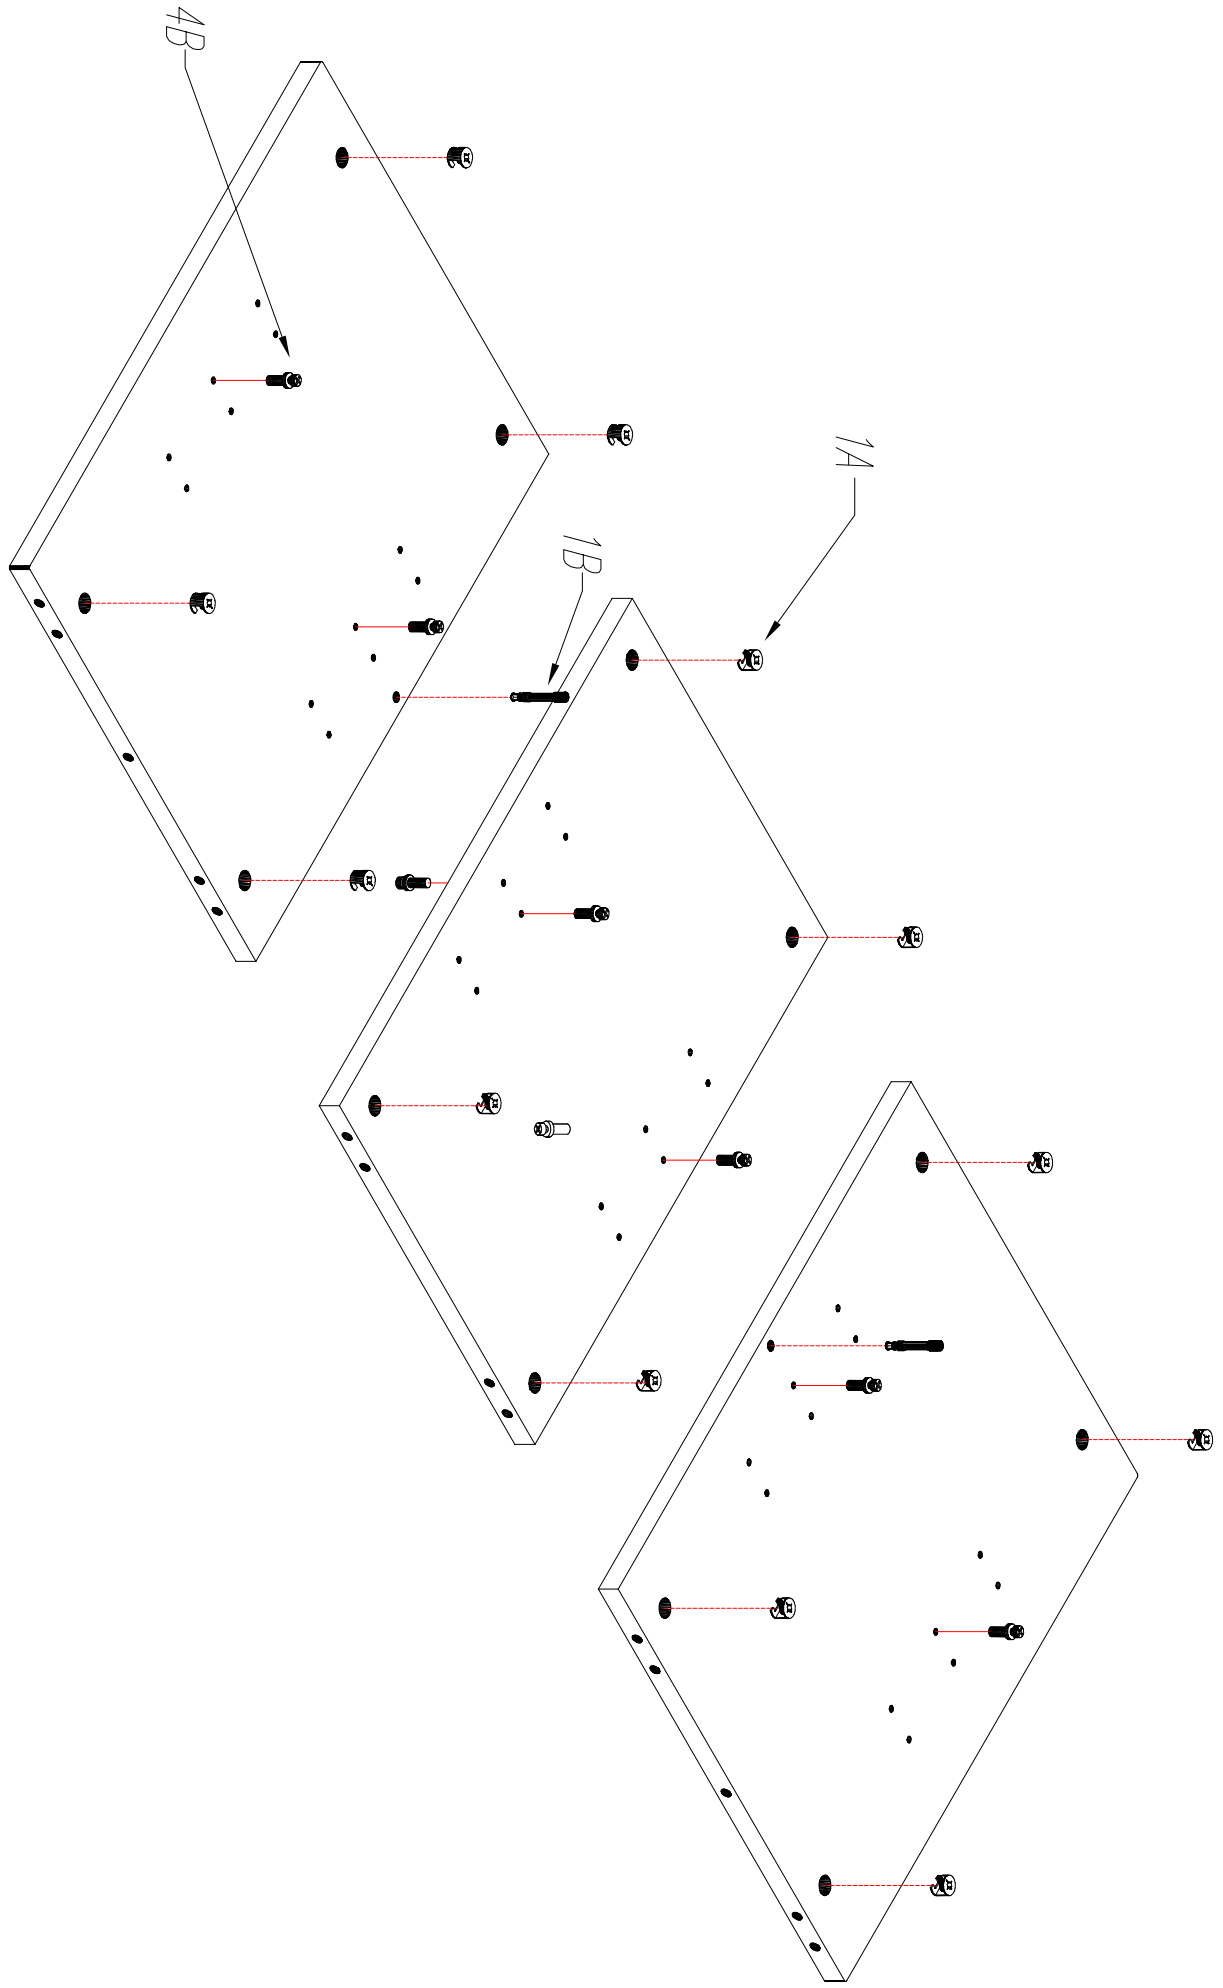


G

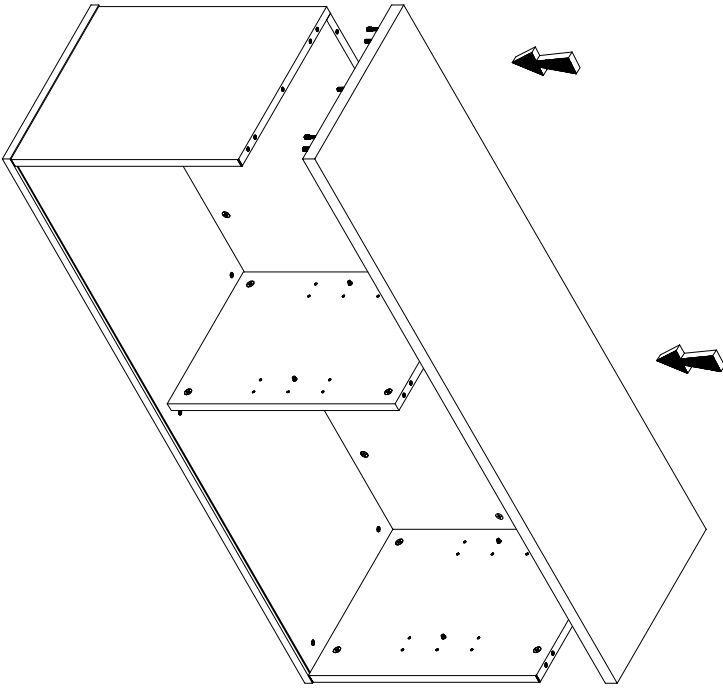


F



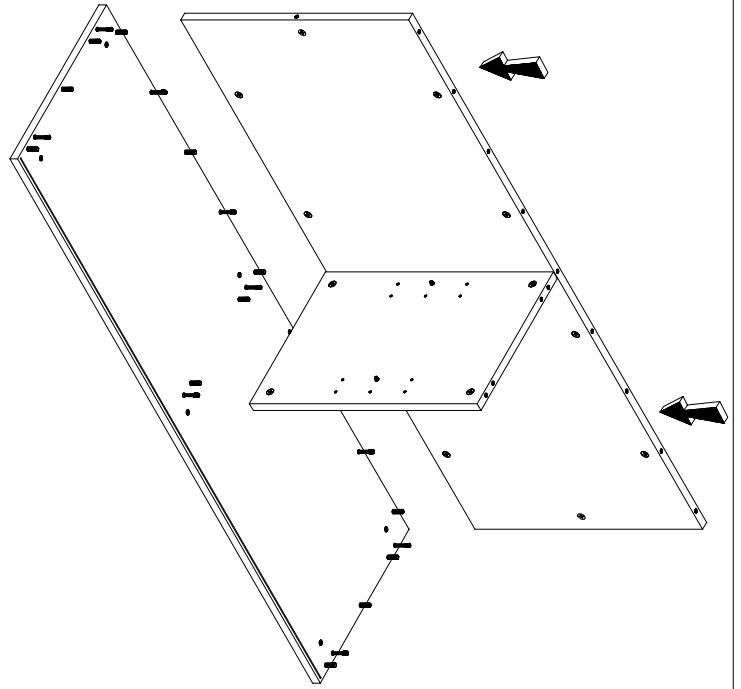


H

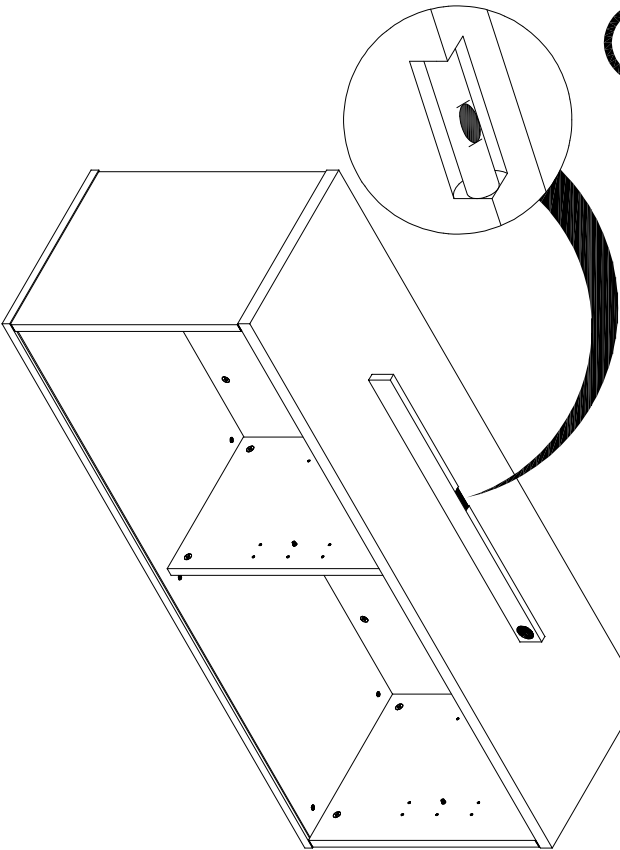


T


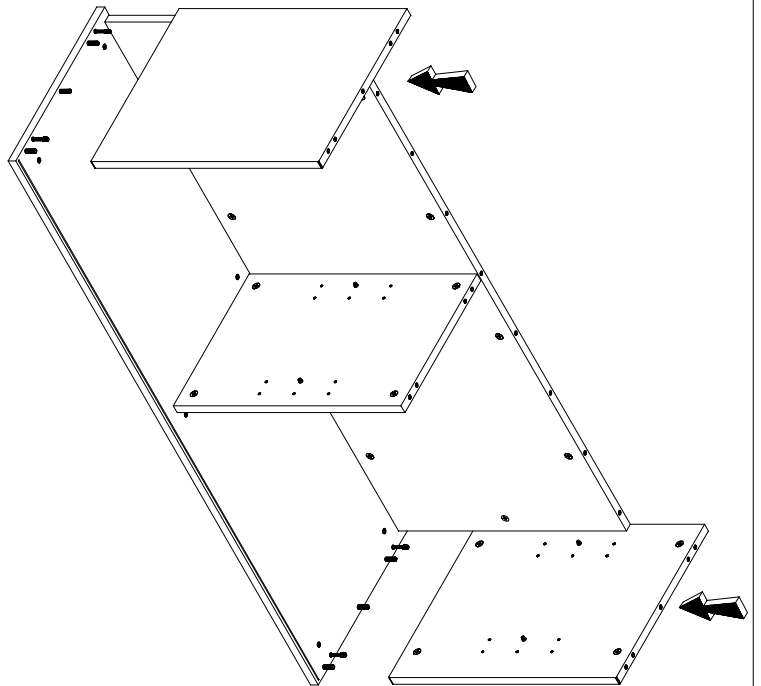


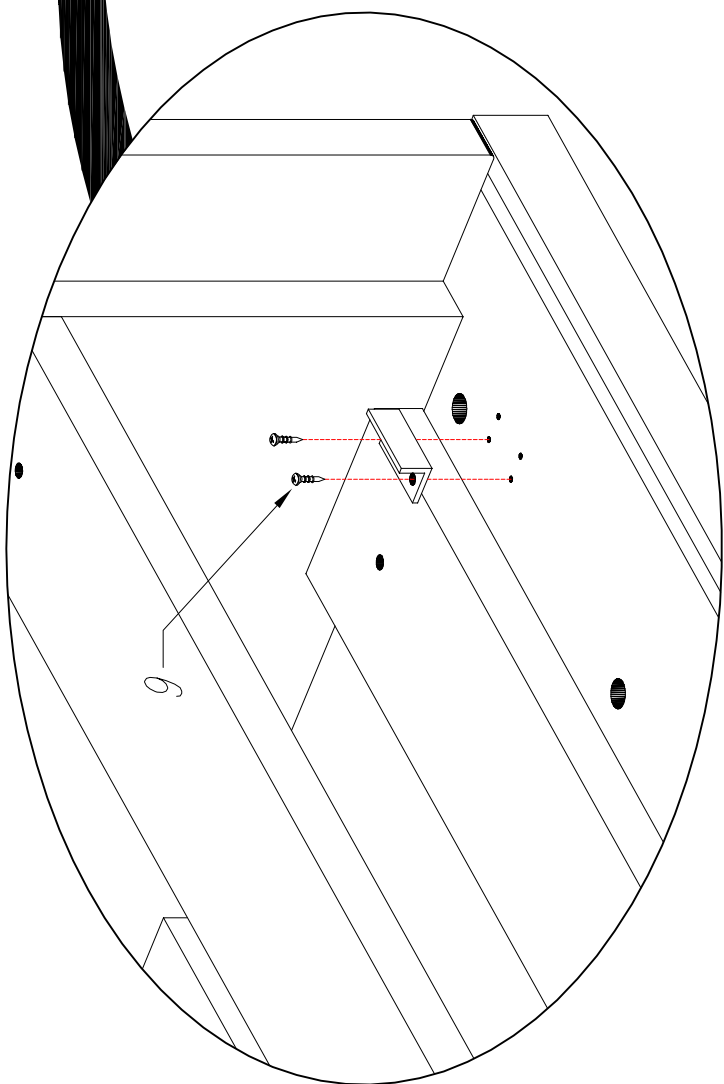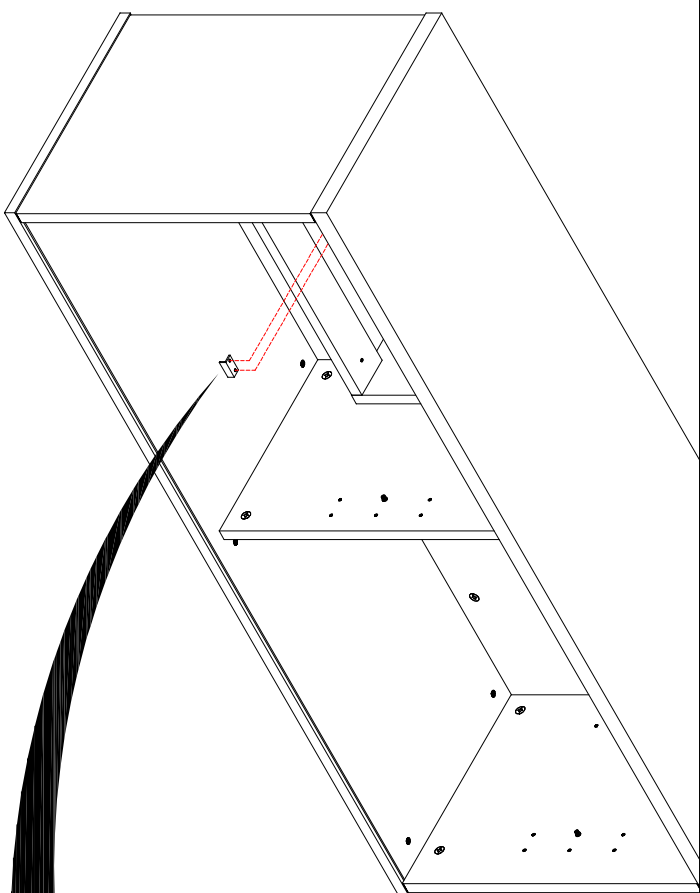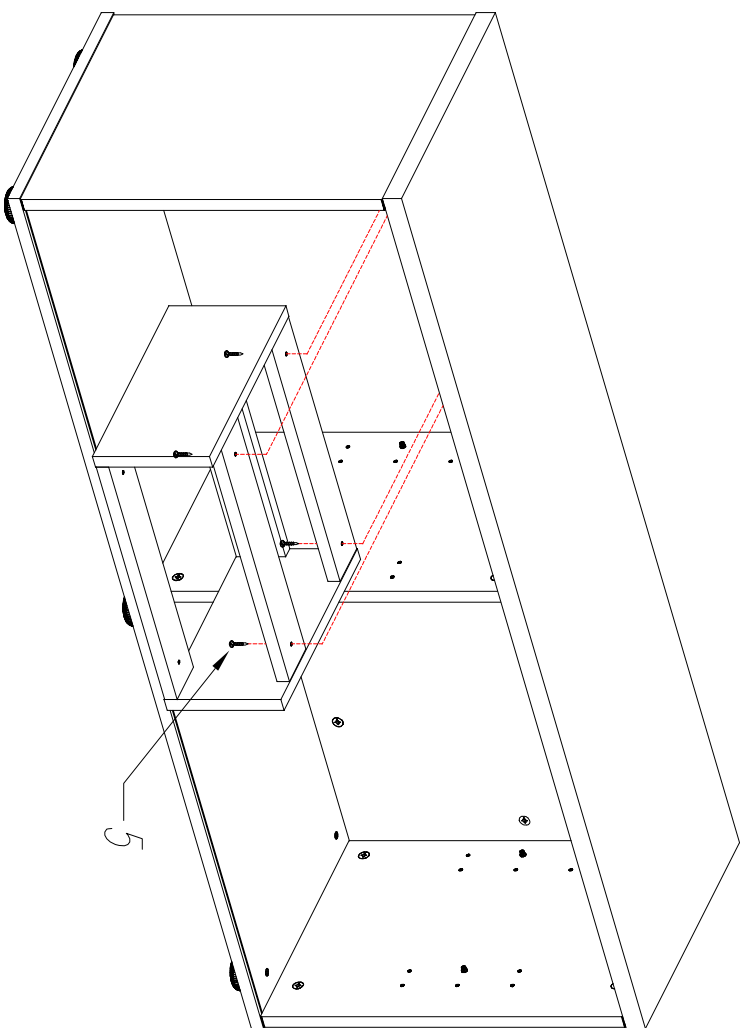


K

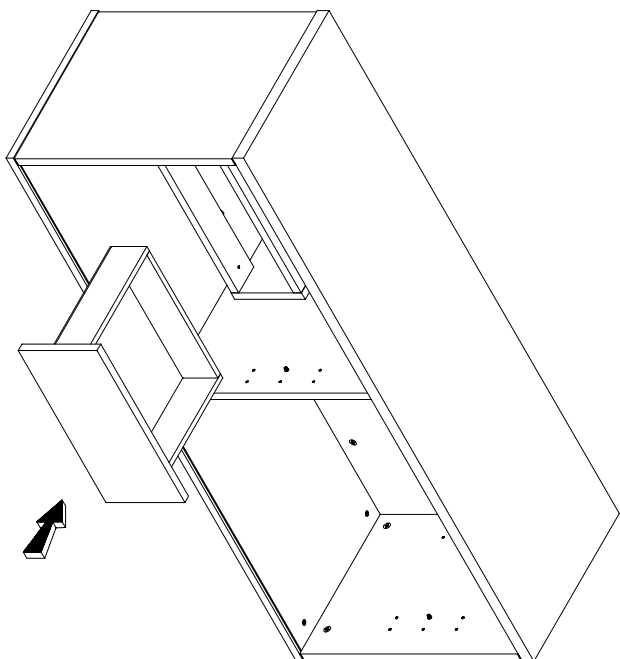


-Przykręć śruby z  
małą siłą.  
-Put the screws gently.  
-Anschrauben die  
Schrauben zierlich.

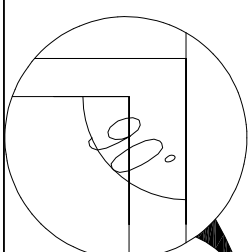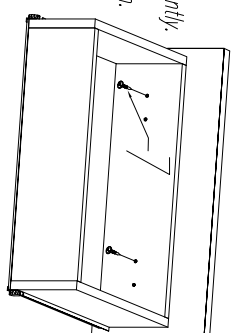



-Przykręć śruby z  
dużą siłą.  
-Put the screws strongly.  
-Anschrauben die  
Schrauben staerklich.




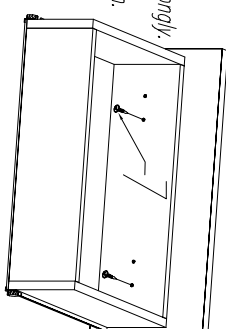



L

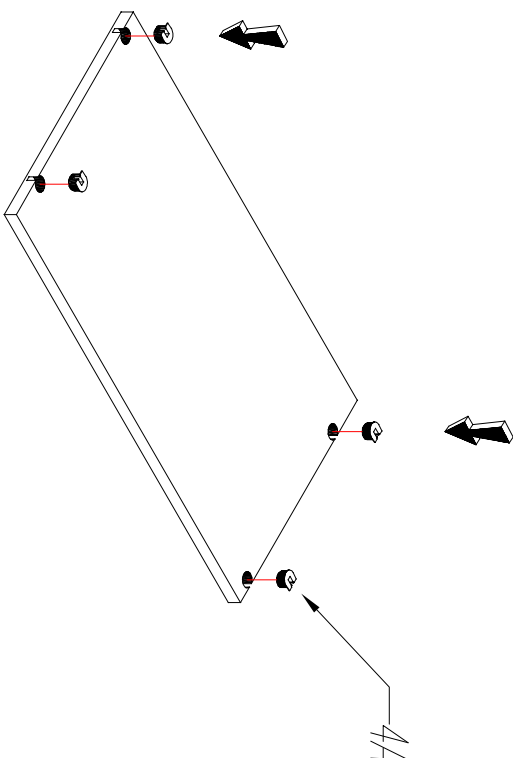



M

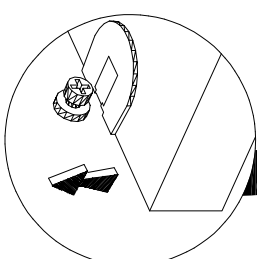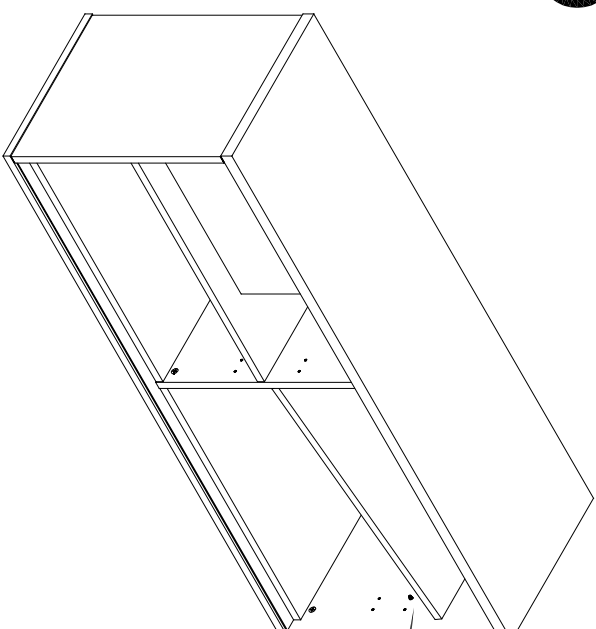

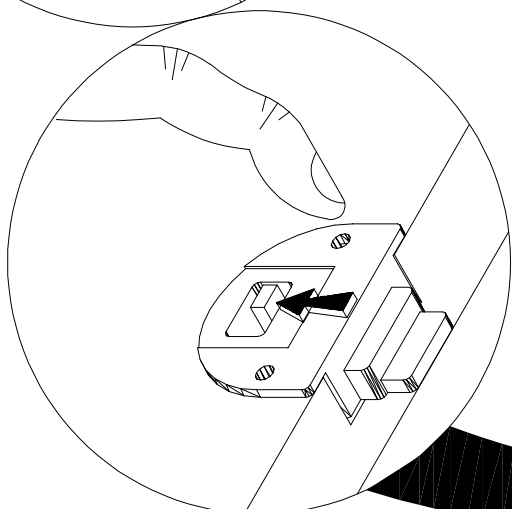
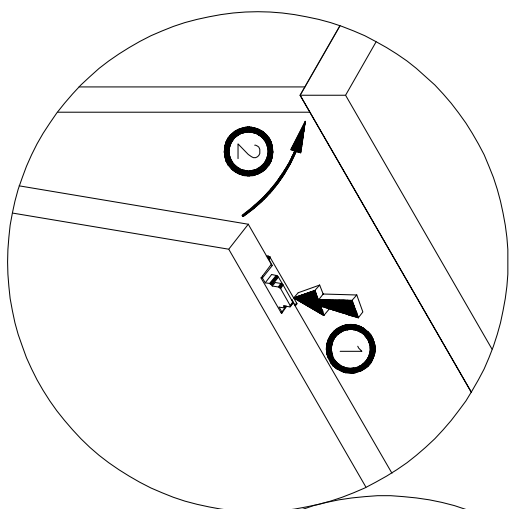
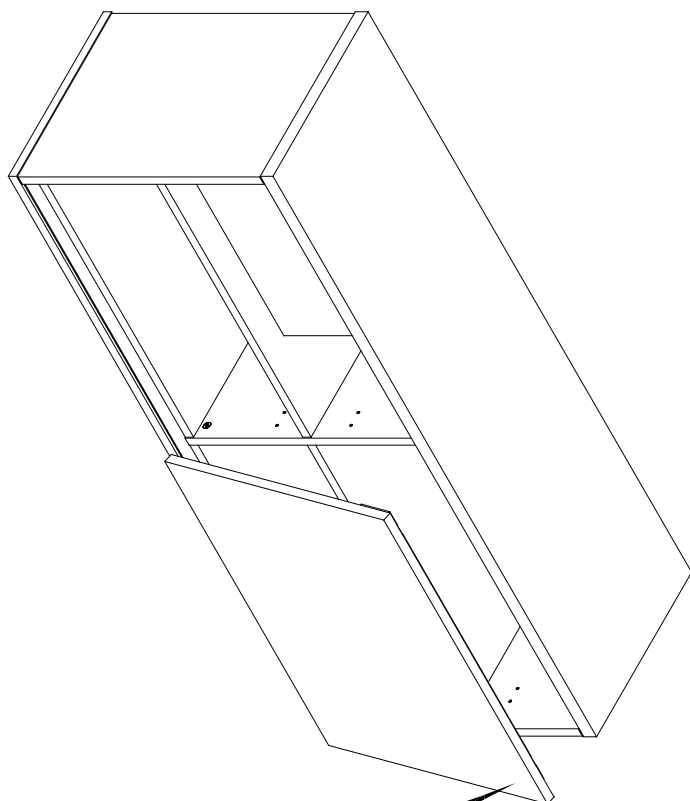
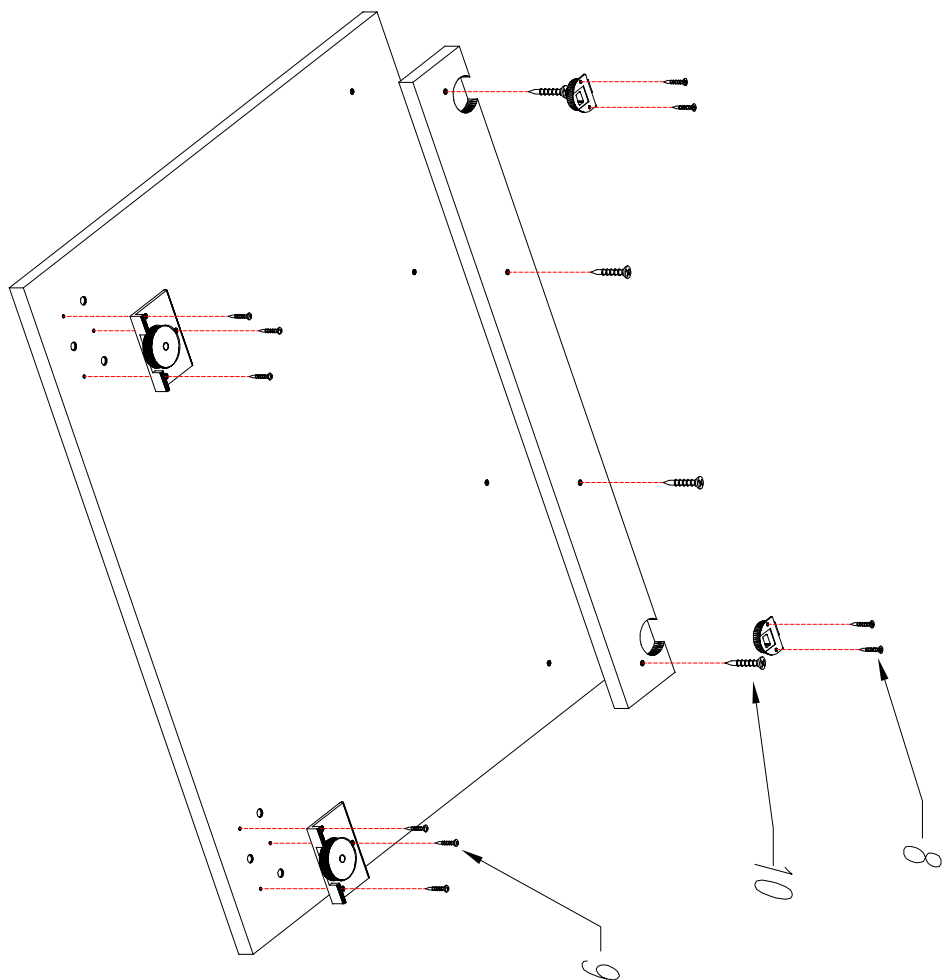




|   |                                                                                     |        |
|---|-------------------------------------------------------------------------------------|--------|
| 1 |   | M6x20B |
| 2 |  | M6     |
| 3 |  | M6     |

A

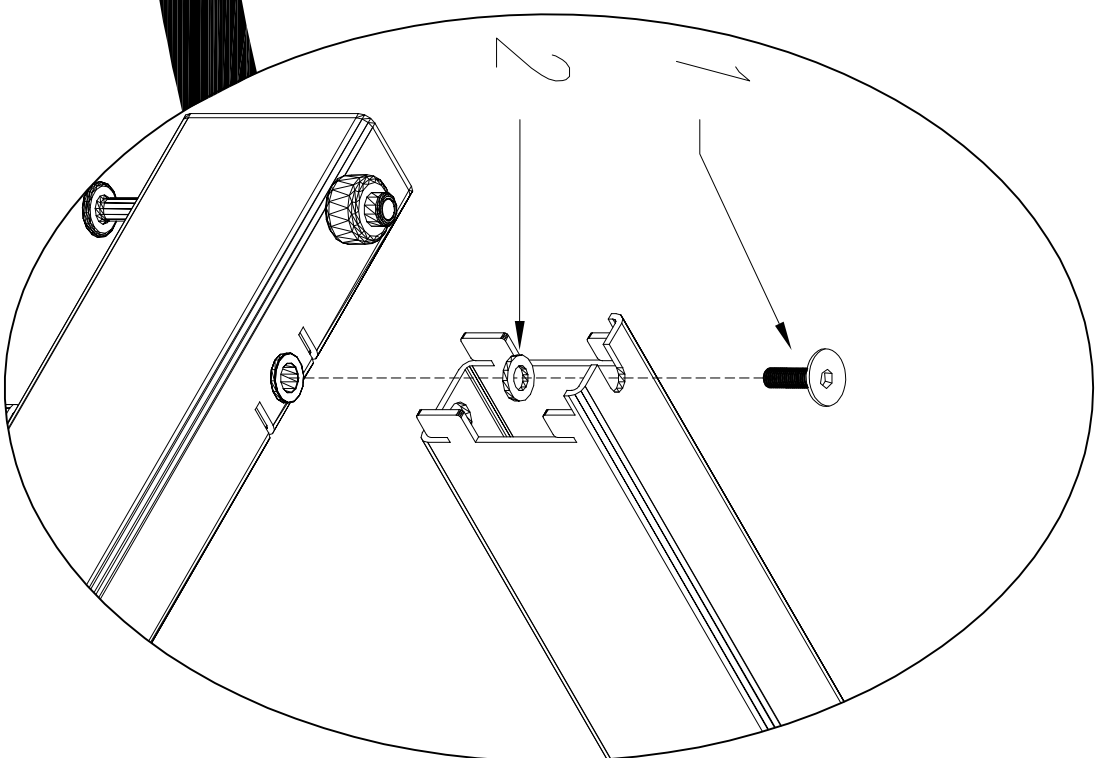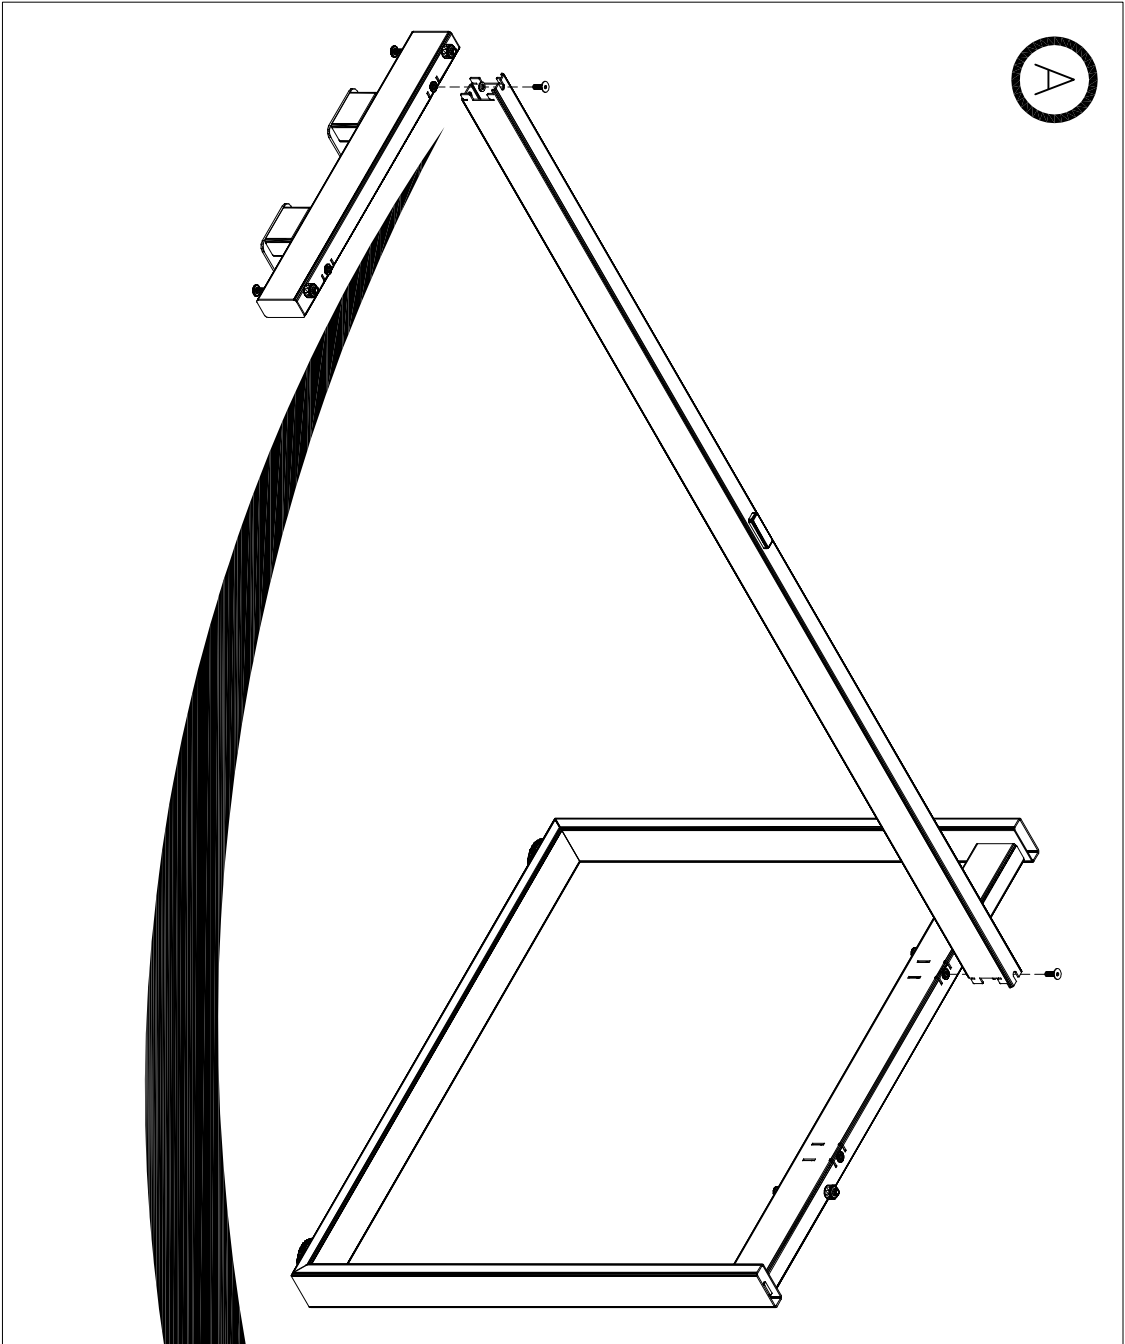



OGI

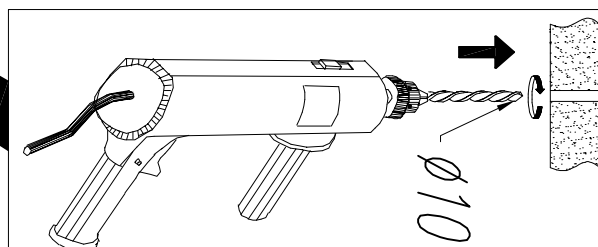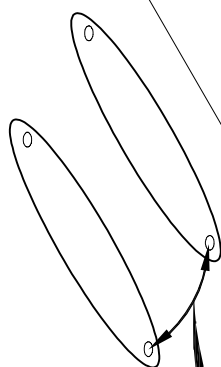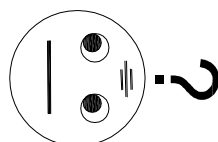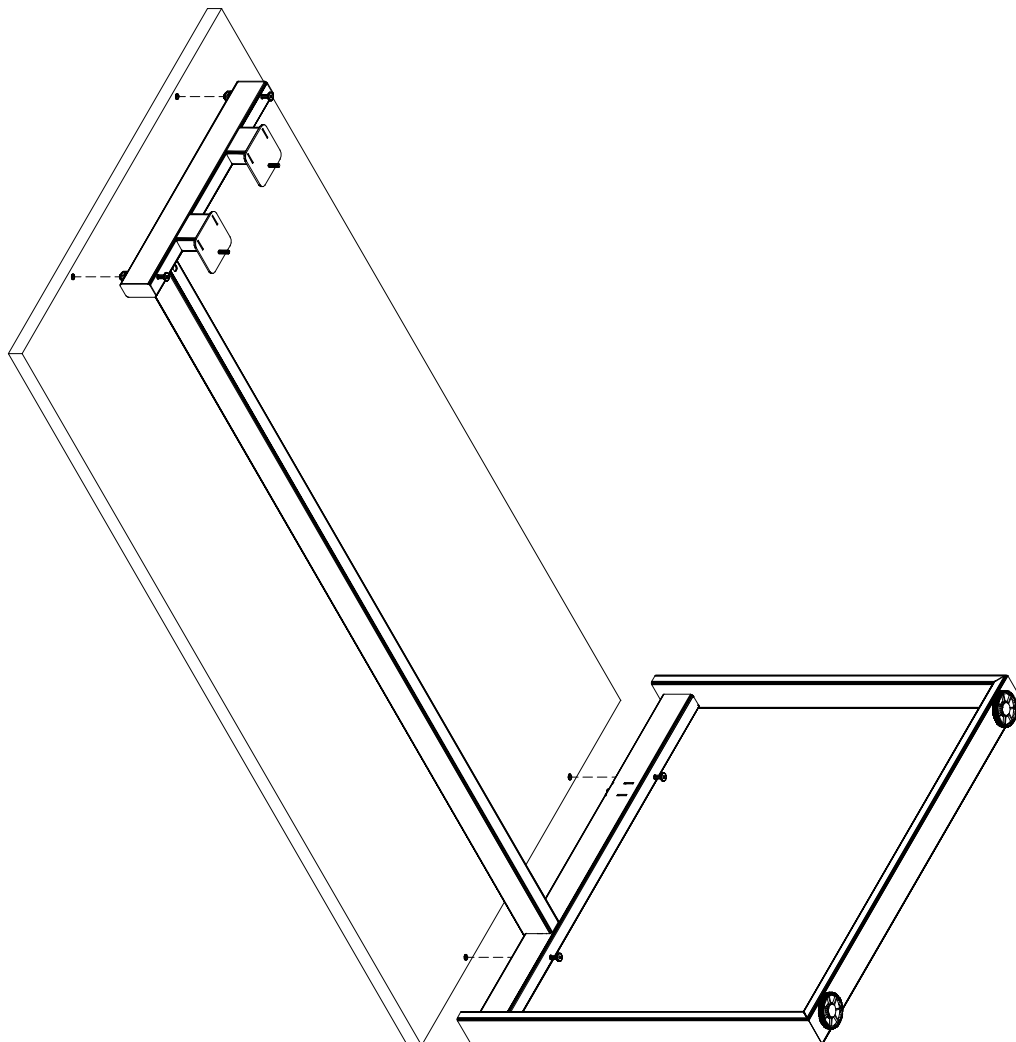

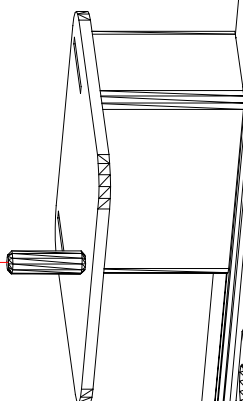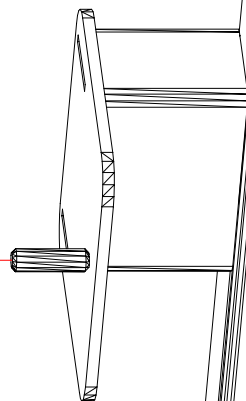


3








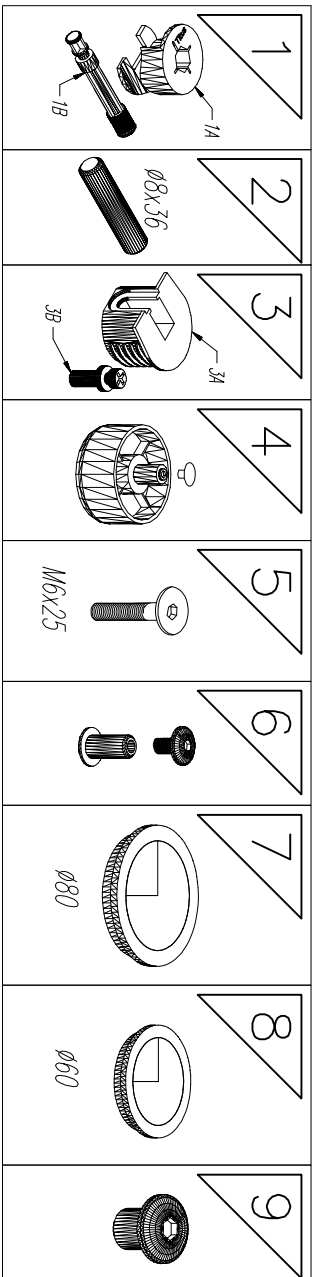


# A12M

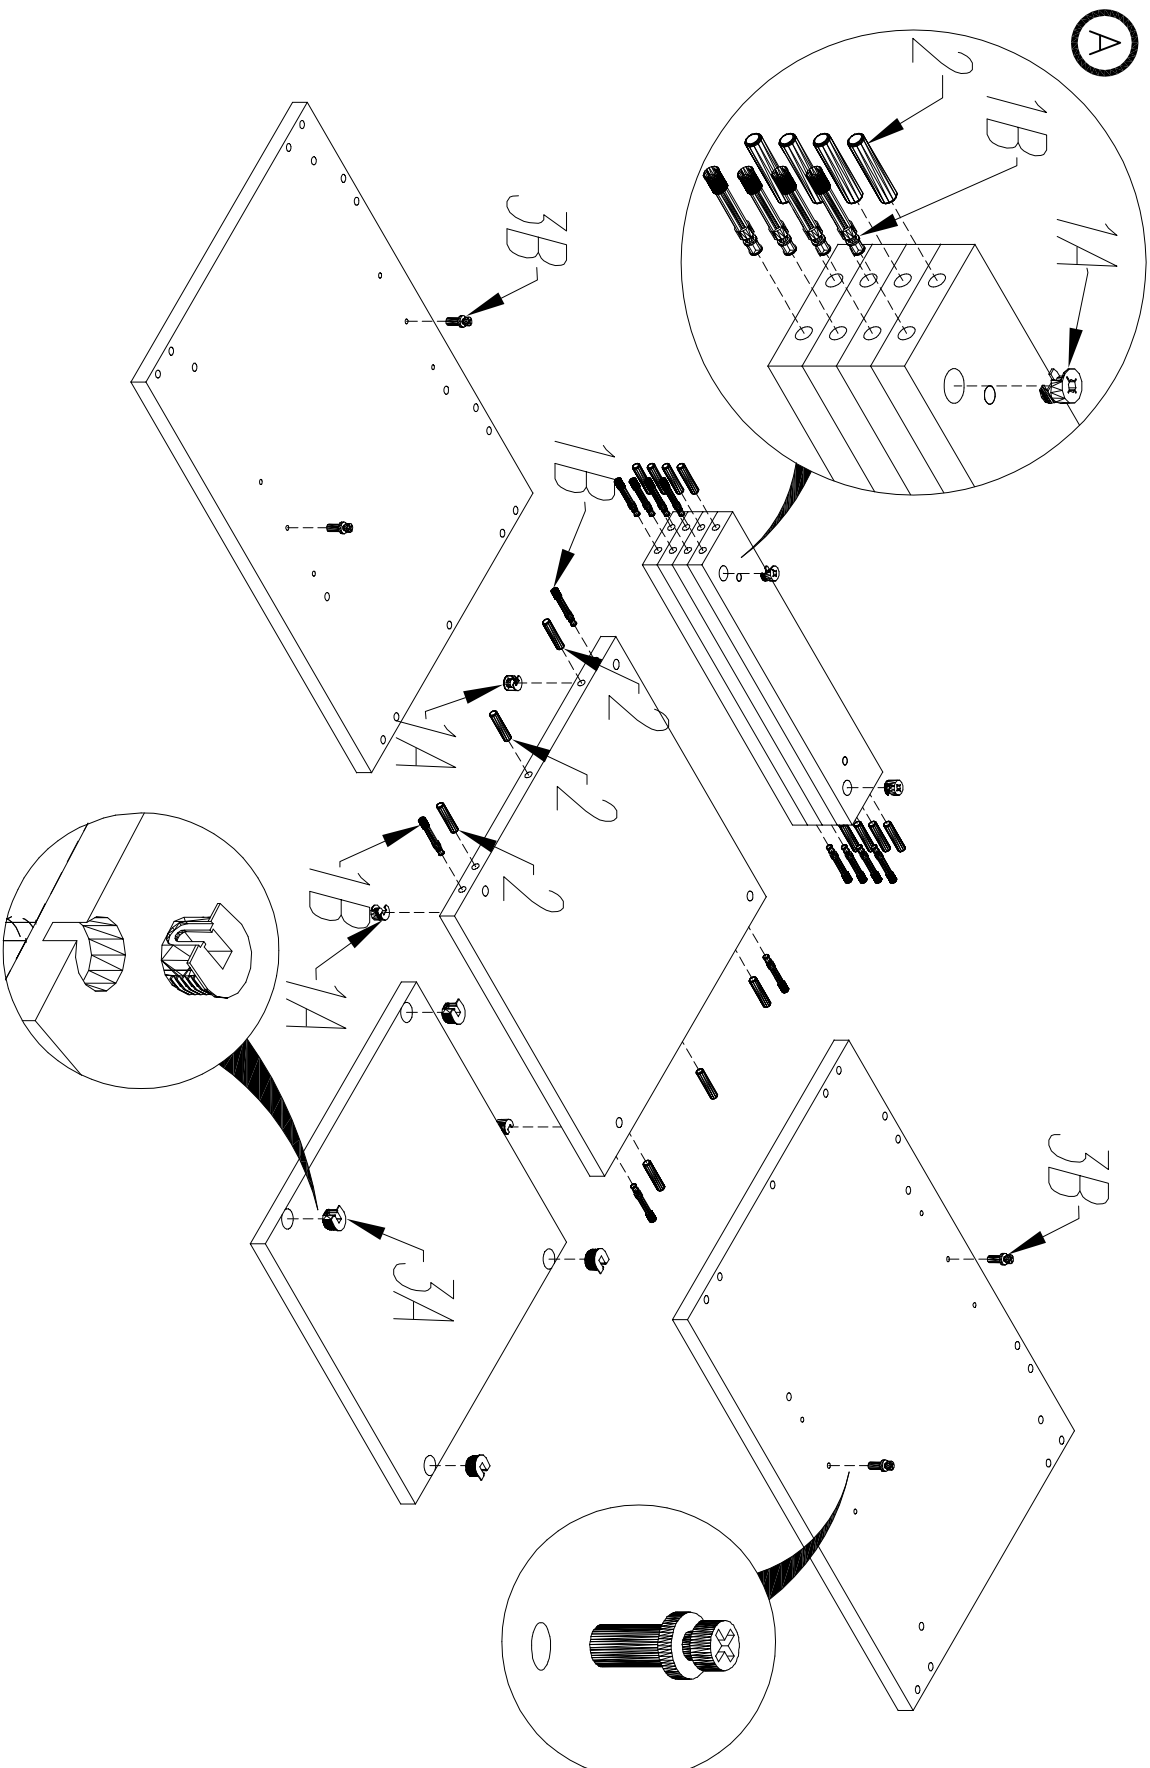


KOLEJNOŚĆ MONTAŻU  
MIMOŚRODÓW I KOLEJN.  
THE FITTINGS SEQUENCE OF THE  
CAMS AND DOWELS.  
DIE MONTAGEABFOLGE VON  
EZENTERN UND DÜBELN.

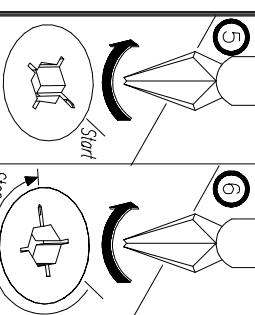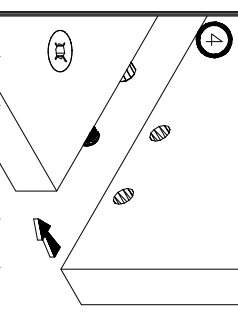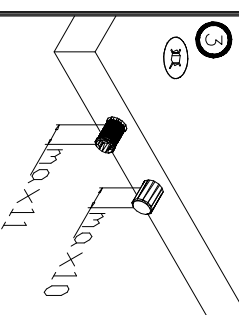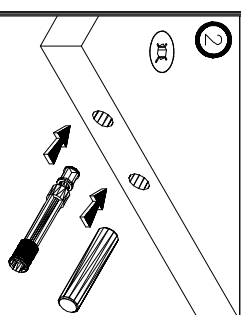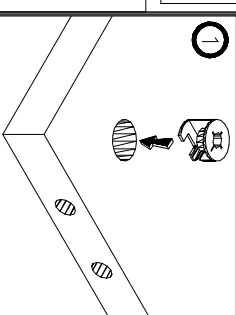

B

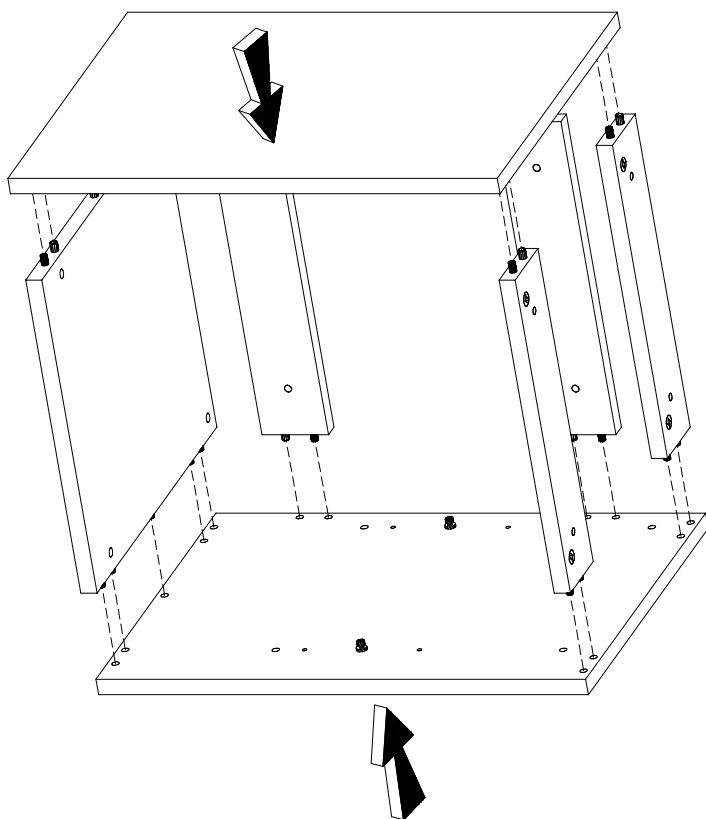

C

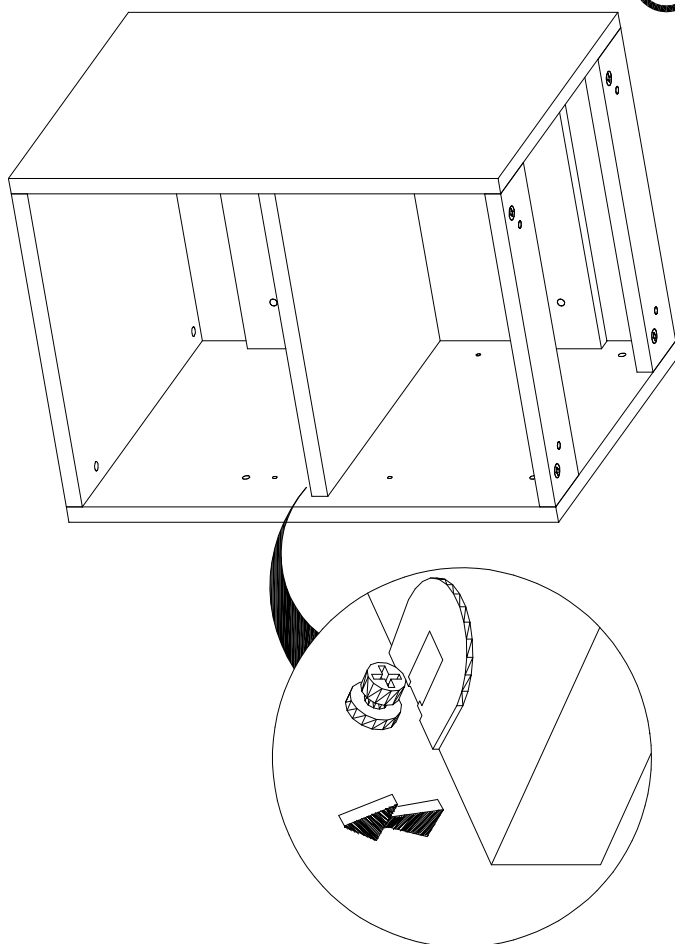

D

