



OGI SLIDE


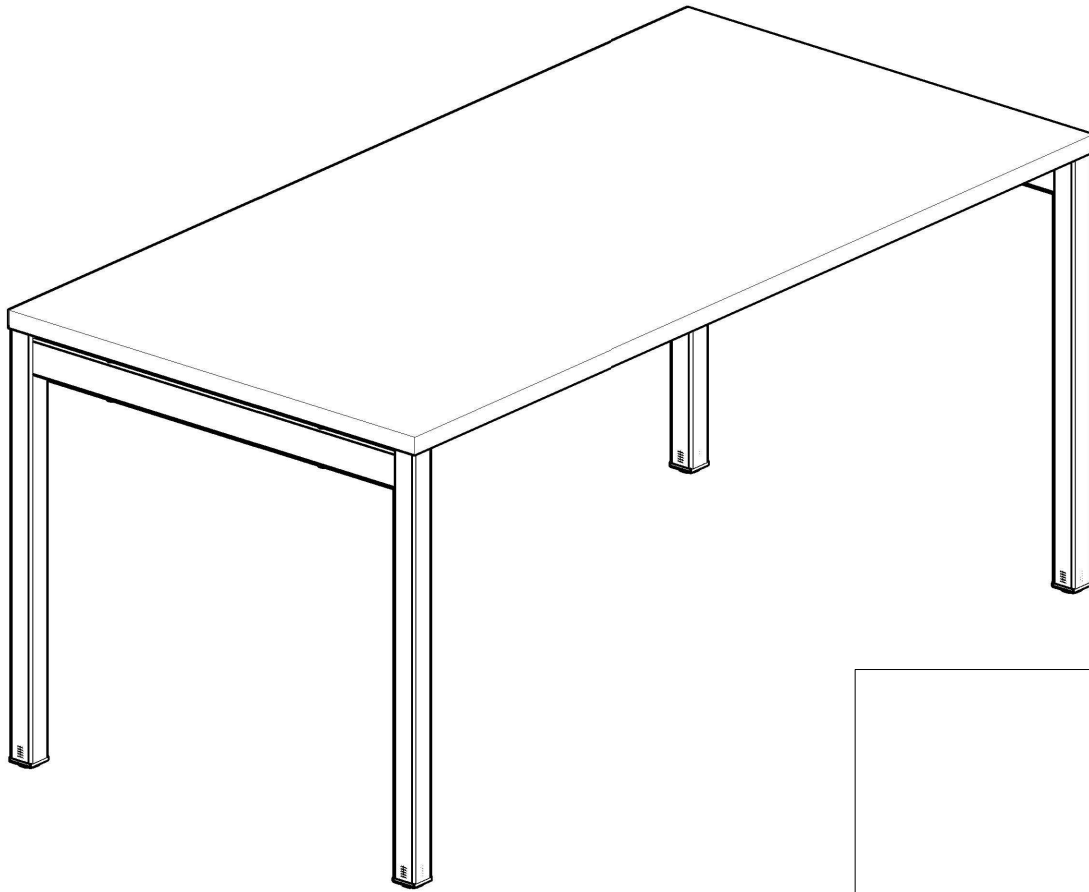



BOX 1

BOX 2

BOX 3

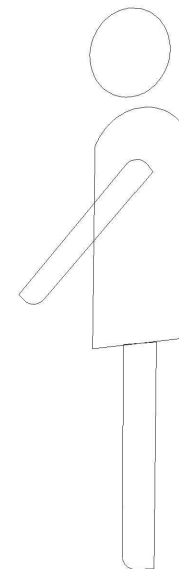

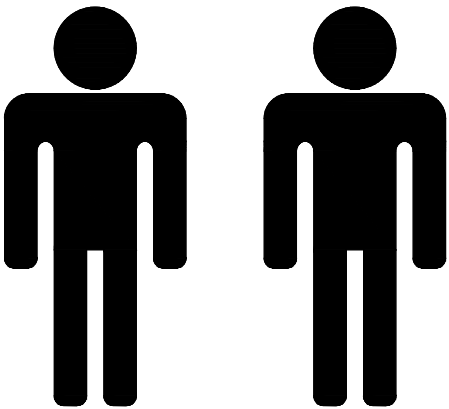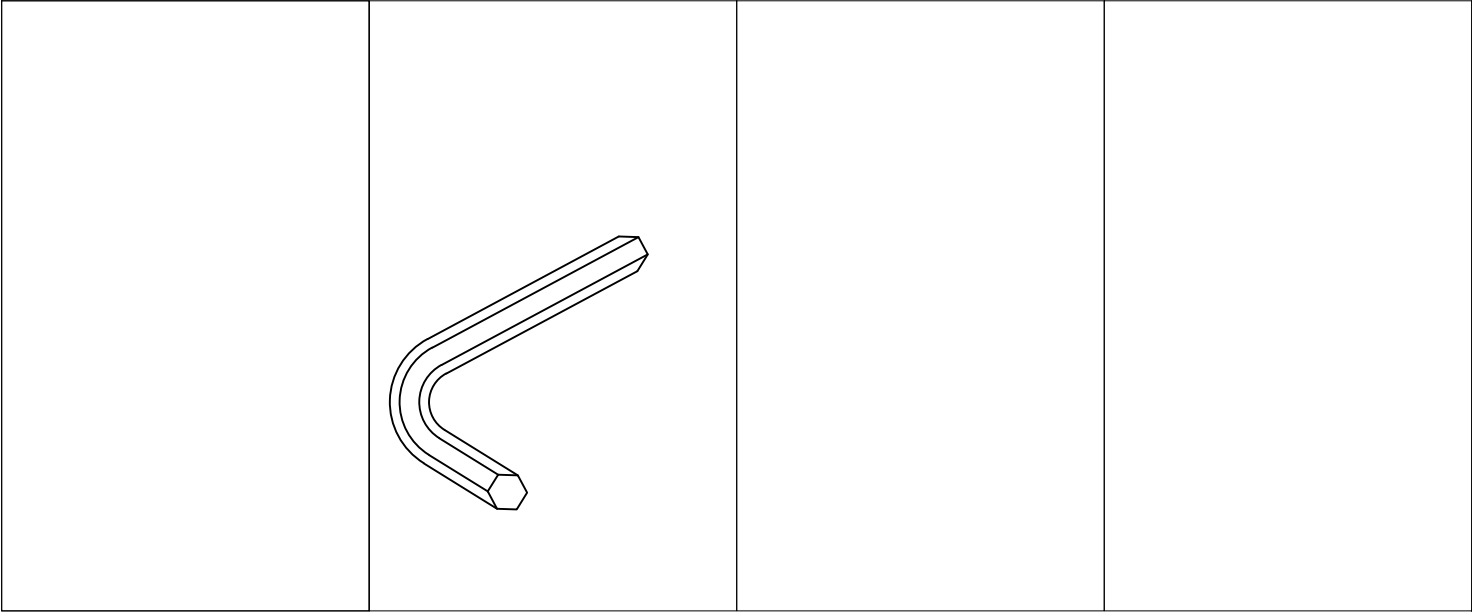


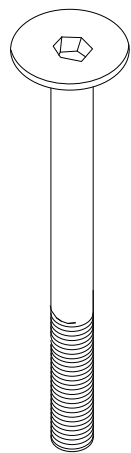

M6x68

4x


1

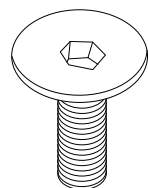

M6x10


2x

2

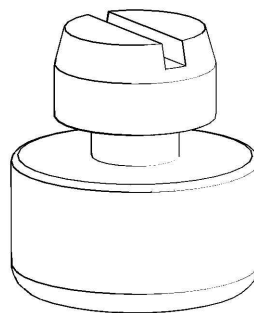


4x

3

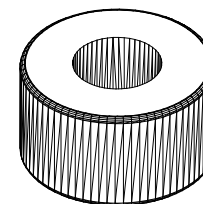


2x

4

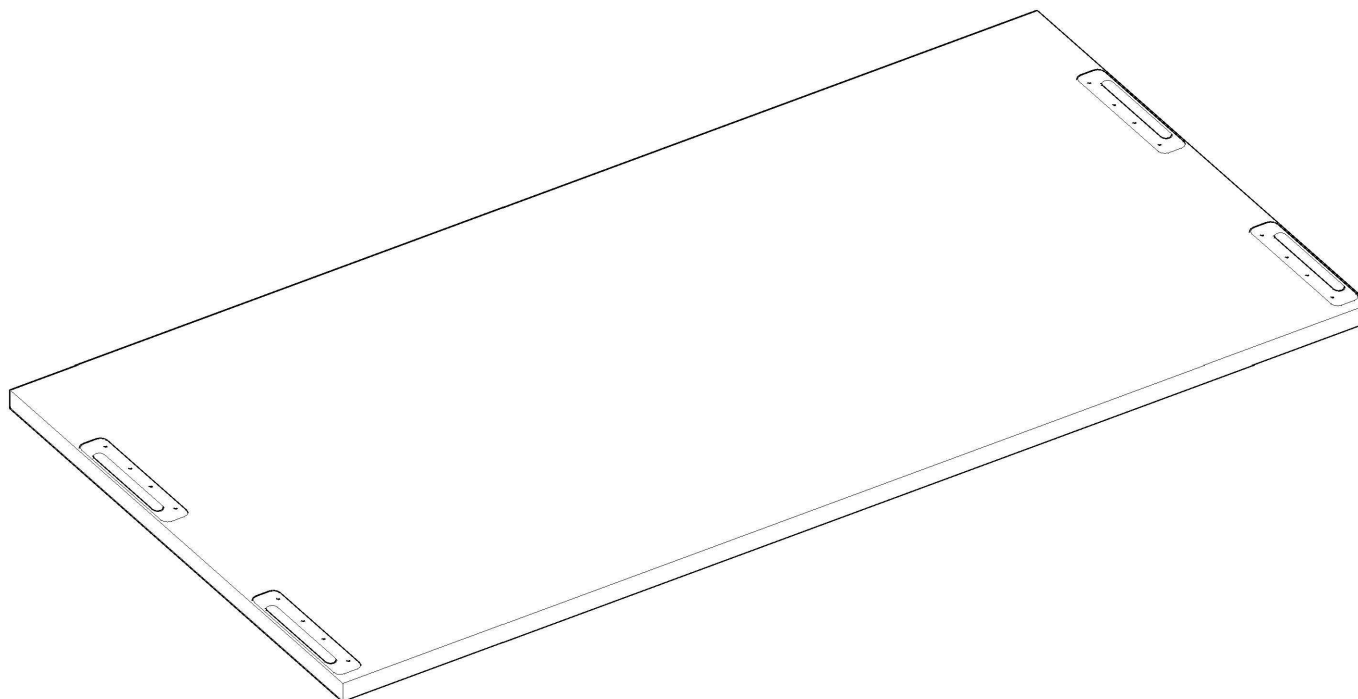


3


5

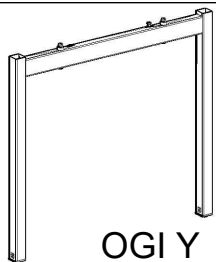


OGI Y

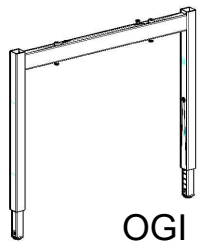


OGI Y

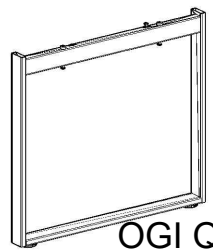


OGI Q

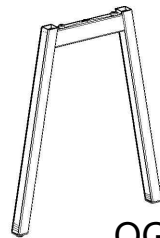


OGI M


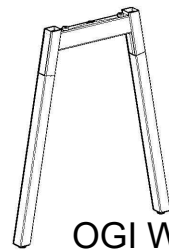




OGI W


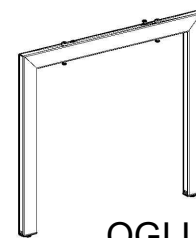


OGI U

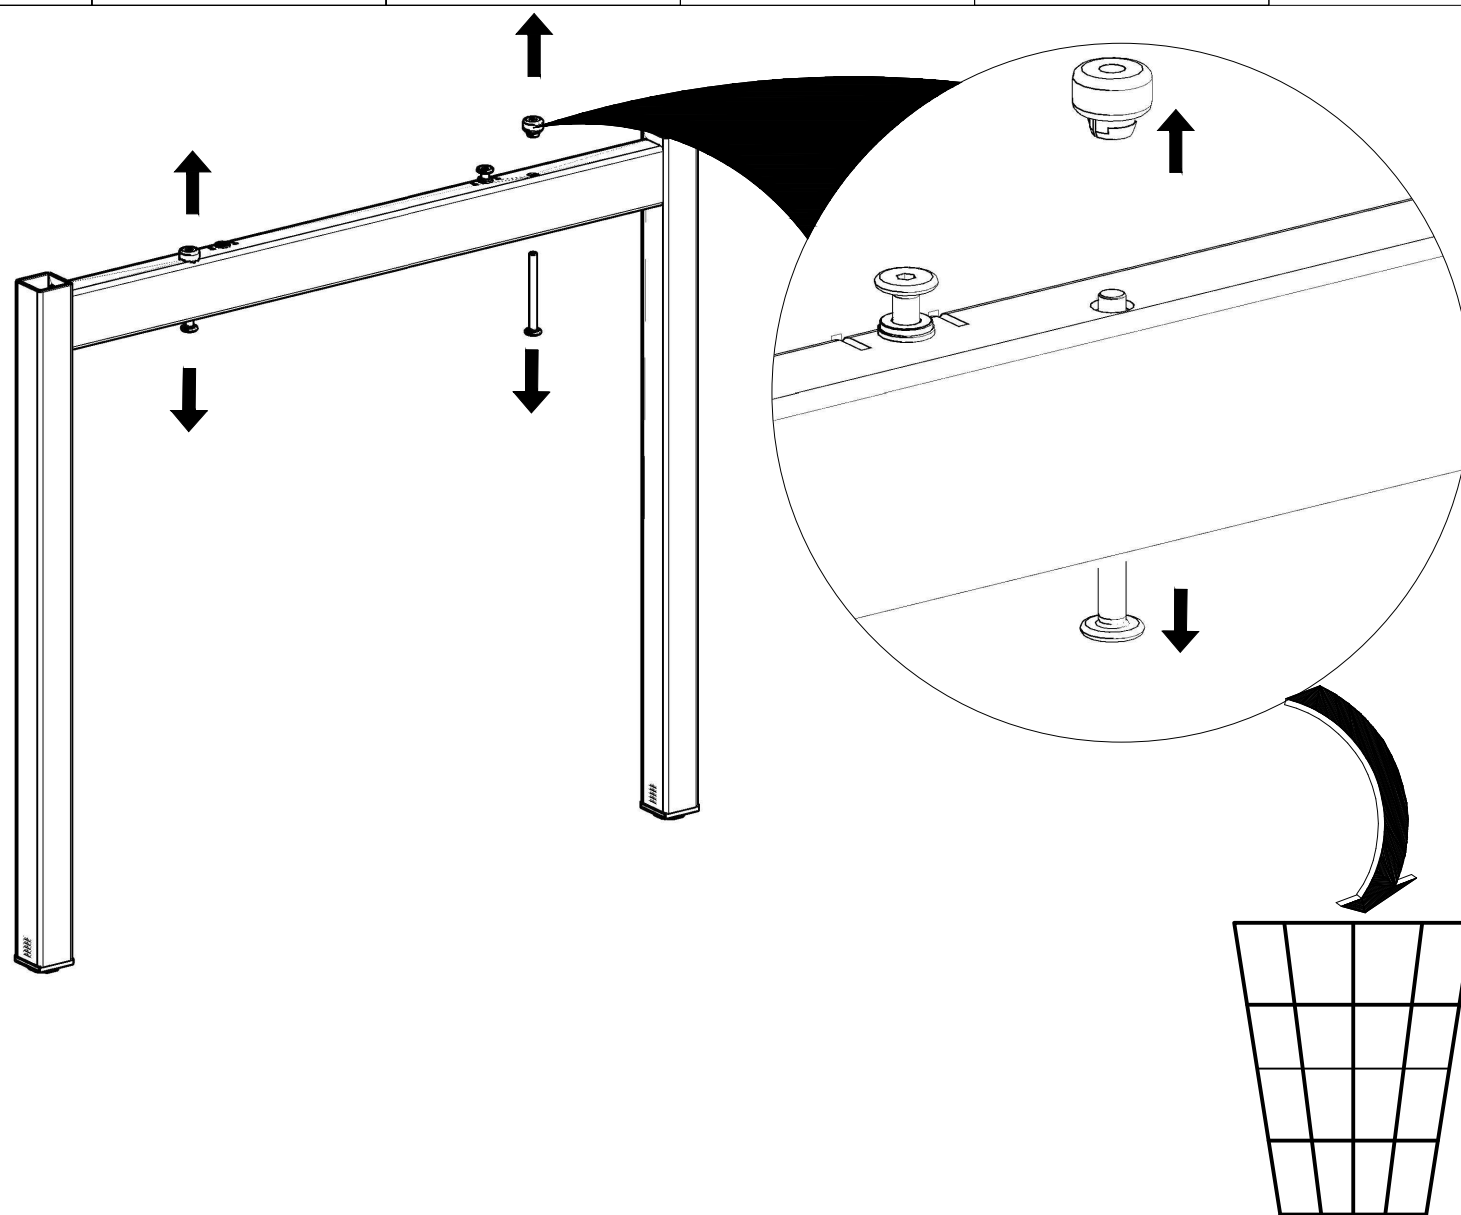


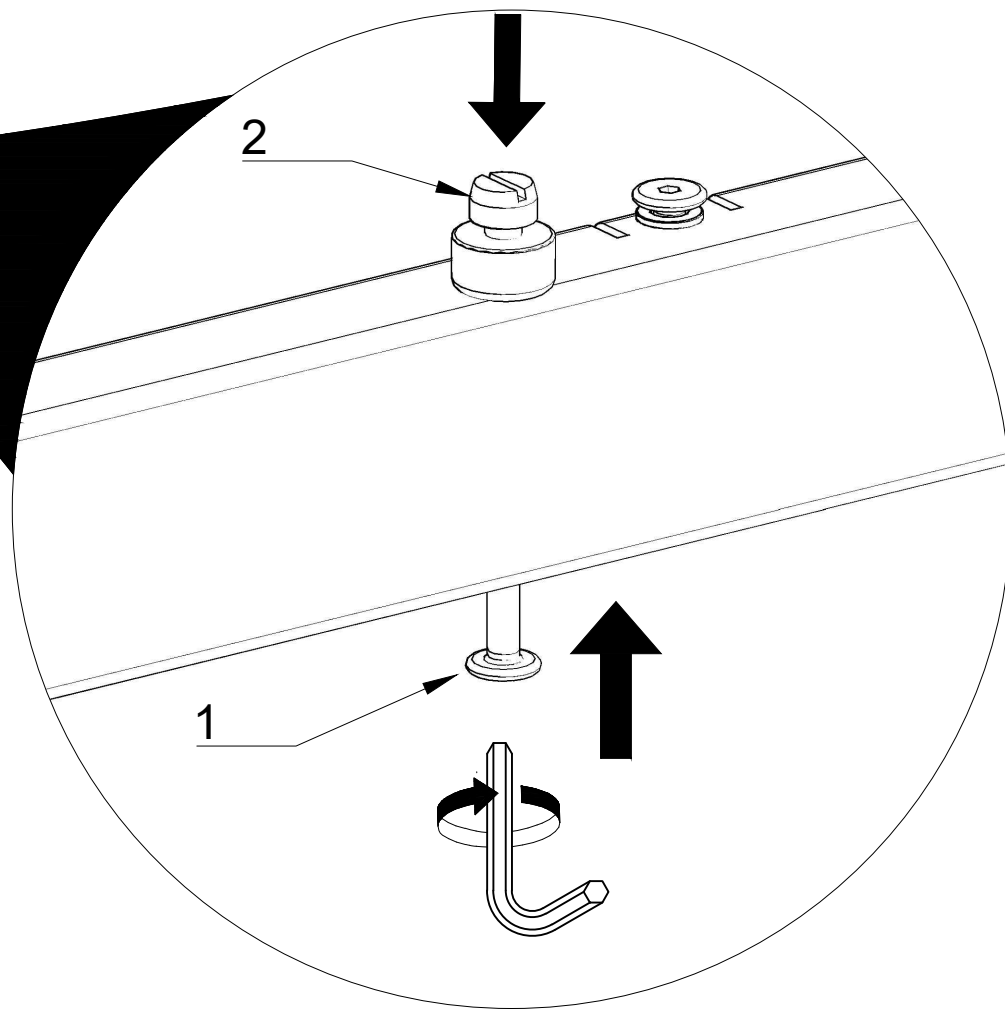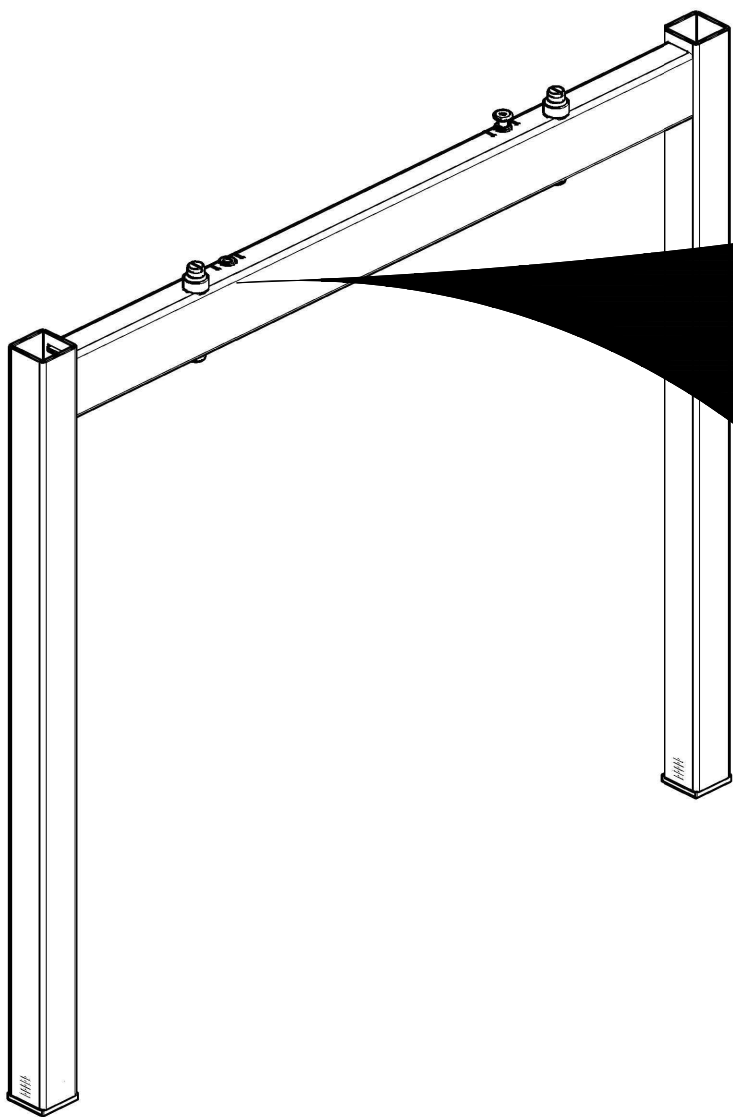


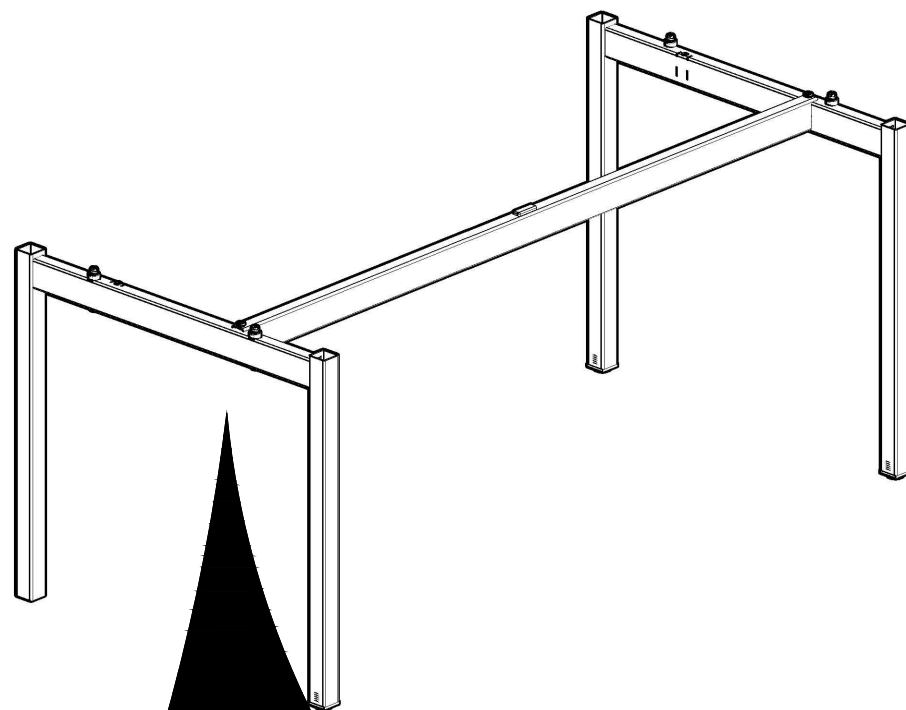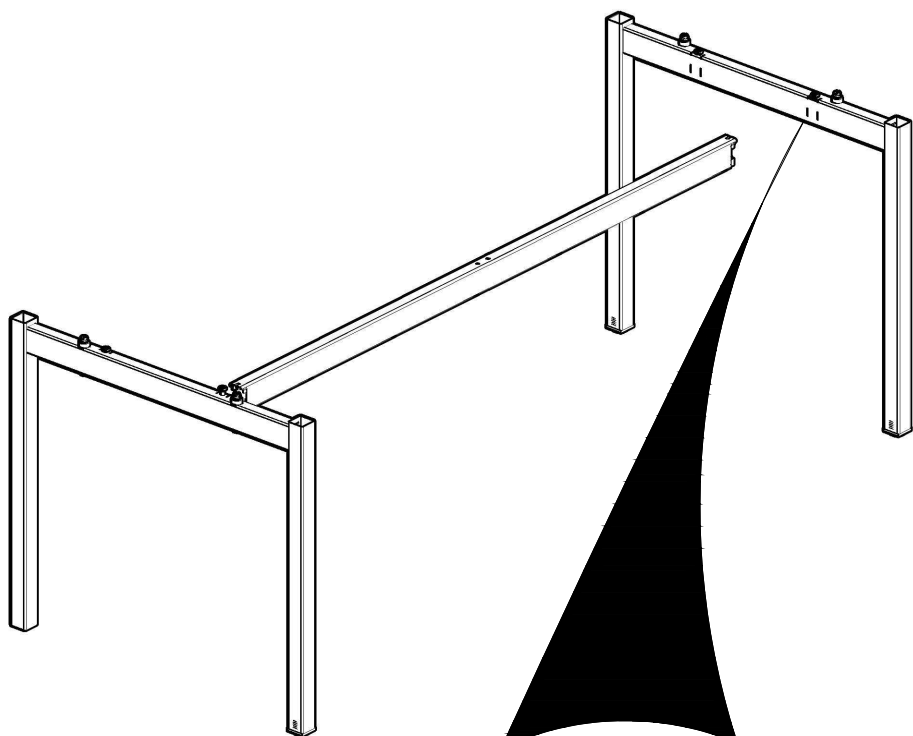

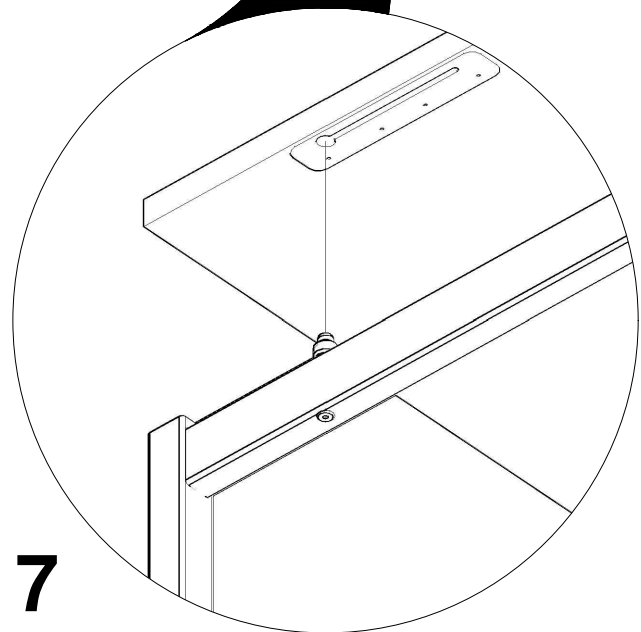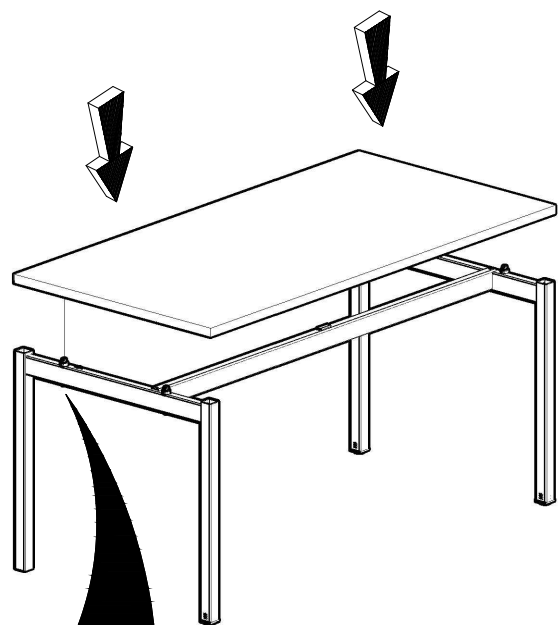


7

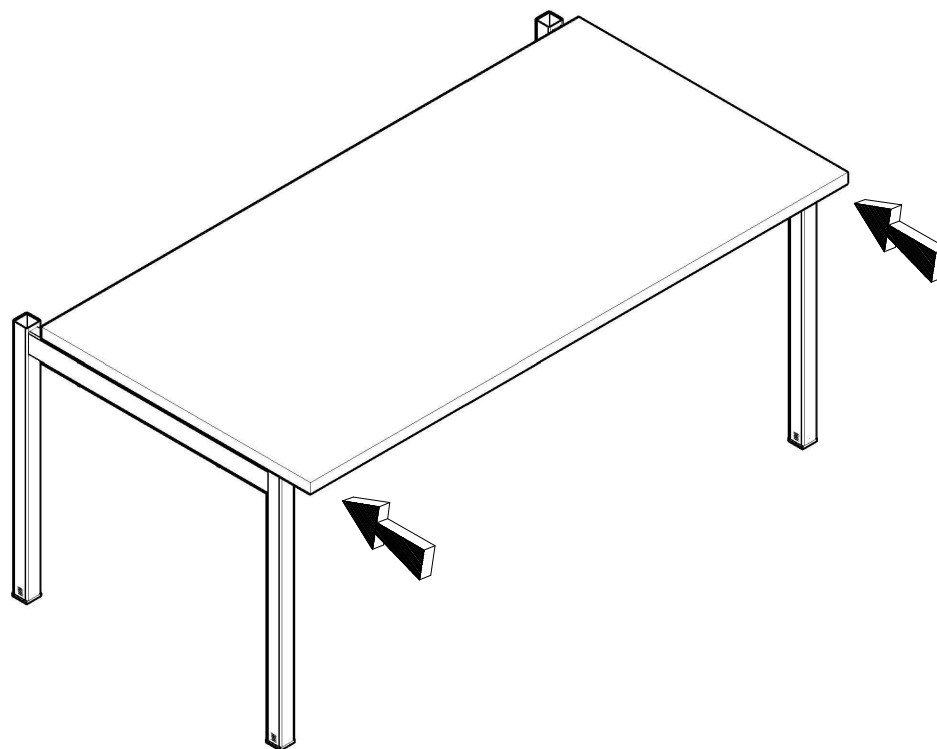

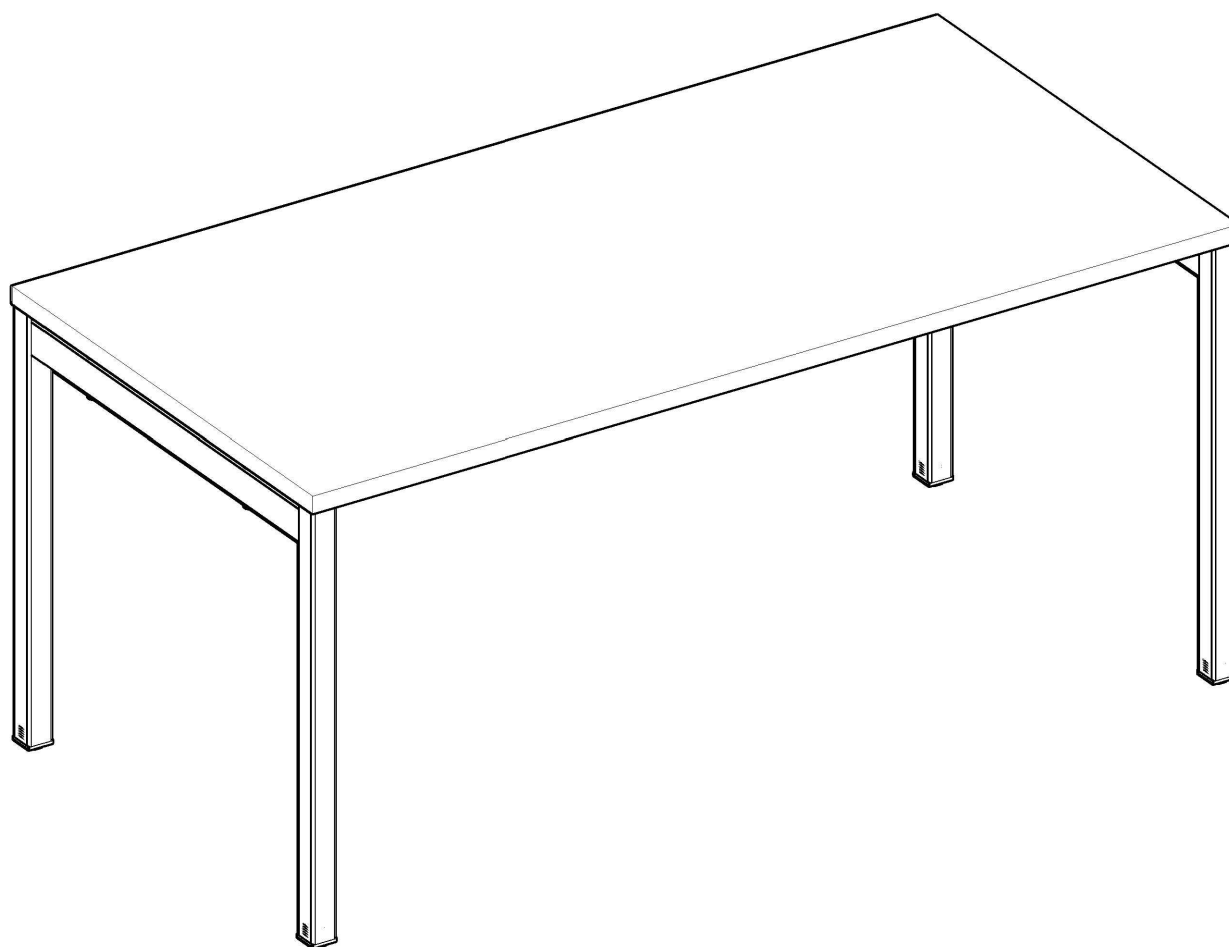


OGI SLIDE


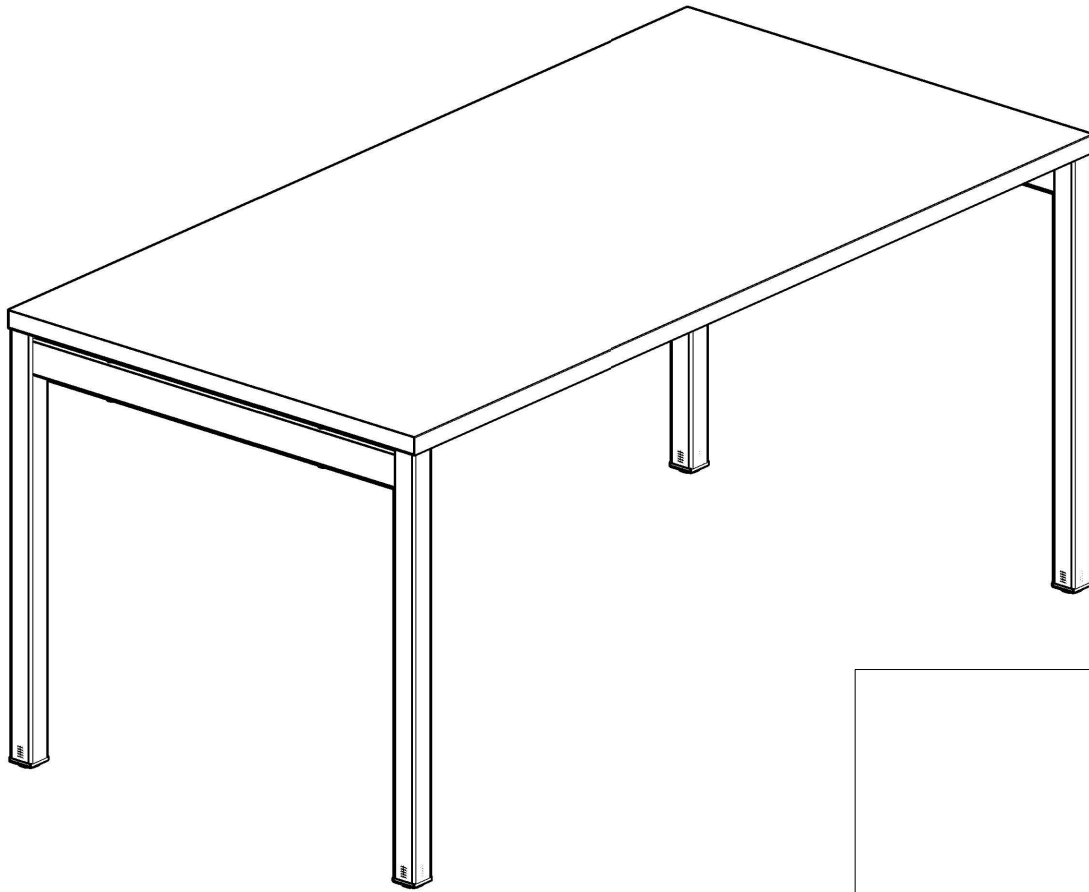



BOX 1

BOX 2

BOX 3

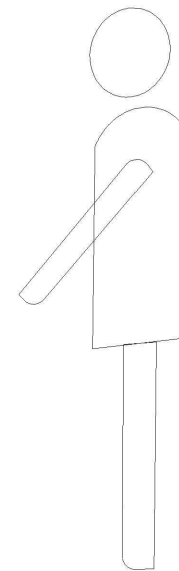

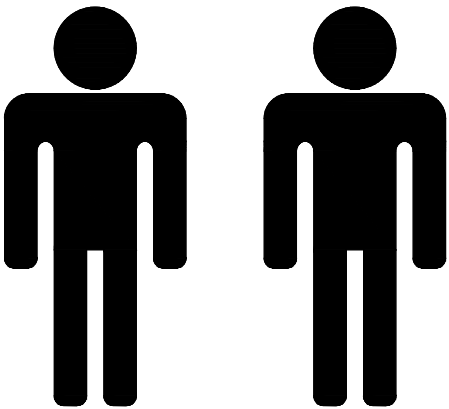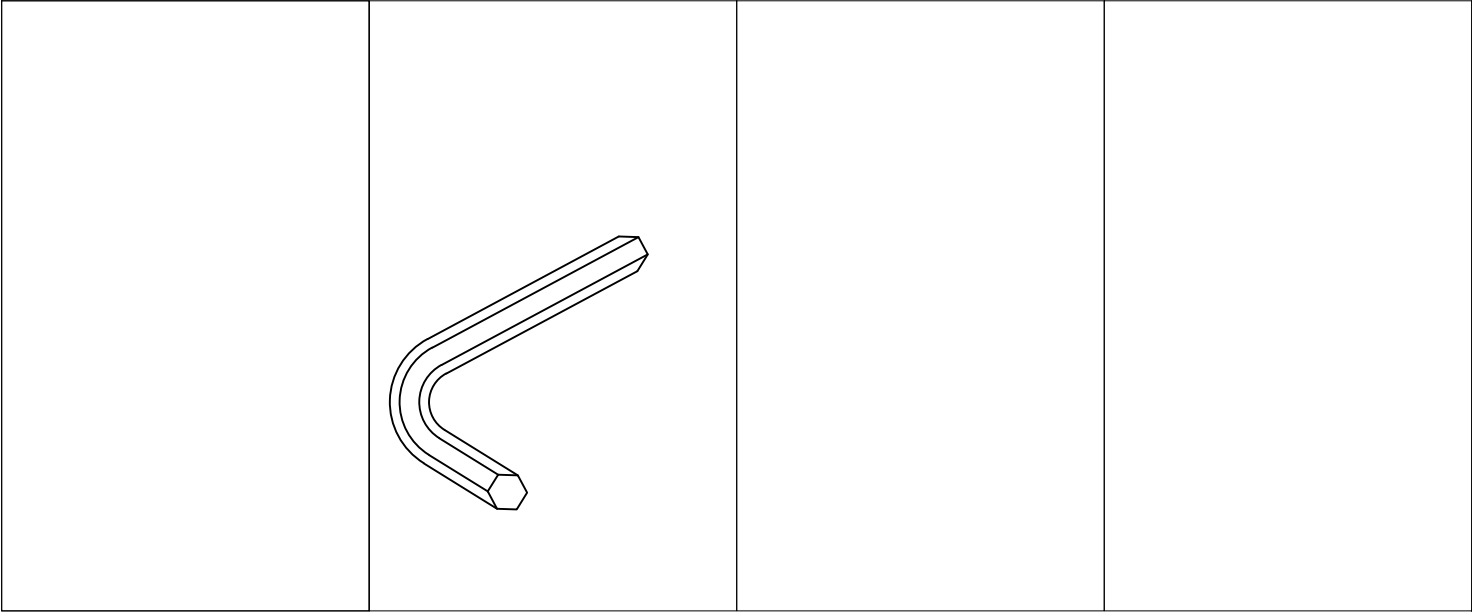


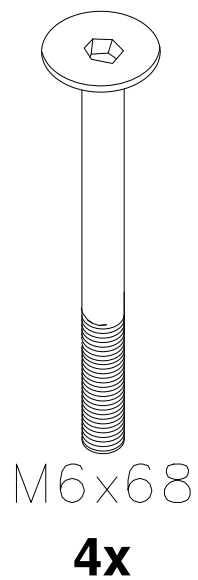


1




2

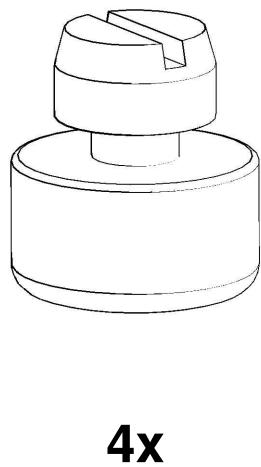


3

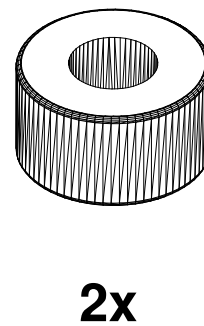


4

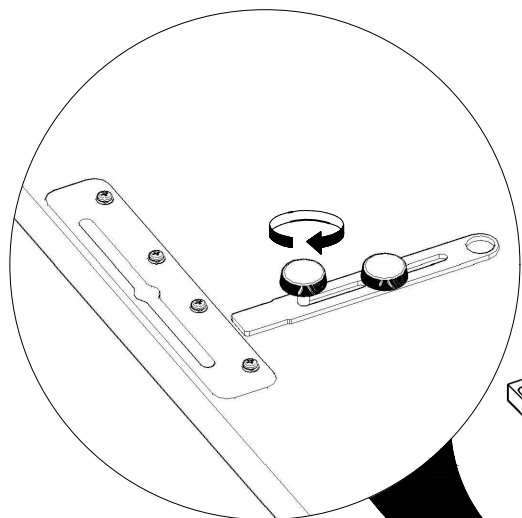


3

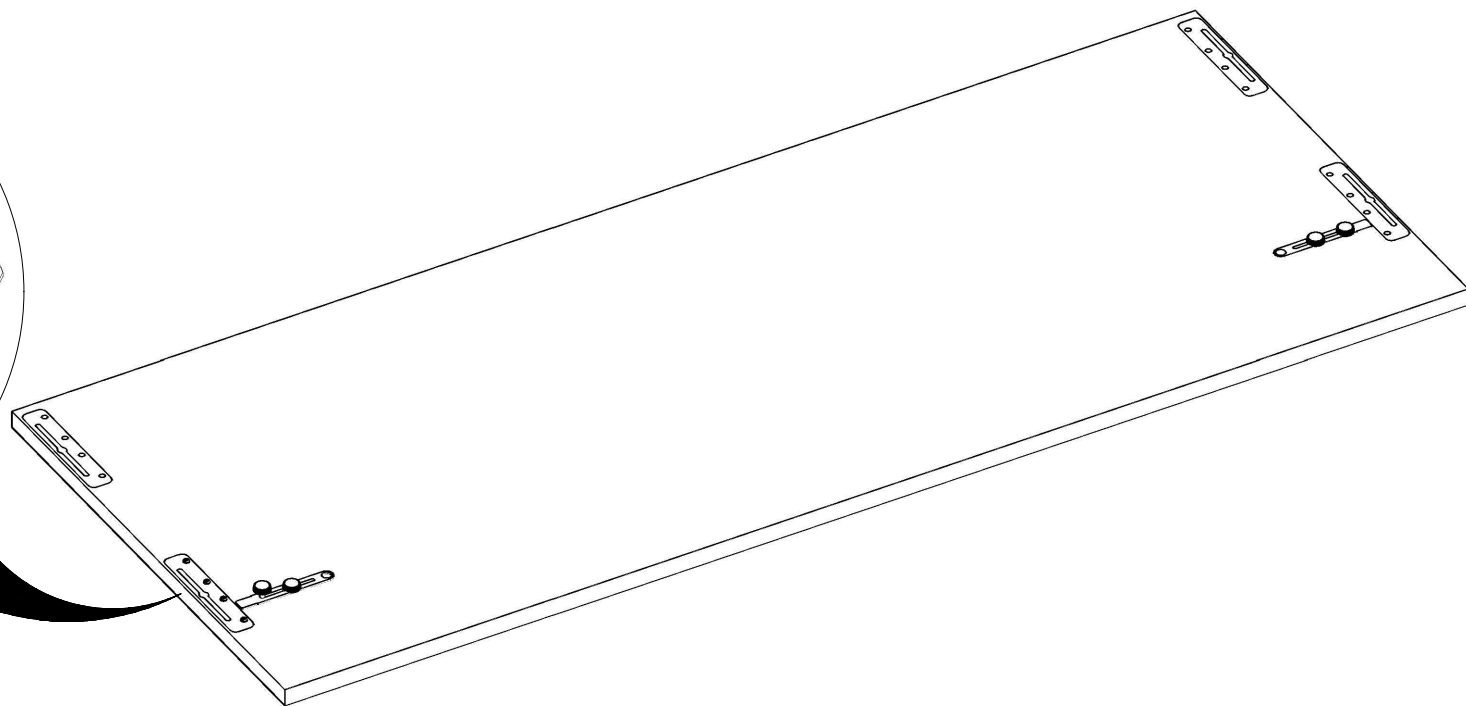


5

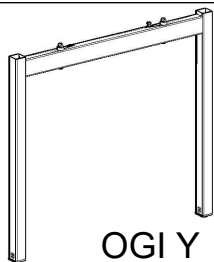


OGI Y

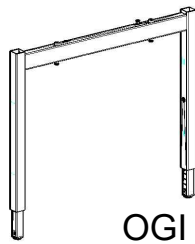


OGI Y

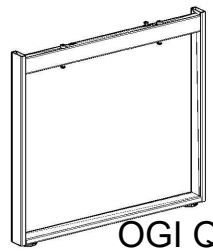


OGI Q

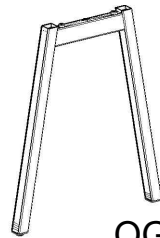


OGI M


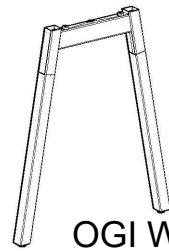




OGI W


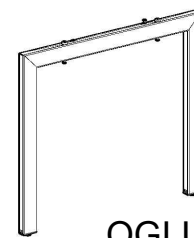


OGI U

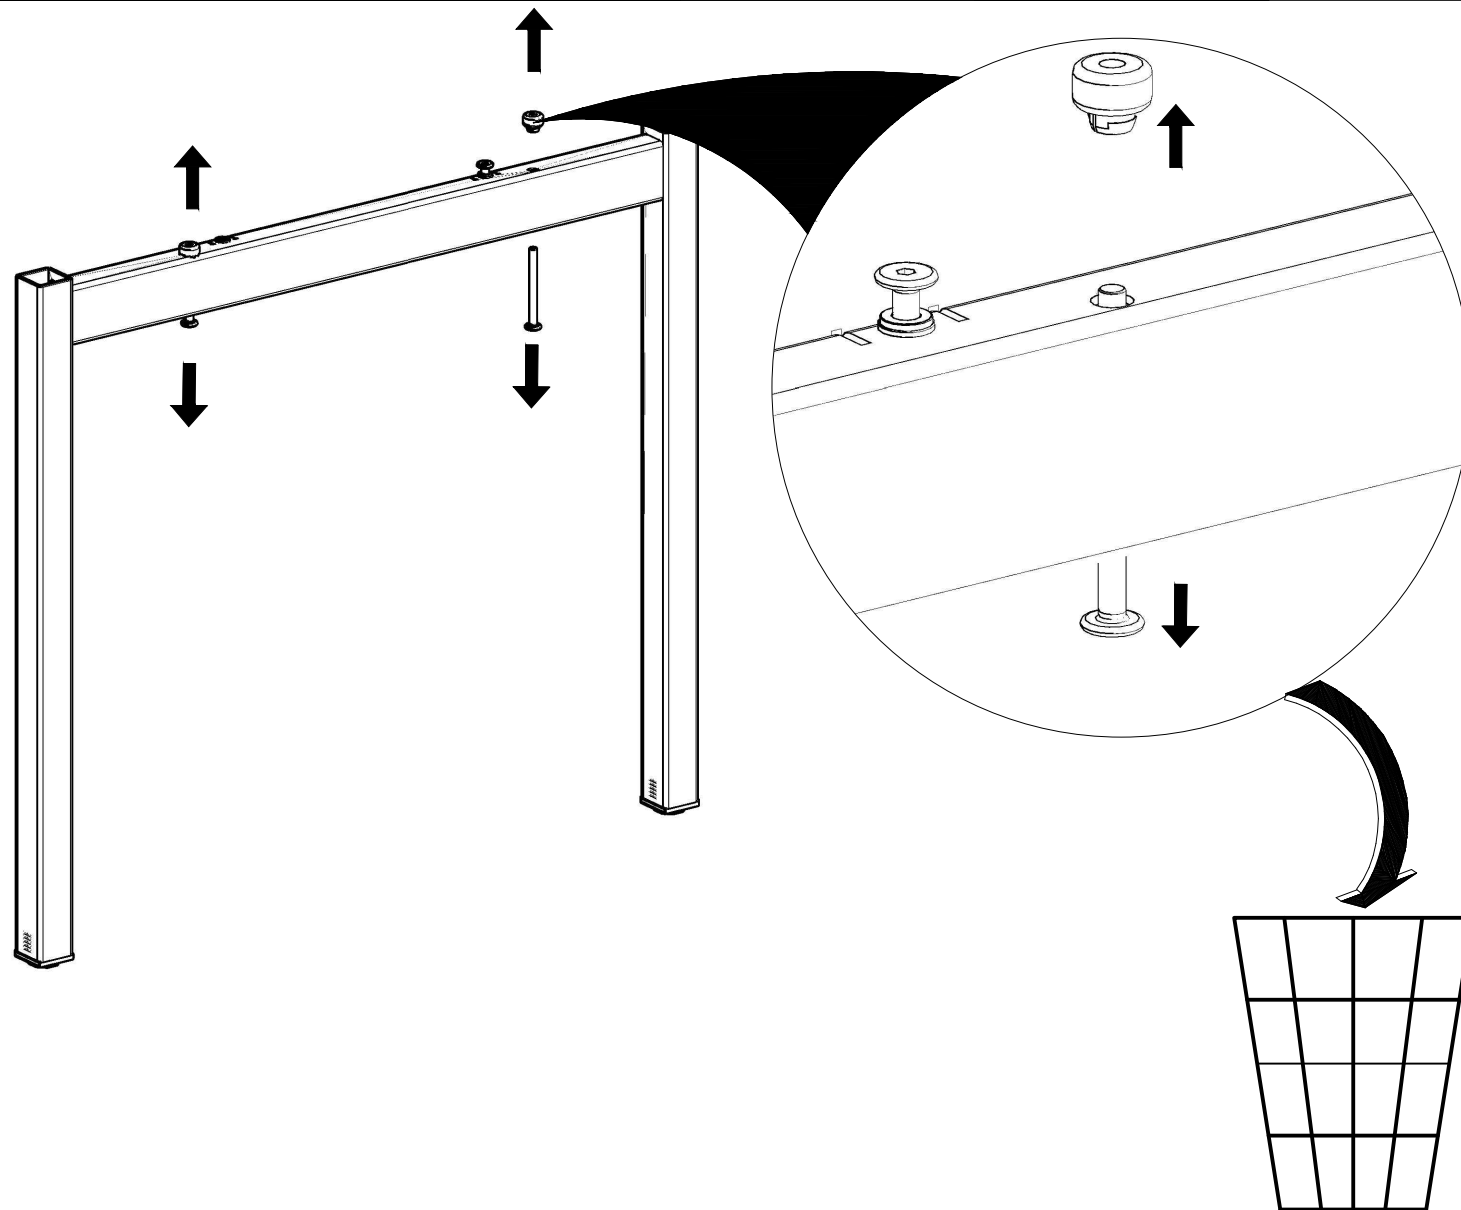


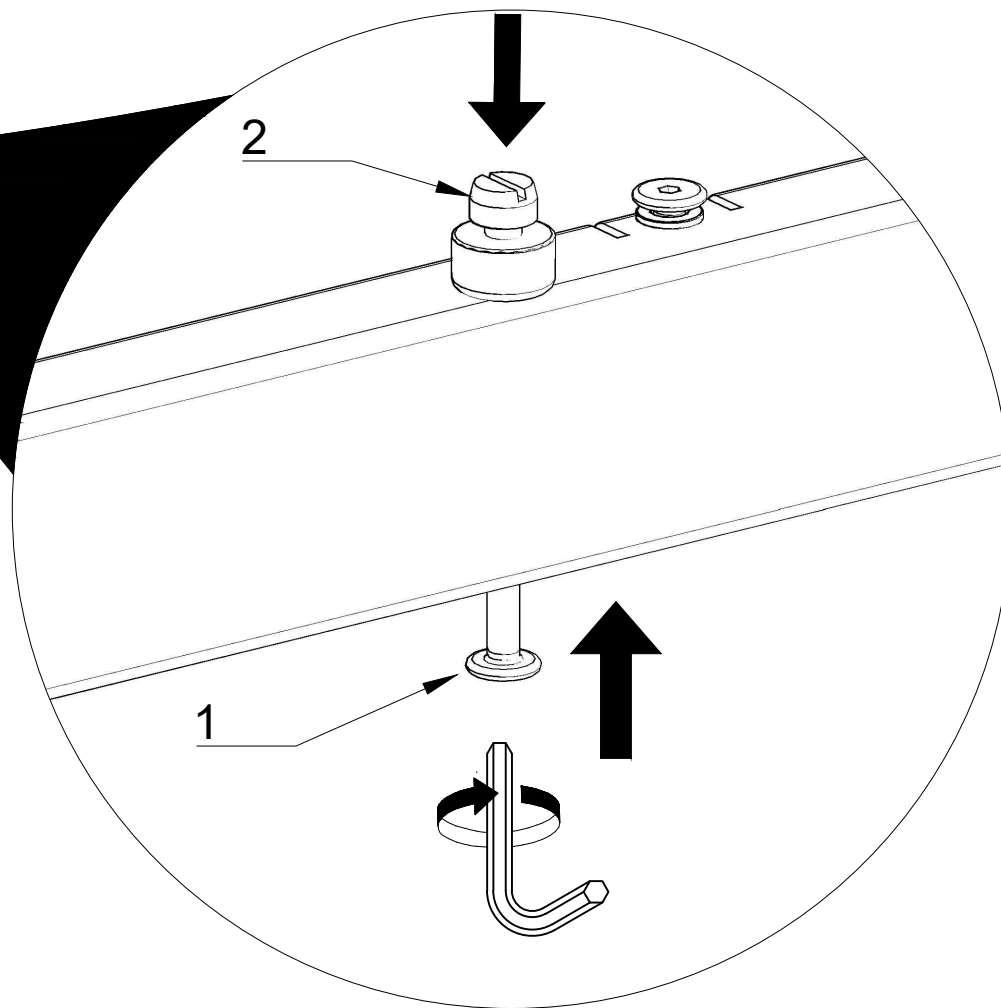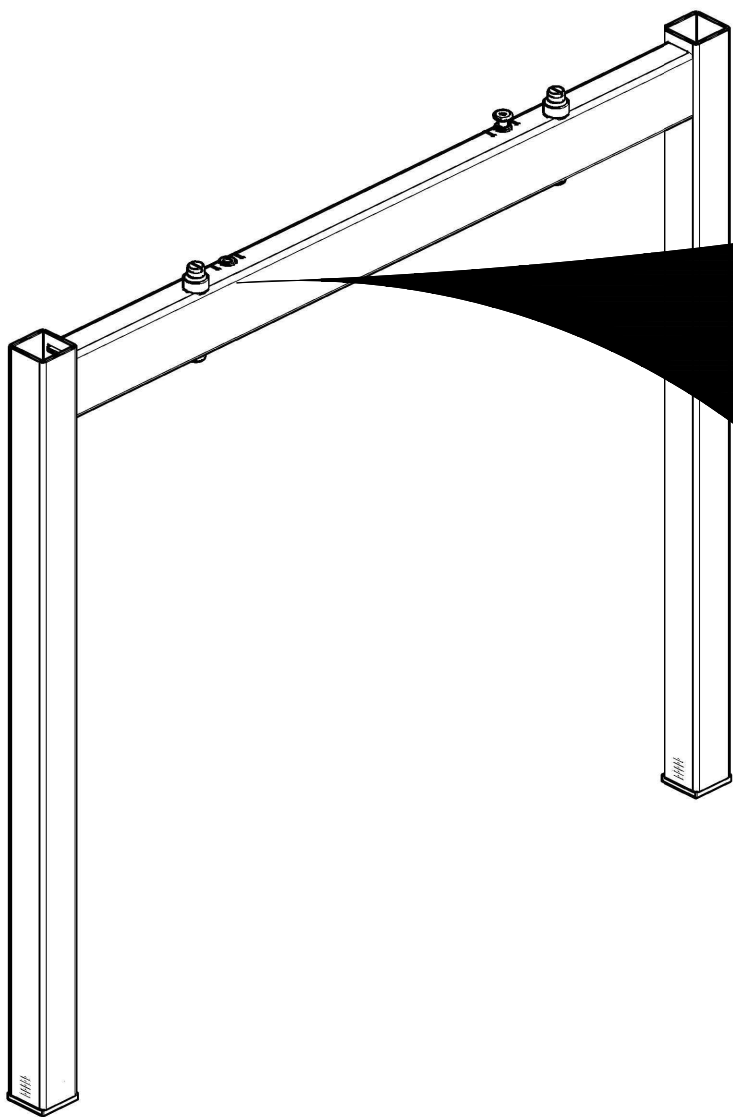


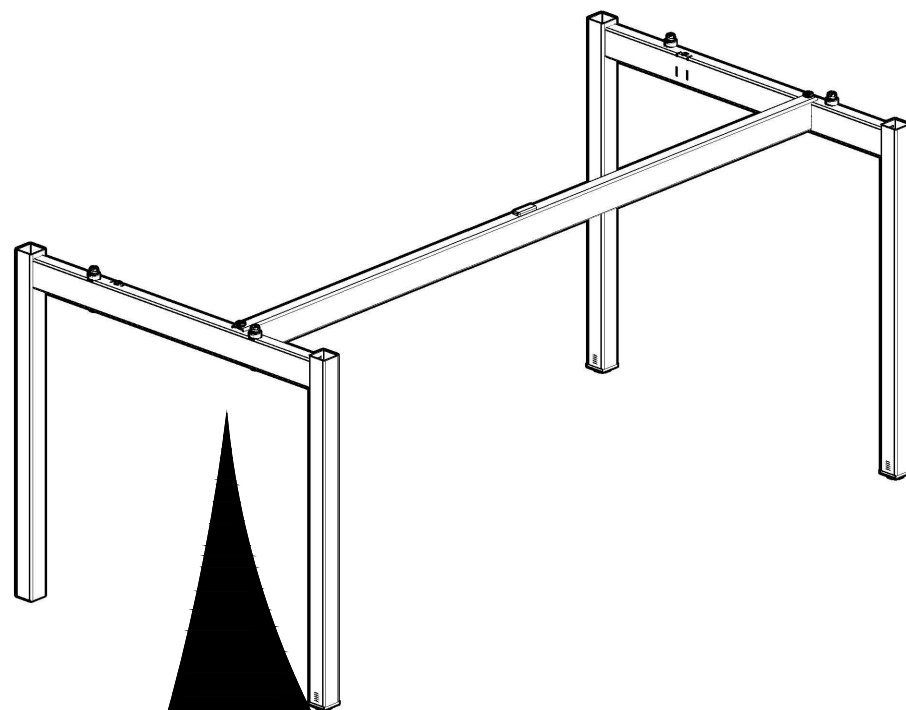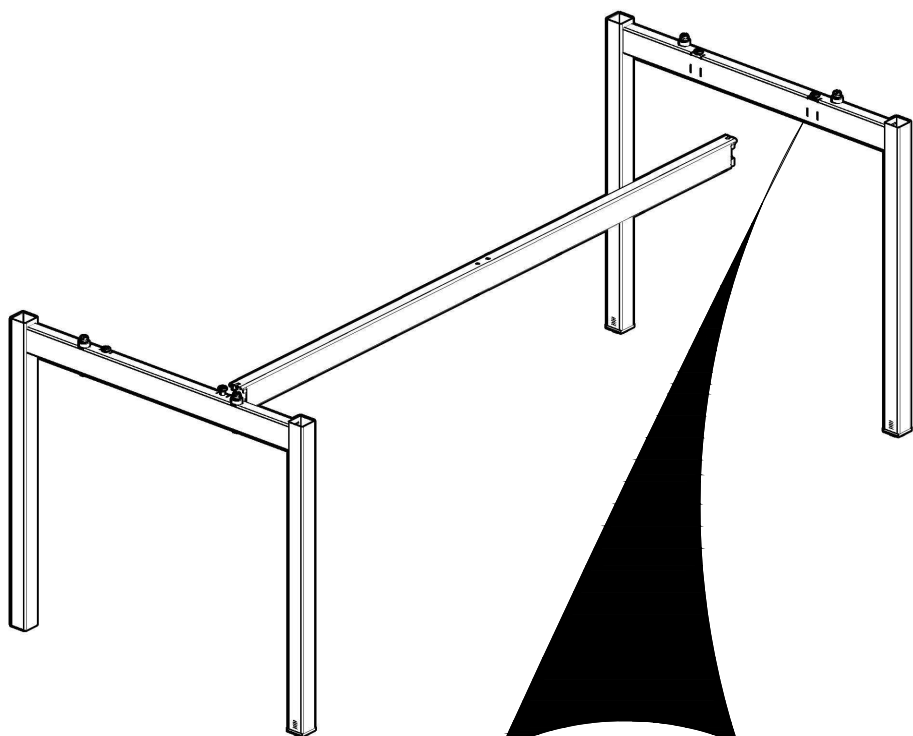

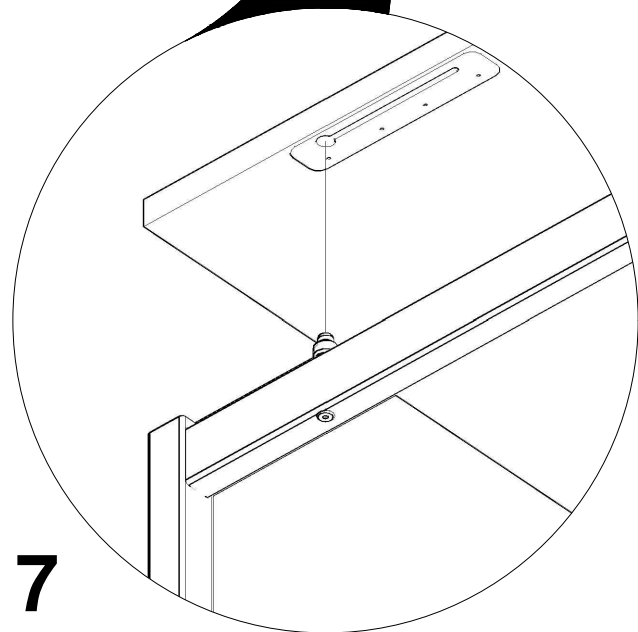
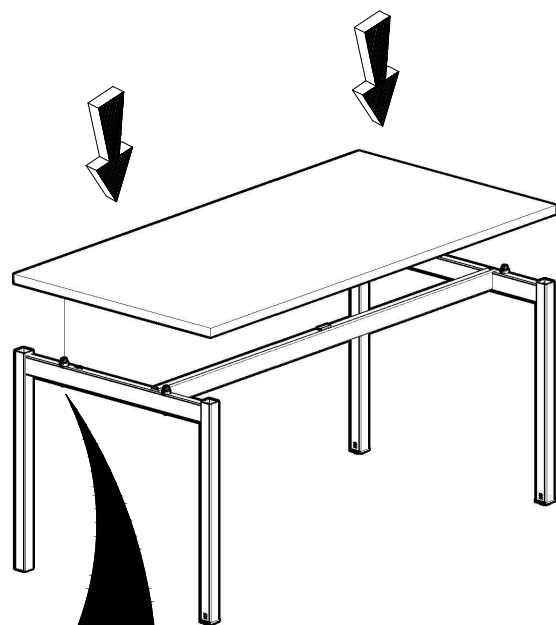




7

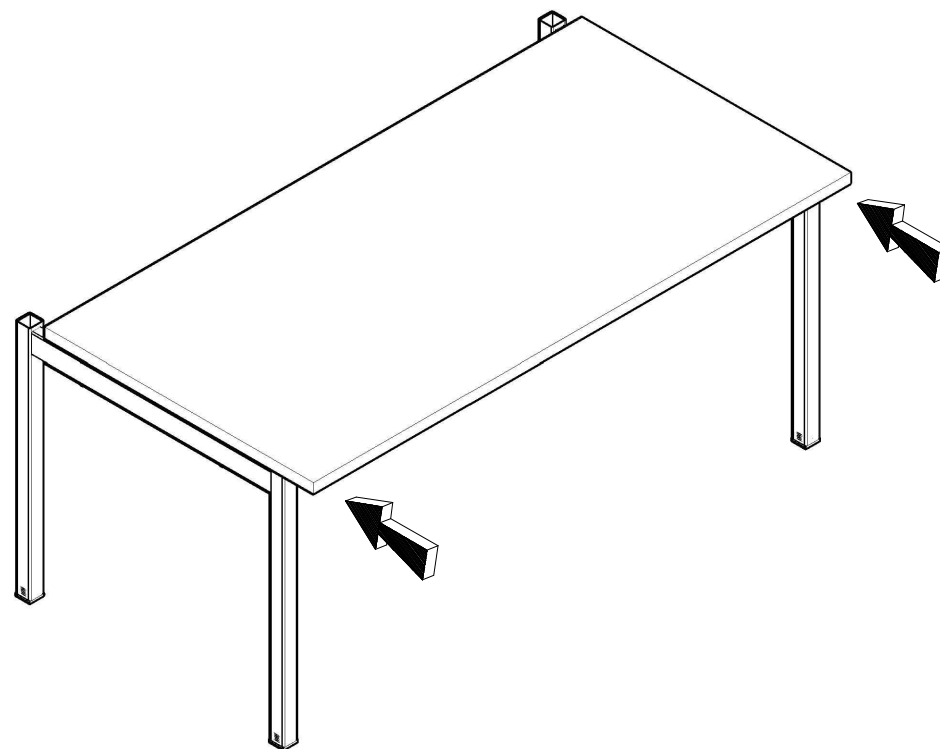


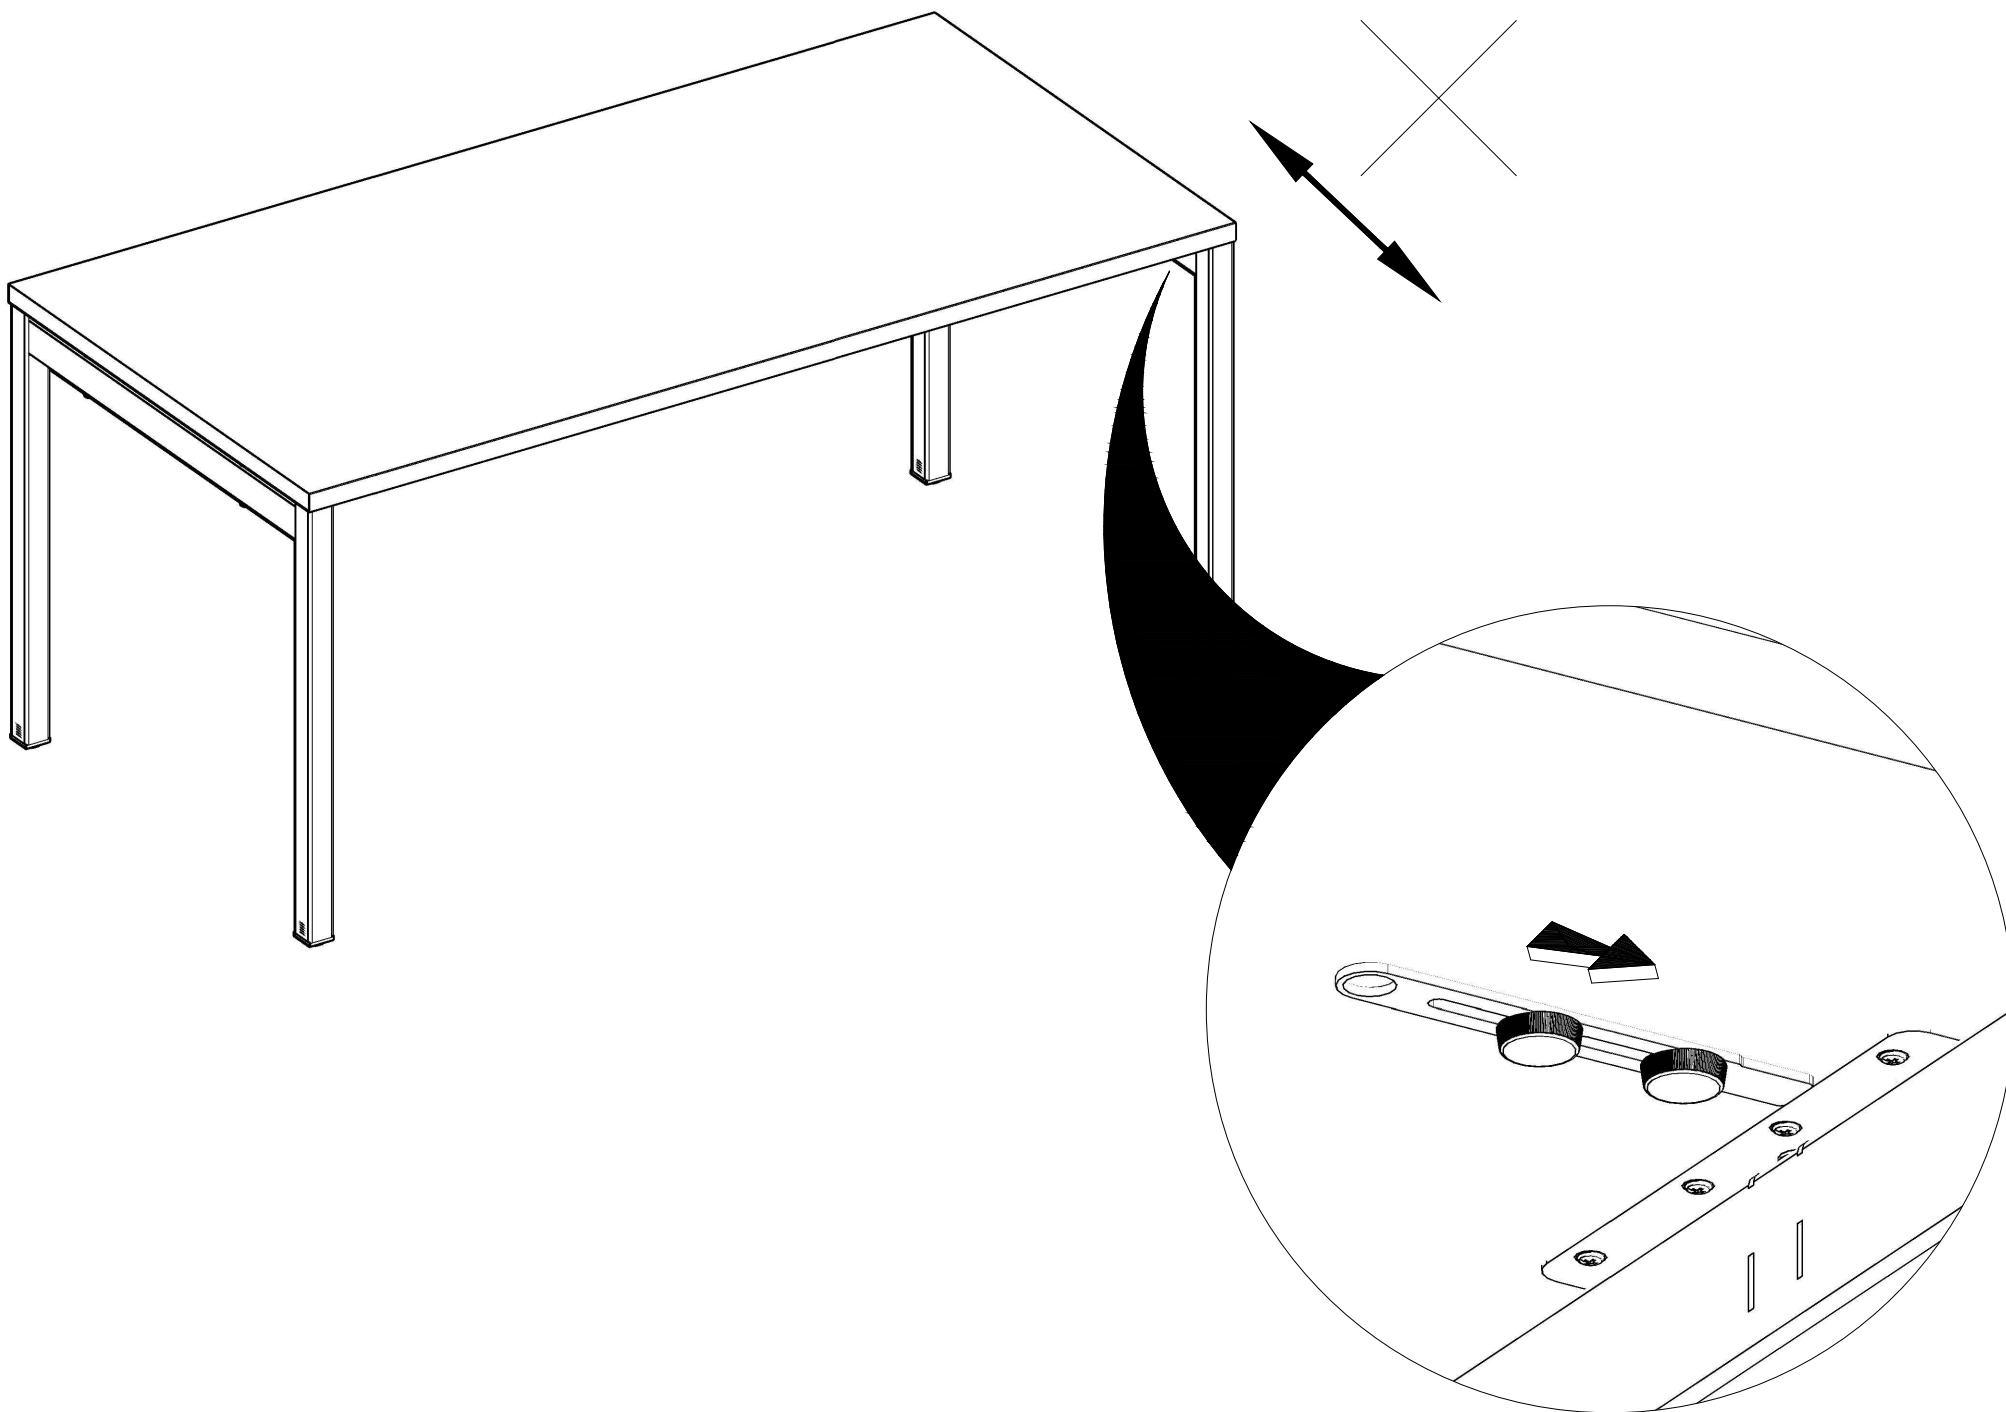

OGI SLIDE

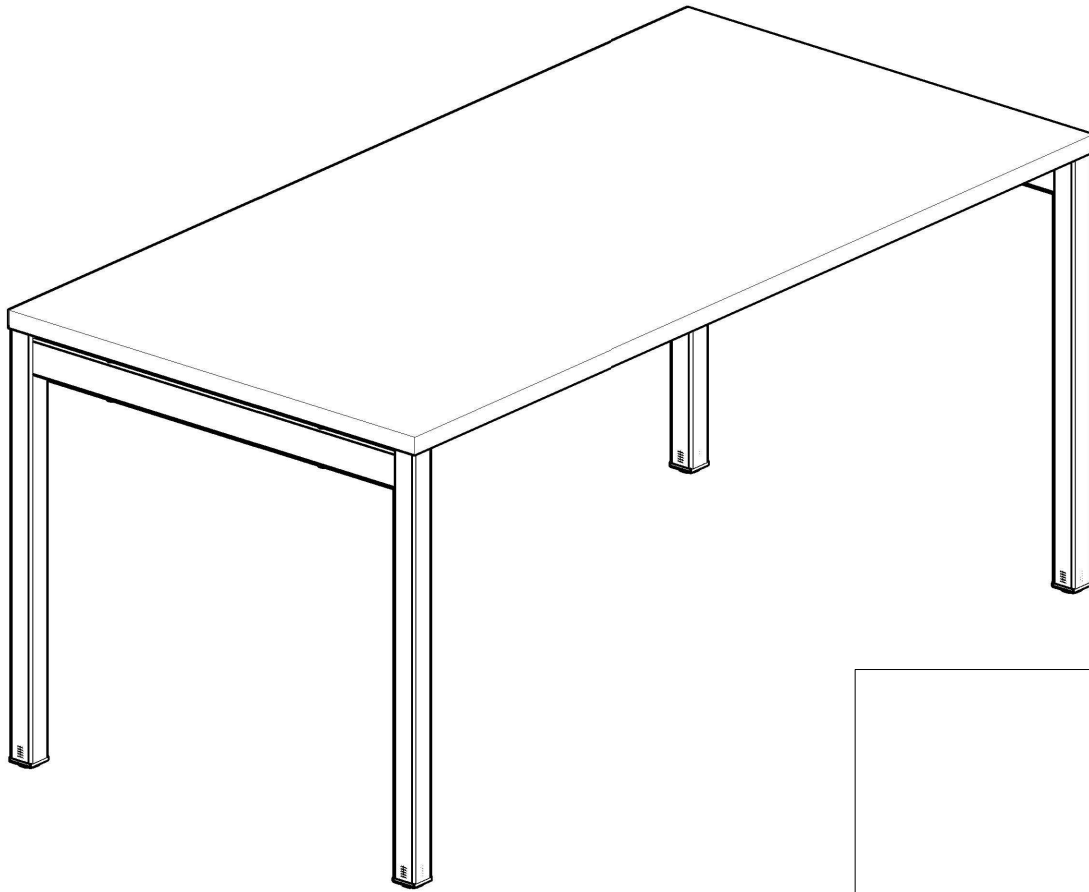

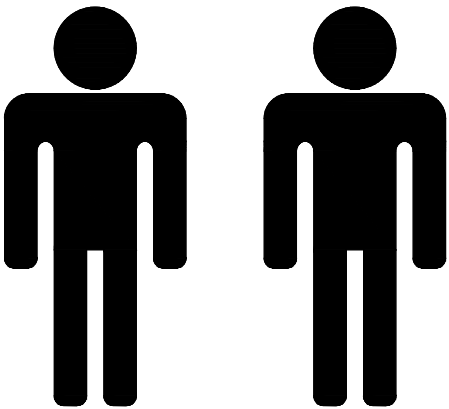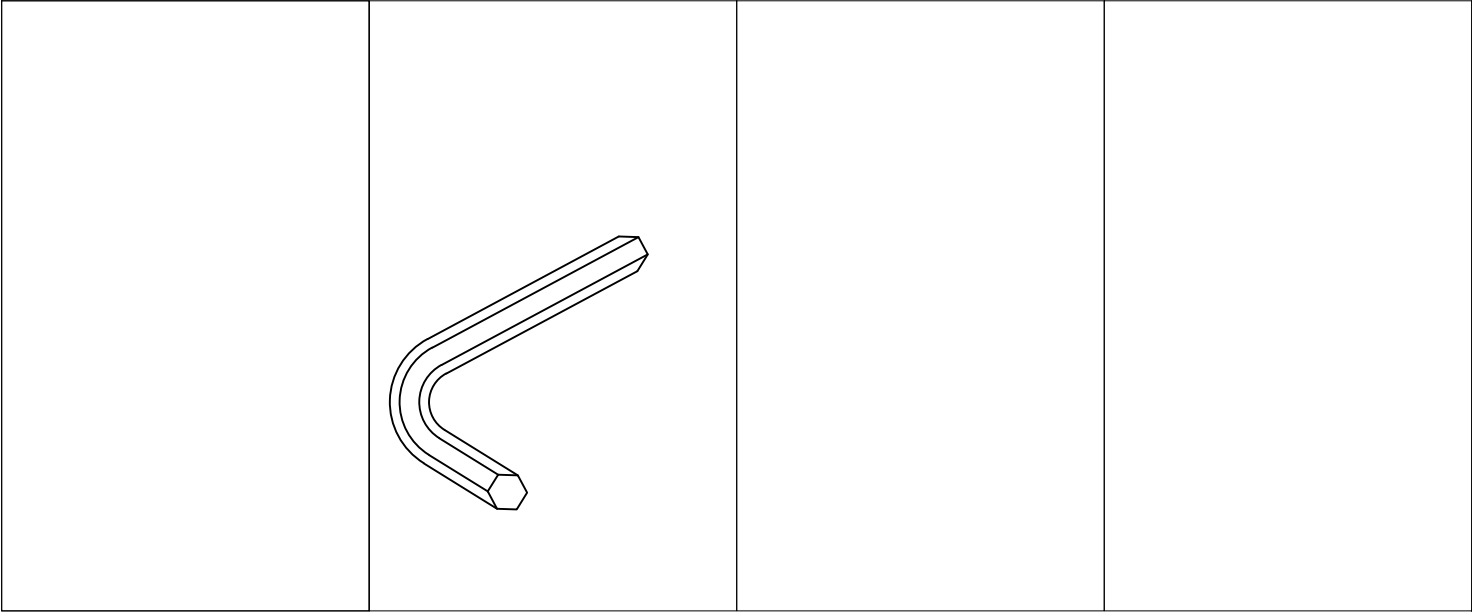


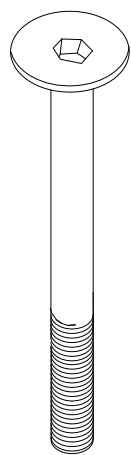

M6x68

4x


1

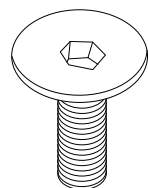

M6x10


2x

2

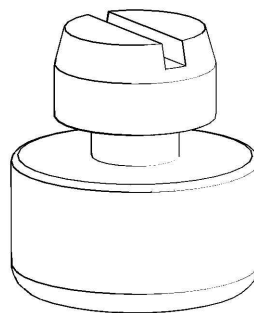


4x

3

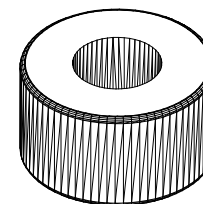


2x

4

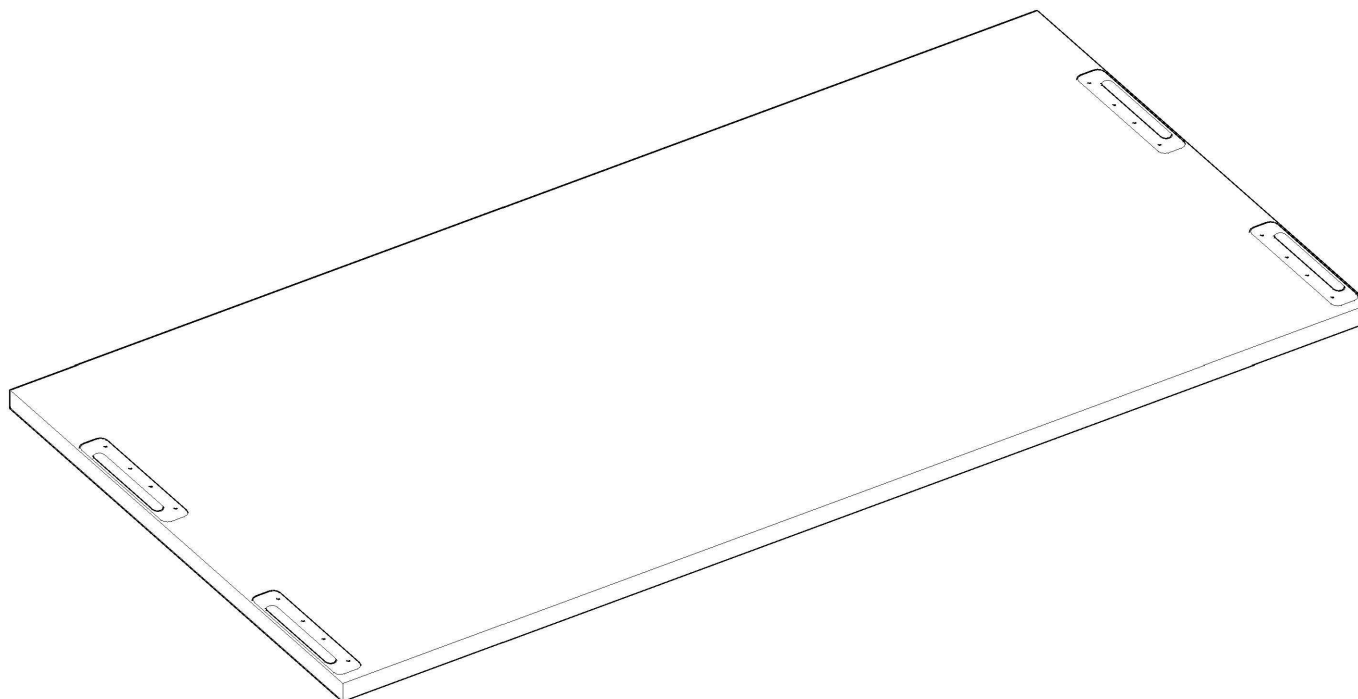


3


5

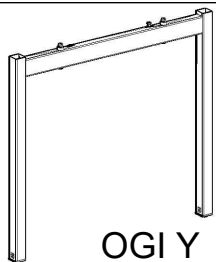


OGI Y

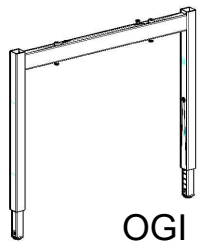


OGI Y

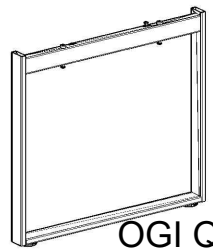


OGI Q

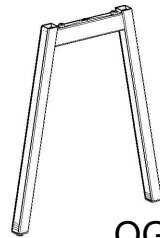


OGI M


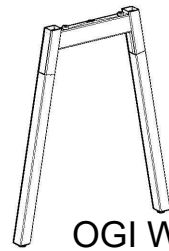




OGI W


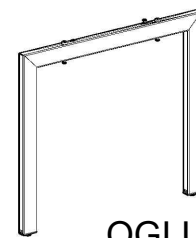


OGI U

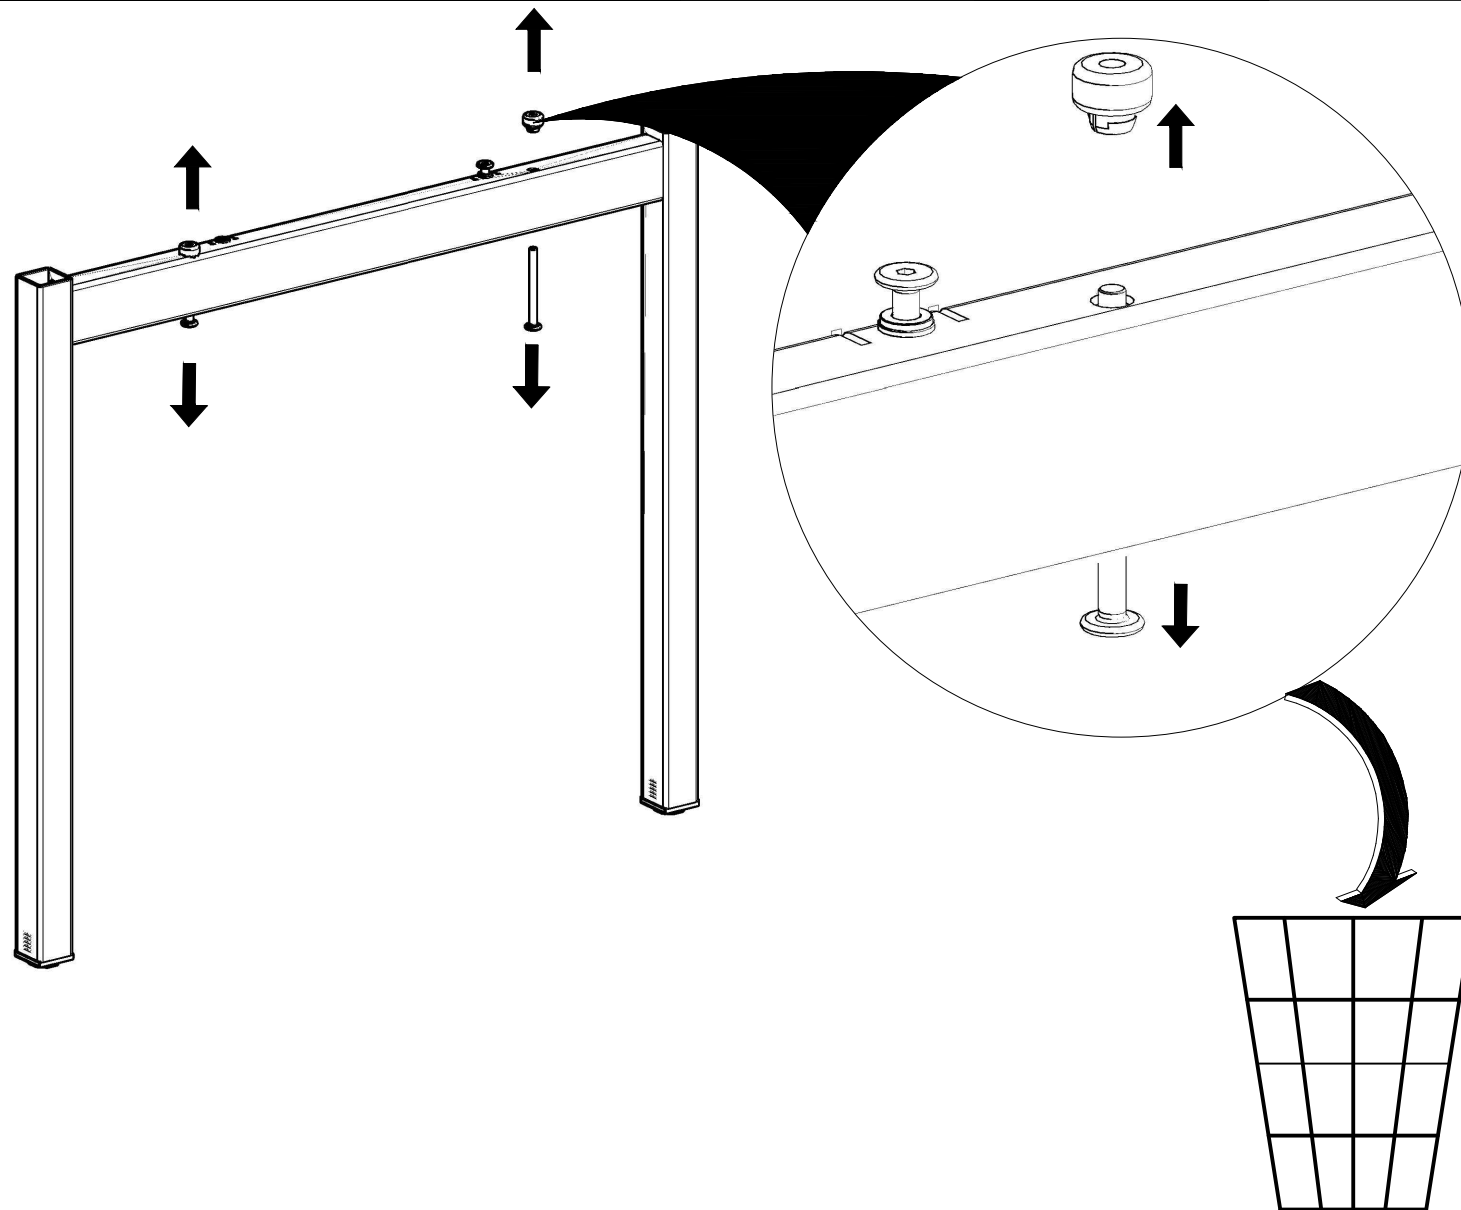


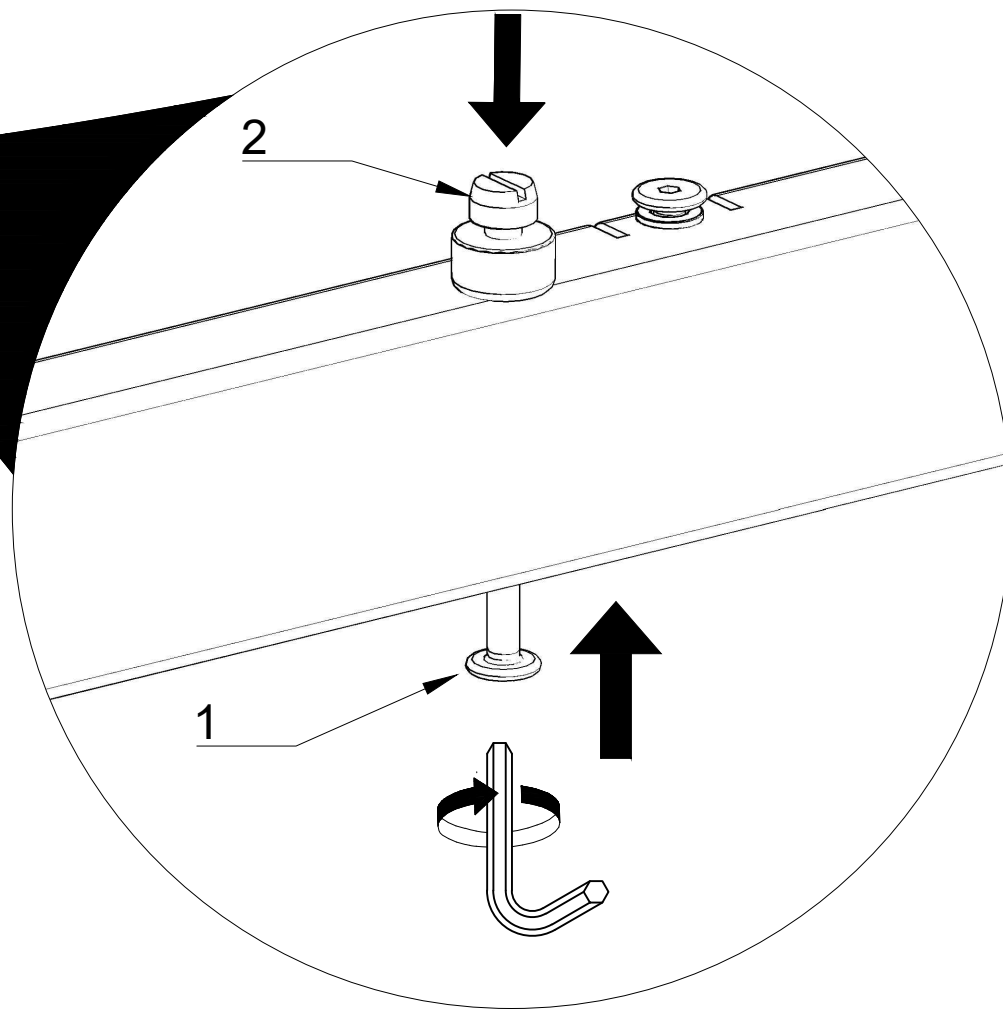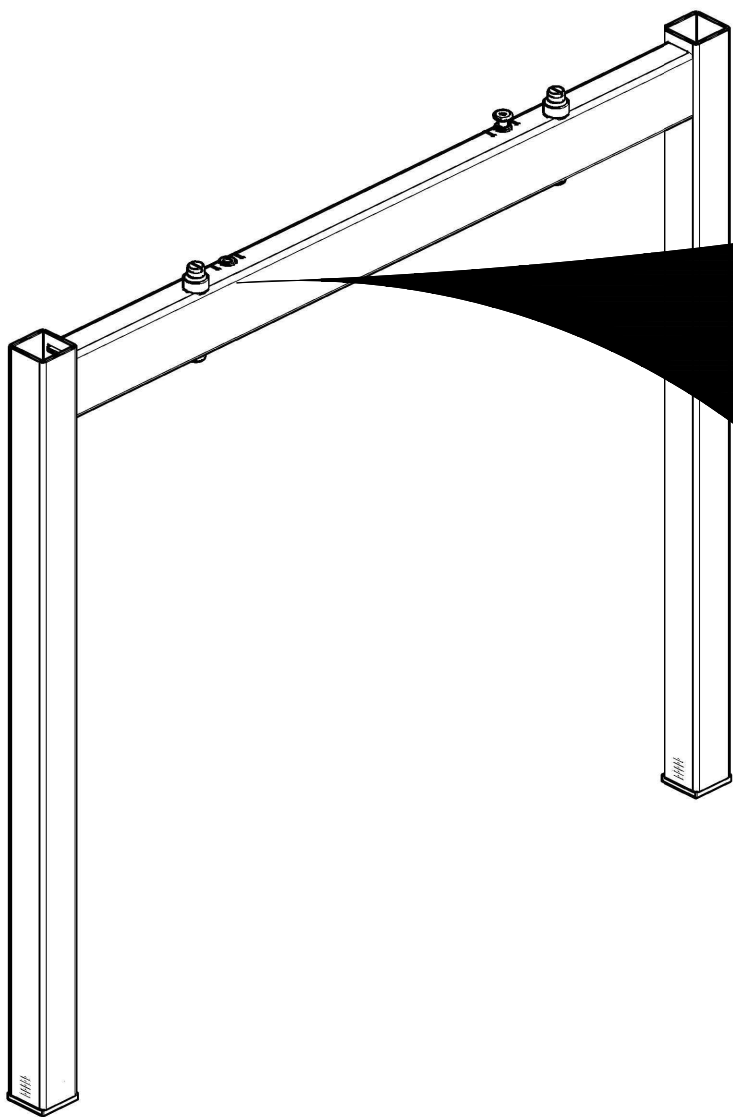


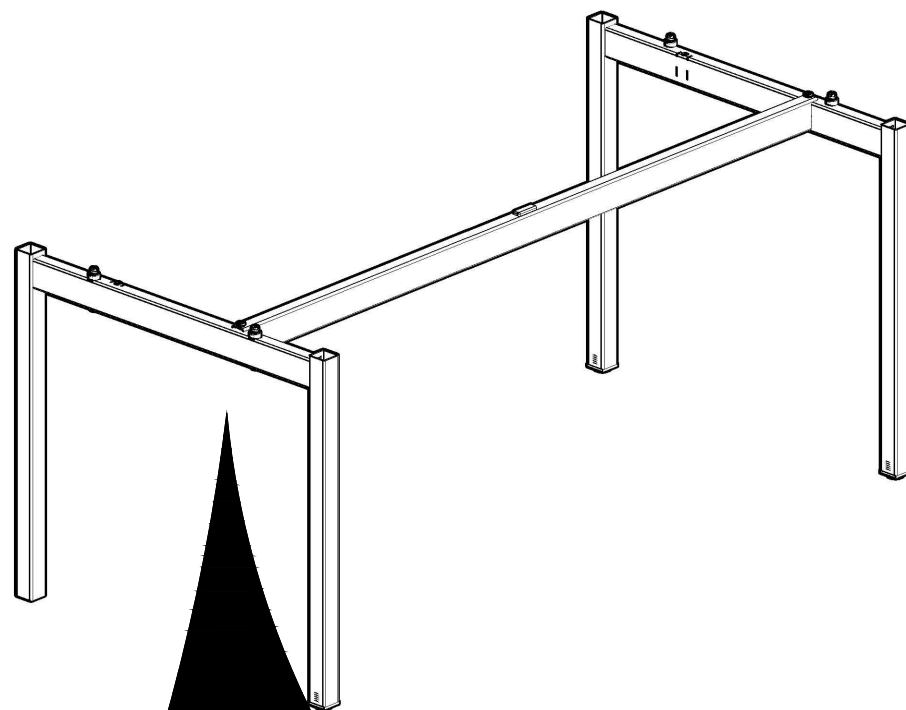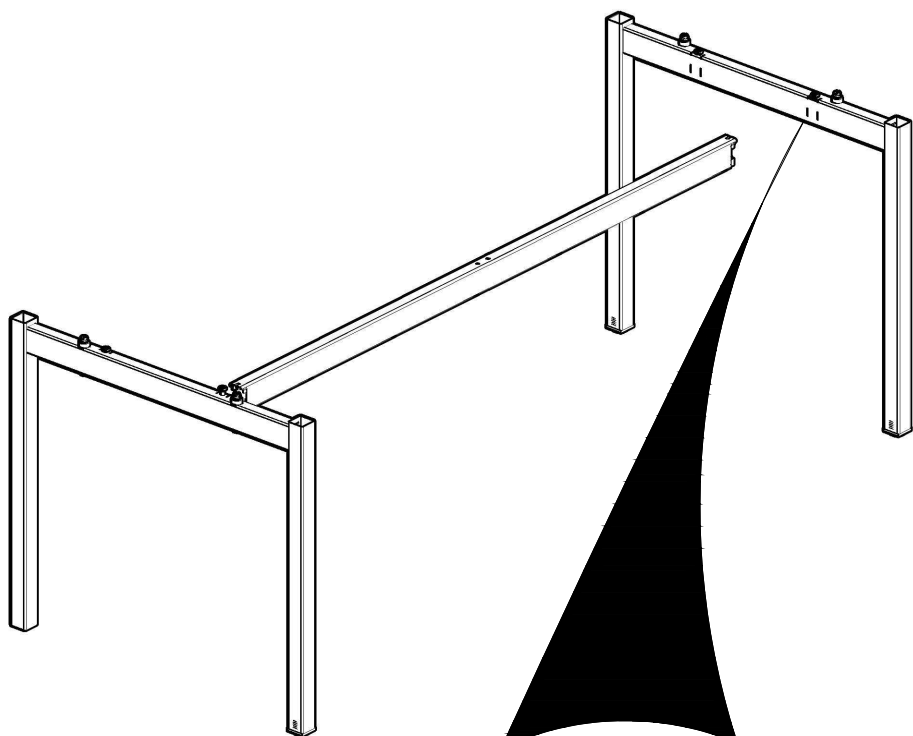


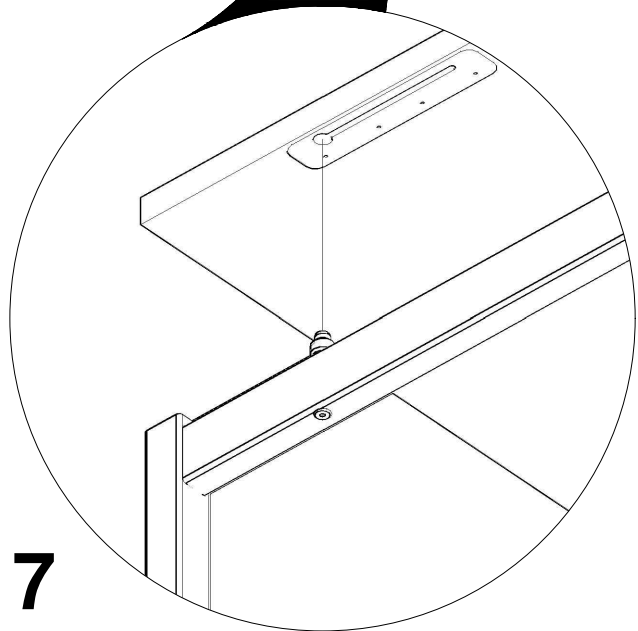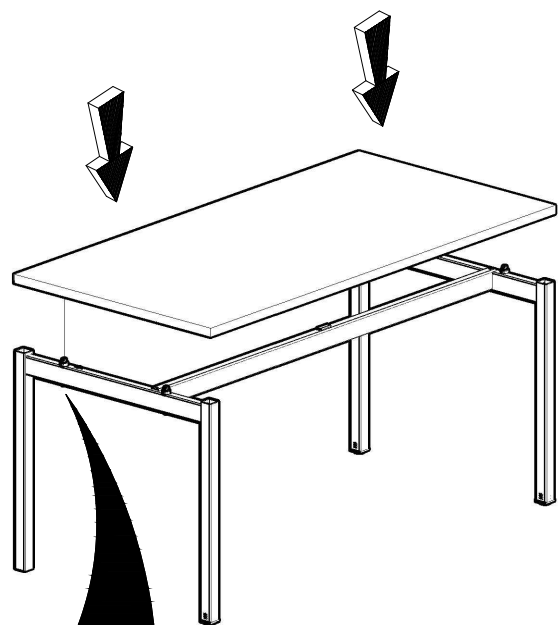


7

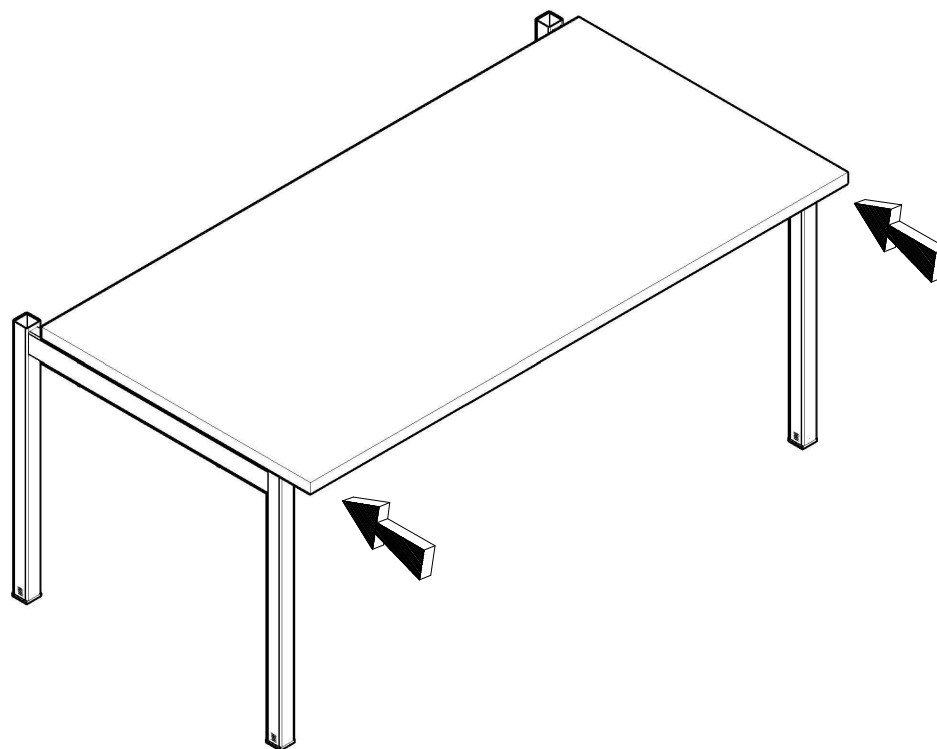

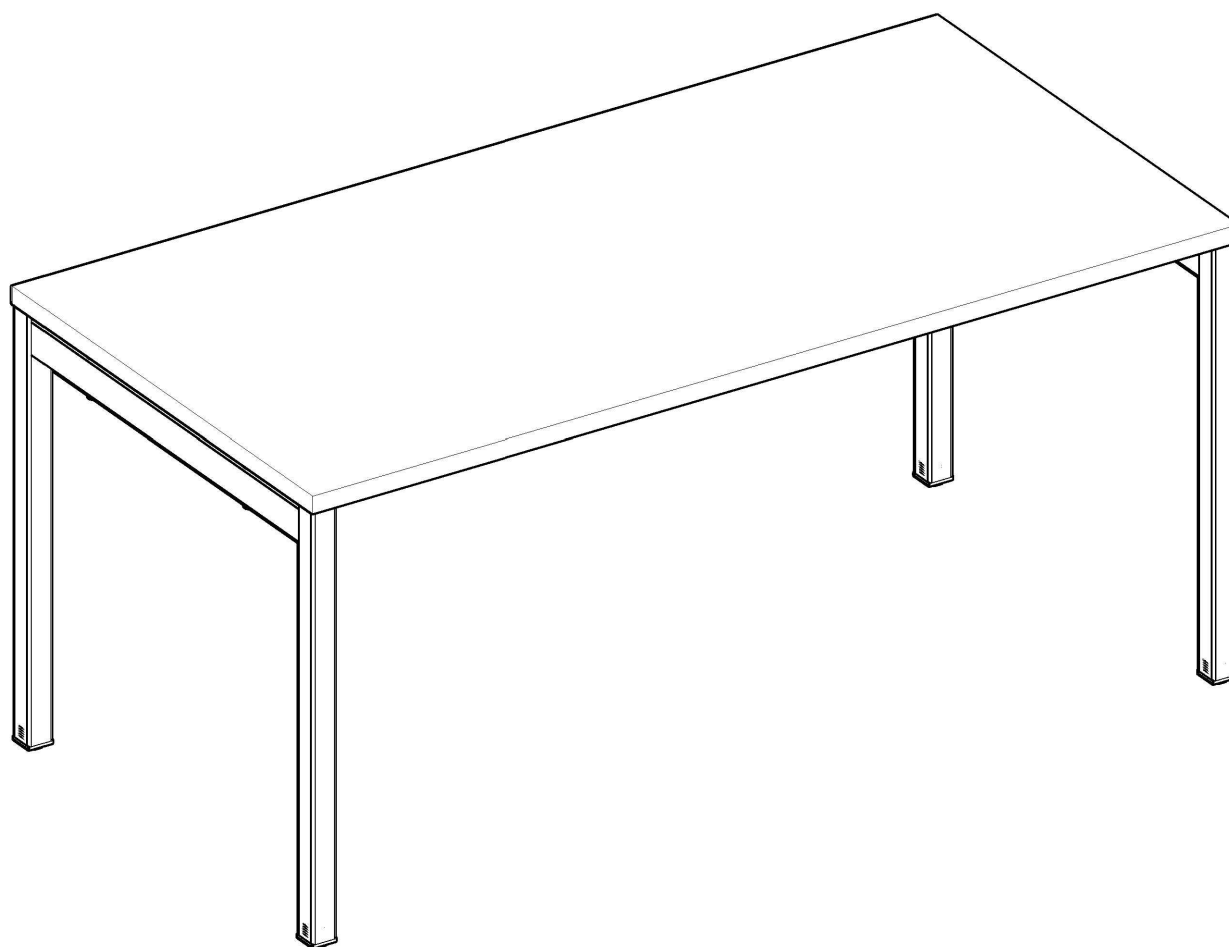


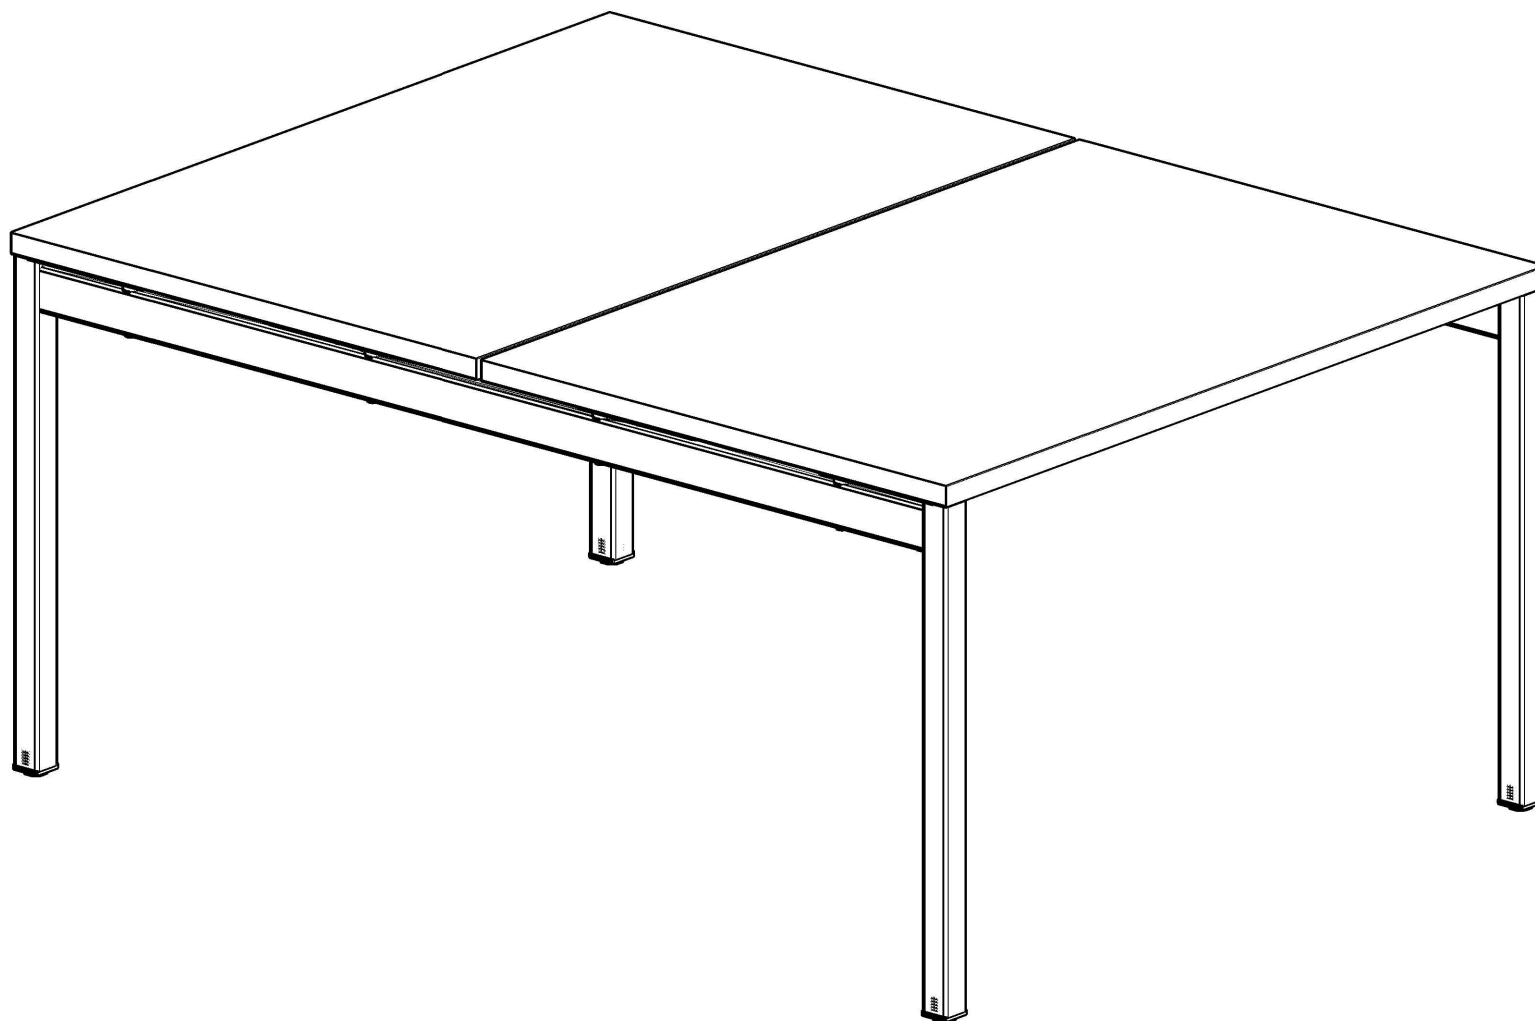

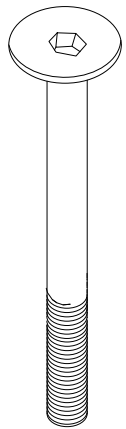


M6x68
8x

1

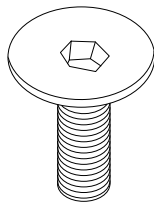


M6x10
2x

2

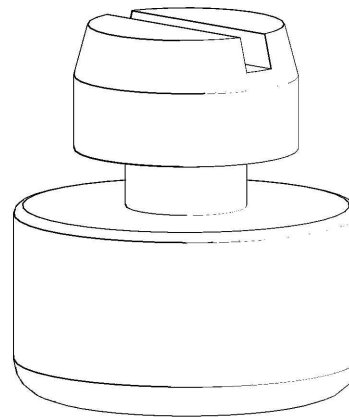


4x

3

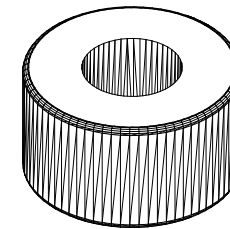



2x





4



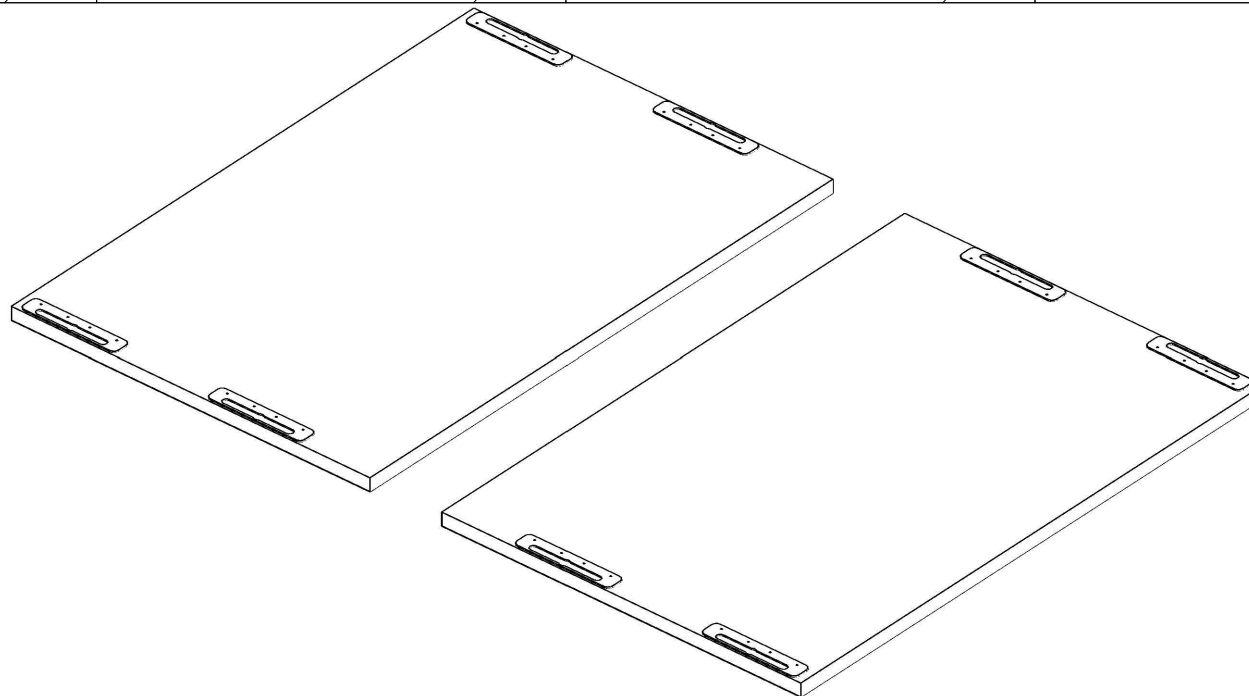



5

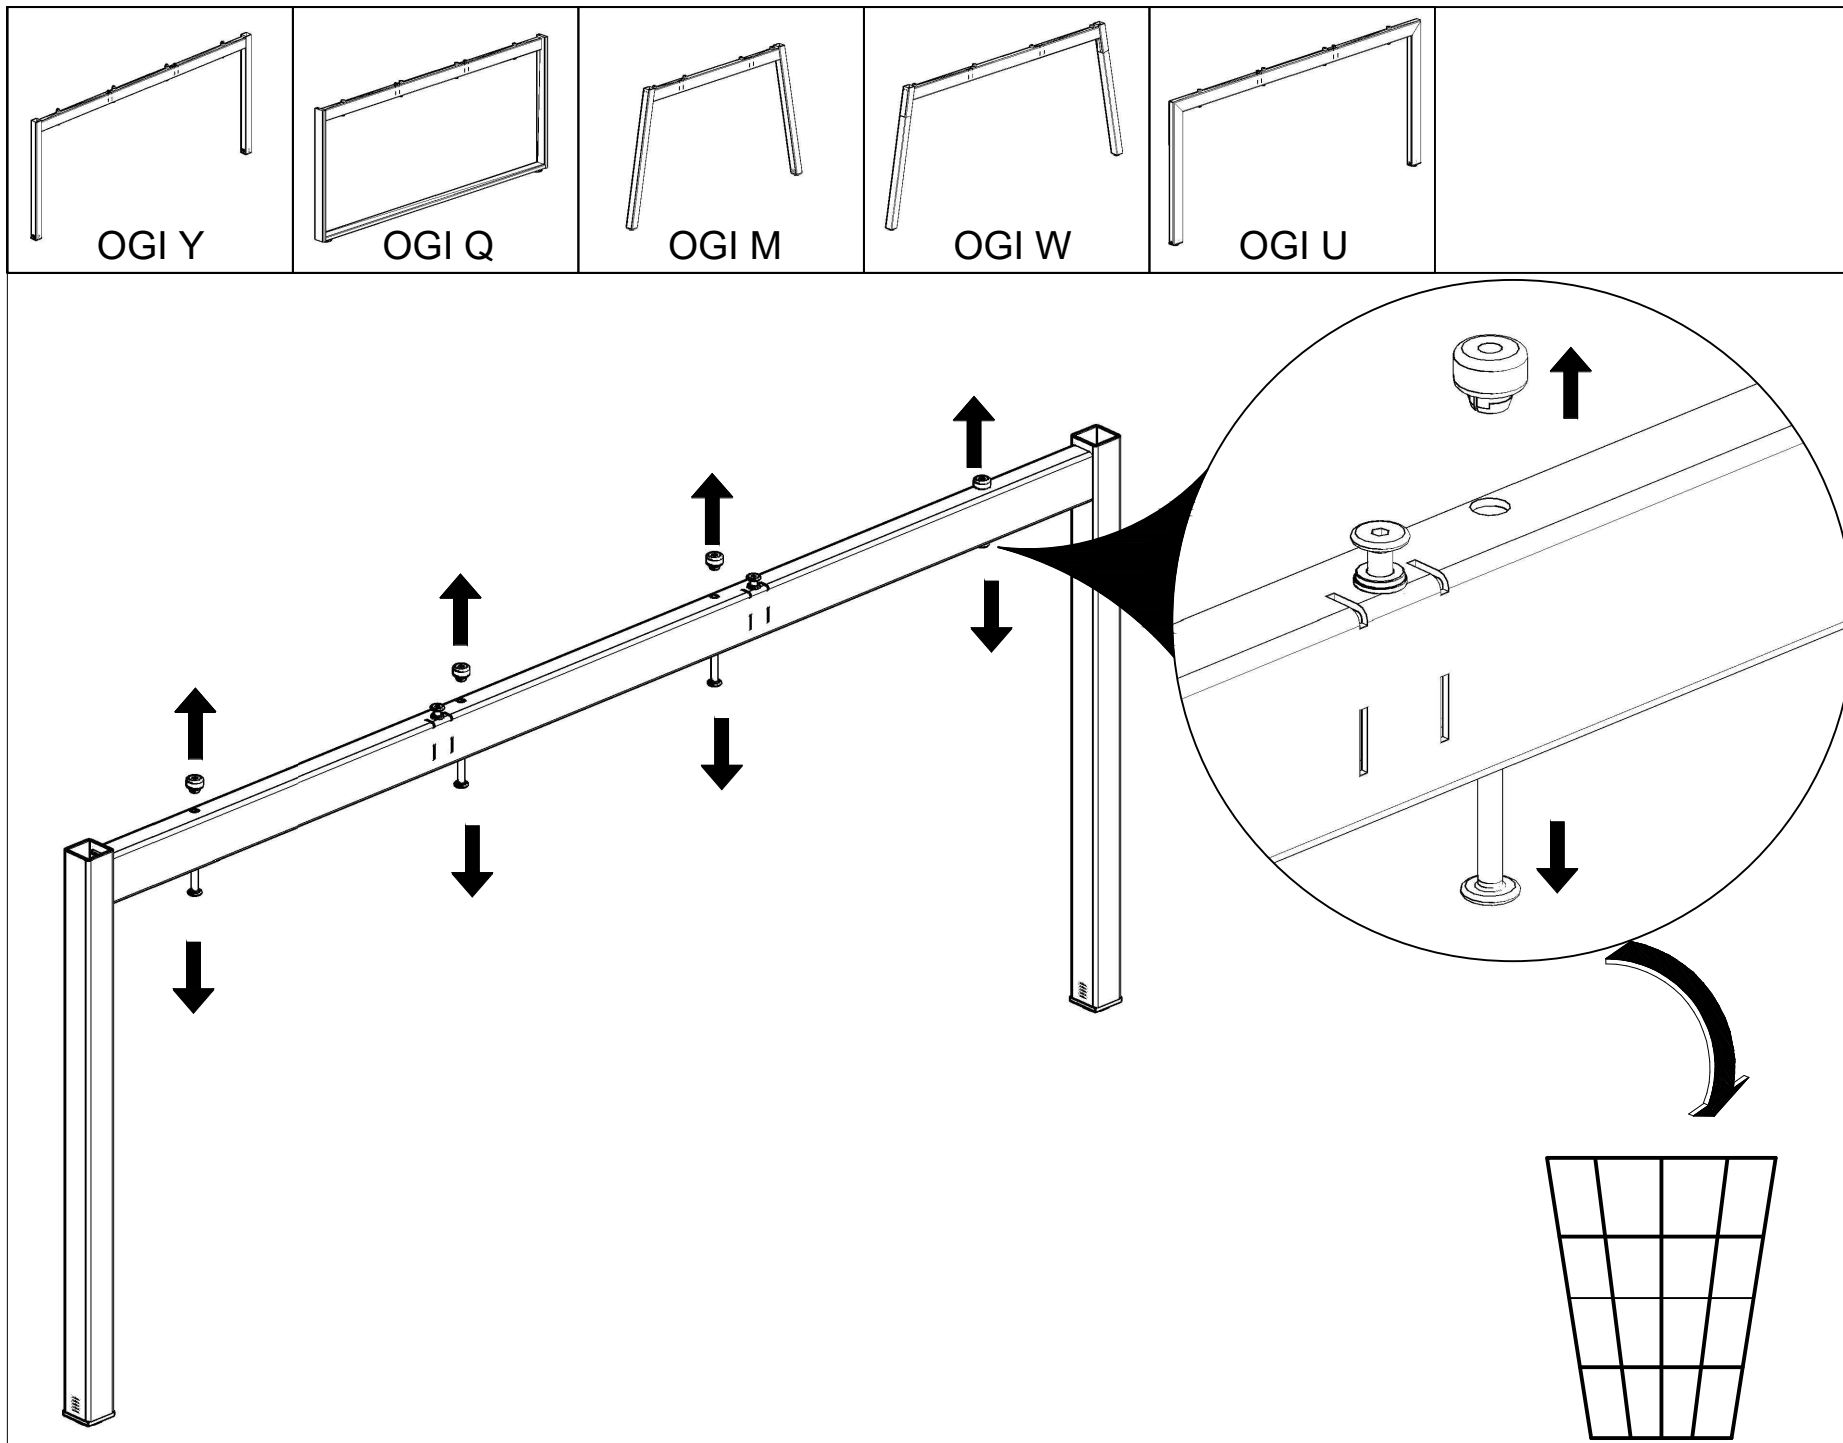

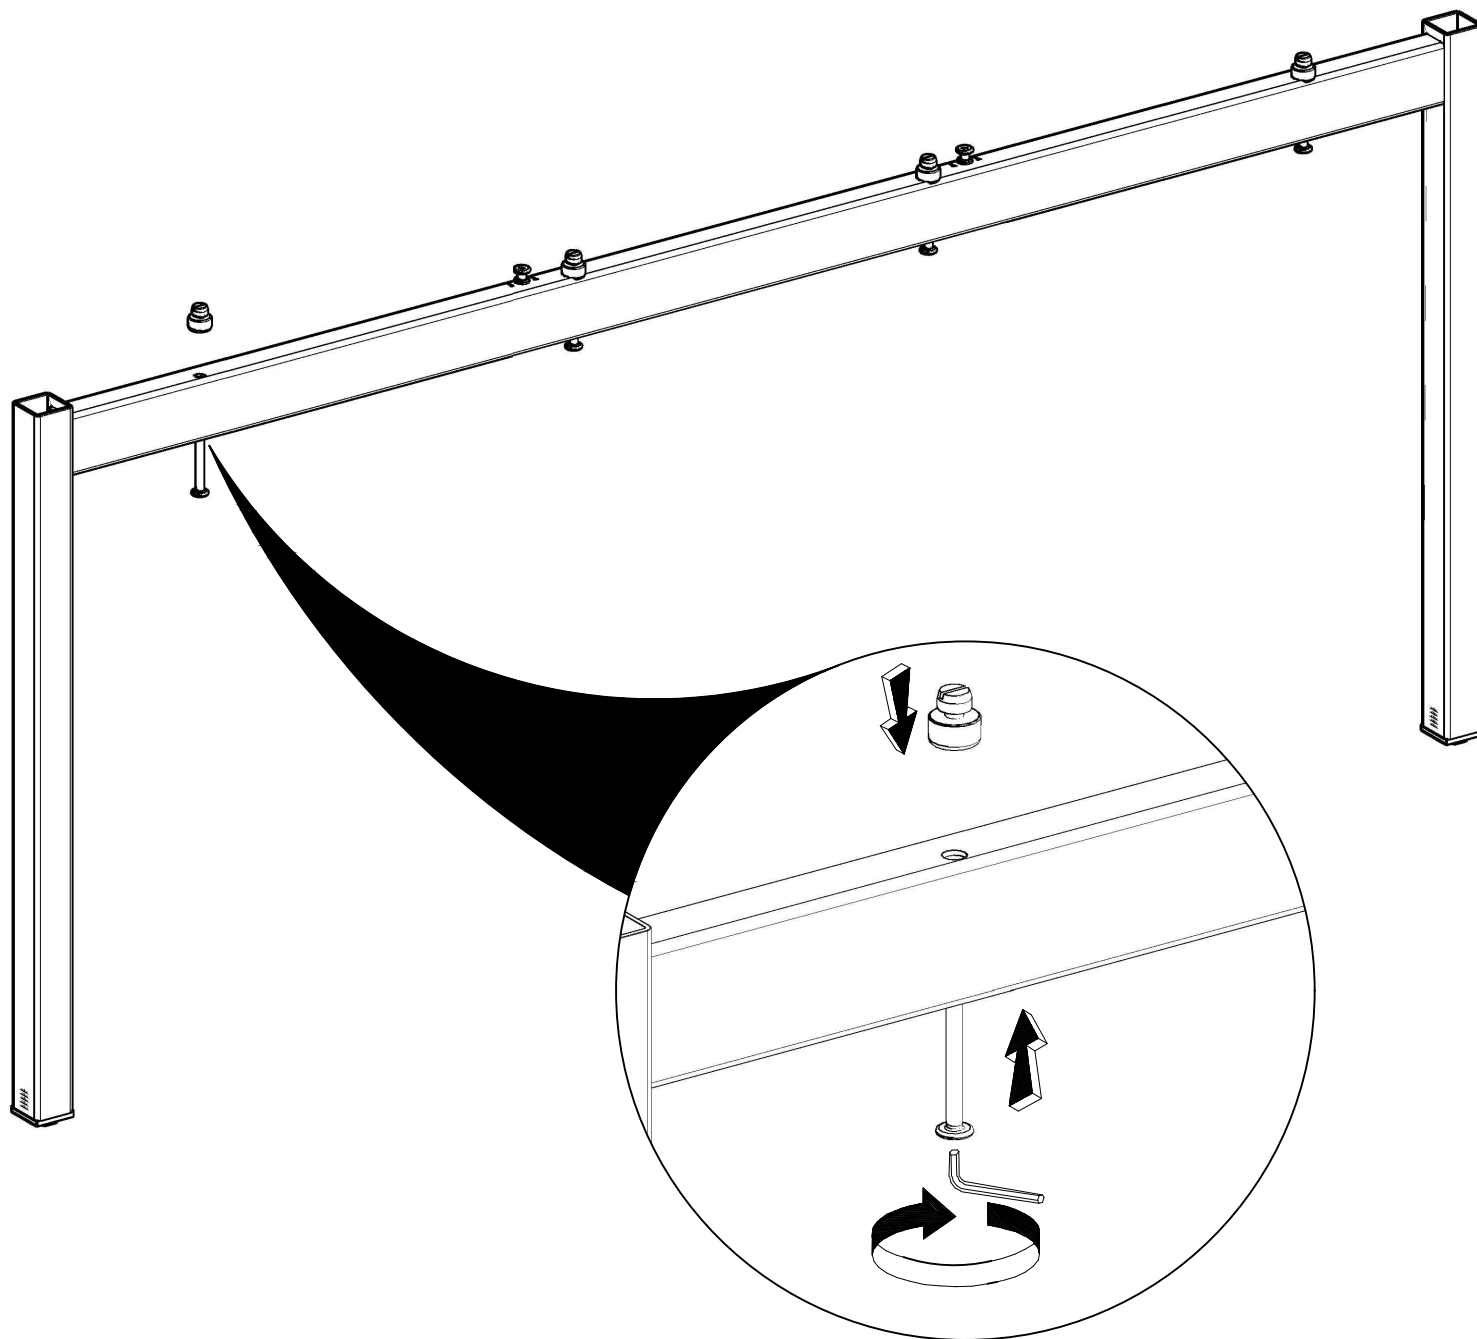

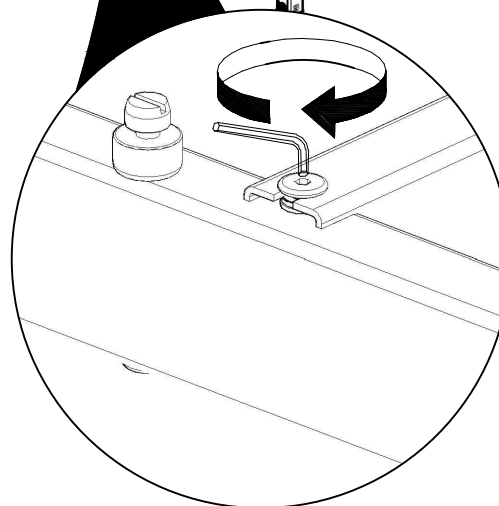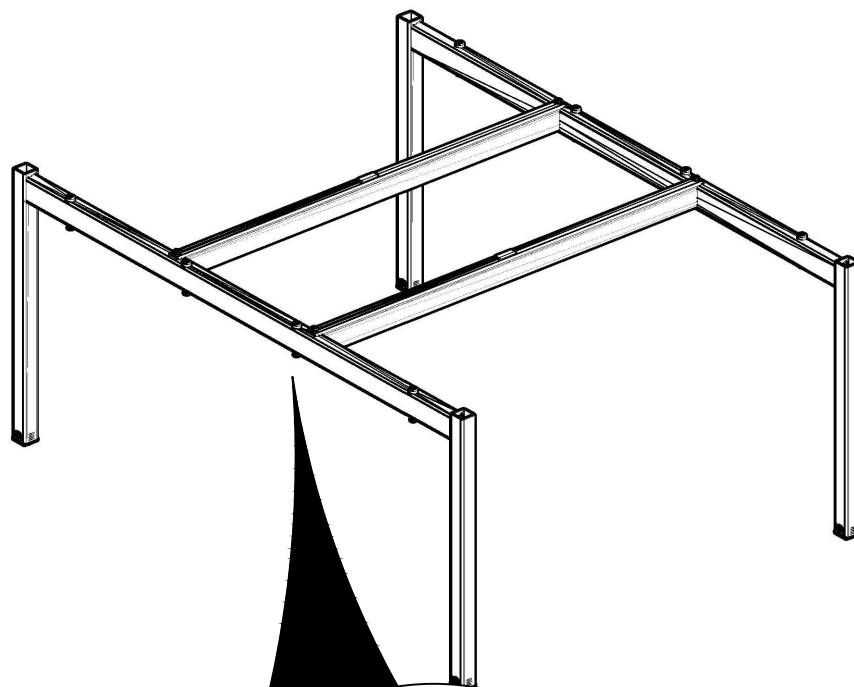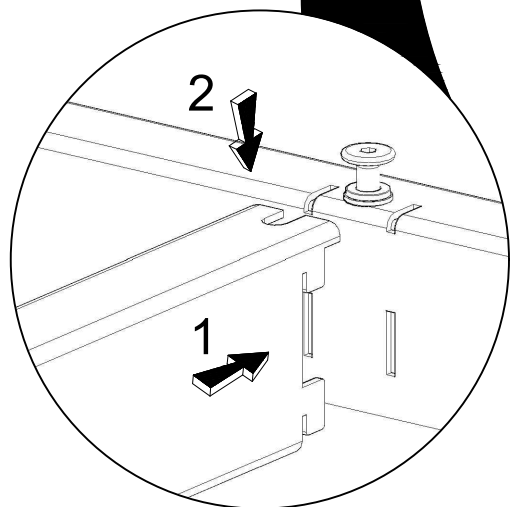
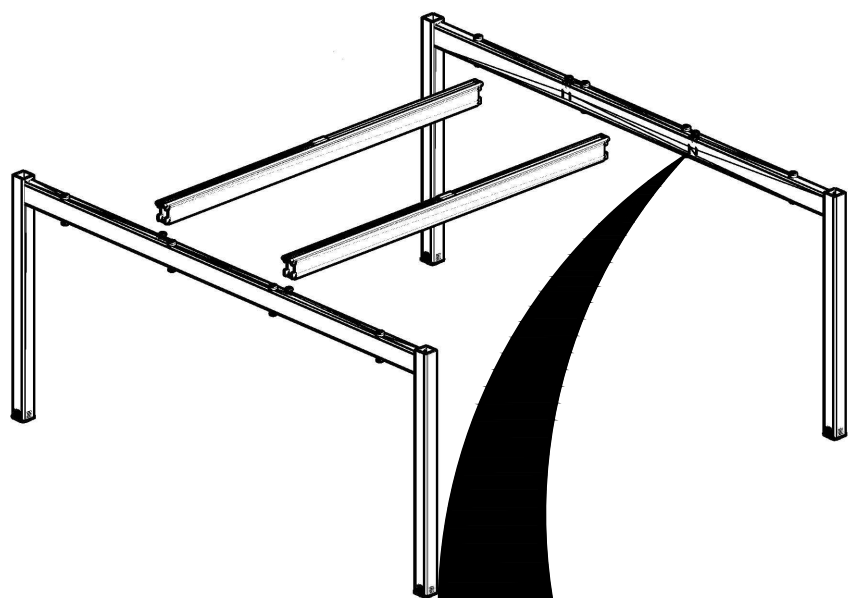


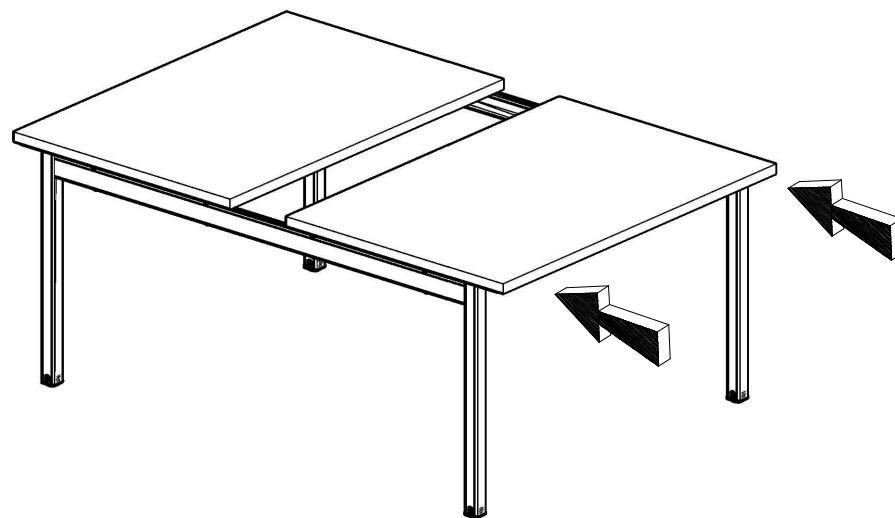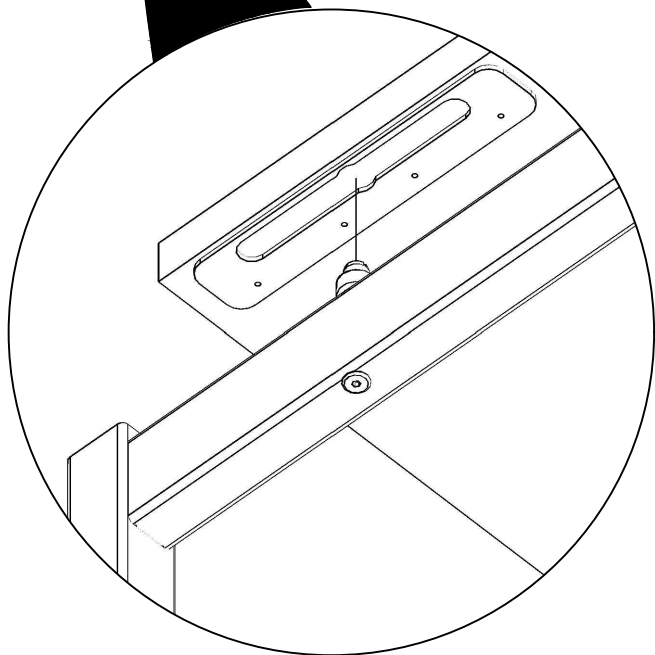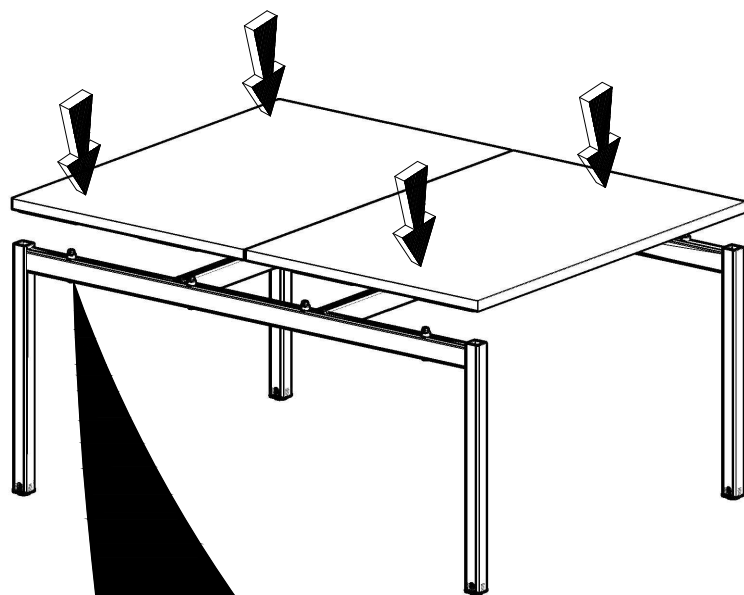


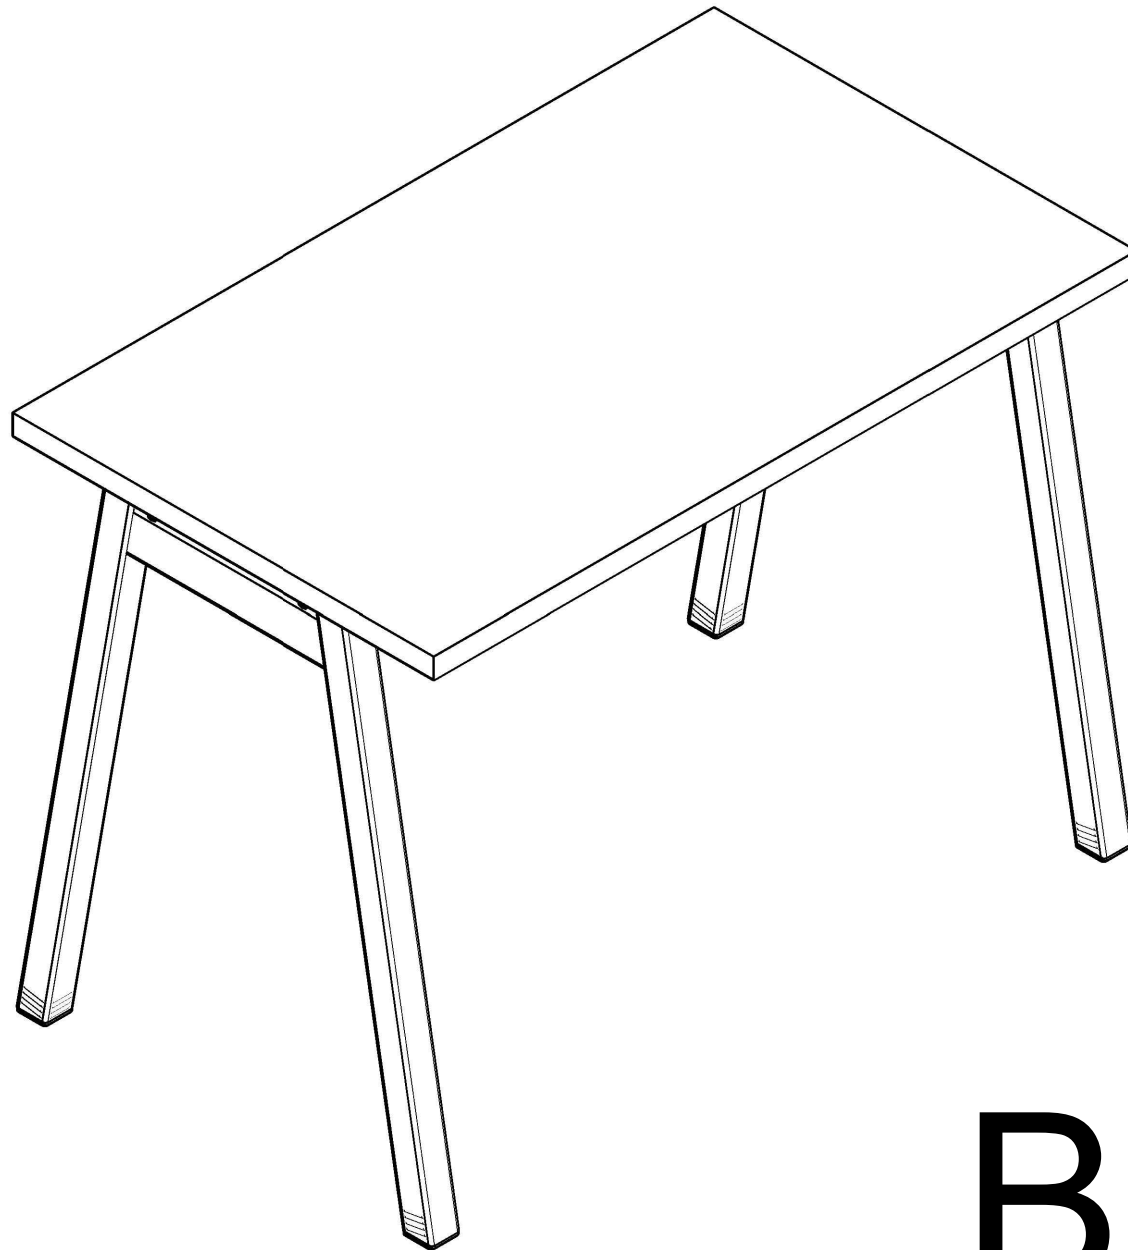



BOM

BOM04

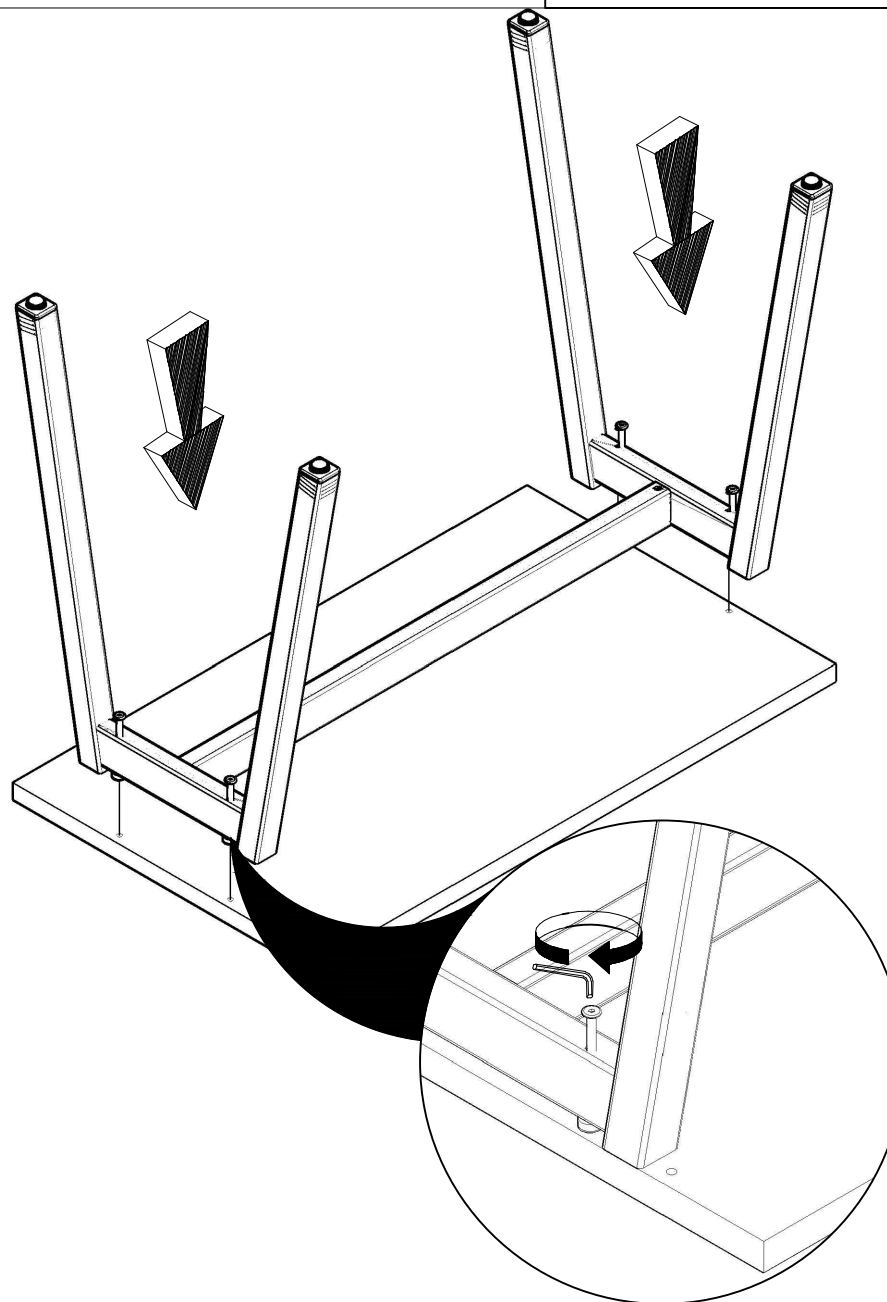
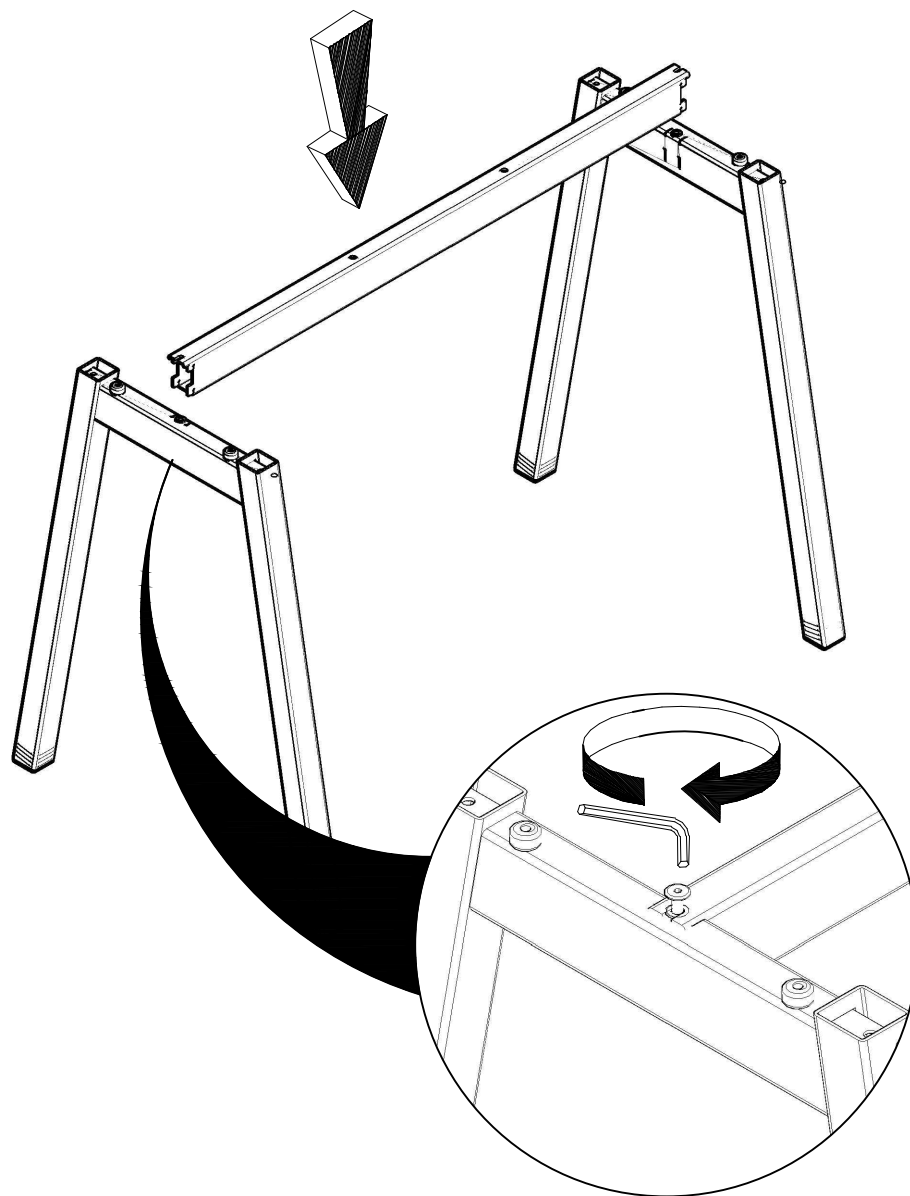


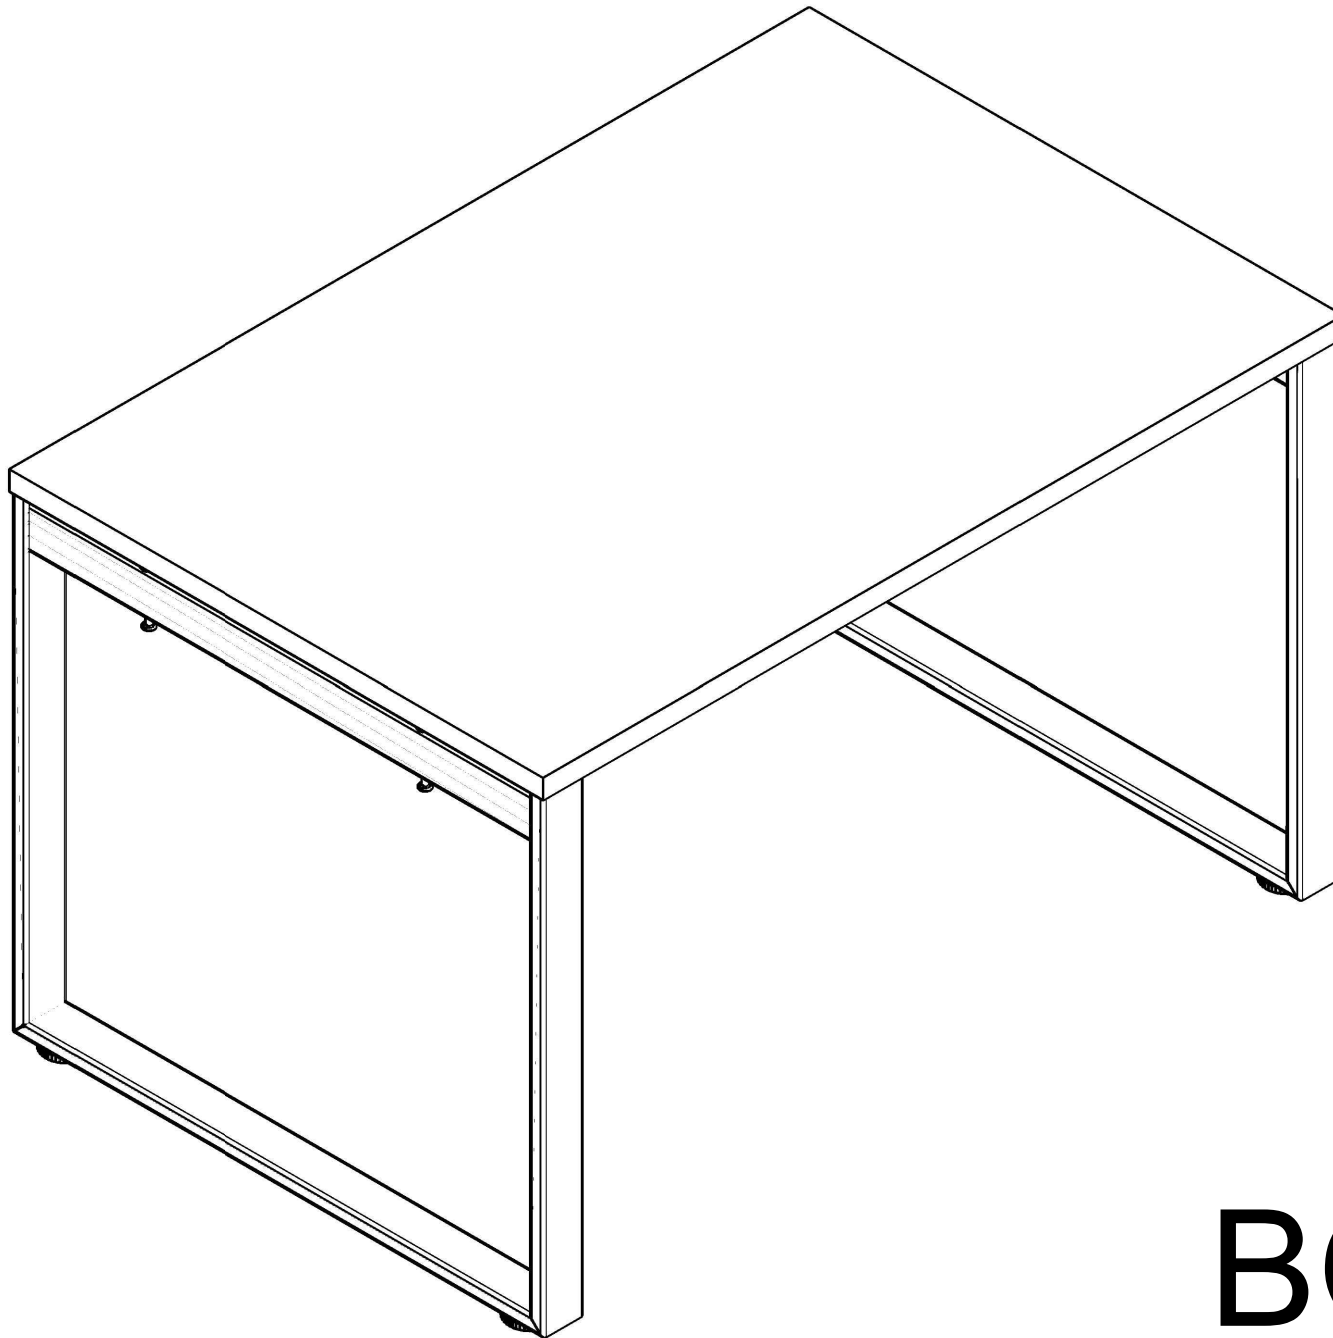

BOQ04

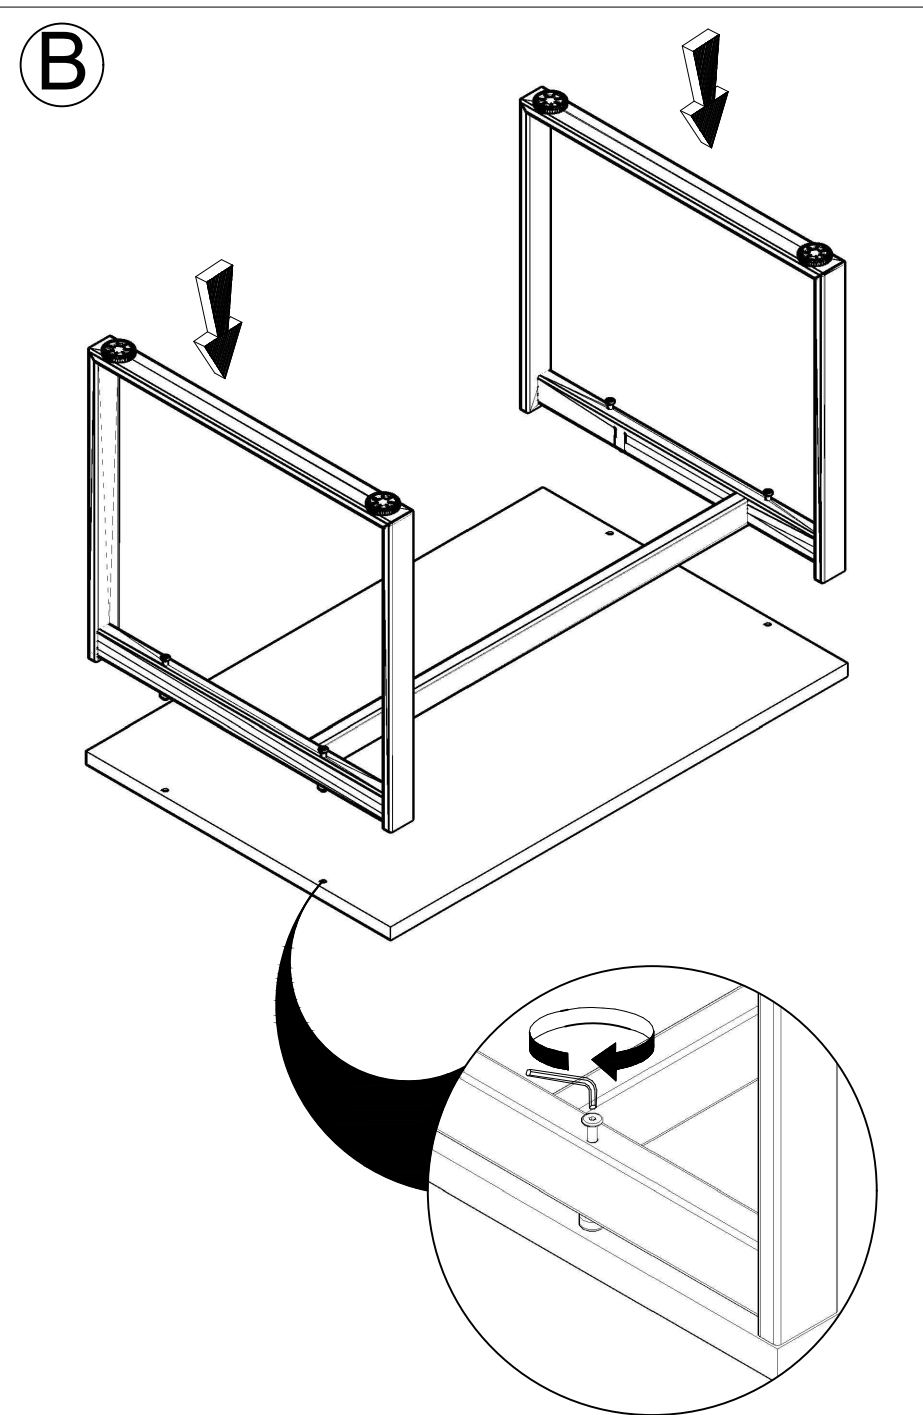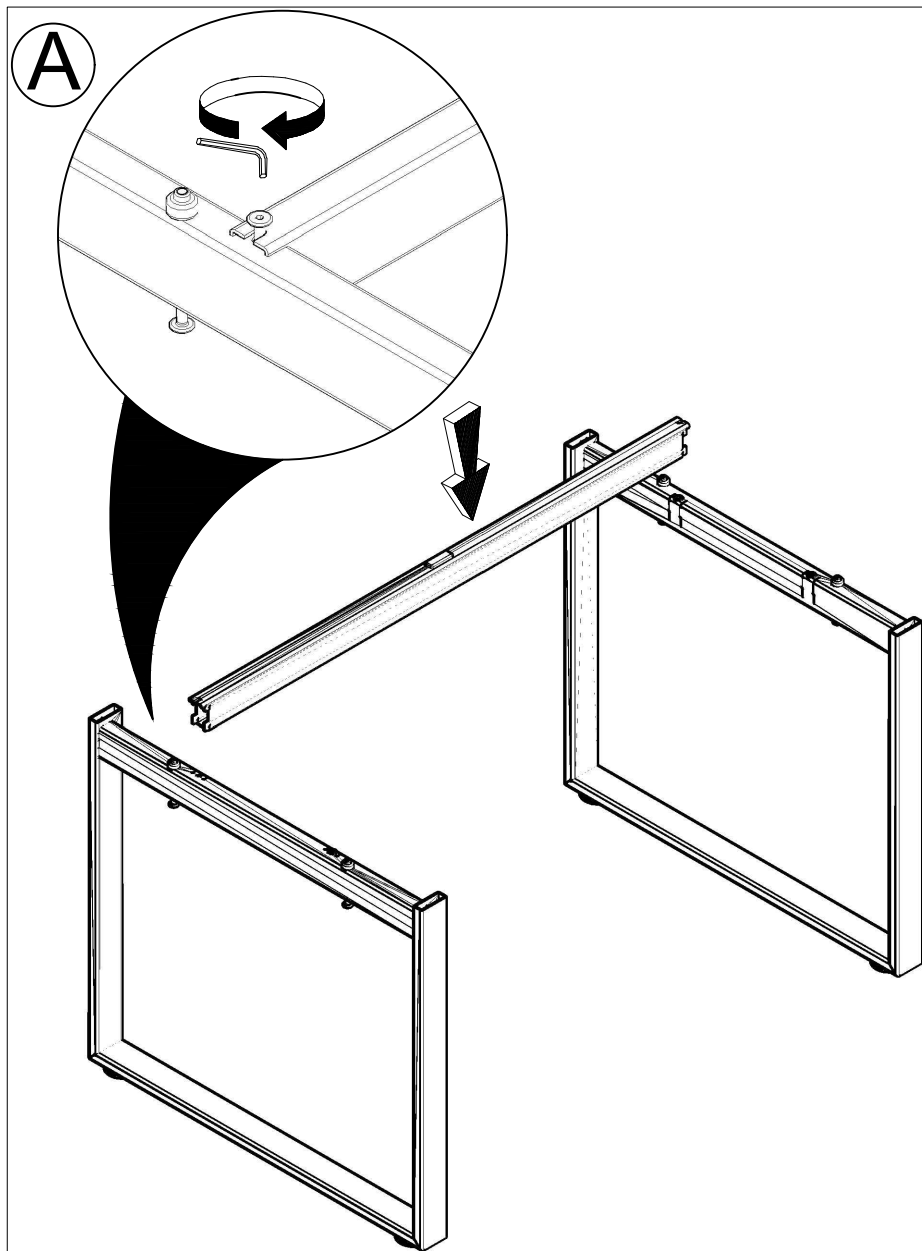




C

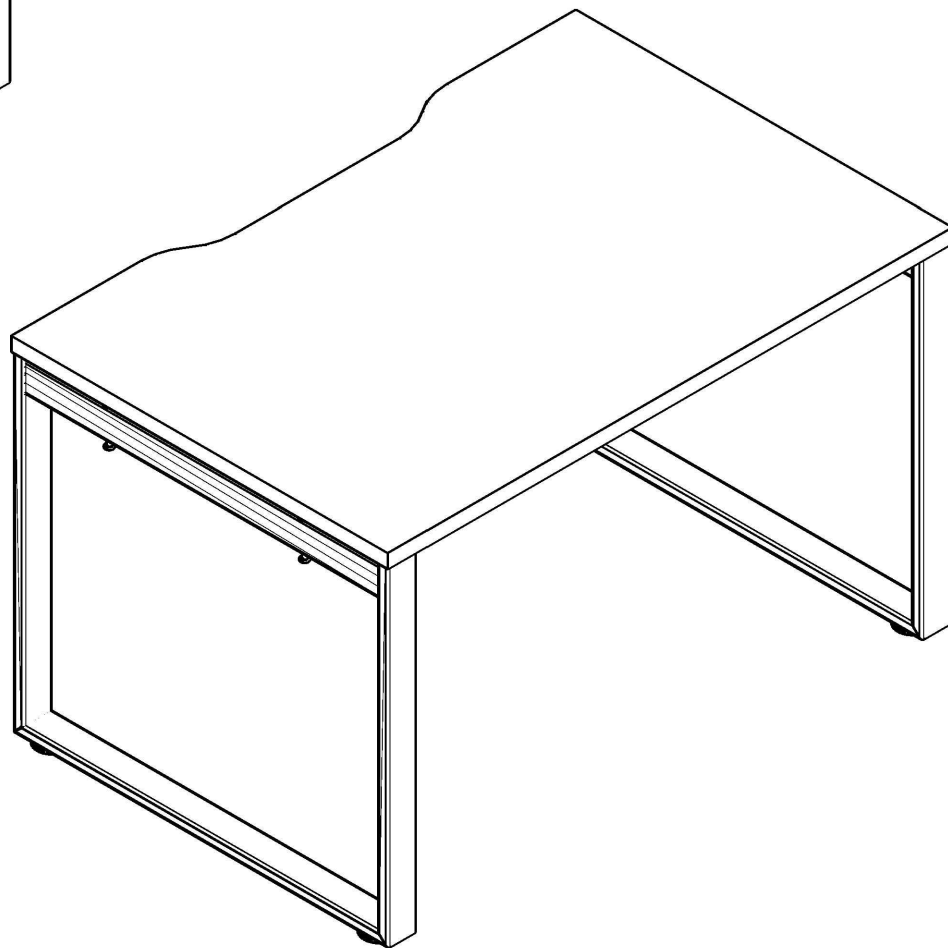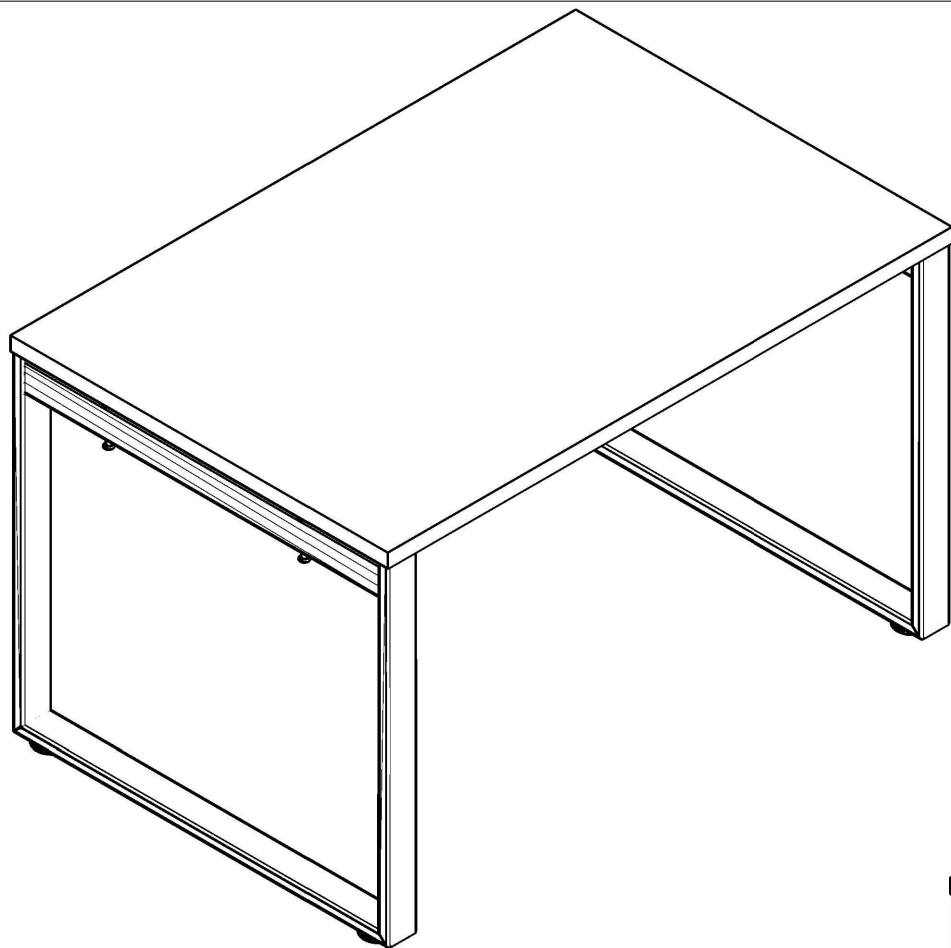


1





M05

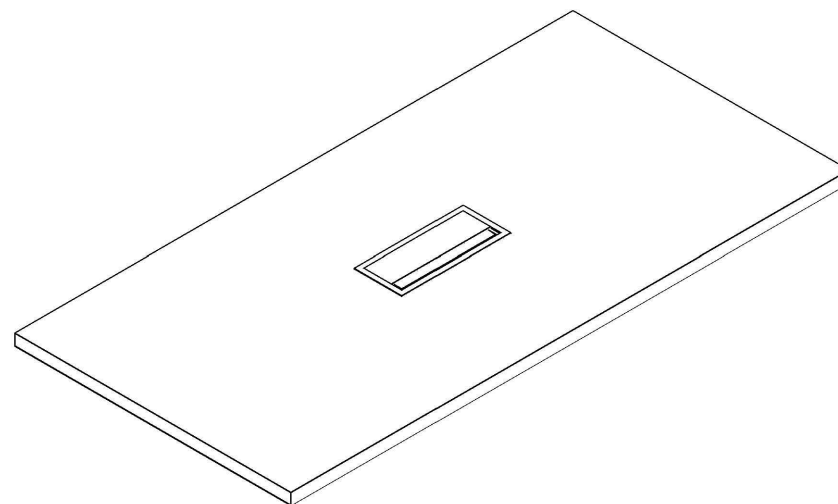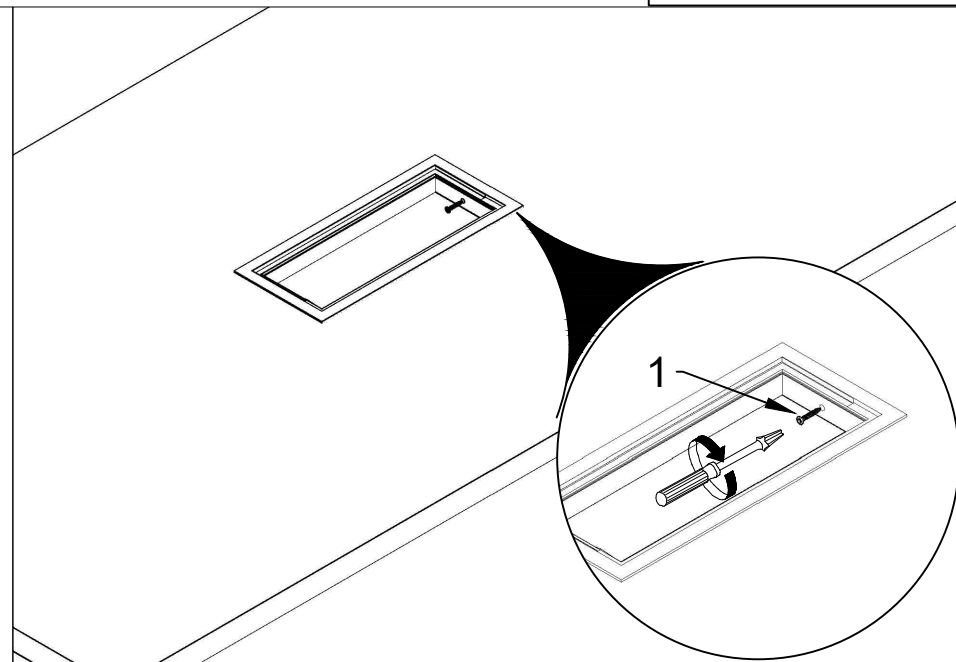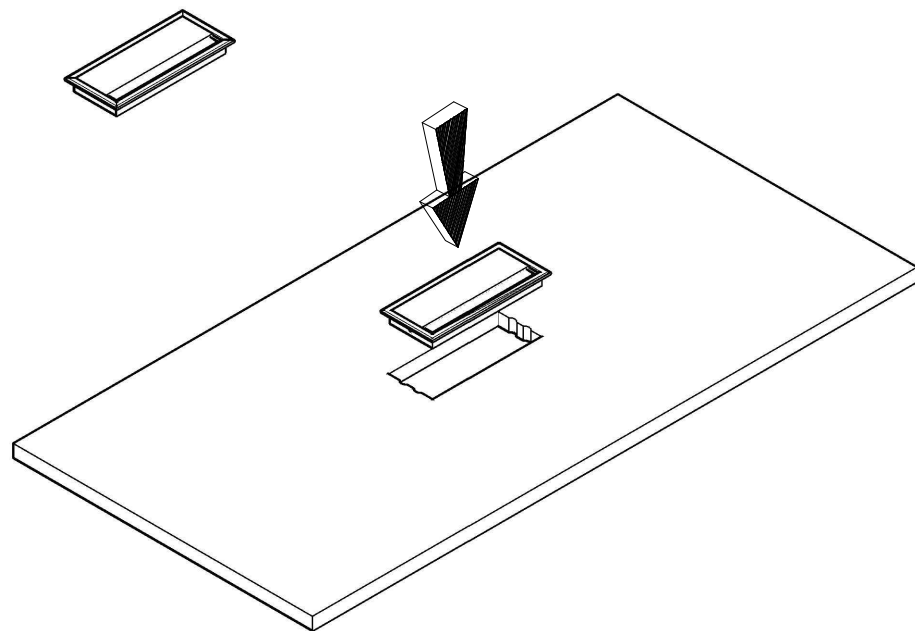

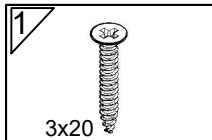


M04


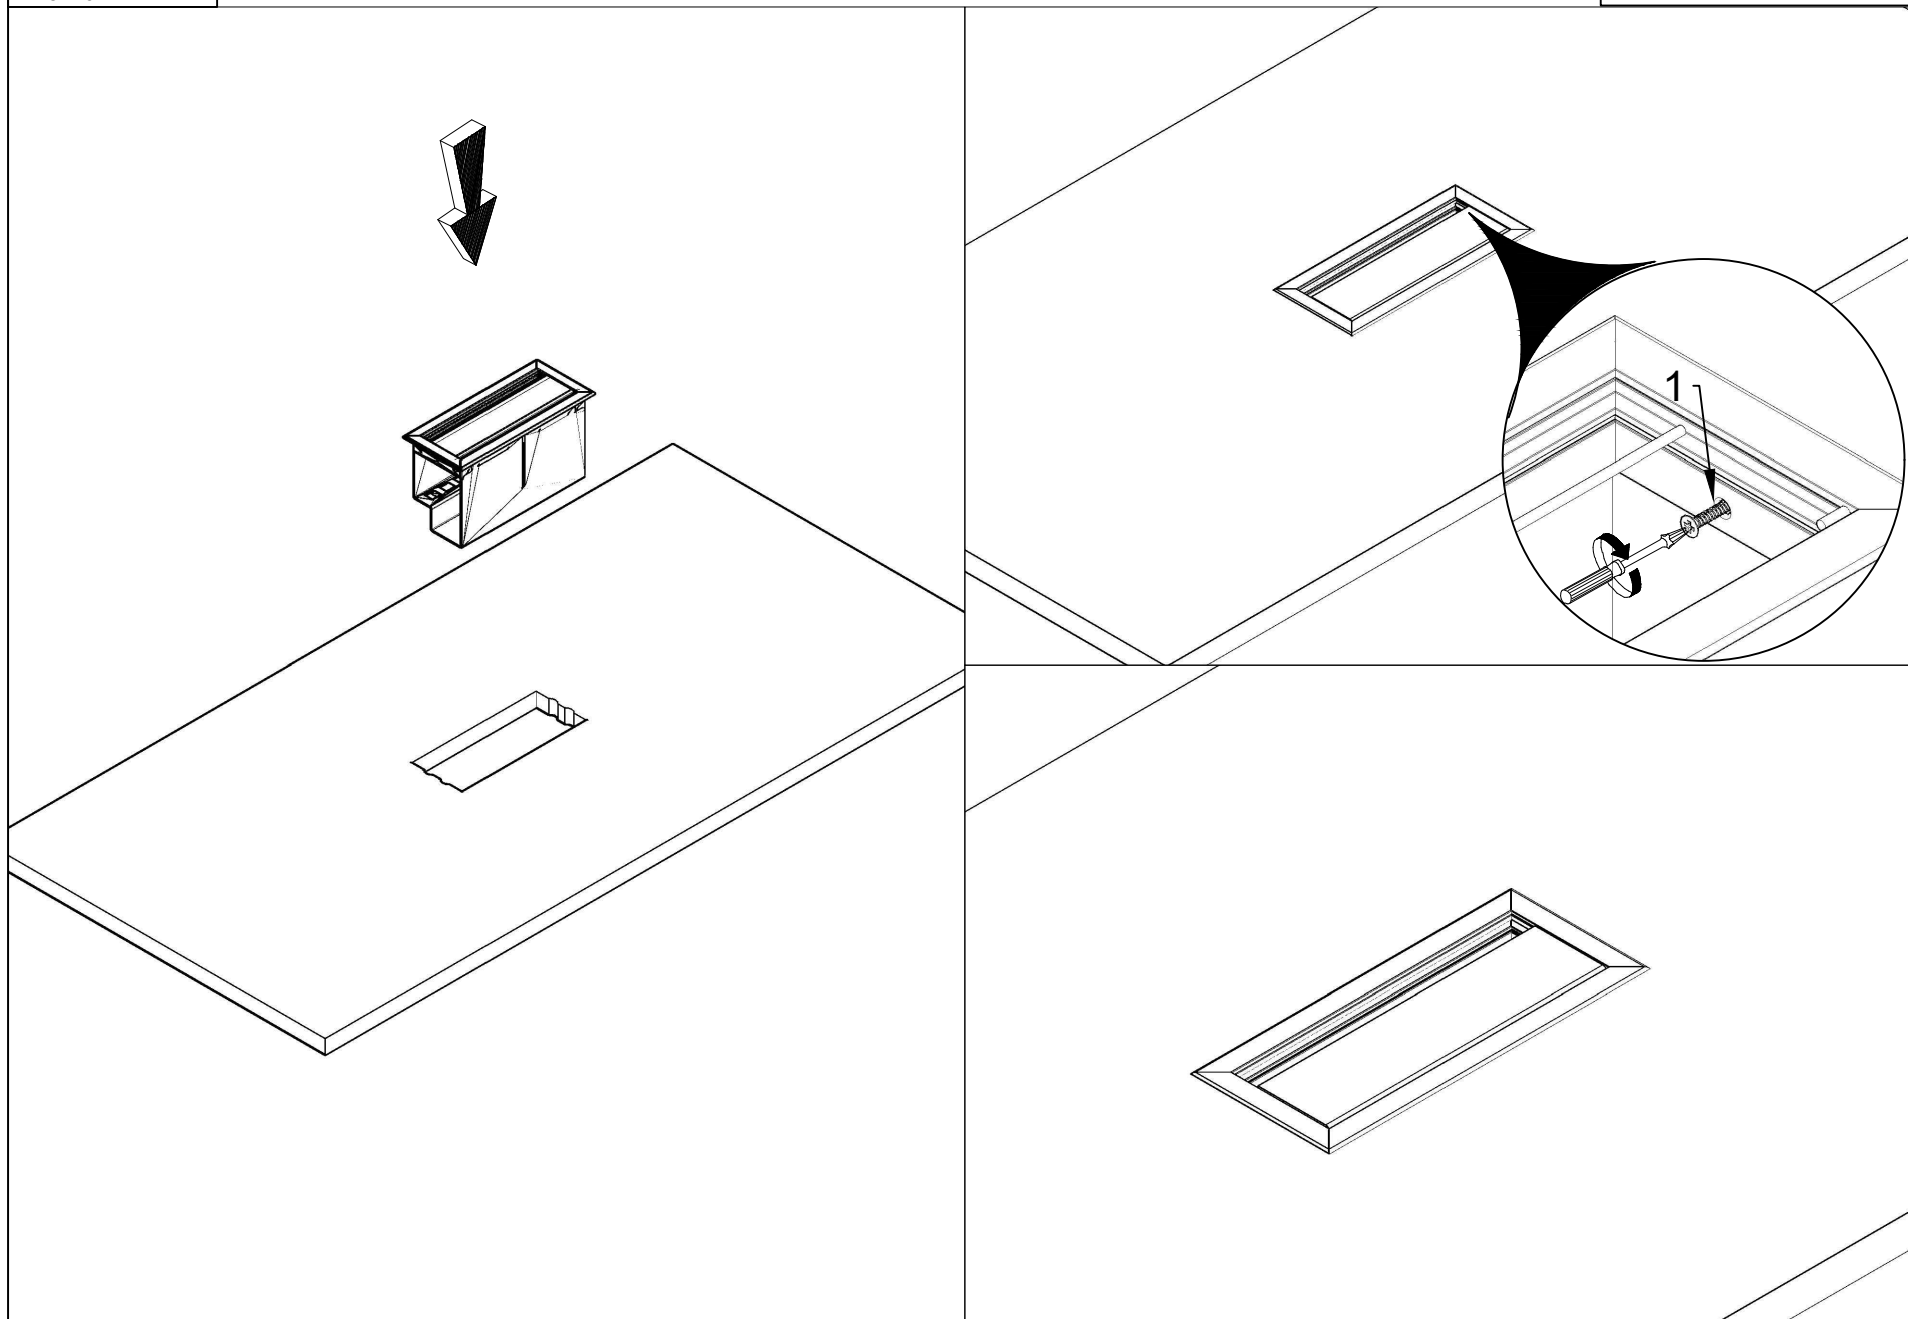


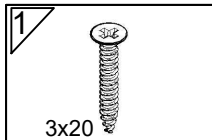


M04

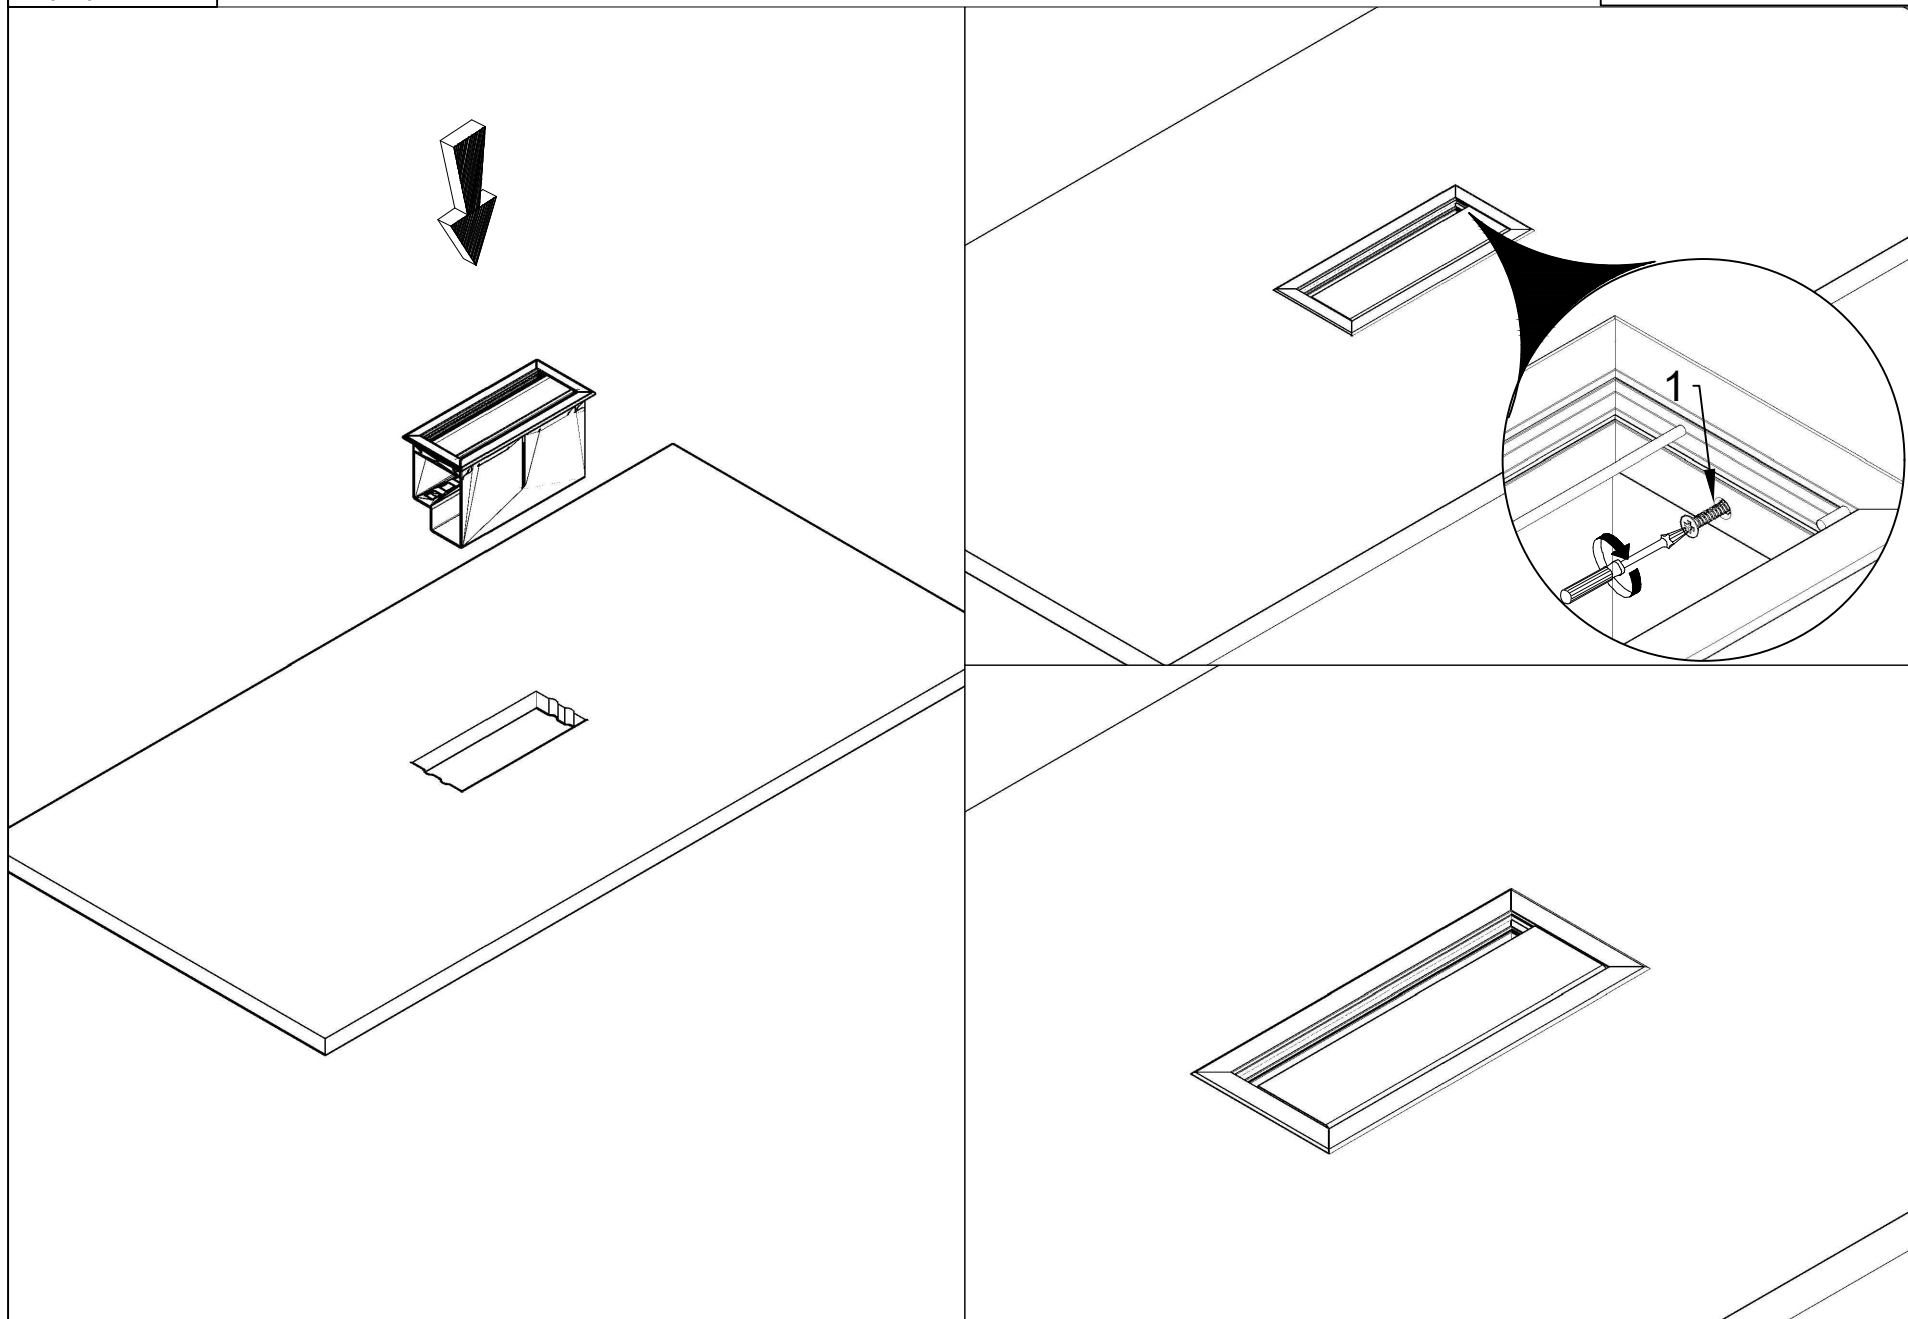


M07

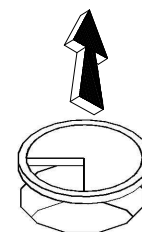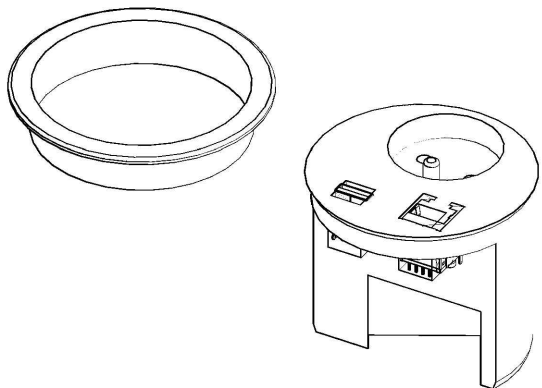

PK80

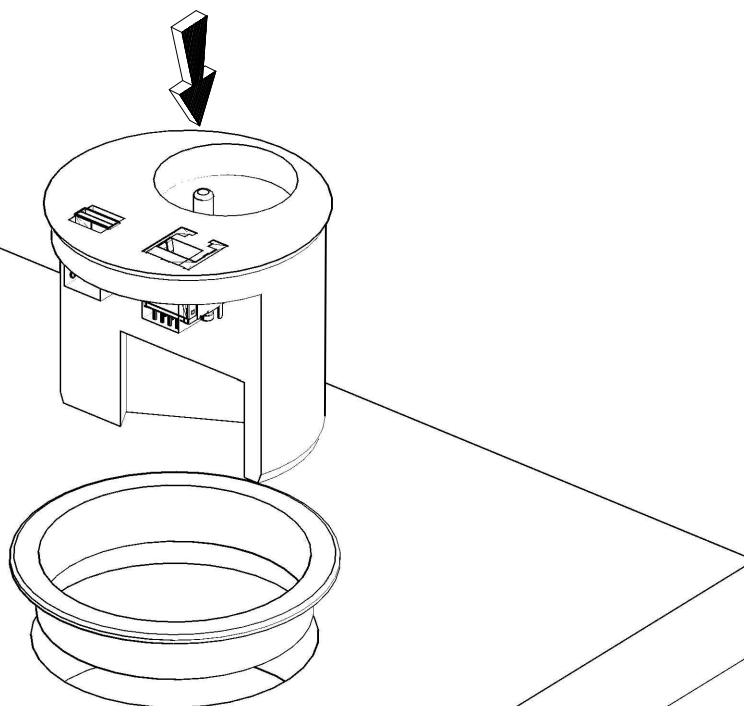

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

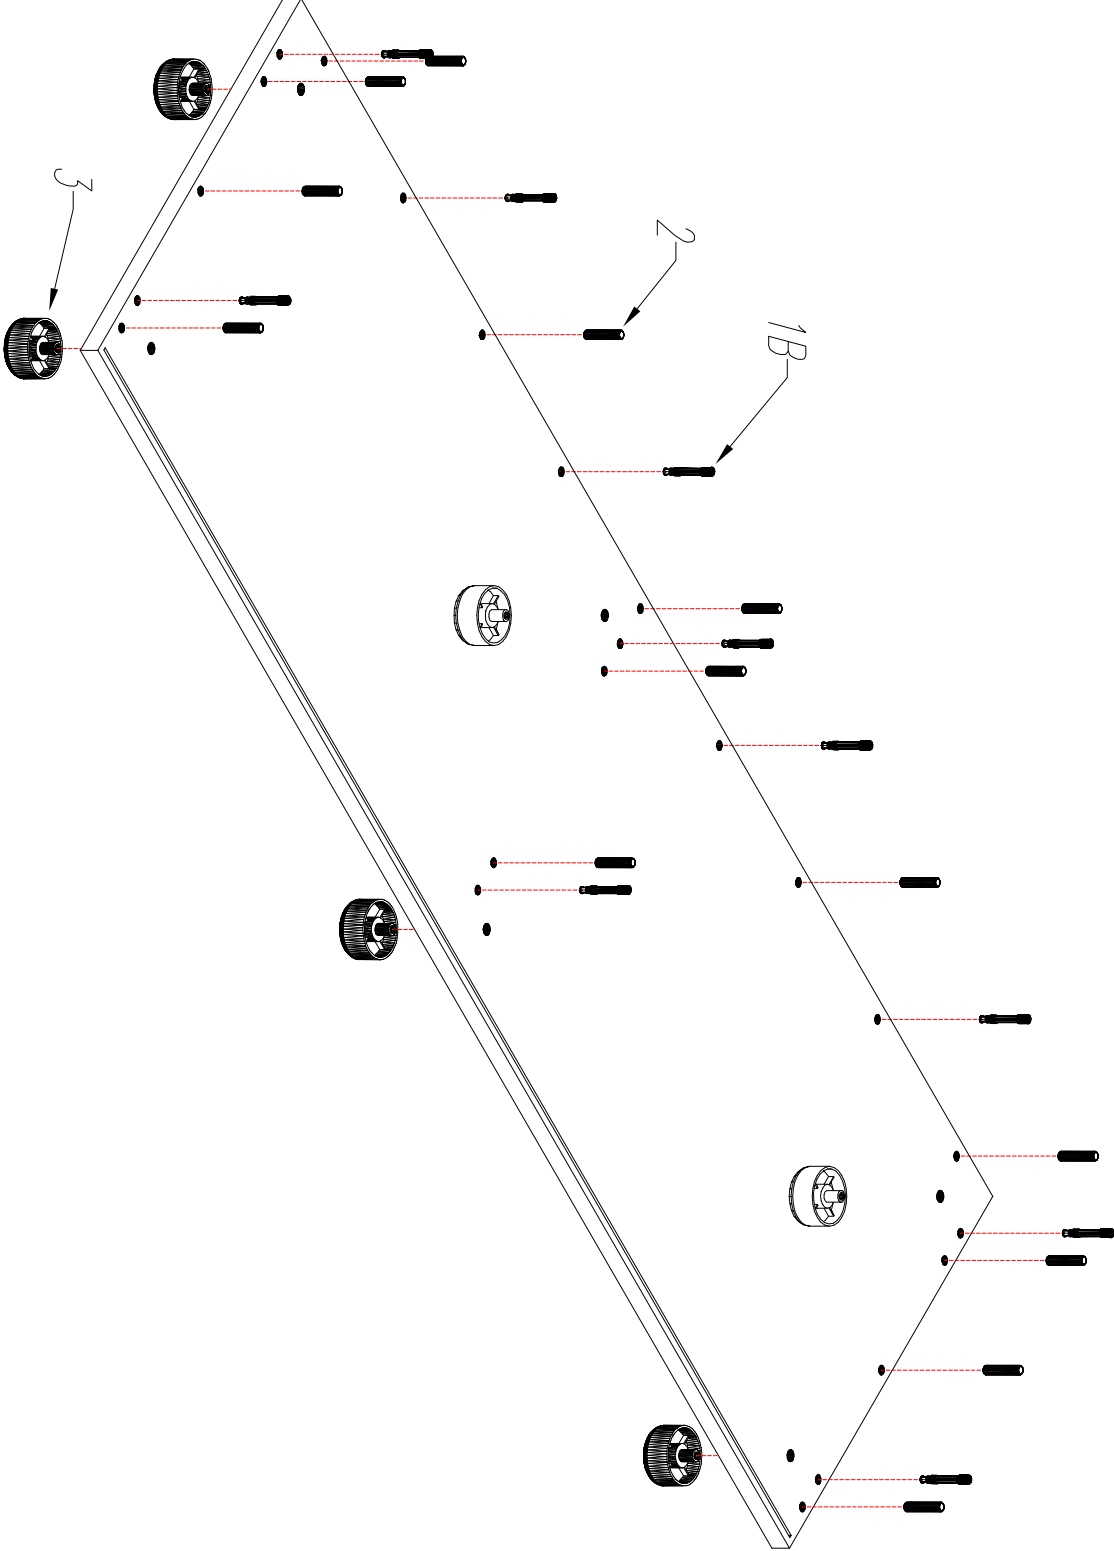

KOLEJNOŚĆ MONTAŻU
IMOSRODOW I KOKKOW.

THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.

DIE MONTAGEFOLGE VON
EXZENTERN UND DIBBELN.

1

2


3


4


5

Start


Stop 225

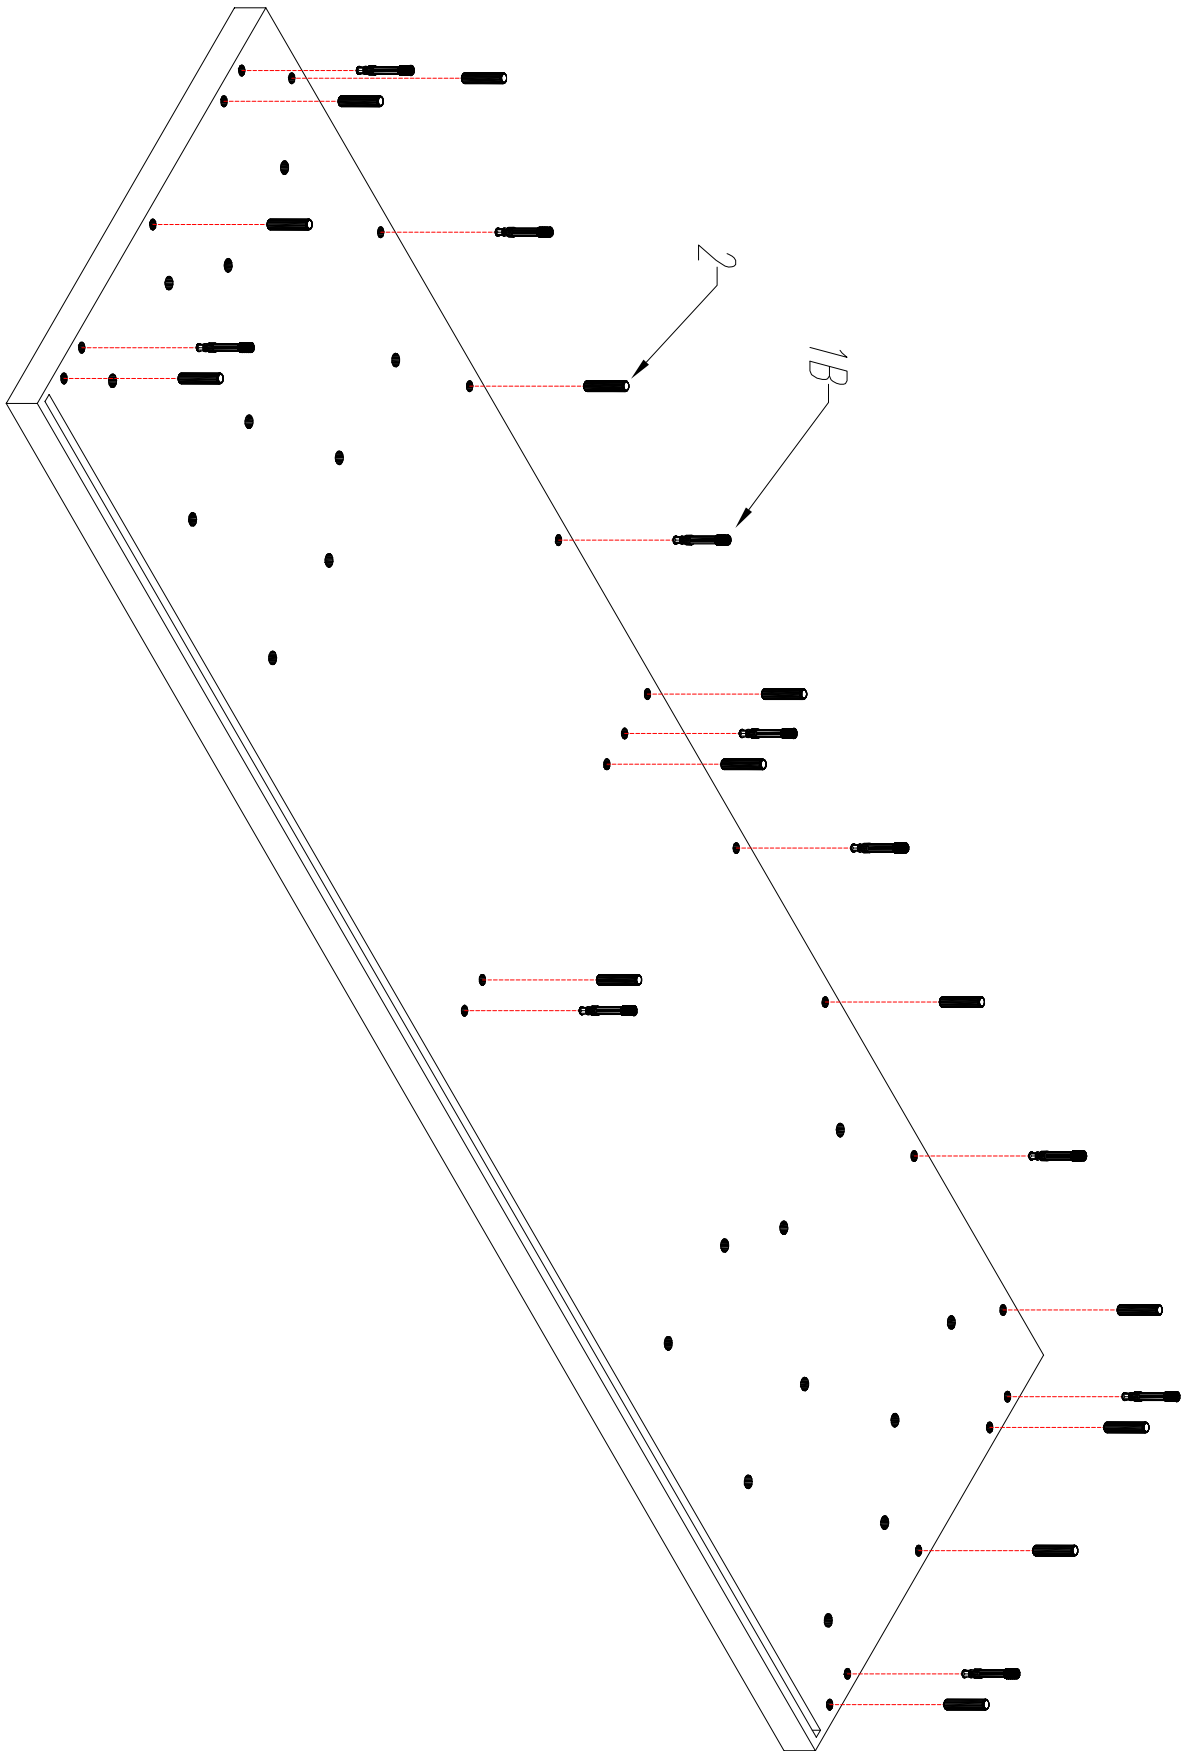

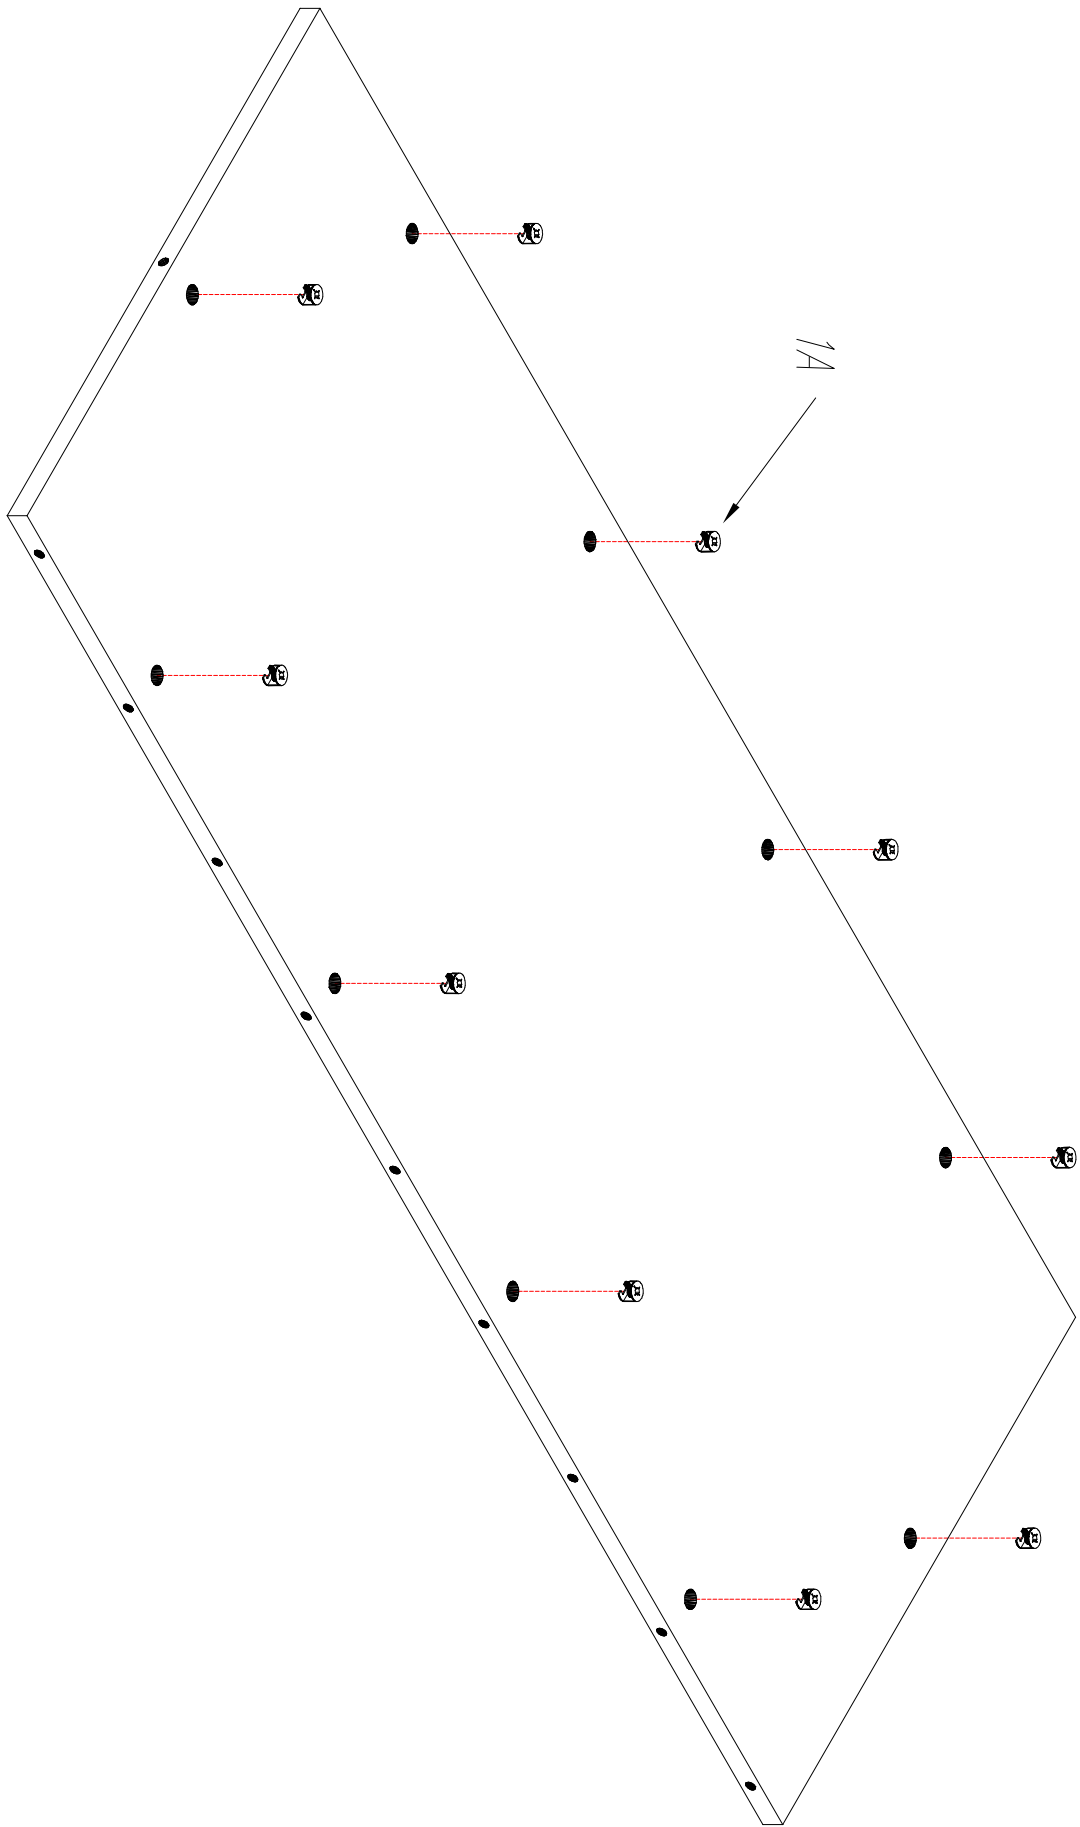


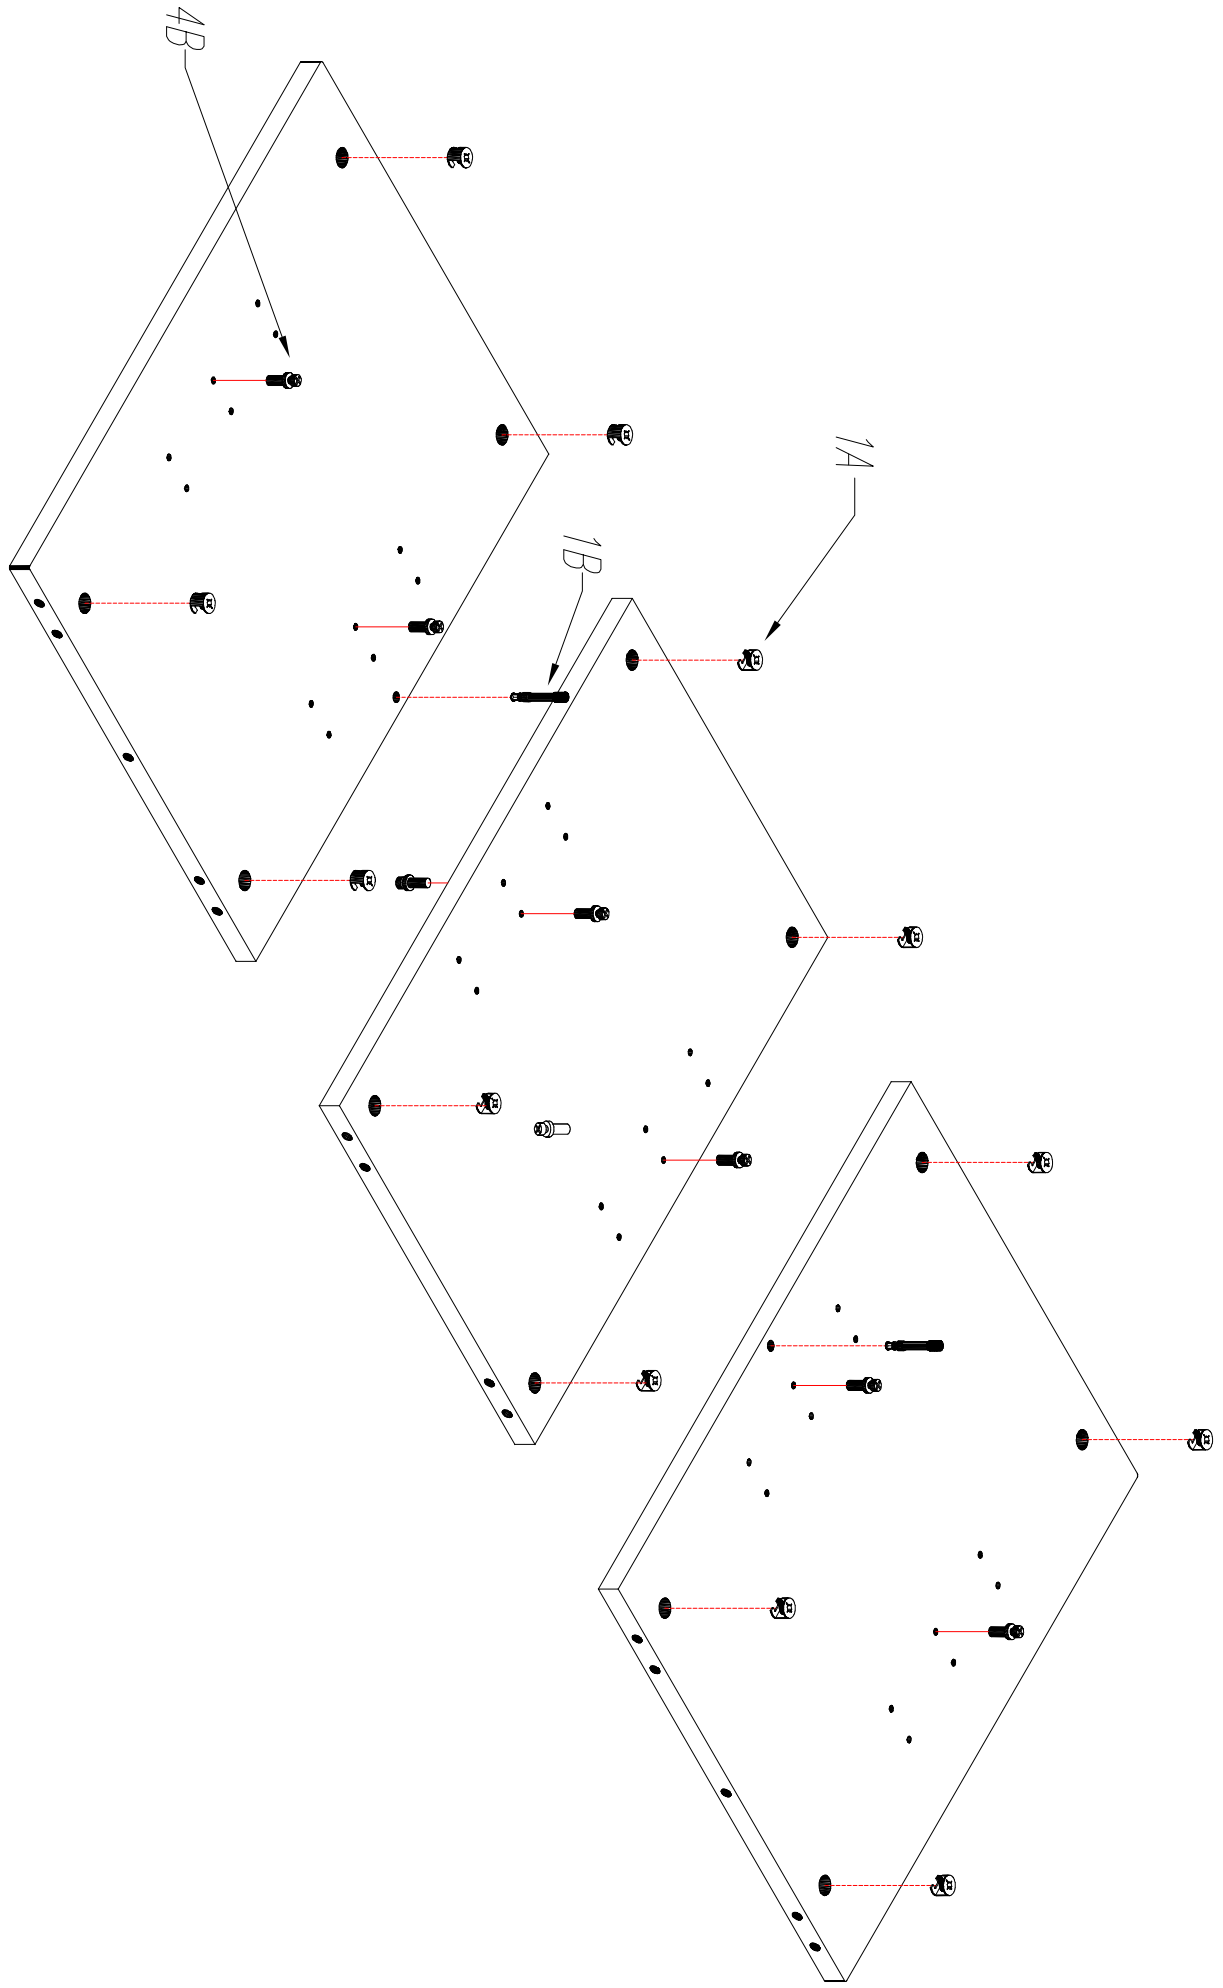


G

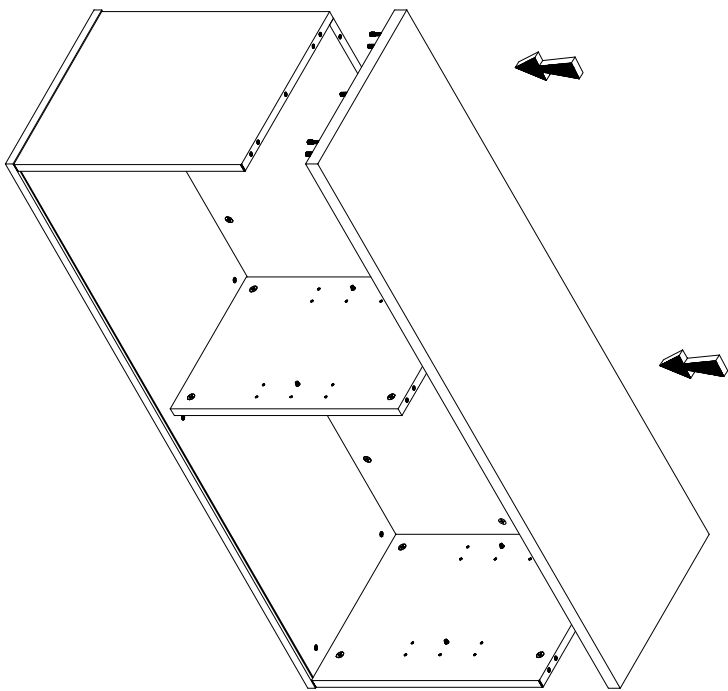


F



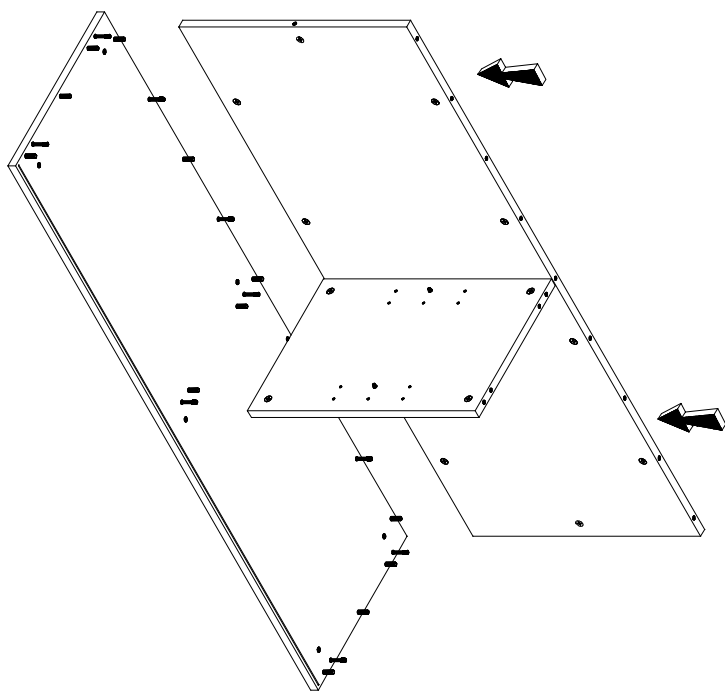


H

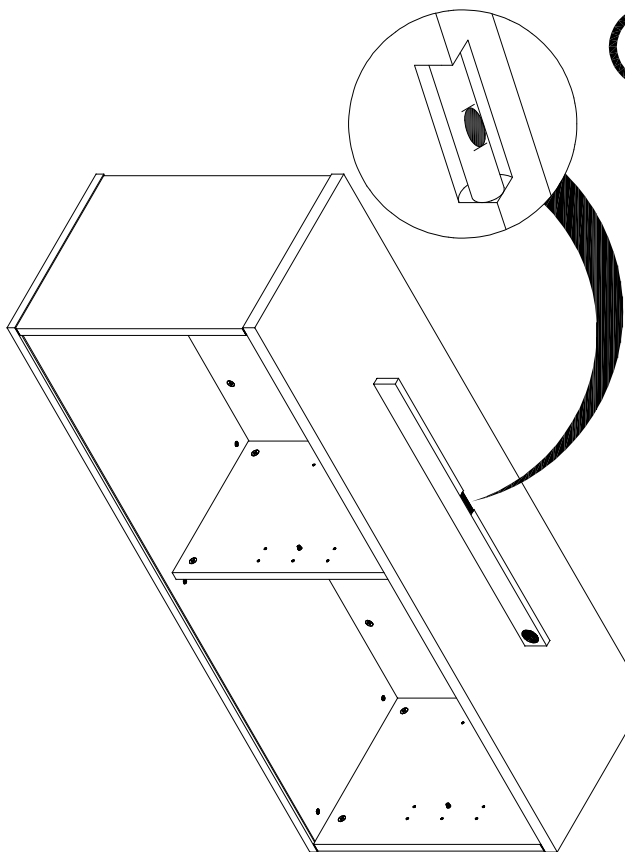


T


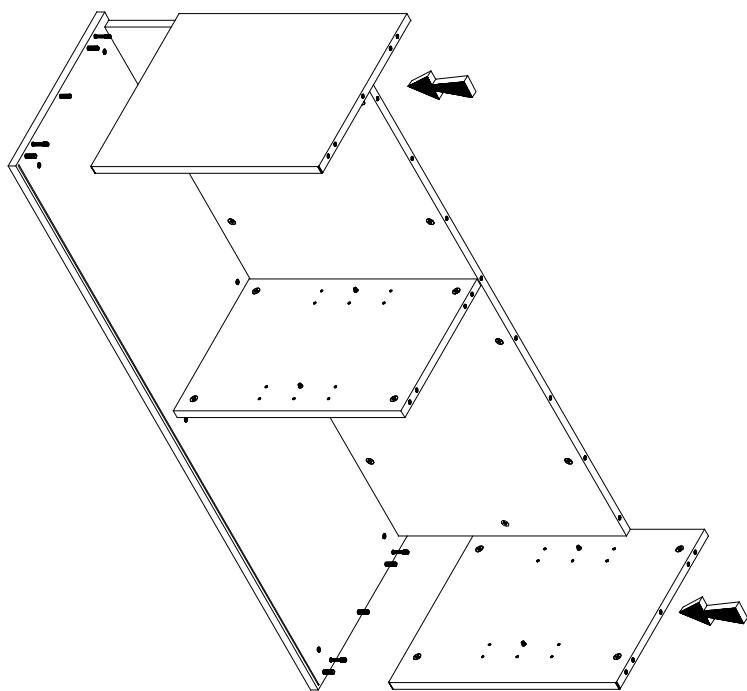


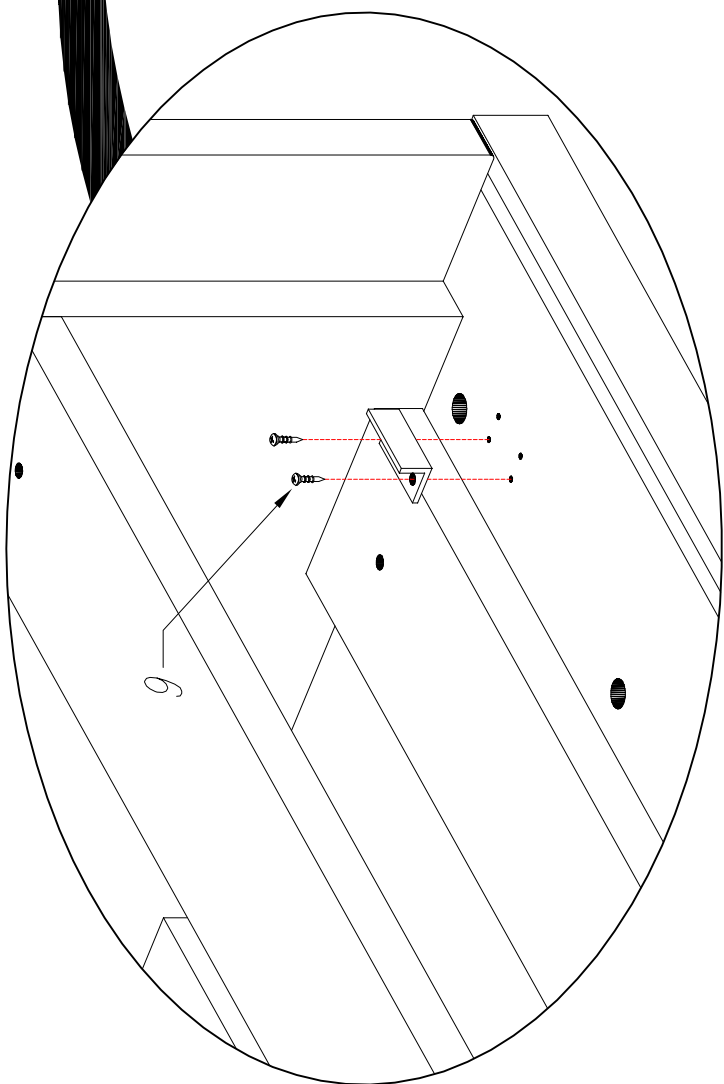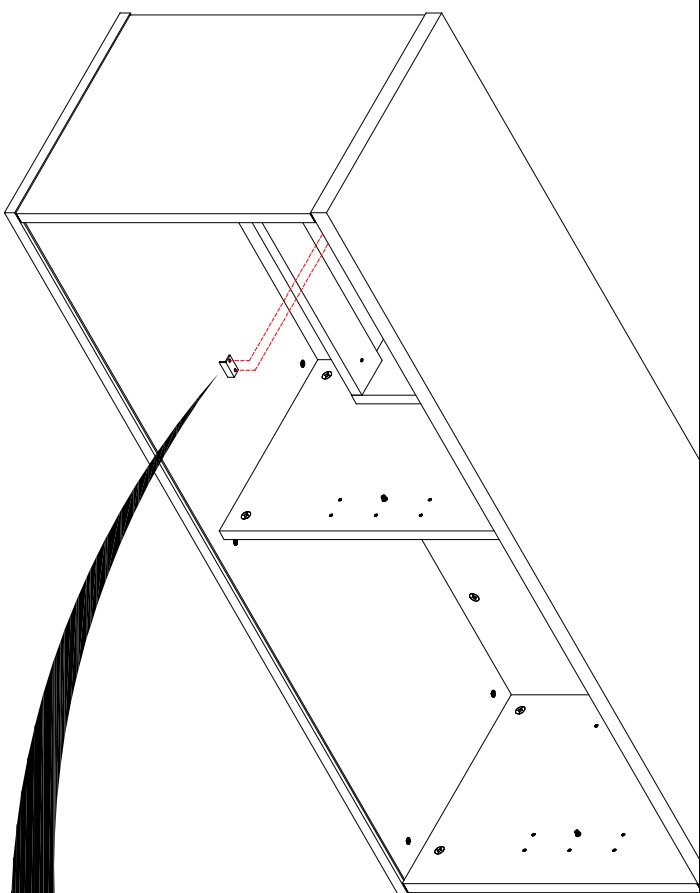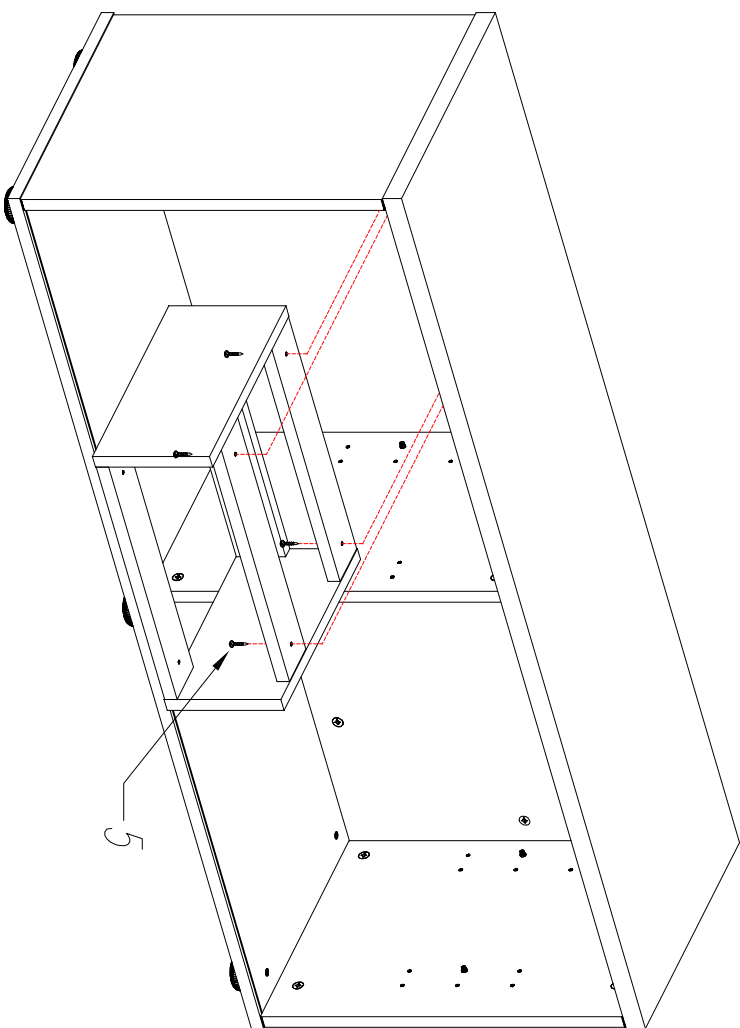


K

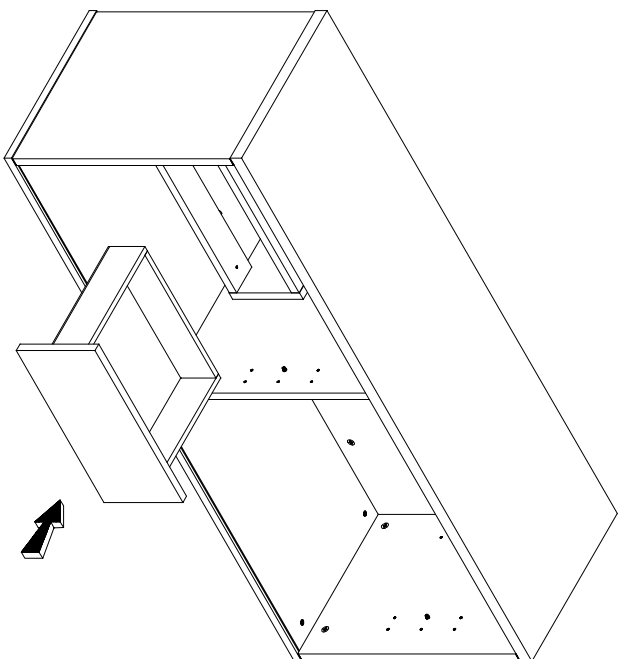


-Przykręcić śruby z
małą siłą.
-Put the screws gently.
-Anschrauben die
Schrauben zierlich.

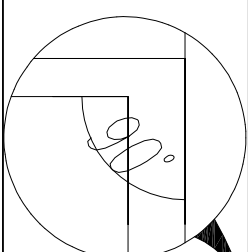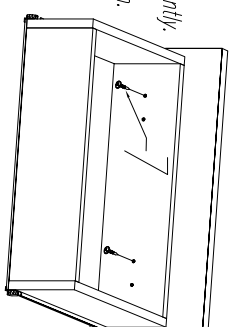



-Przykręcić śruby z
dużą siłą.
-Put the screws strongly.
-Anschrauben die
Schrauben staerklich.




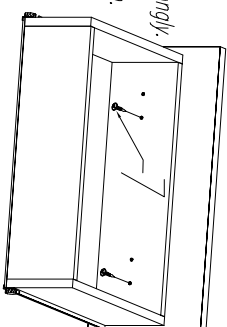



L

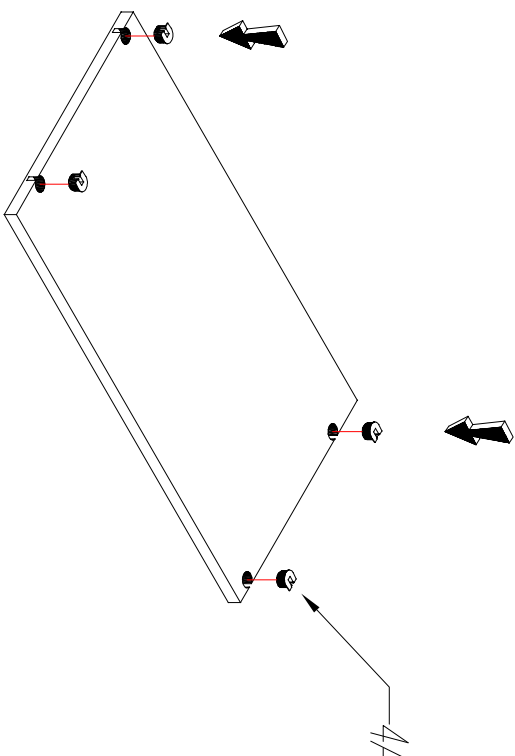


M

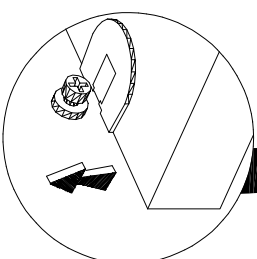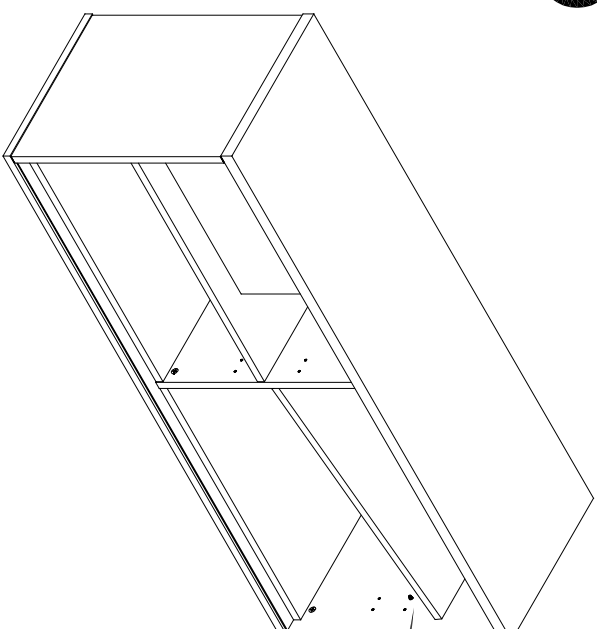

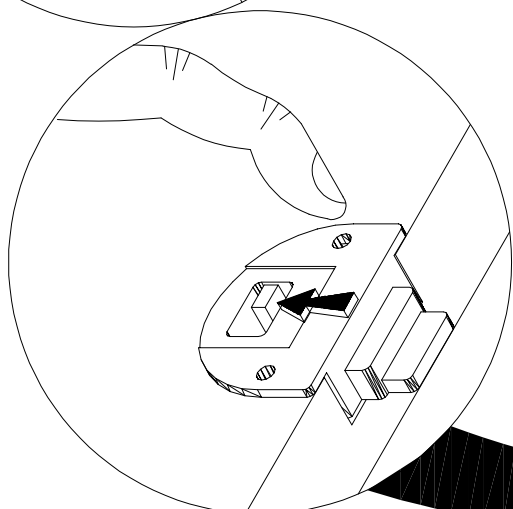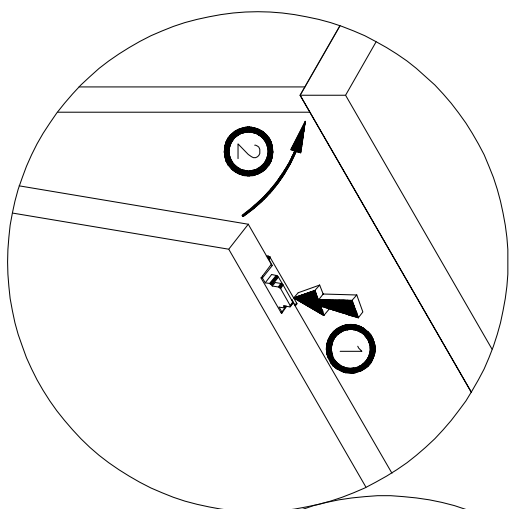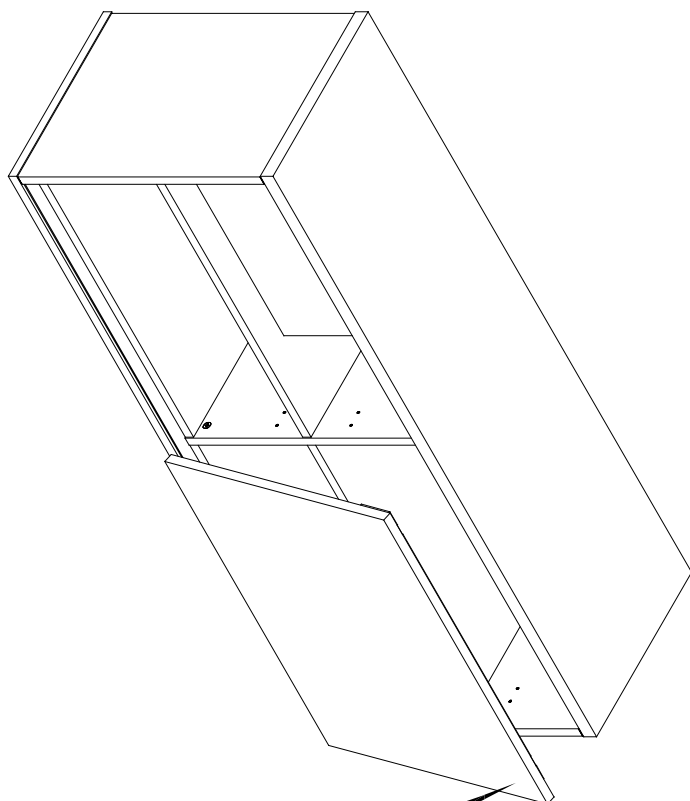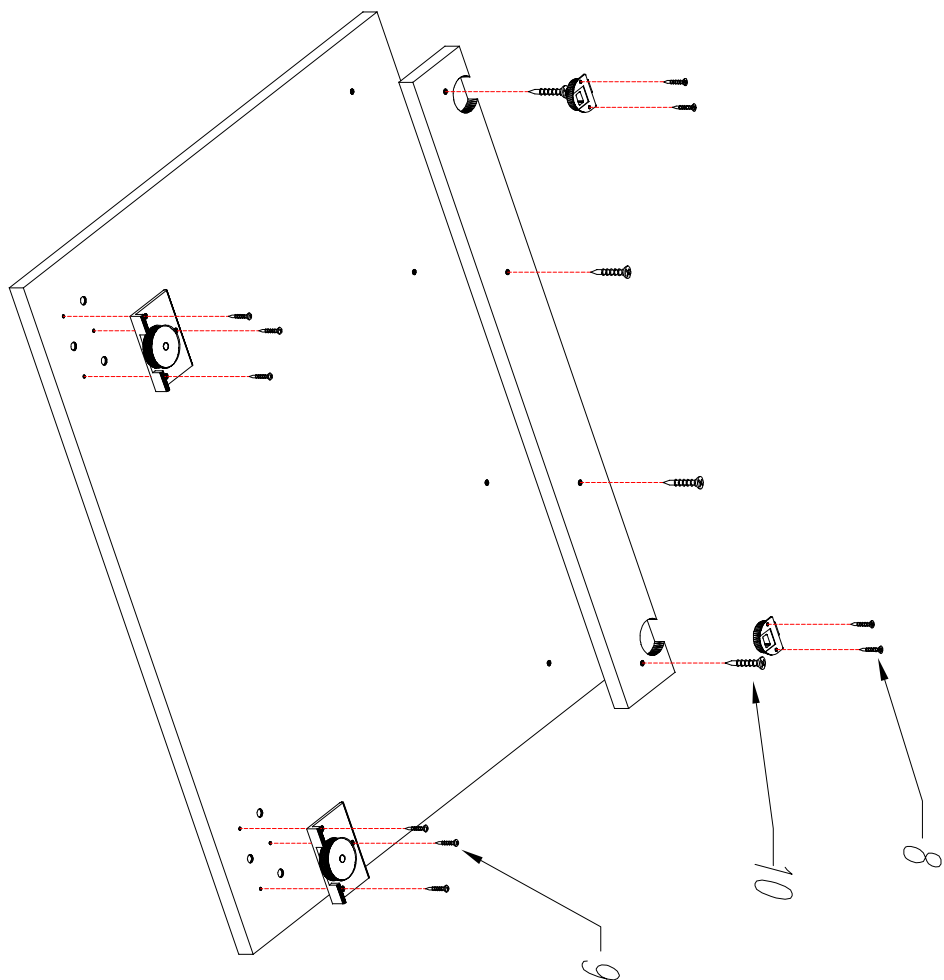





1		M6x20B
2		M6
3		M6



A

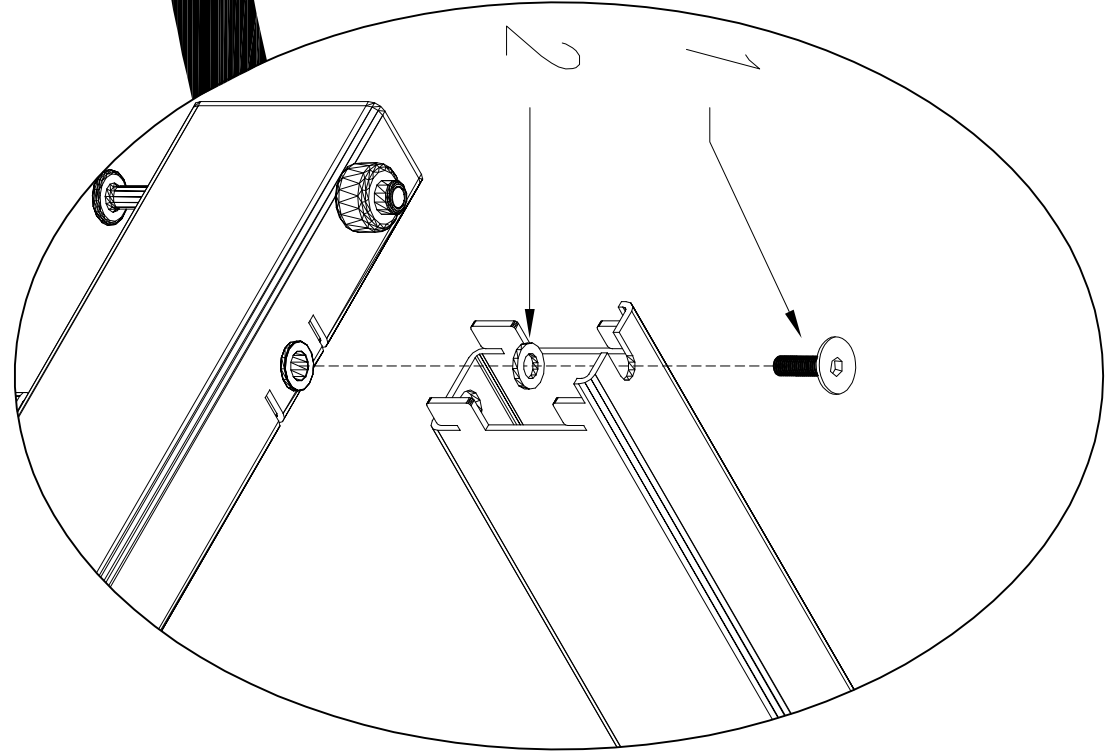





OGI

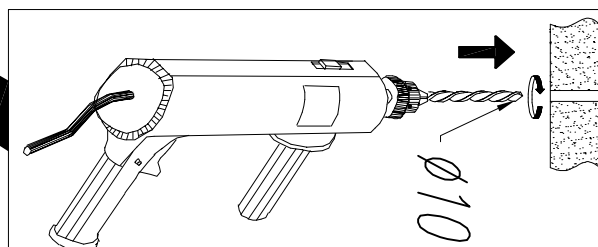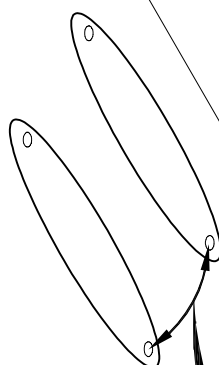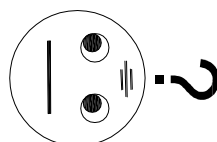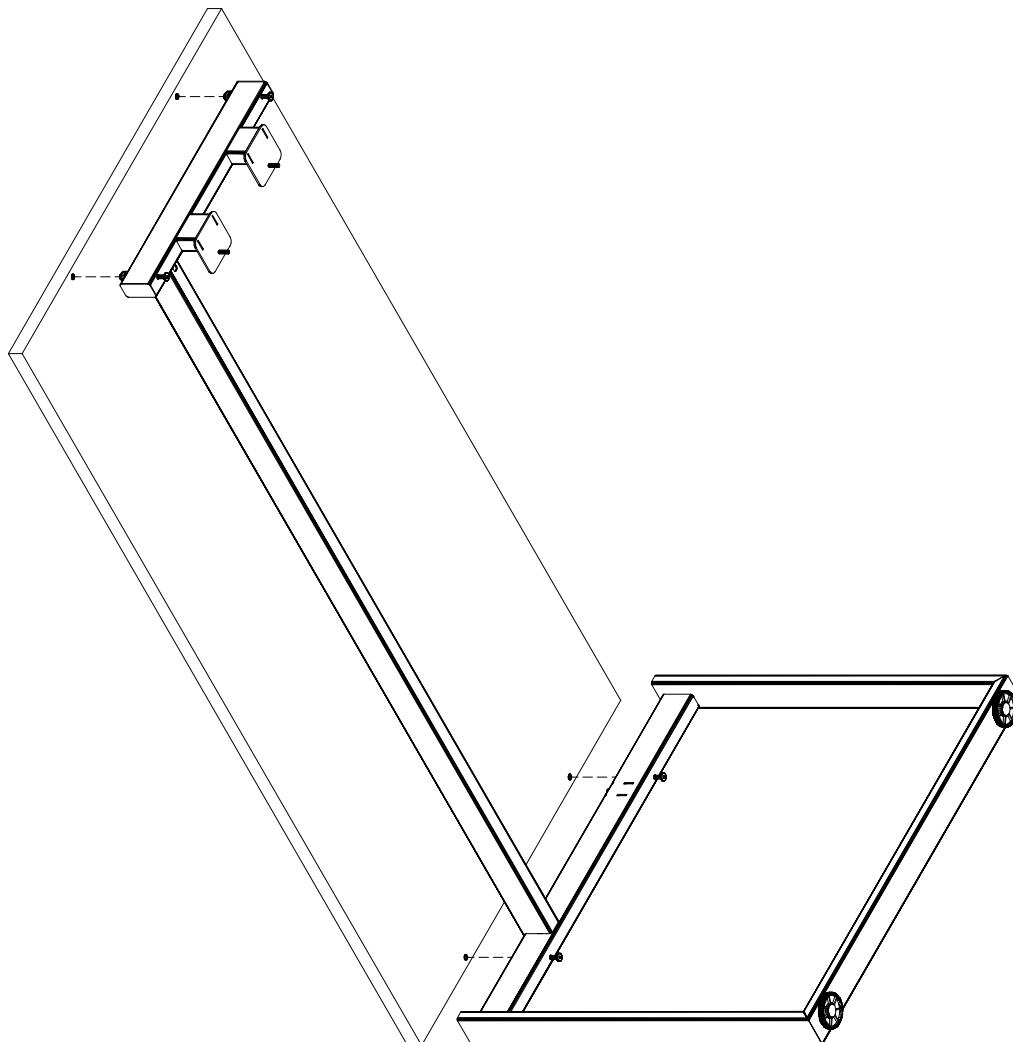

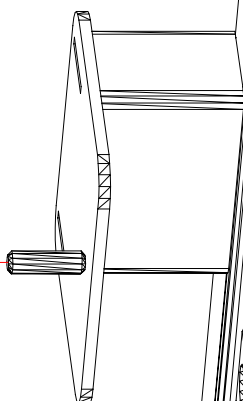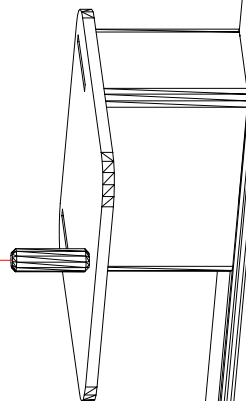


3




- | | |
|---|--|
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |
| 6 | |
| 7 | |
| 8 | |
| 9 | |


A12M

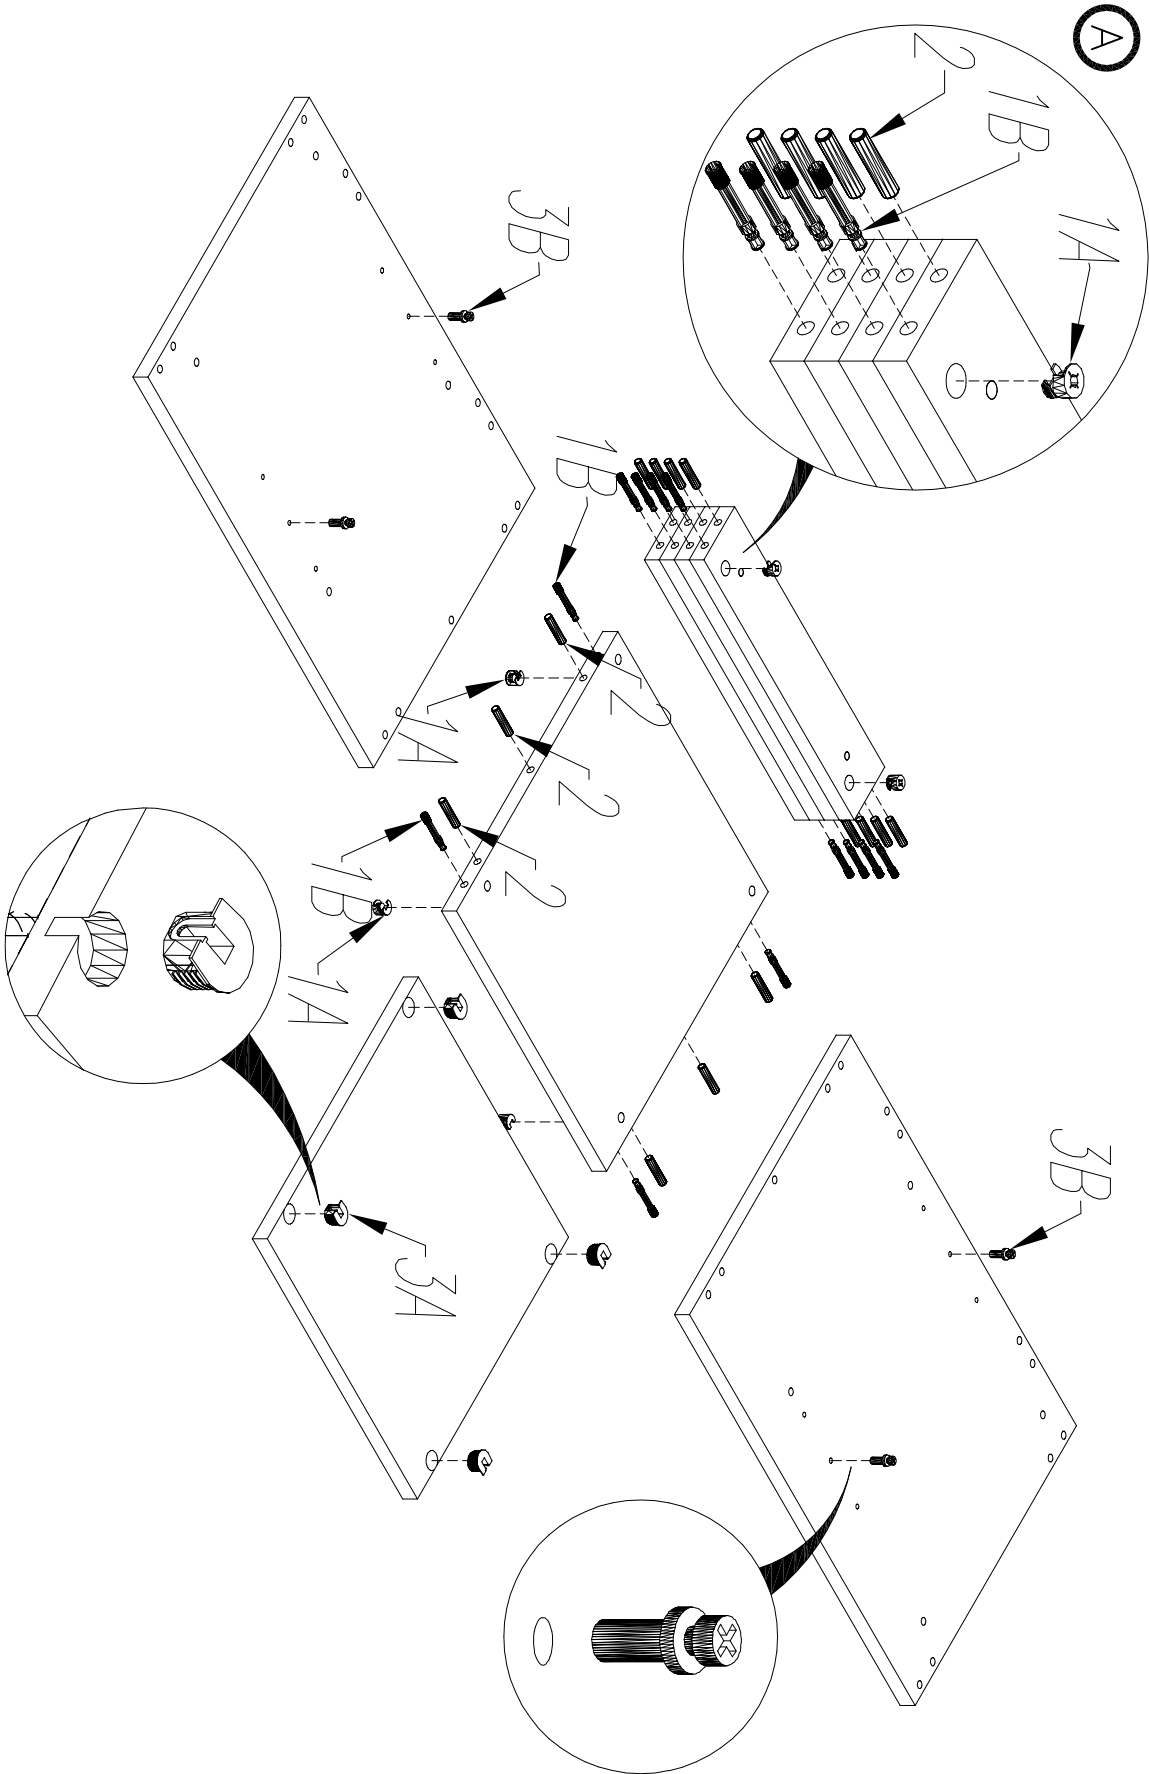


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

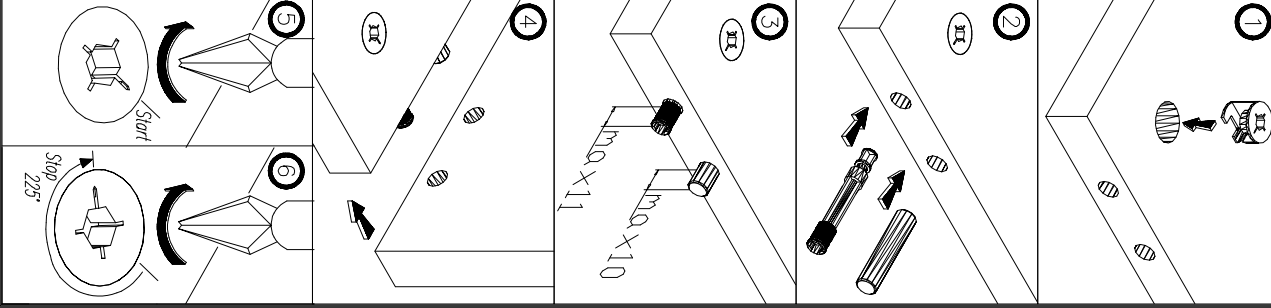

B

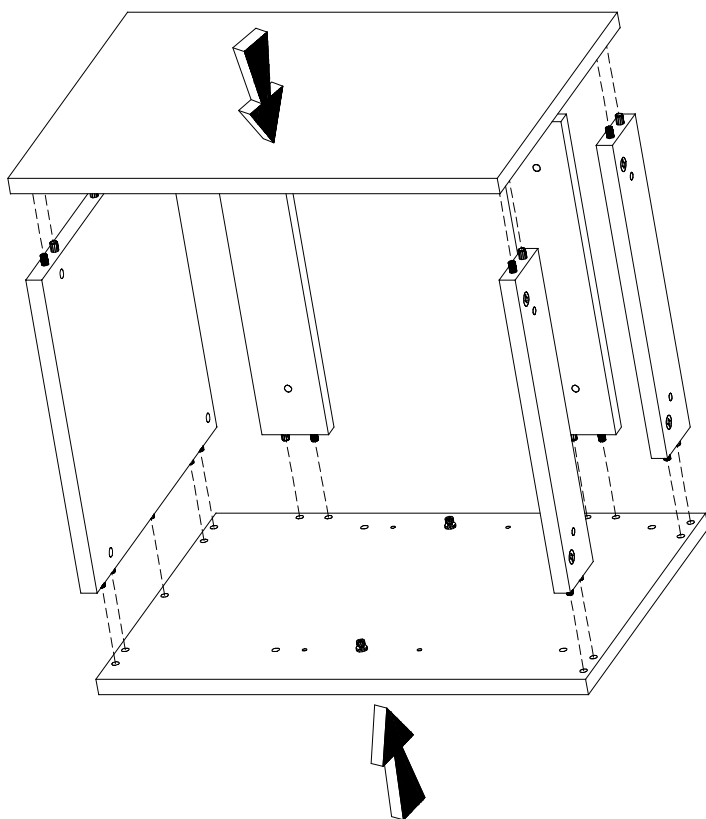

C

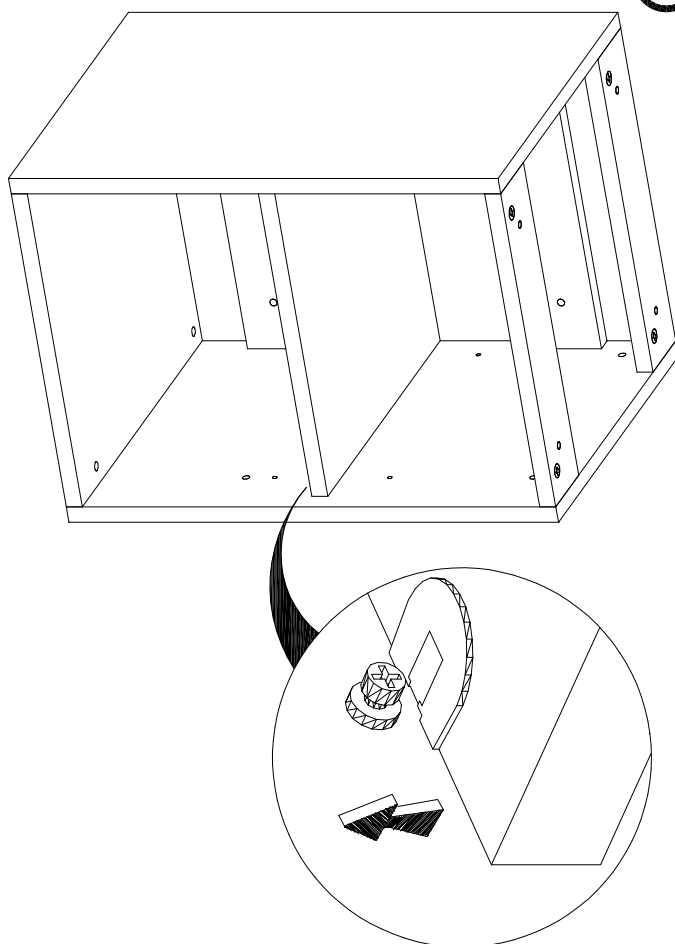

D

