





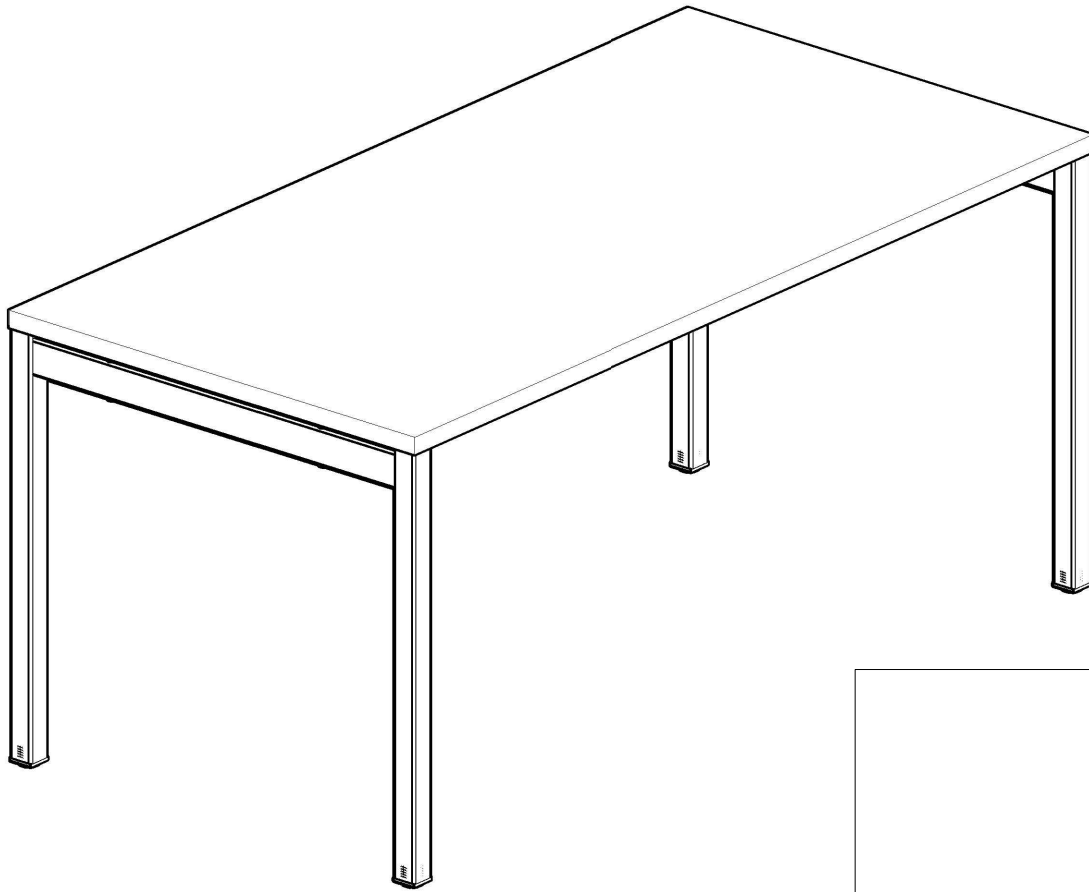


OGI SLIDE

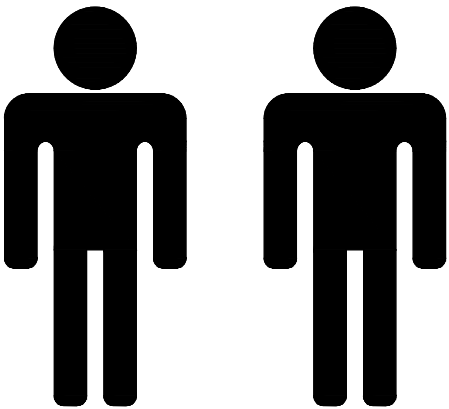

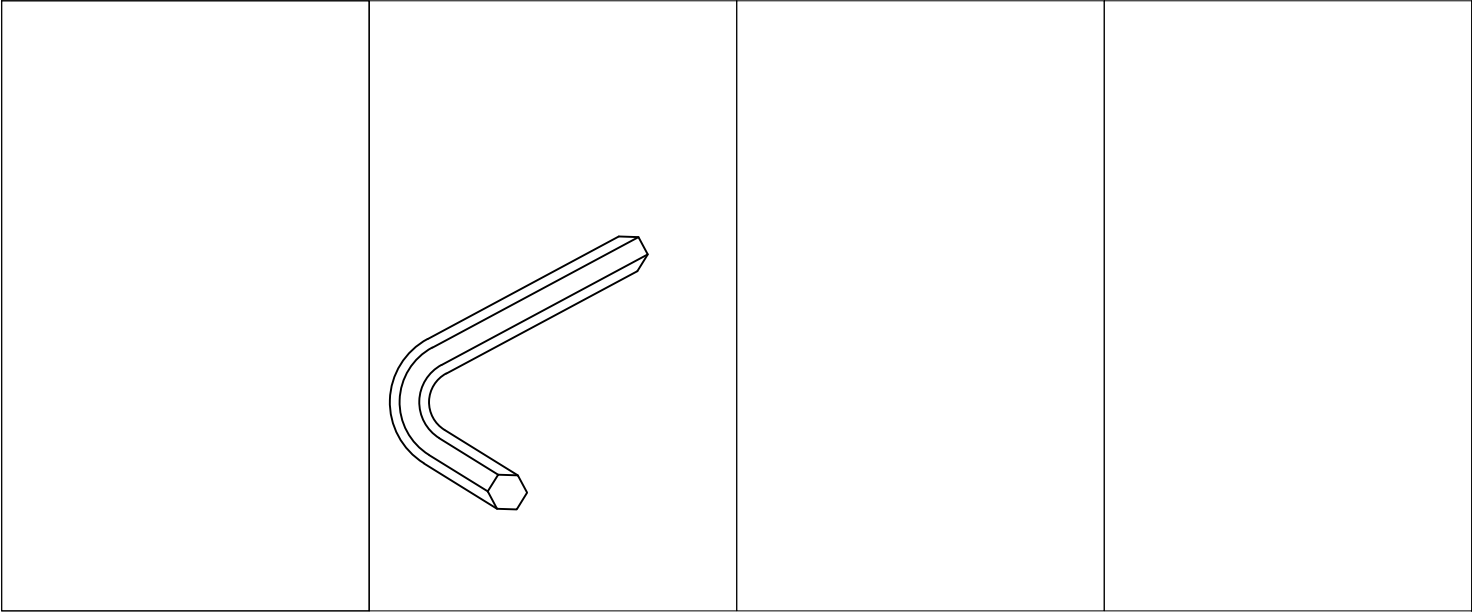


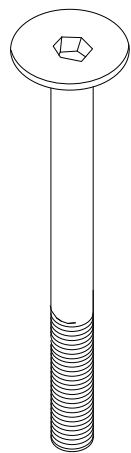

M6x68

4x


1

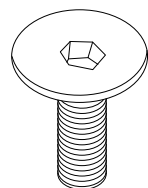

M6x10


2x

2

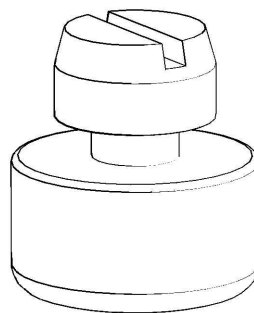


4x

3

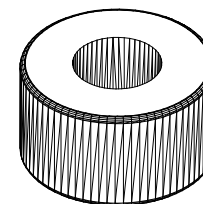


2x

4

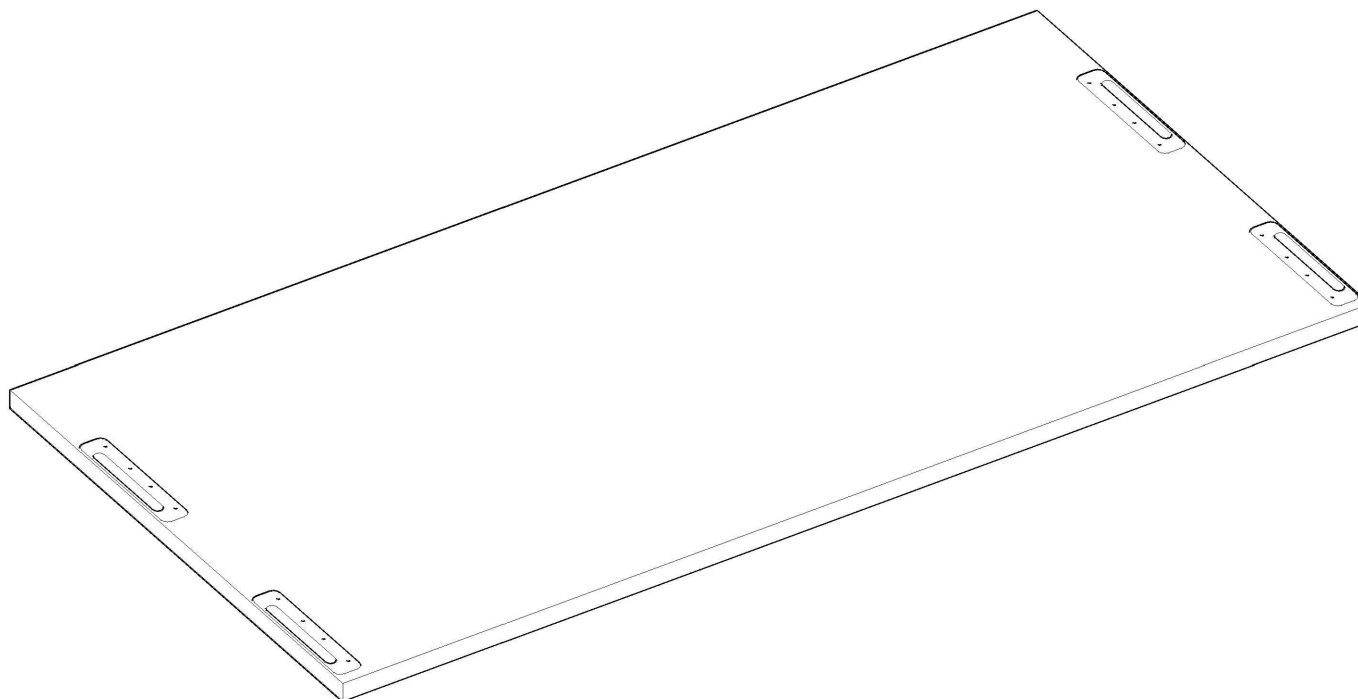


3


5

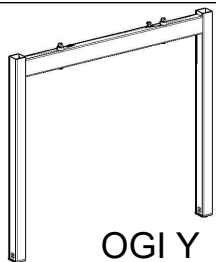


OGI Y

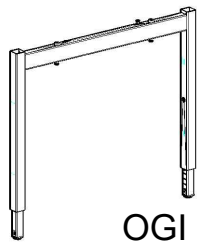


OGI Y

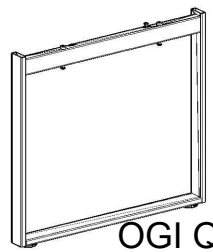


OGI Q

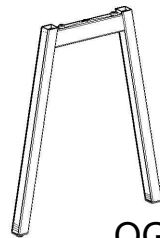


OGI M


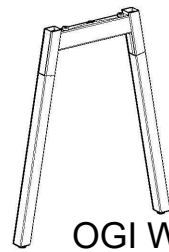






OGI W


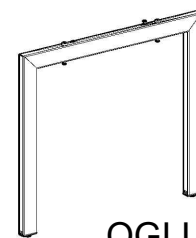


OGI U

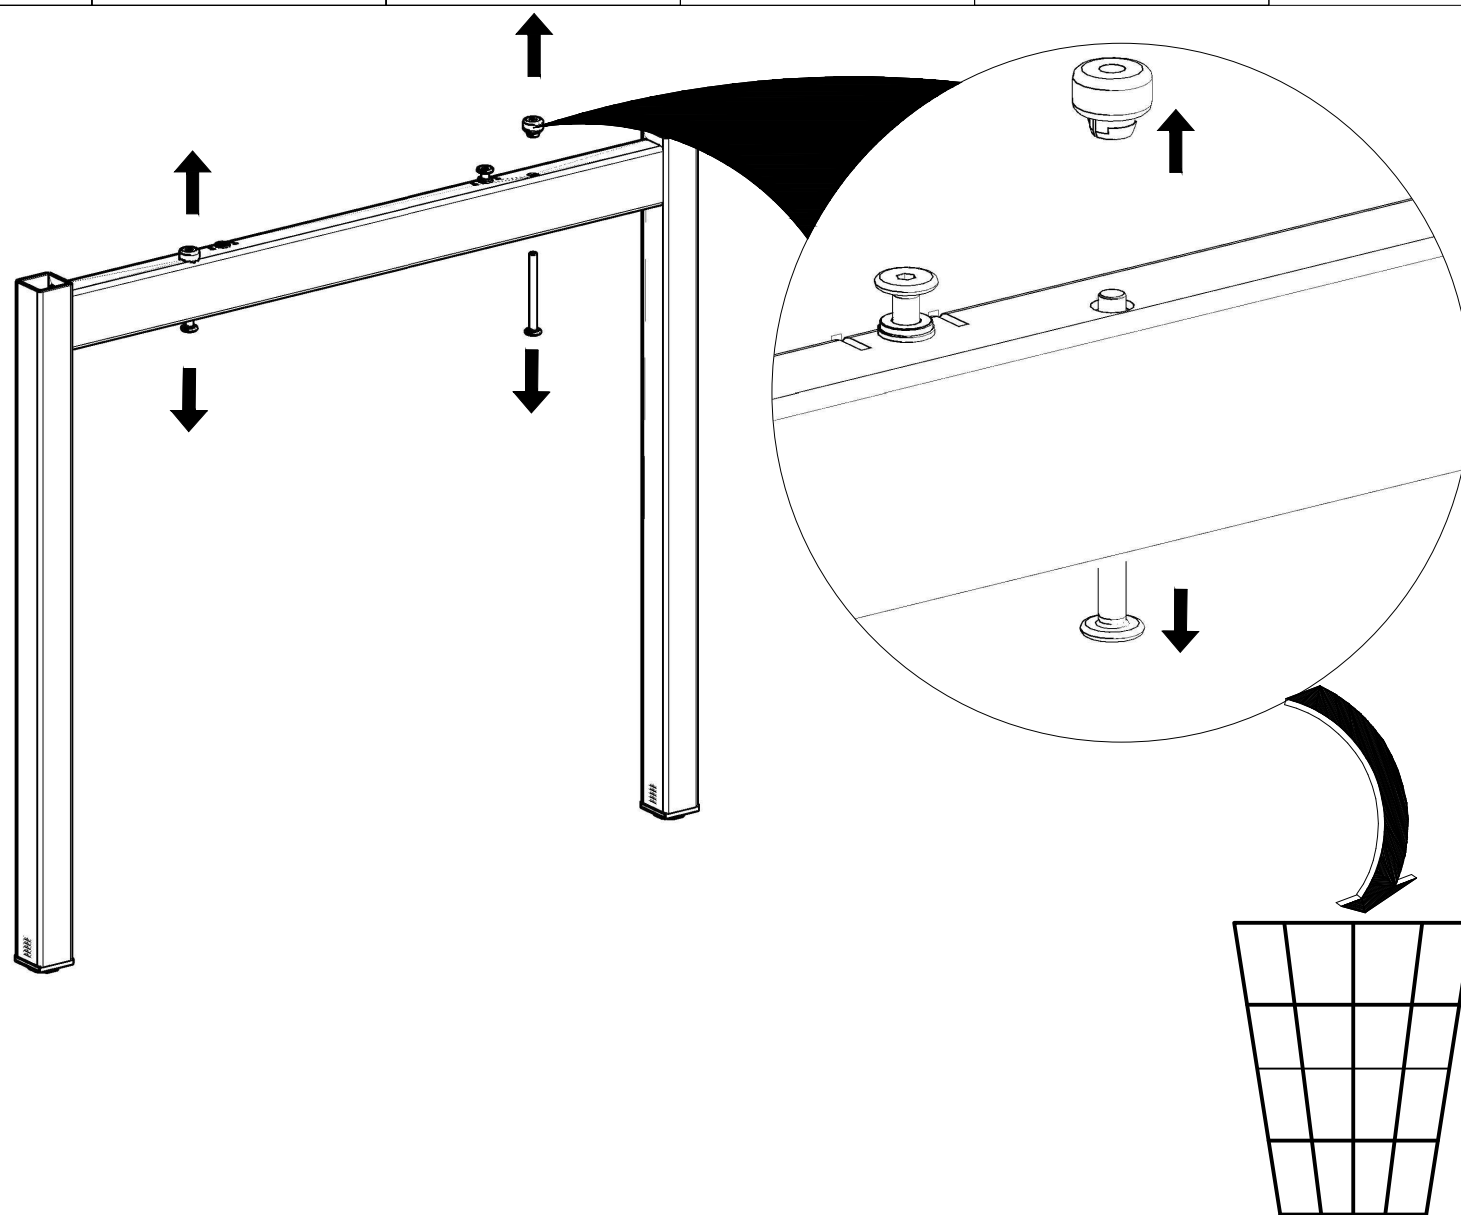


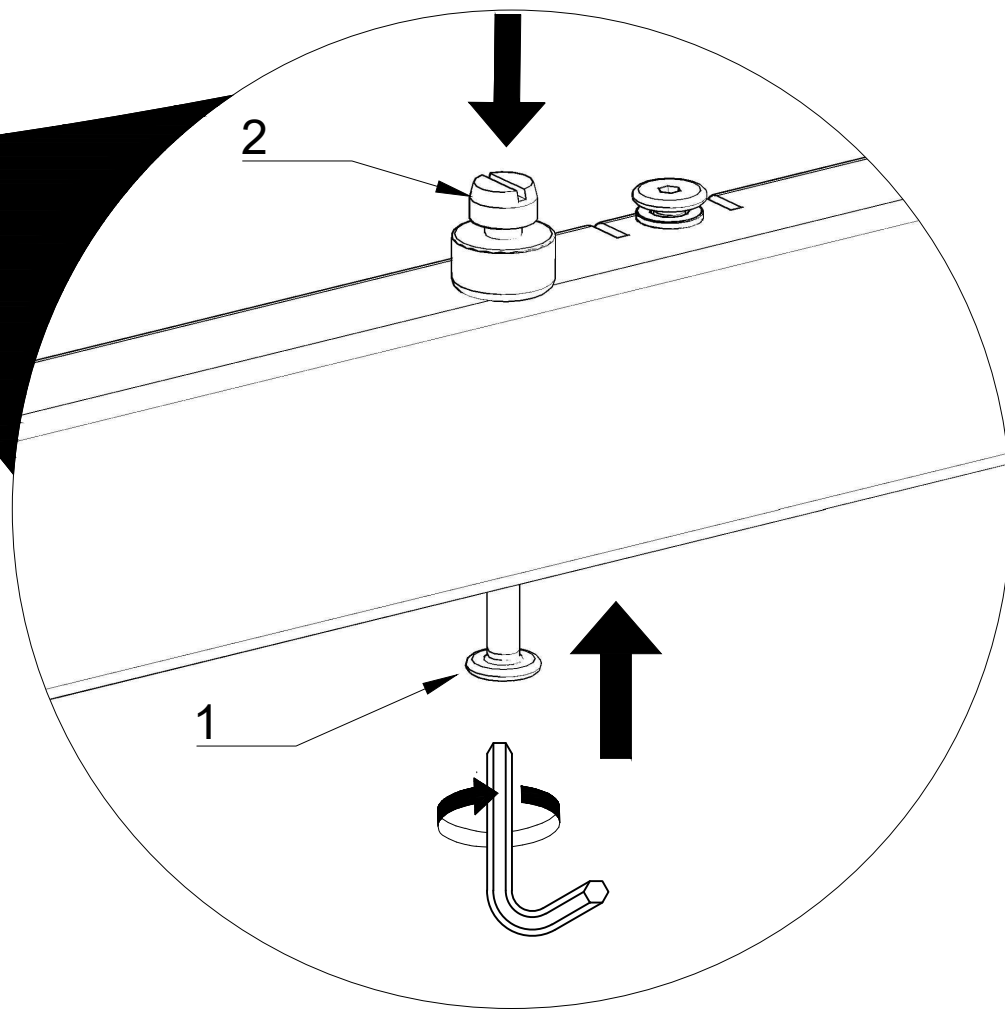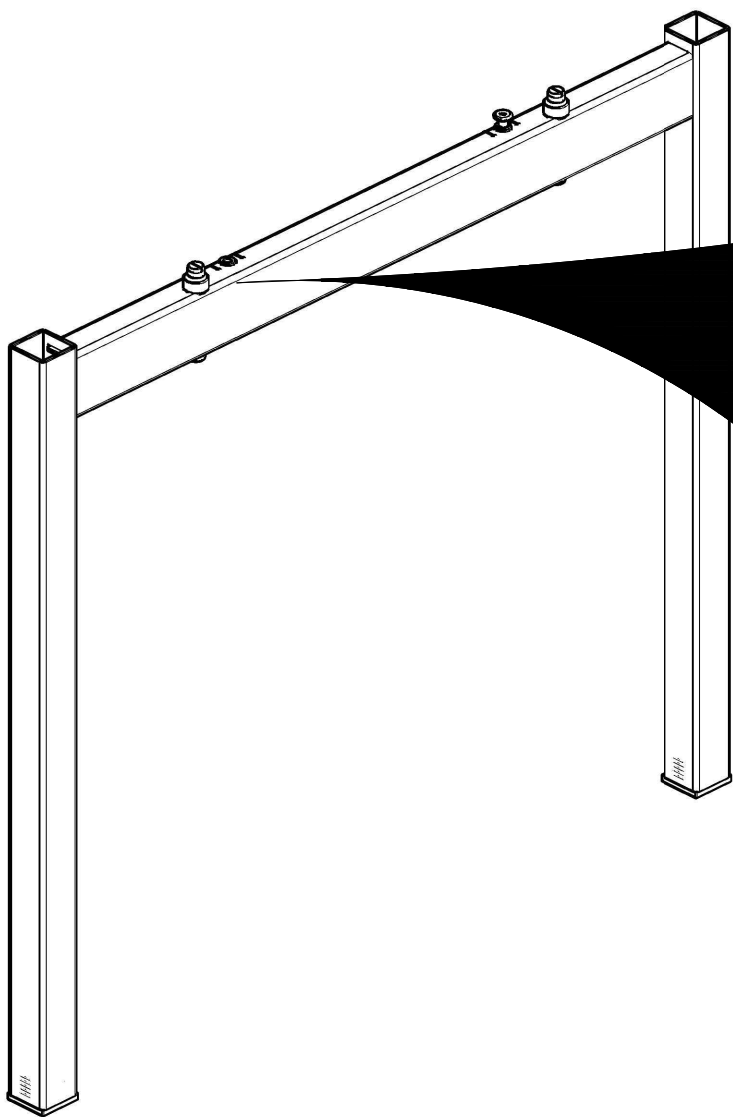


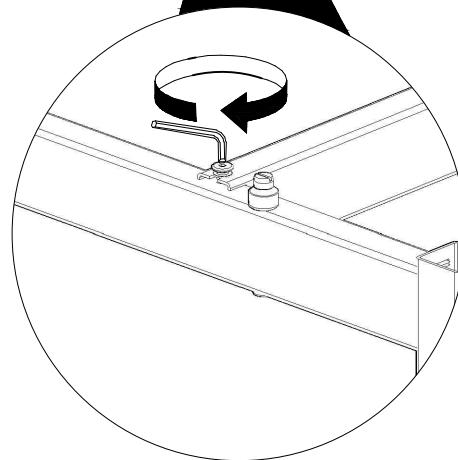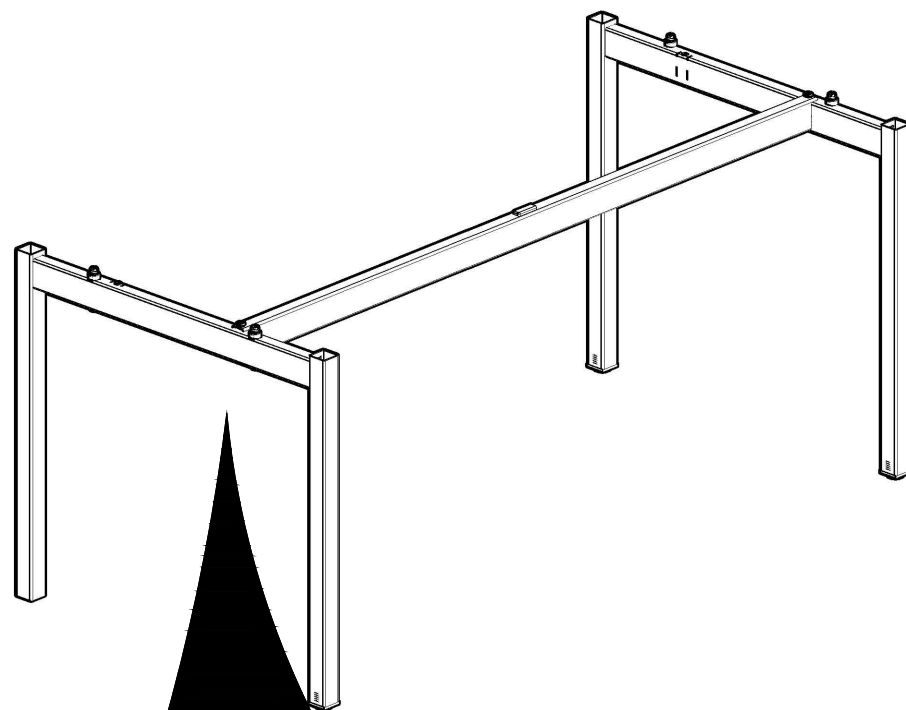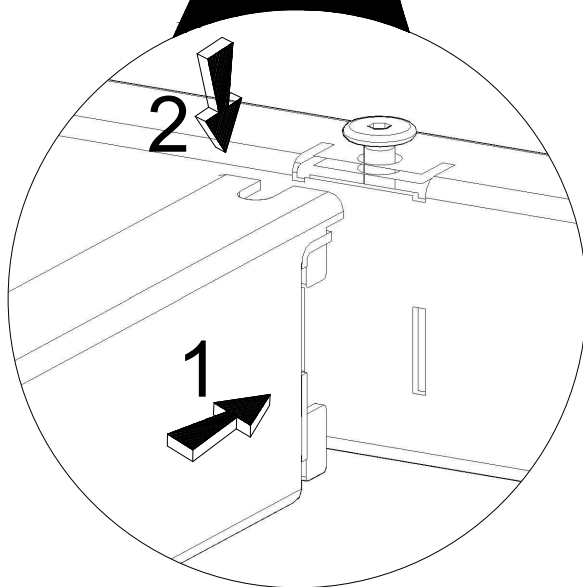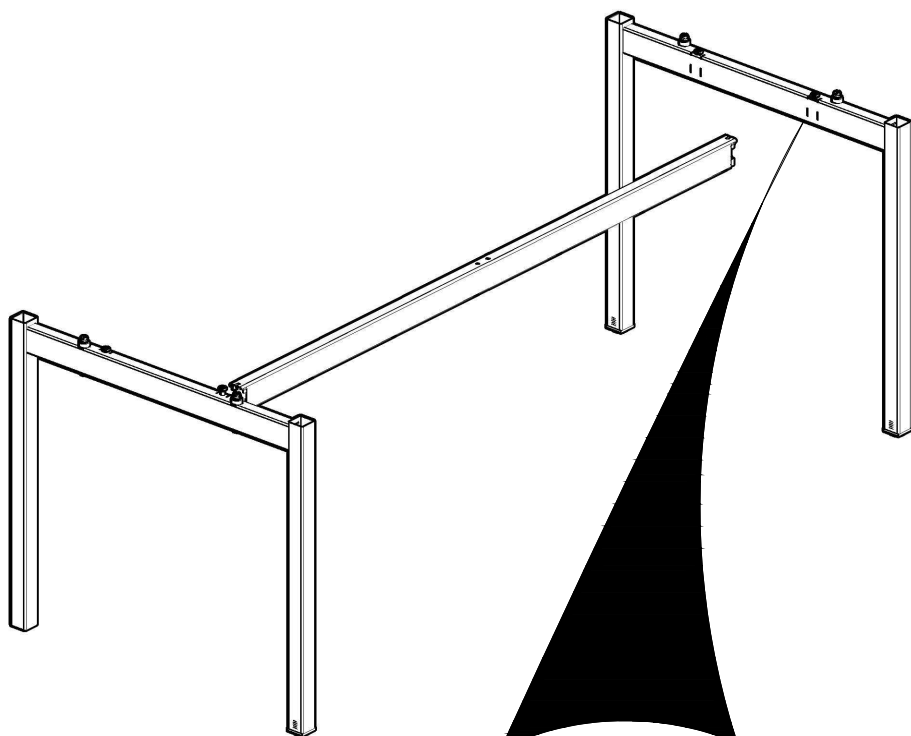

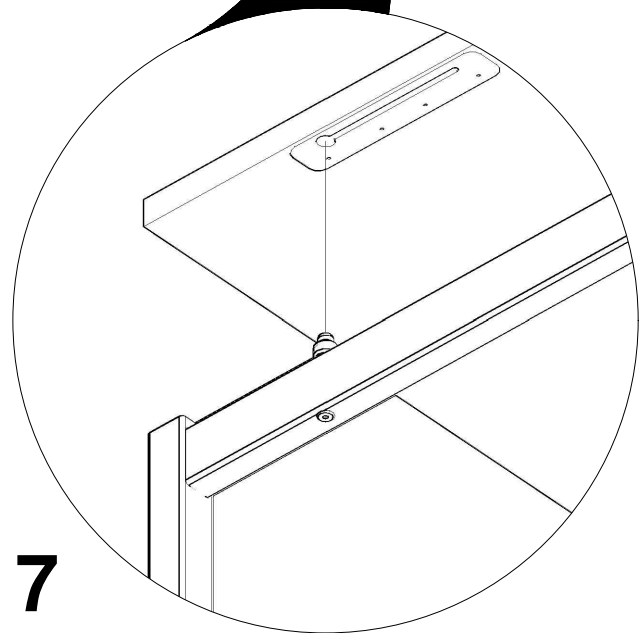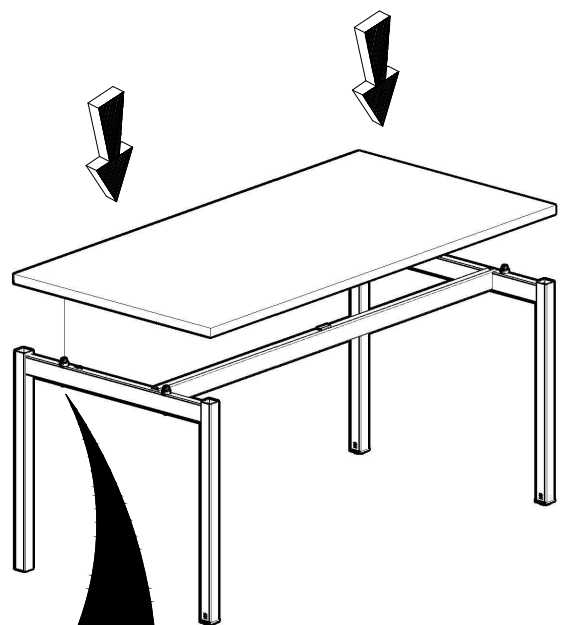


7

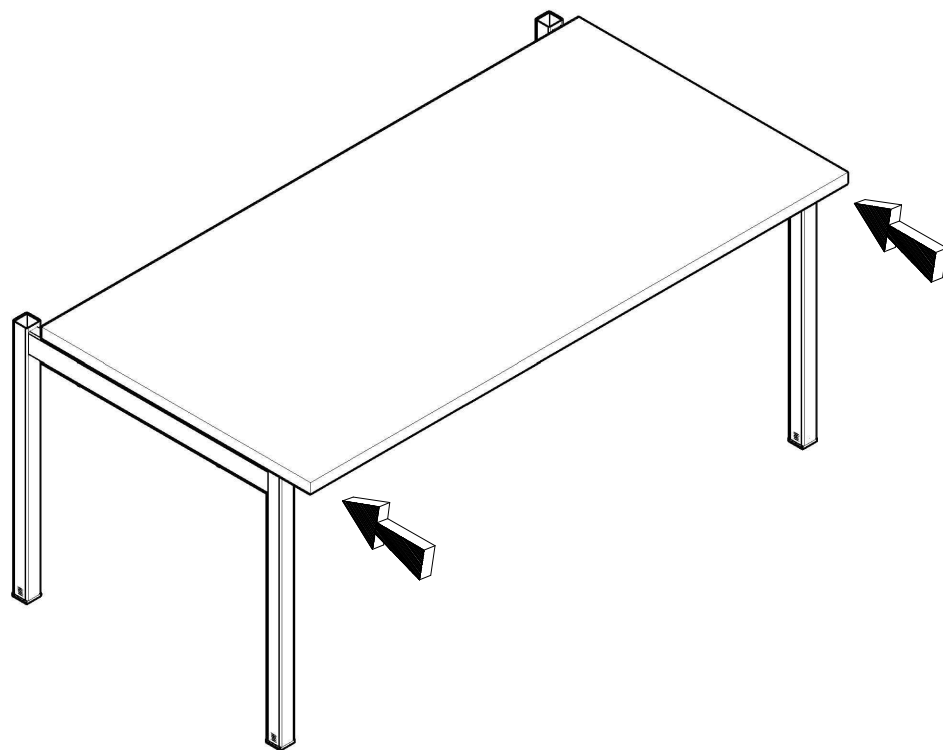

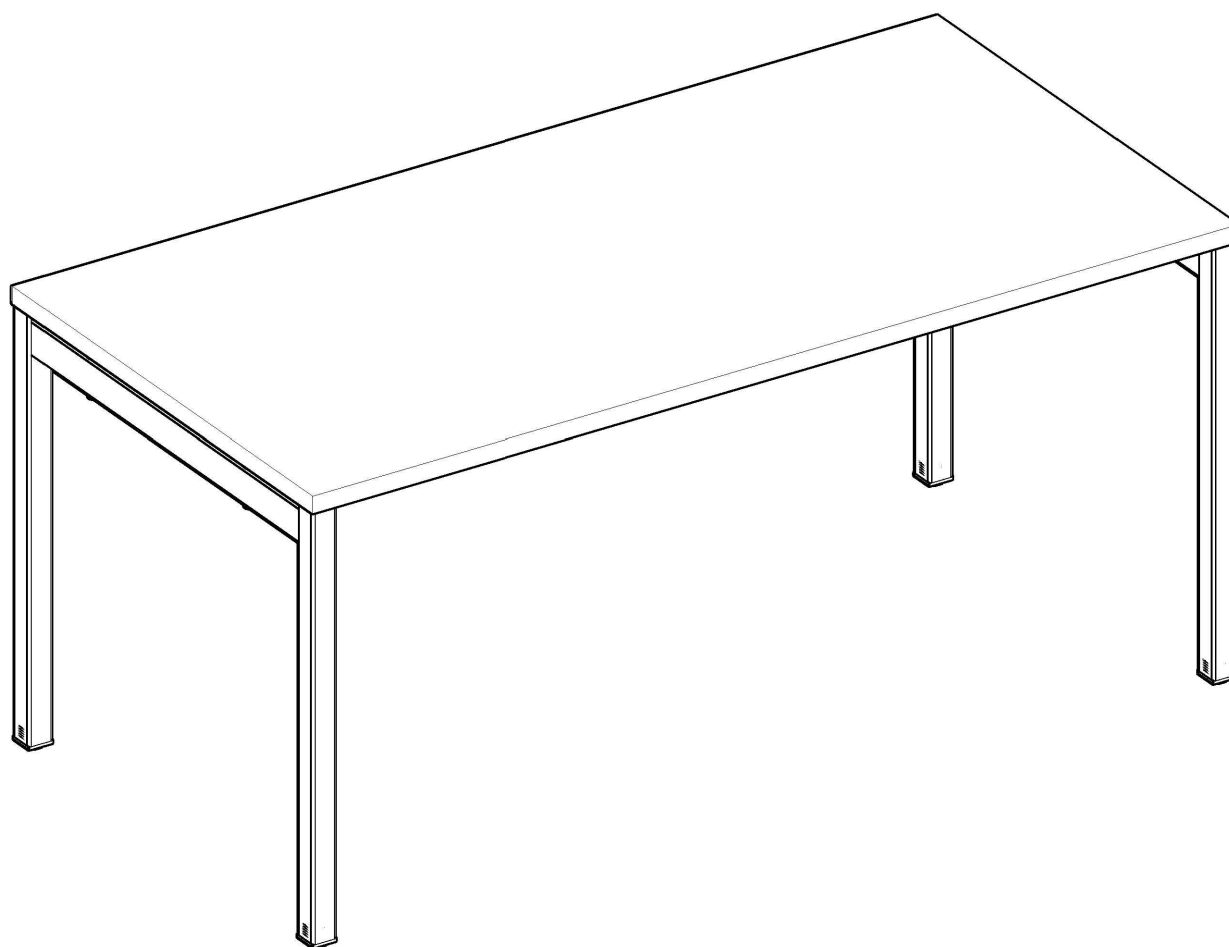


OGI SLIDE


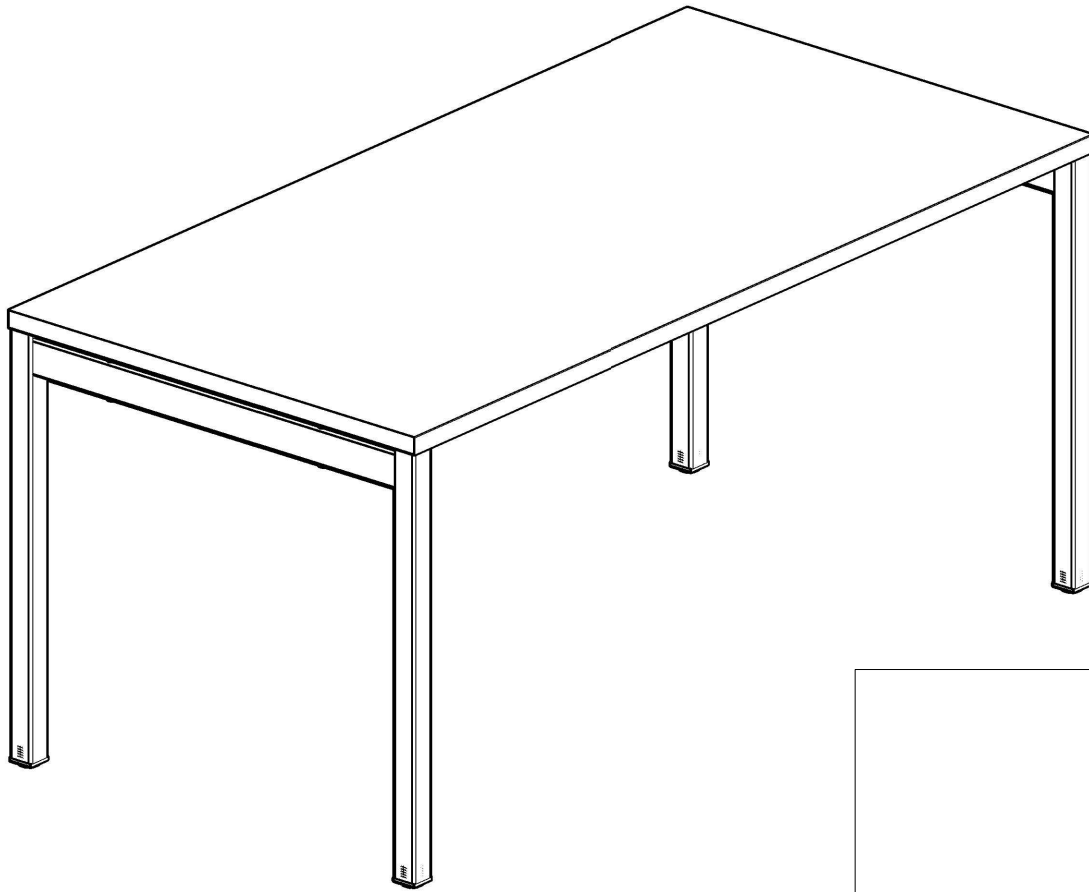



BOX 1

BOX 2

BOX 3

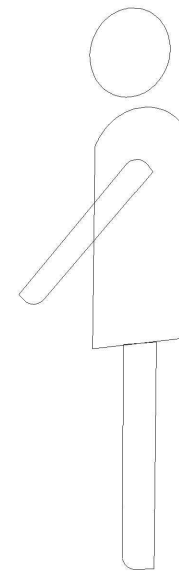

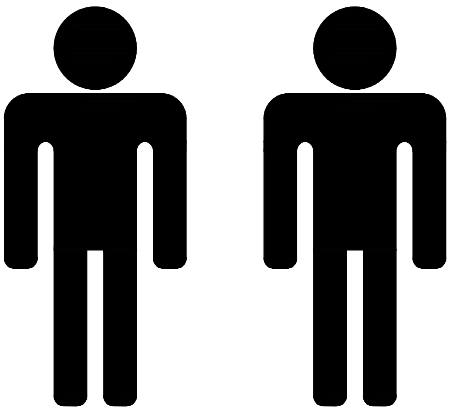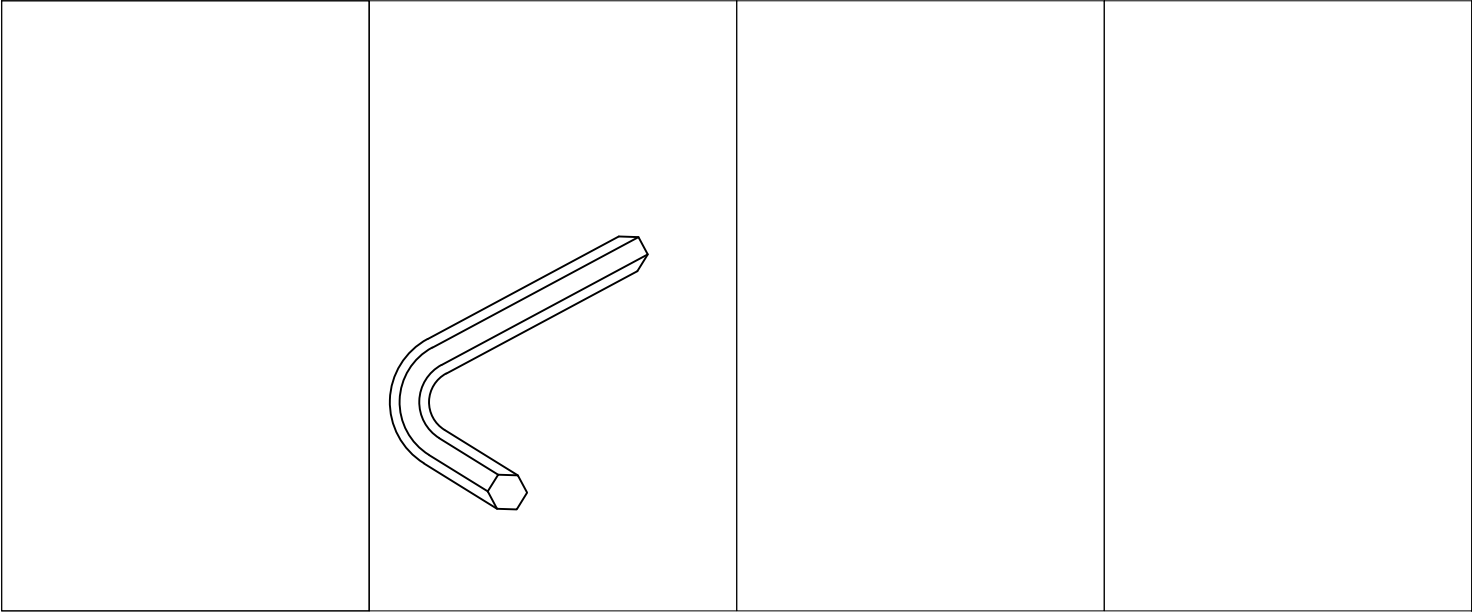


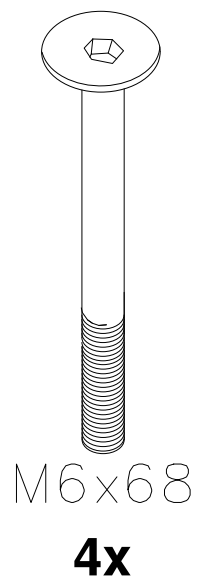


1




2

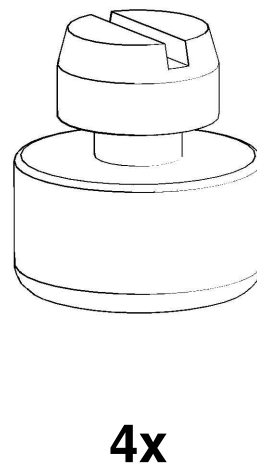


3

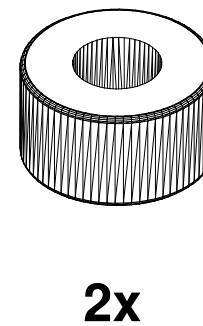


4

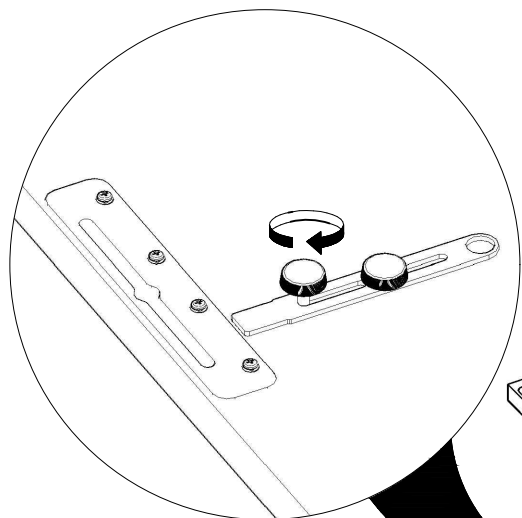


3

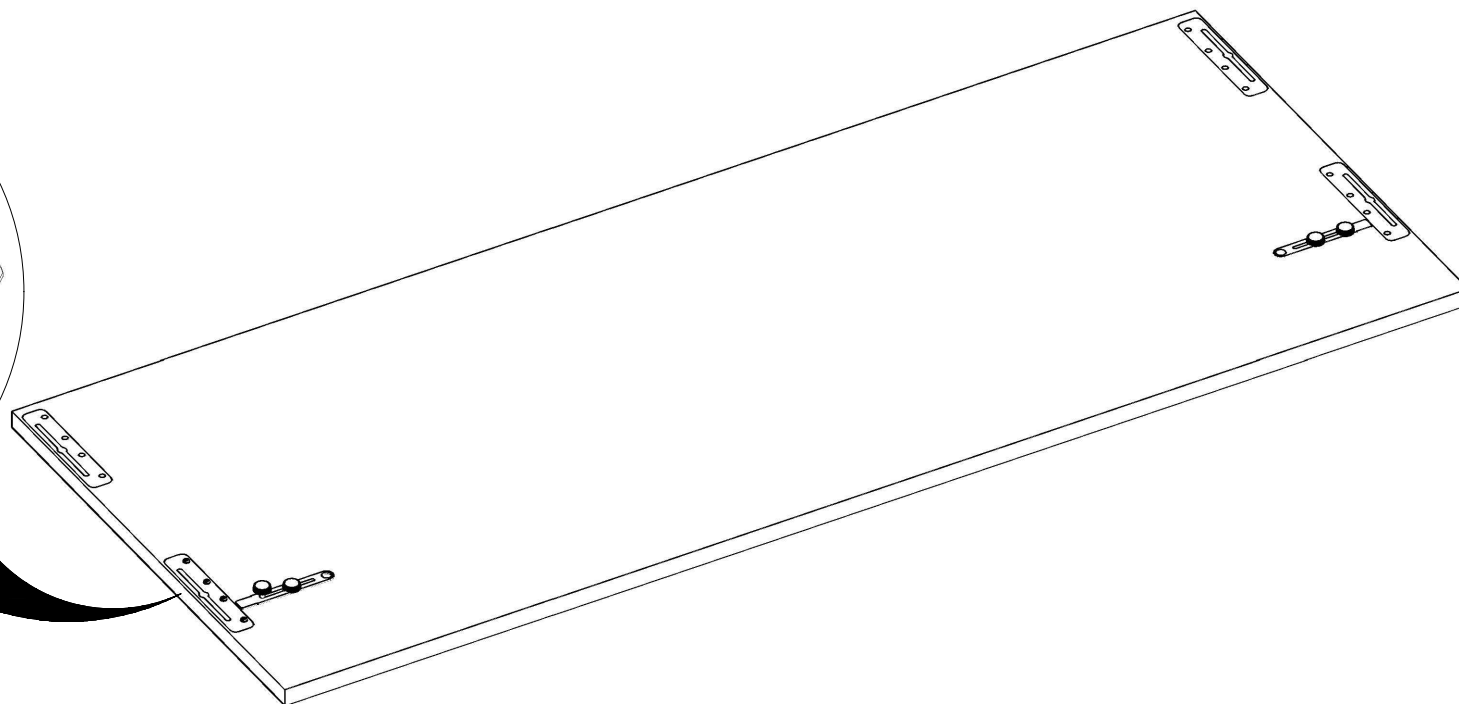


5

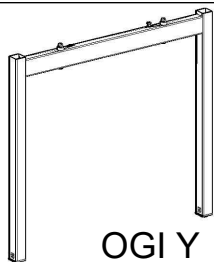


OGI Y

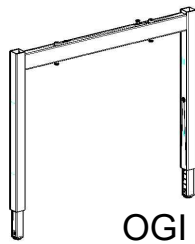


OGI Y

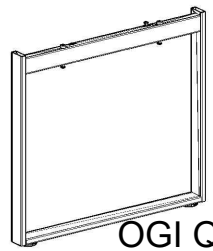


OGI Q

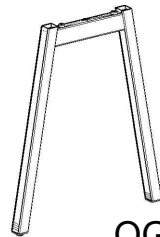


OGI M


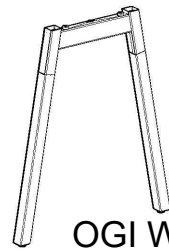




OGI W


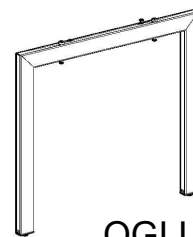


OGI U

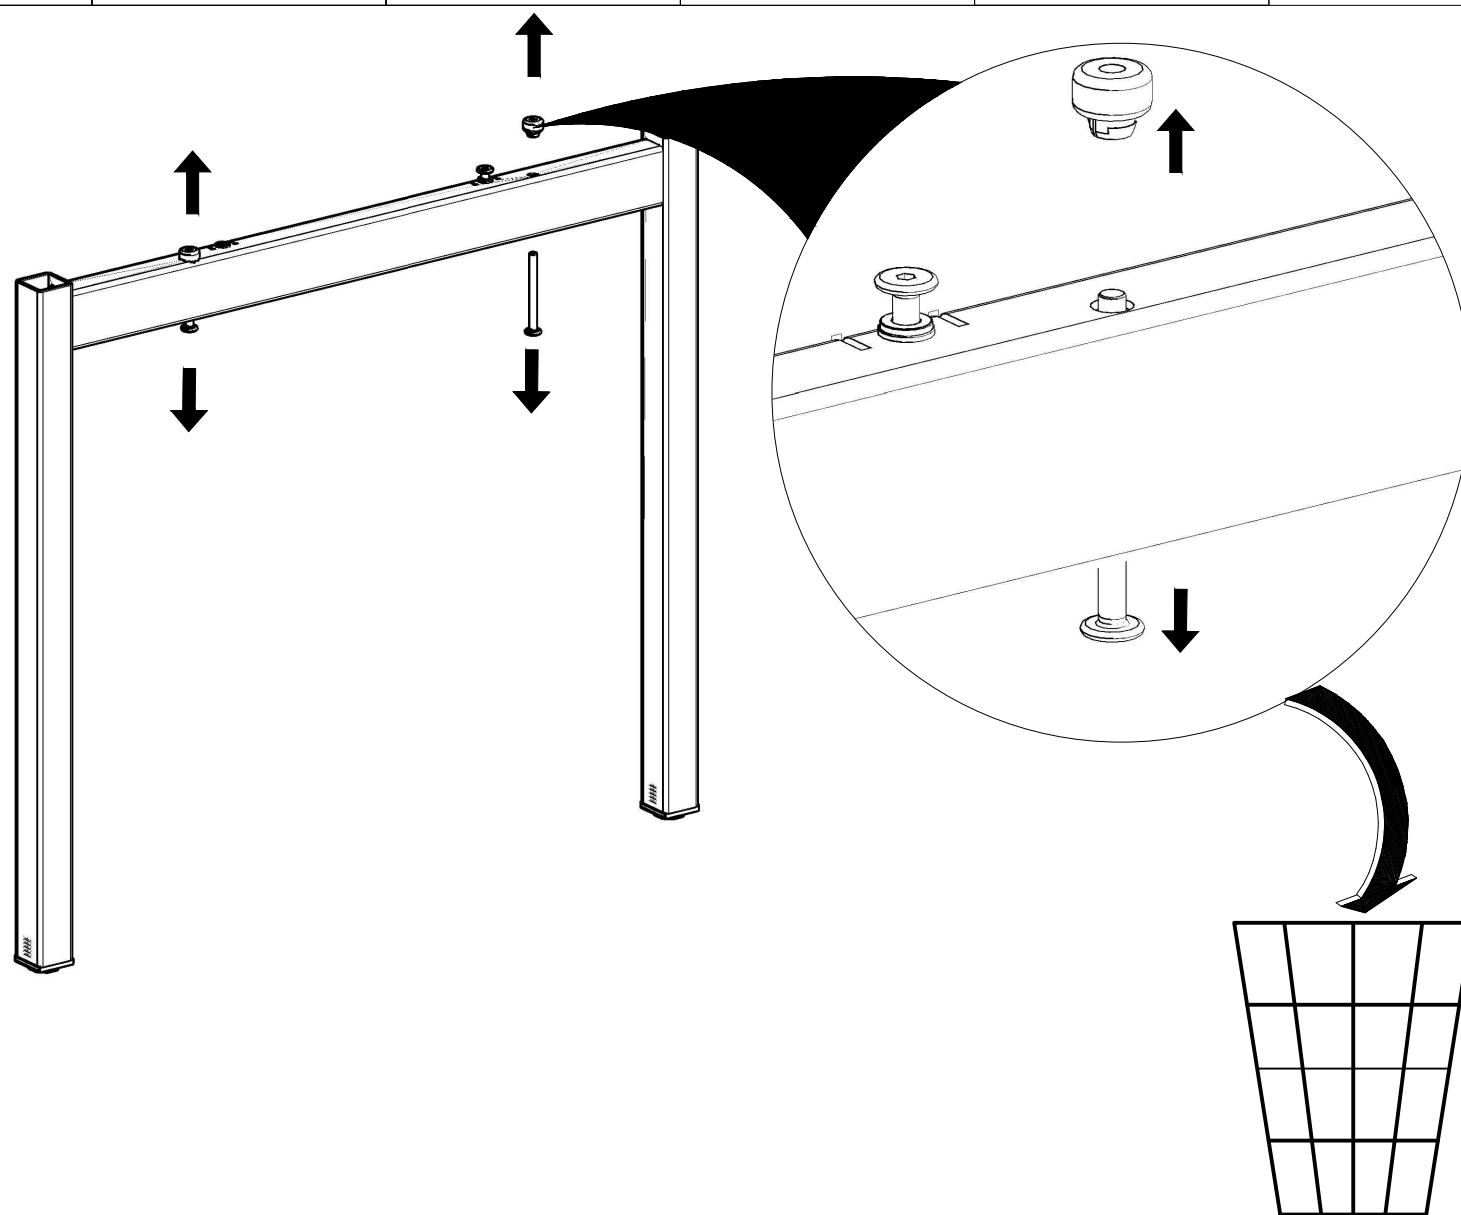


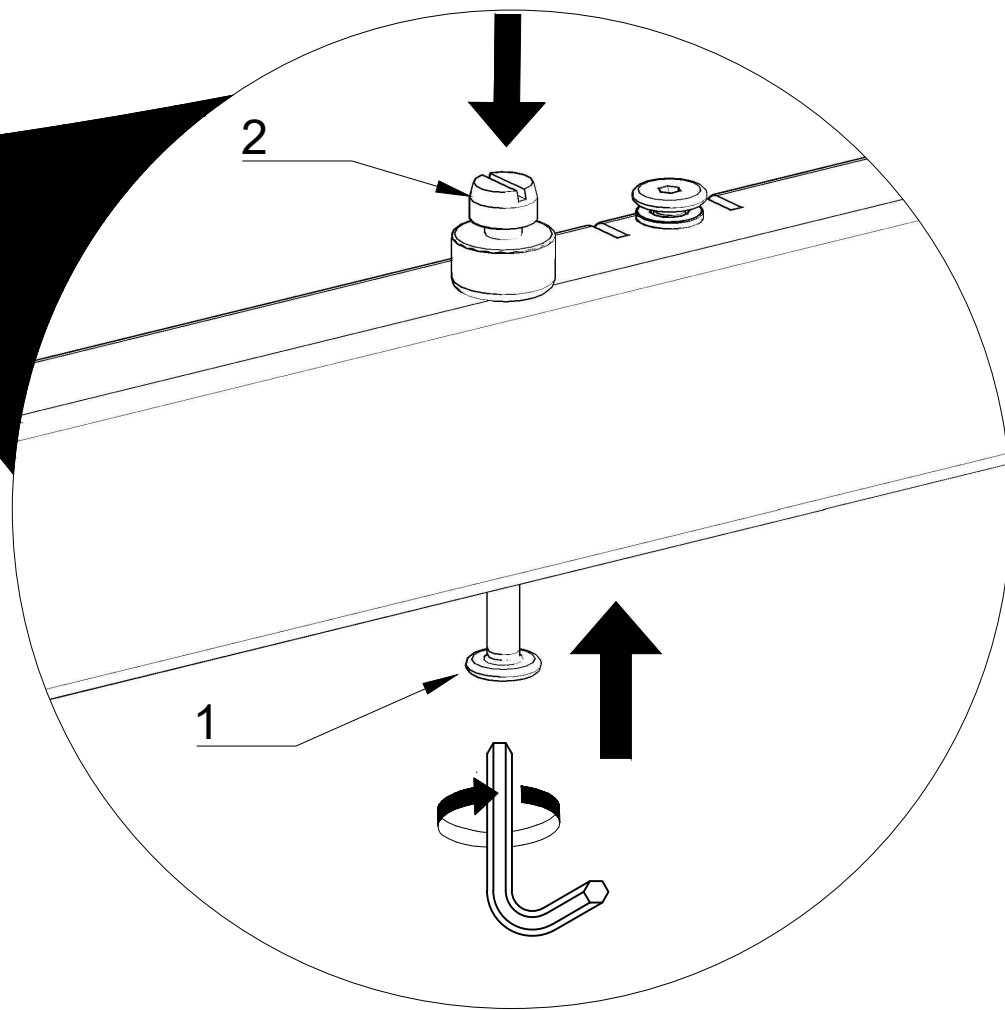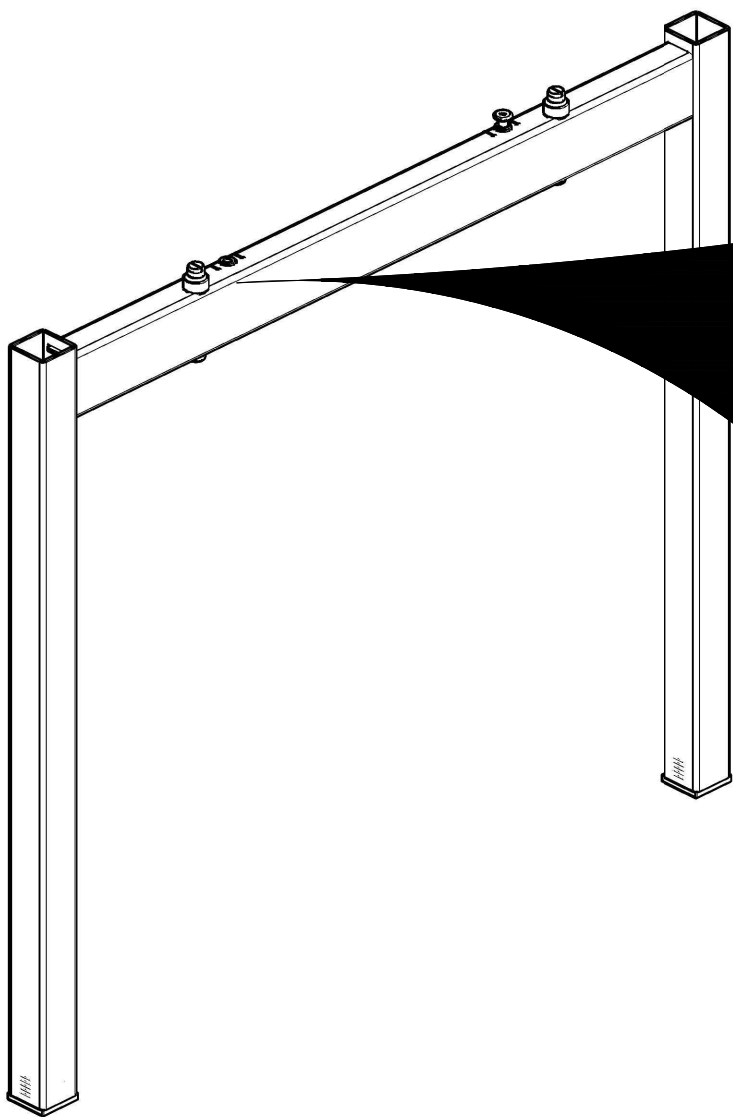


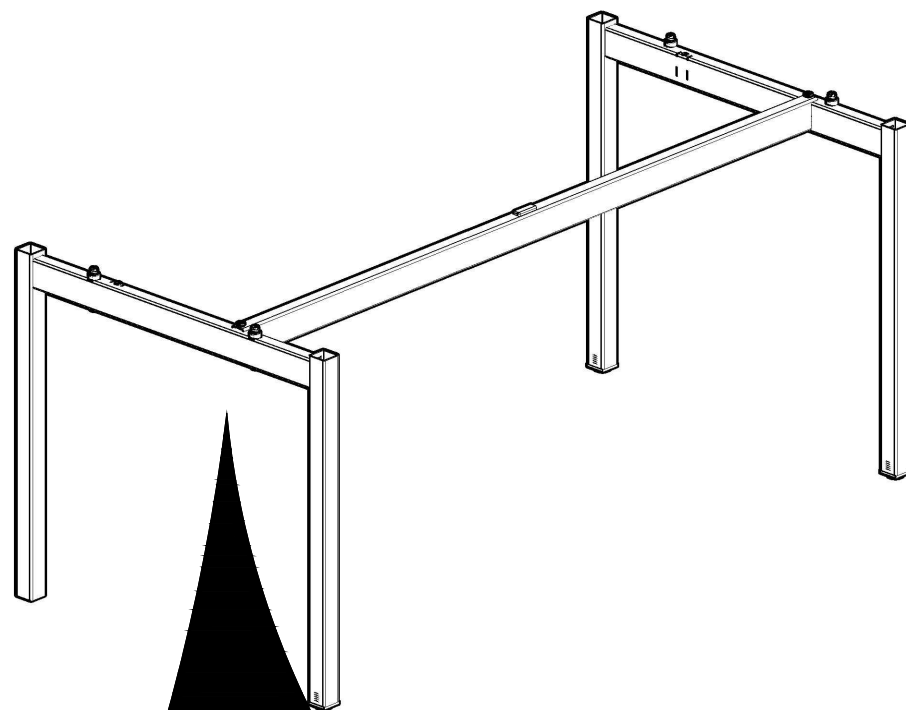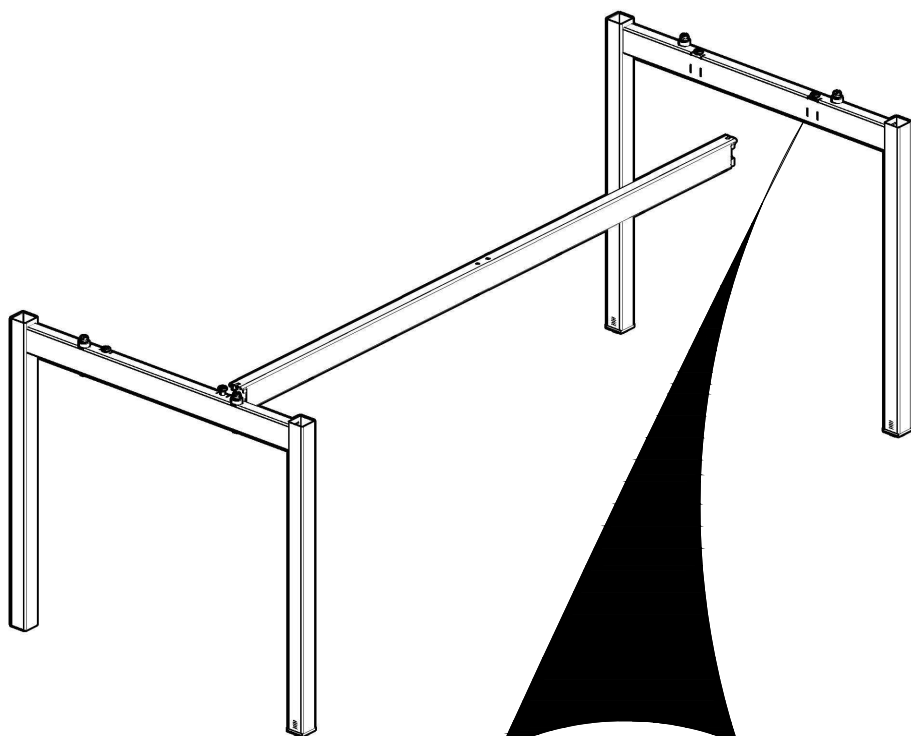

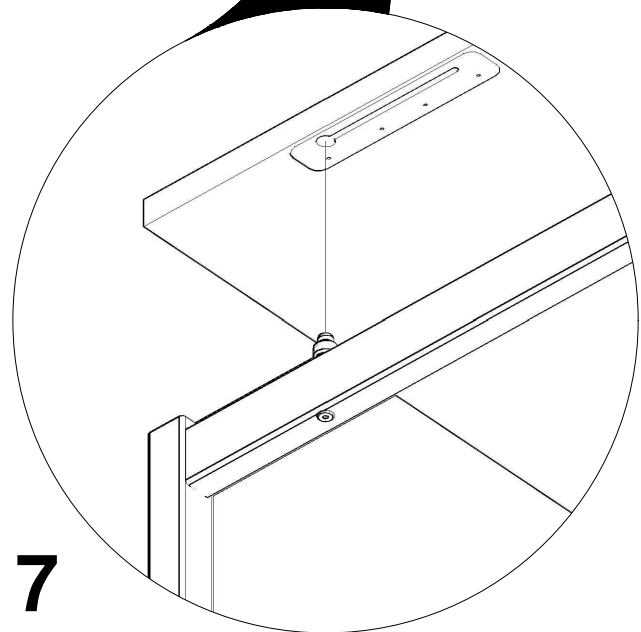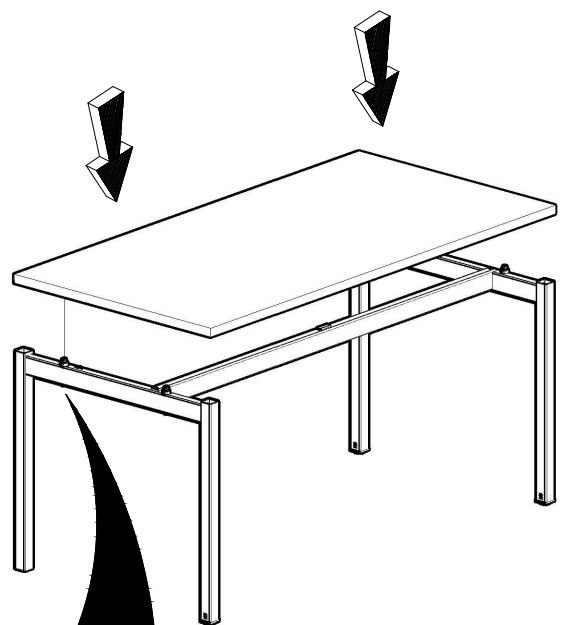


7

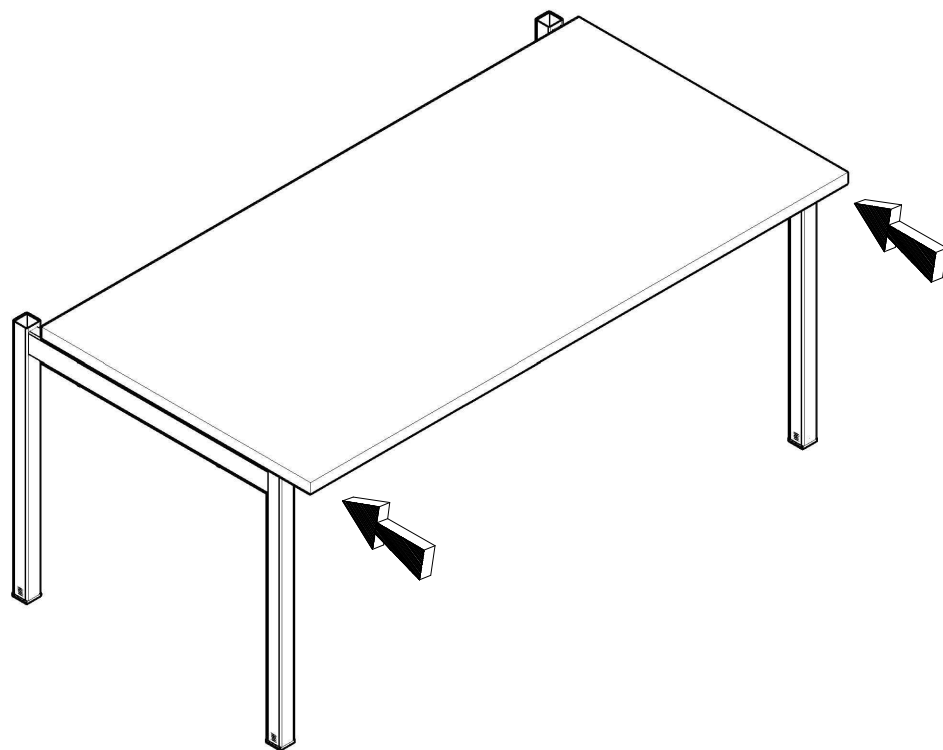

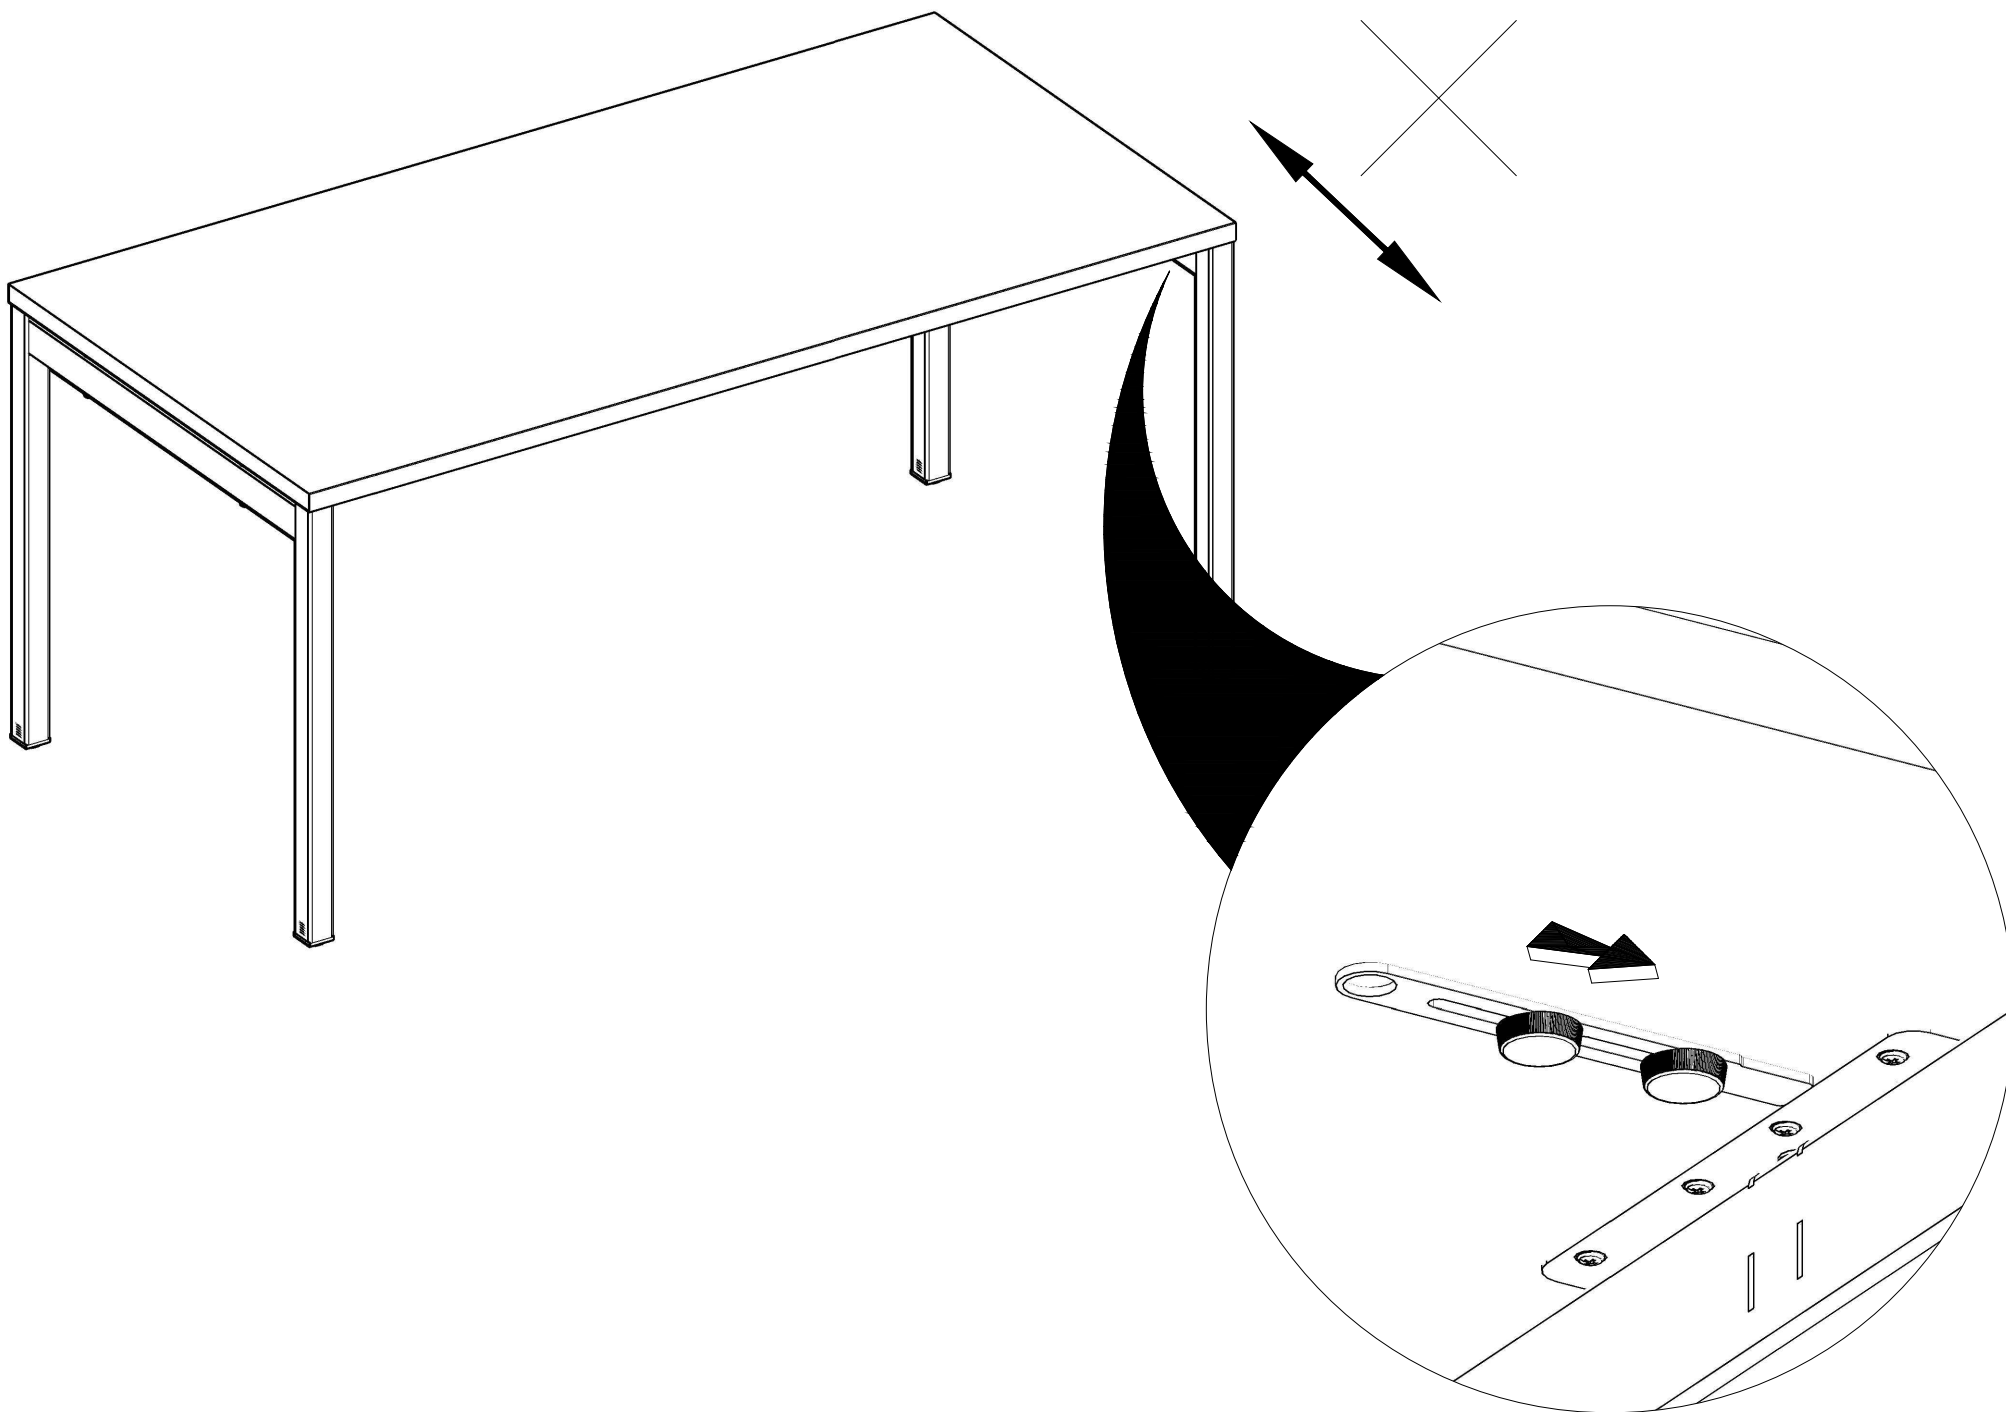


OGI SLIDE


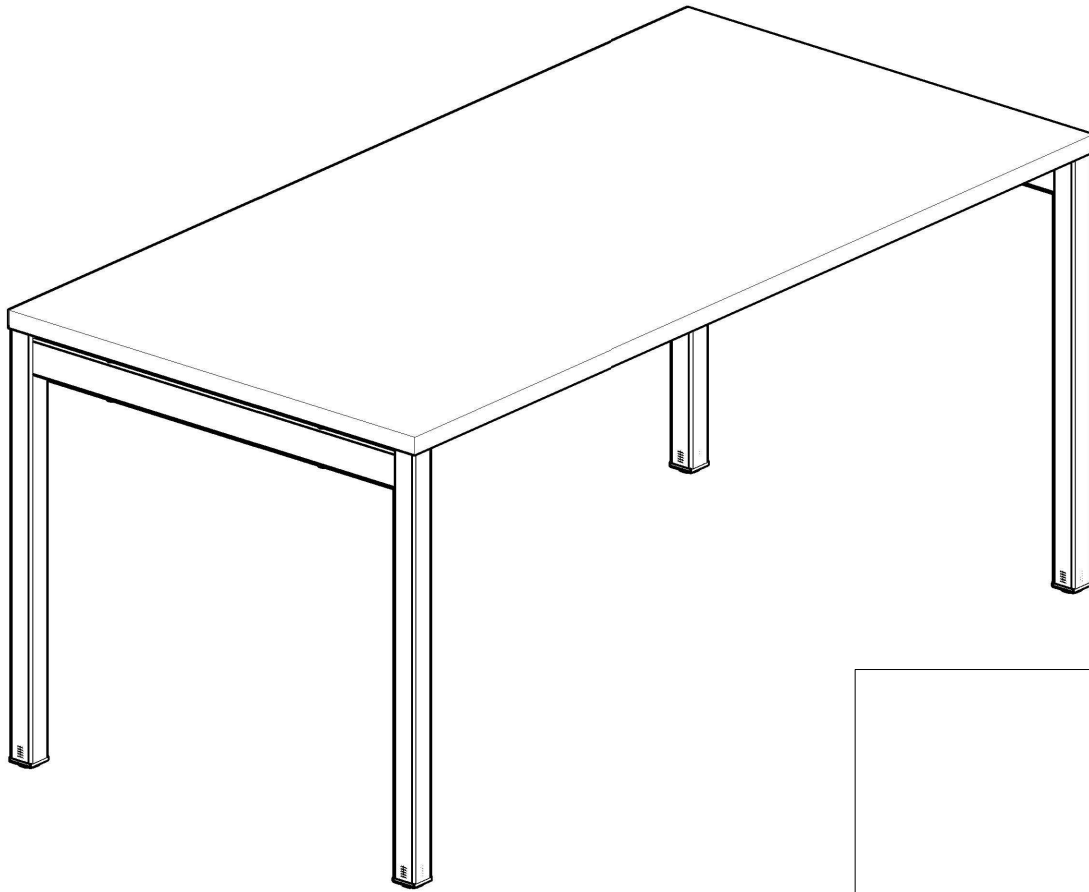



BOX 1

BOX 2

BOX 3

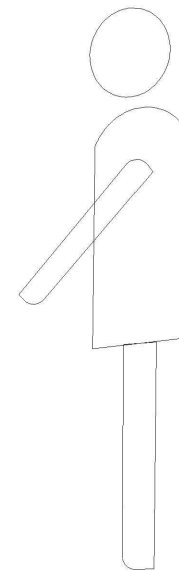

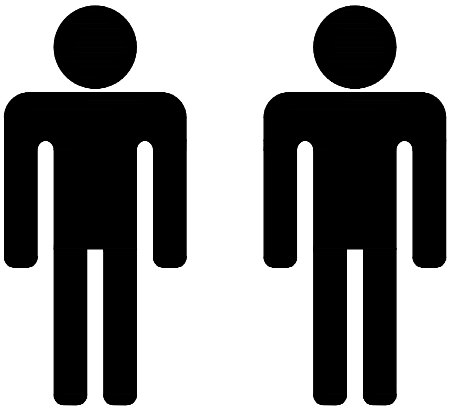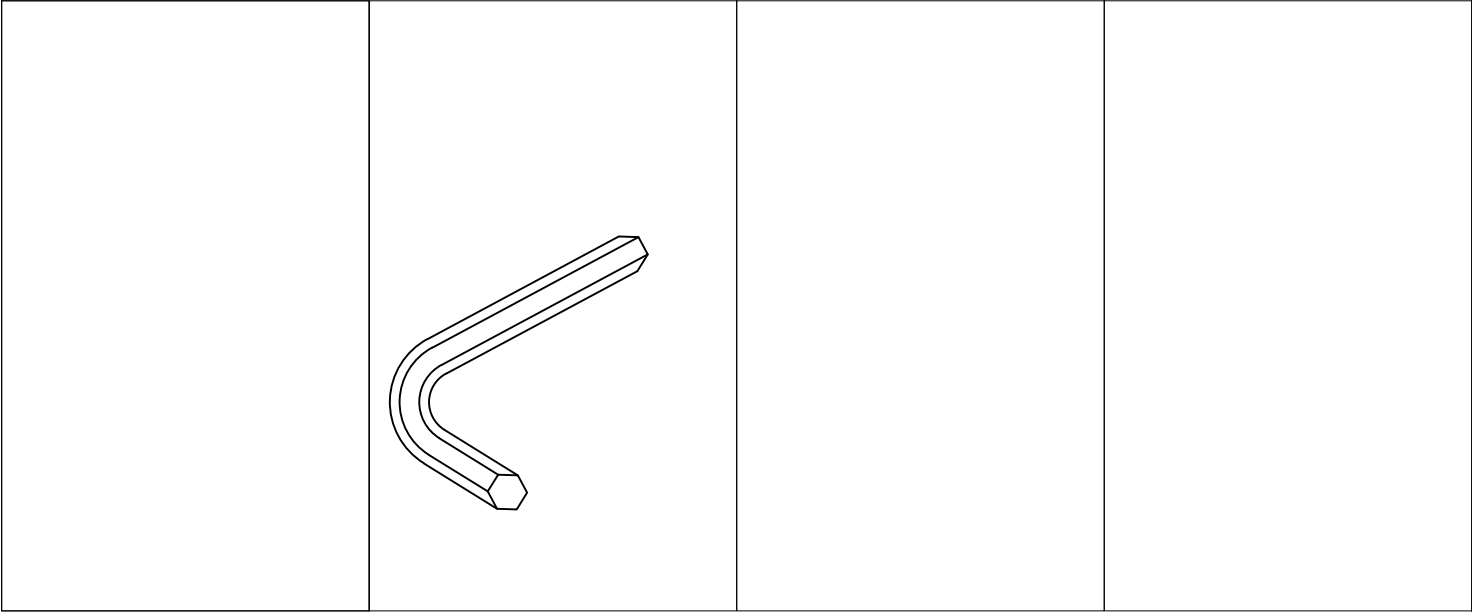


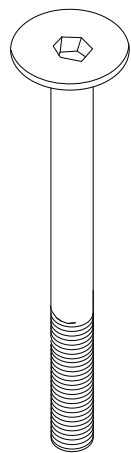

M6x68

4x


1

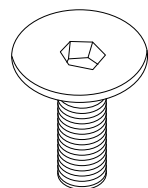

M6x10


2x

2

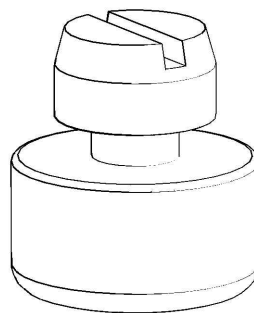


4x

3

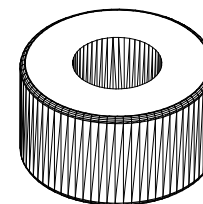


2x

4

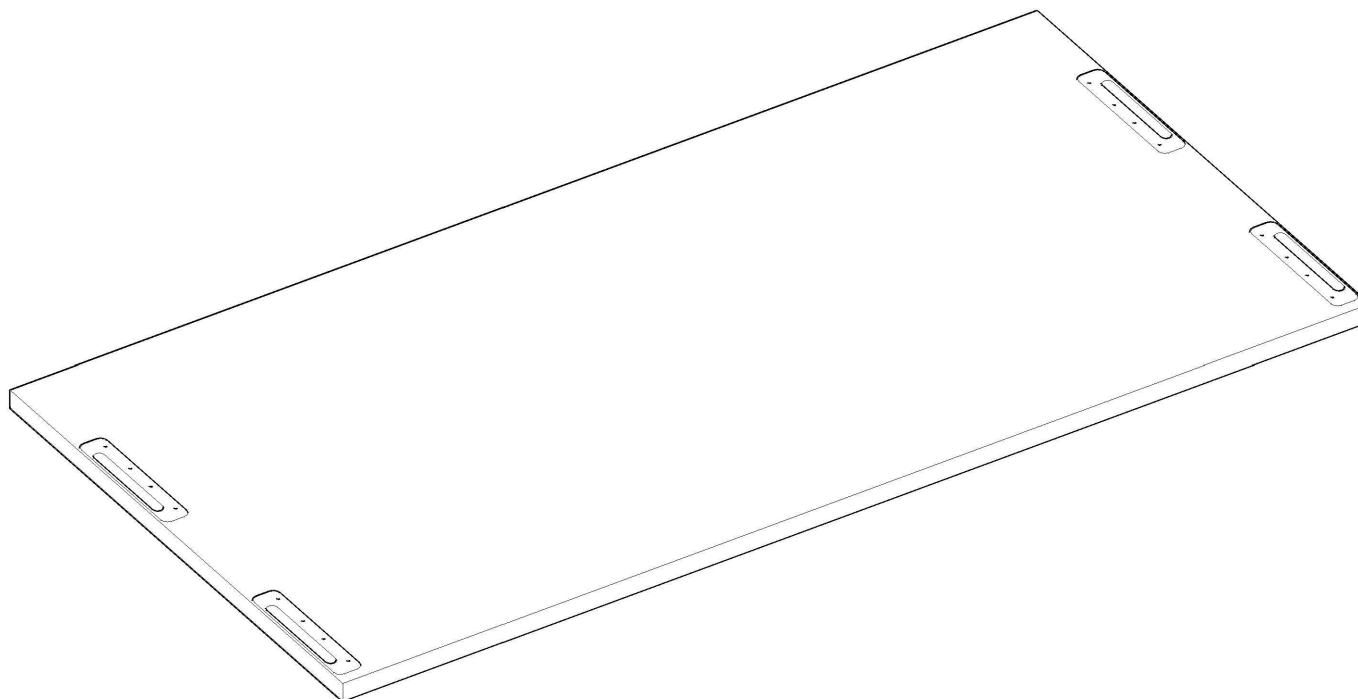


3


5

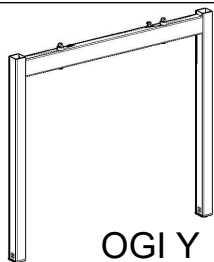


OGI Y

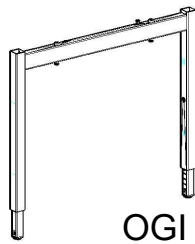


OGI Y

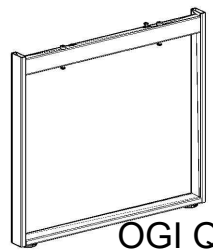


OGI Q

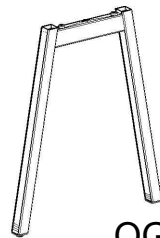


OGI M


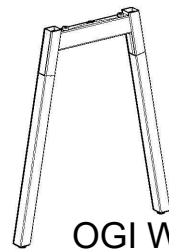






OGI W


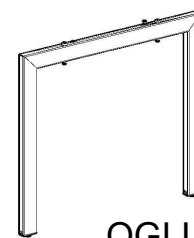


OGI U

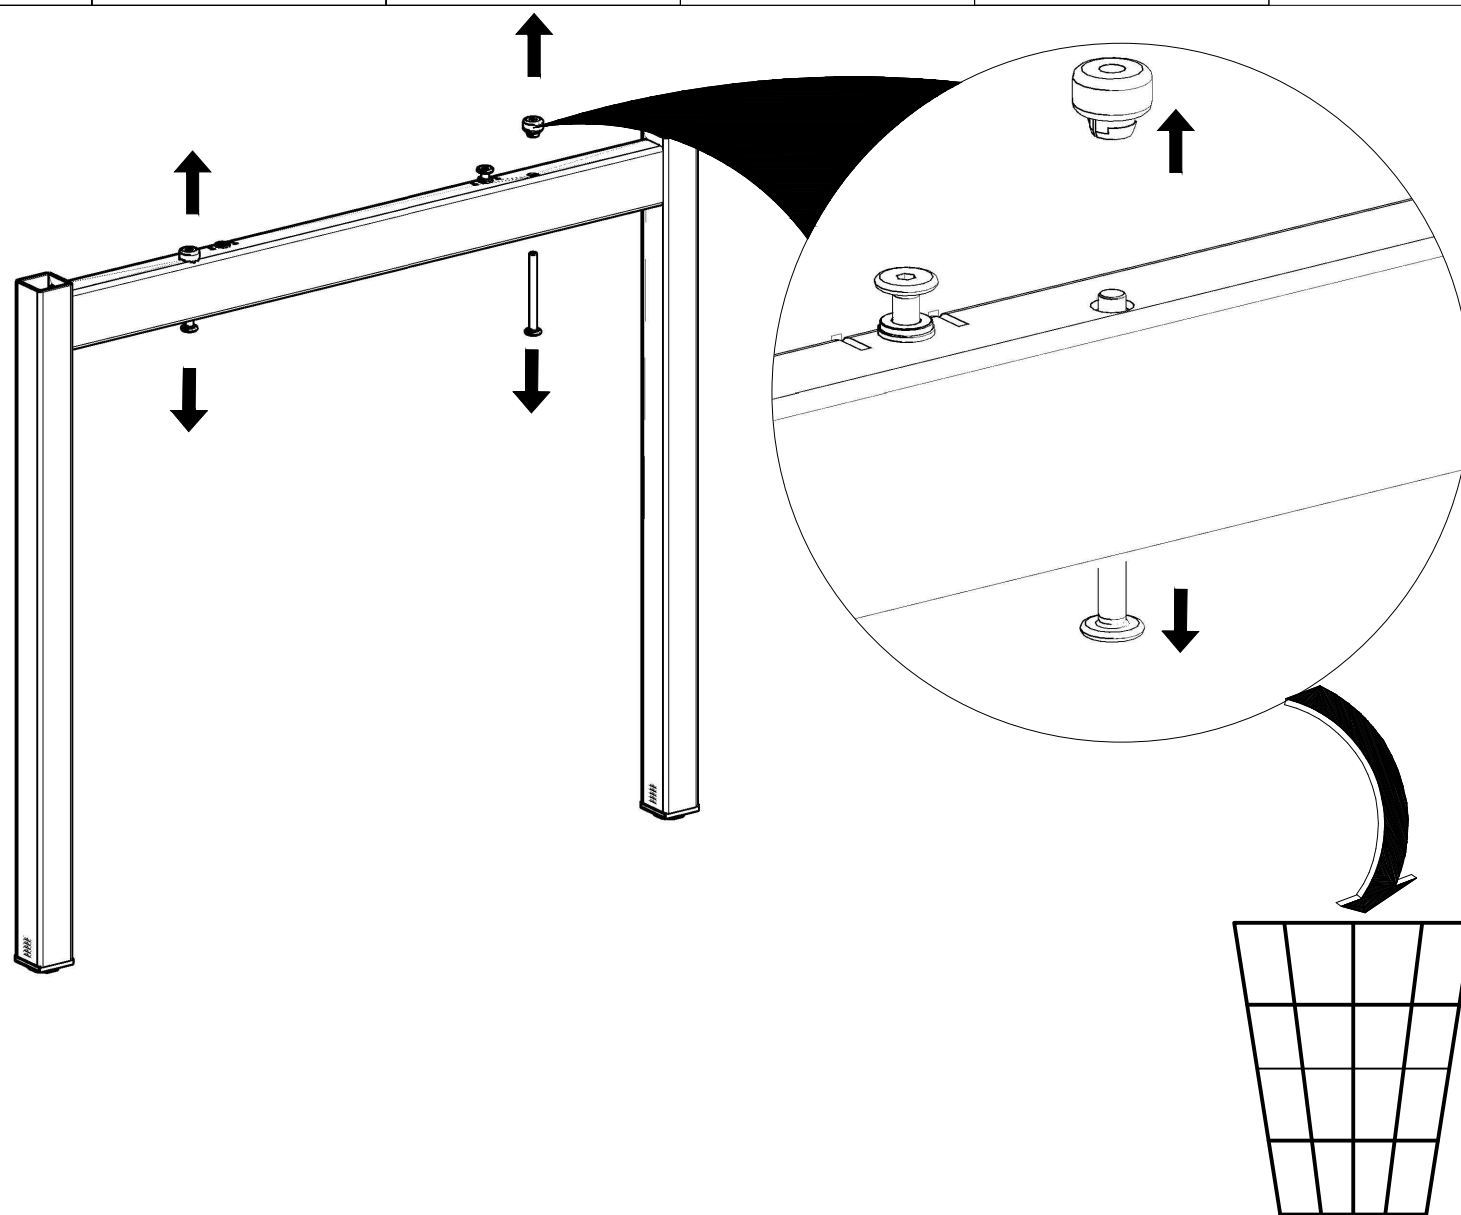


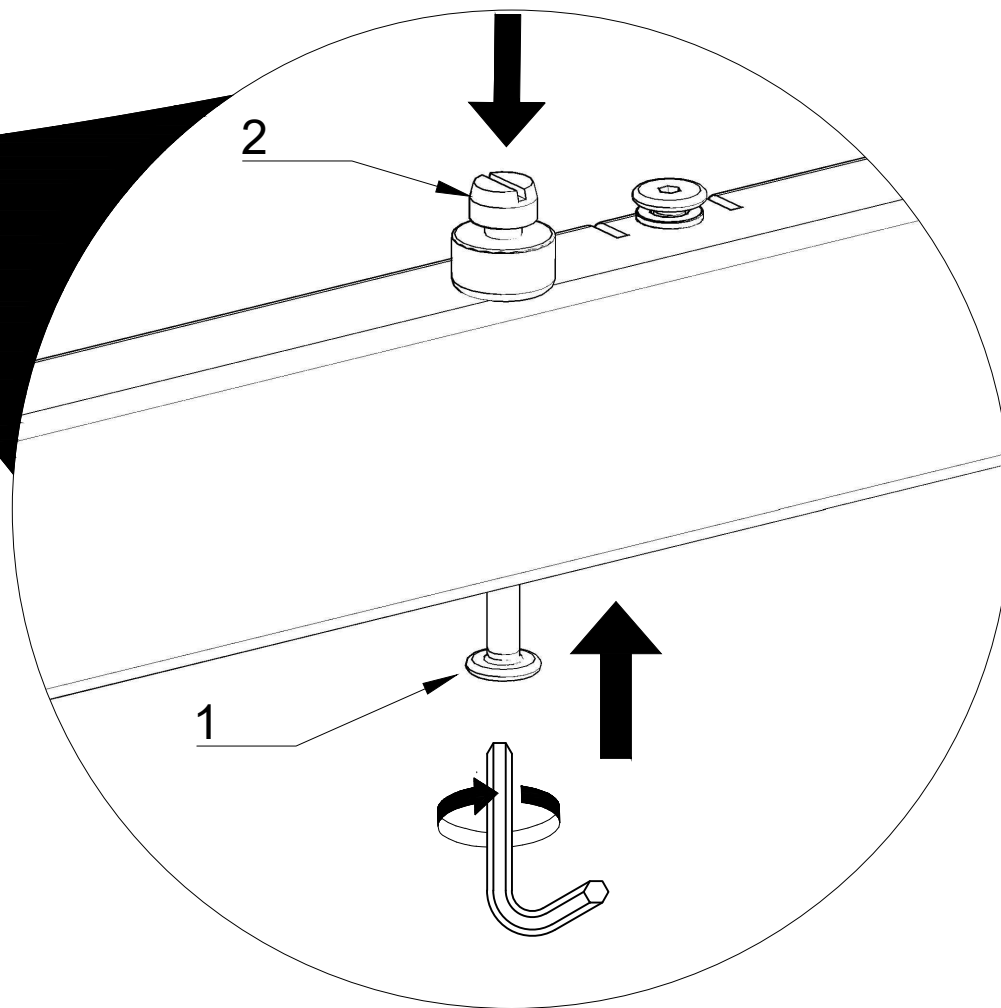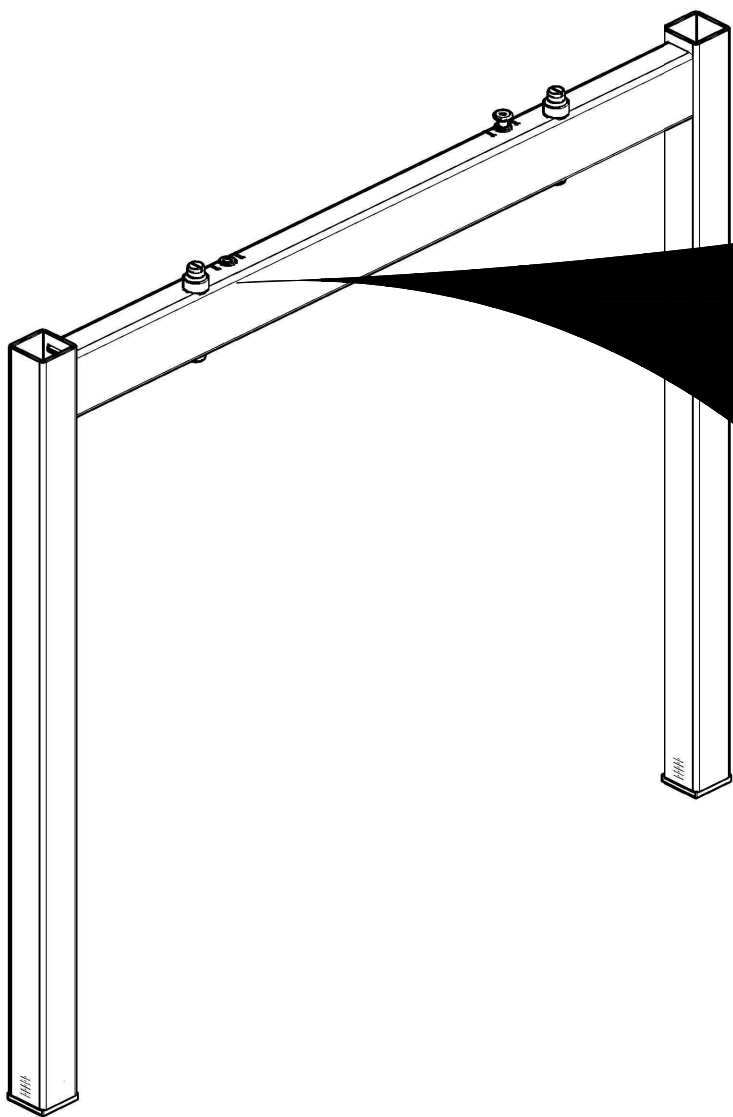


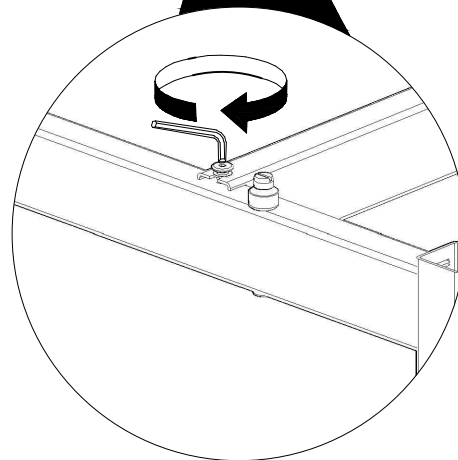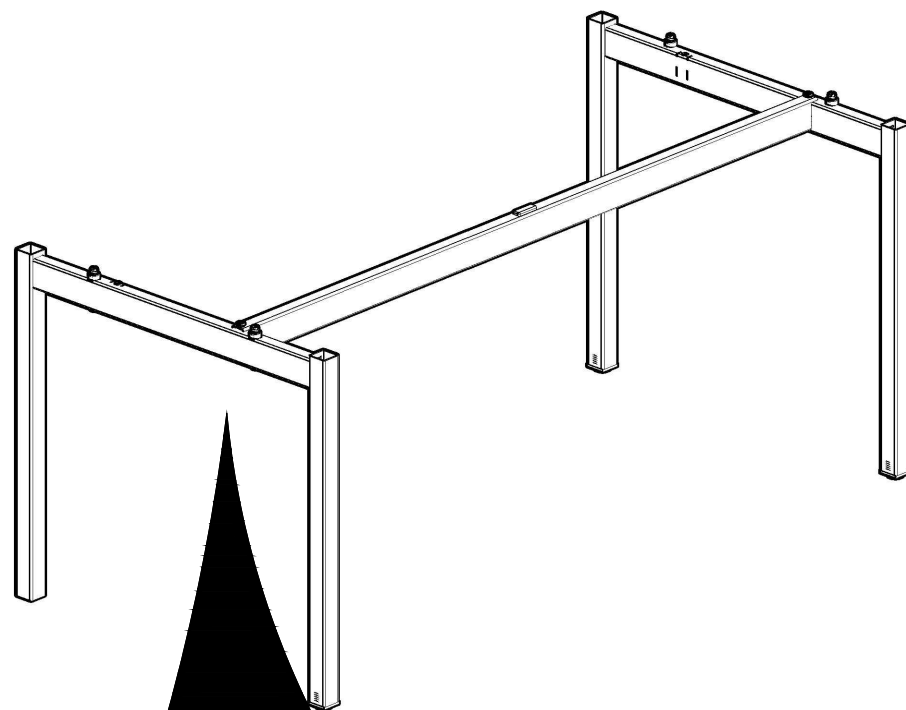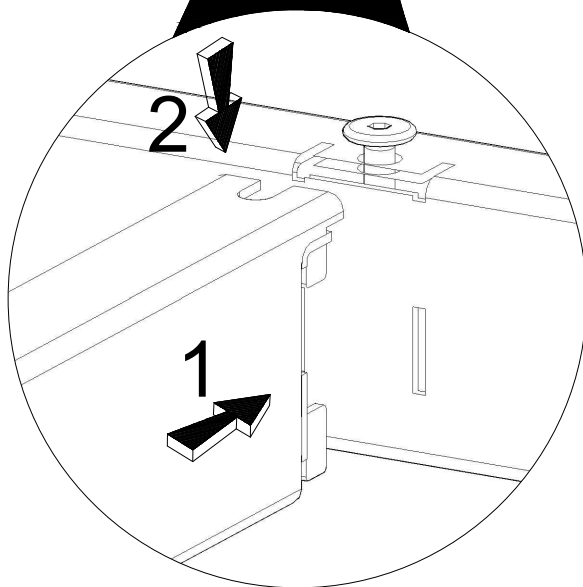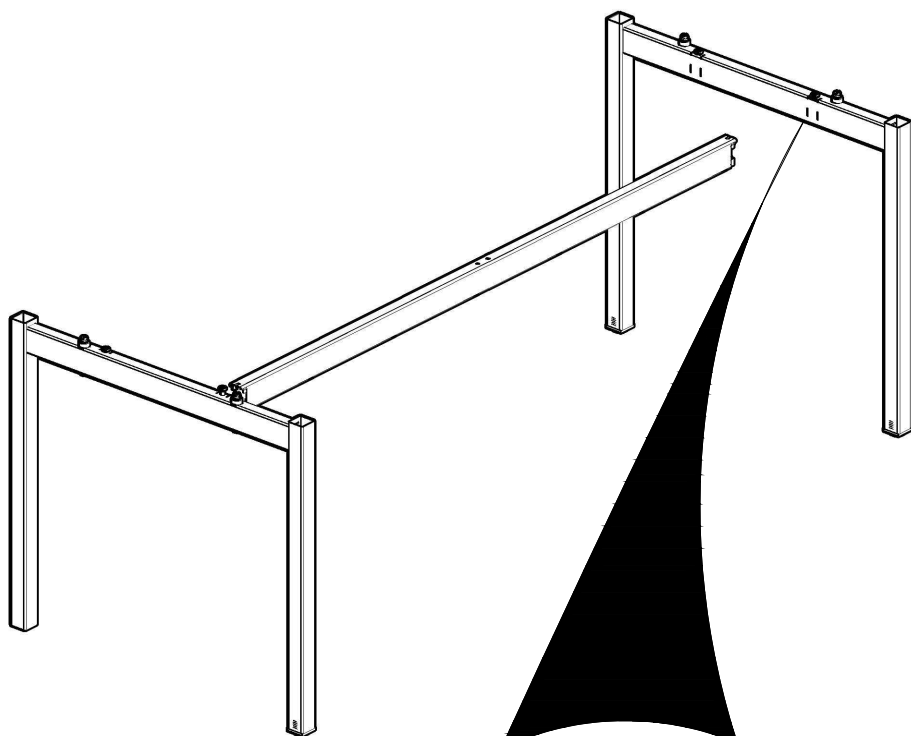


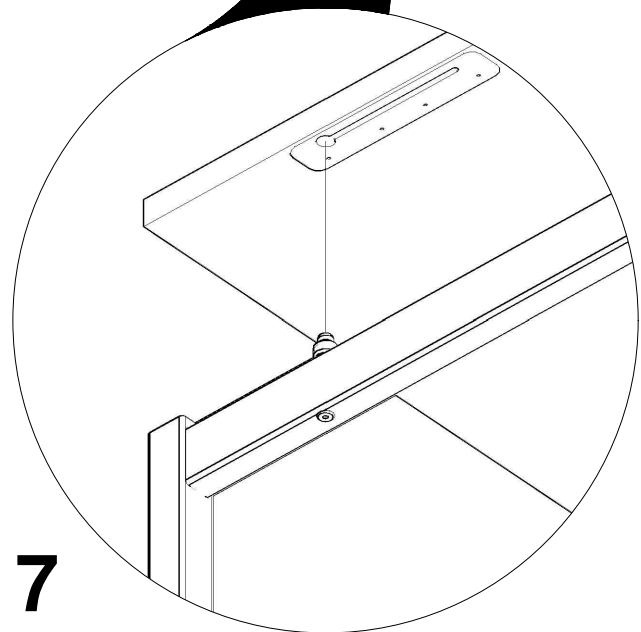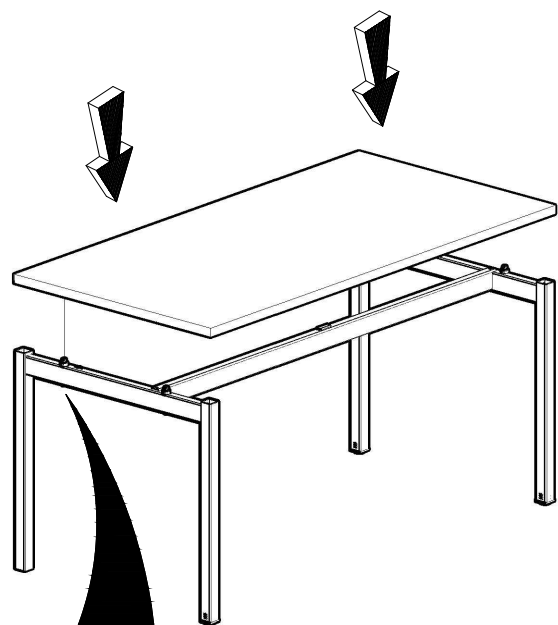


7

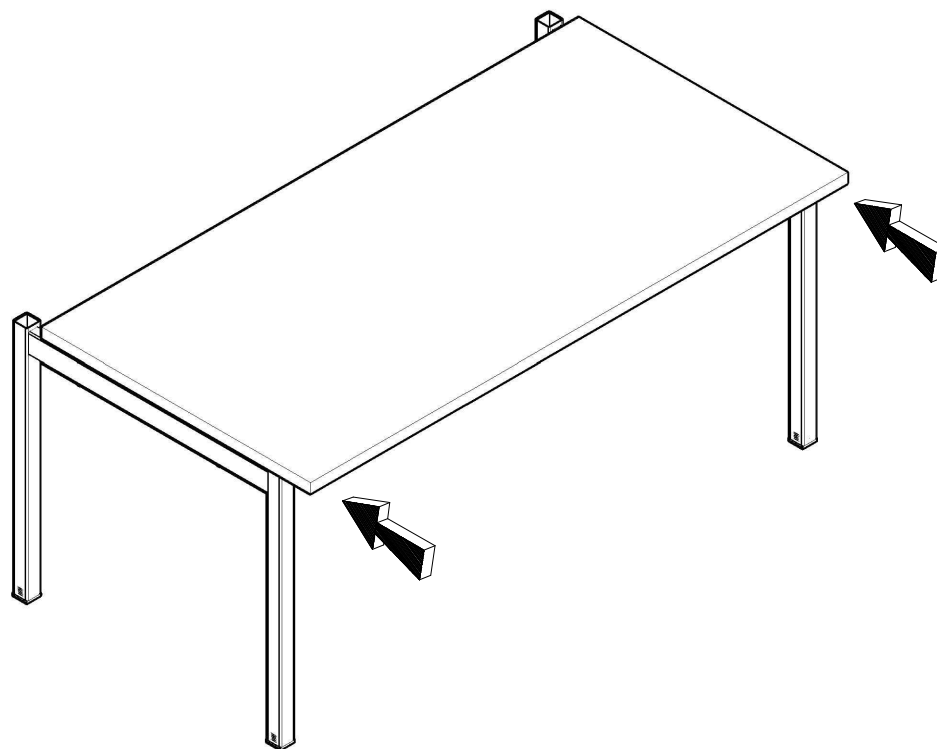

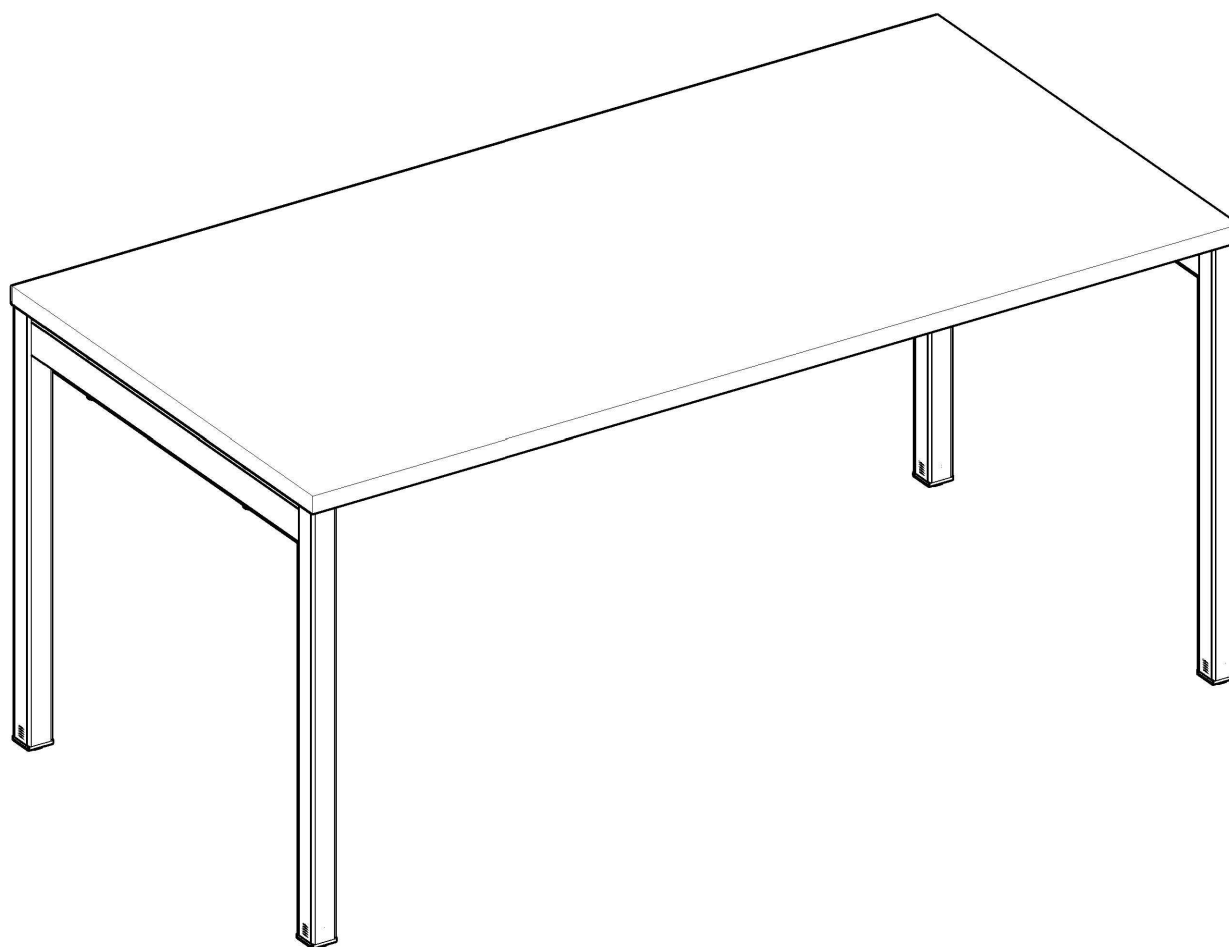


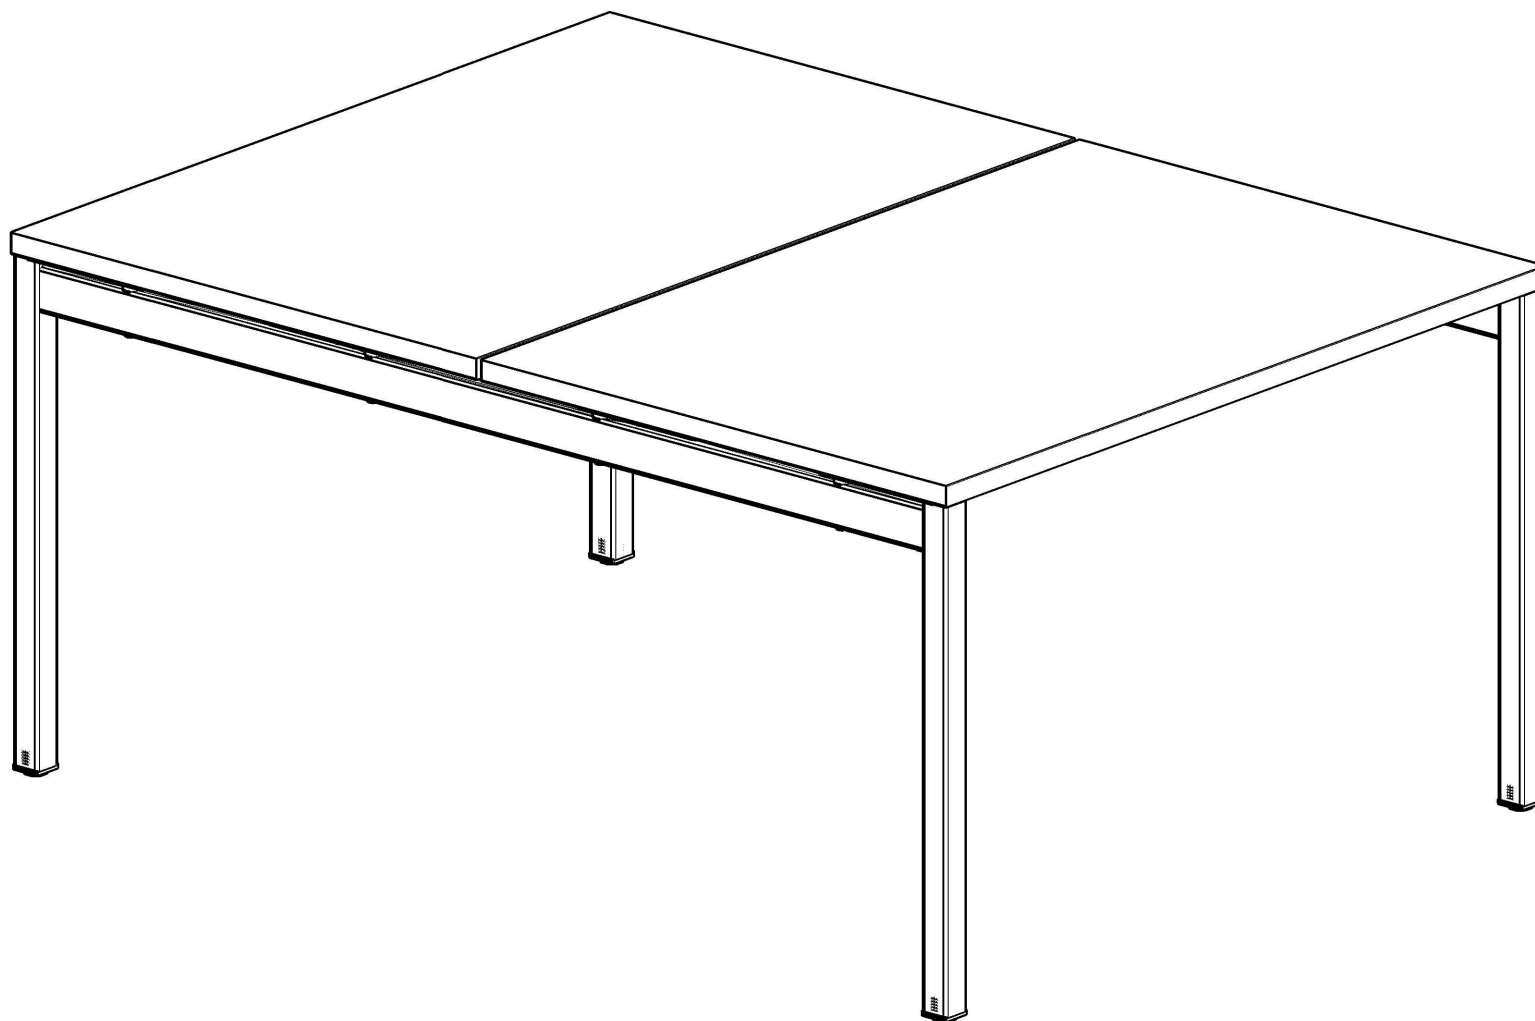

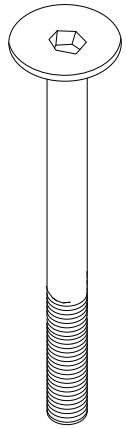


M6x68
8x

1

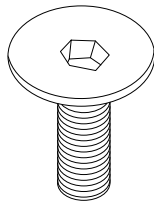


M6x10
2x

2

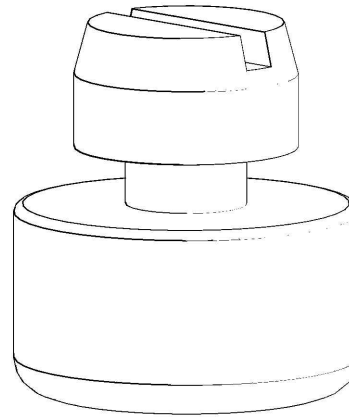


4x

3

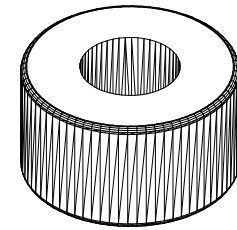



2x





4



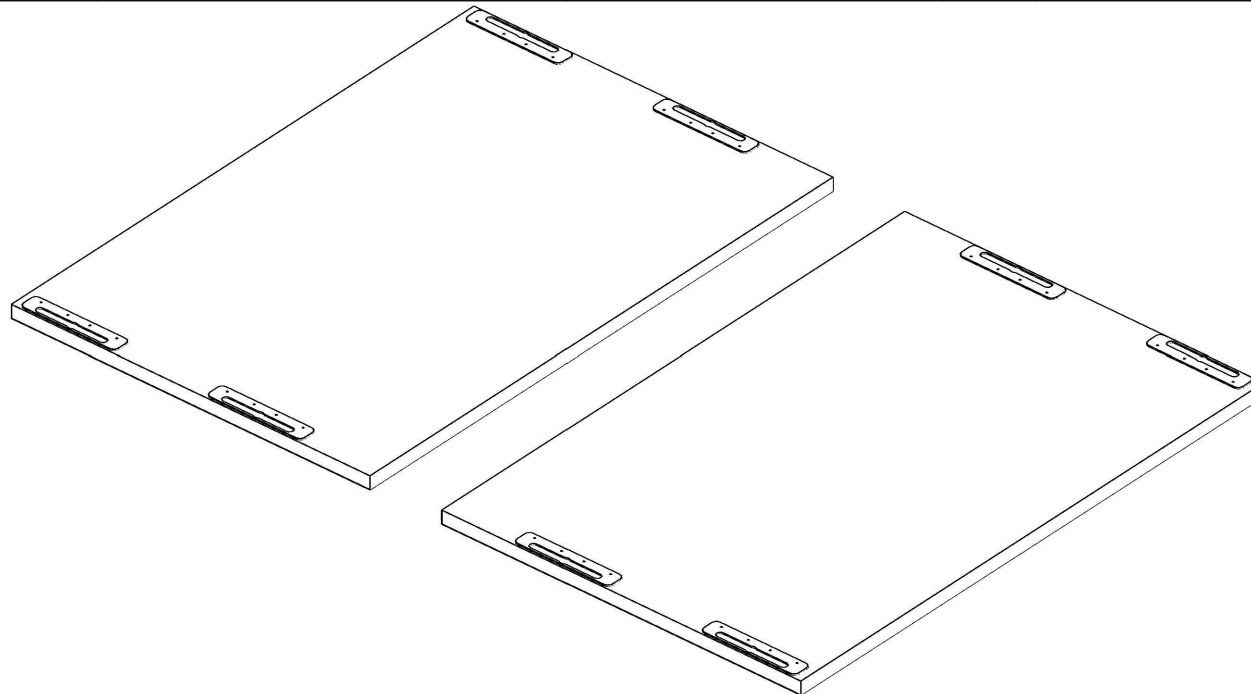


5

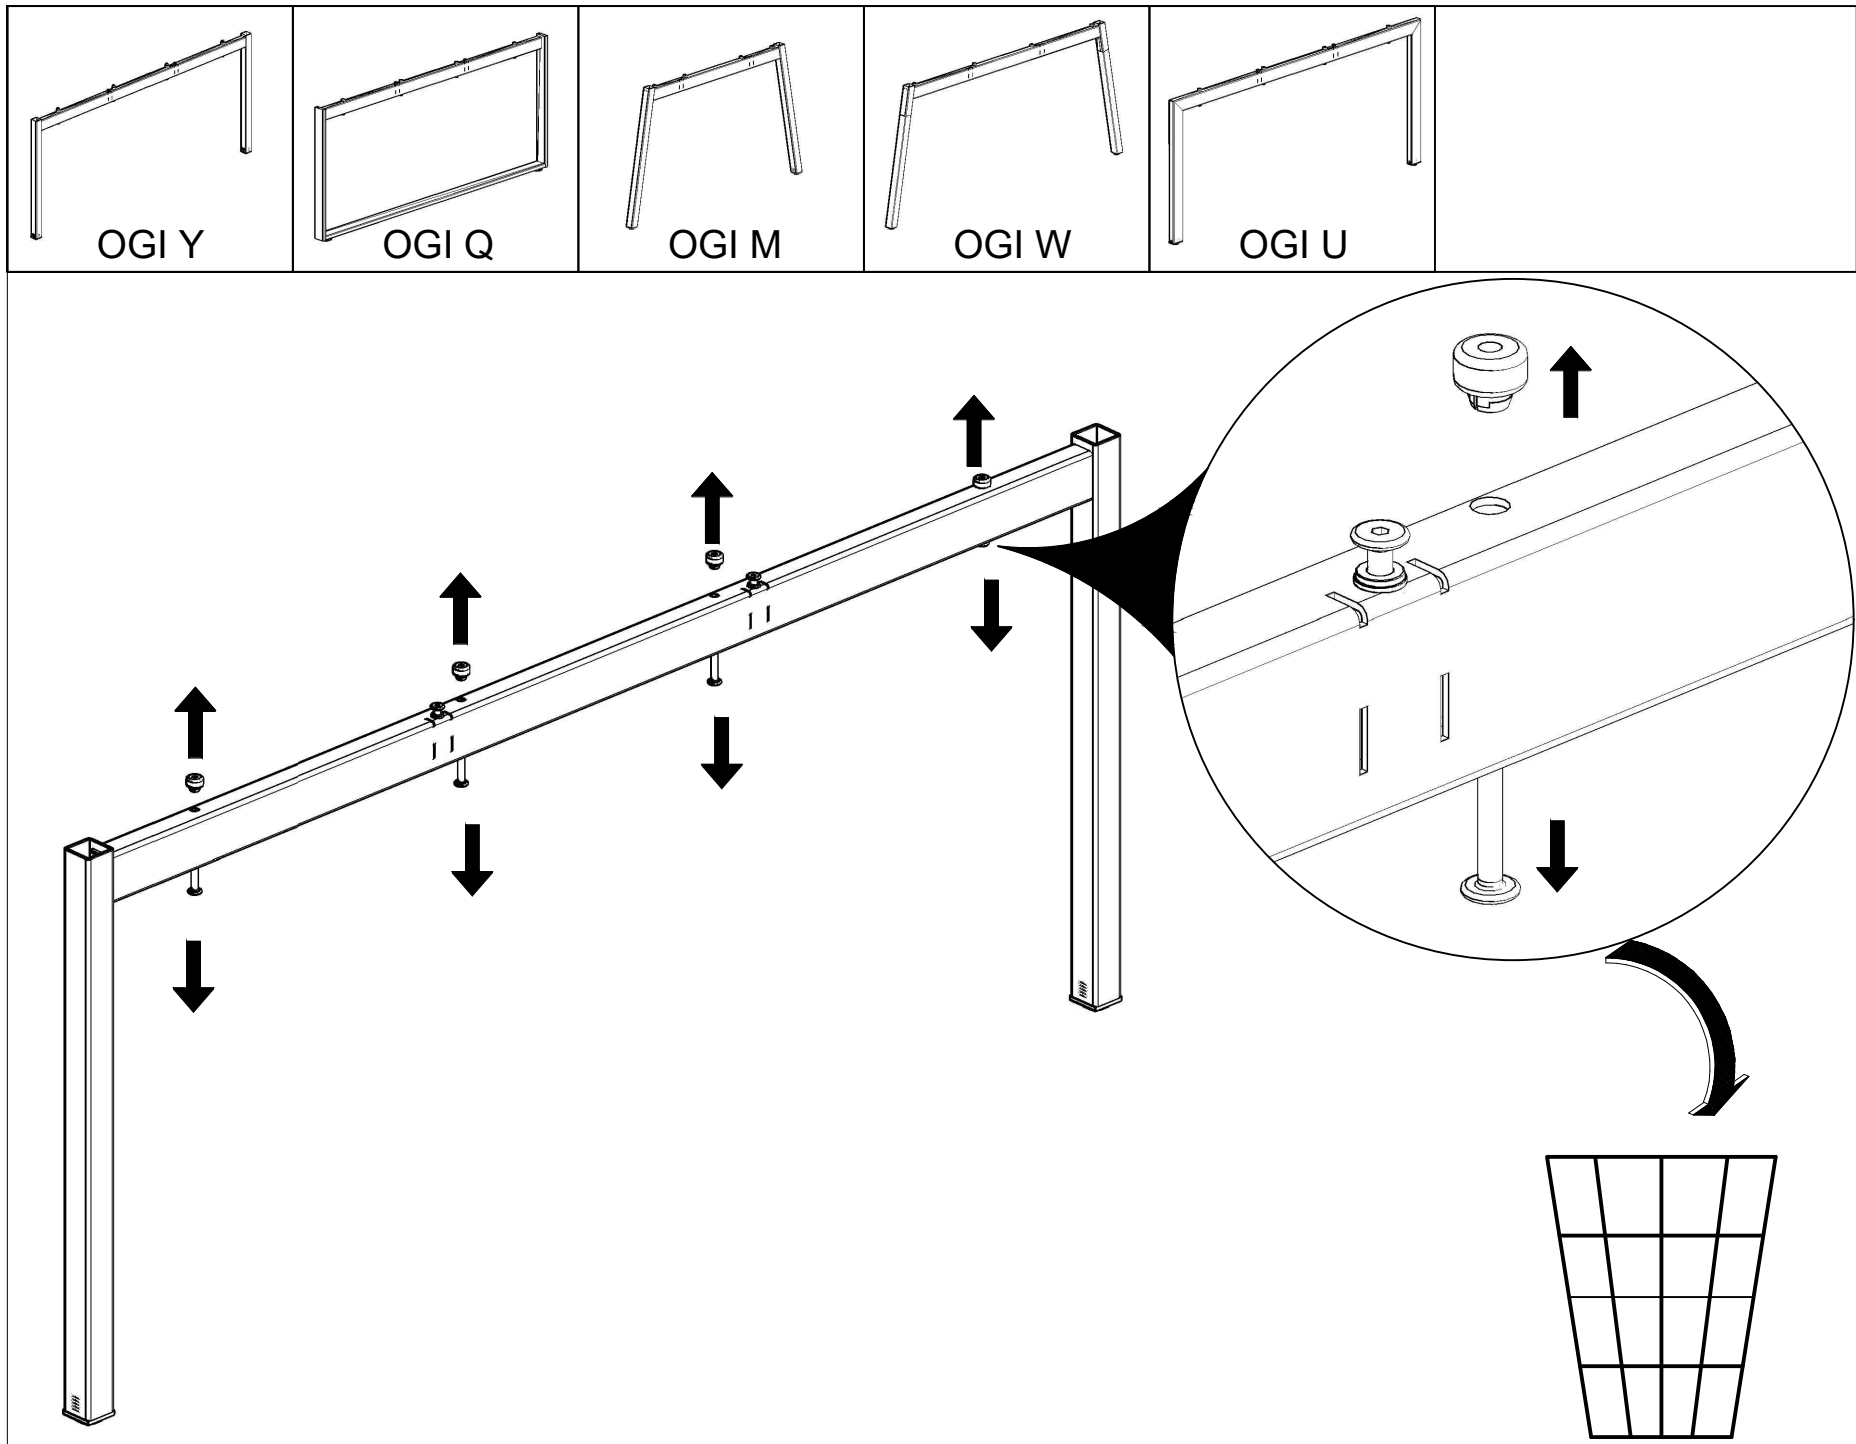

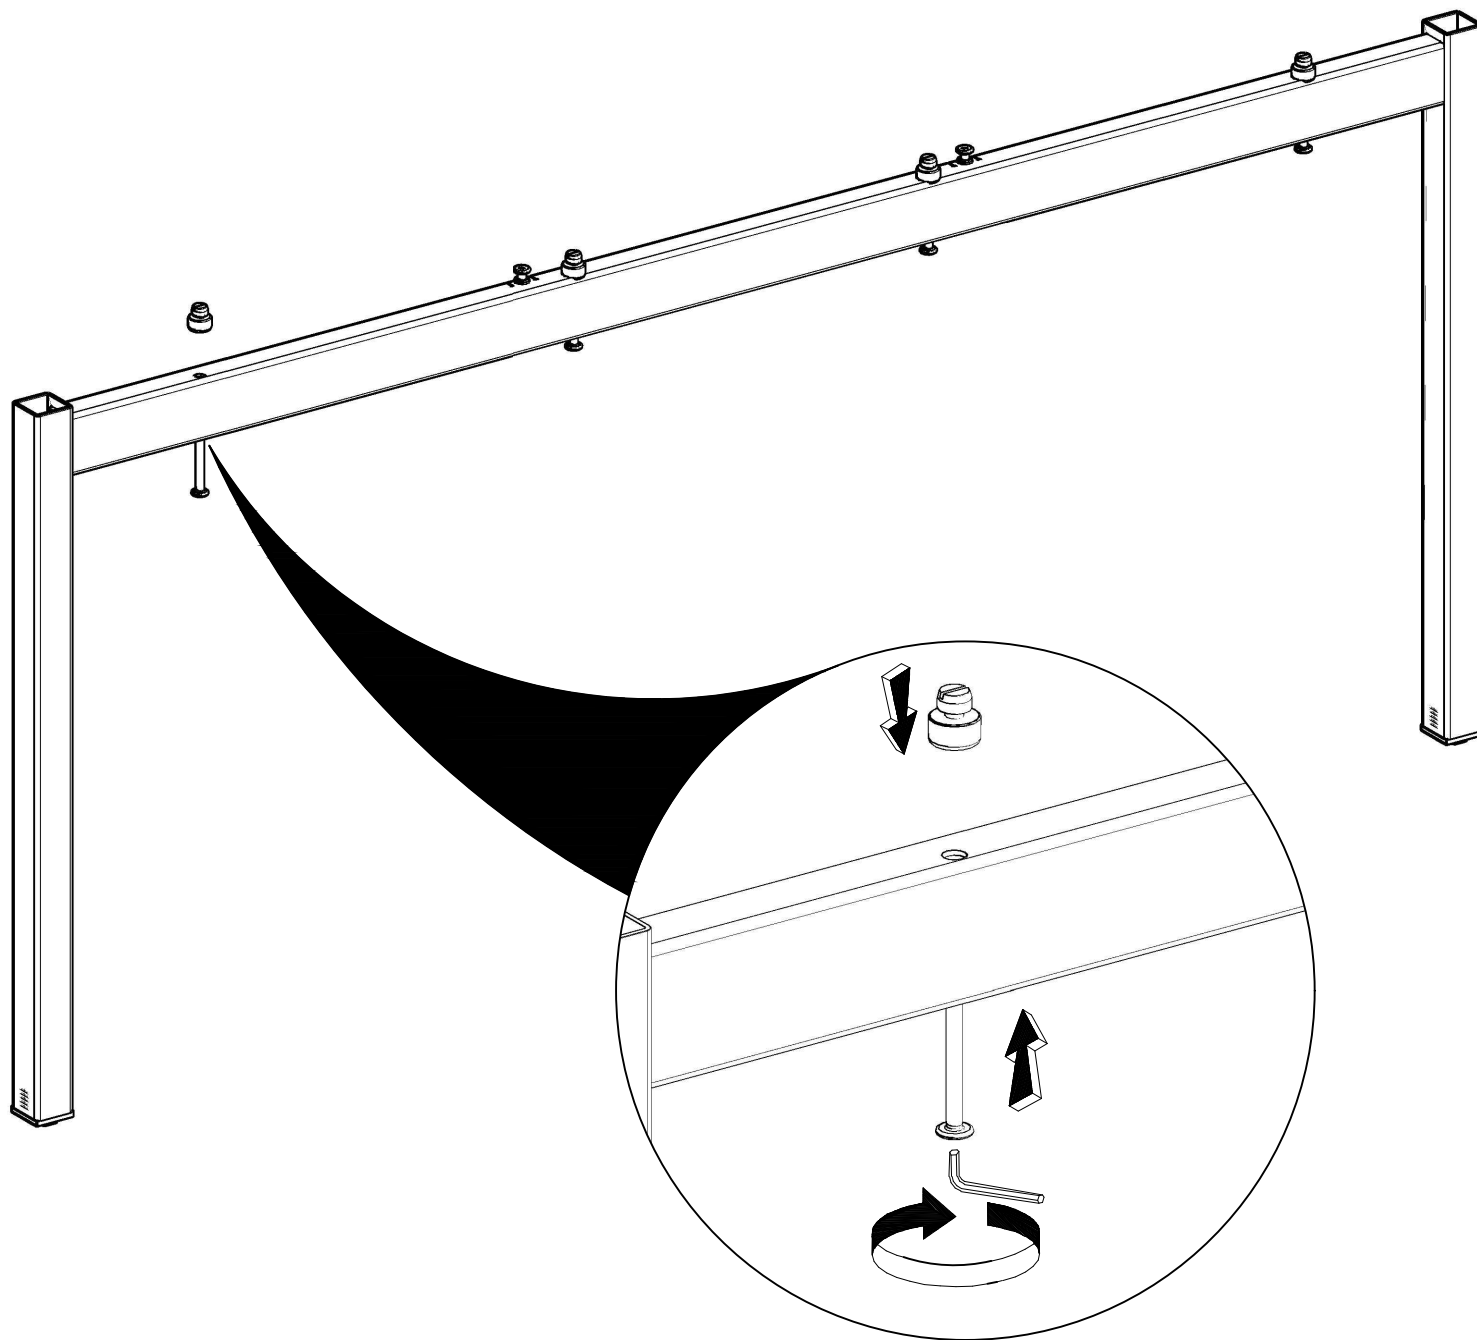

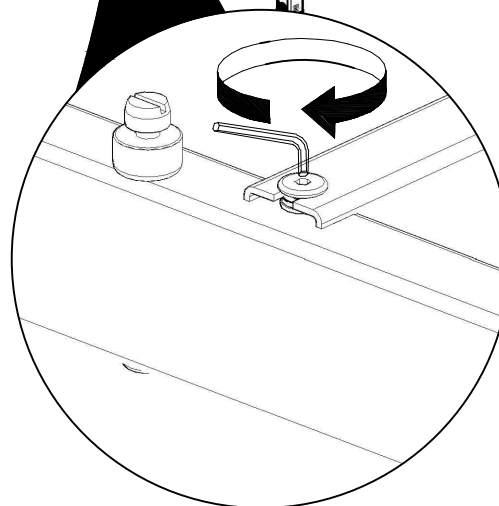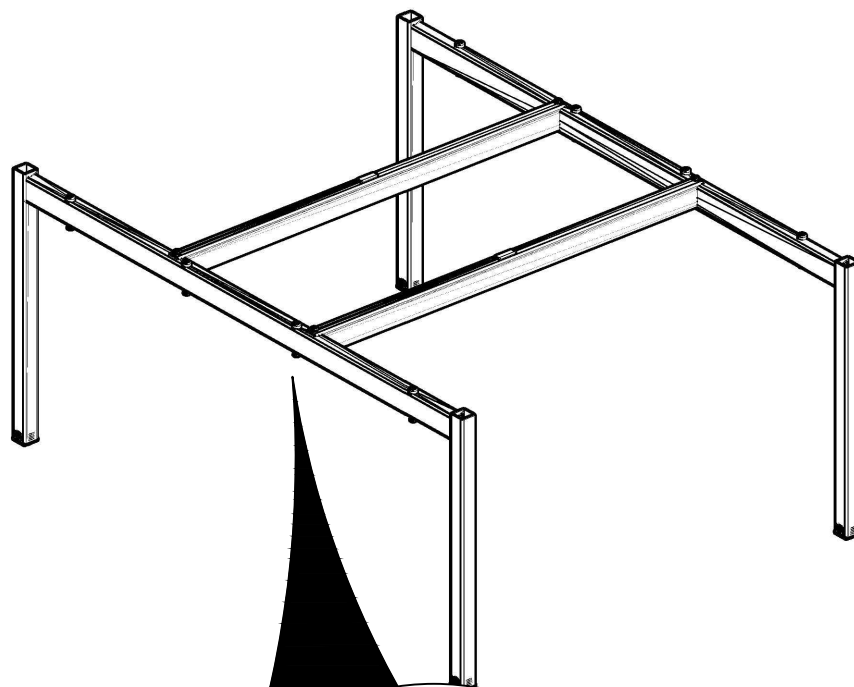
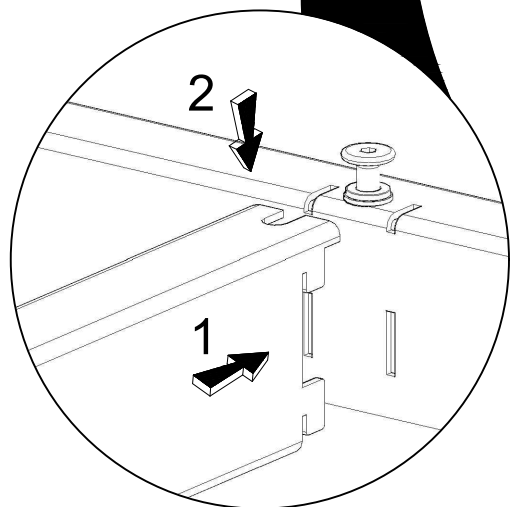
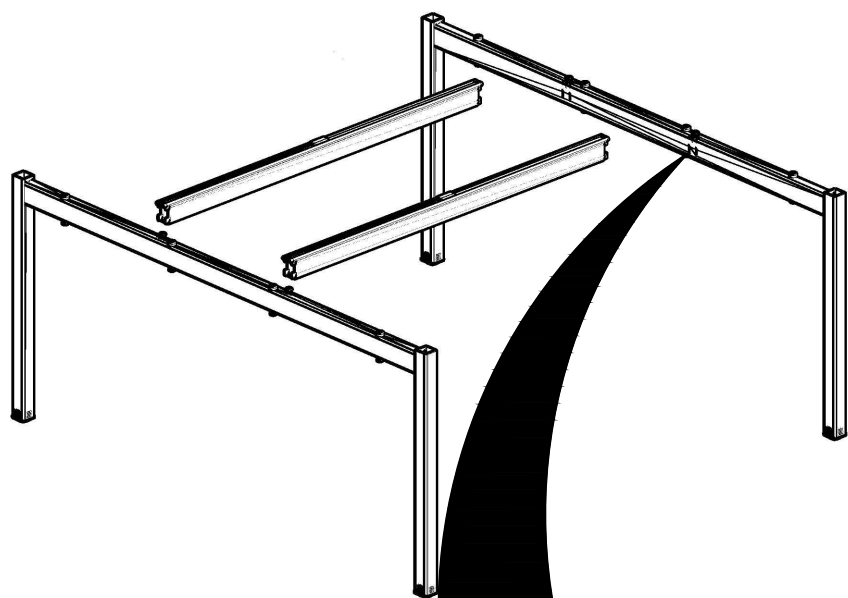


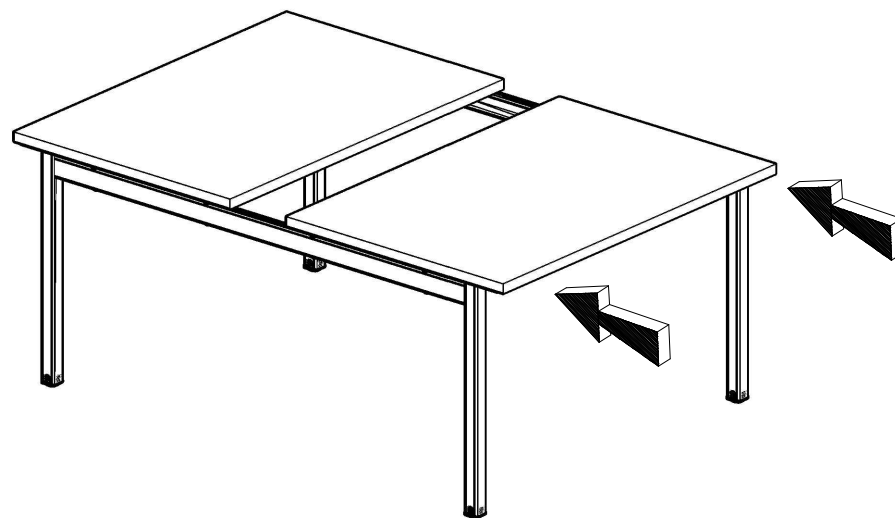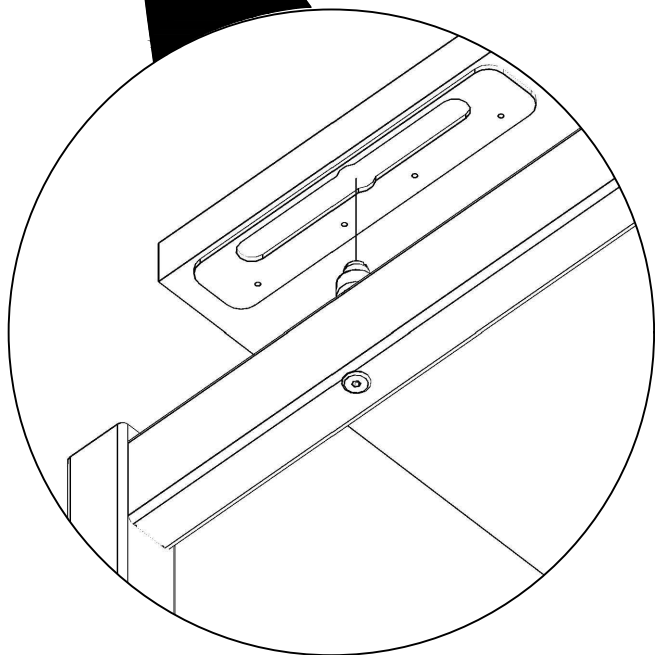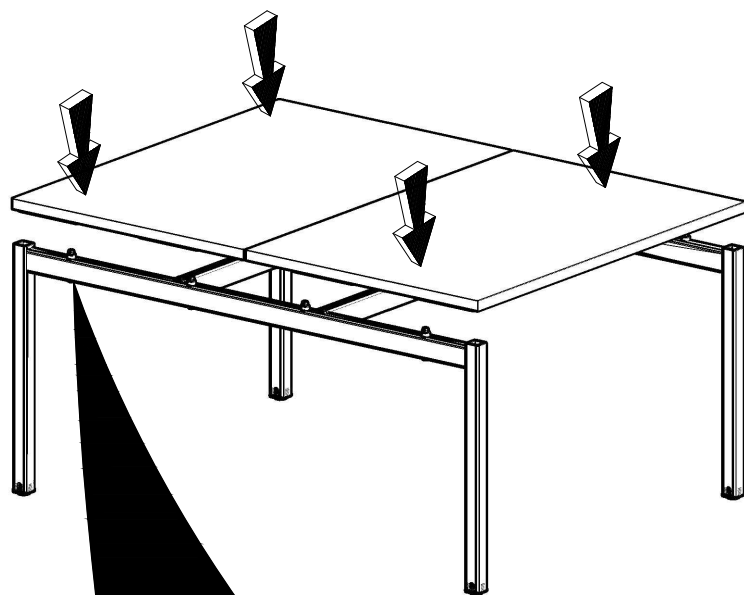


1



M05




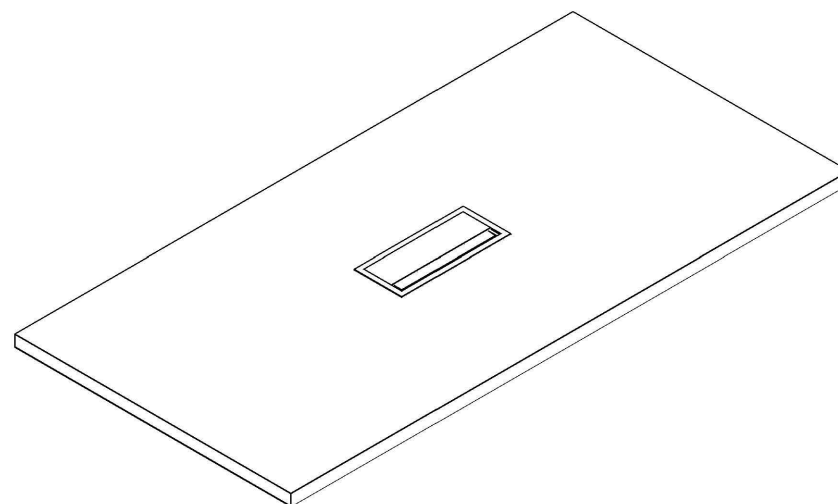
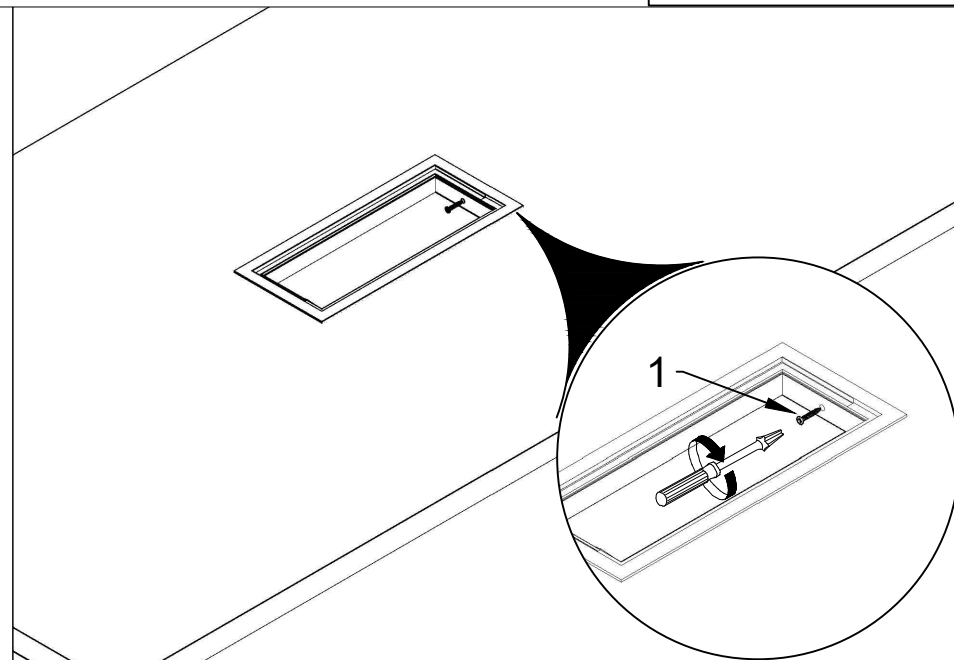
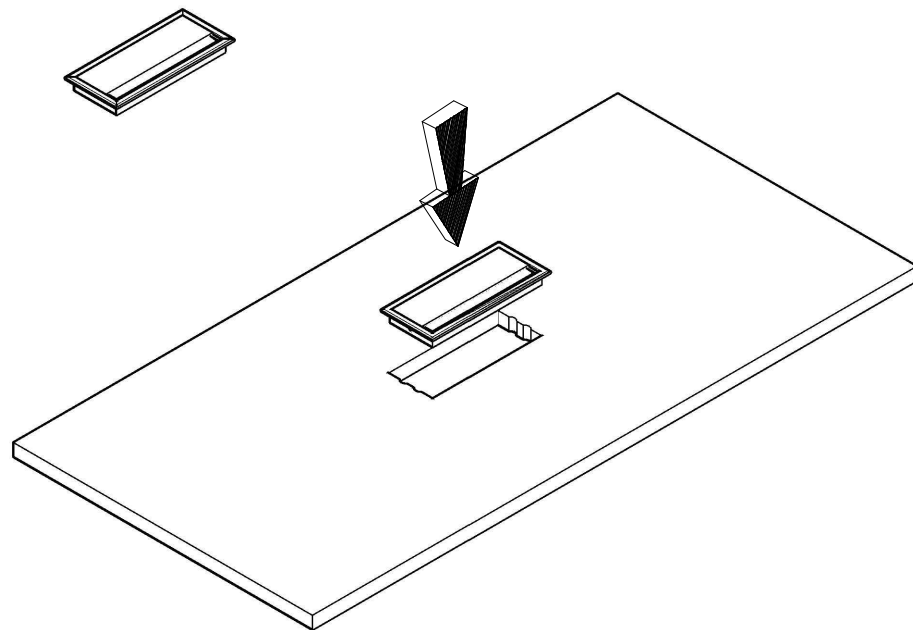


1



3x20







M04

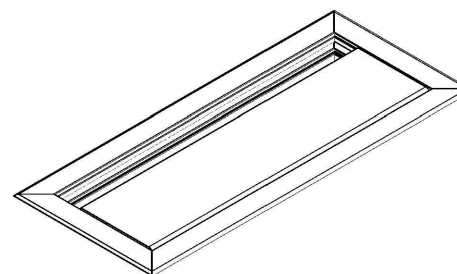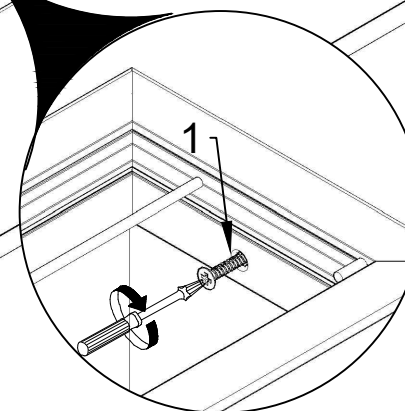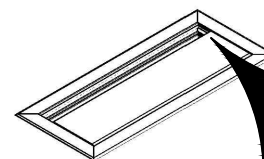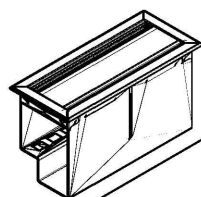




1




M04

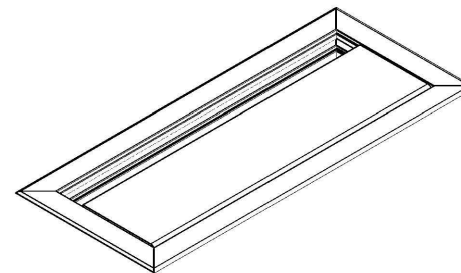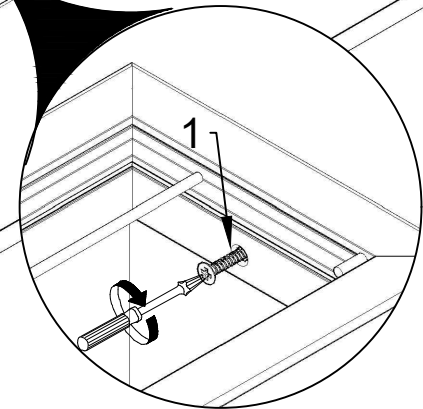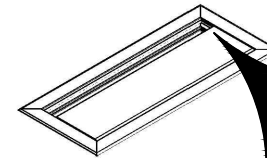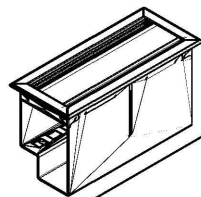

M07

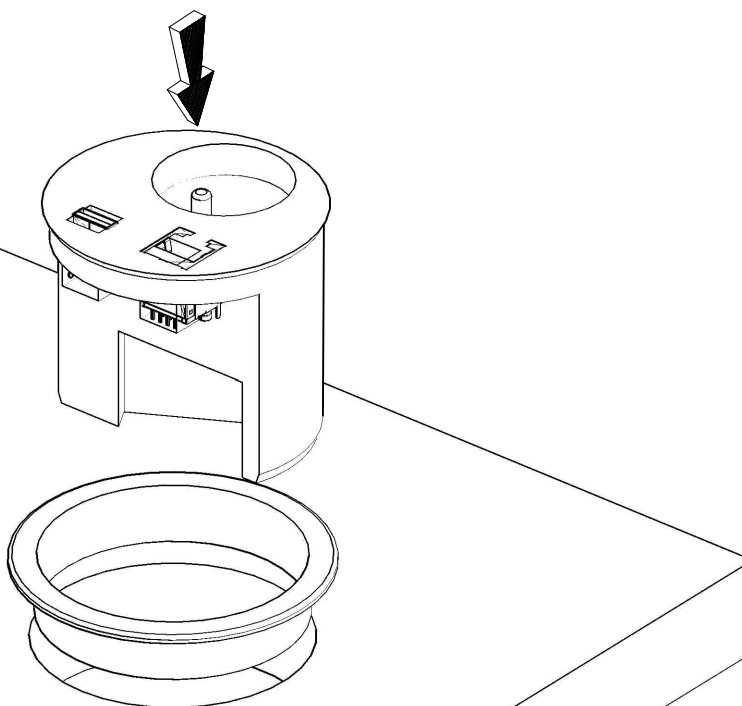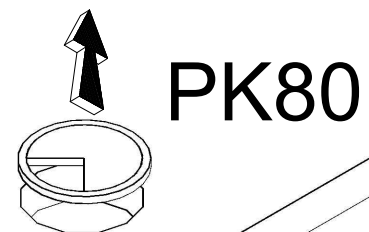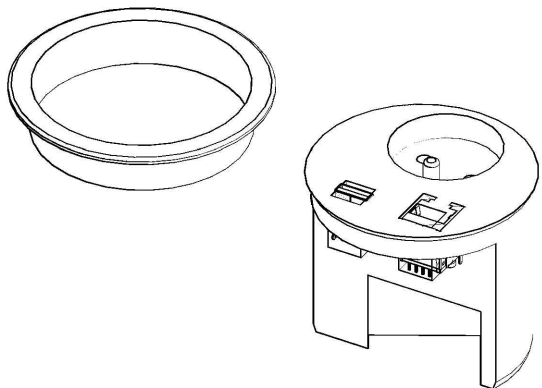

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

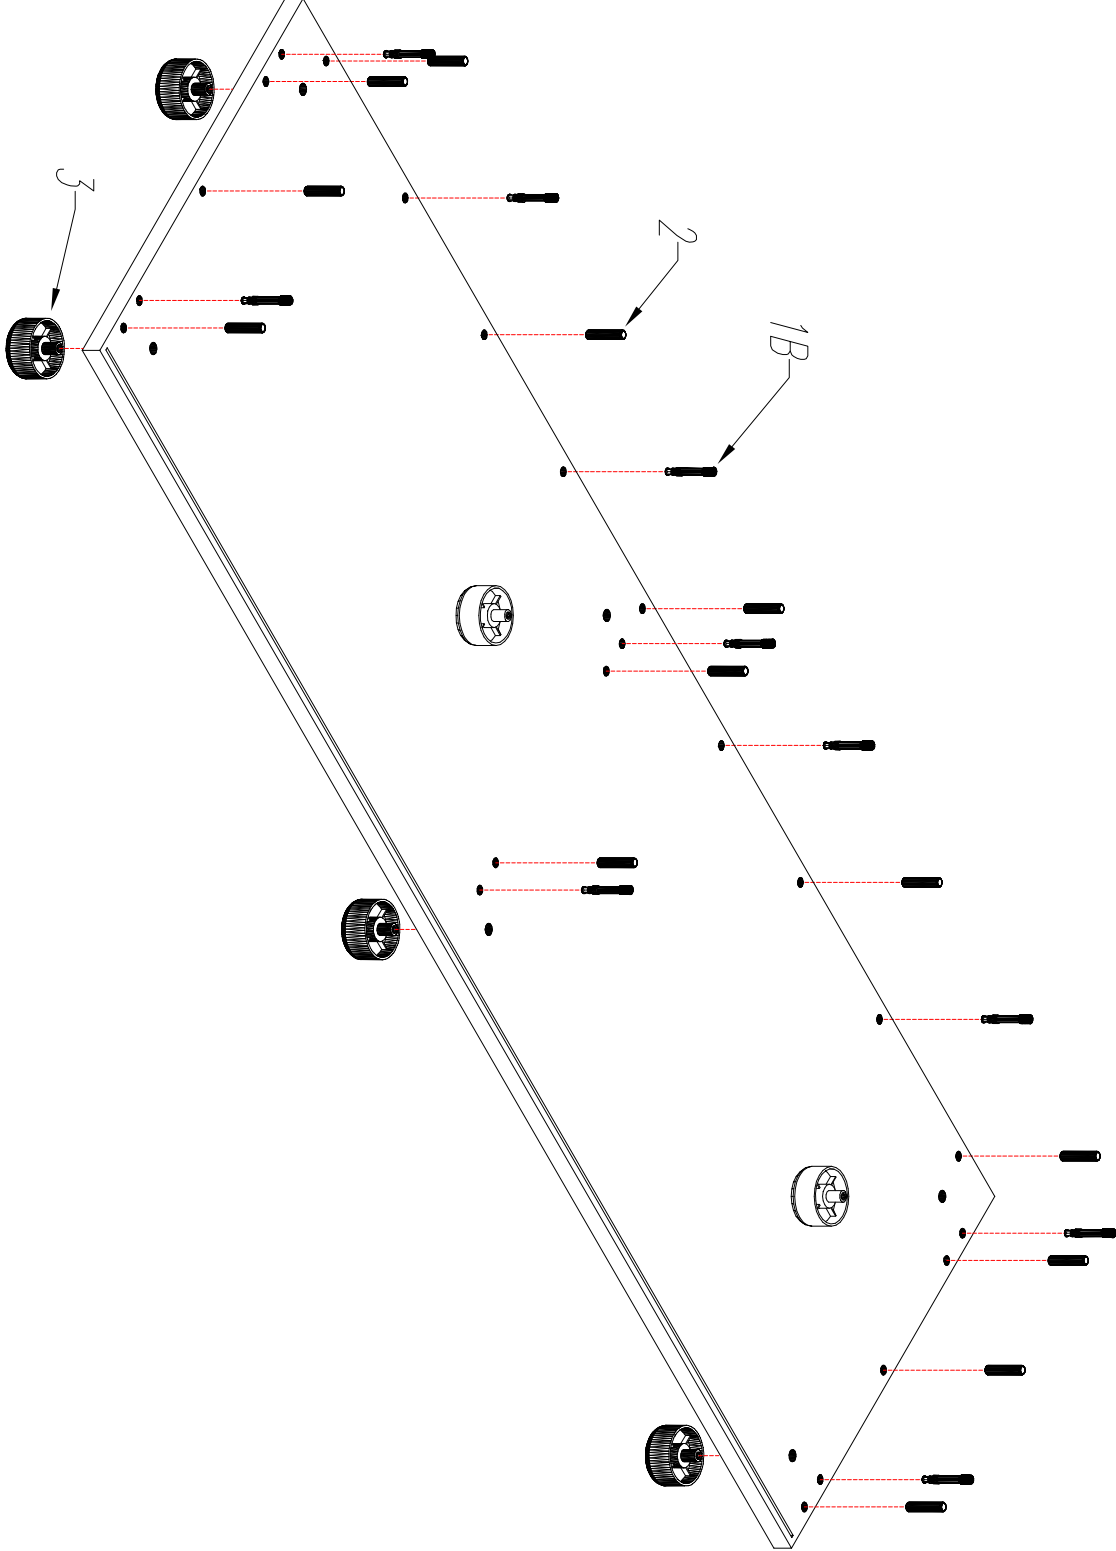

KOLEJNOŚĆ MONTAŻU
IMOSRODOW I KOKKOW.

THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.

DIE MONTAGEFOLGE VON
EXZENTERN UND DIBBELN.

1

2


3


4


5

Start


Stop 225

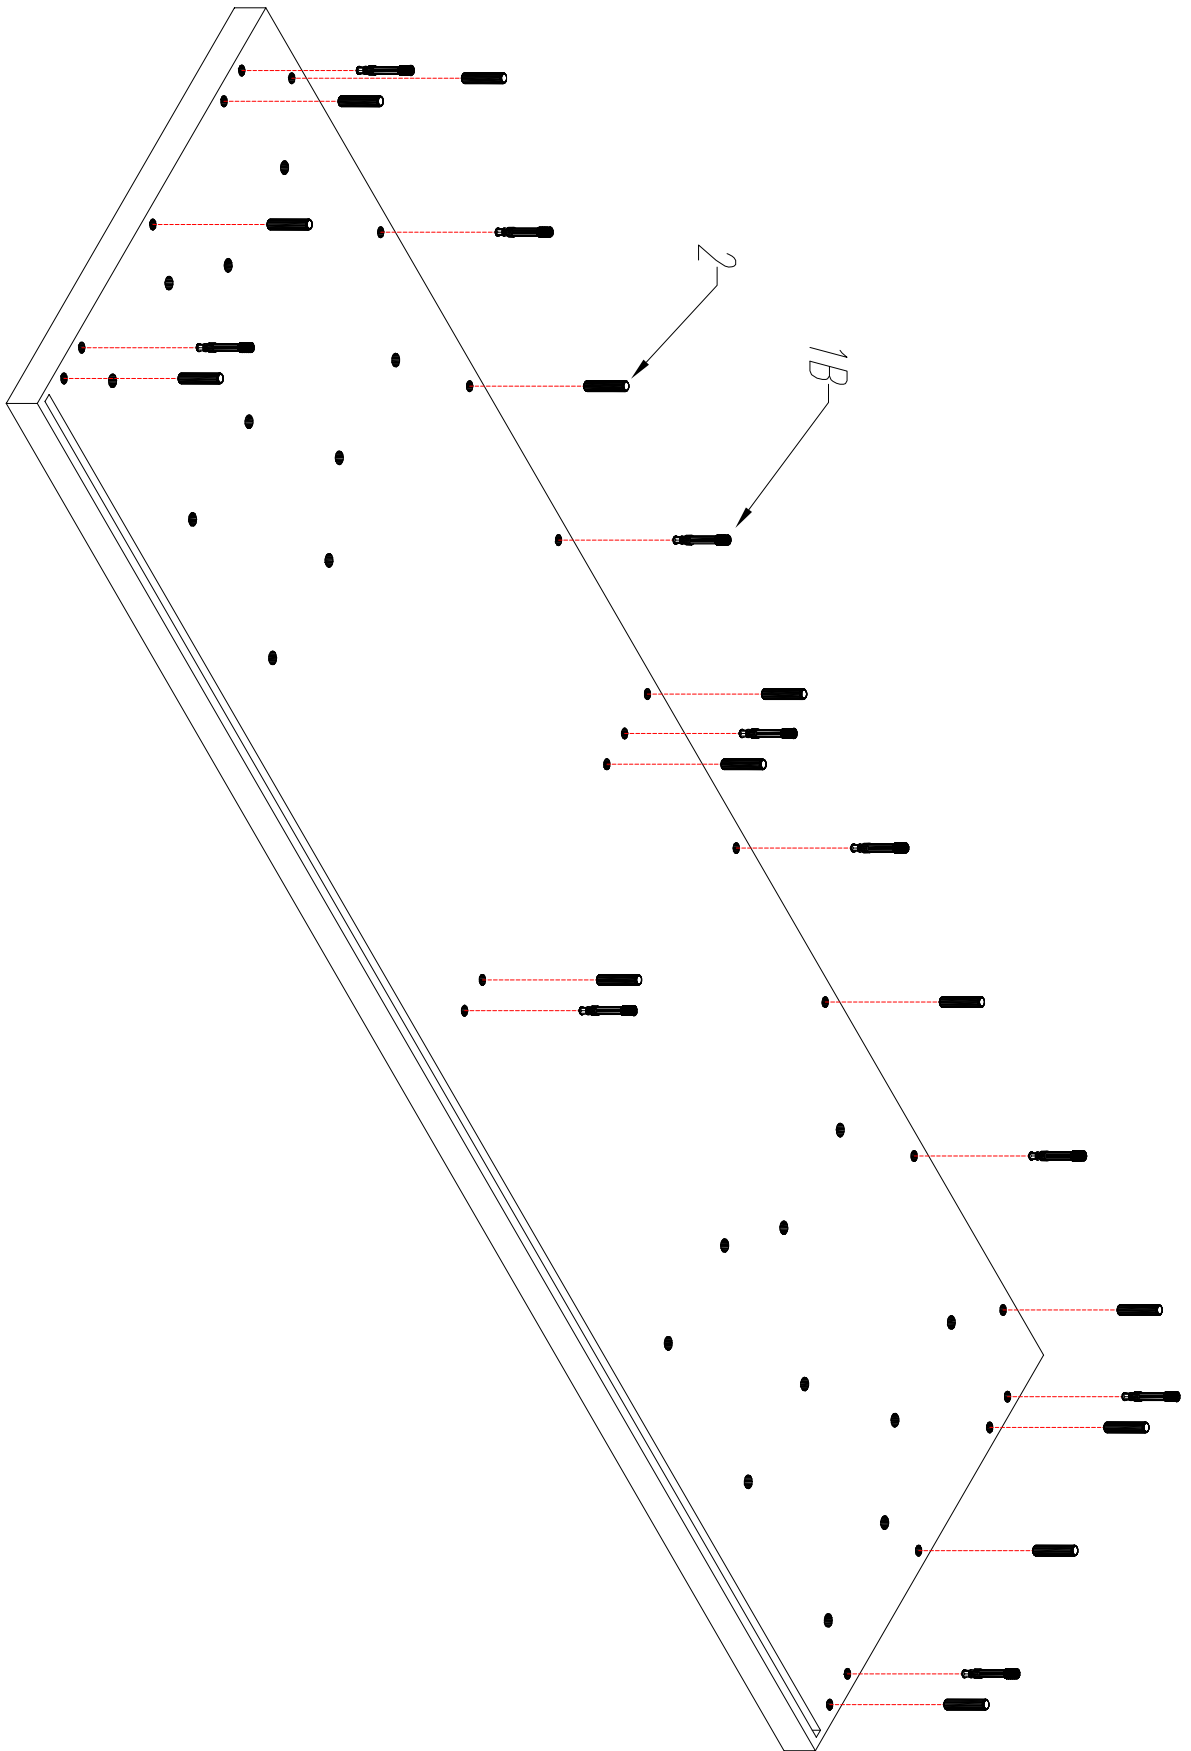

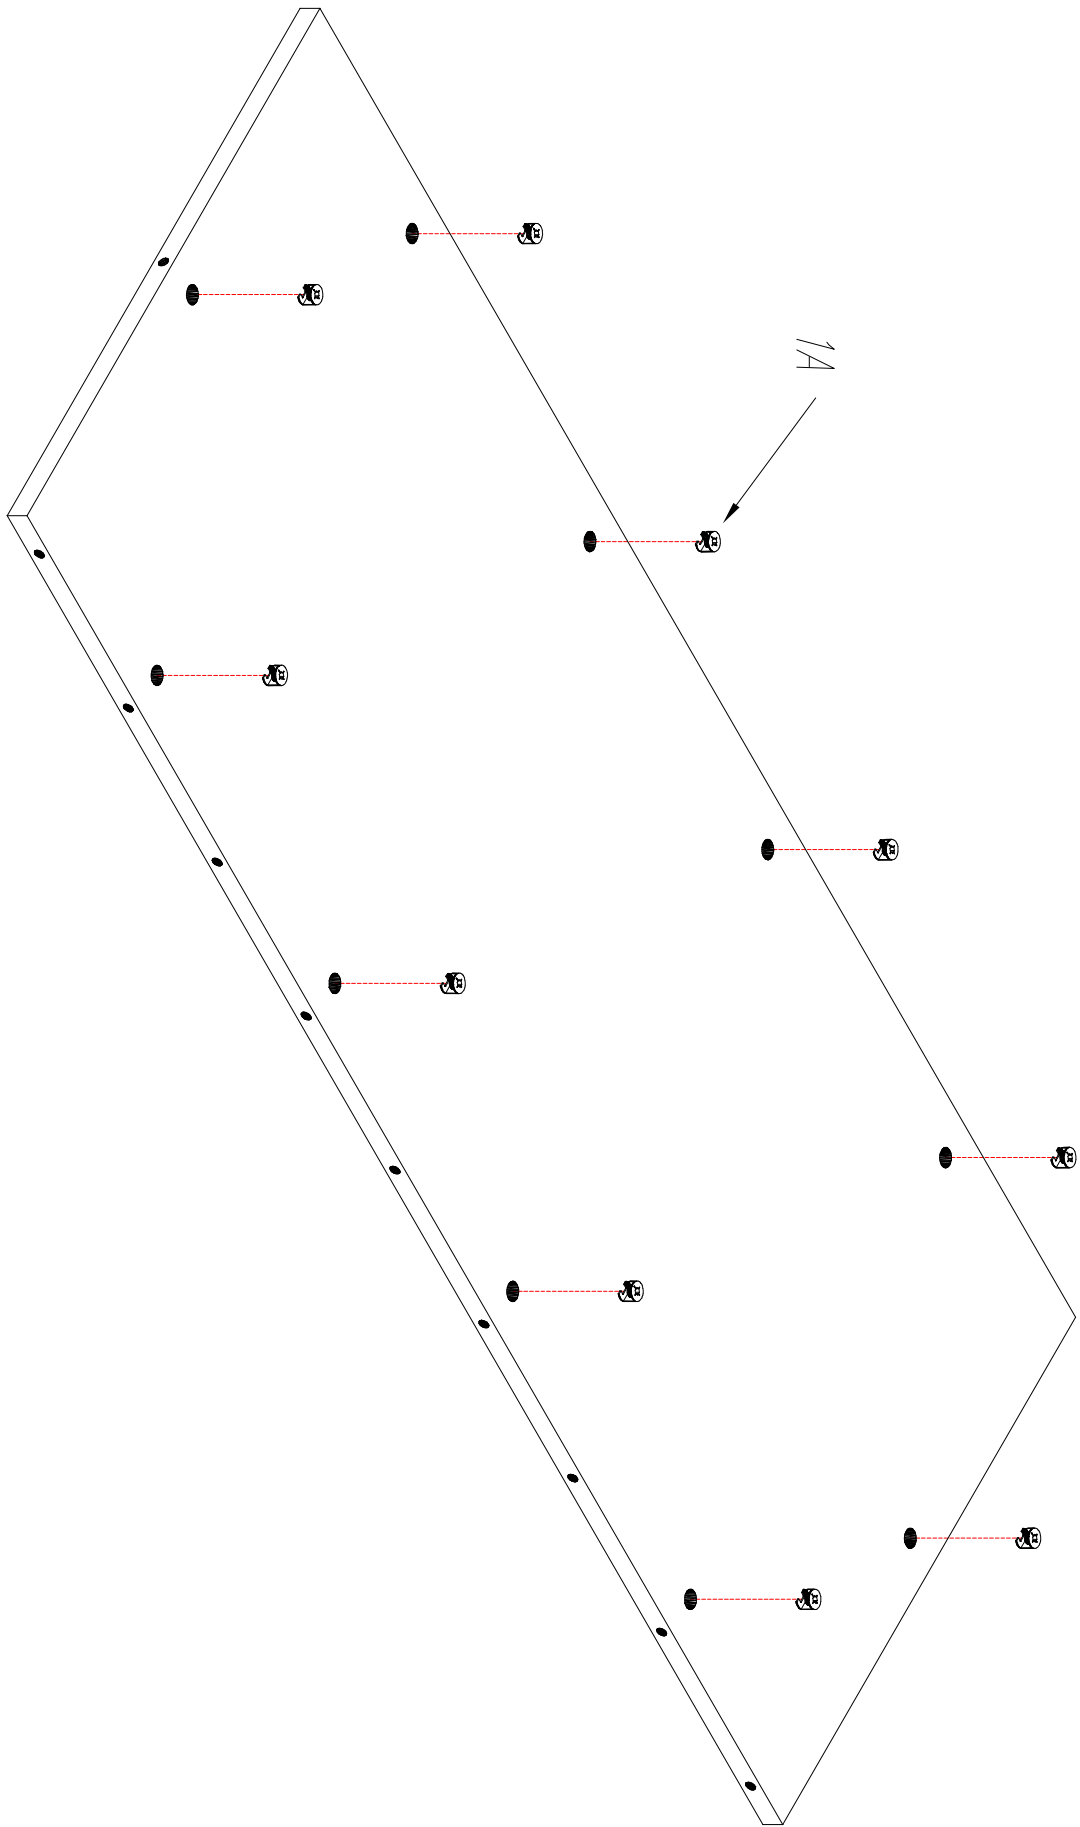


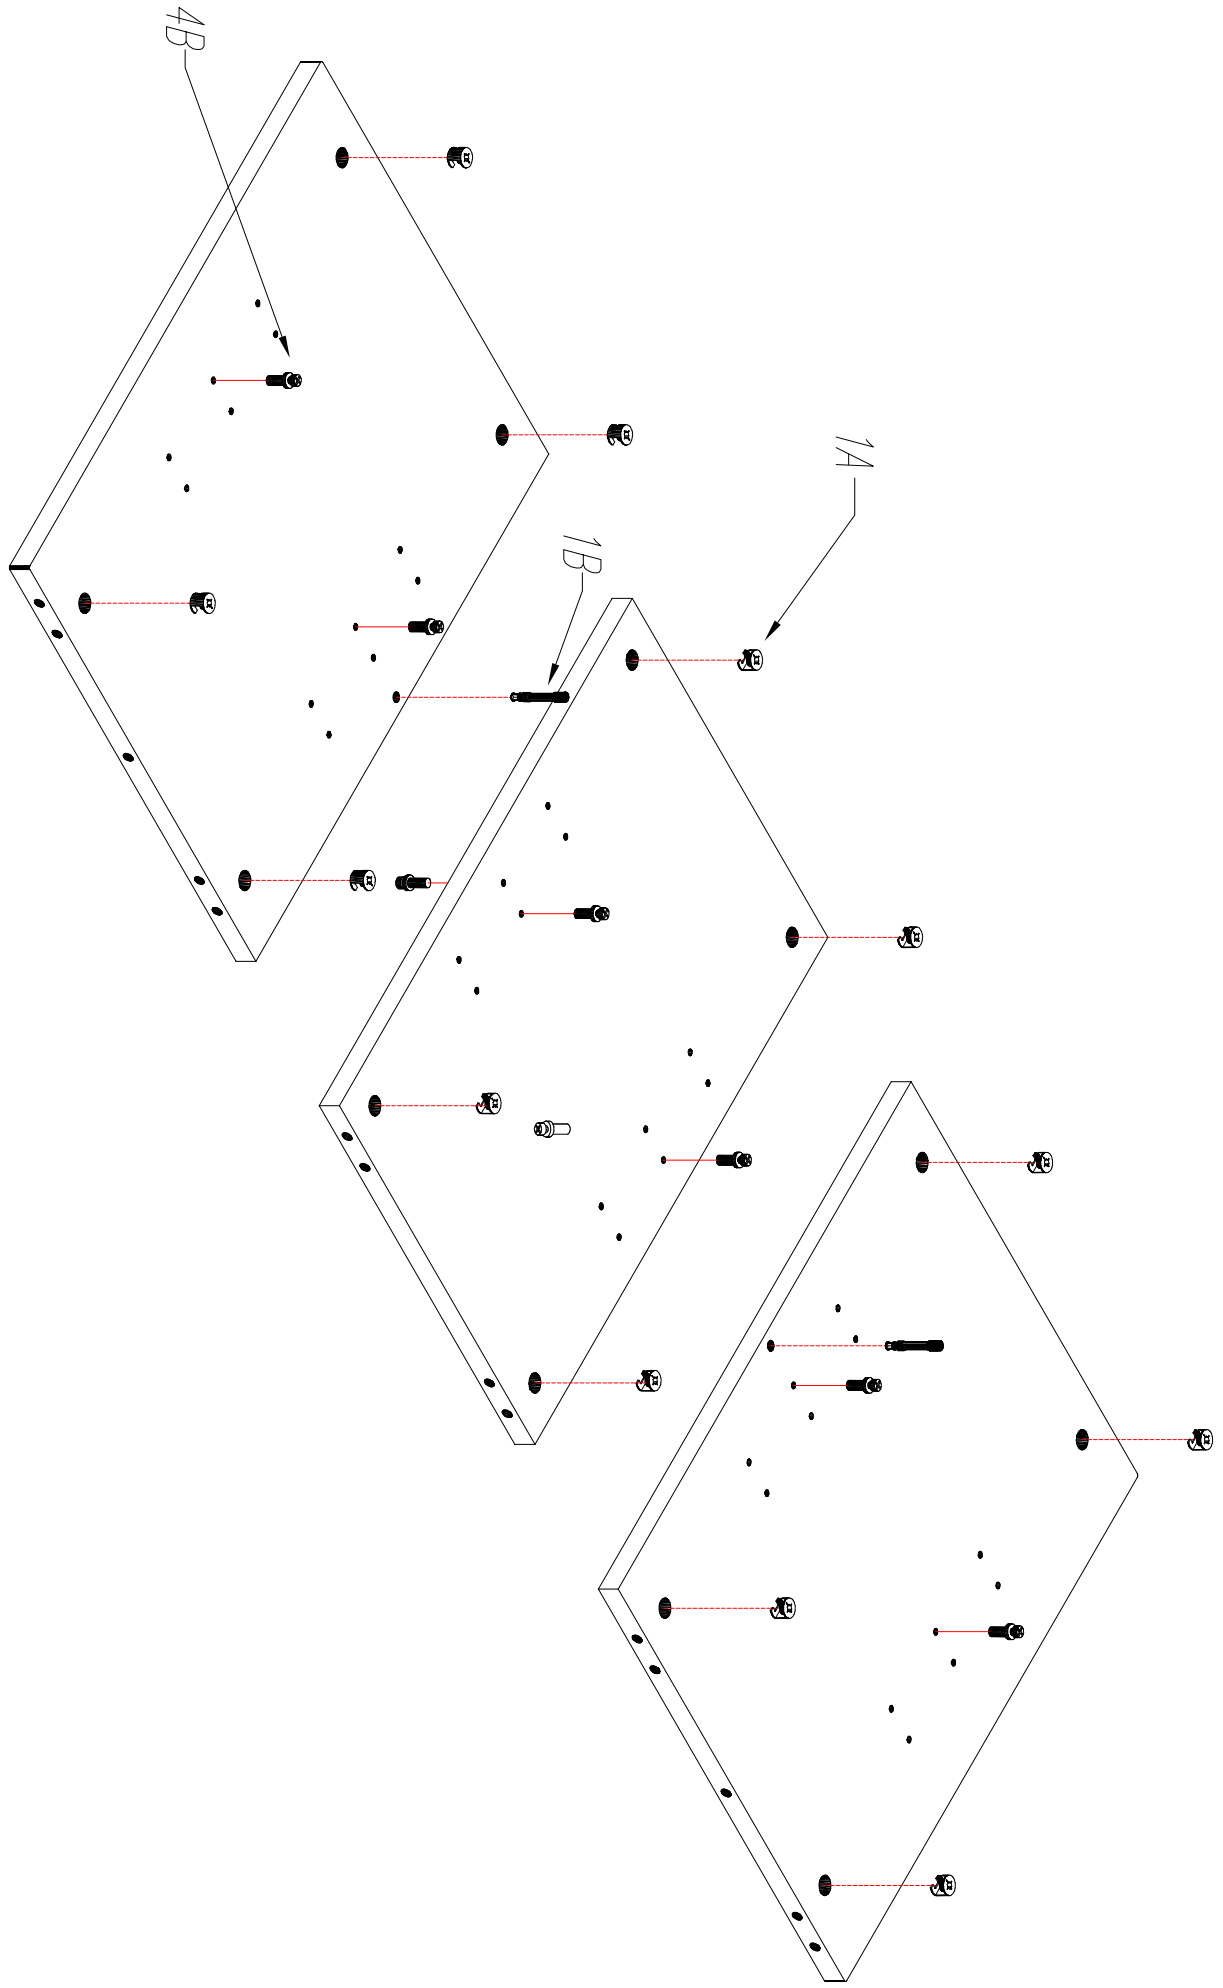


G

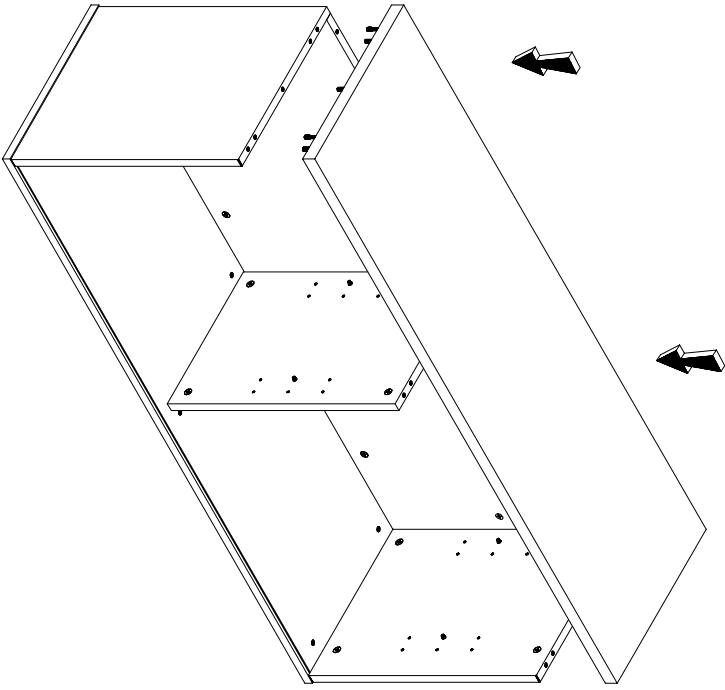


F



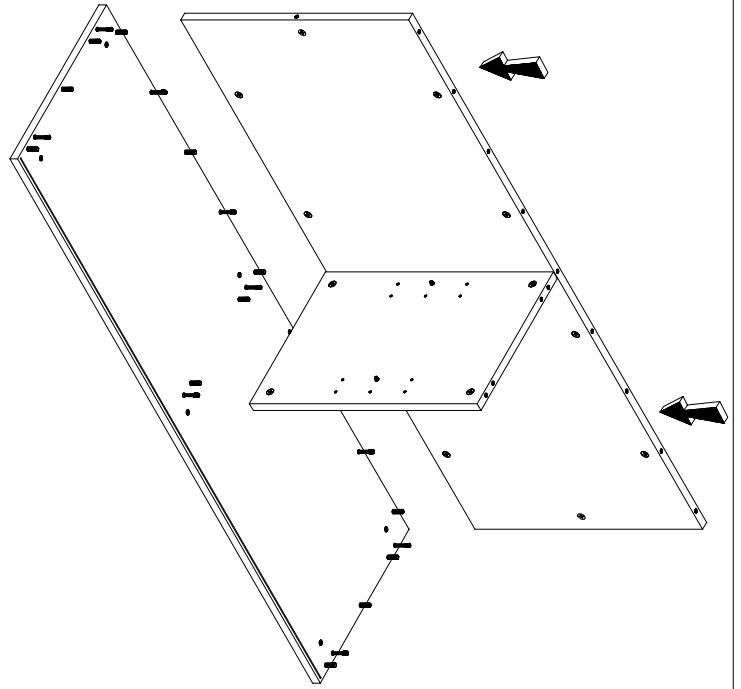


H

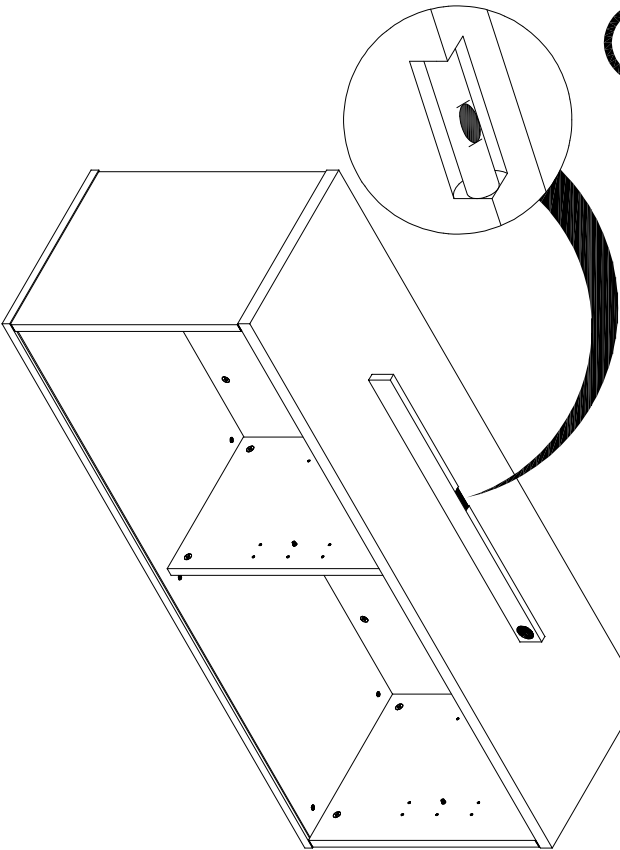


T


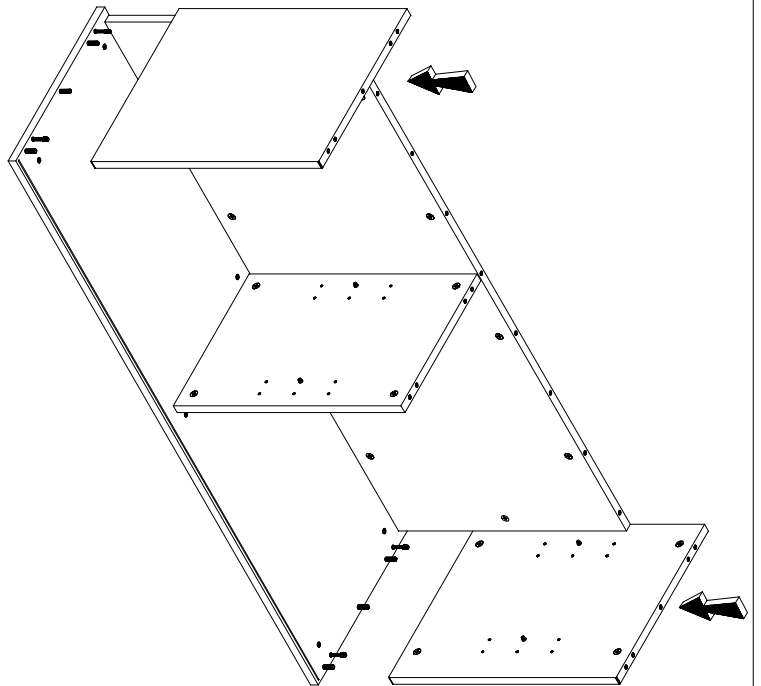


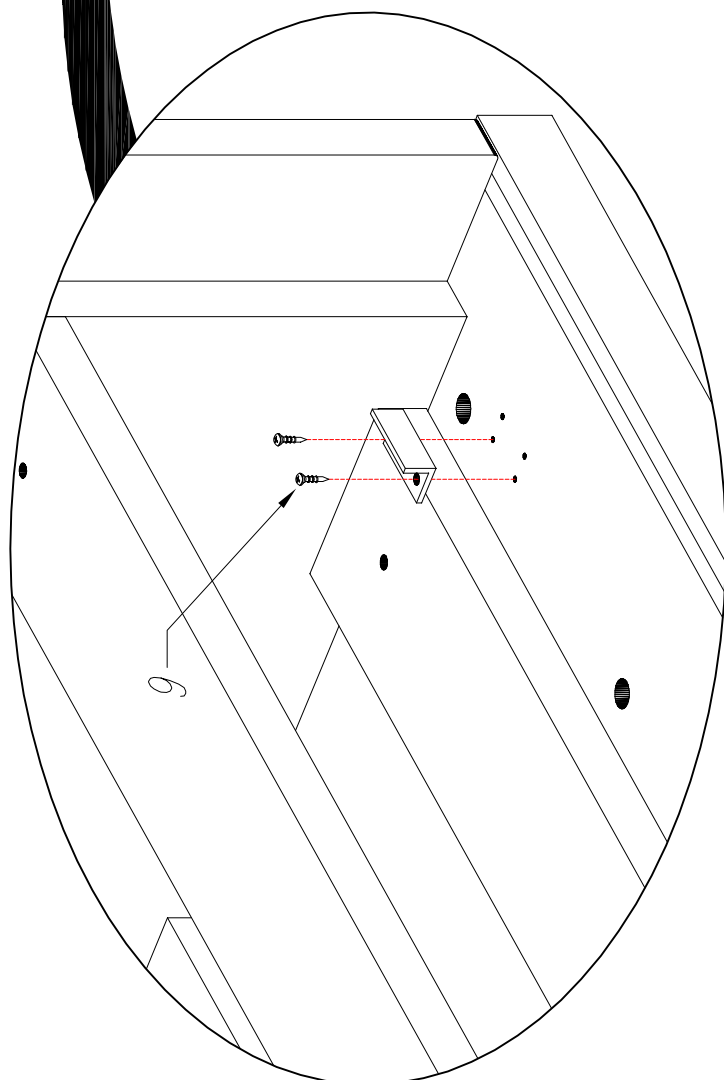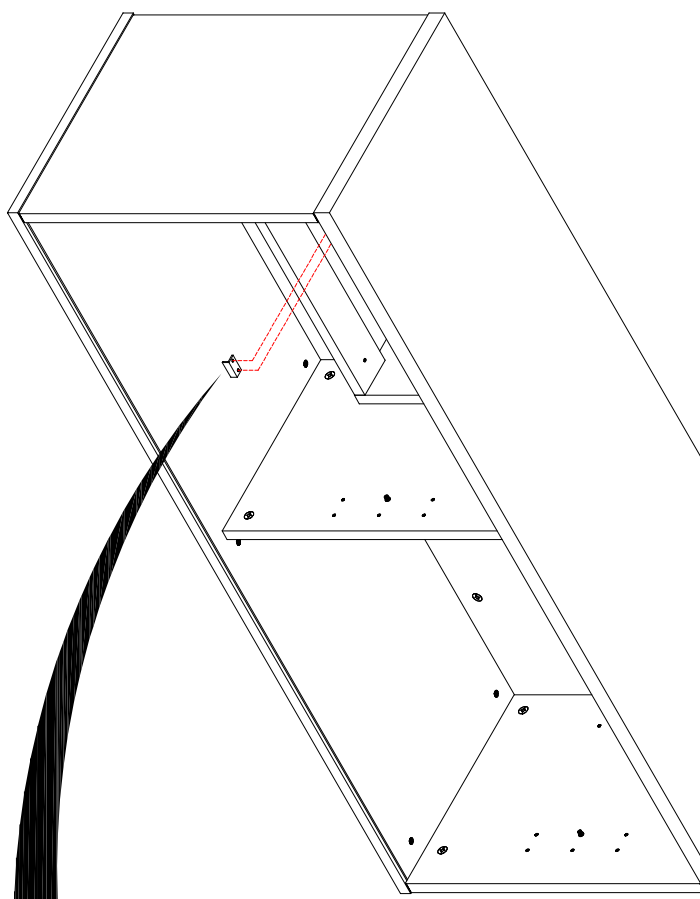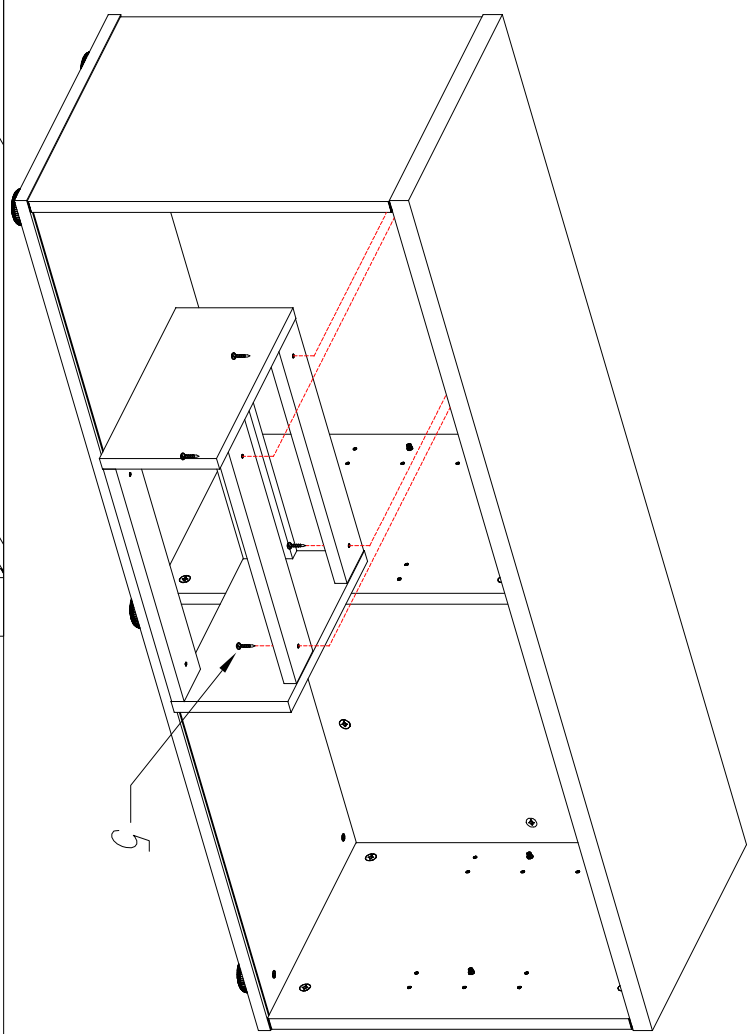


K

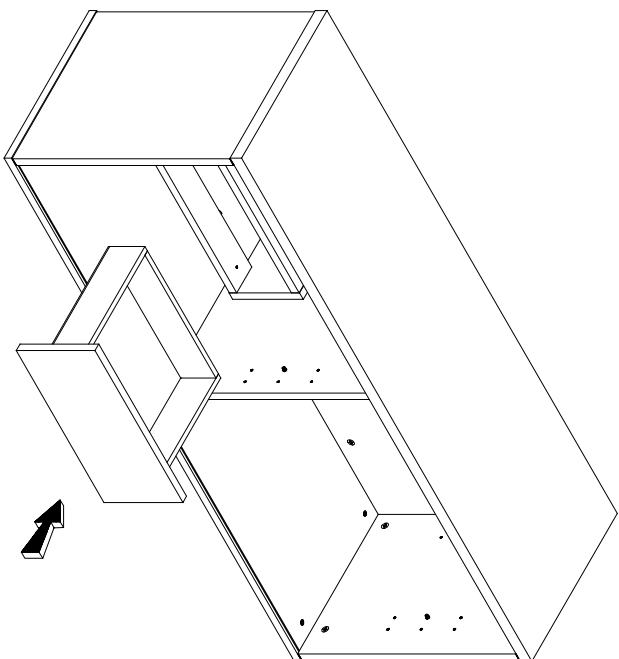


-Przykręć śruby z
małą siłą.
-Put the screws gently.
-Anschrauben die
Schrauben zöerlich.

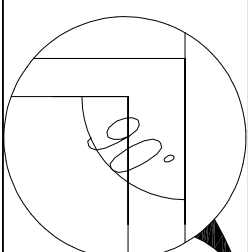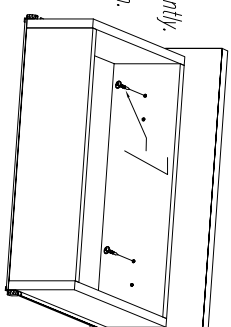



-Przykręć śruby z
dużą siłą.
-Put the screws strongly.
-Anschrauben die
Schrauben staerklich.




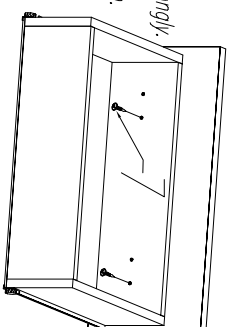



L

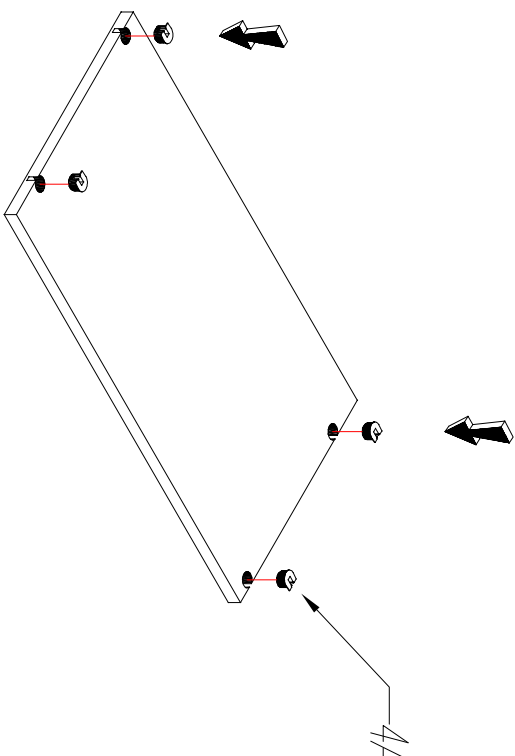



M

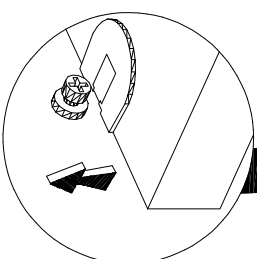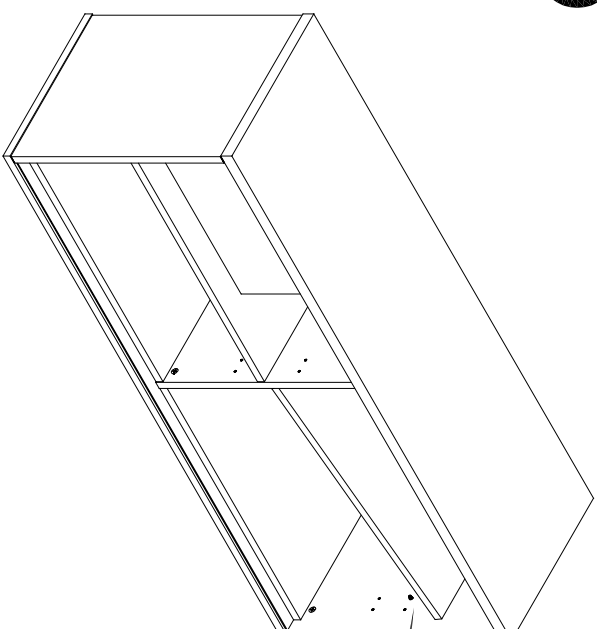

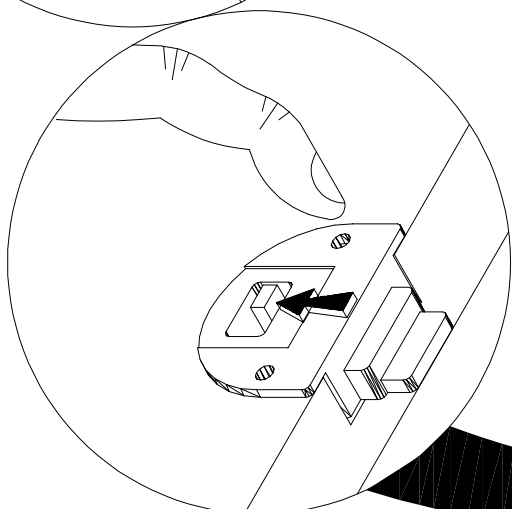
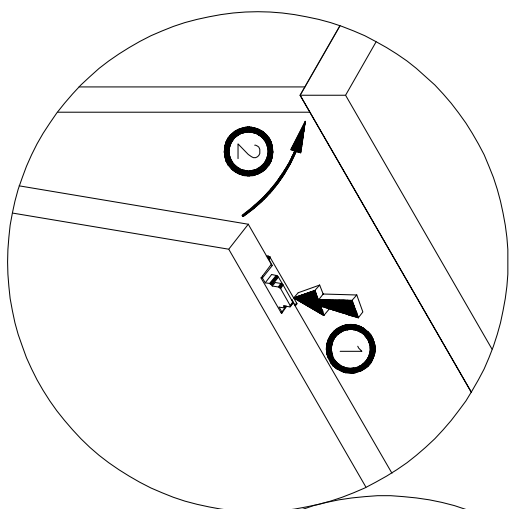
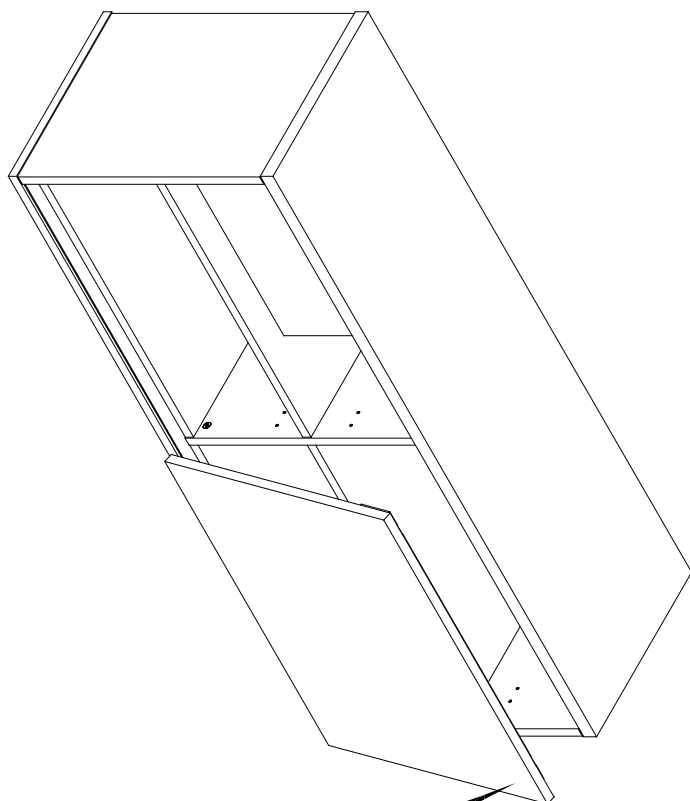
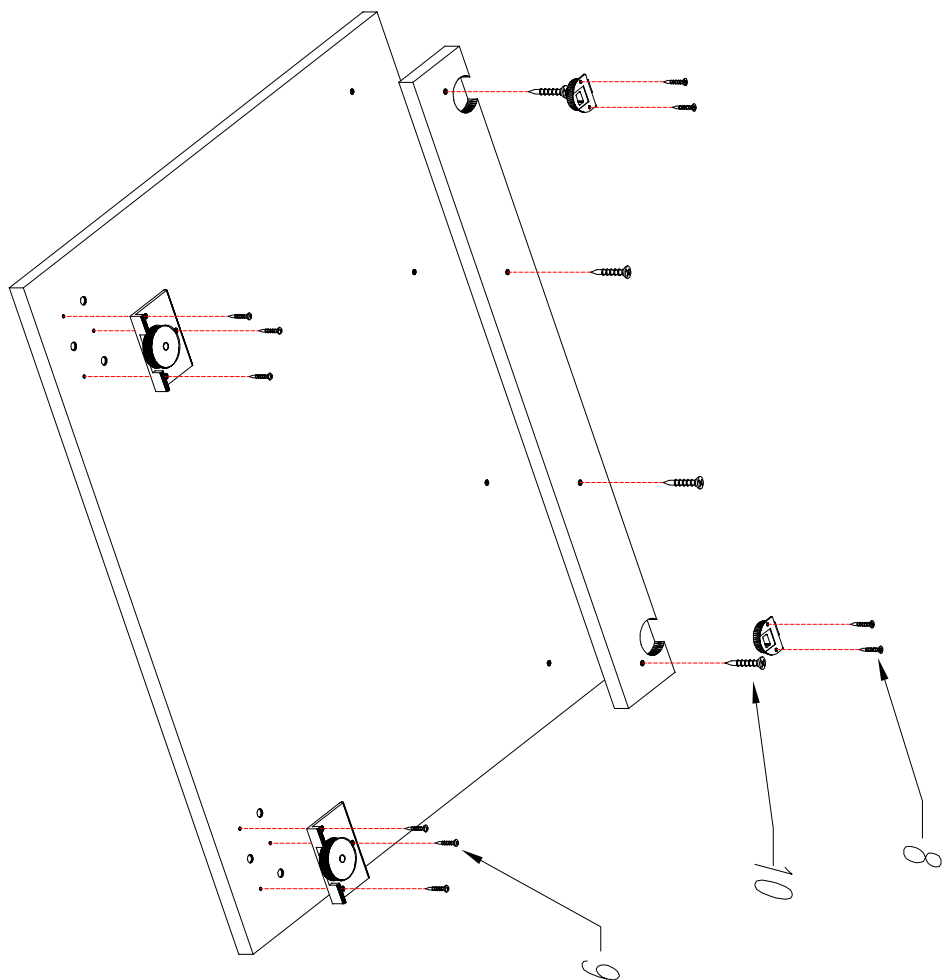





1		M6x20B
2		M6
3		M6

A

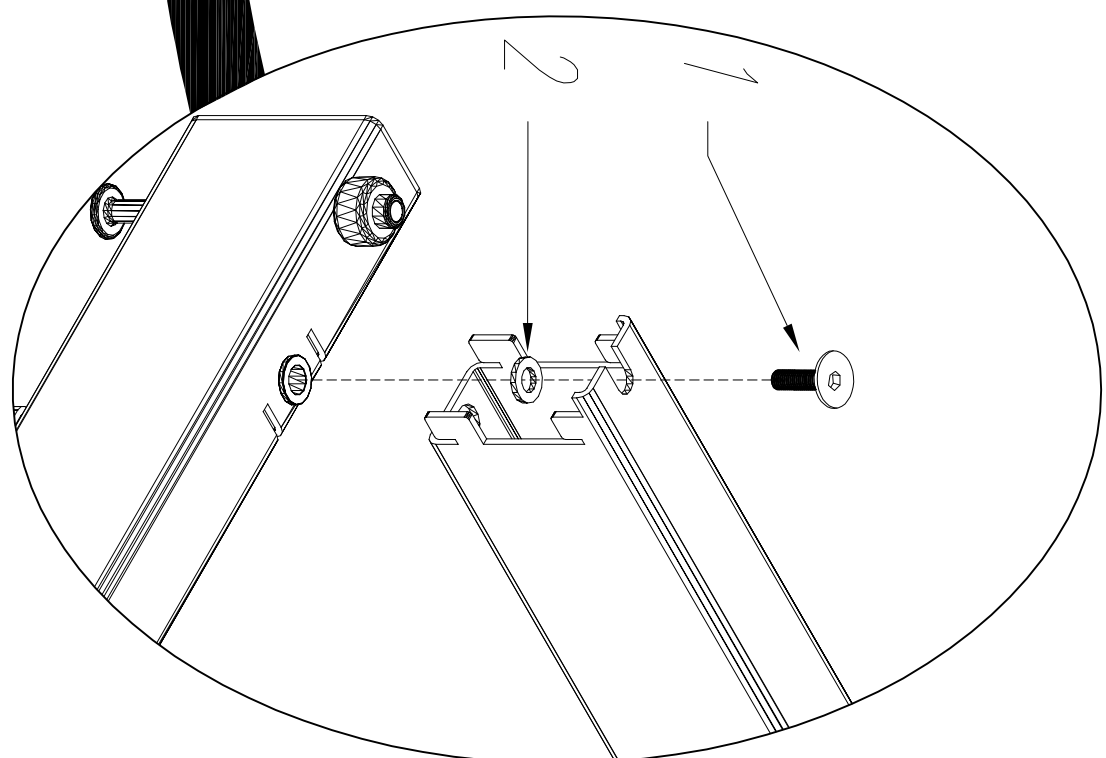




OGI

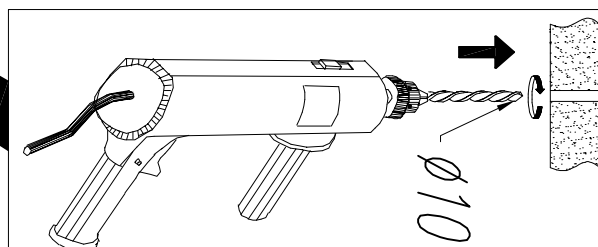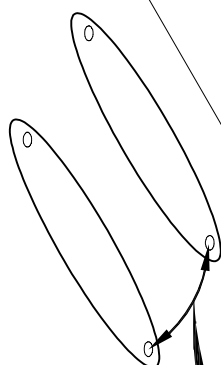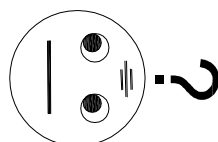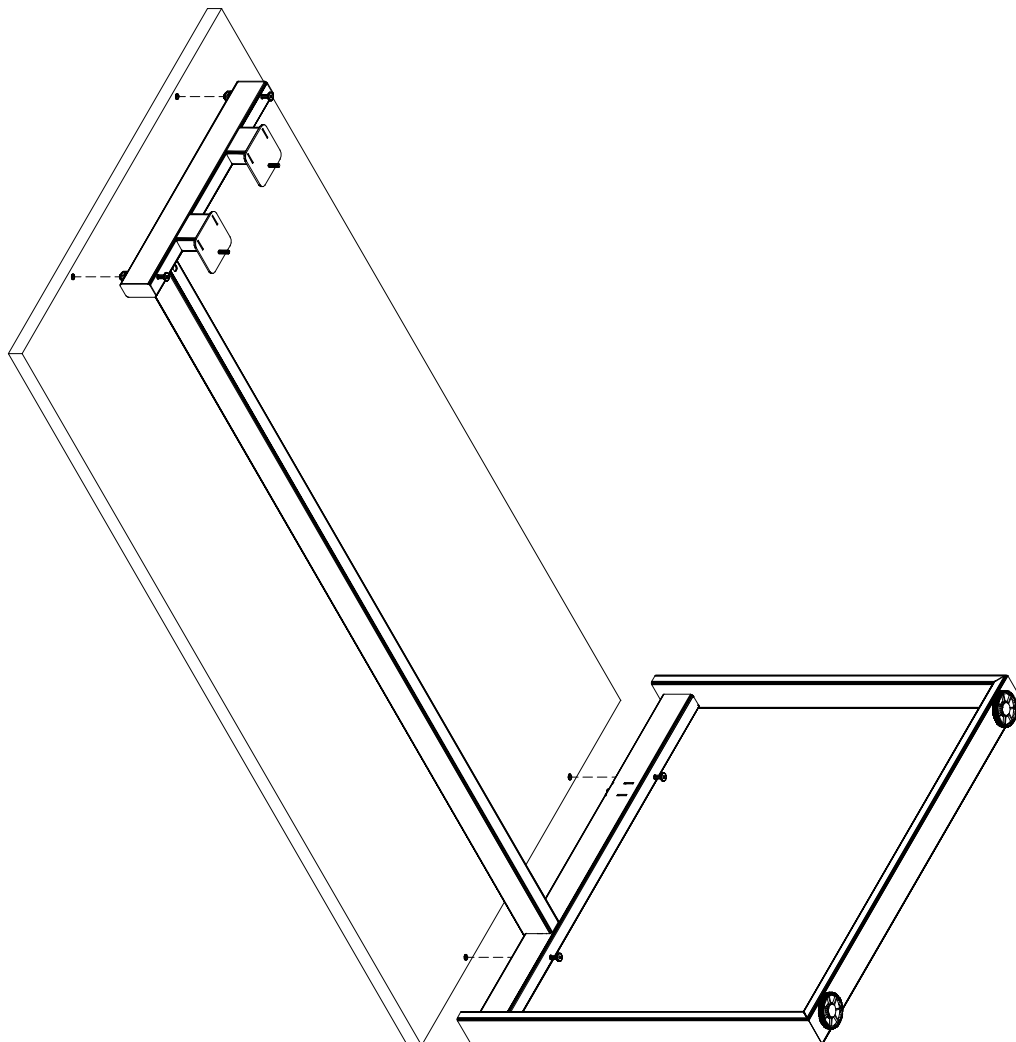

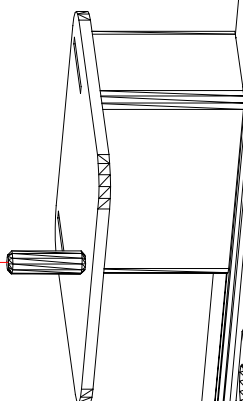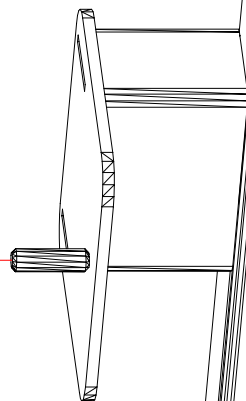


3




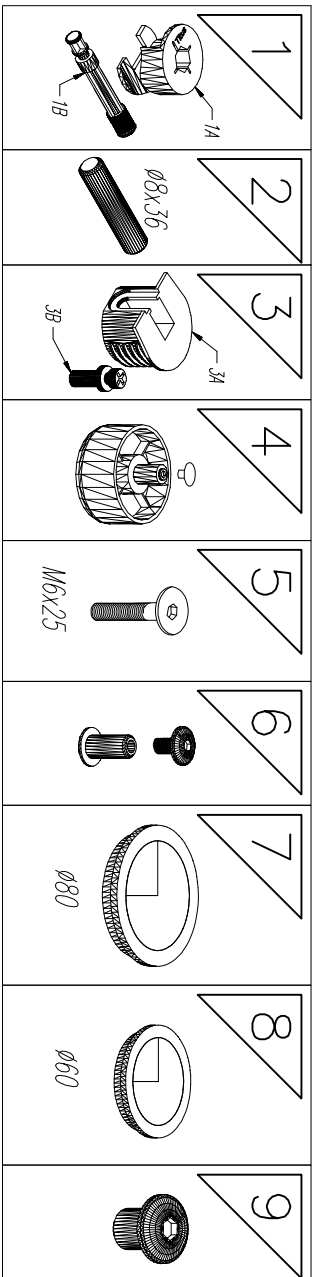


A12M

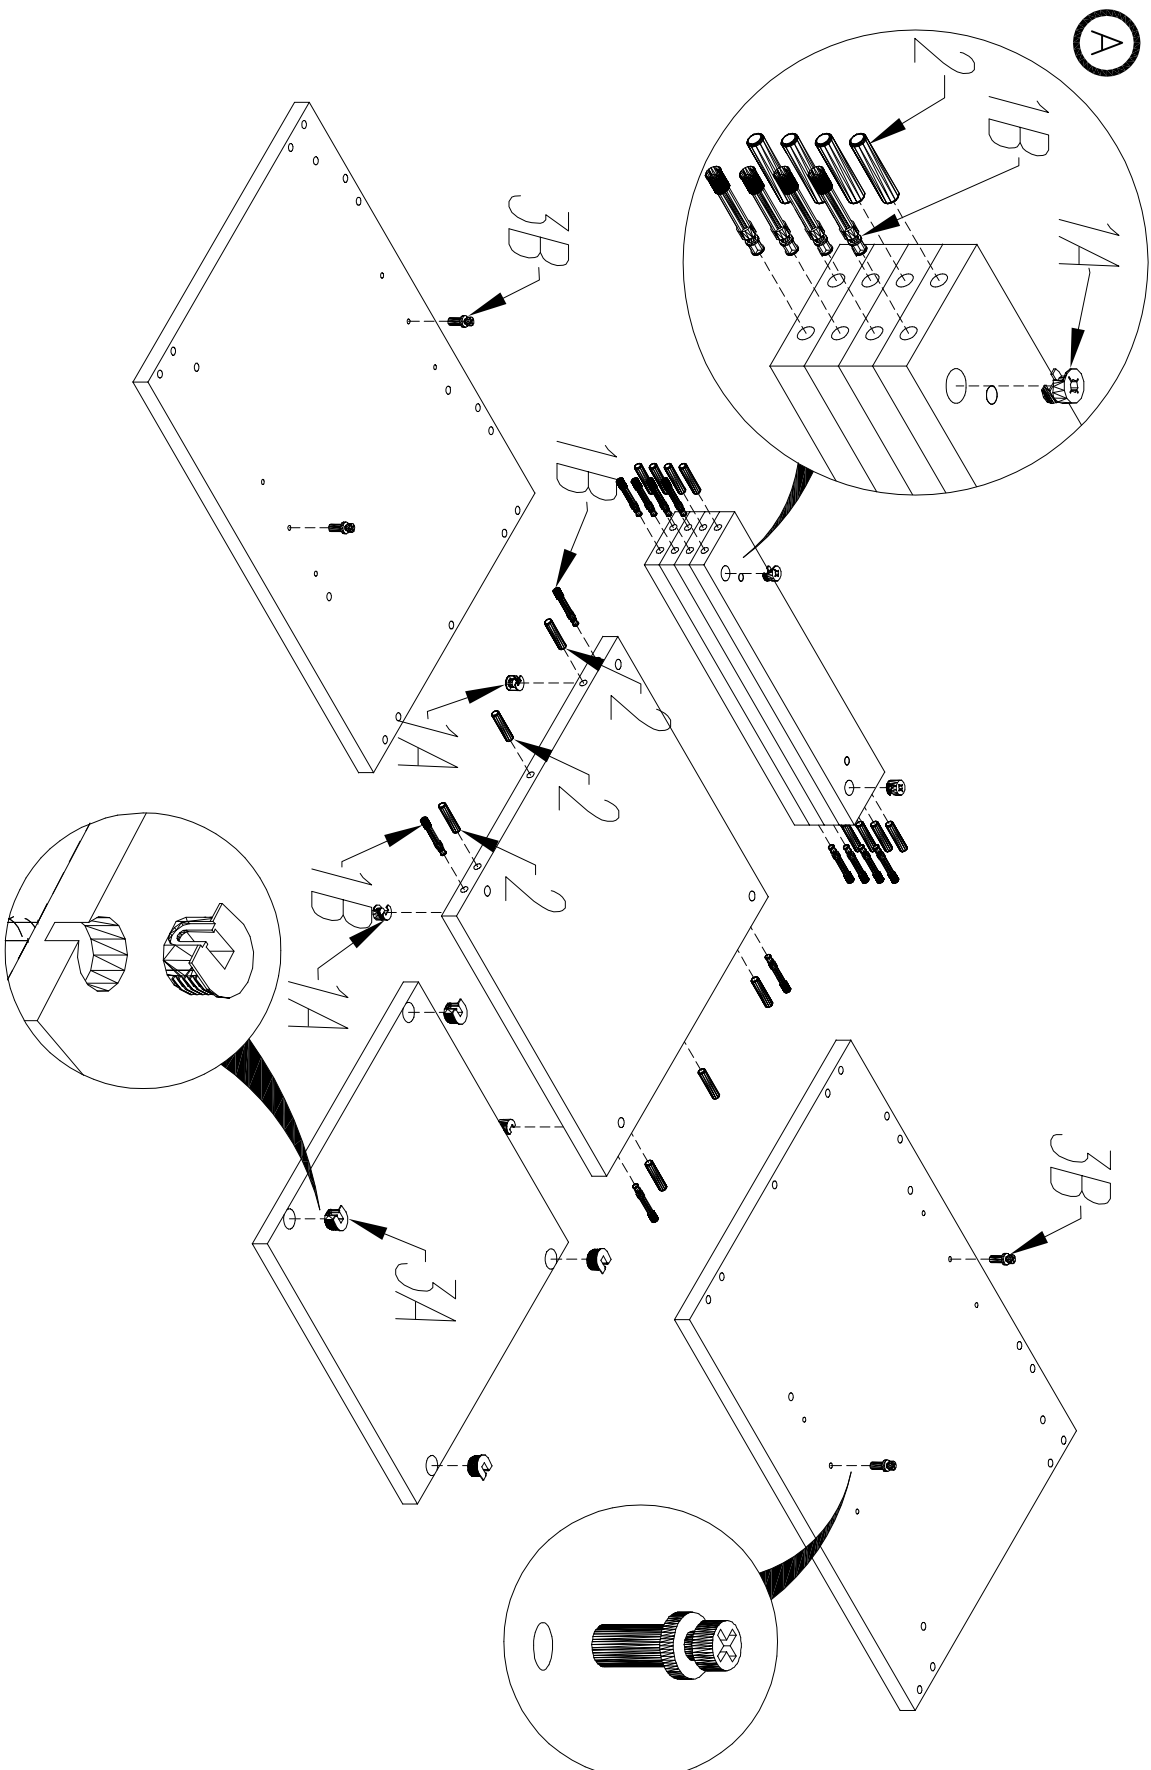


KOLENNOŚĆ, MONTAŻU
IMMOŠRODŌW I KOLKŌM.
THE FITTINGS SEQUENCE OF THE
GAMS AND DOWELS.
DIE MONTAGEERFOLGE VON
EXZENTERN UND DÜBELN.

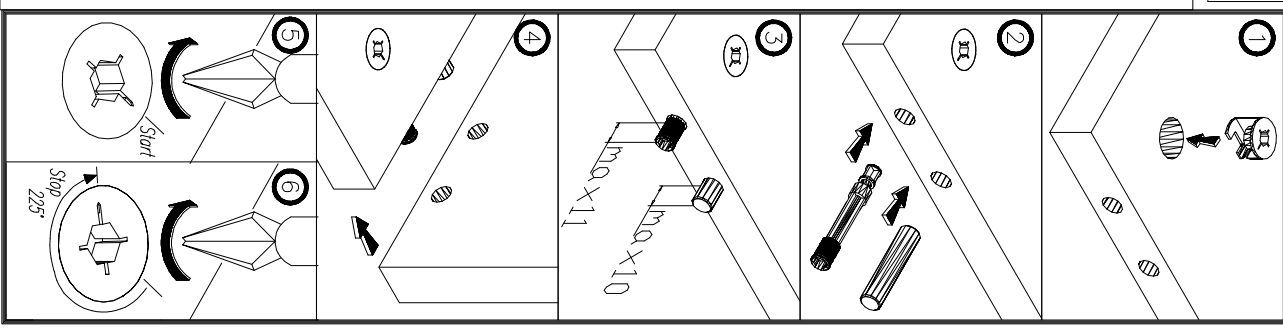

B

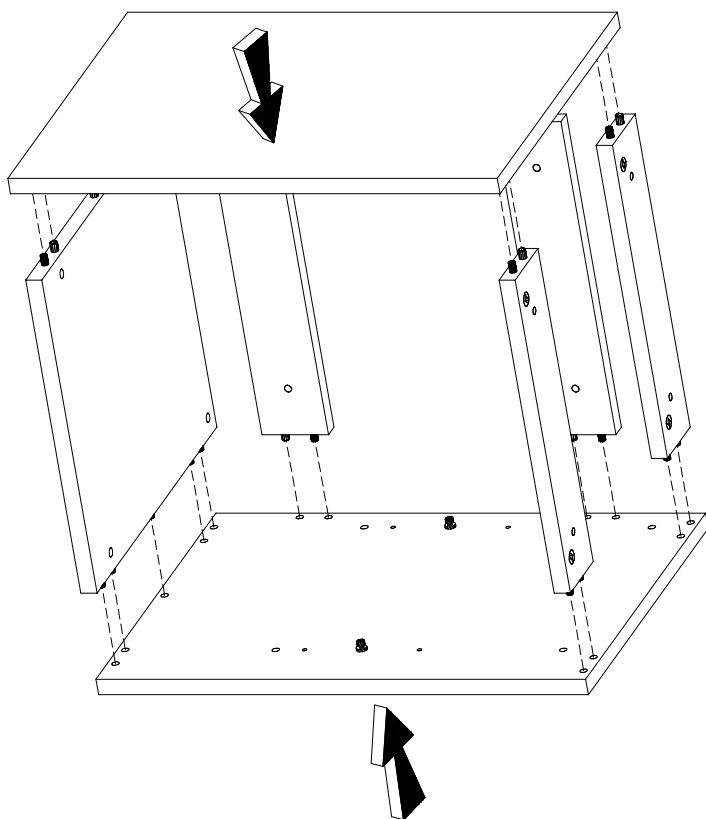

C

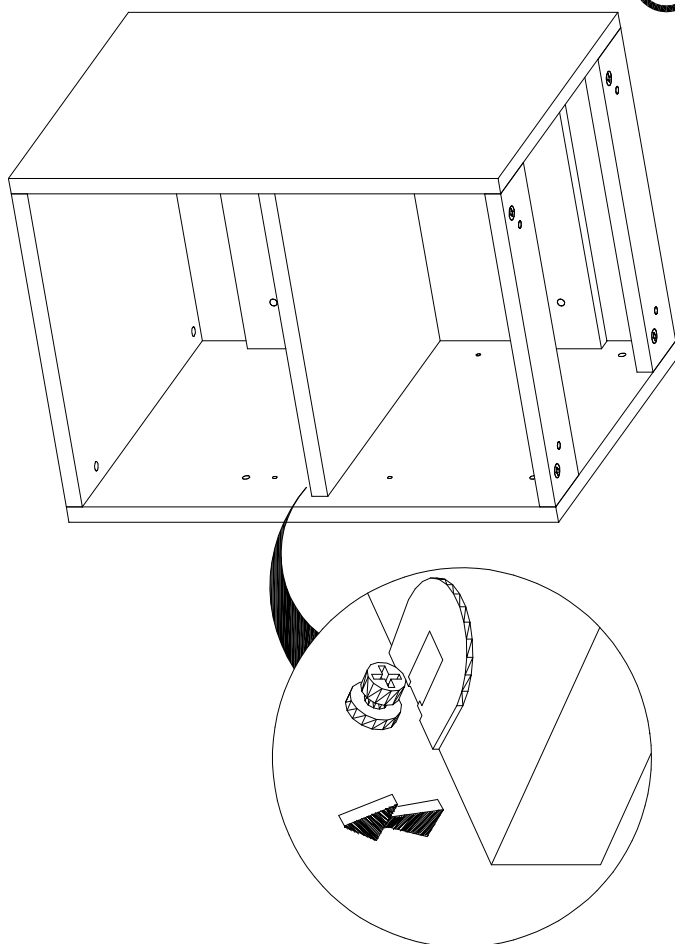

D

