


OGI SLIDE



BOX 1

BOX 2

BOX 3

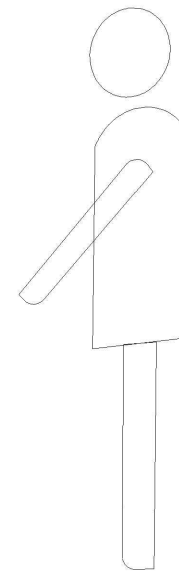





M6x68

4x

1



M6x10

2x

2



4x

3



2x

4




3

5



OGI Y

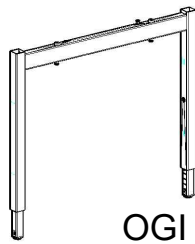


OGI Y




OGI Q



OGI M

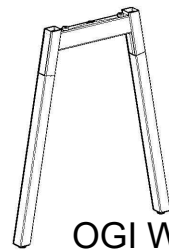






OGI W


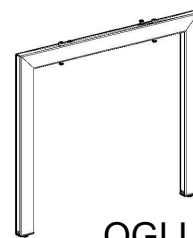


OGI U




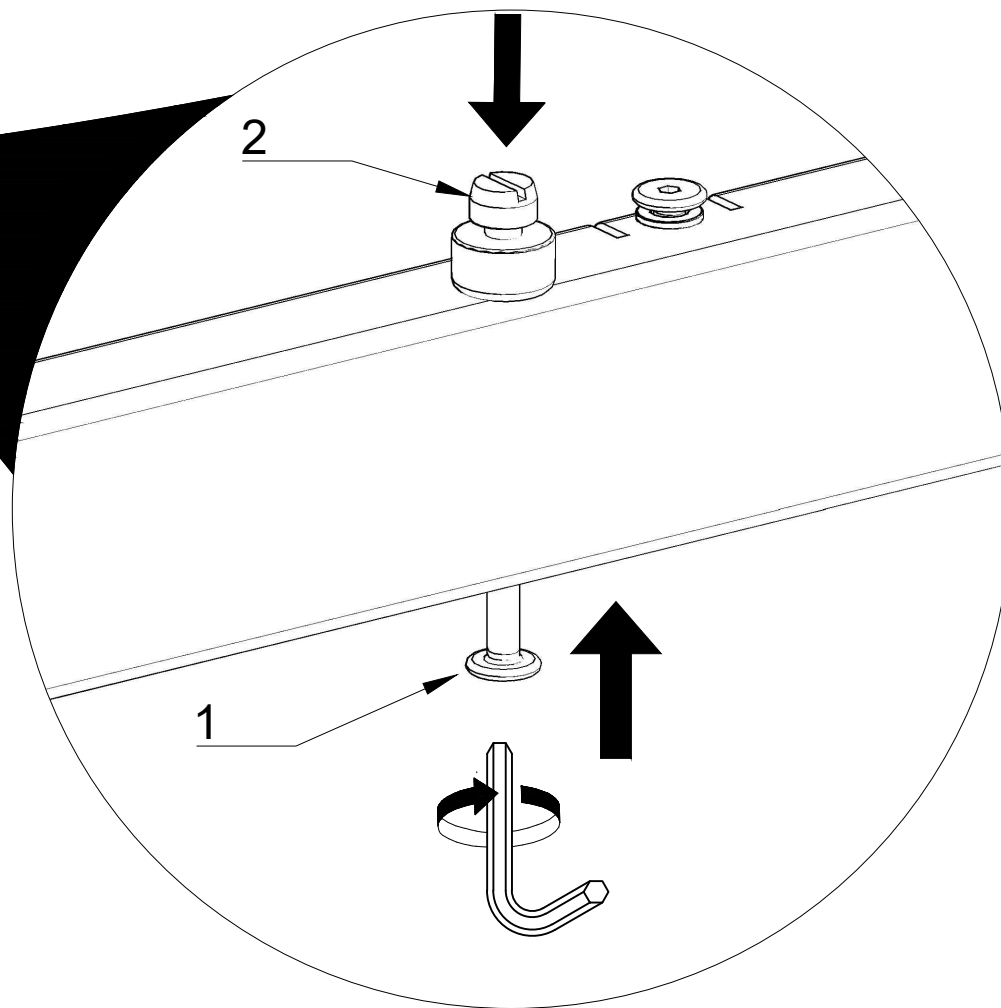

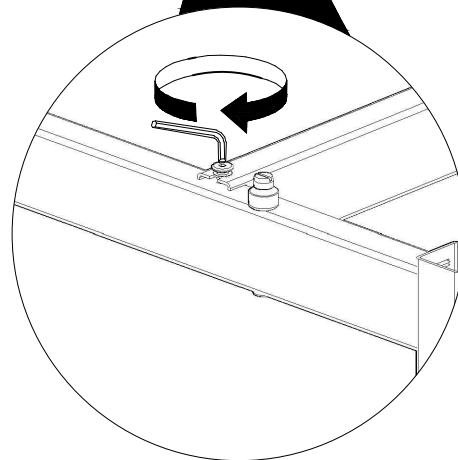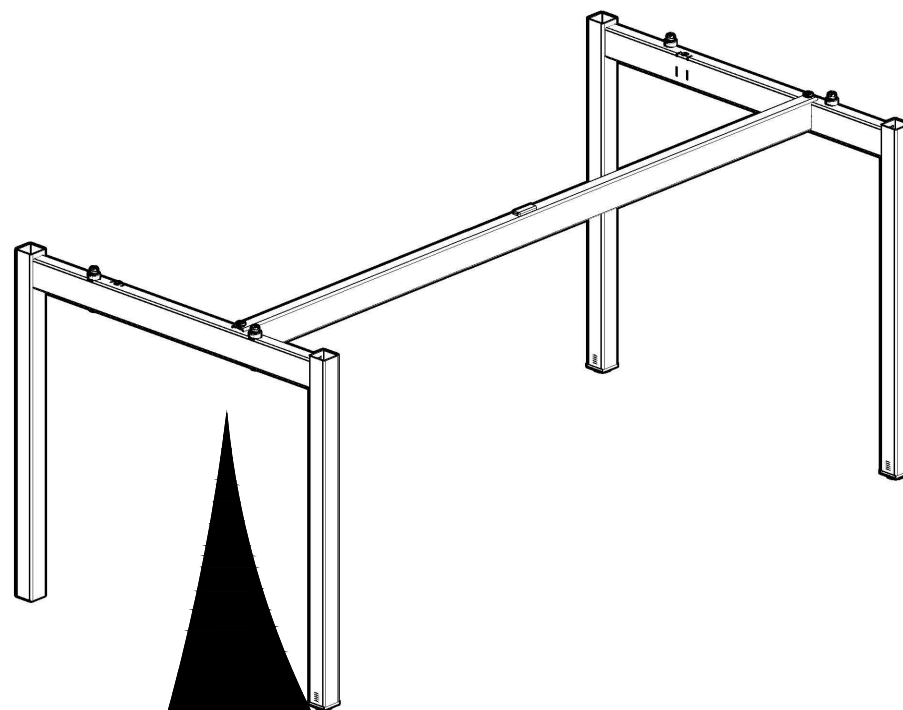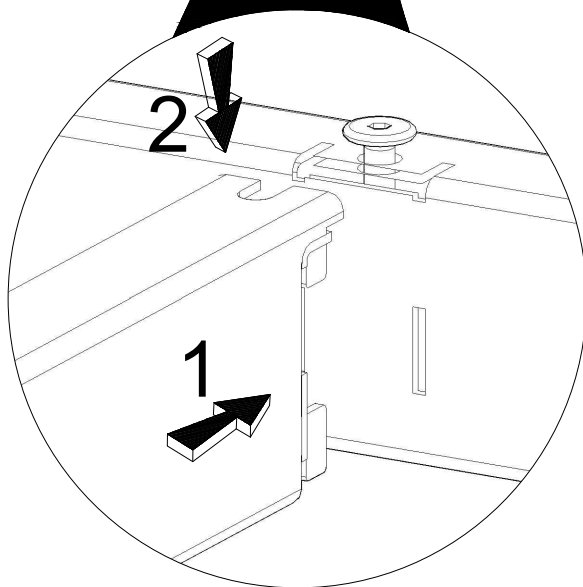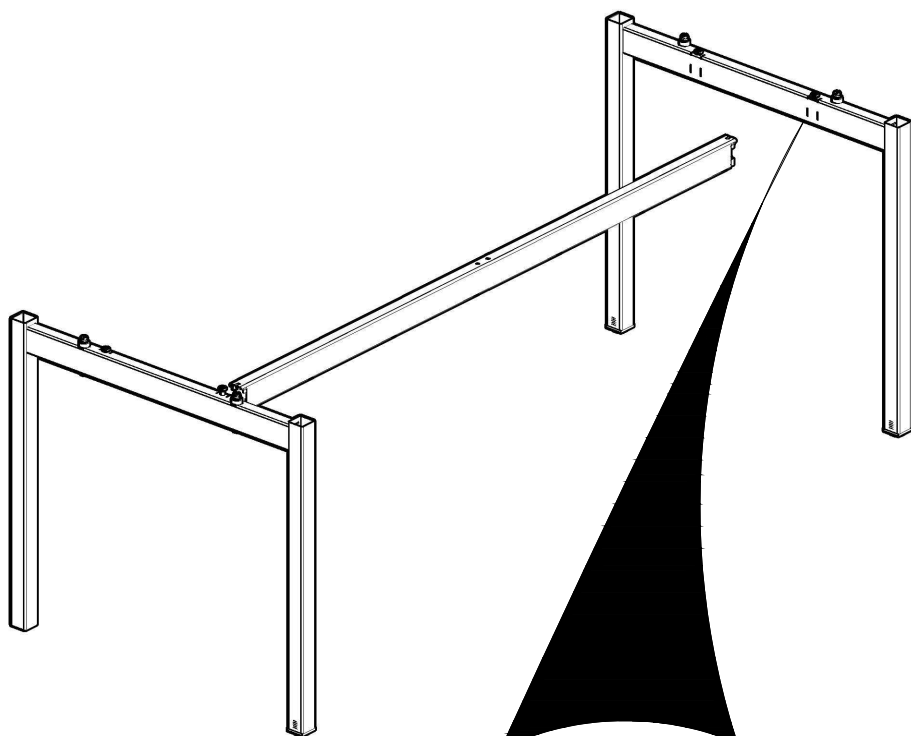

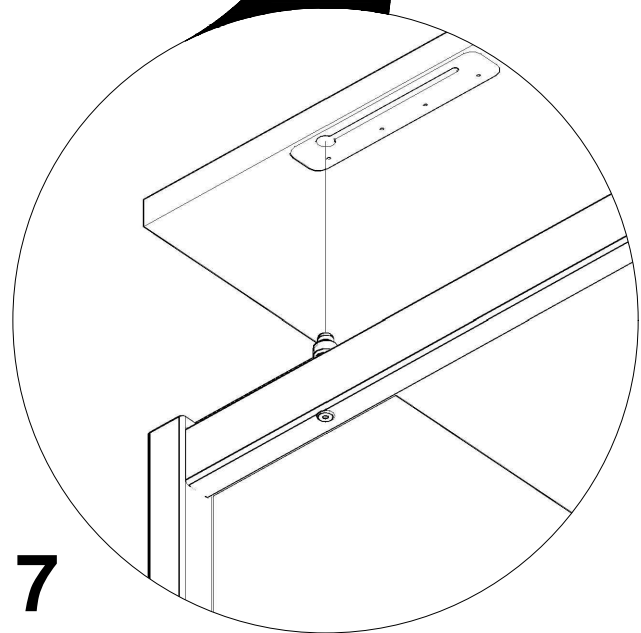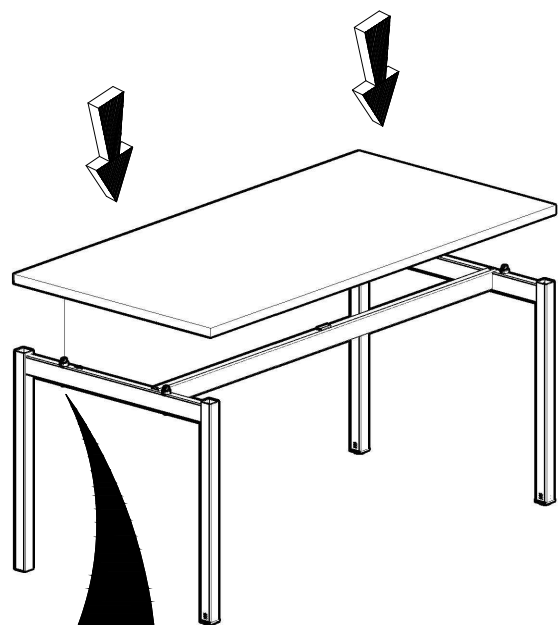


7

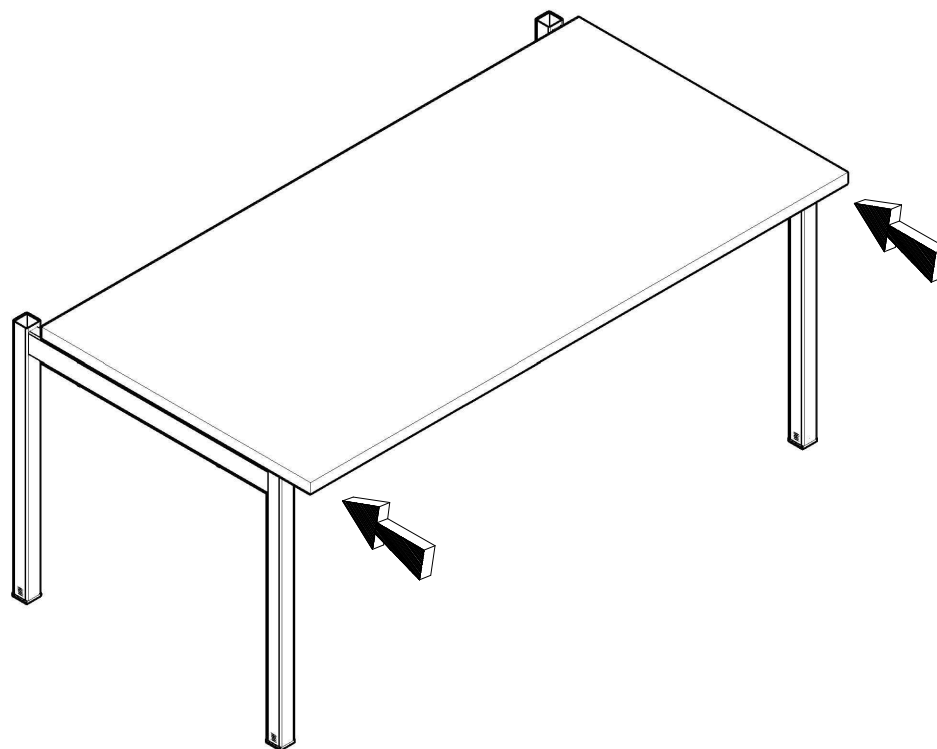



OGI SLIDE







1



2



3



4



3



5




OGI Y



OGI Y




OGI Q

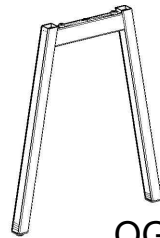

OGI M






OGI W


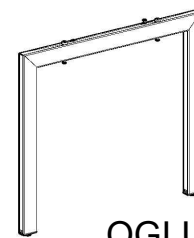


OGI U




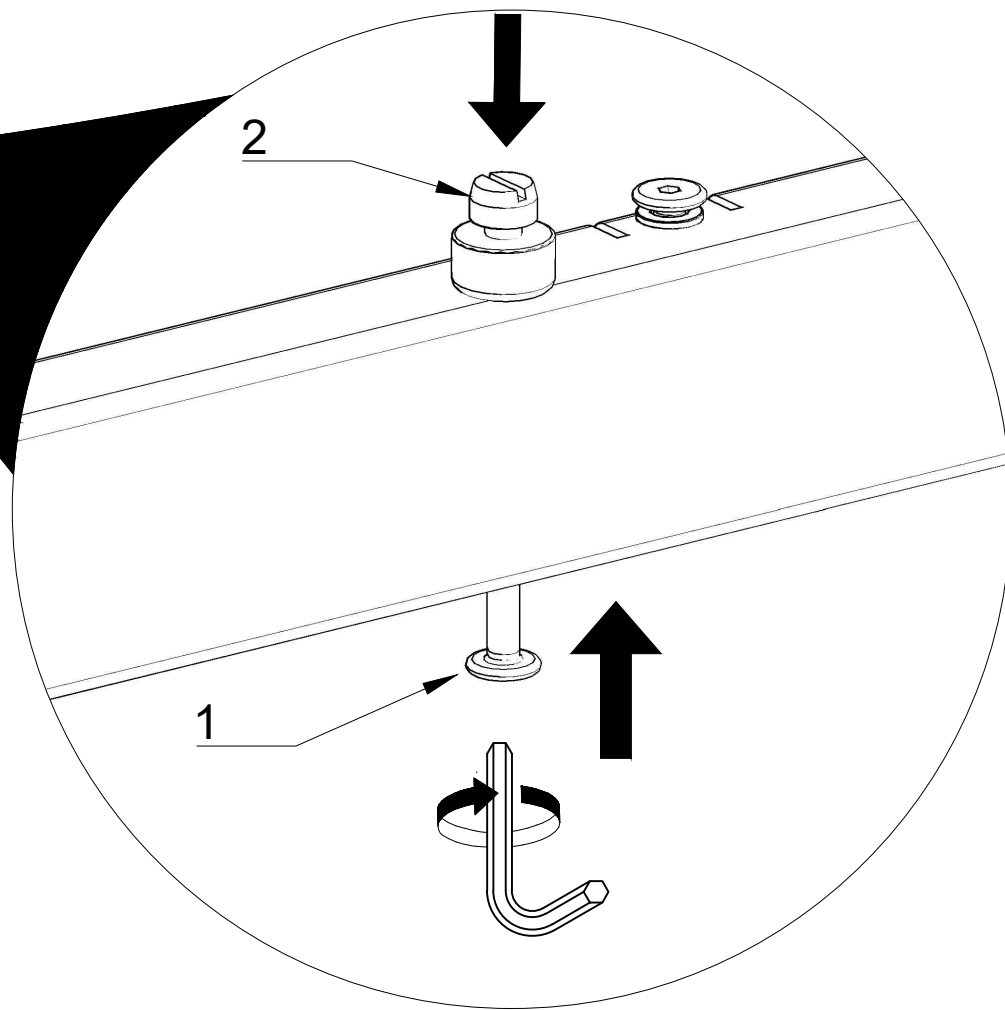

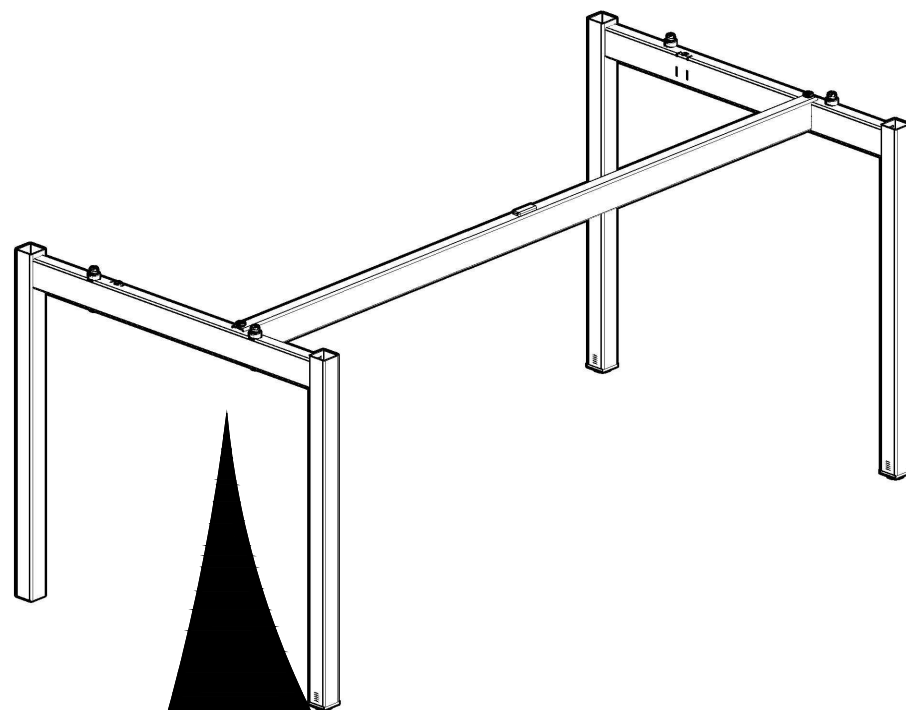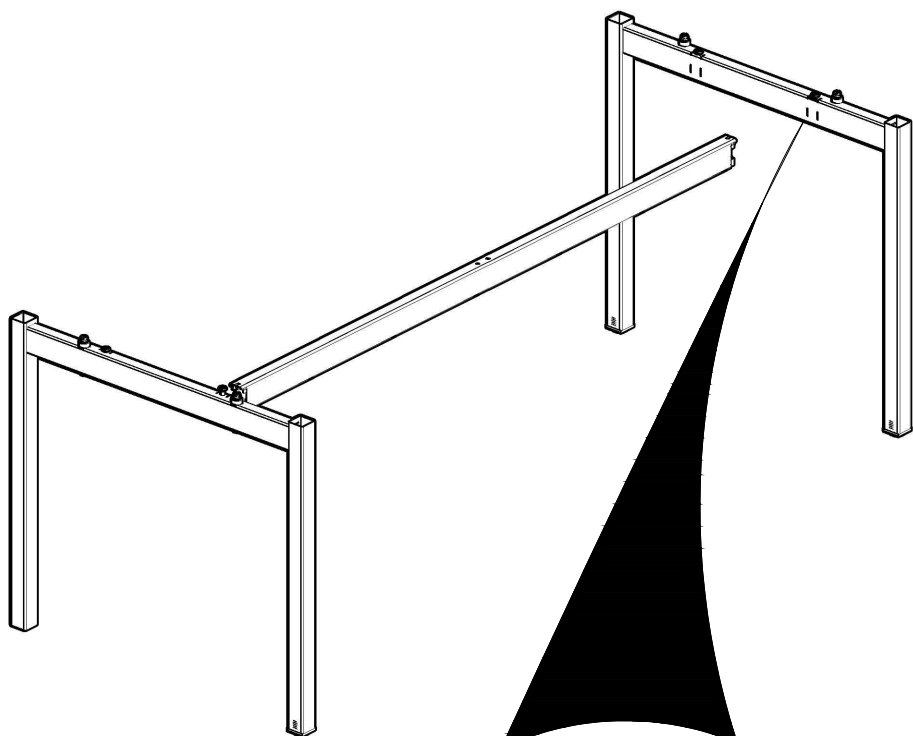

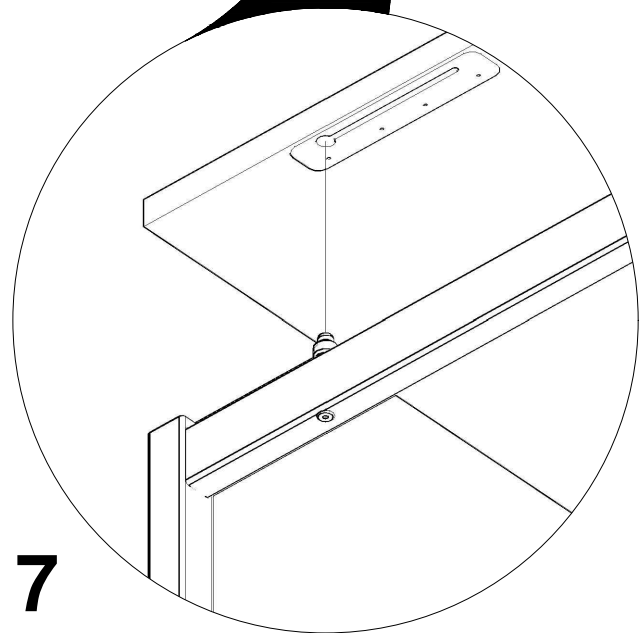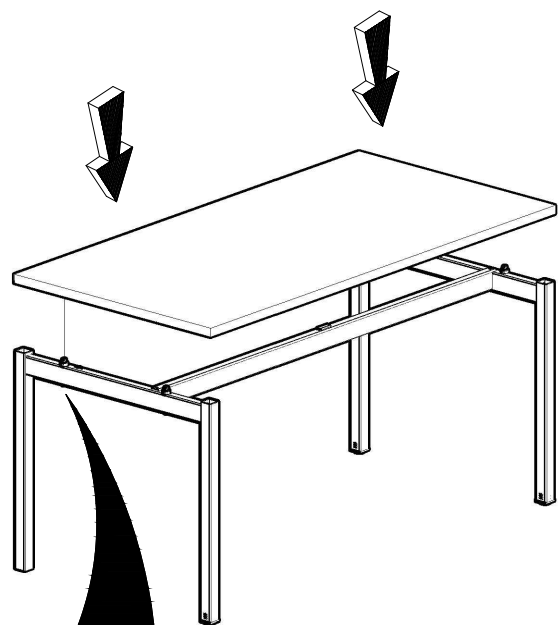


7

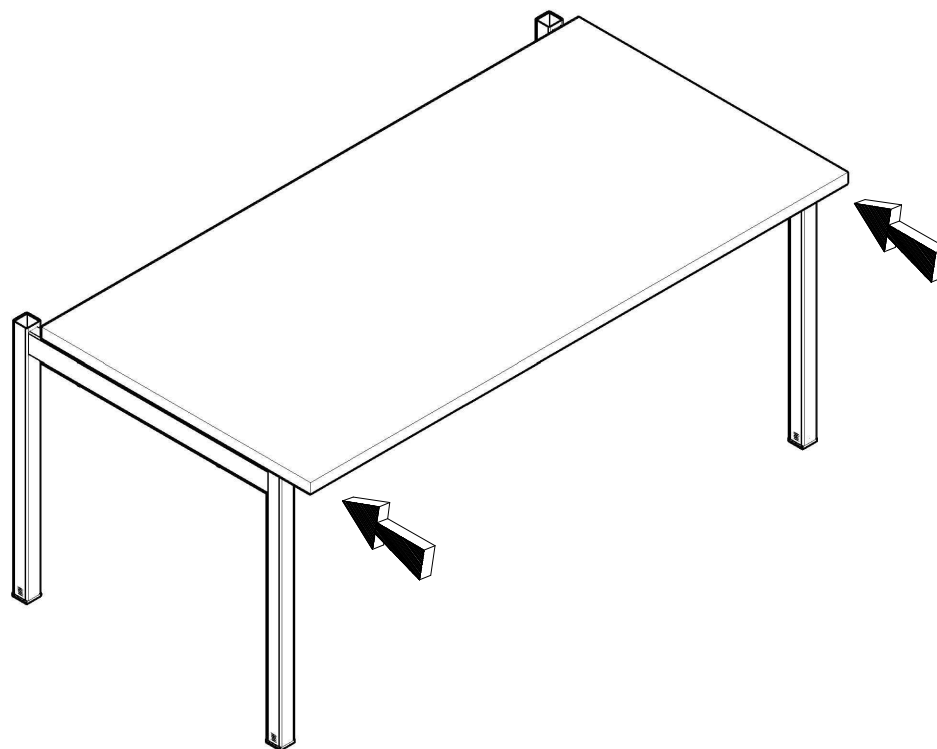



OGI SLIDE







M6x68

4x

1



M6x10


2x

2




4x

3

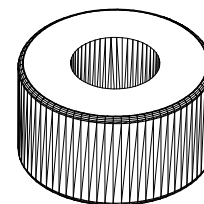

2x

4

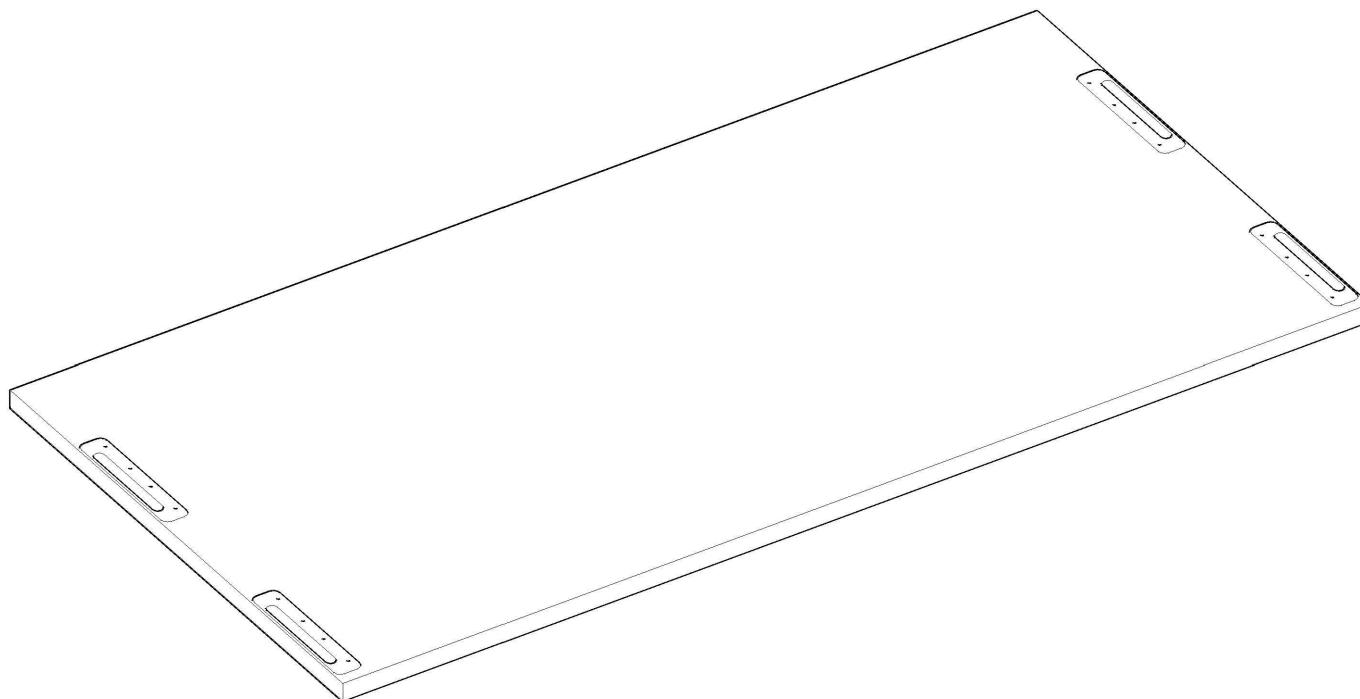

3

5




OGI Y




OGI Y



OGI Q

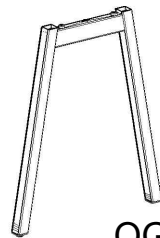

OGI M

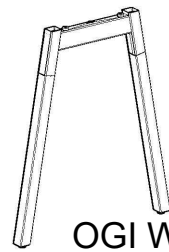






OGI W





OGI U




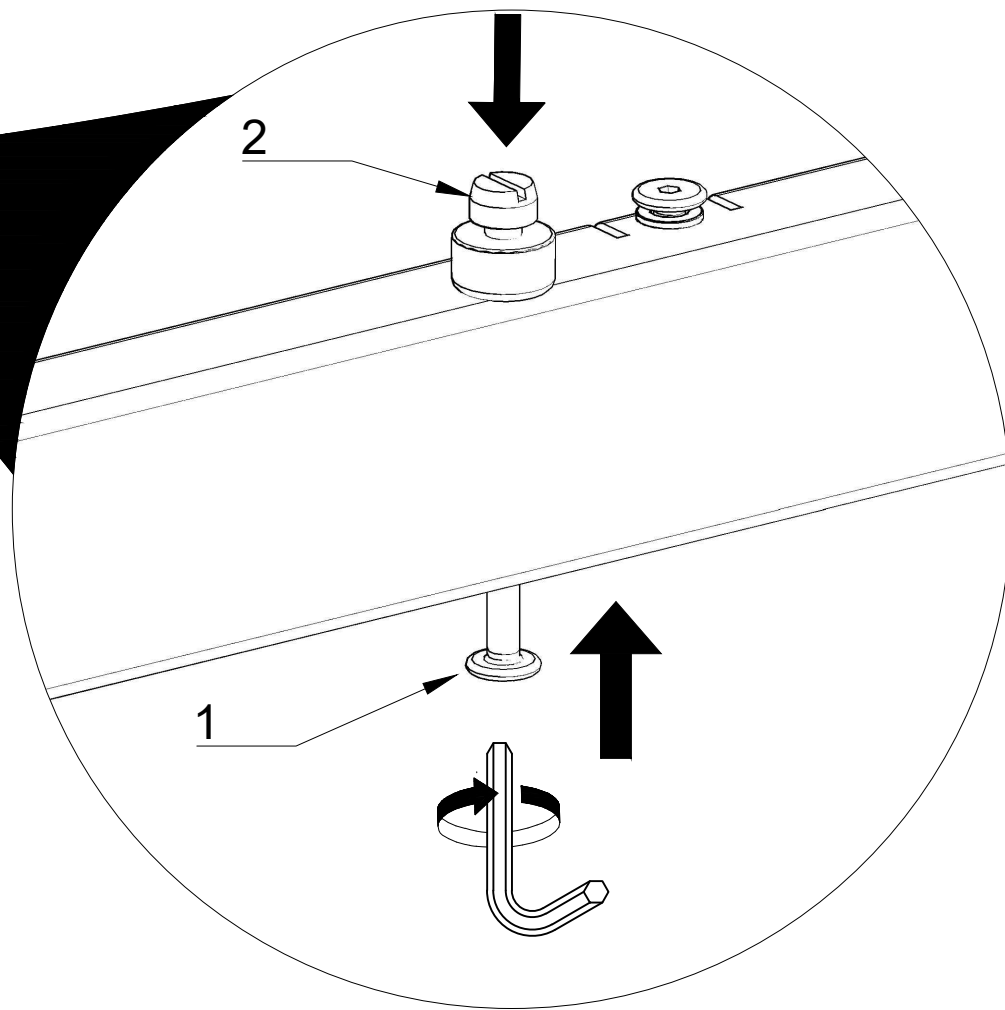

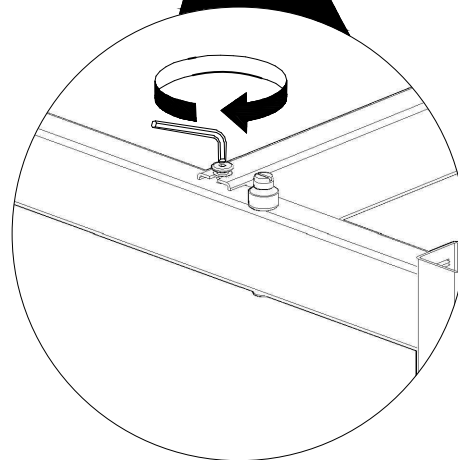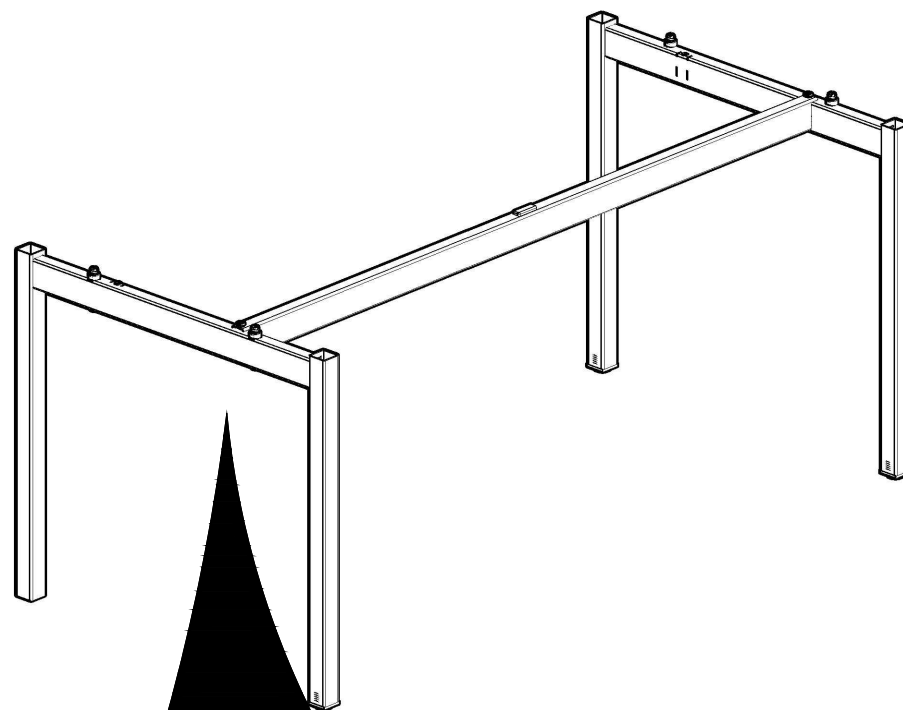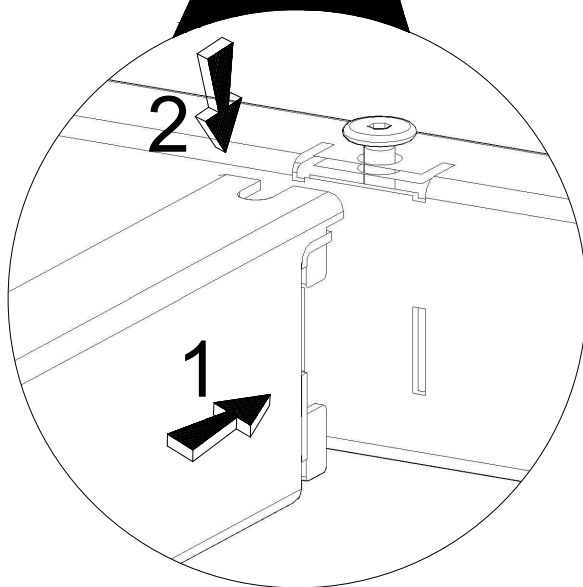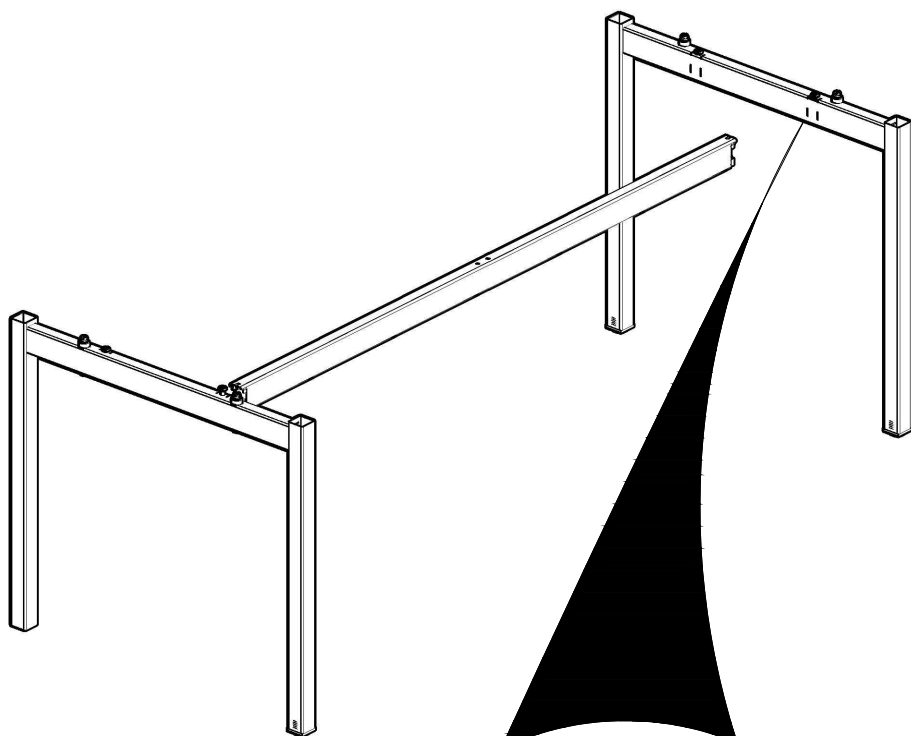

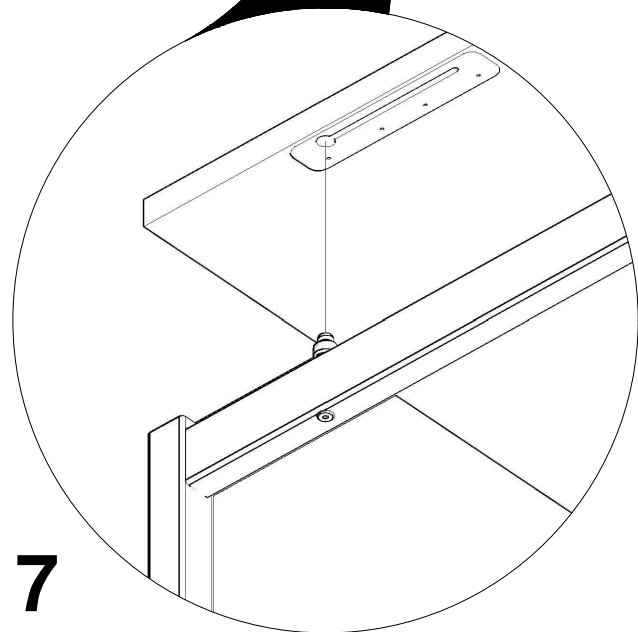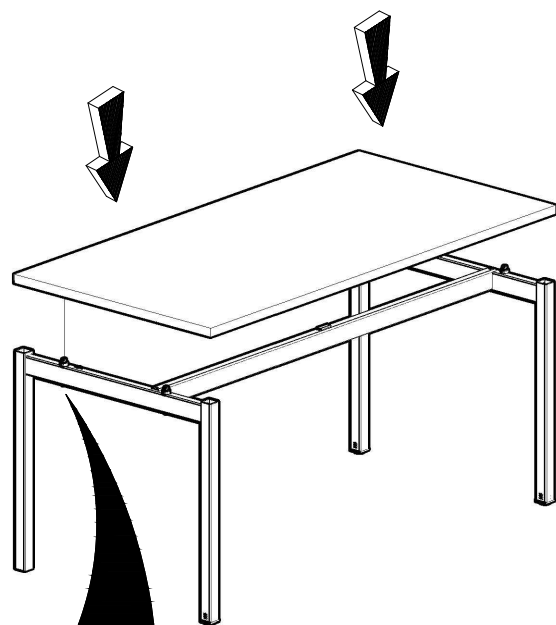


7

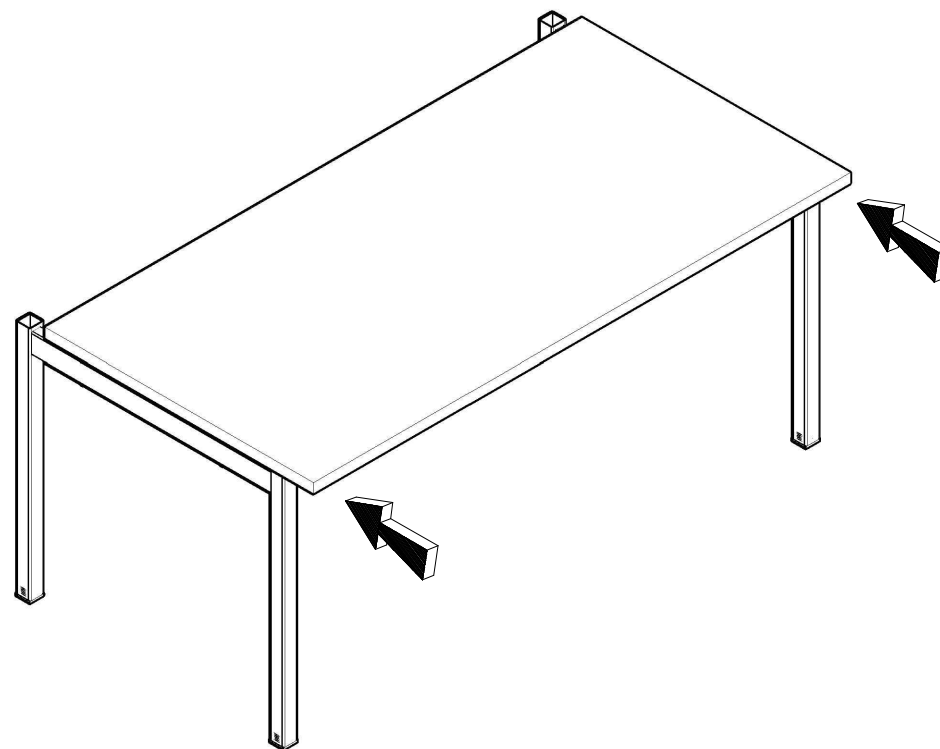






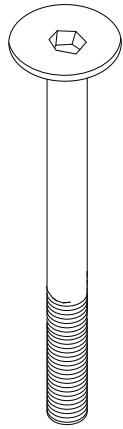


M6x68
8x

1

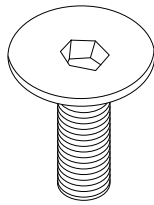


M6x10
2x

2

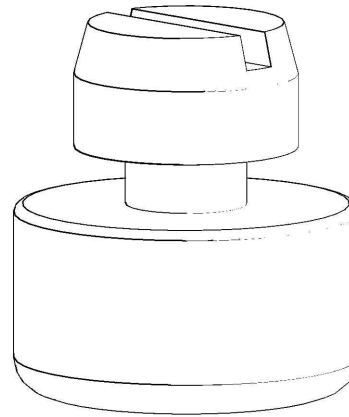


4x

3

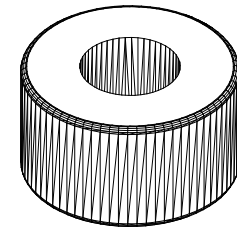



2x



4

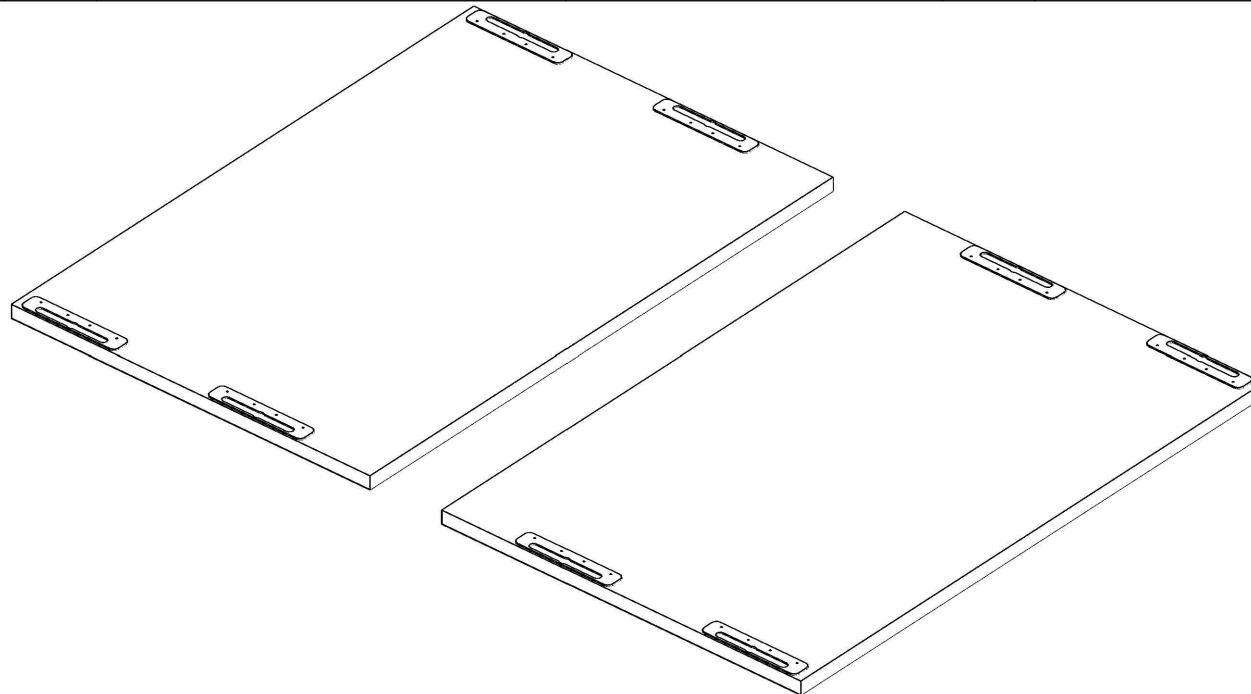

5

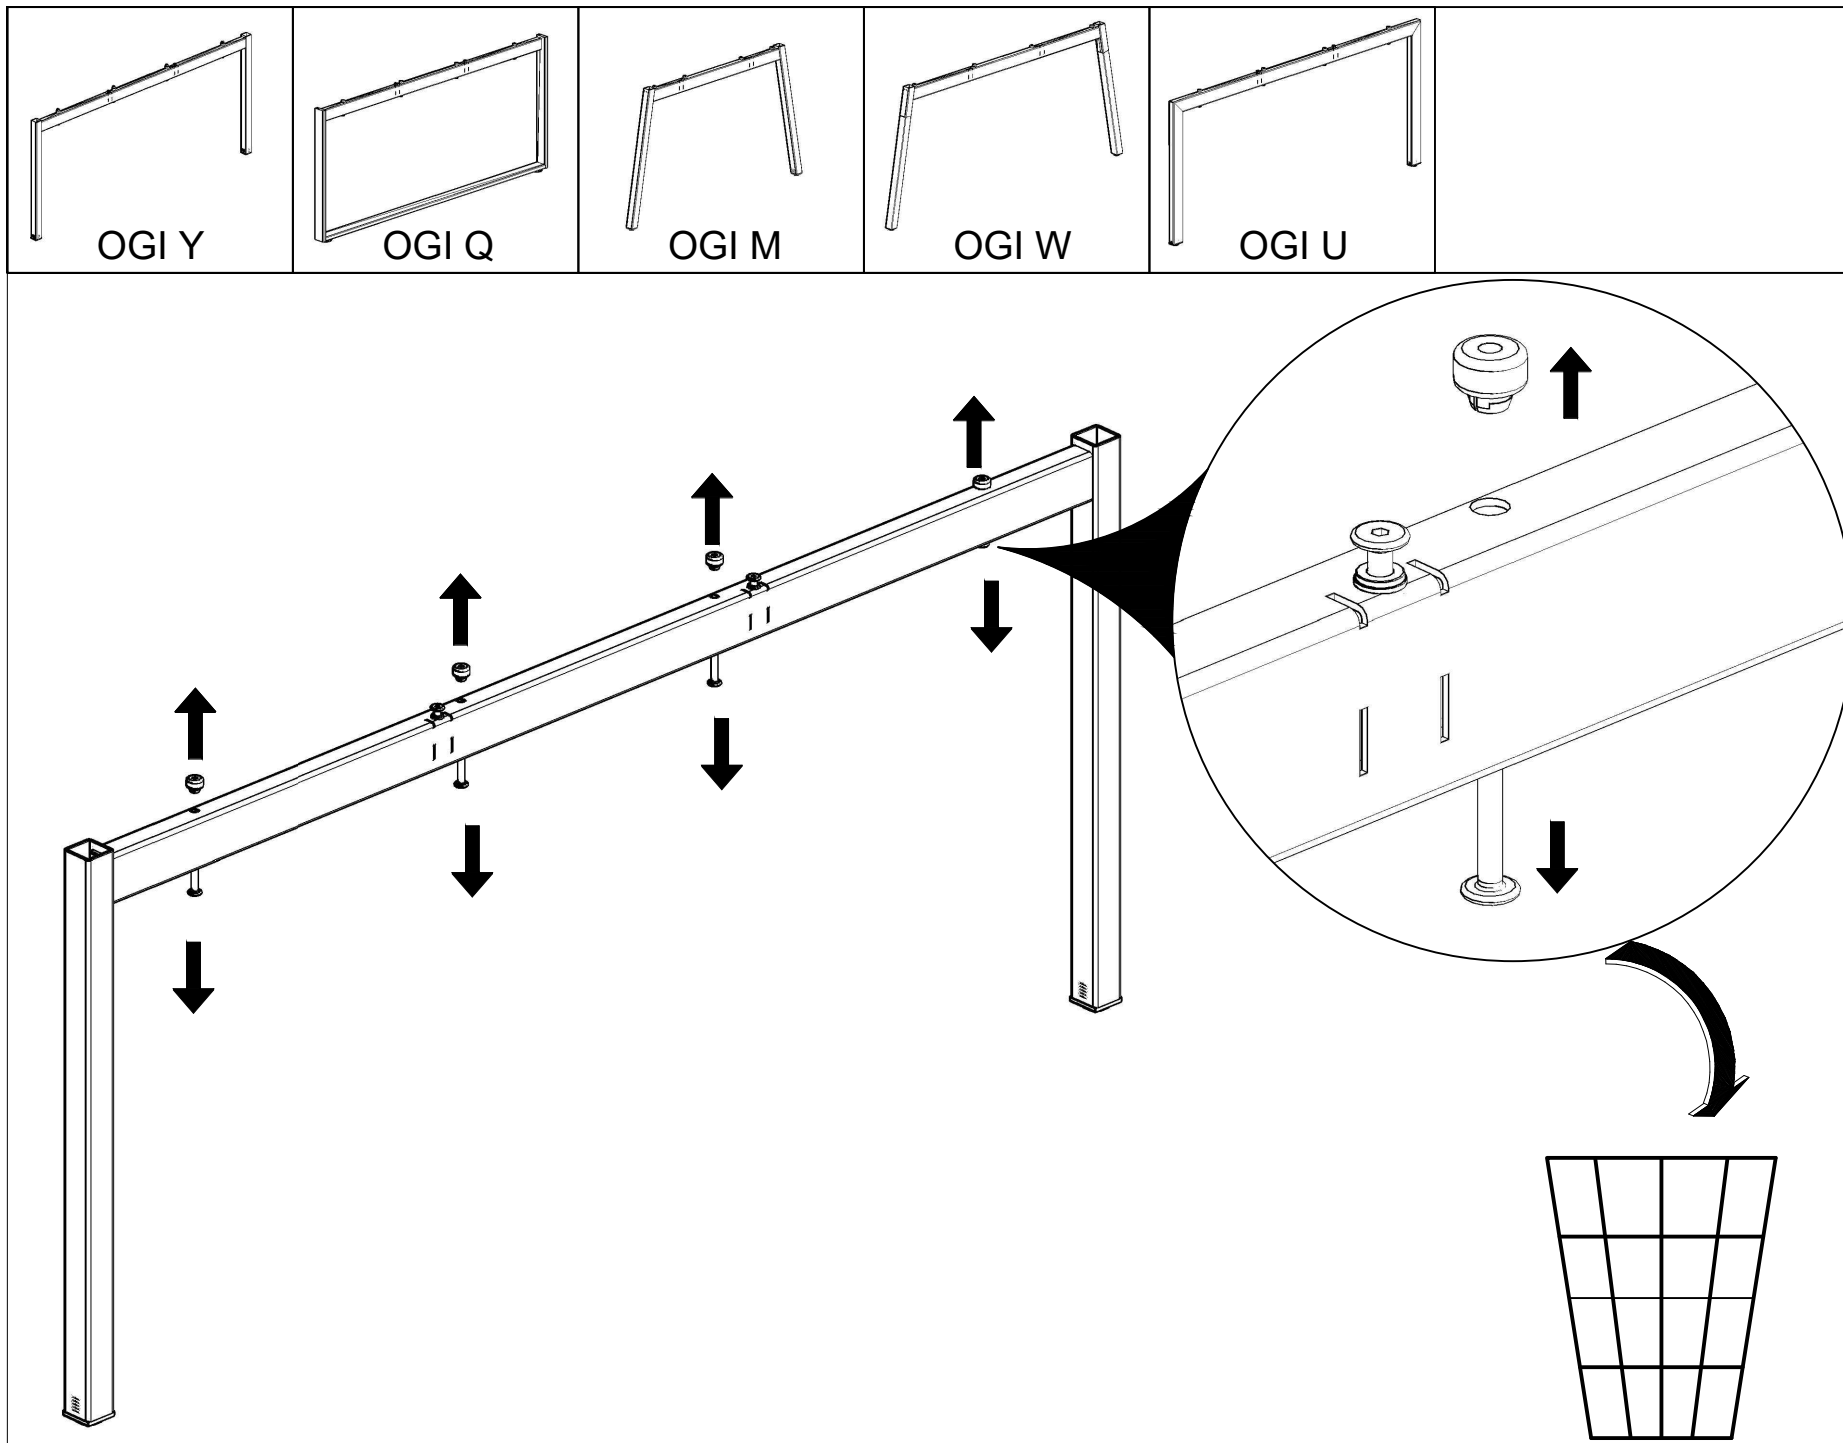

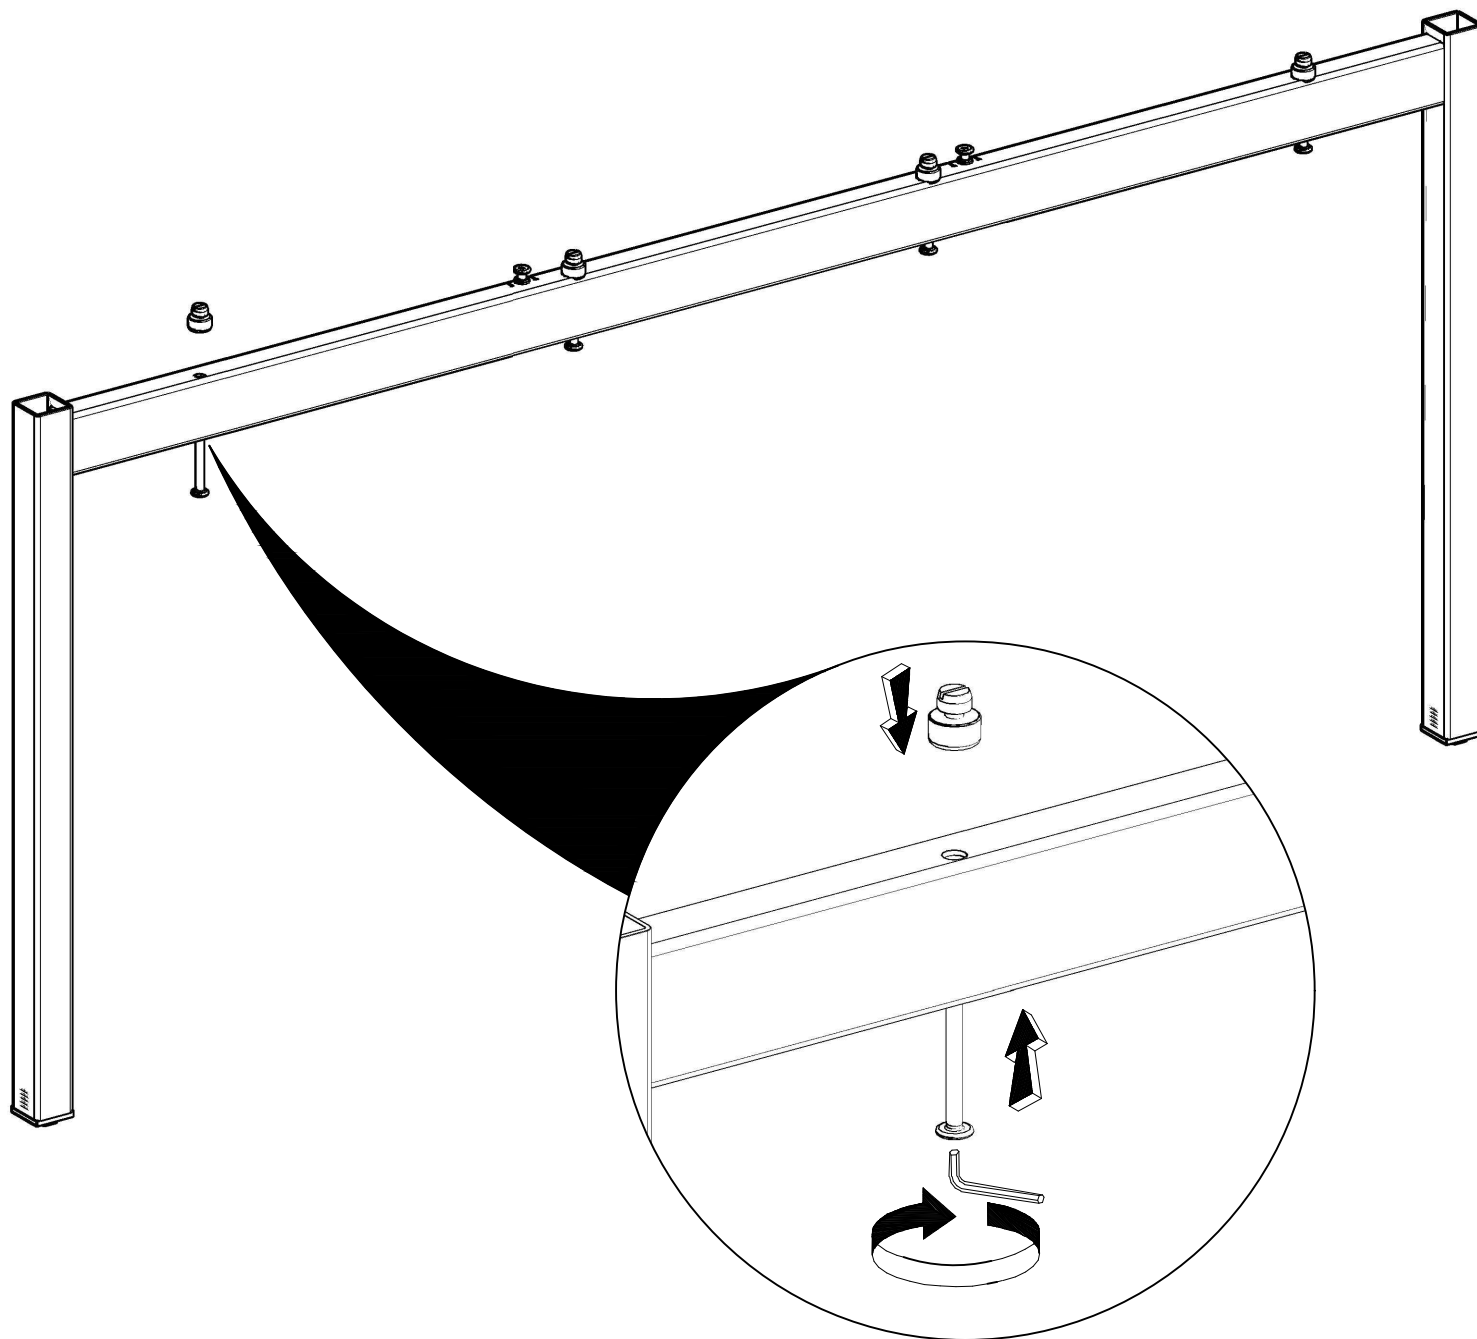

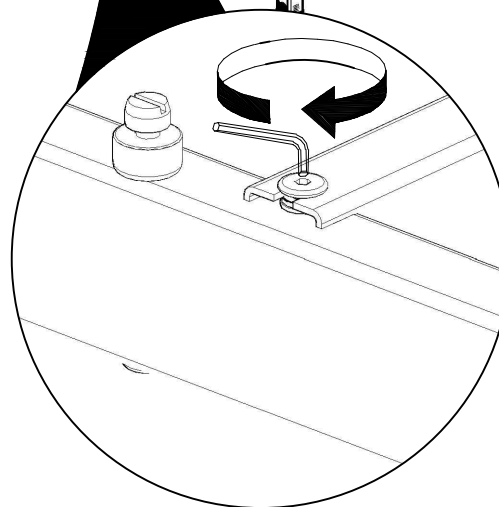
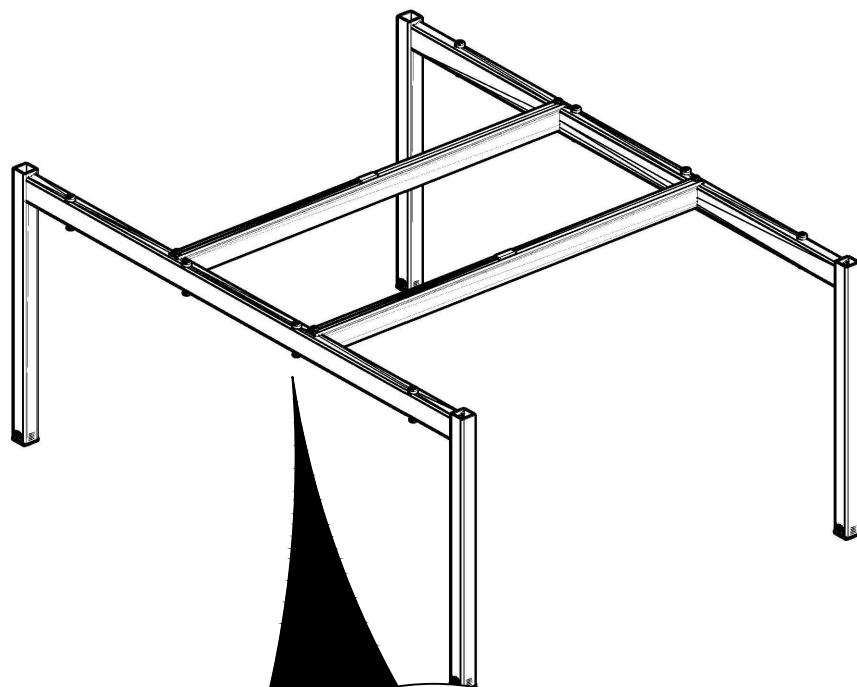





1



M05





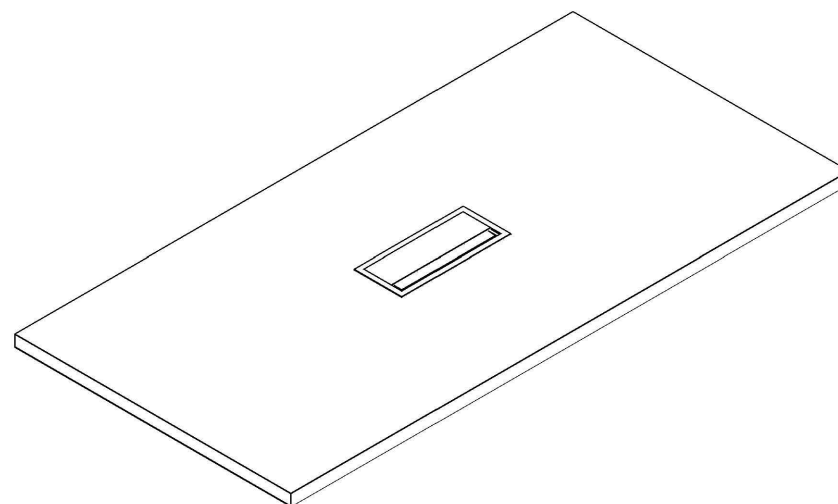
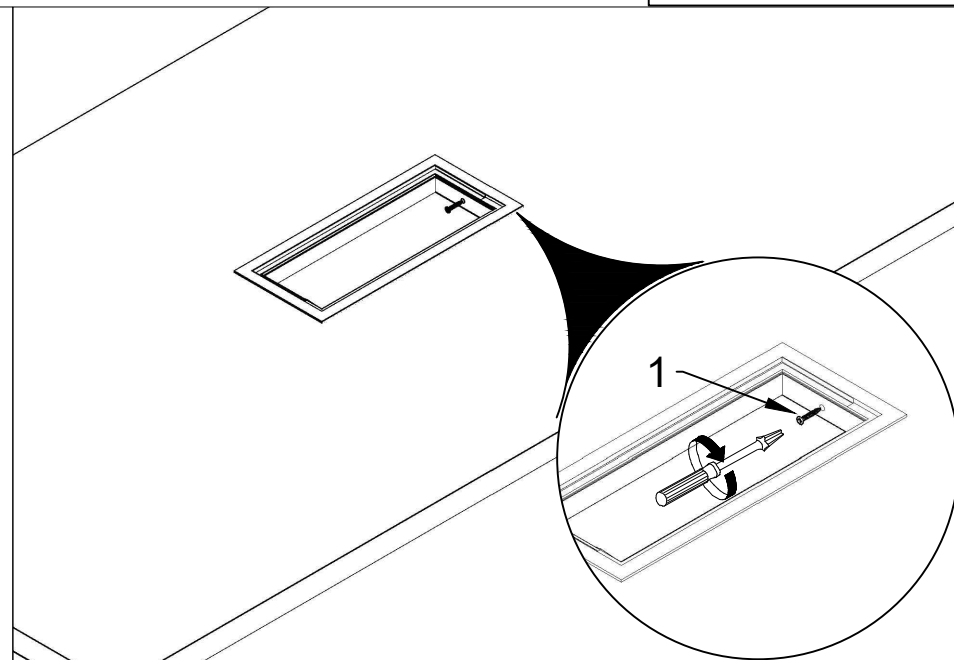


1



3x20






M04

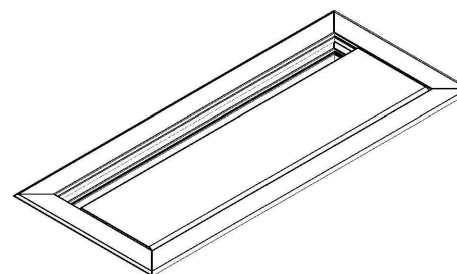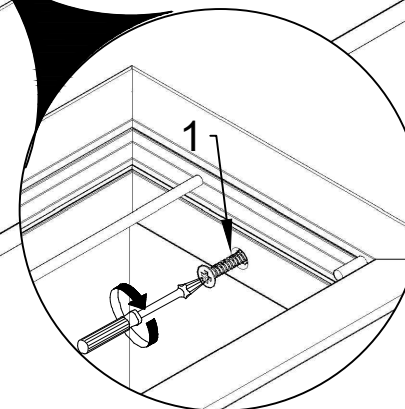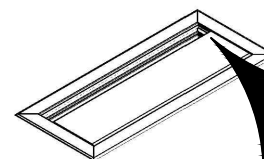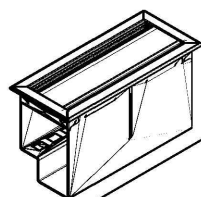



1




M04

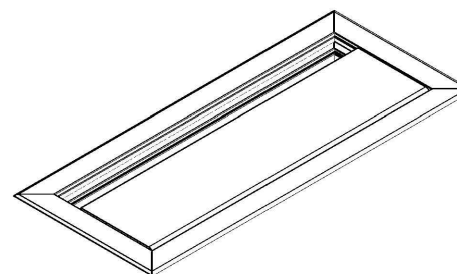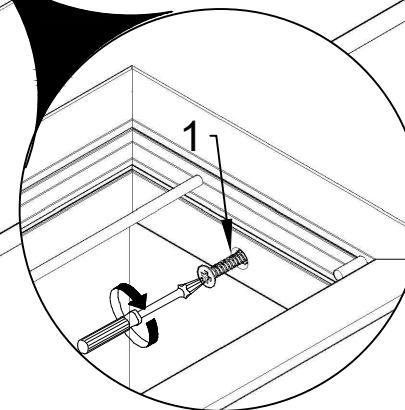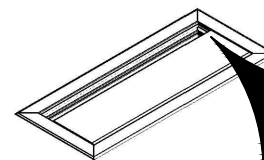

M07

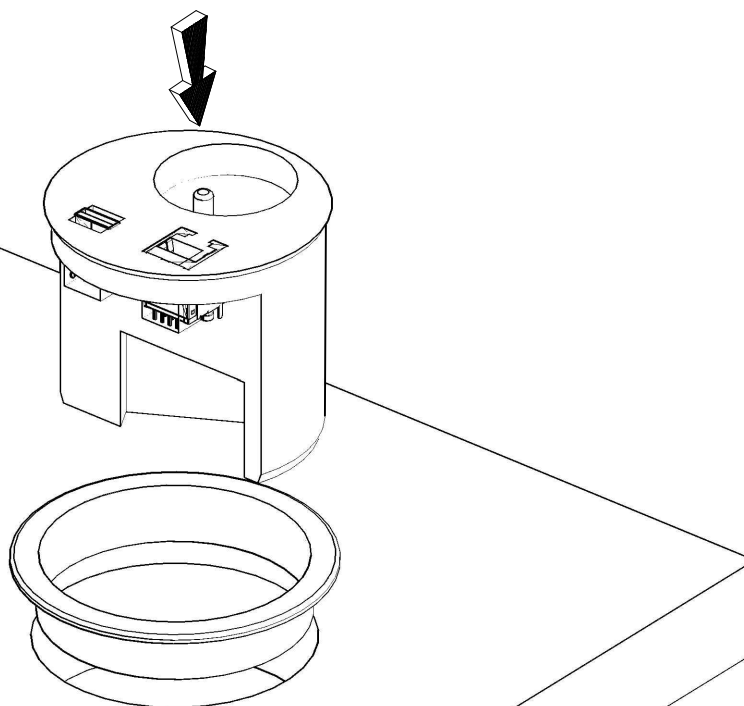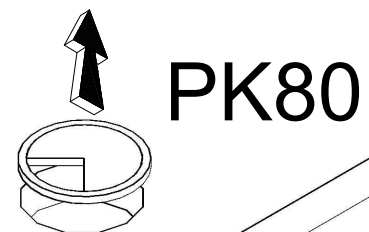


1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

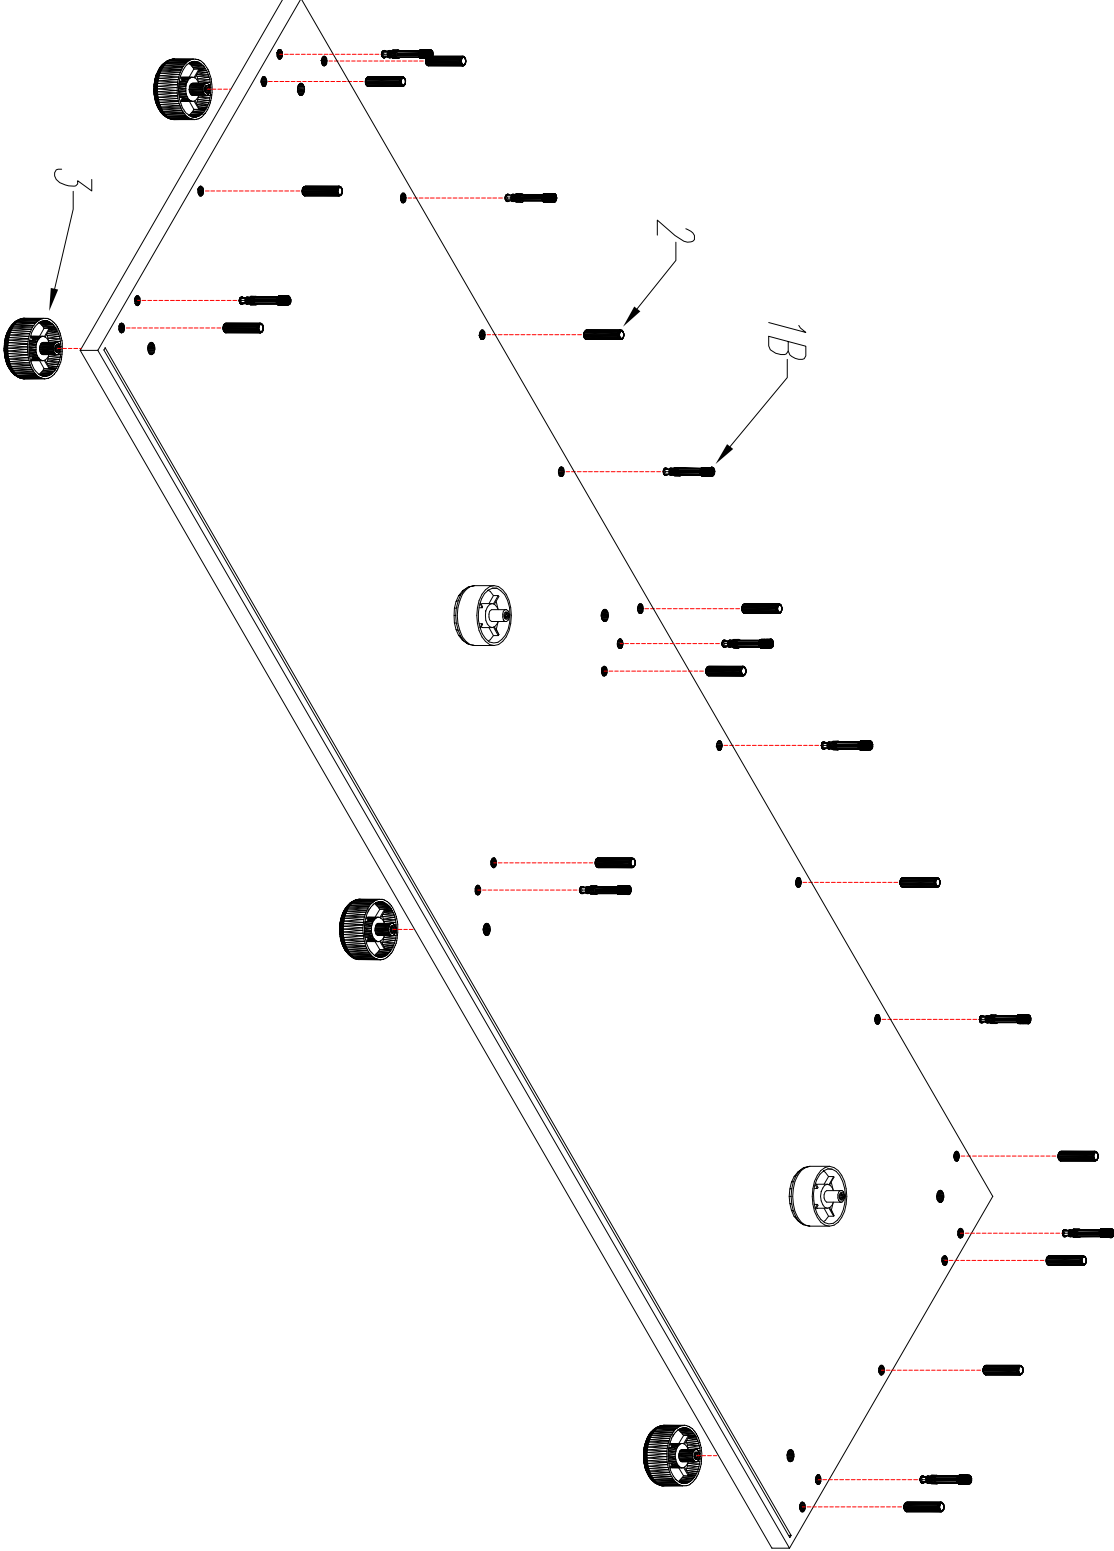



KOLEJNOŚĆ MONTAŻU
MONTAZH PO RYADU I KOLKOV.

THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.


DIE MONTAGEFOLGE VON
EXZENTERN UND DIBBELN.

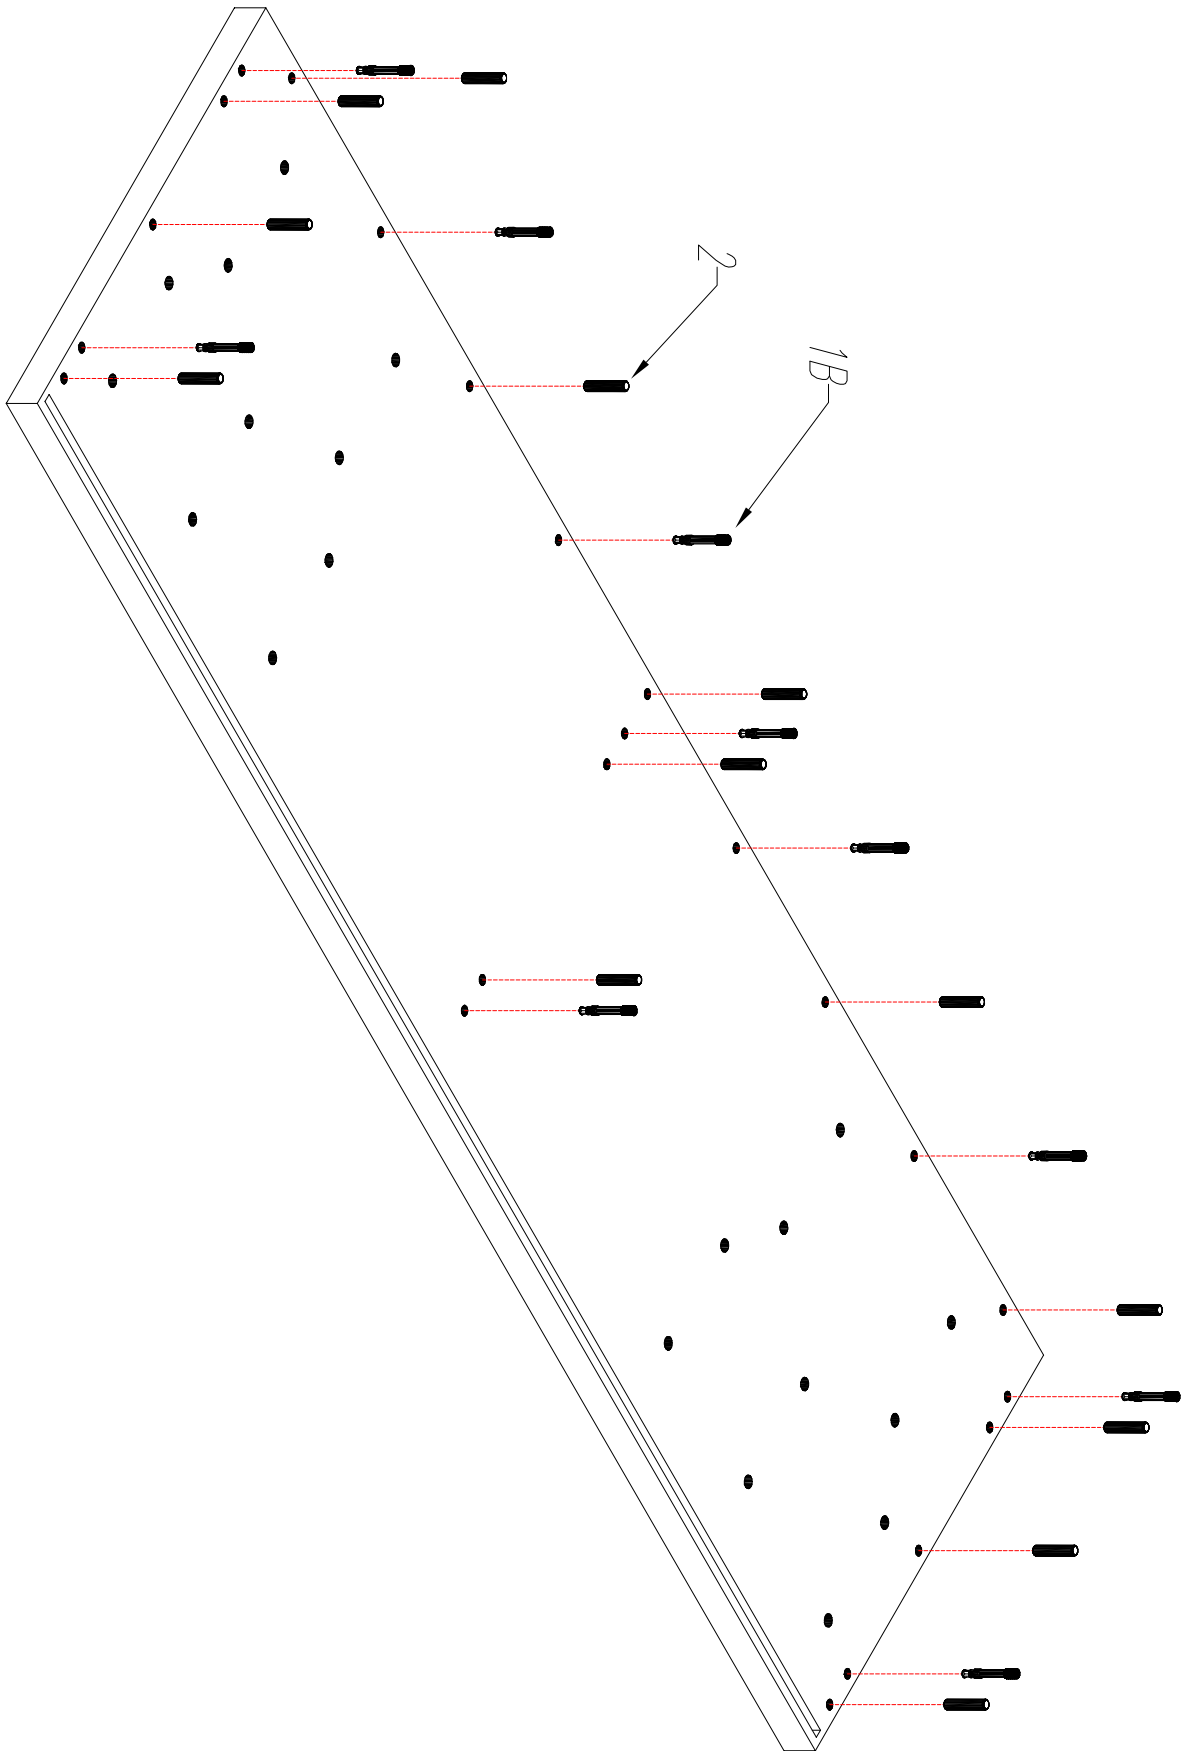

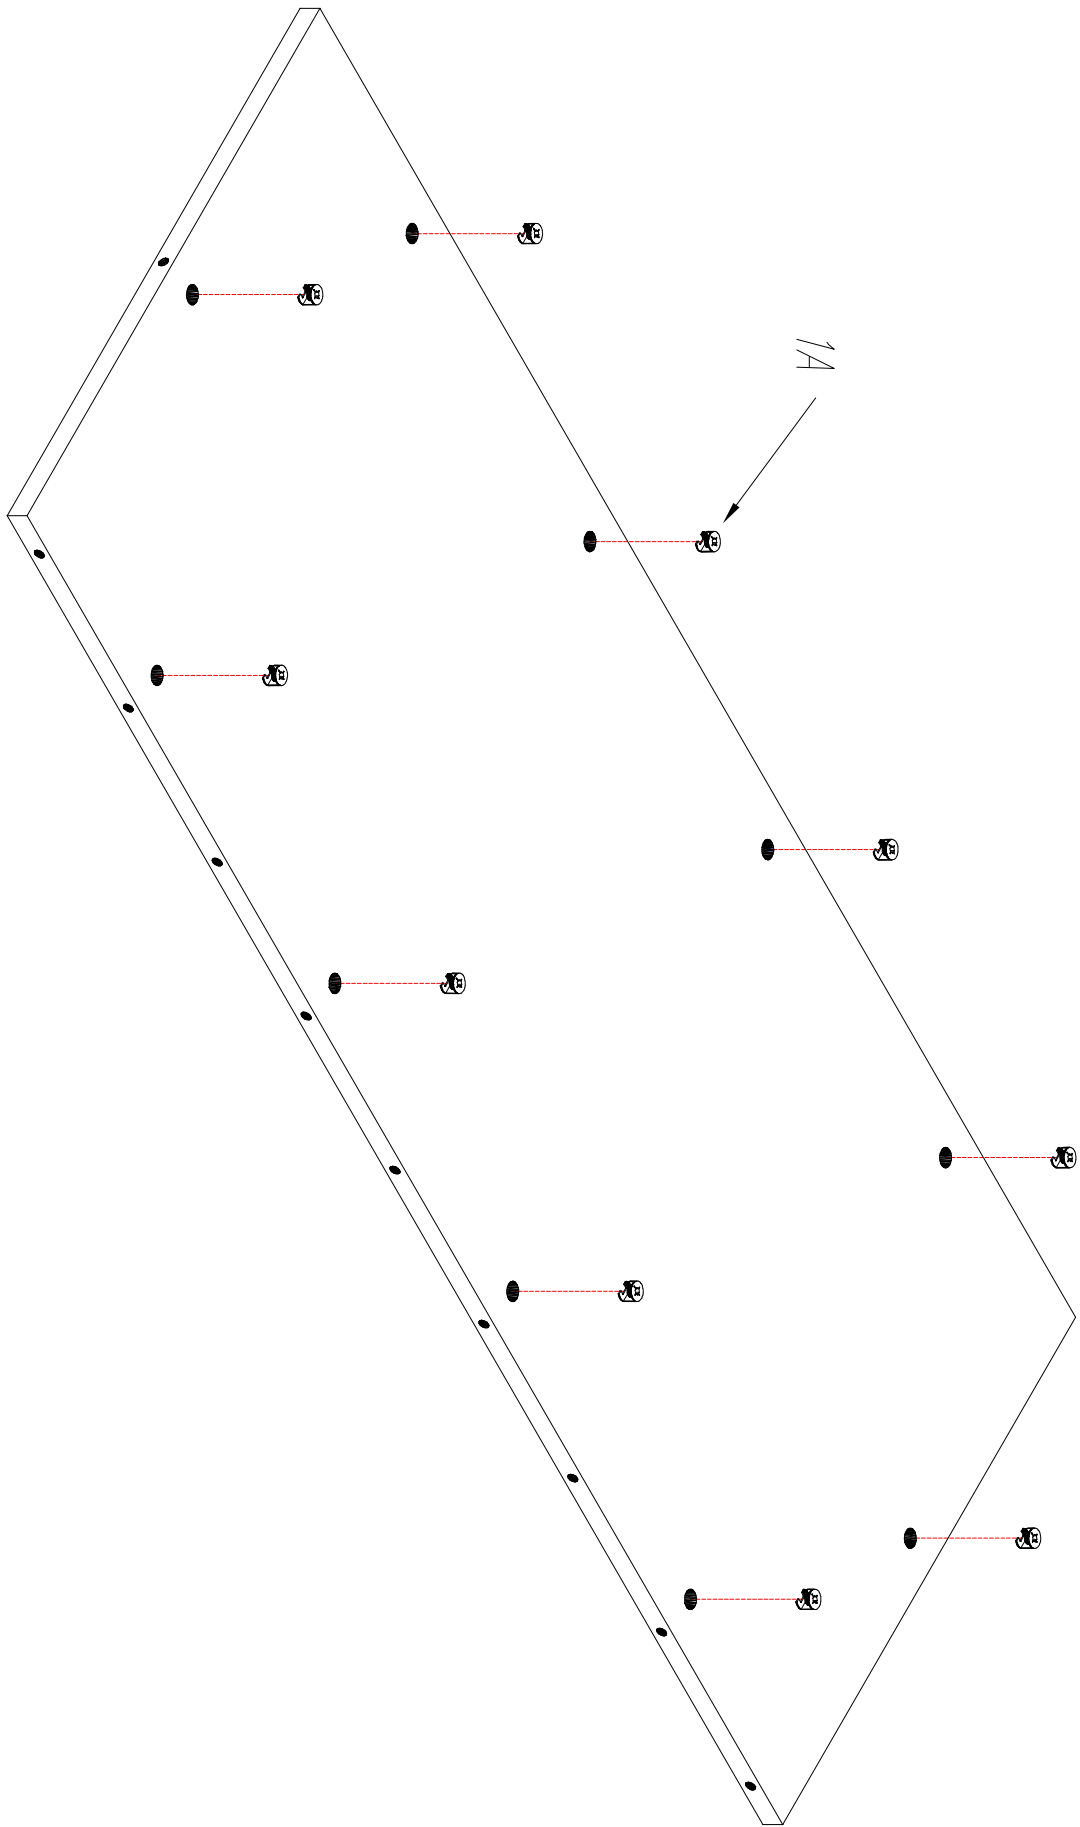


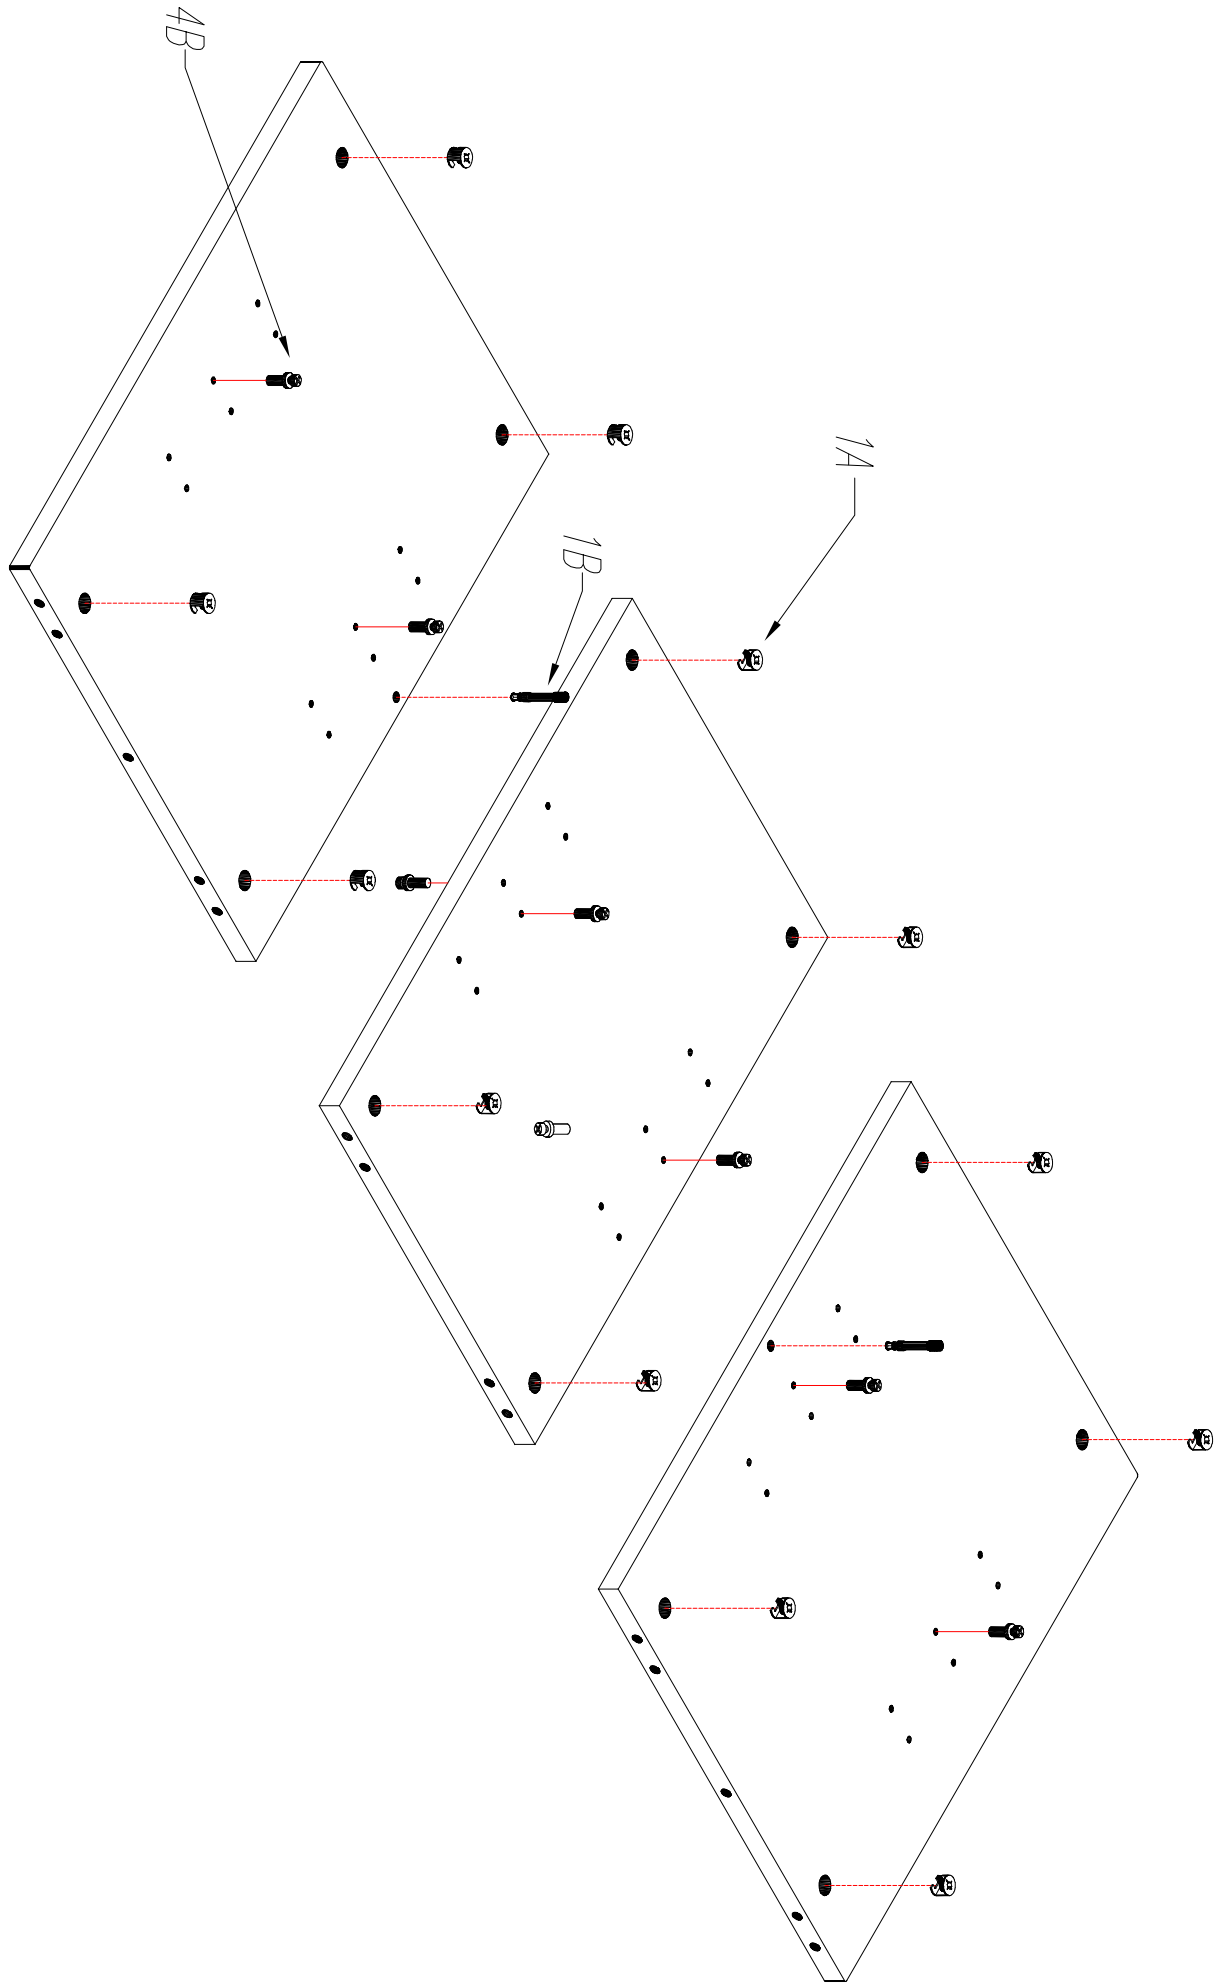


G

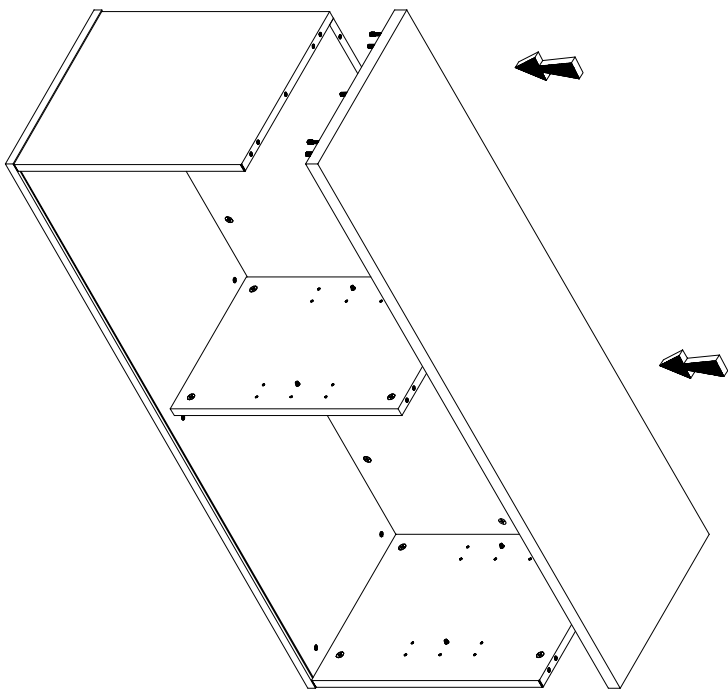


F



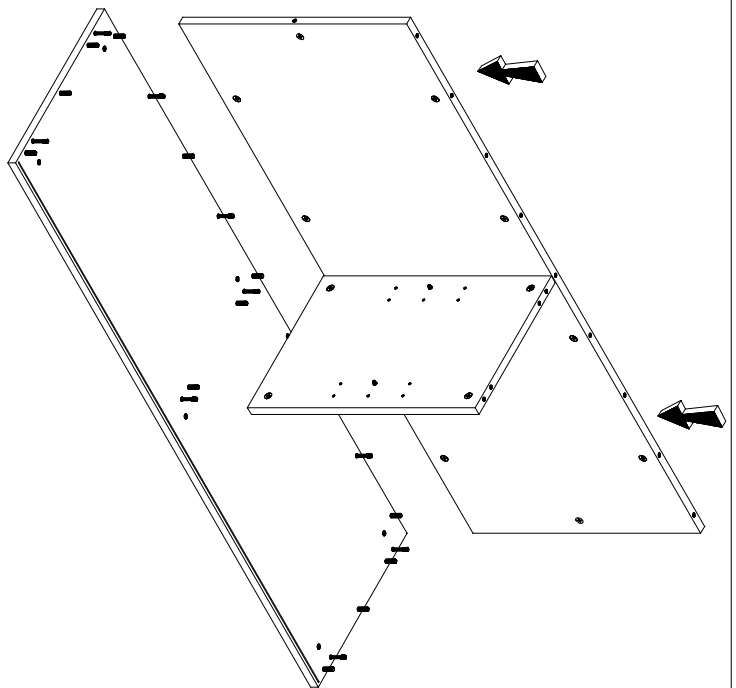


H

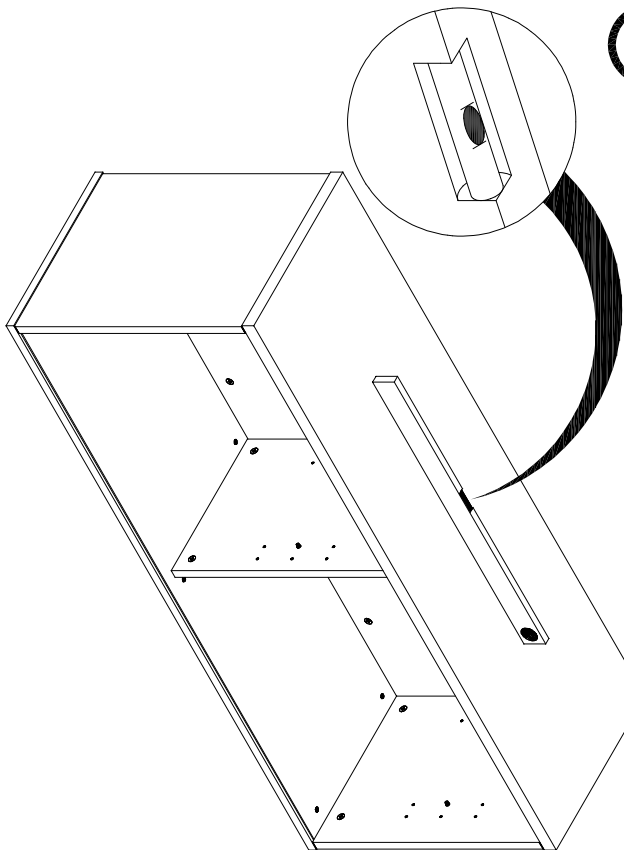


T


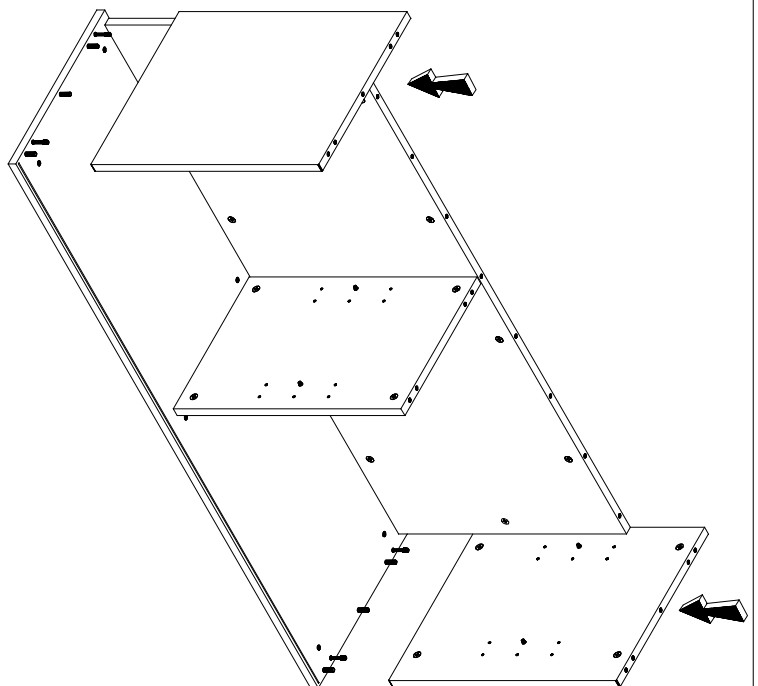


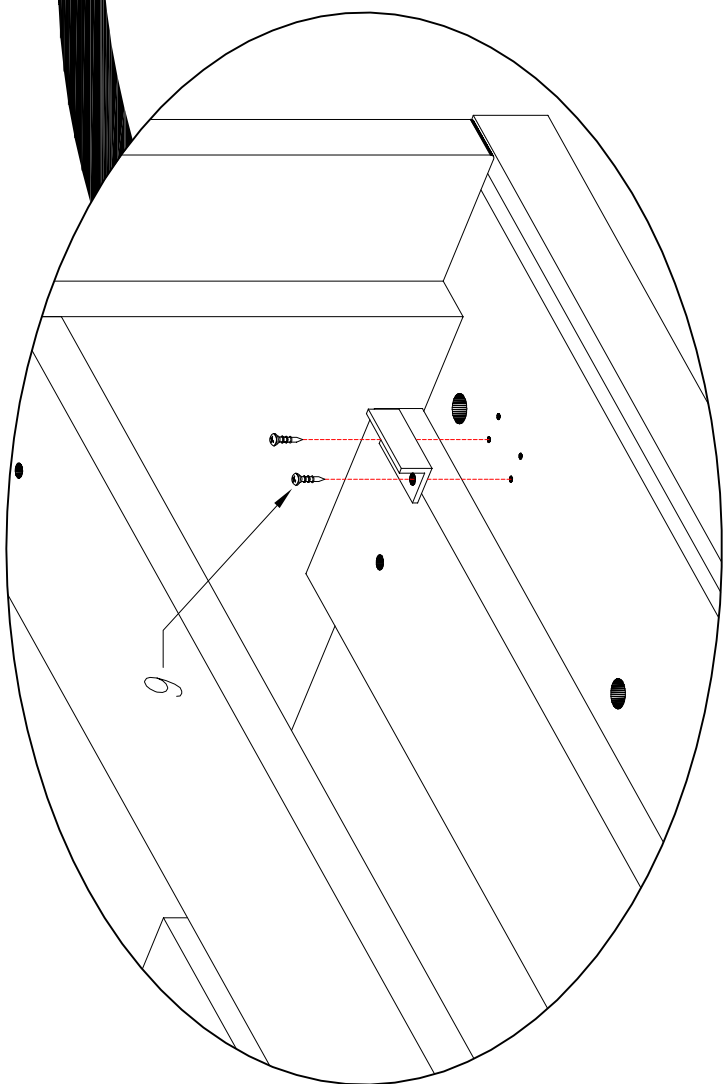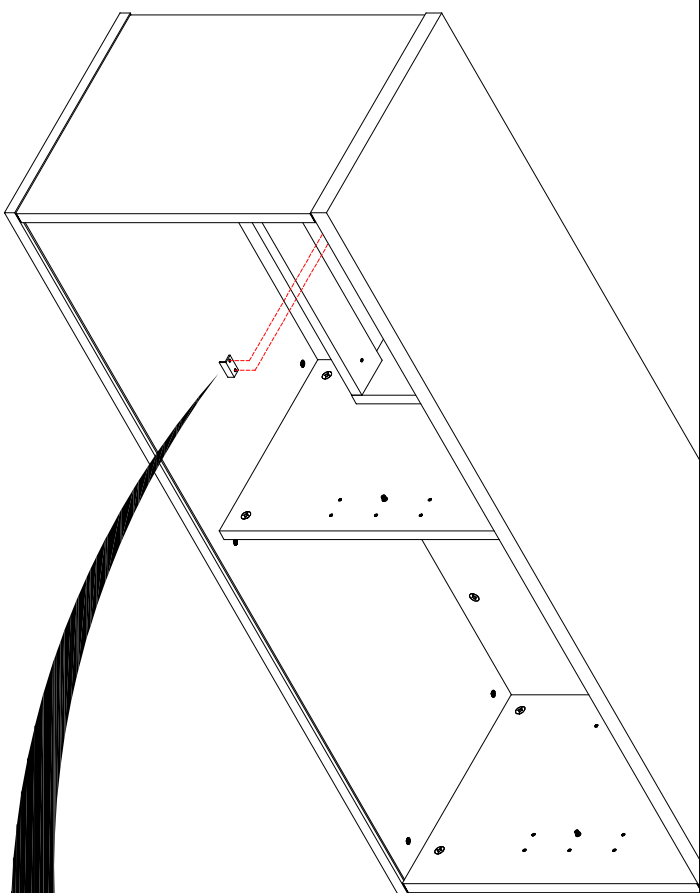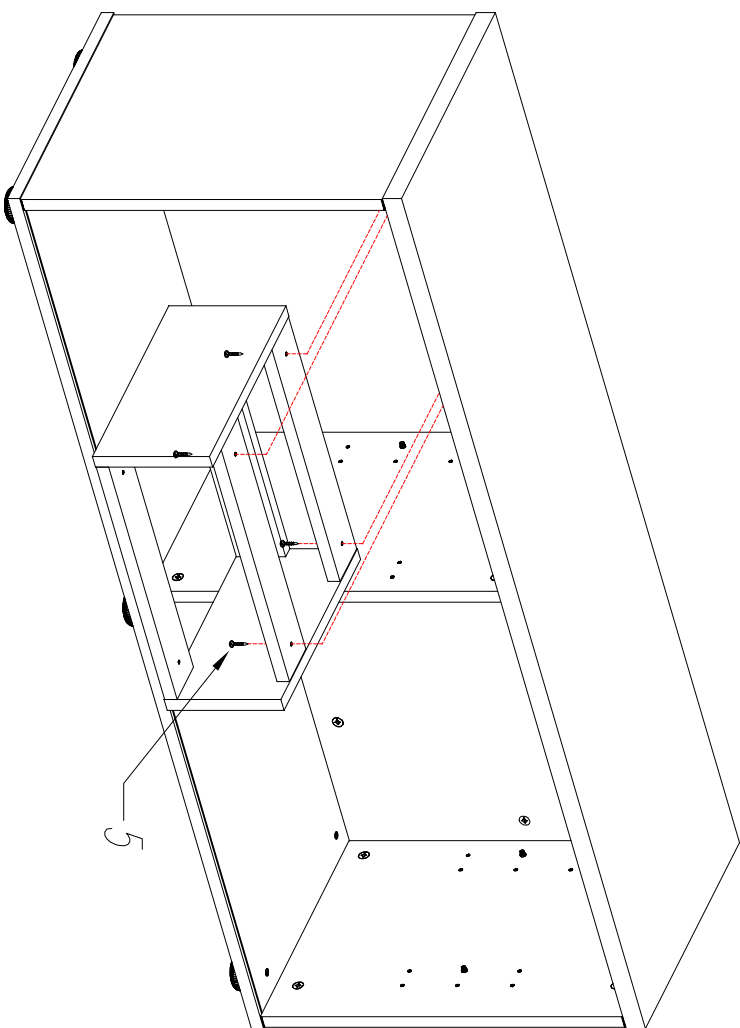


K

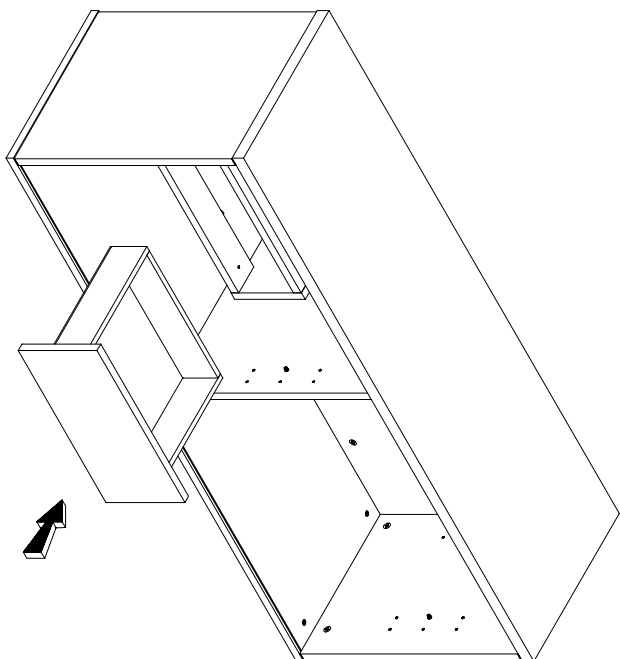


-Przykręcić śruby z
małą siłą.
-Put the screws gently.
-Anschrauben die
Schrauben zierlich.

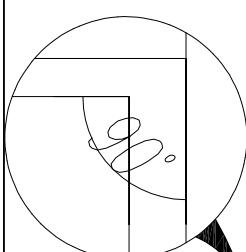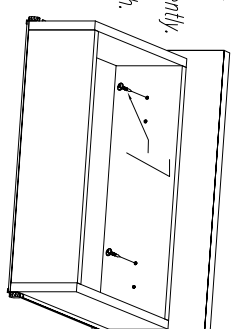



-Przykręcić śruby z
dużą siłą.
-Put the screws strongly.
-Anschrauben die
Schrauben staerklich.




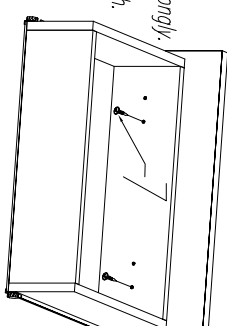



L

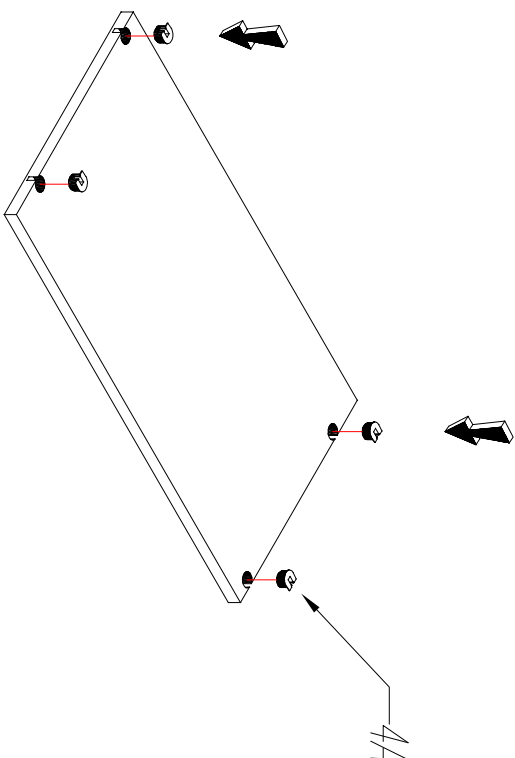



M

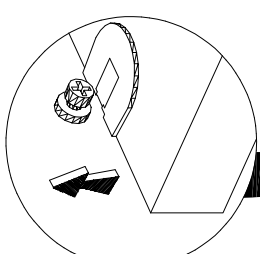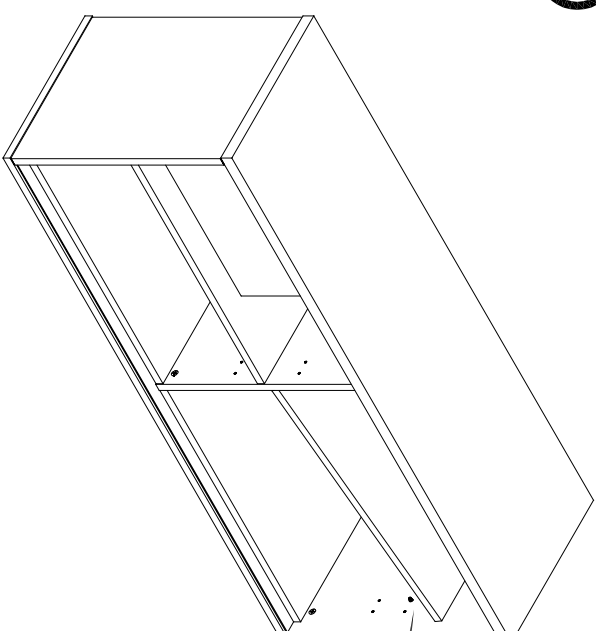

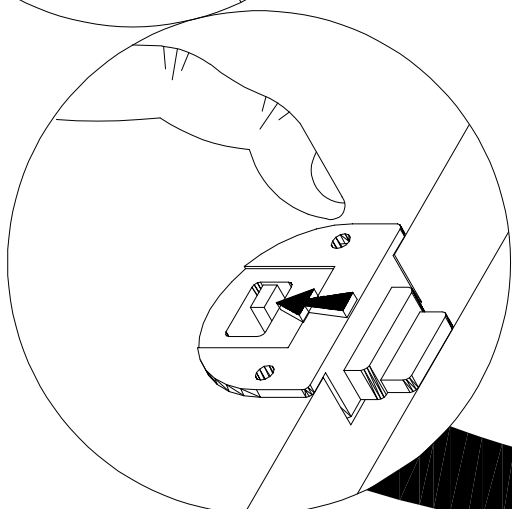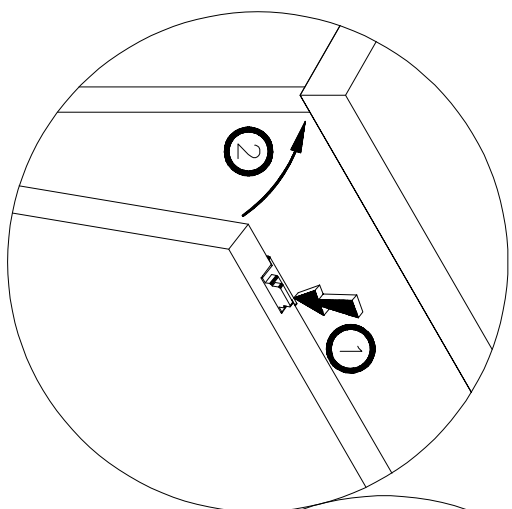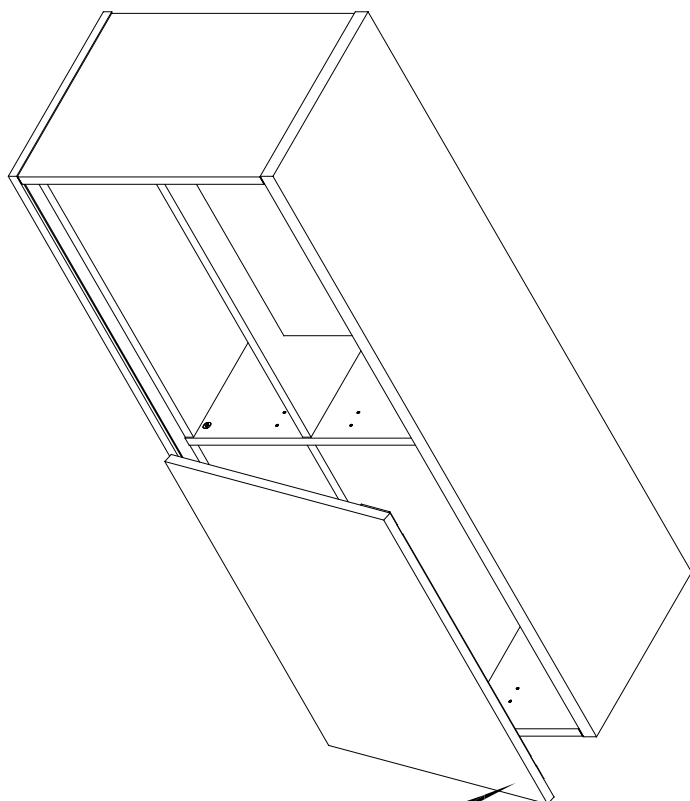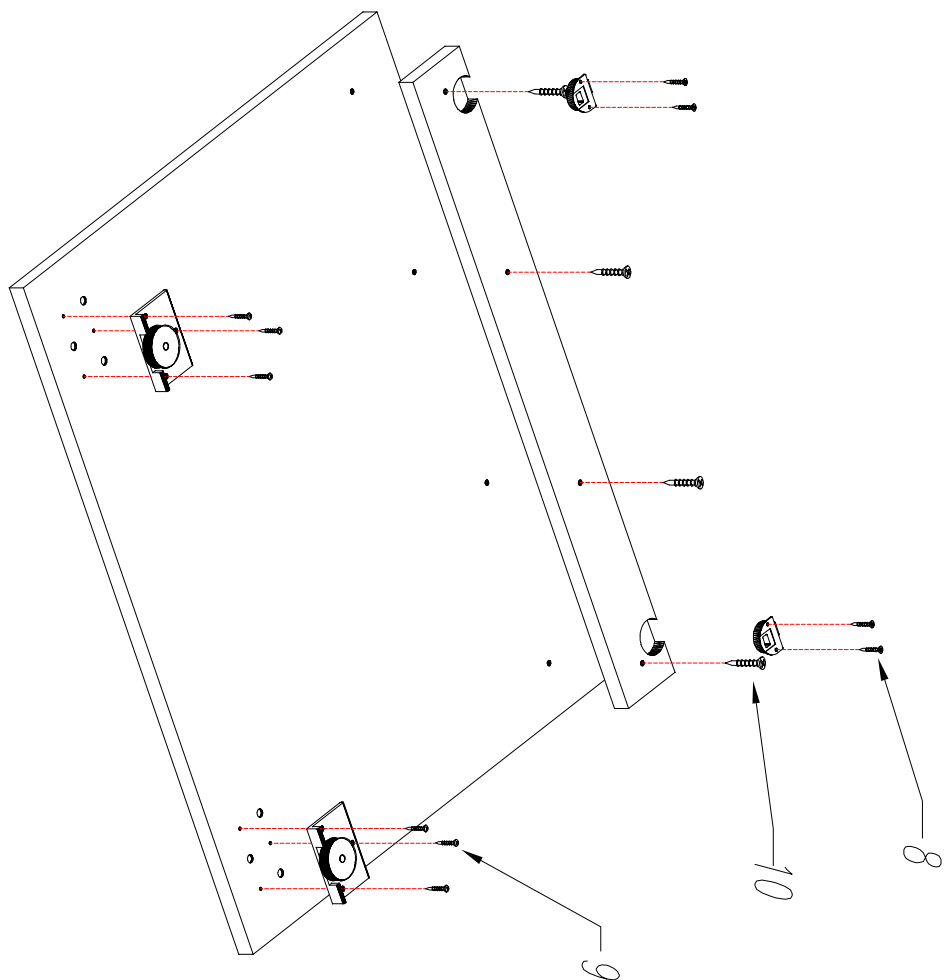





1		M6x20B
2		M6
3		M6



A

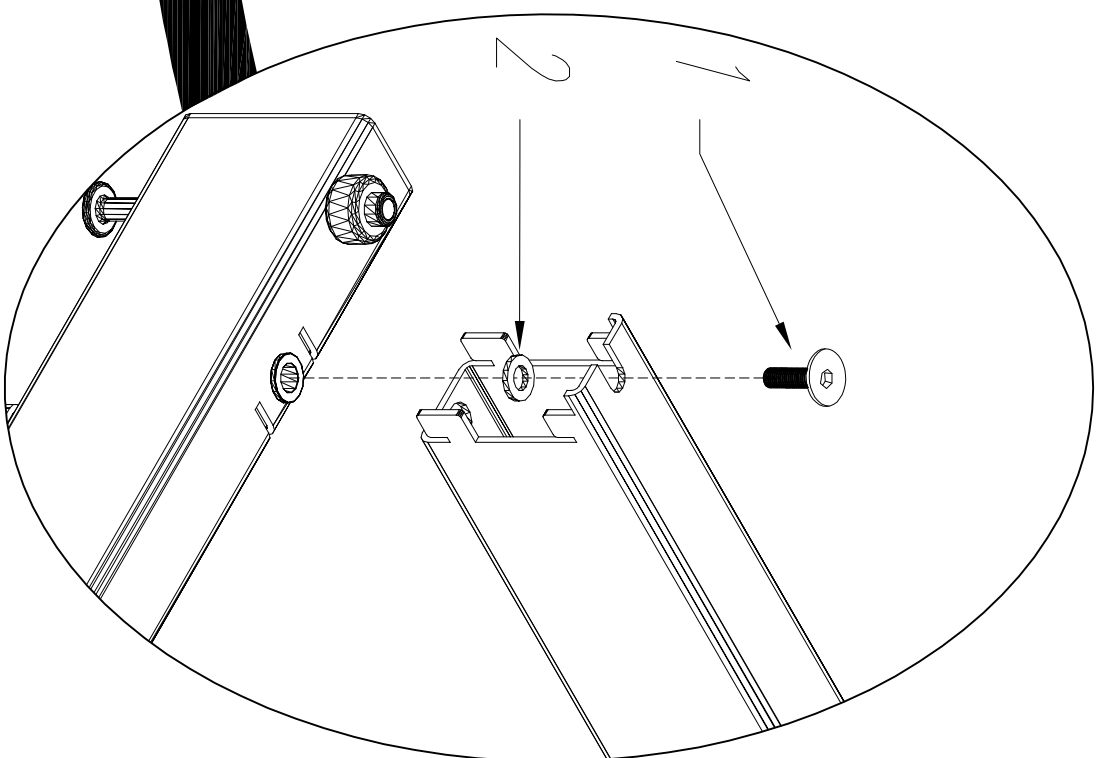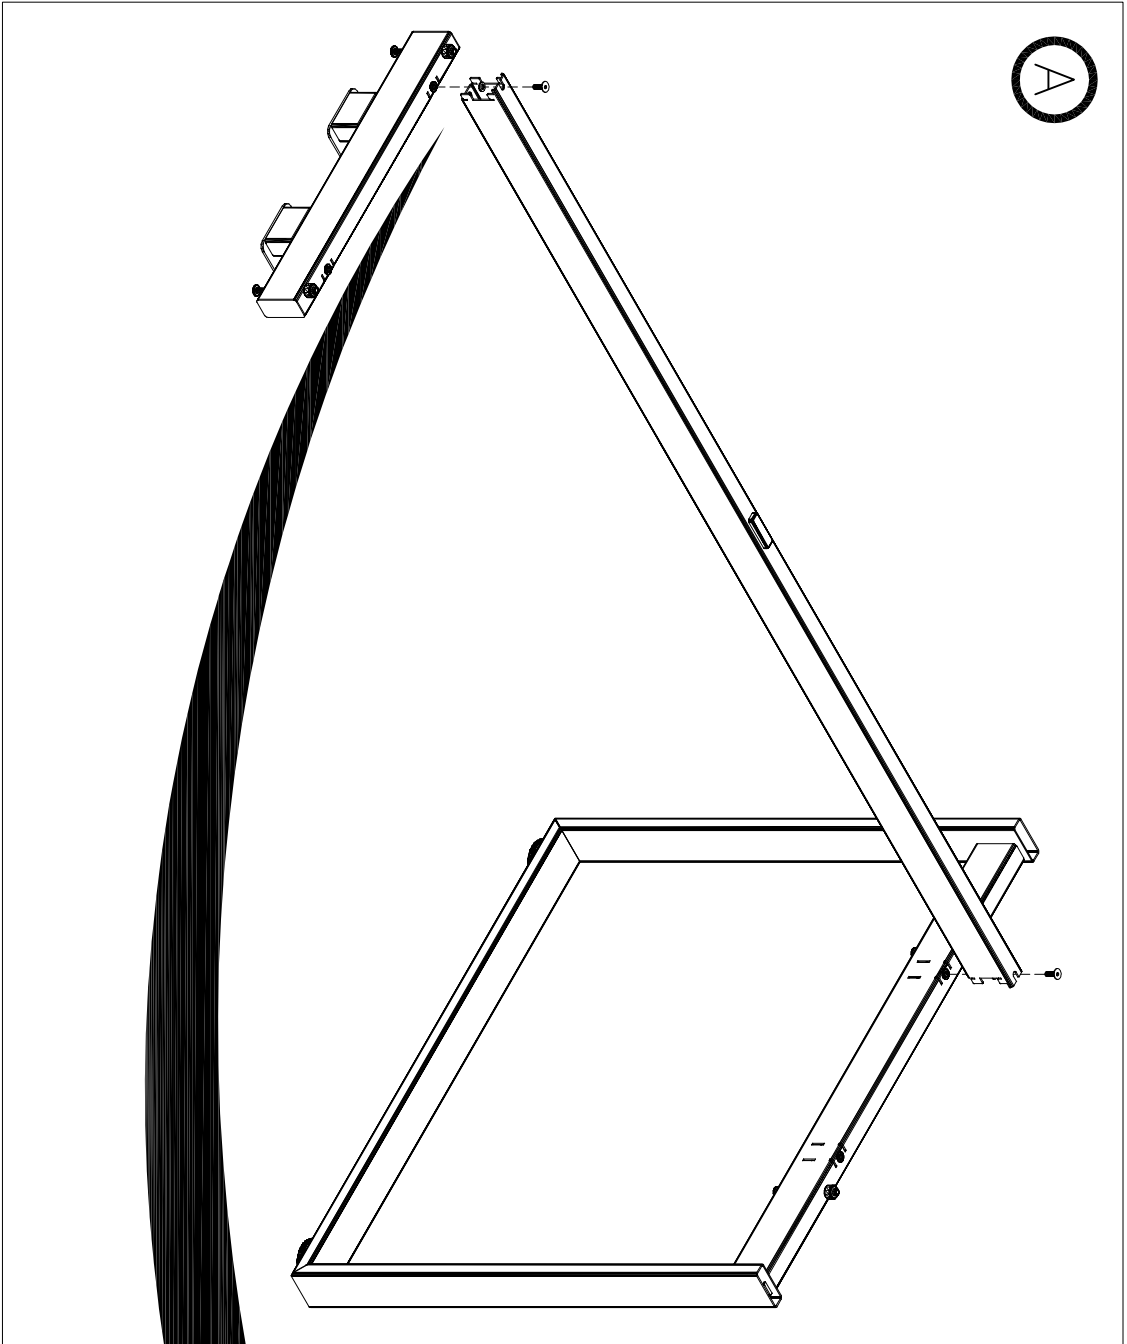





OGI

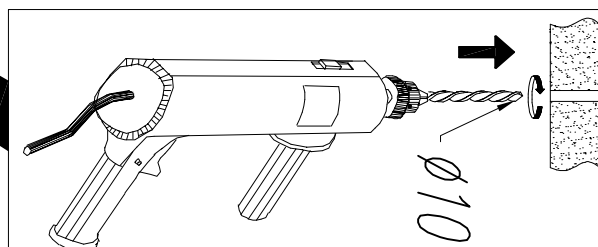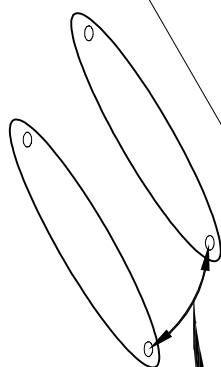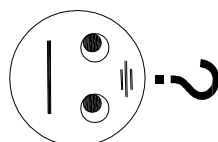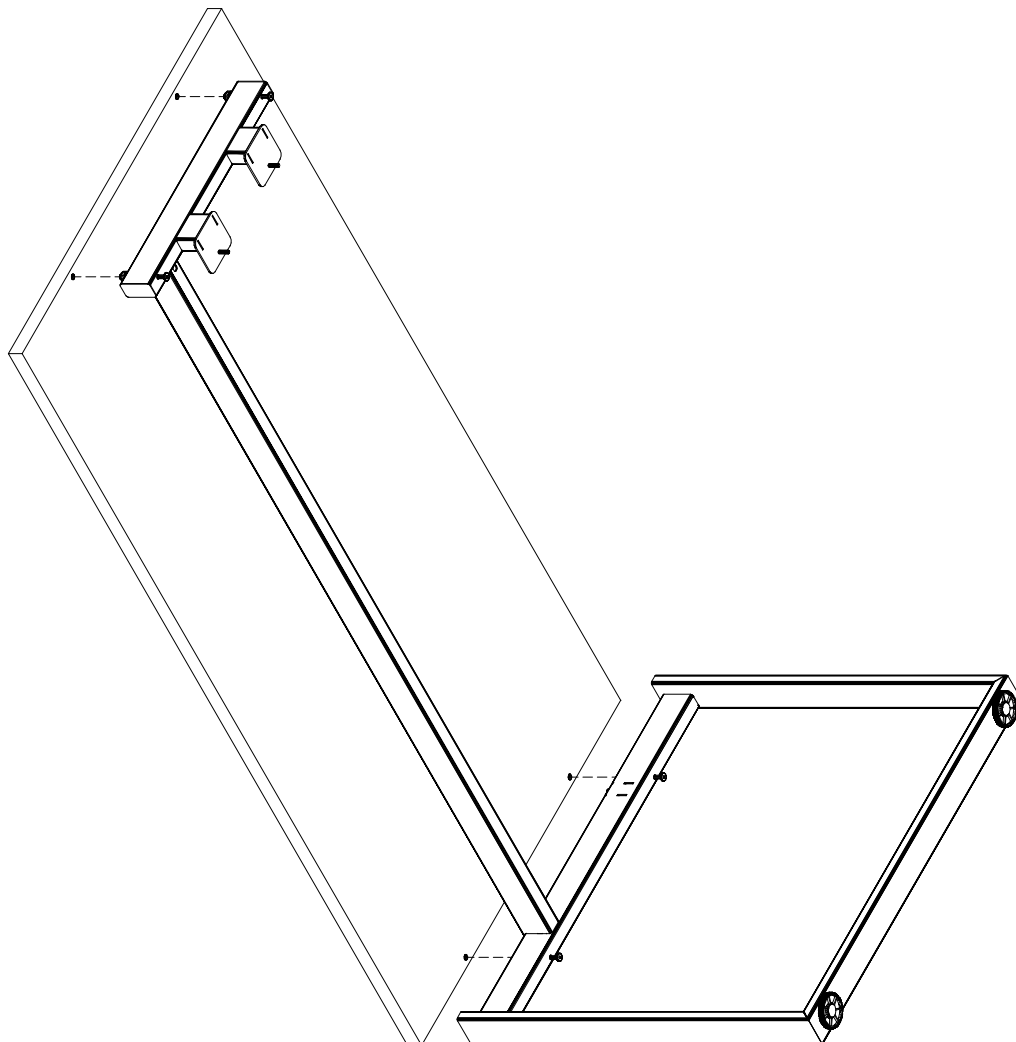

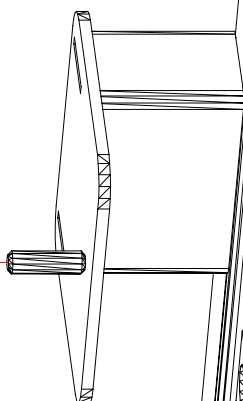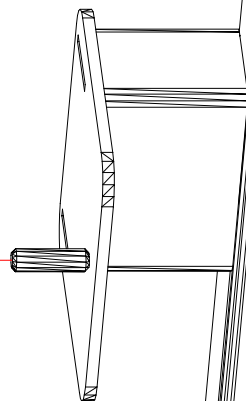


3




1	
2	
3	
4	
5	
6	
7	
8	
9	


A12M

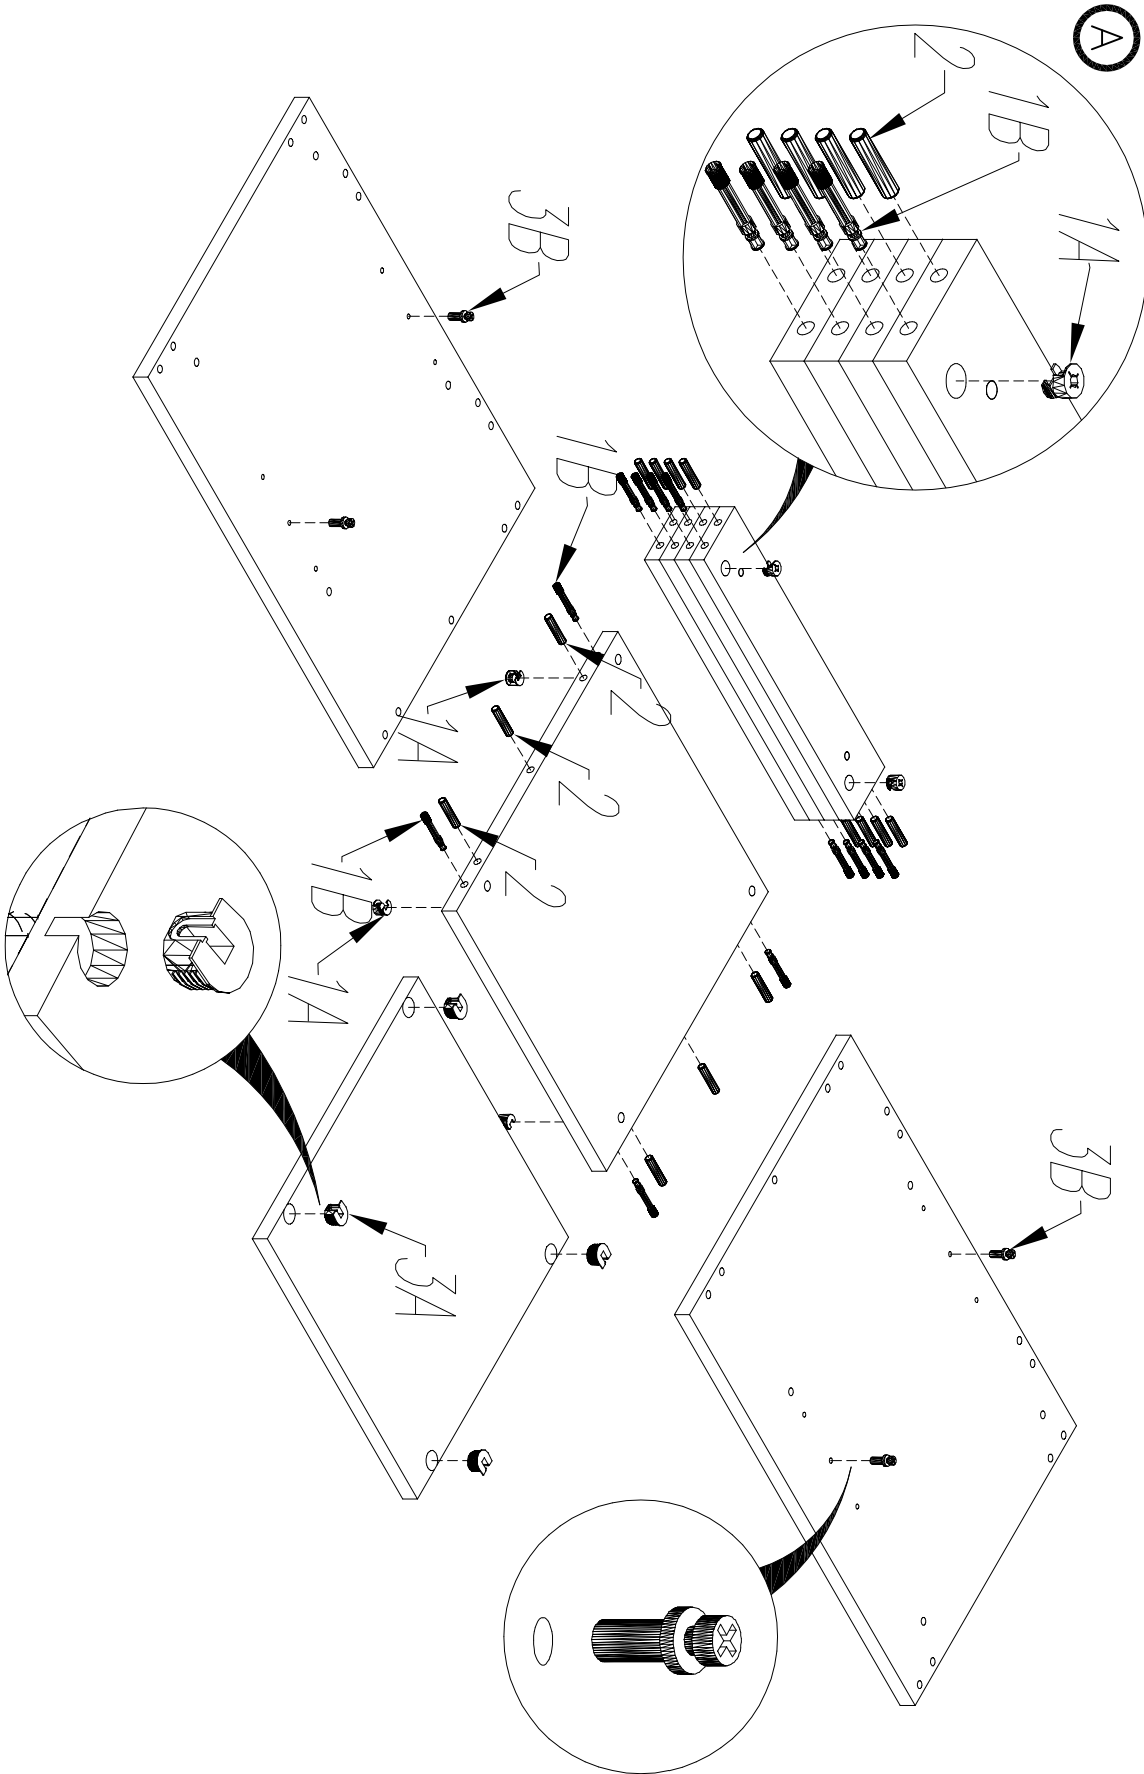


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

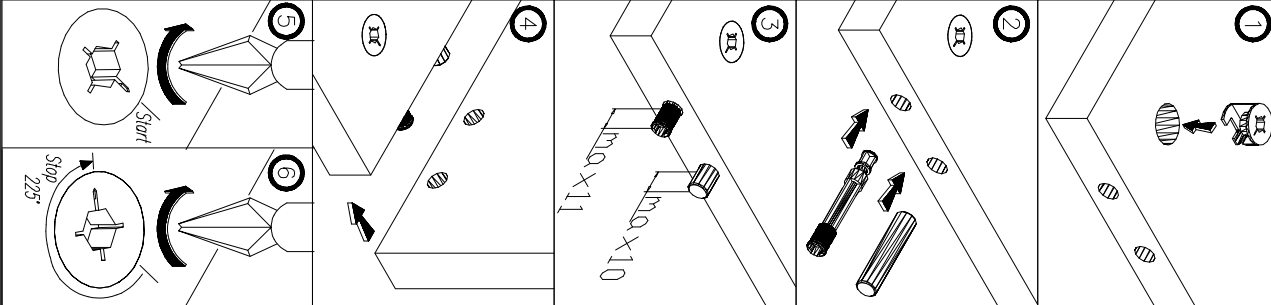

B

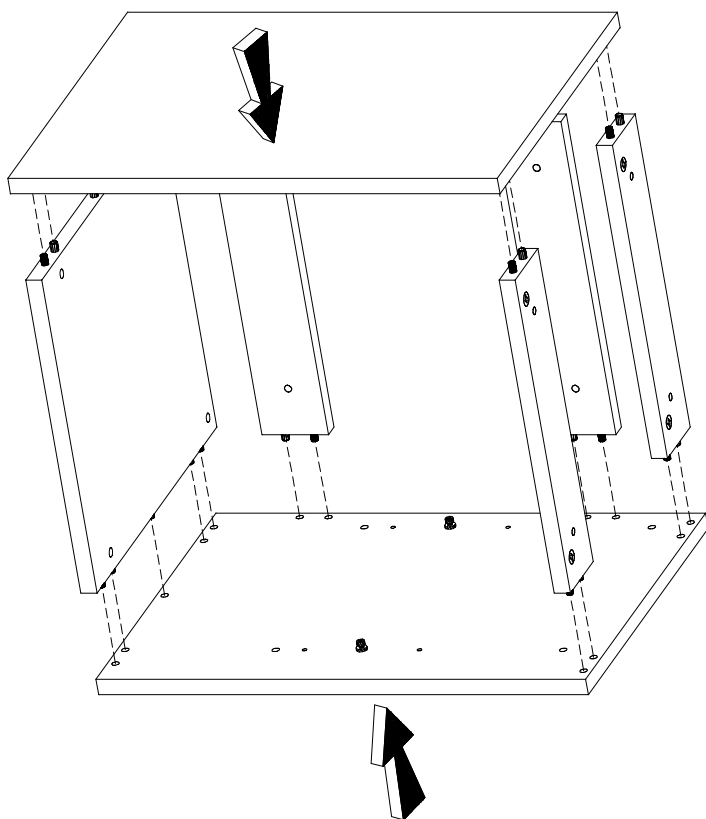

C

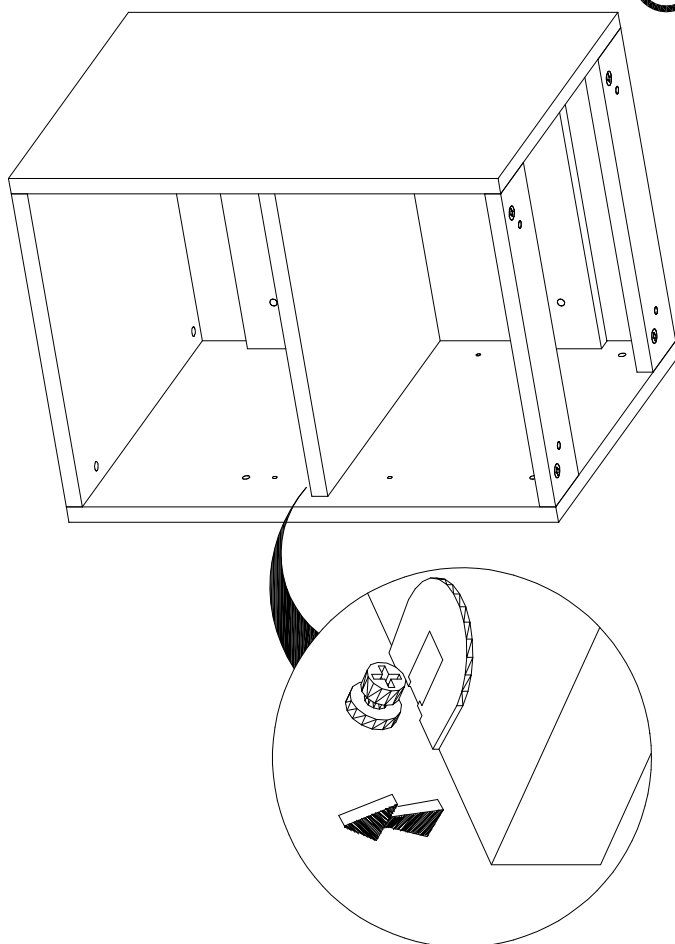

D

