



OGI SLIDE


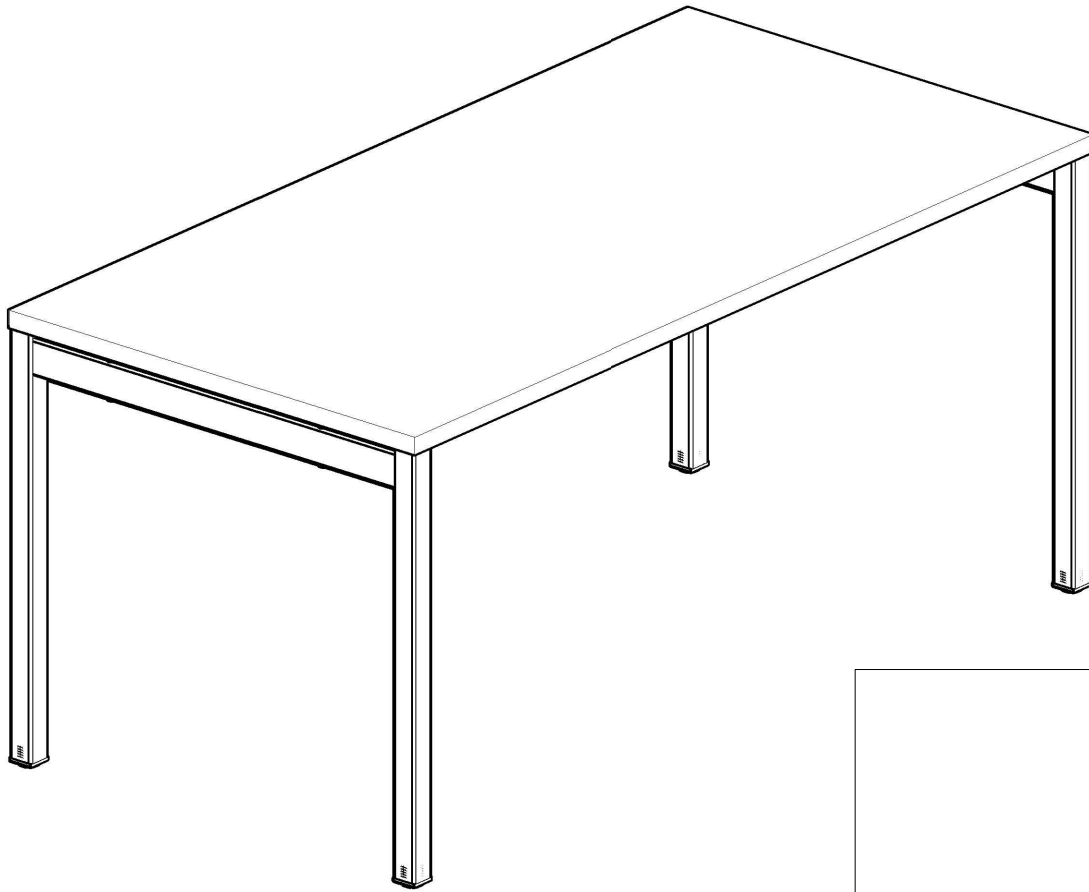



BOX 1

BOX 2

BOX 3

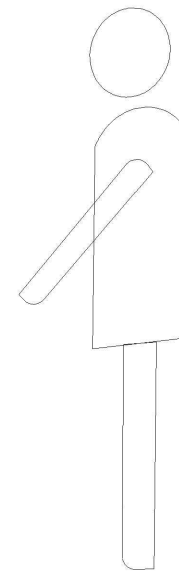

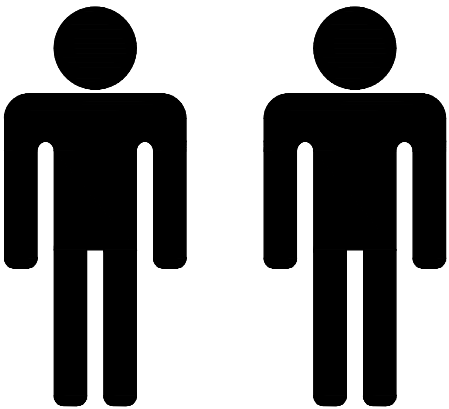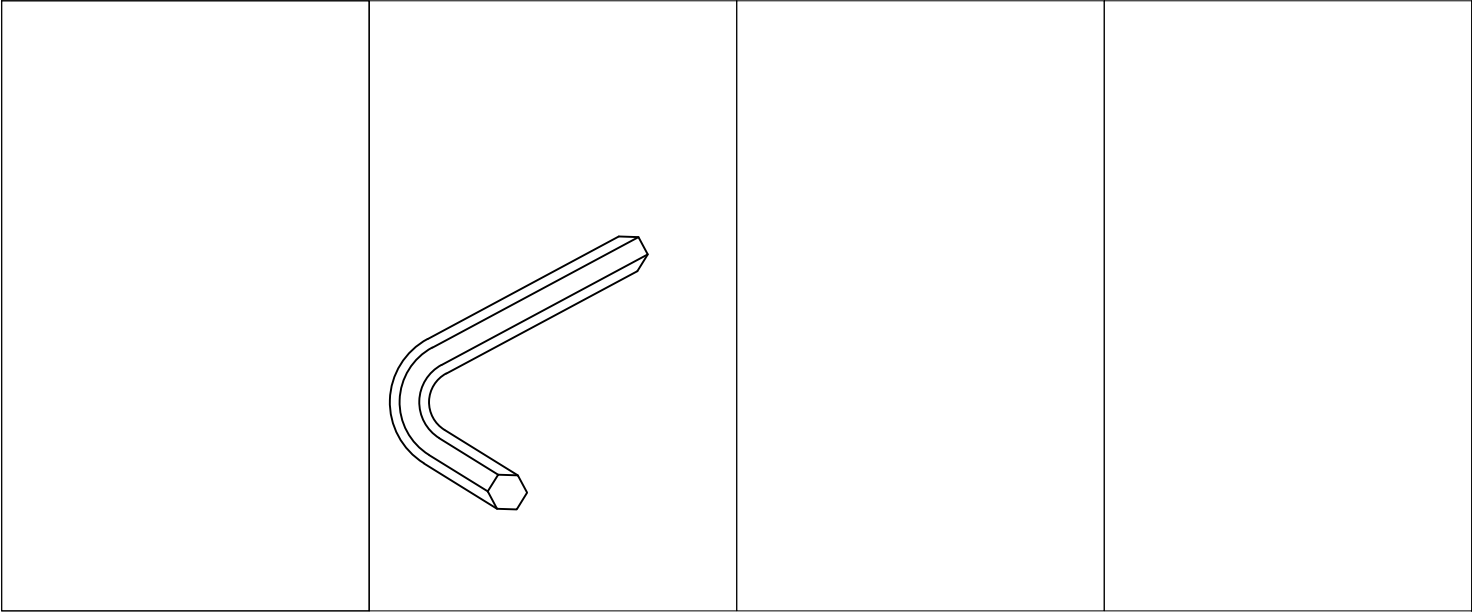


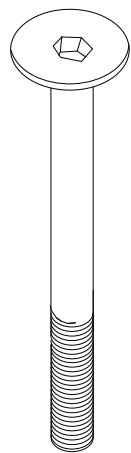

M6x68

4x


1

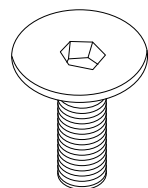

M6x10


2x

2

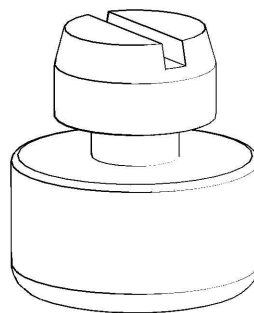


4x

3

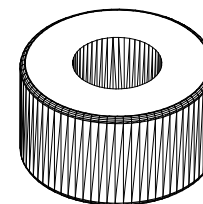


2x

4

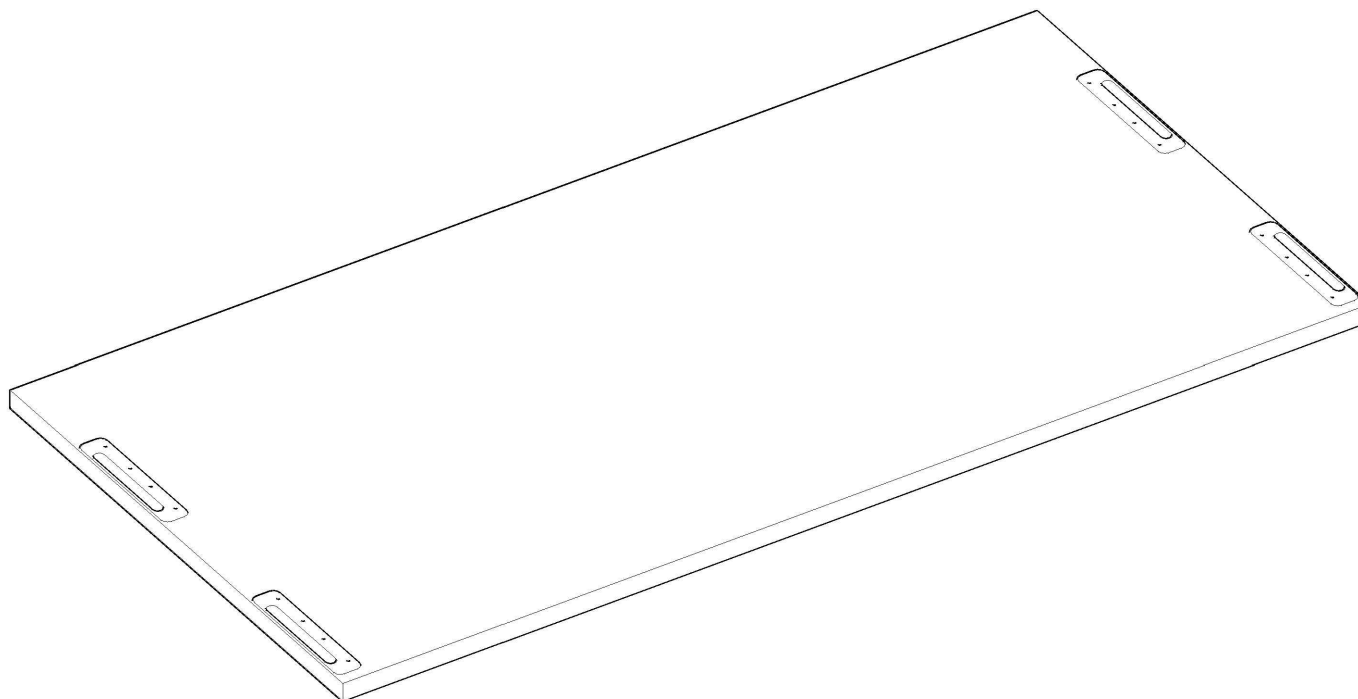


3


5

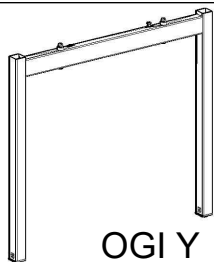


OGI Y

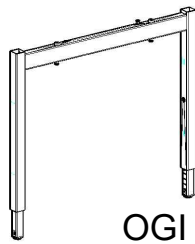


OGI Y

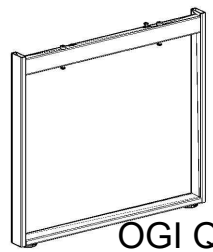


OGI Q

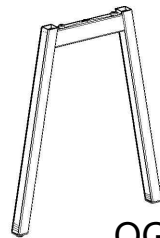


OGI M


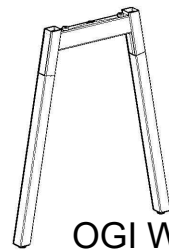






OGI W


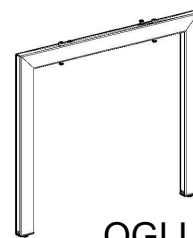


OGI U

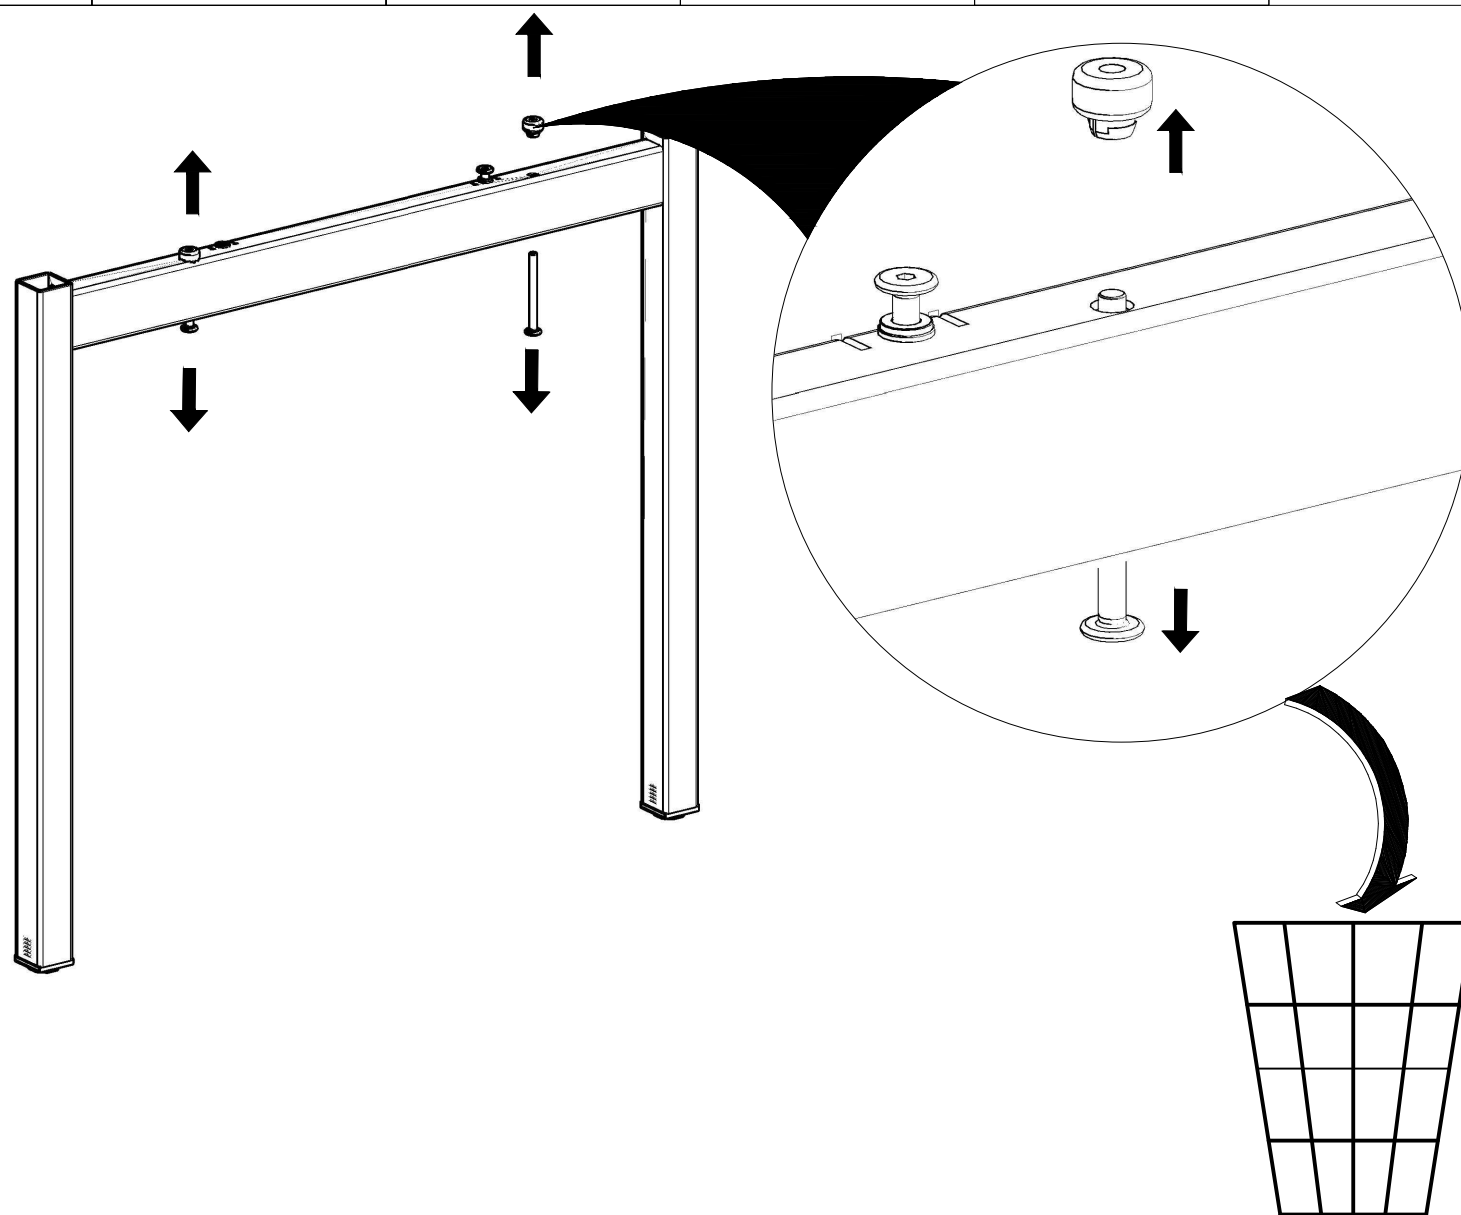


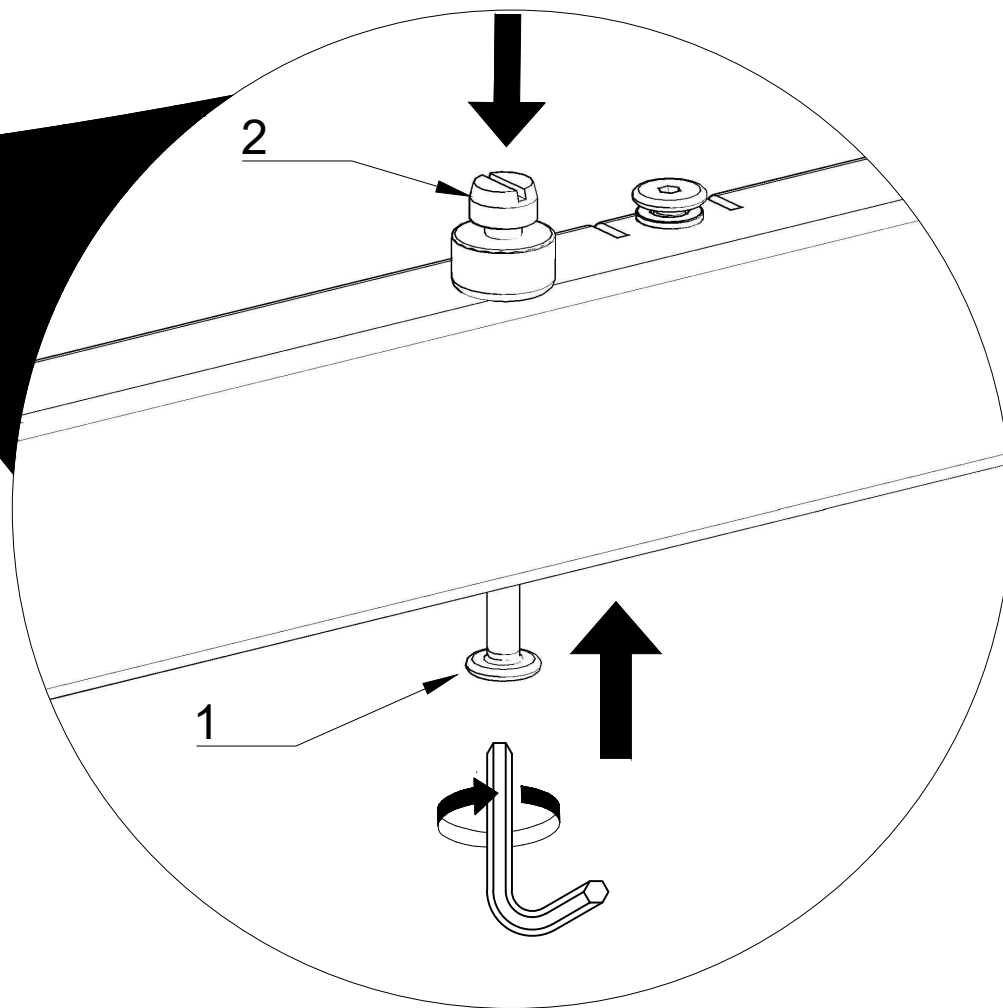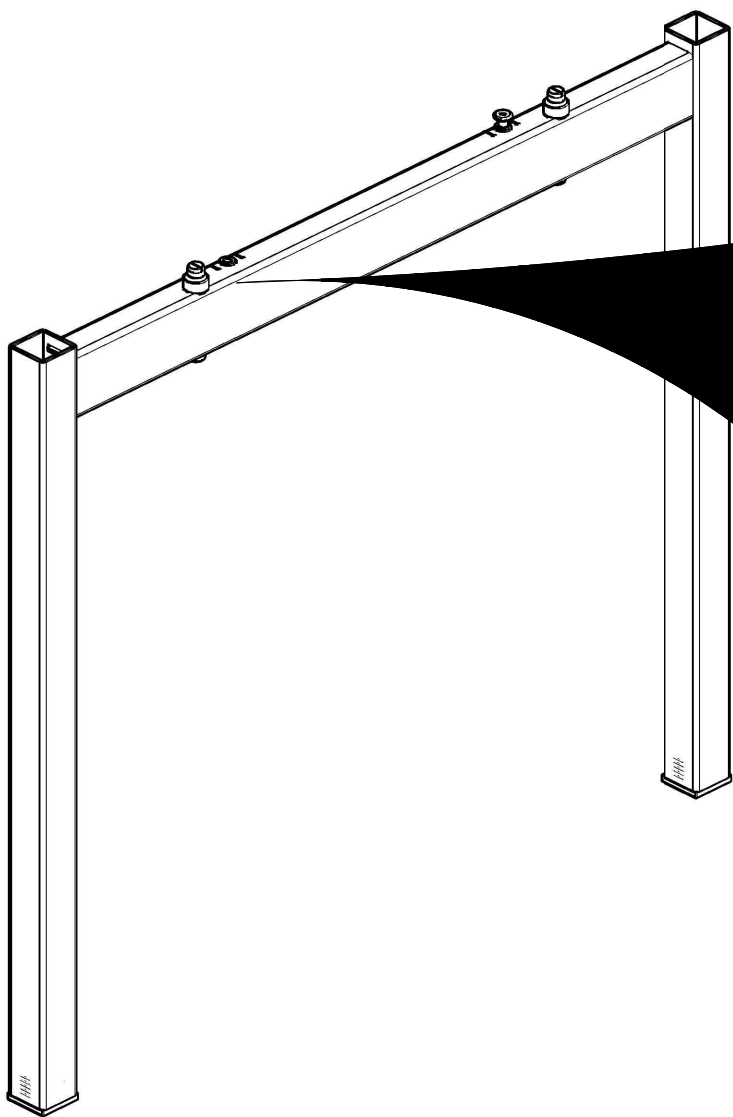


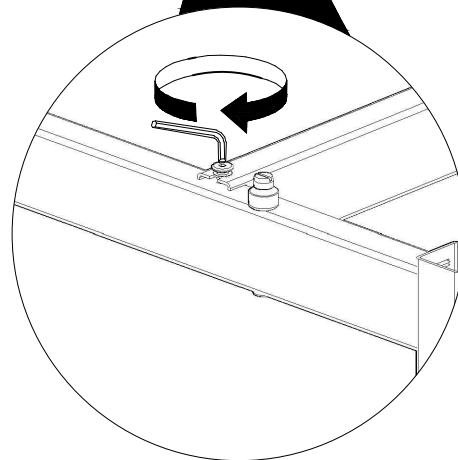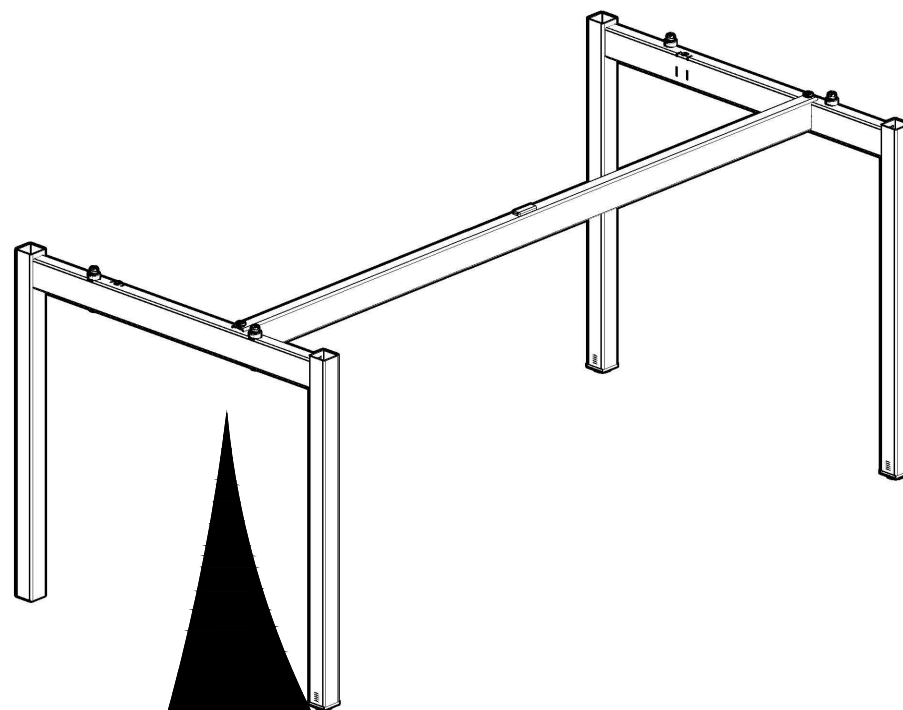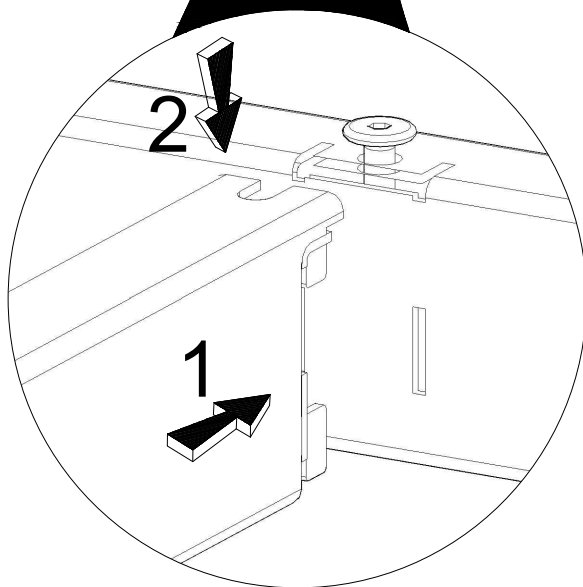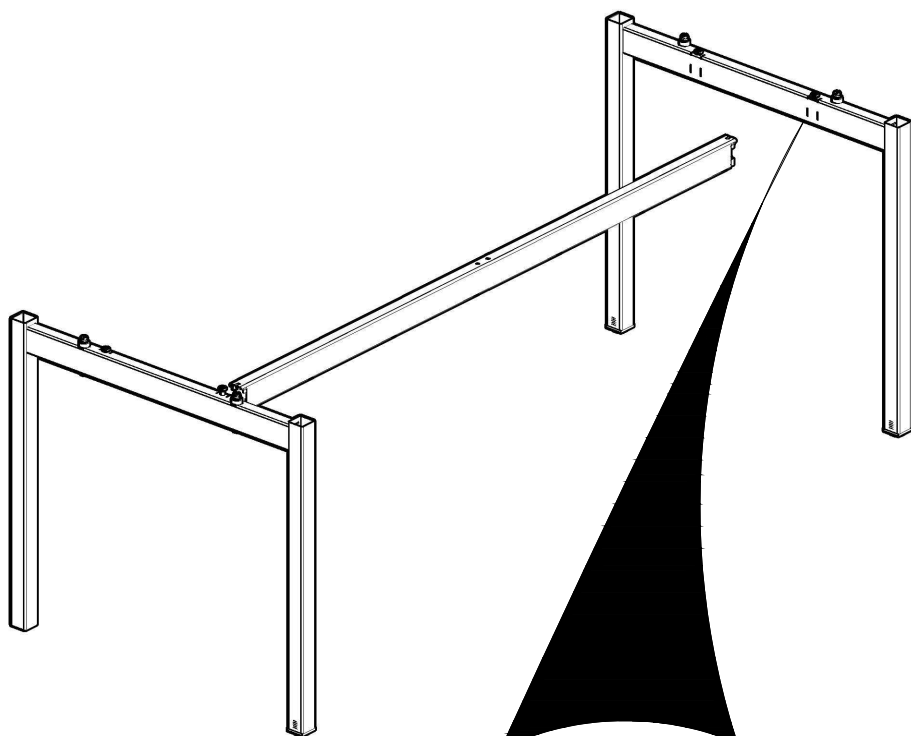

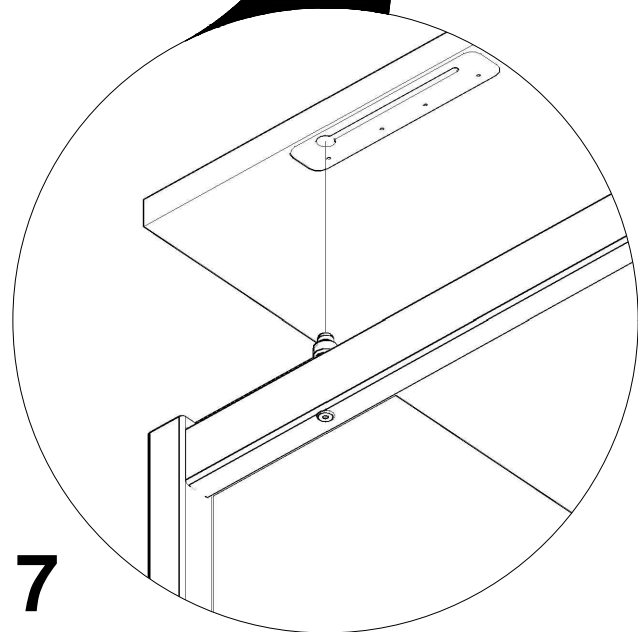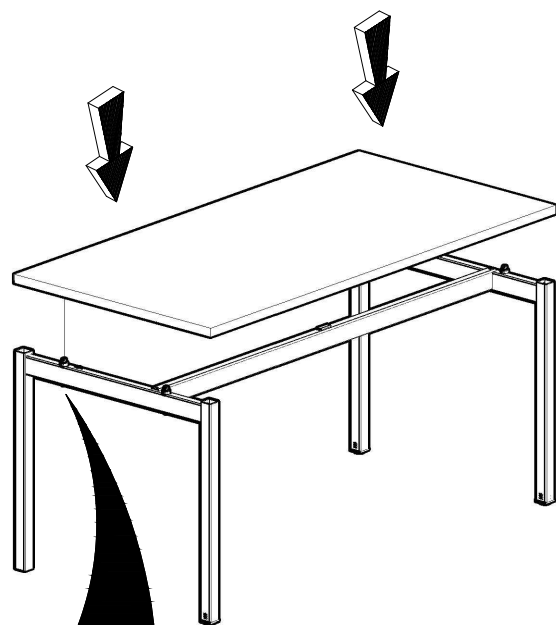


7

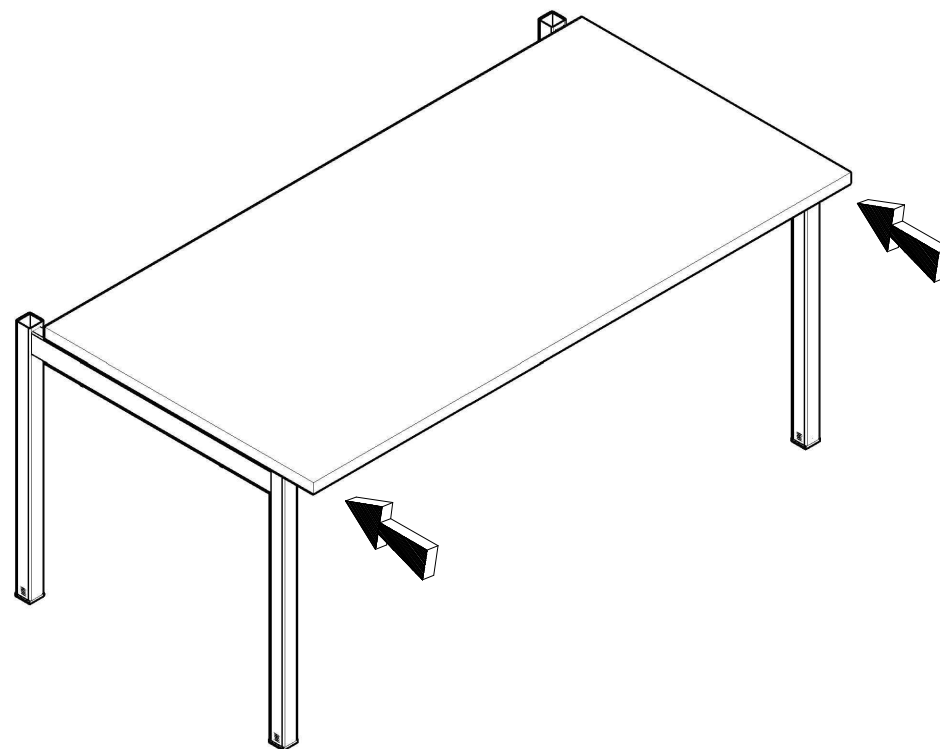

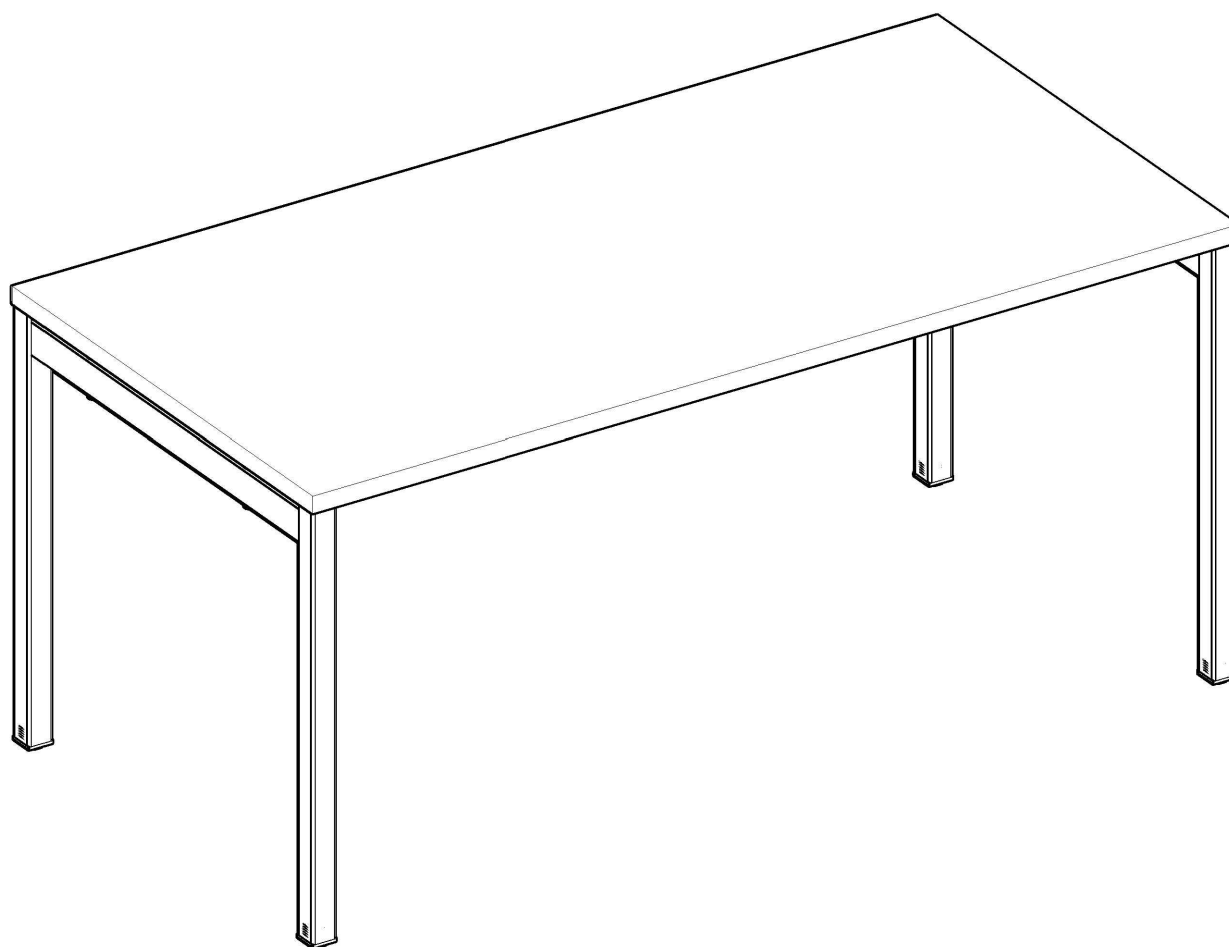


OGI SLIDE


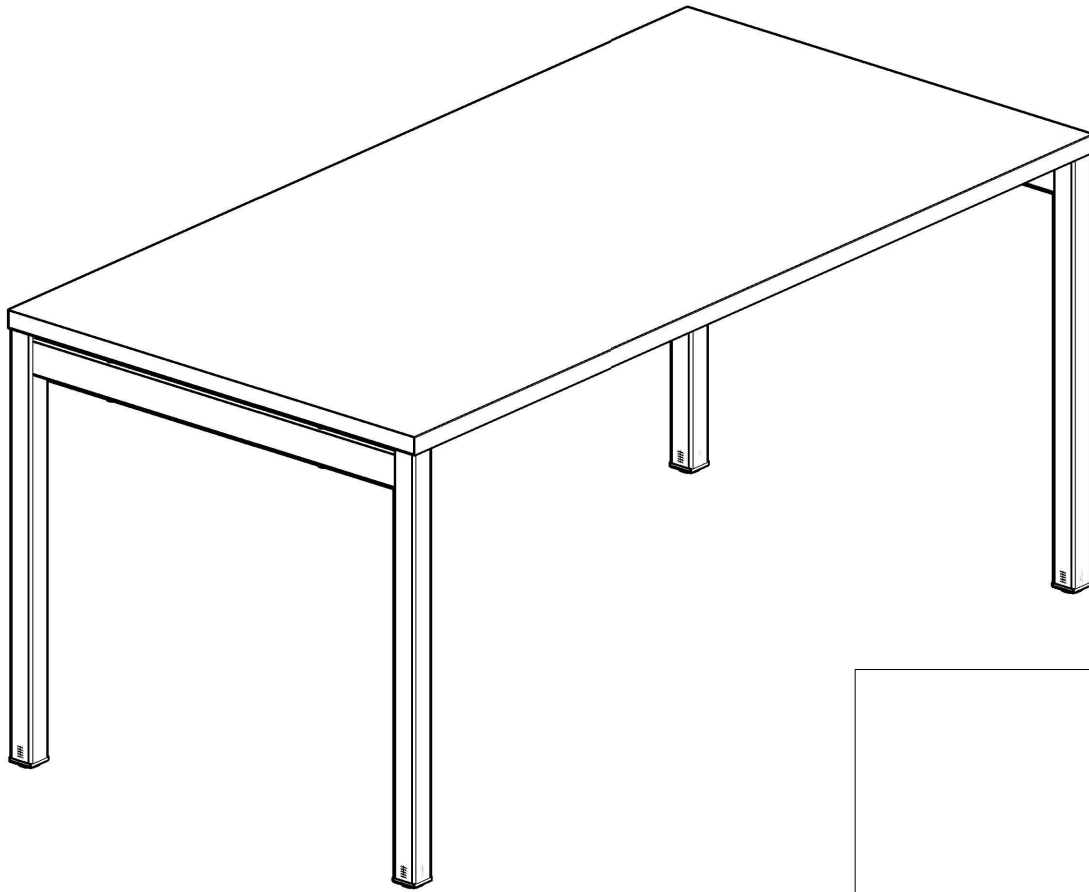



BOX 1

BOX 2

BOX 3

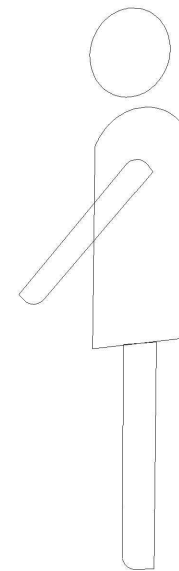

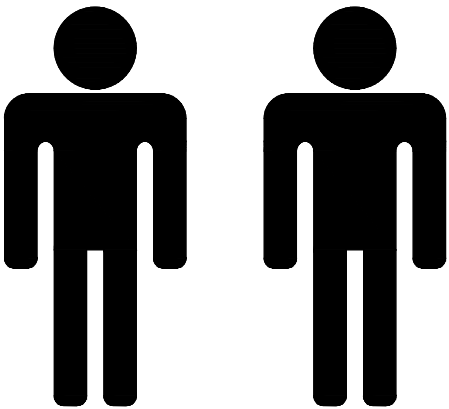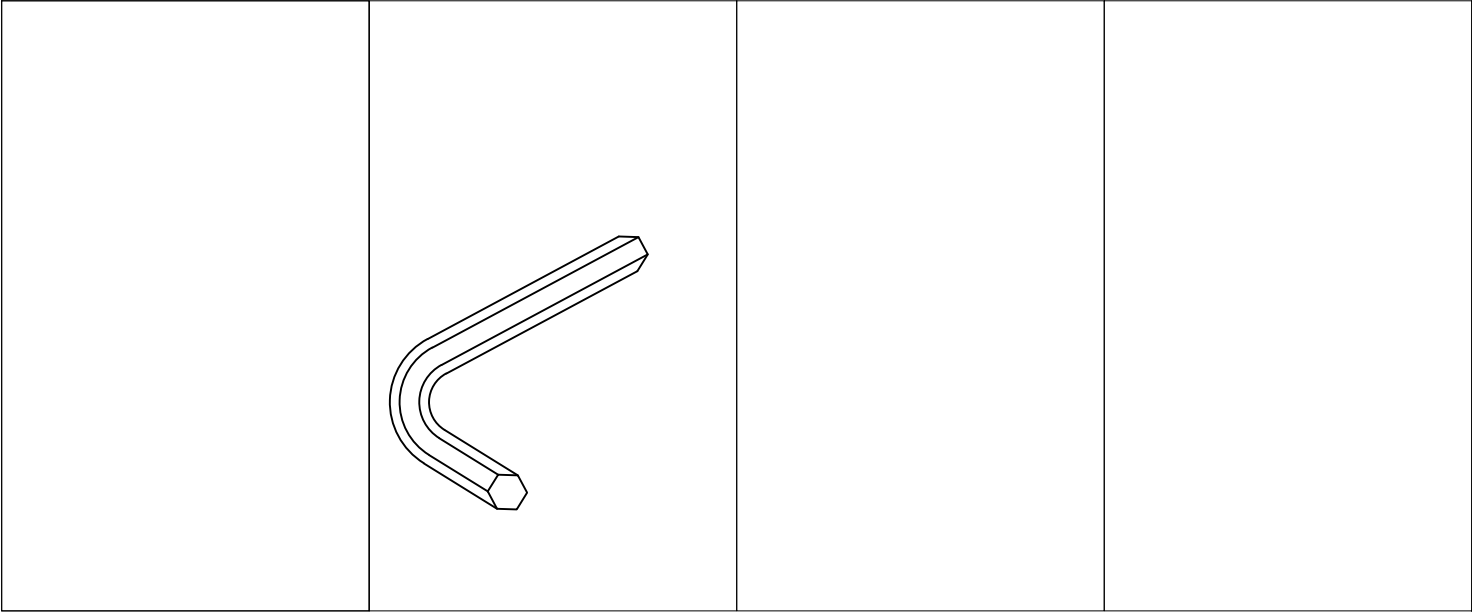


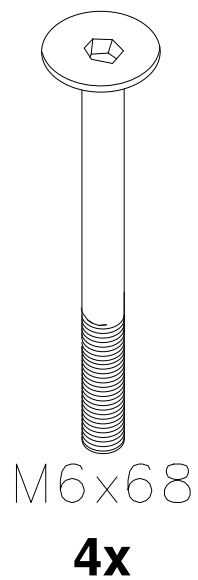


1




2

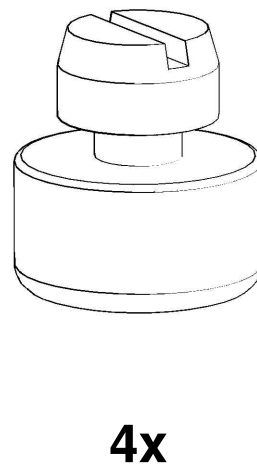


3

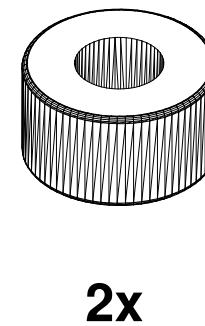


4

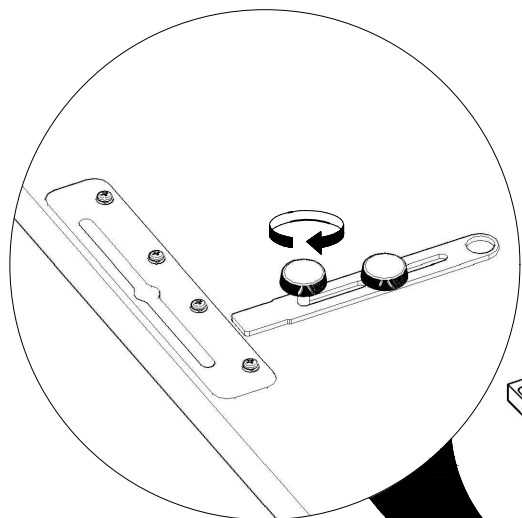


3

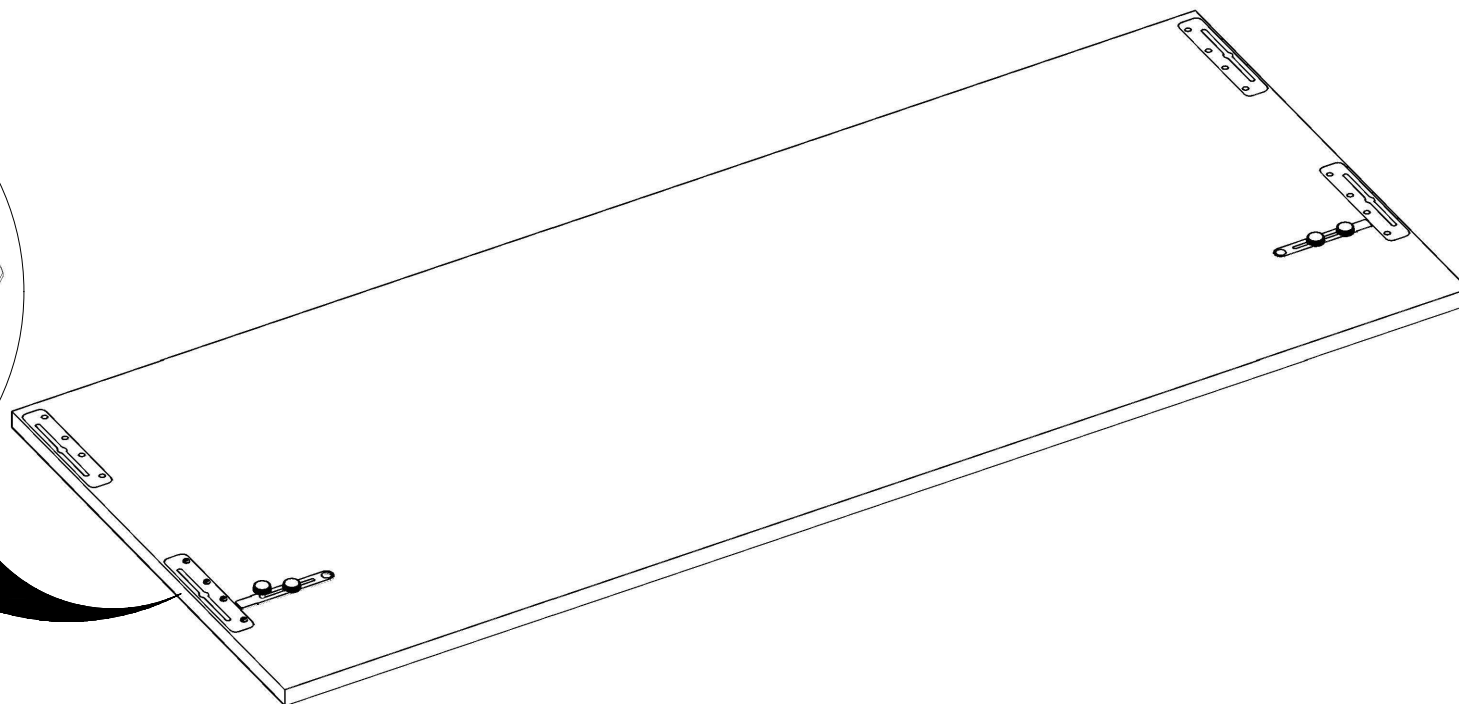


5

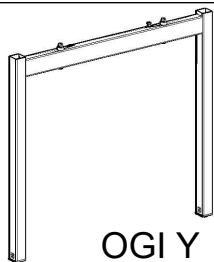


OGI Y

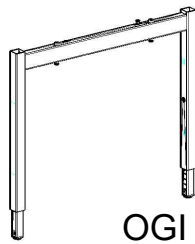


OGI Y

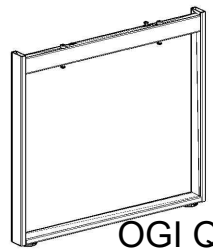


OGI Q

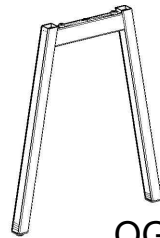


OGI M


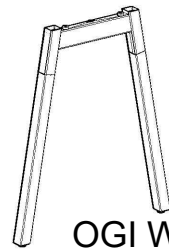




OGI W


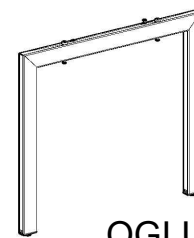


OGI U

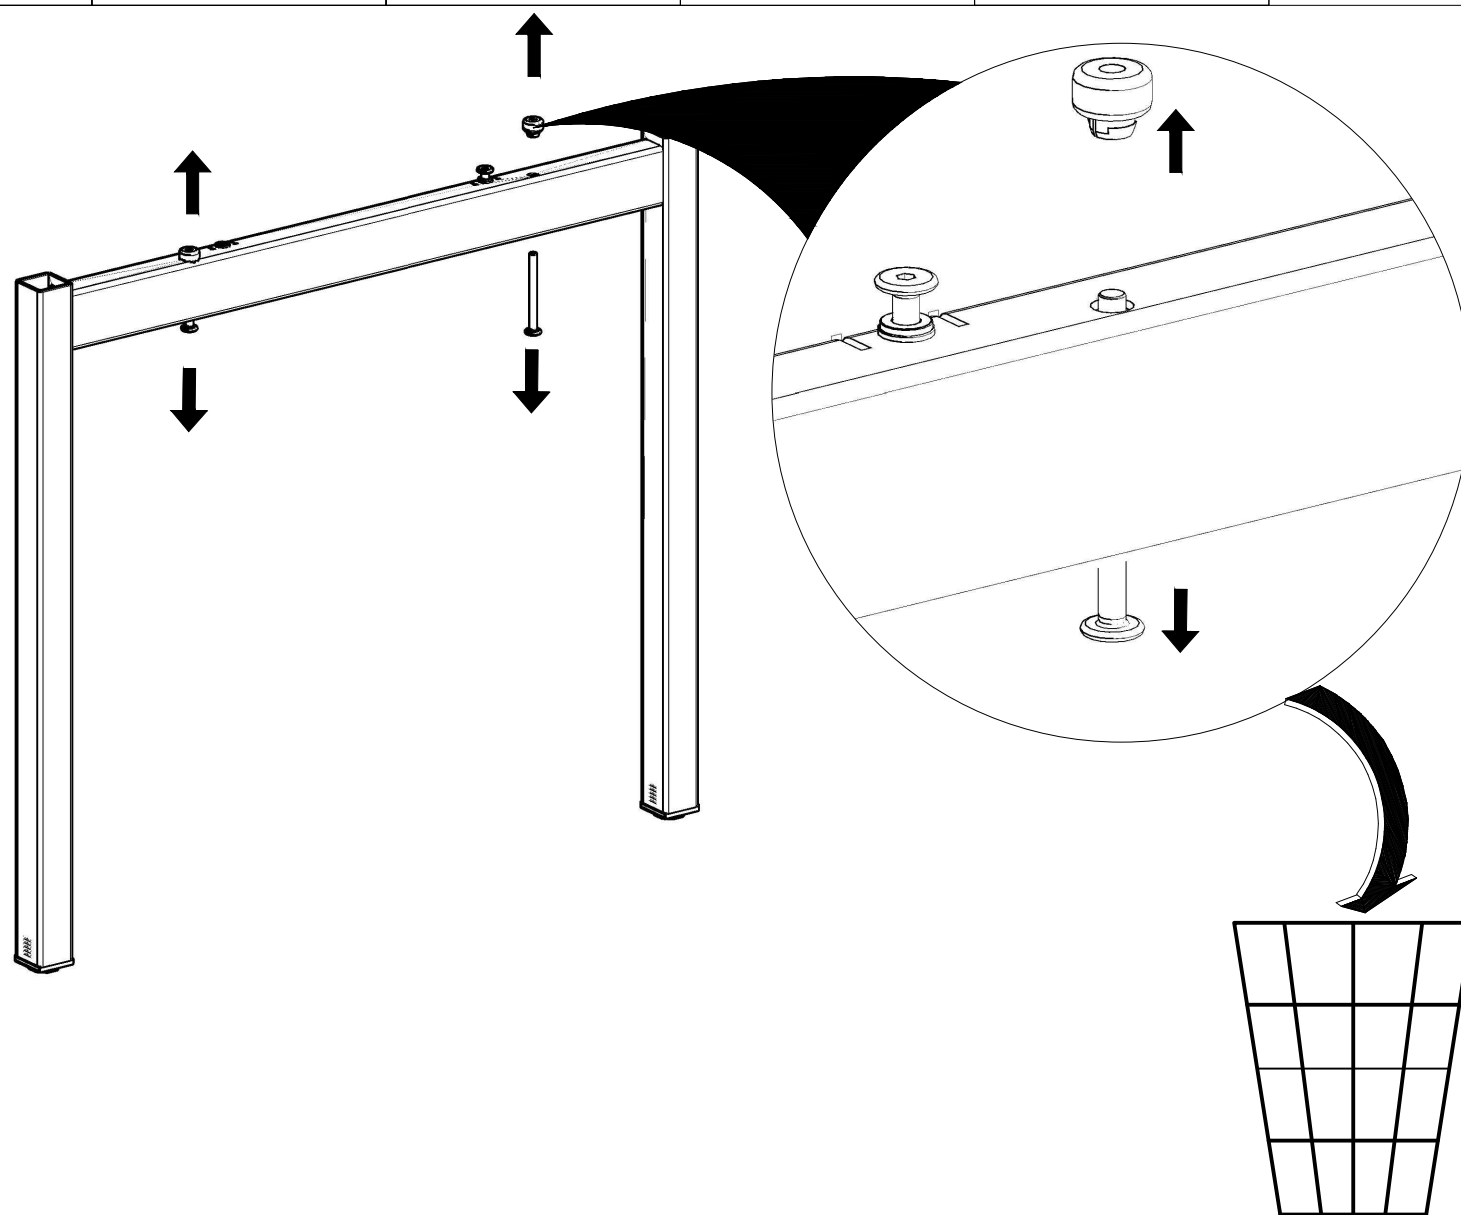


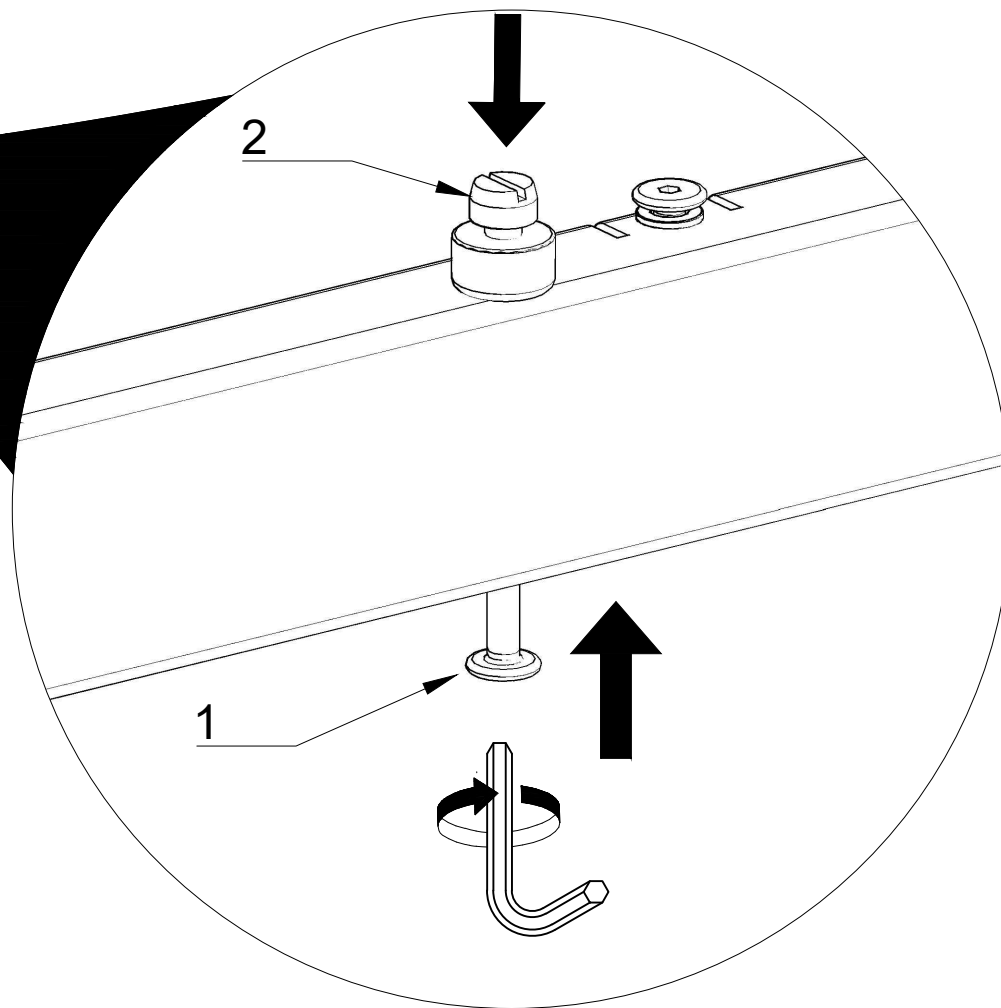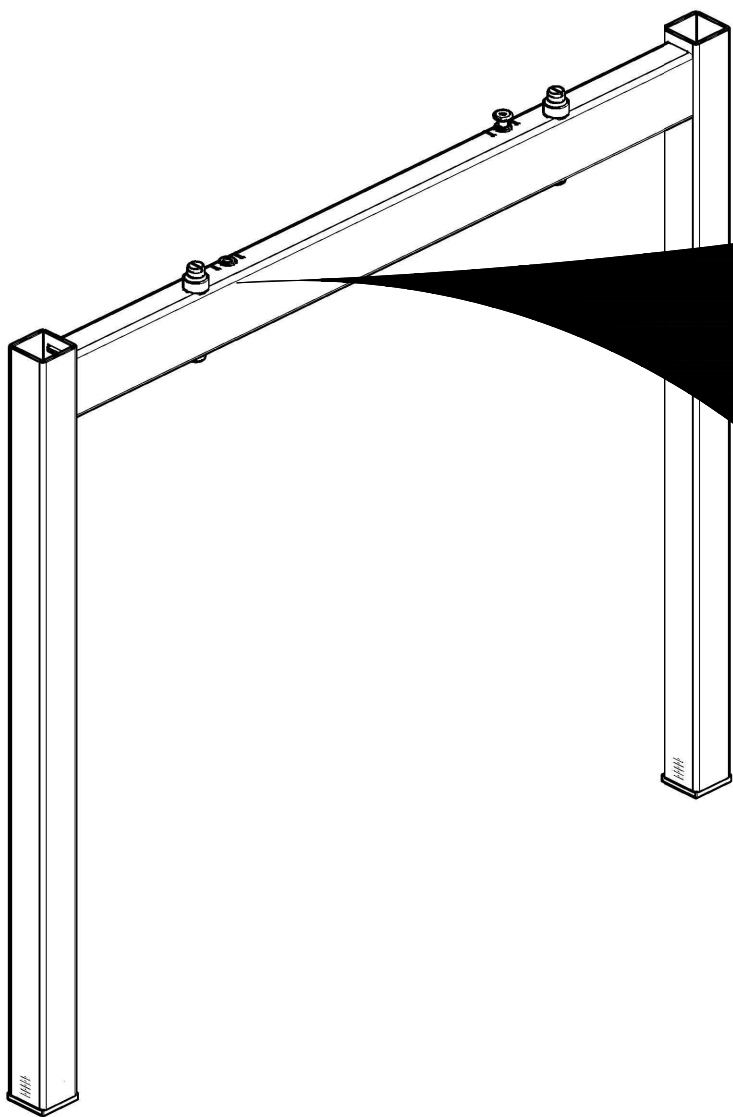


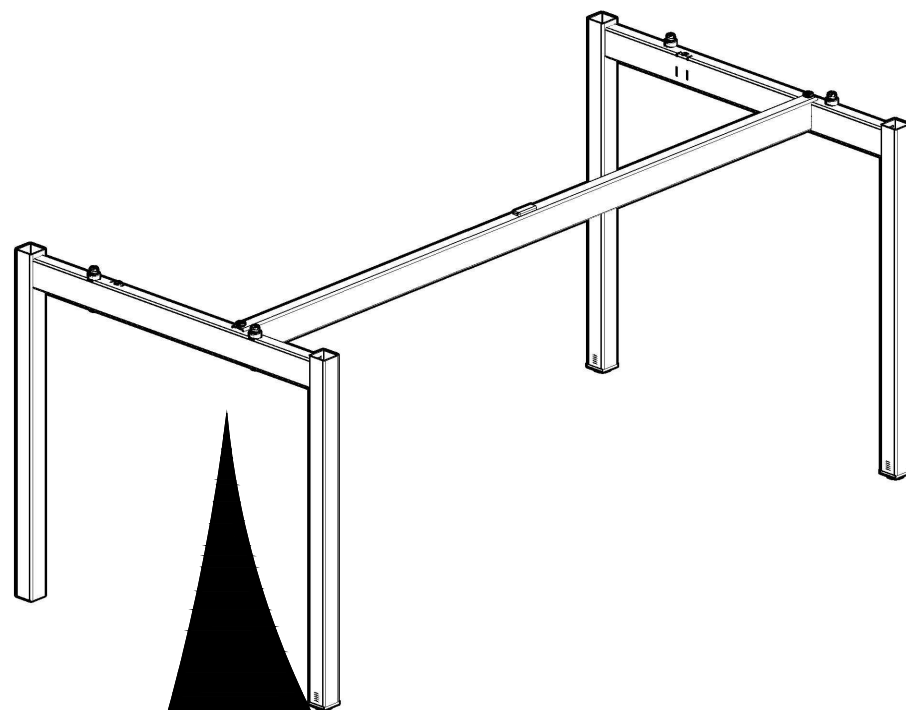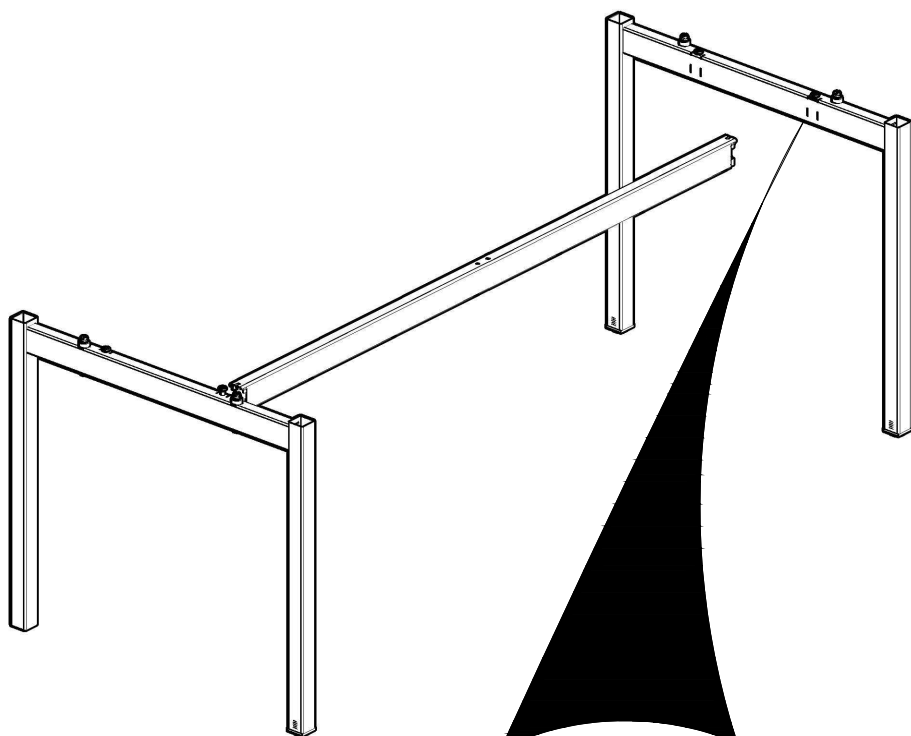

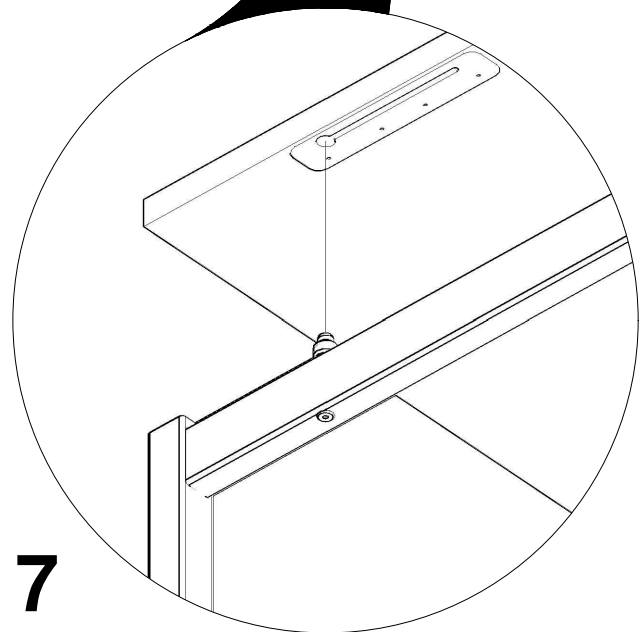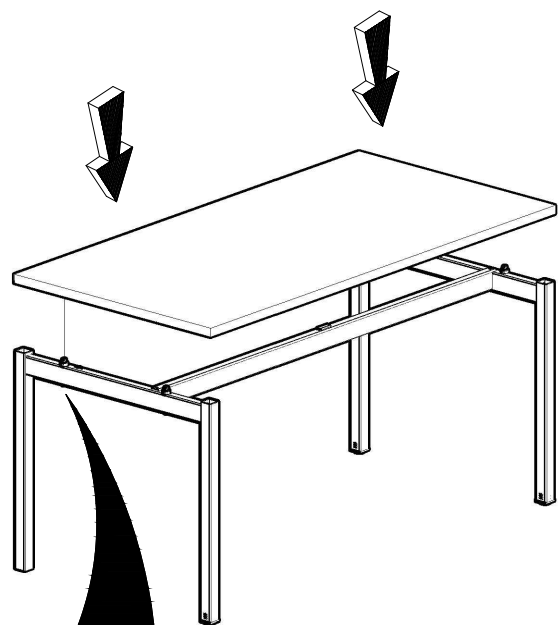




7

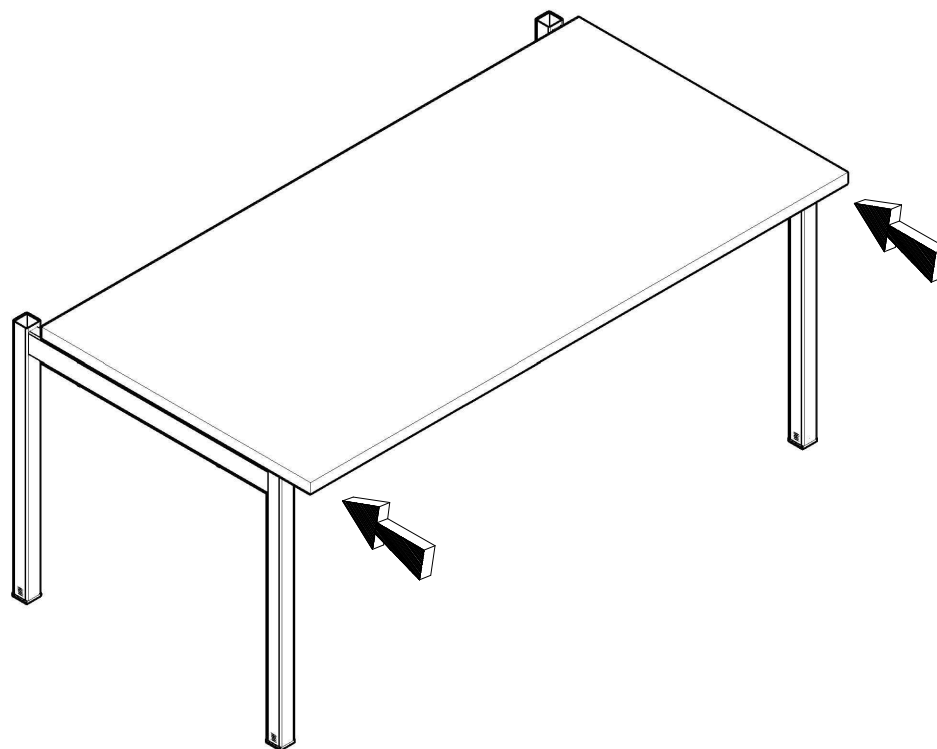


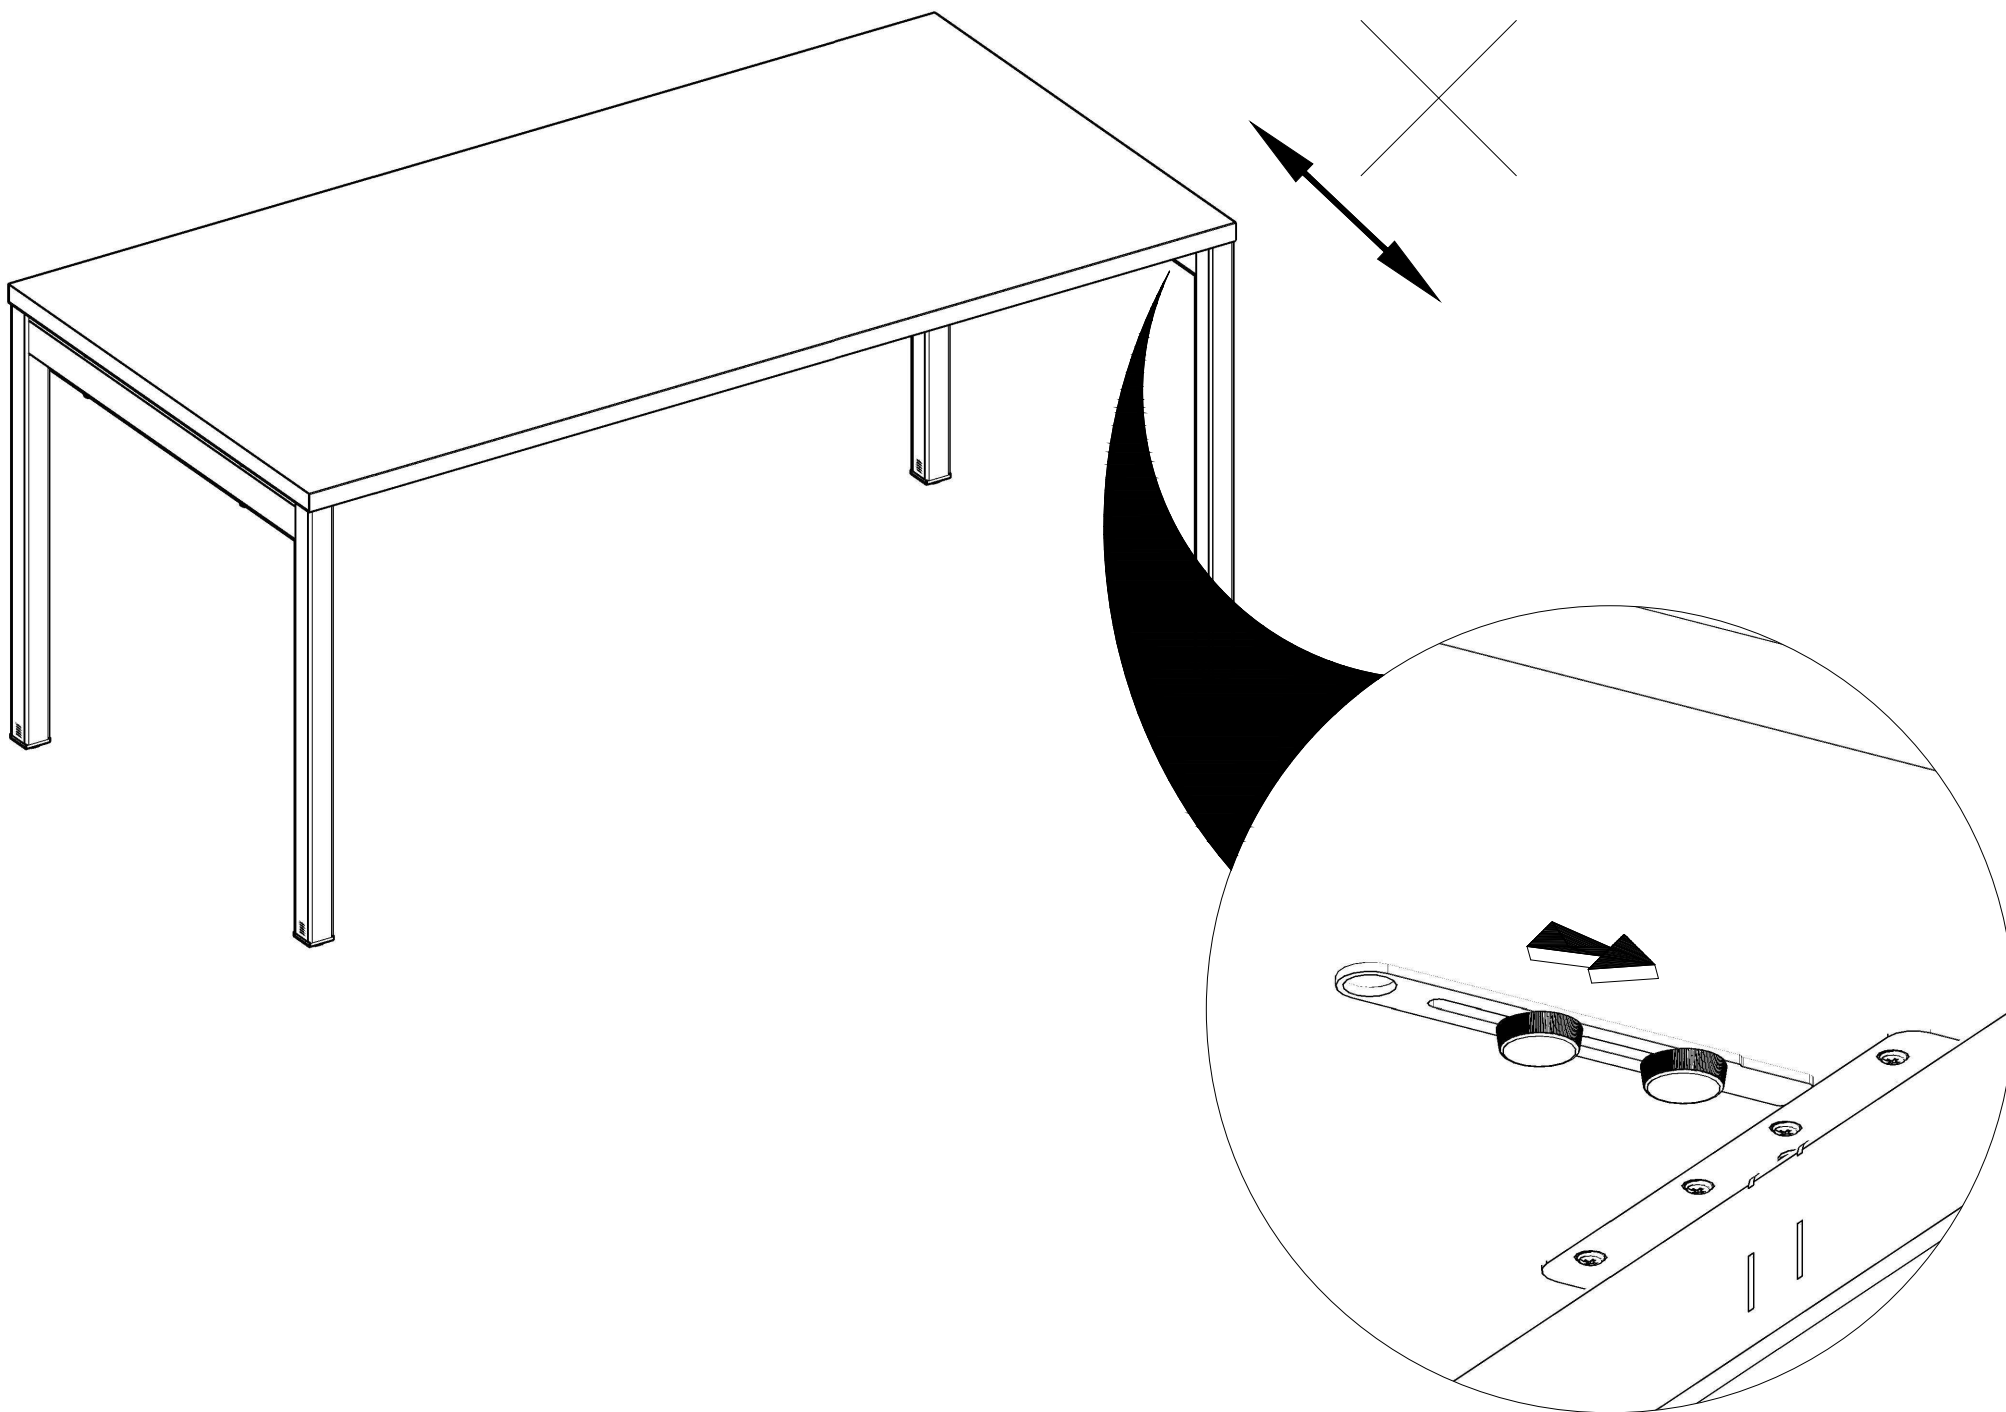

OGI SLIDE

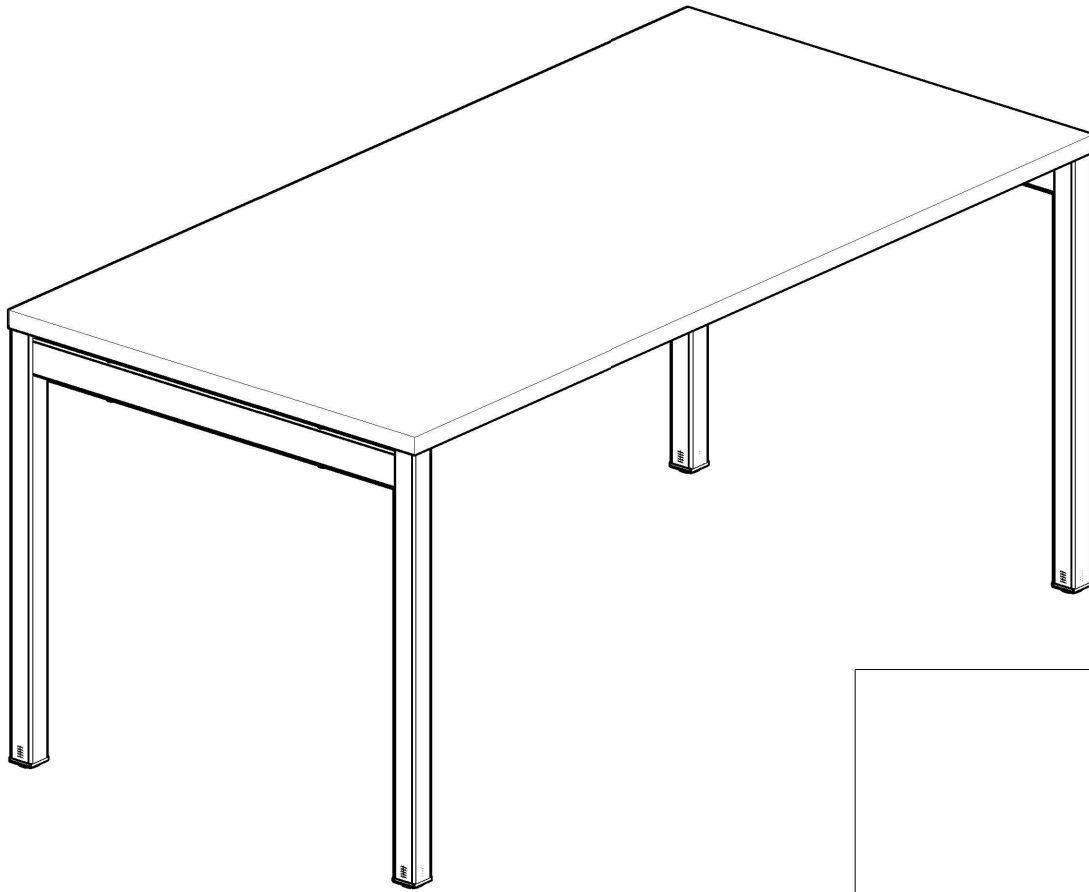

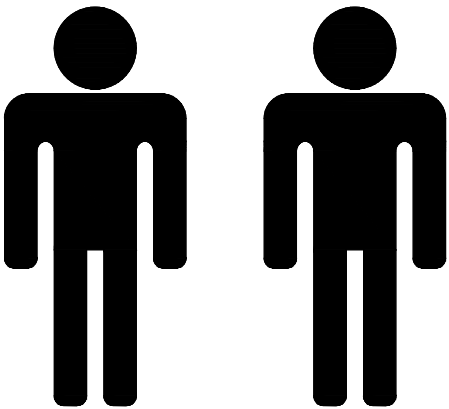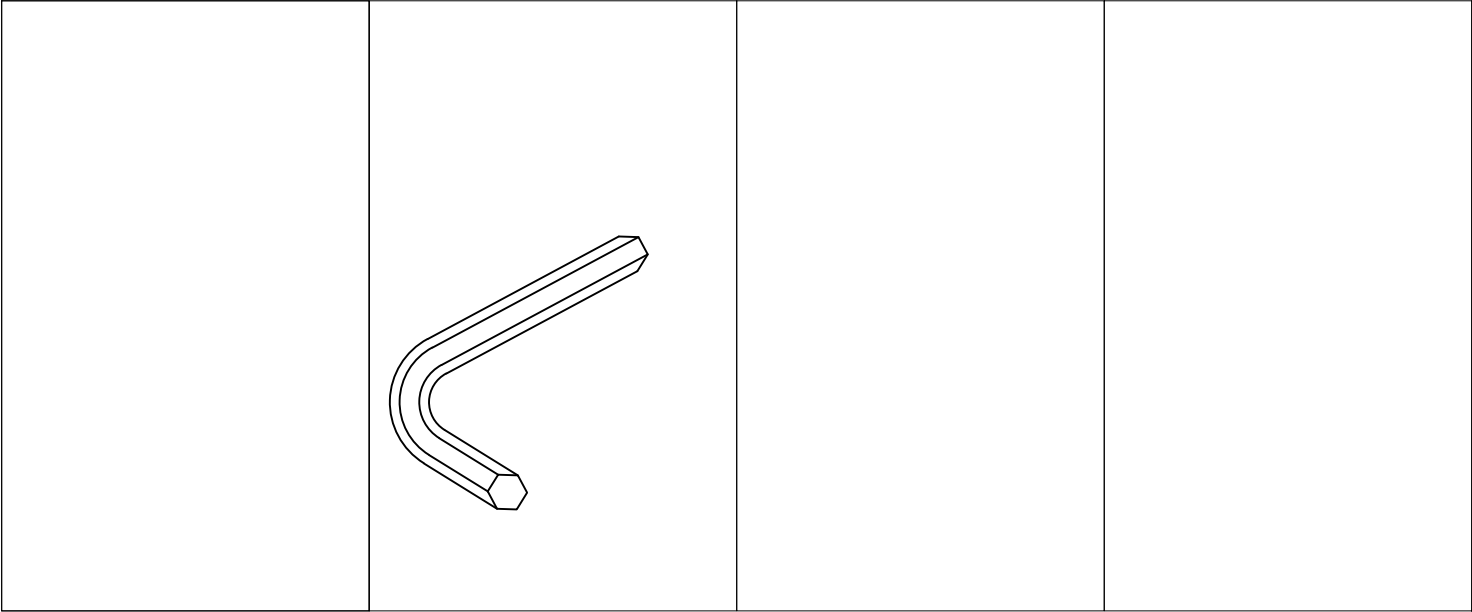


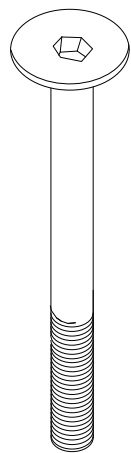

M6x68

4x


1

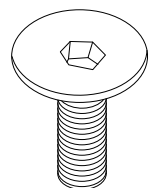

M6x10


2x

2

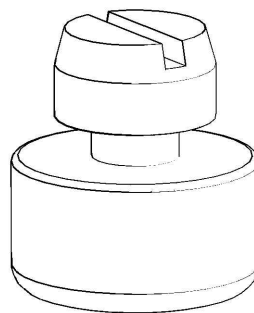


4x

3

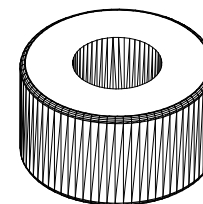


2x

4

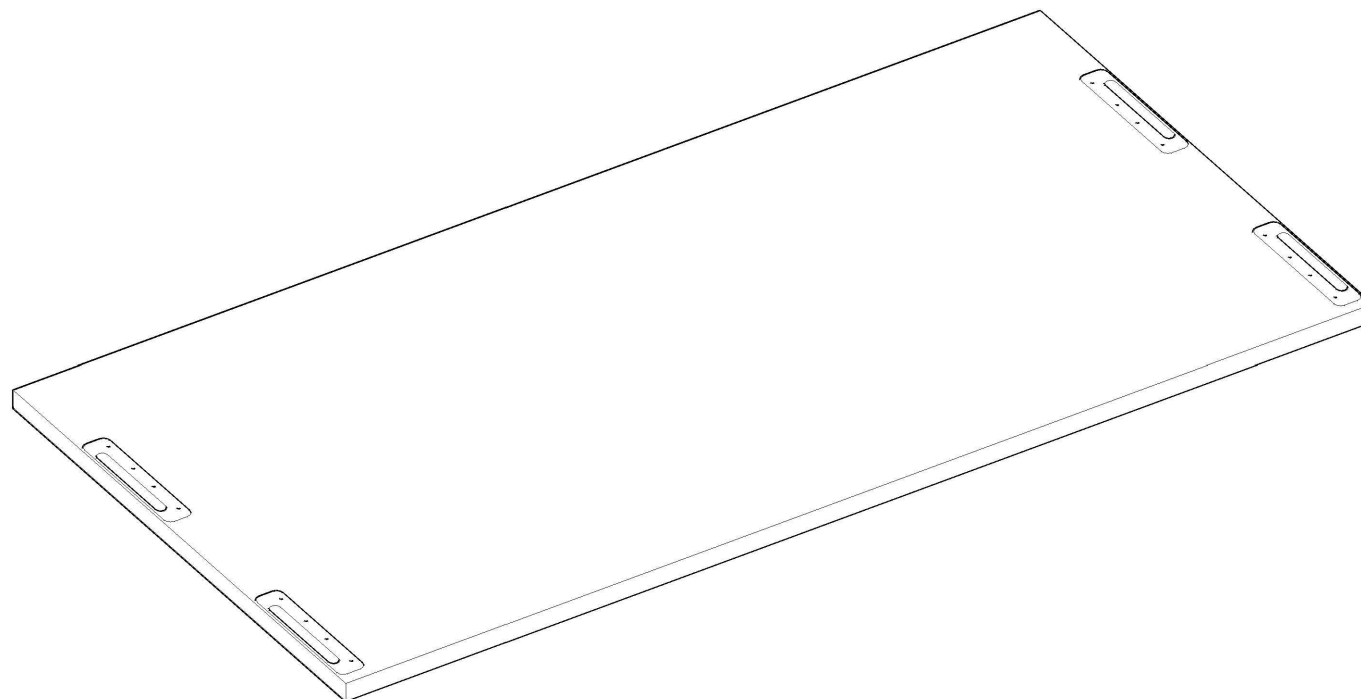


3


5

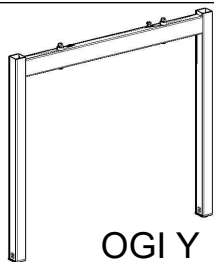


OGI Y

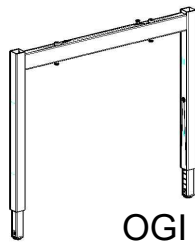


OGI Y

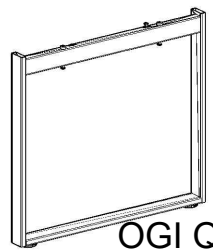


OGI Q

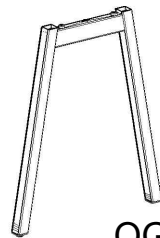


OGI M


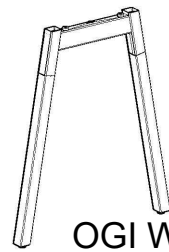




OGI W


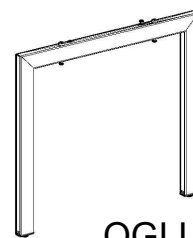


OGI U

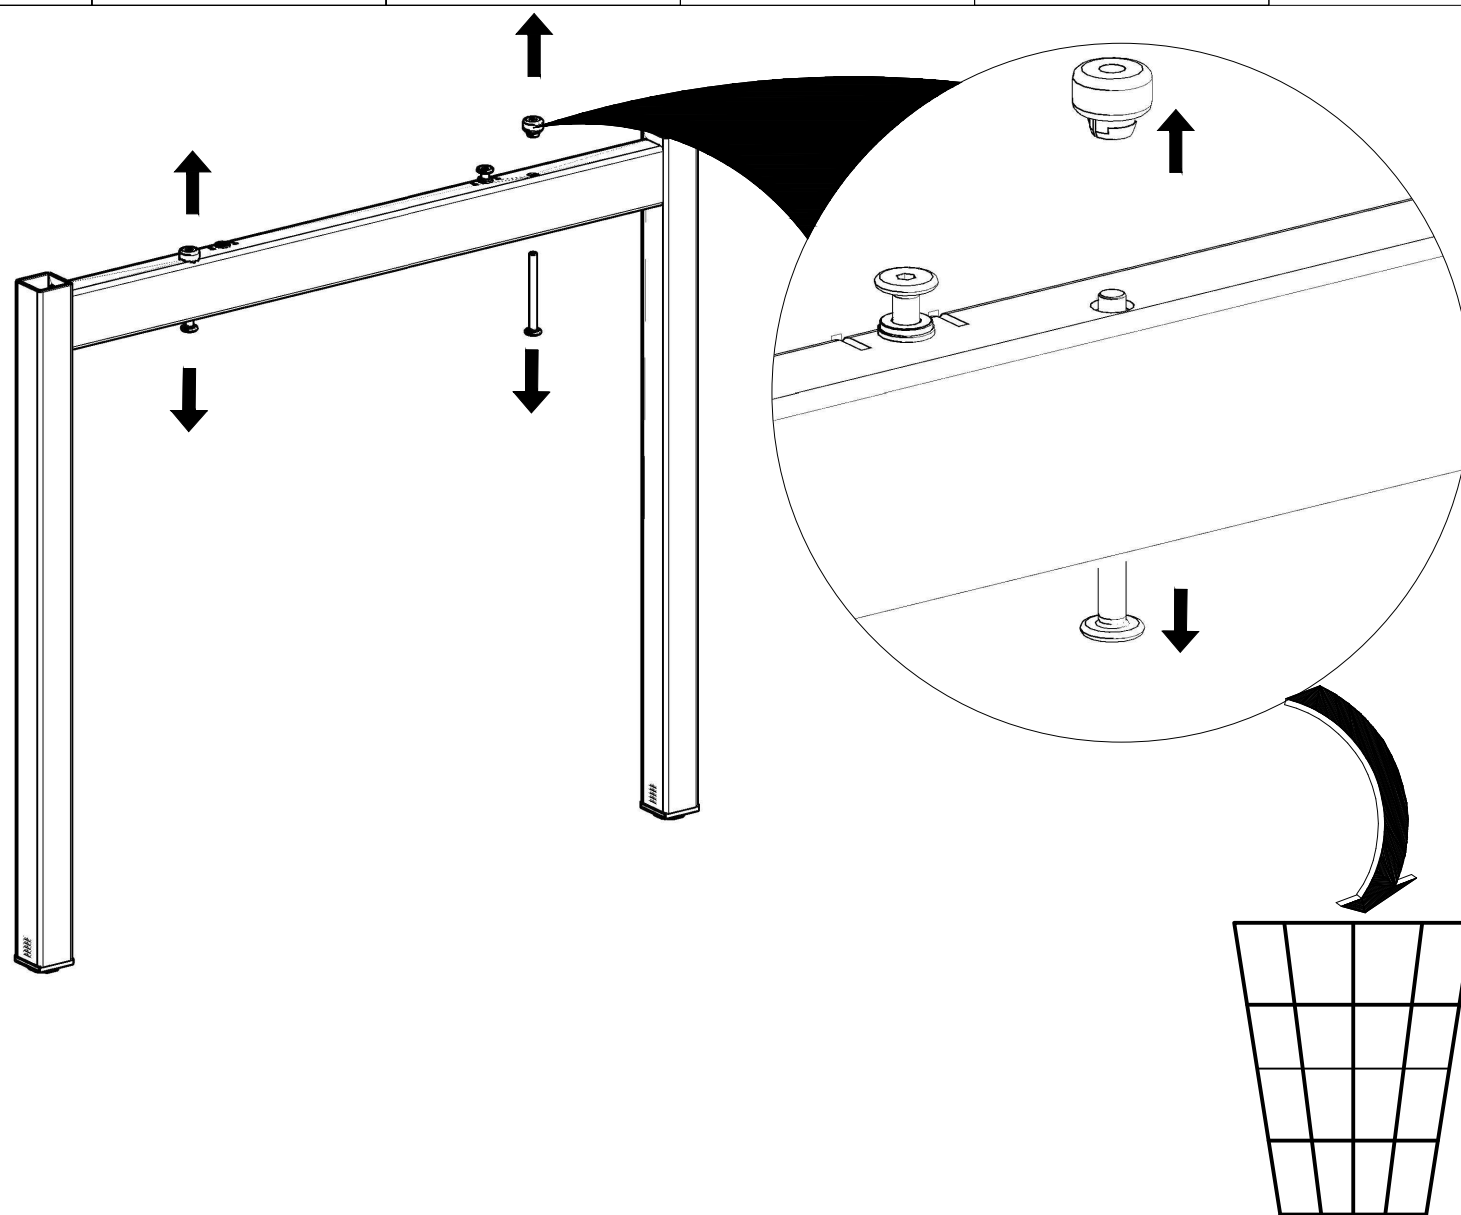


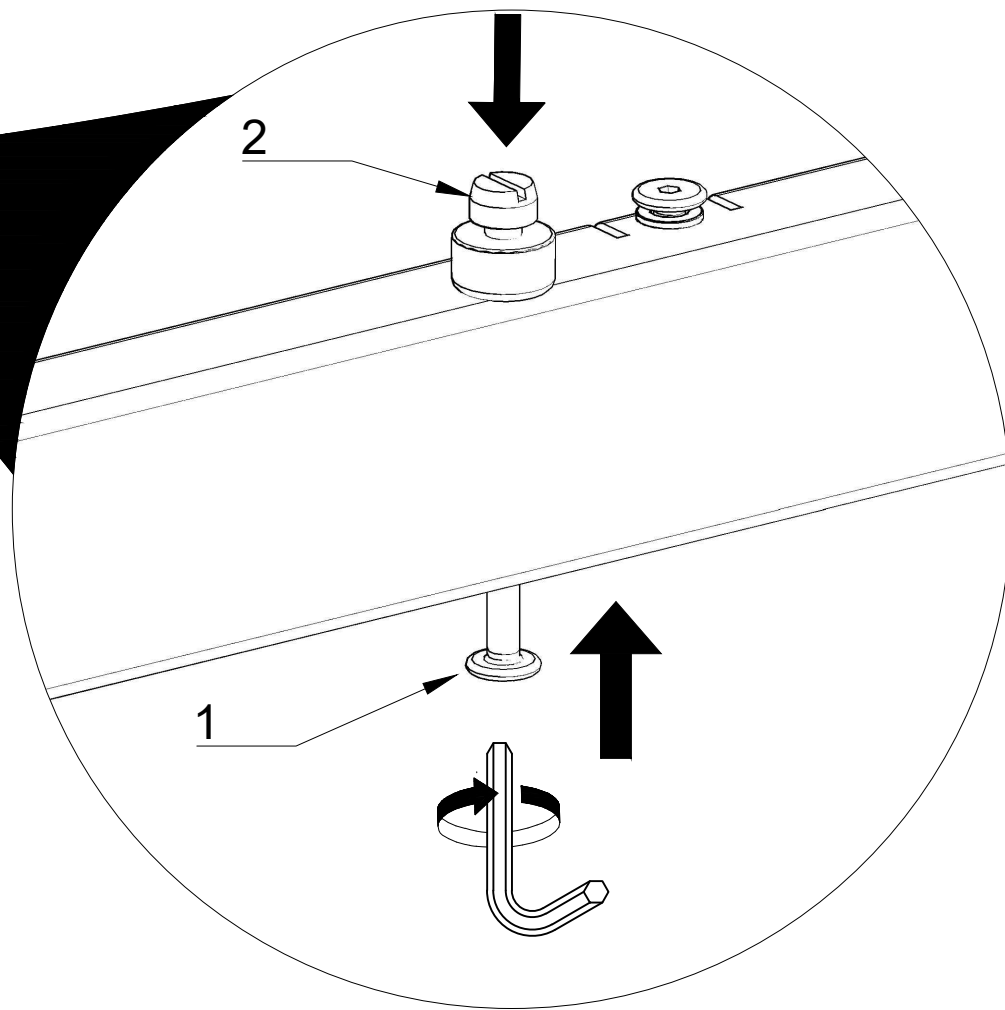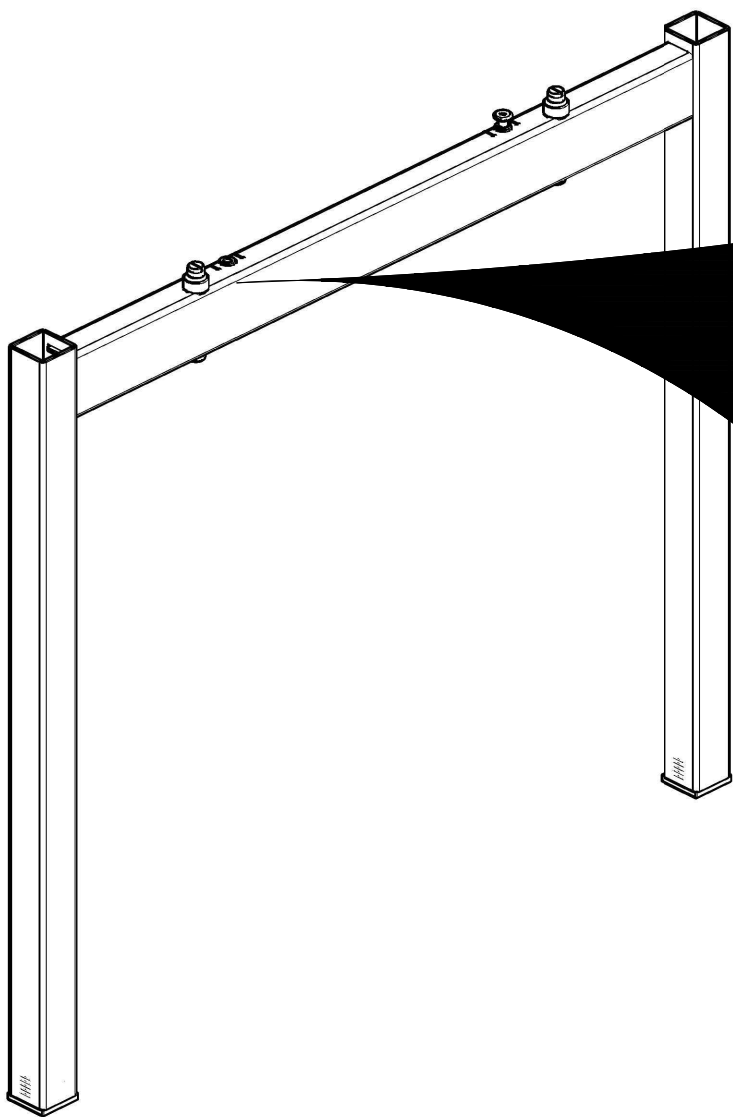


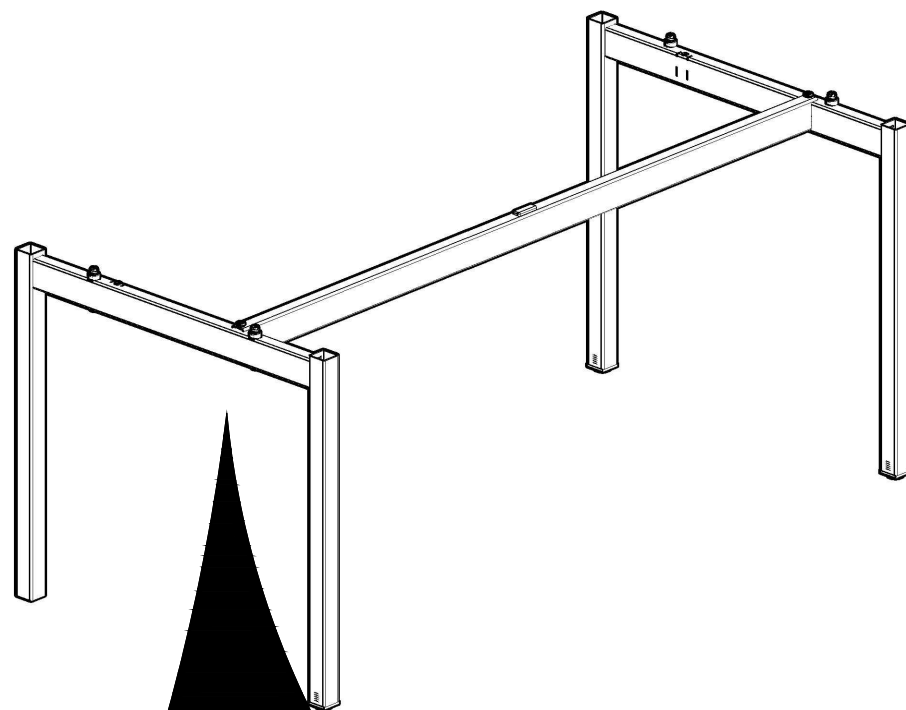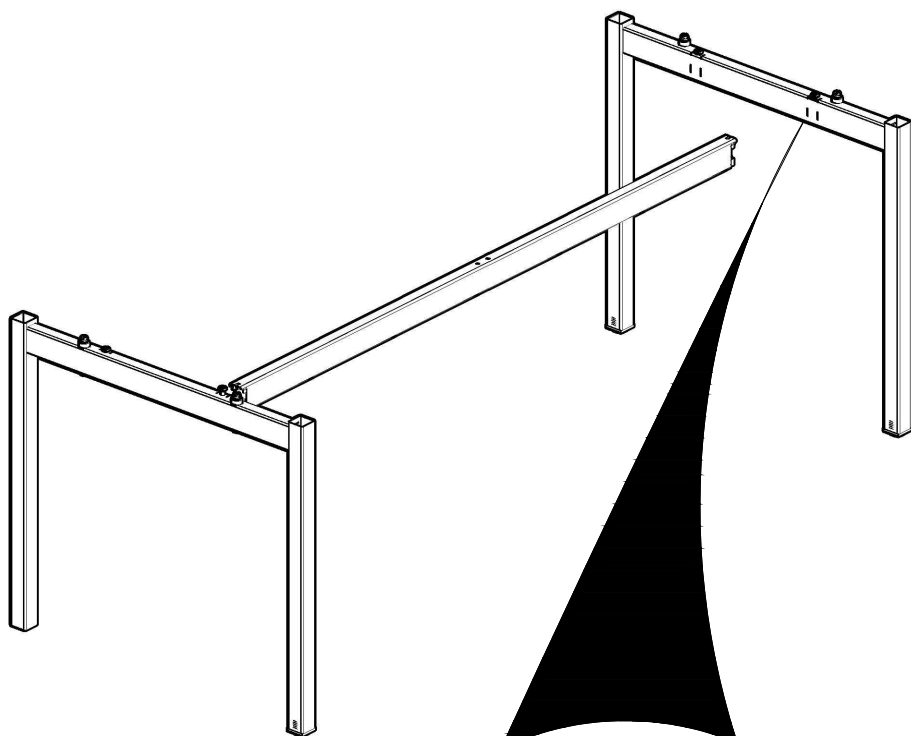


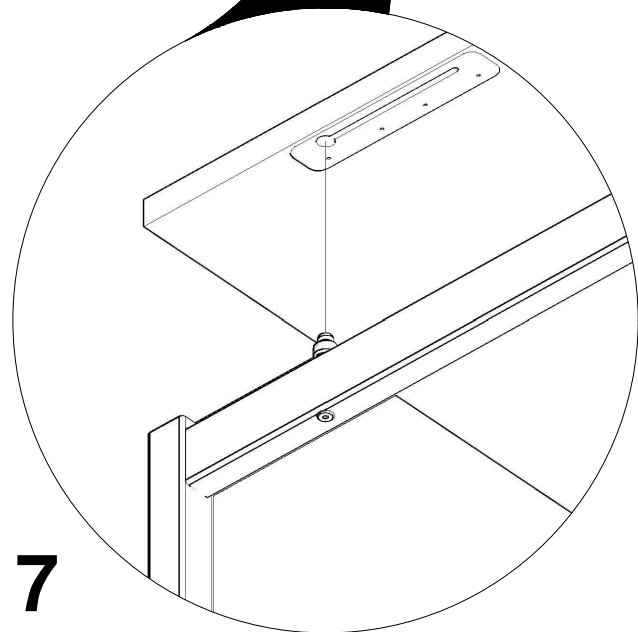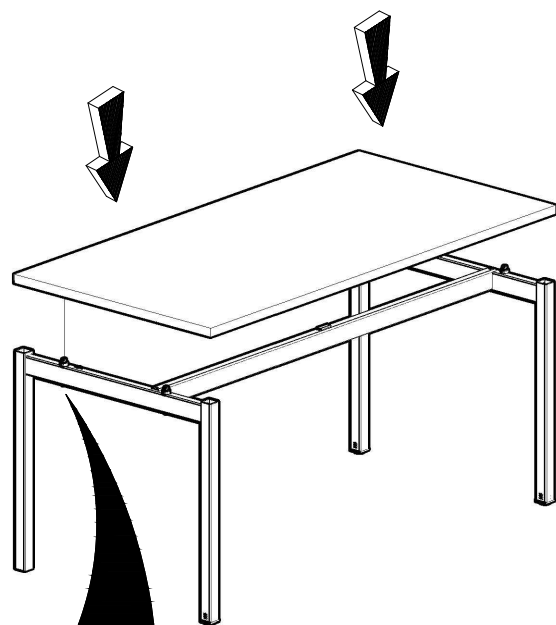


7

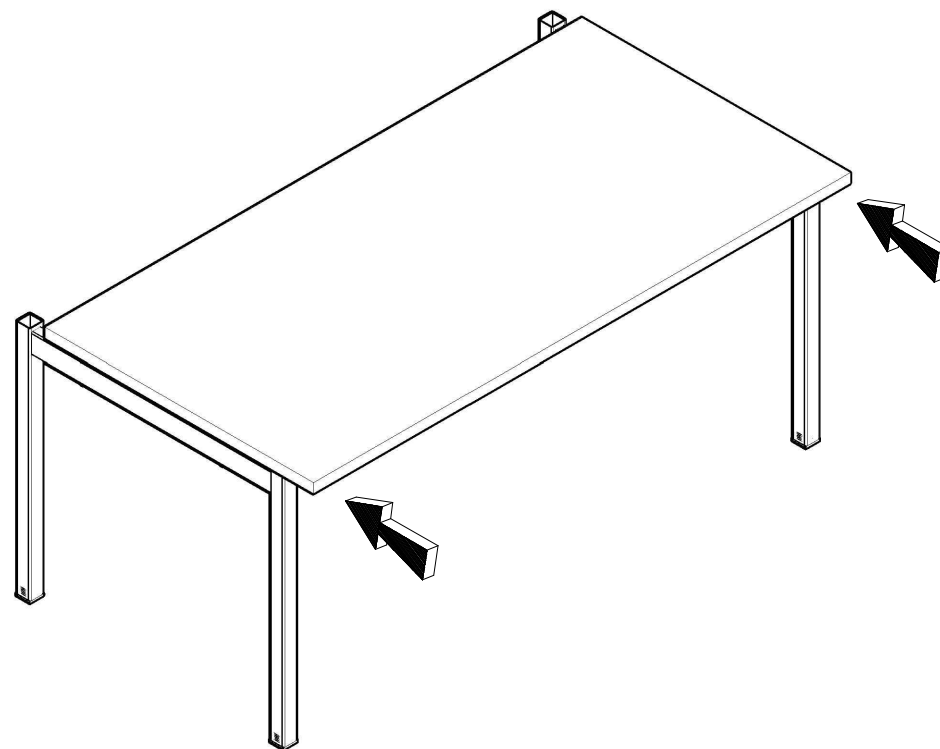

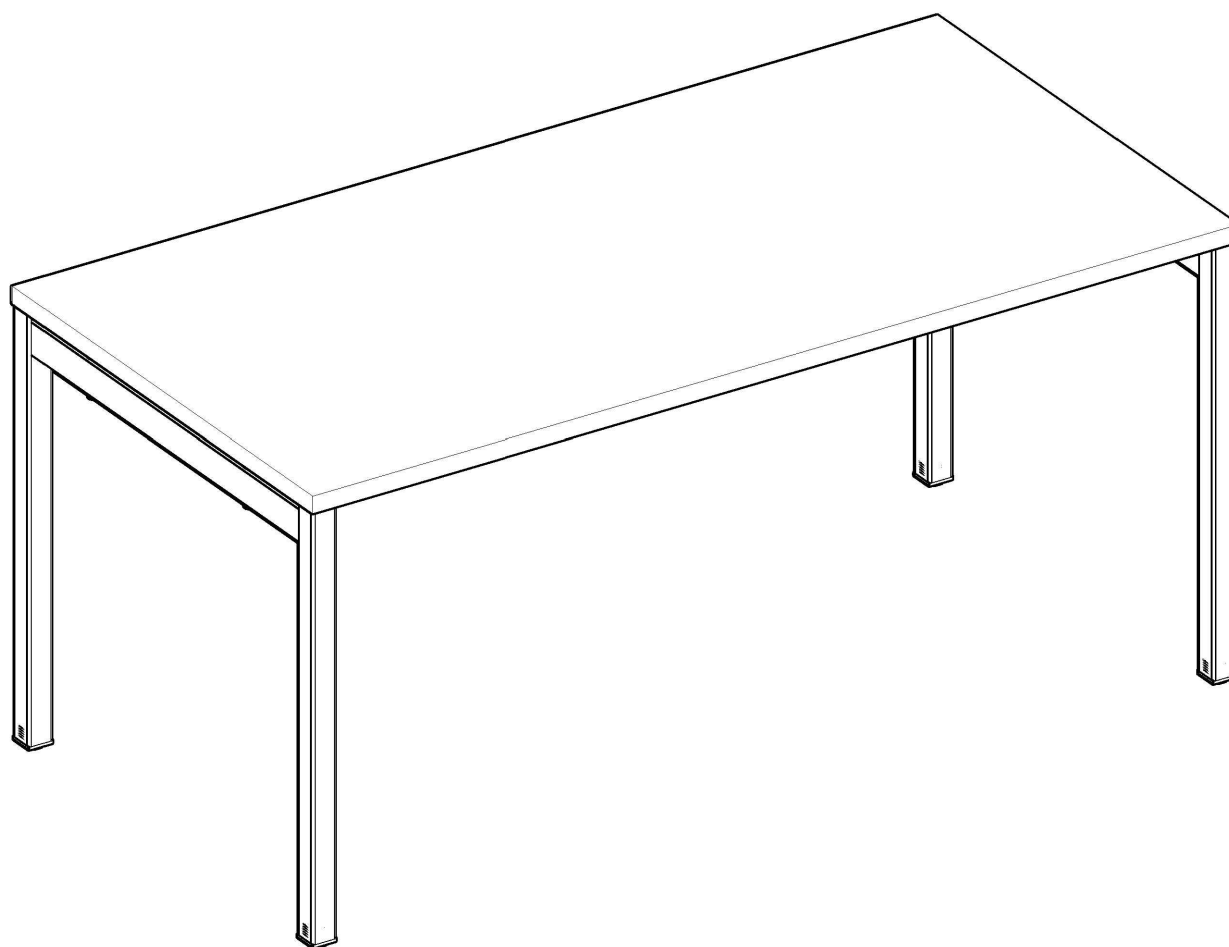


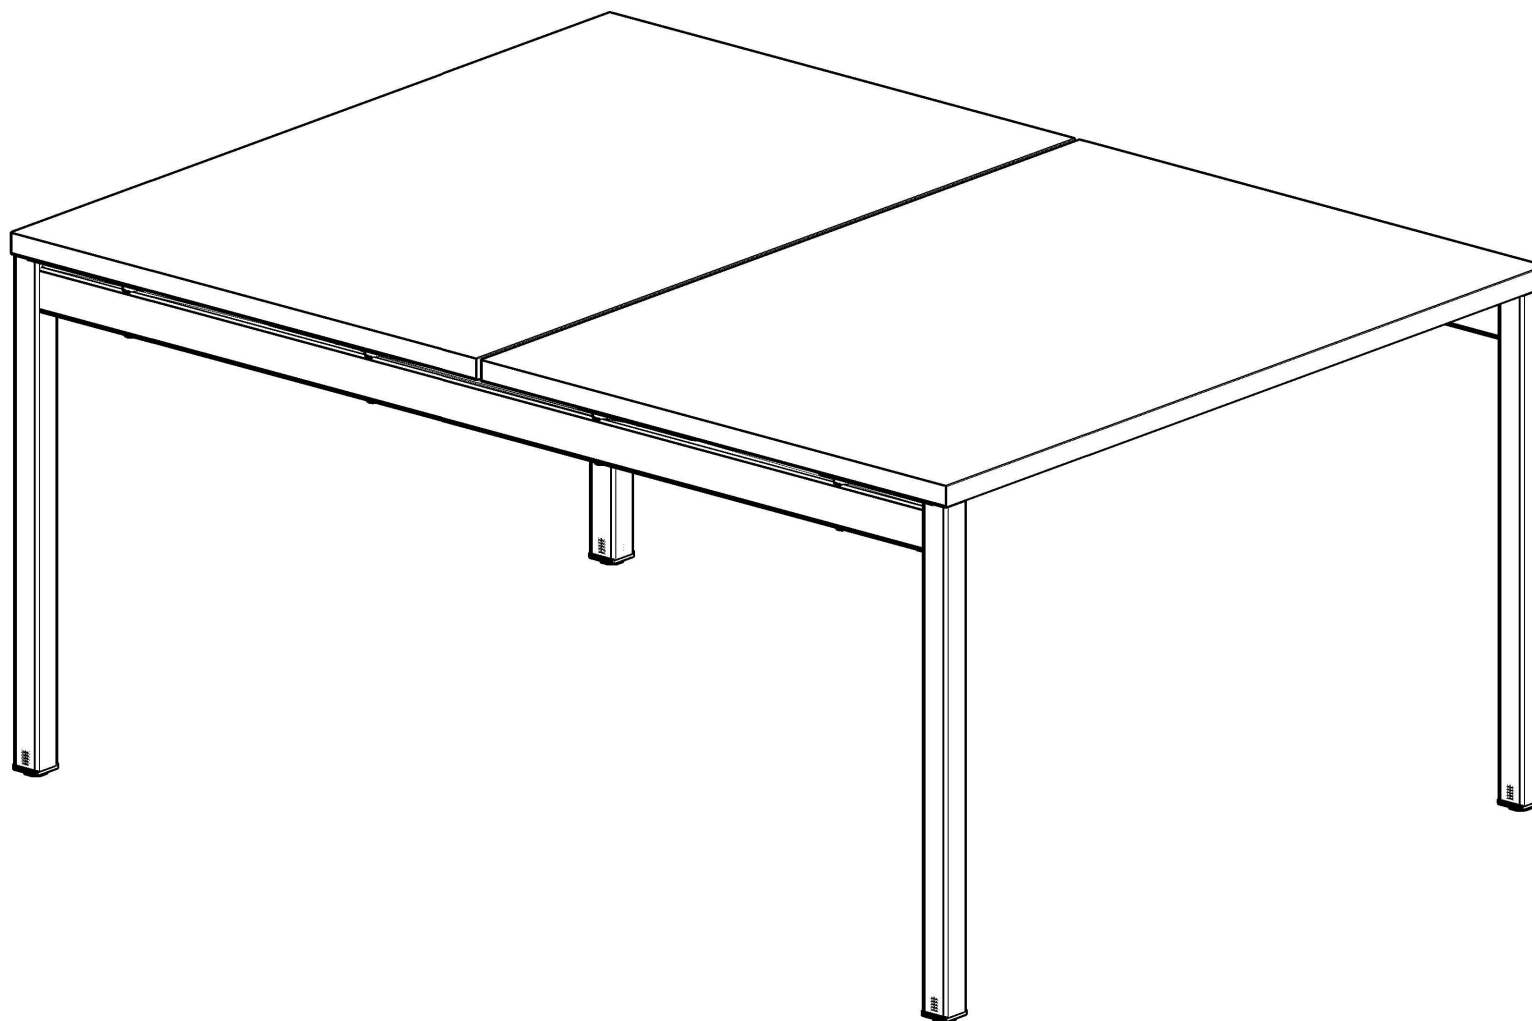

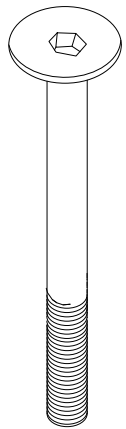


M6x68
8x

1

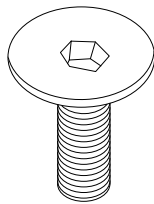


M6x10
2x

2

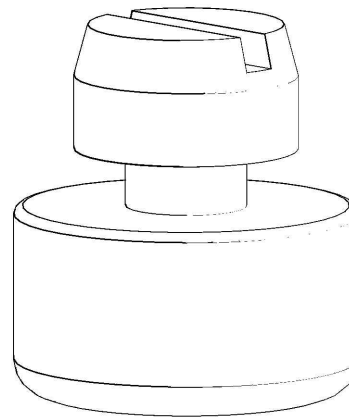


4x

3

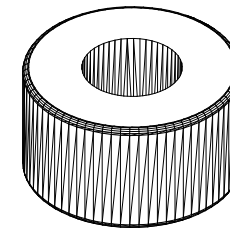



2x





4



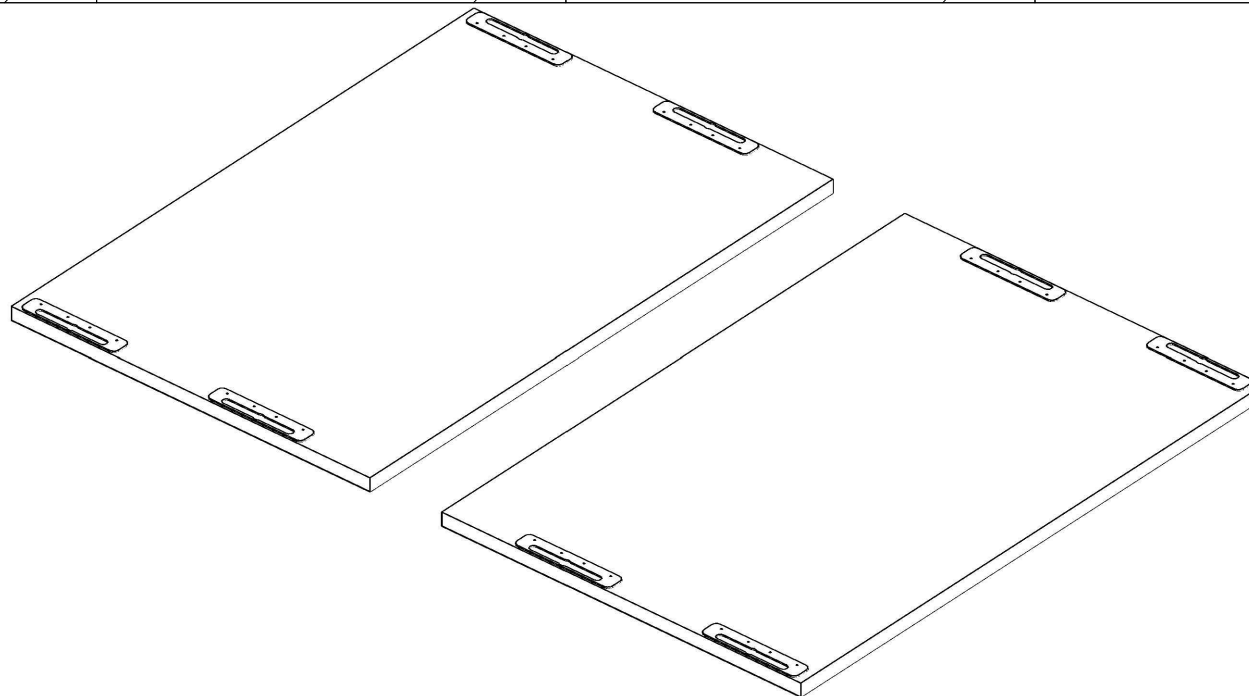


5

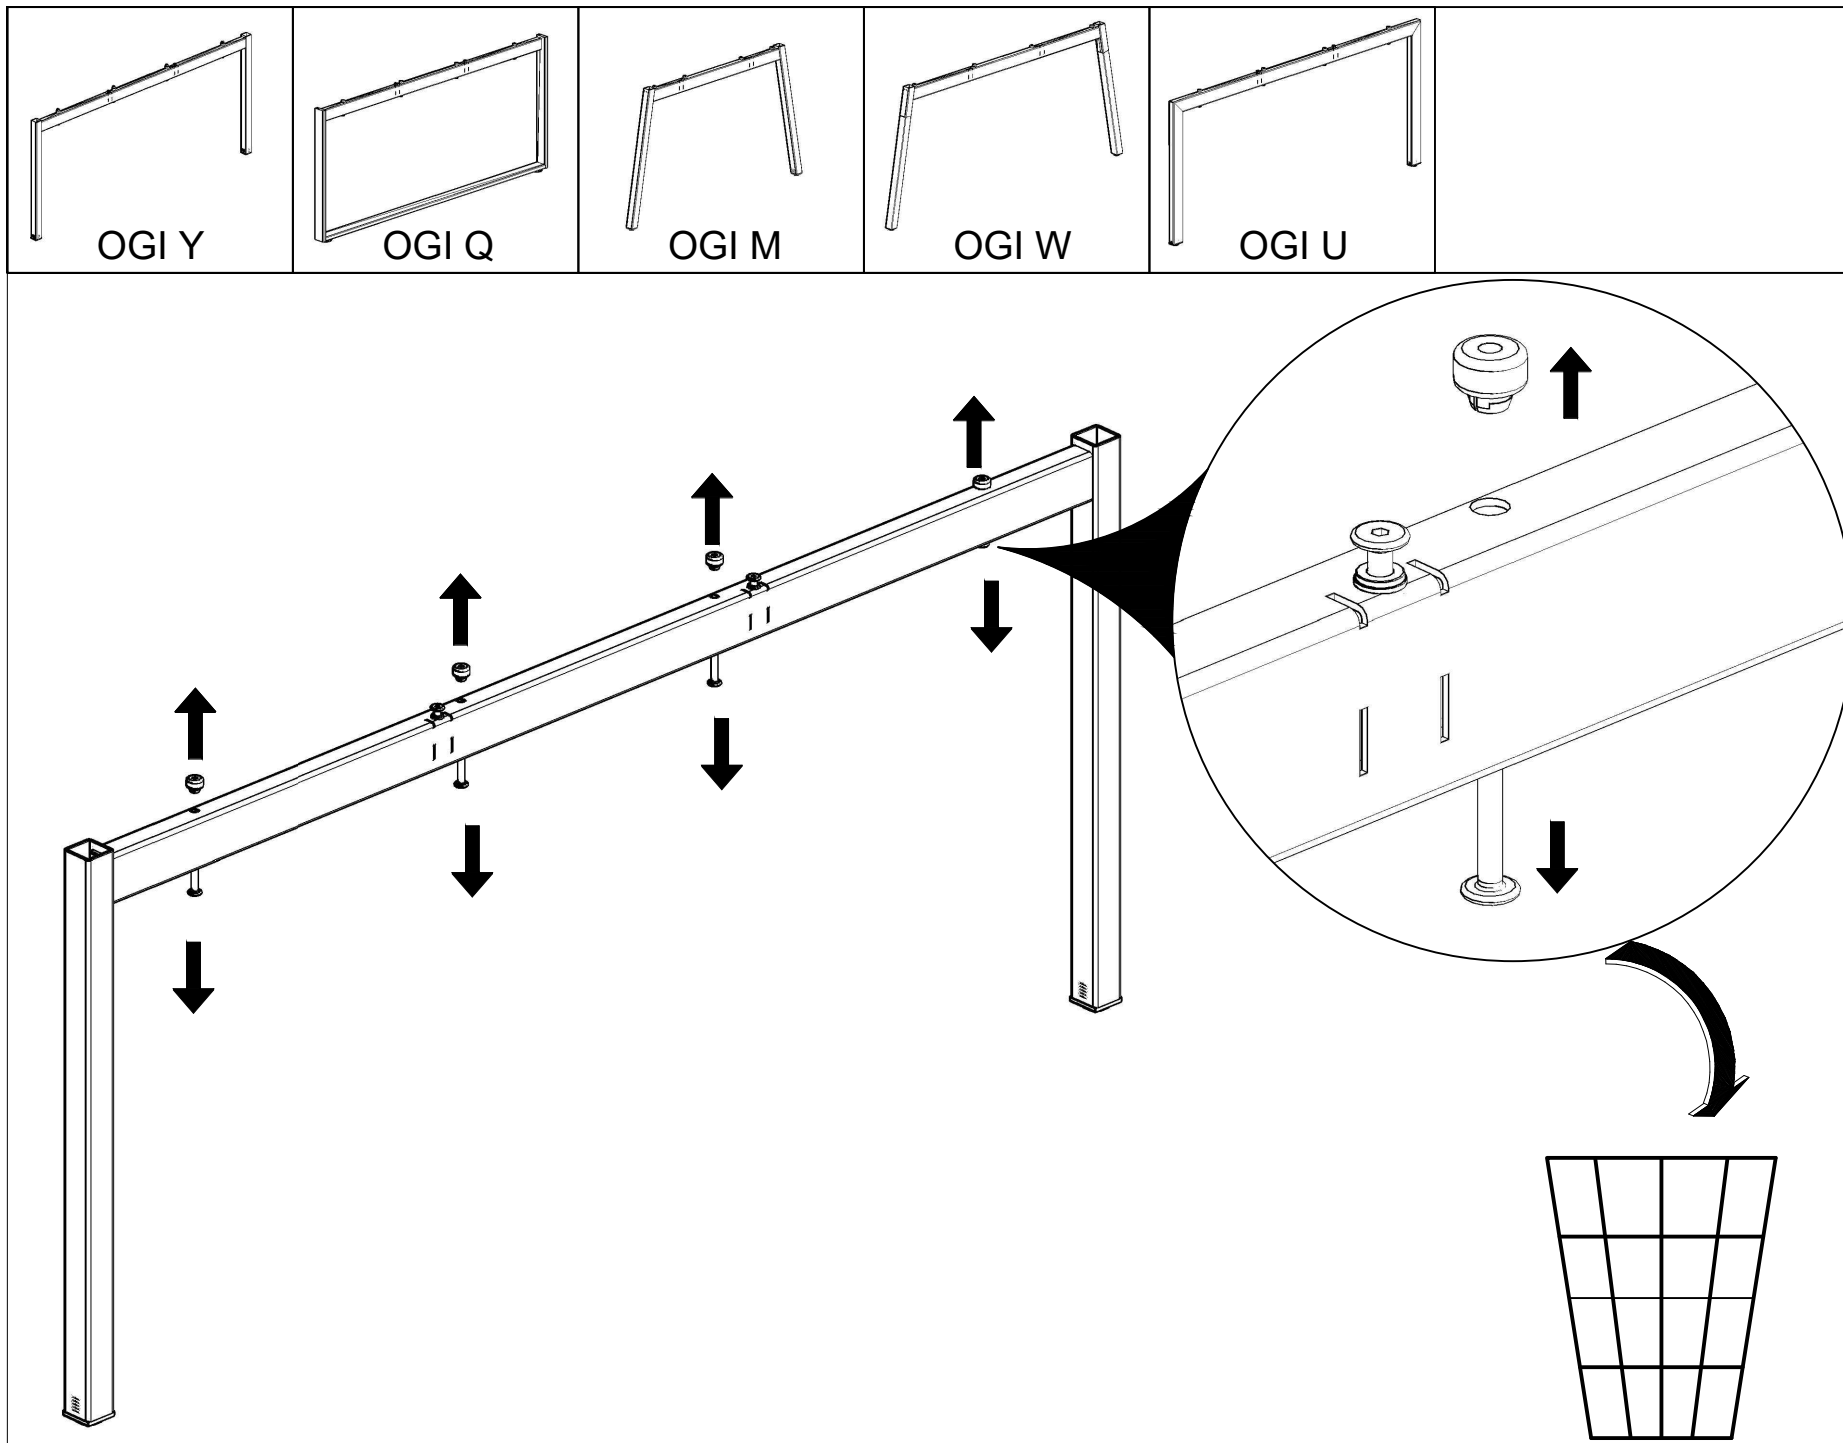

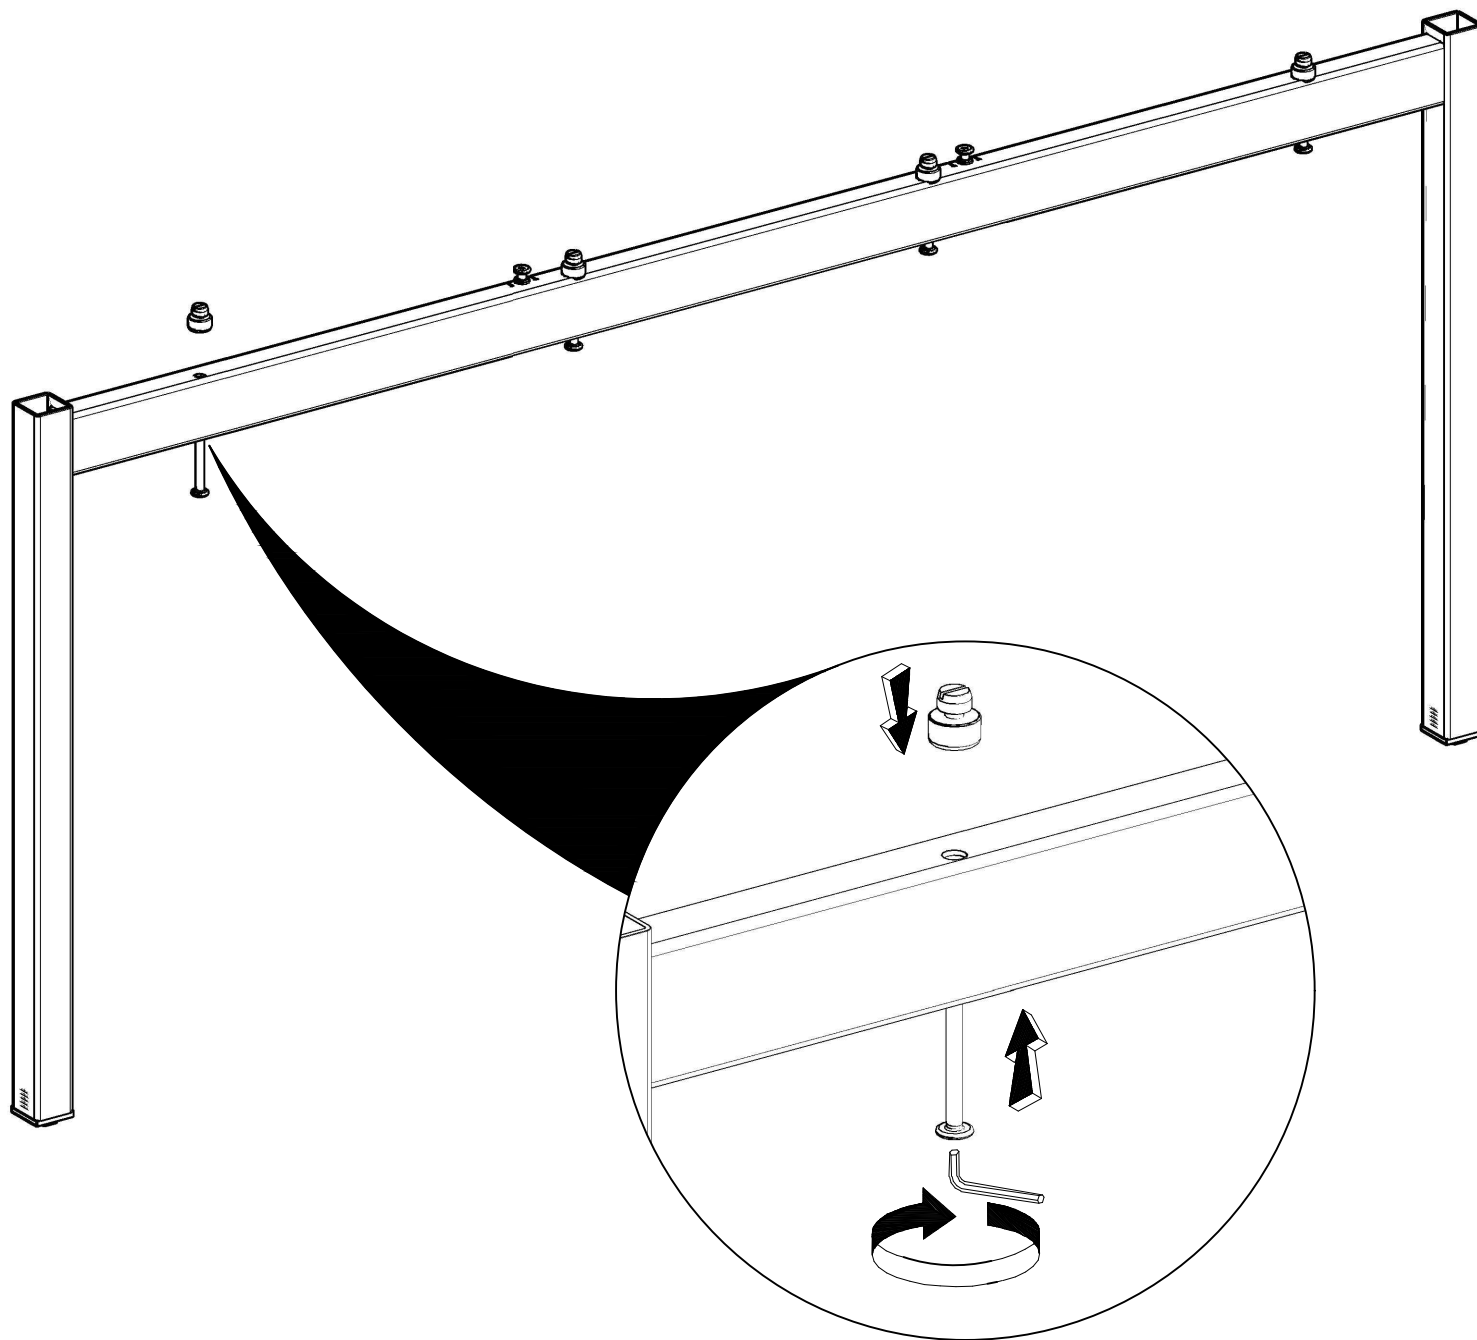

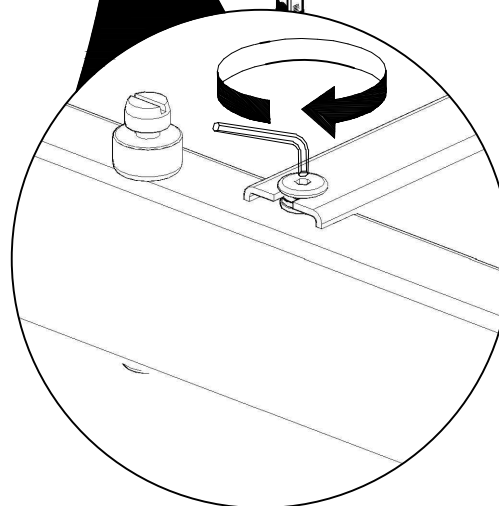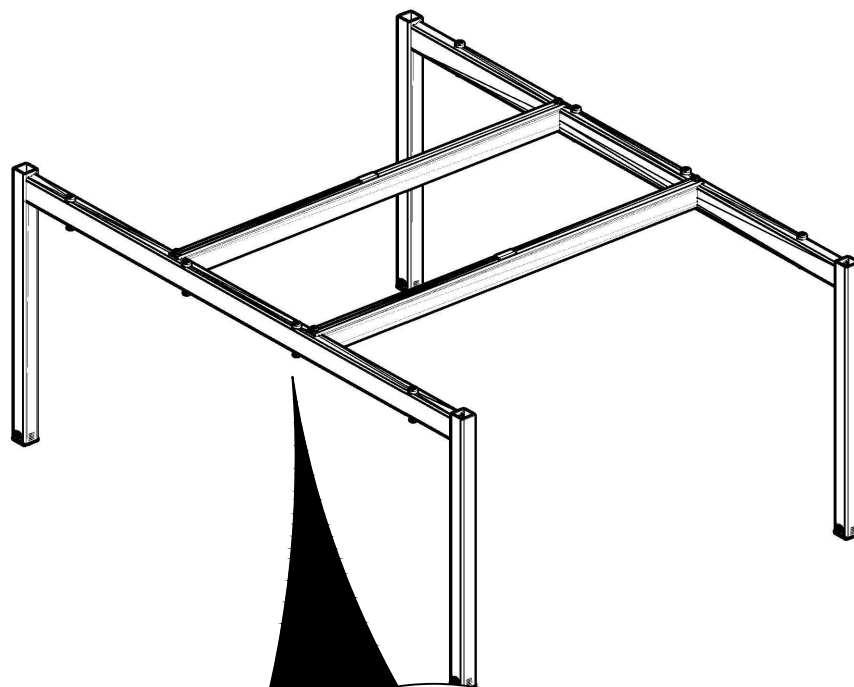
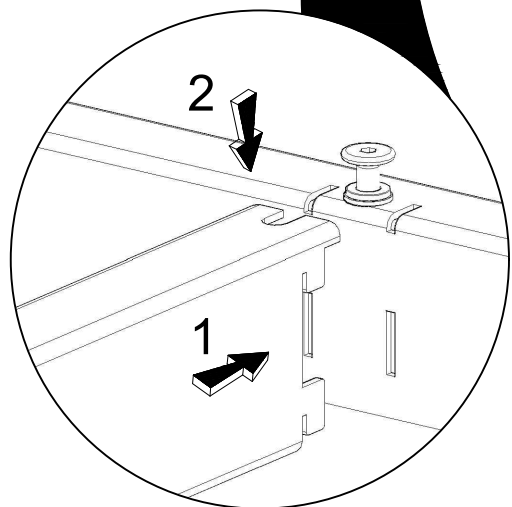
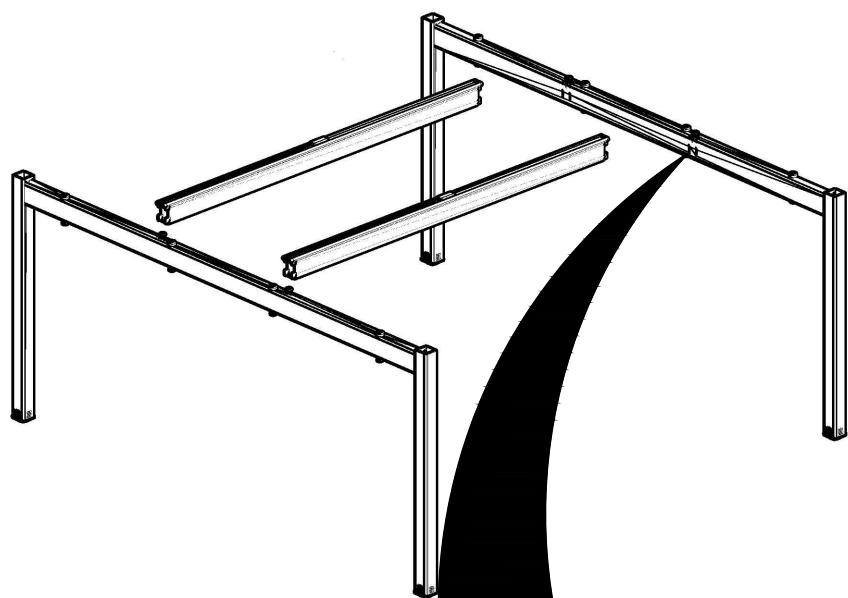


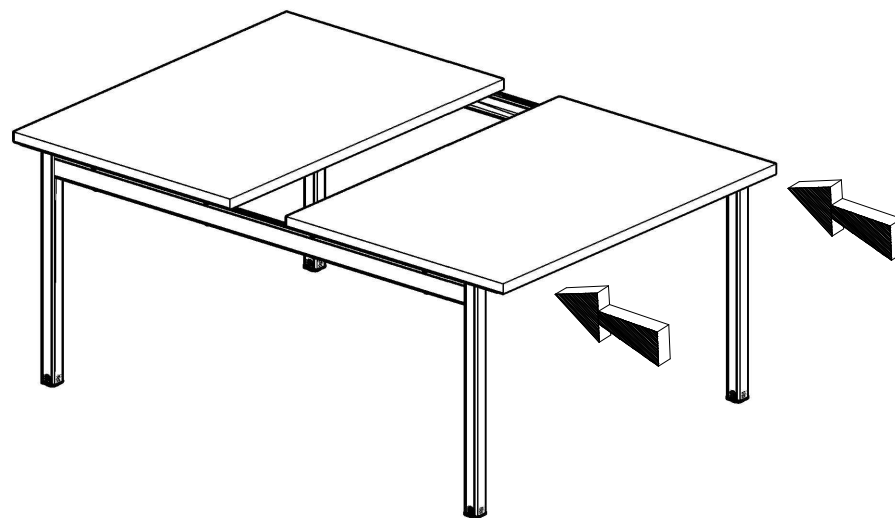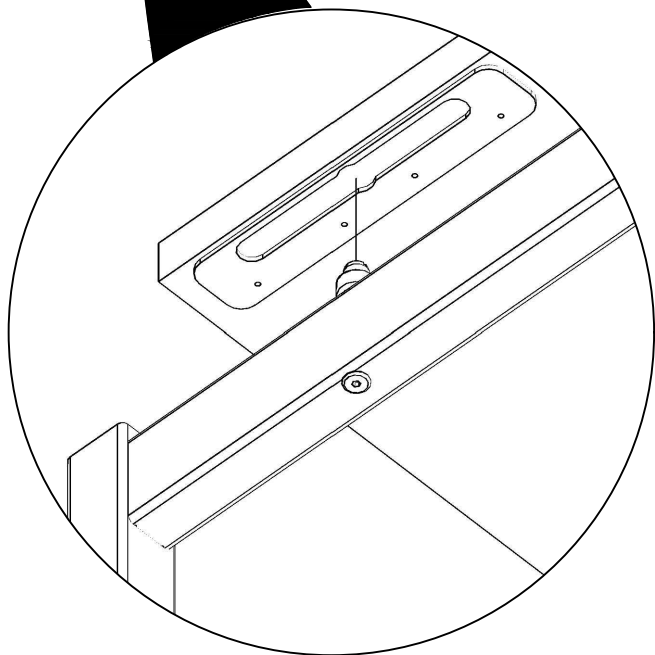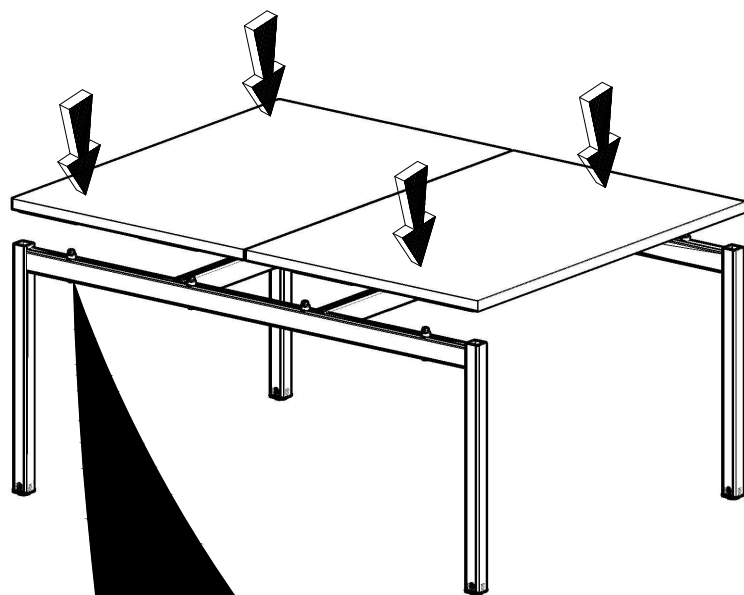

1









M05

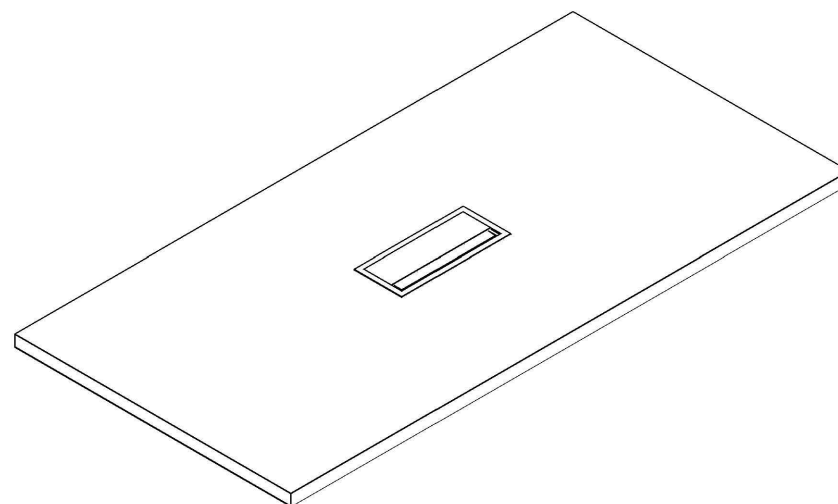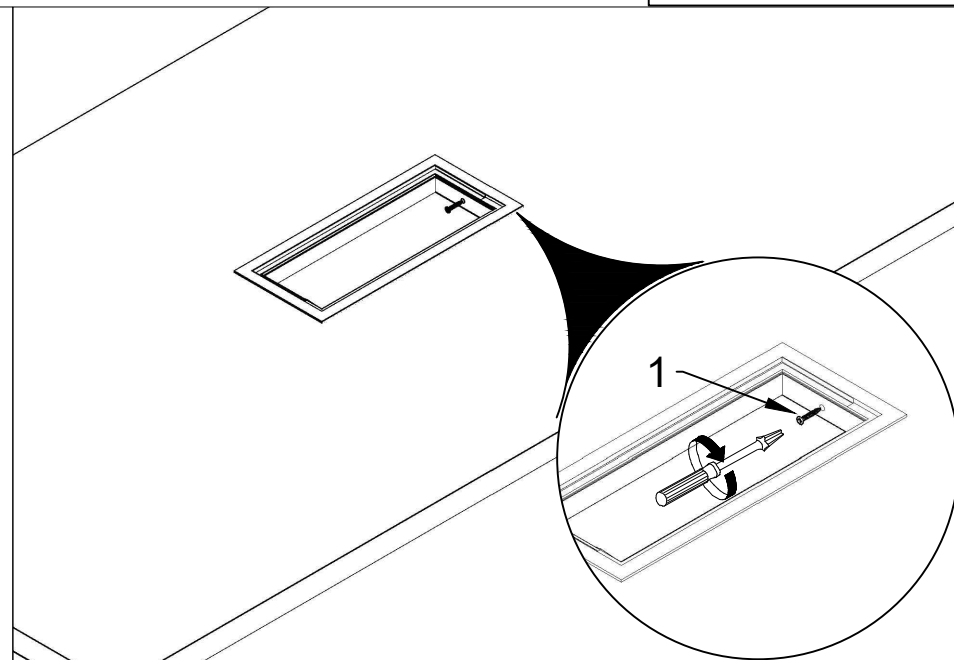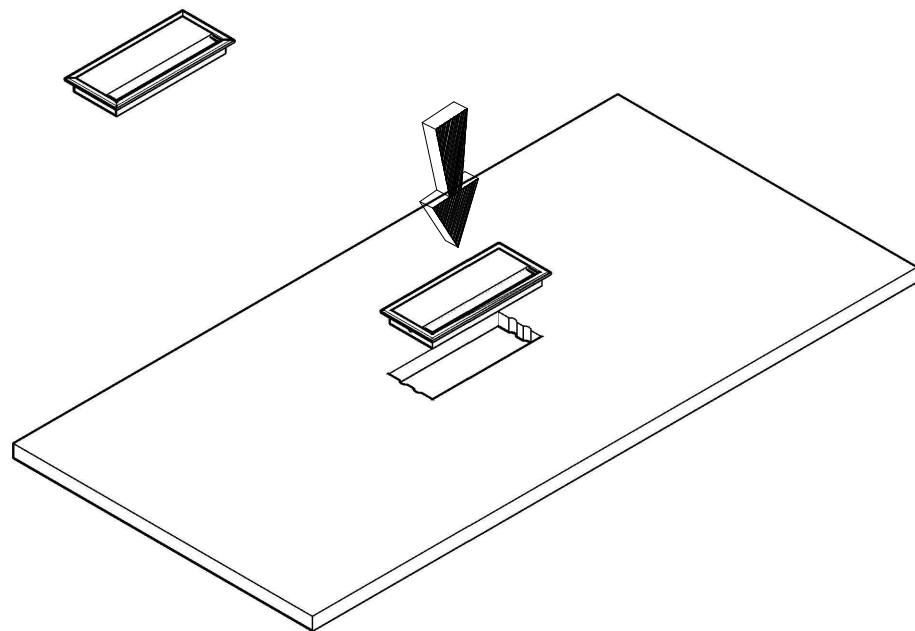

1









M04

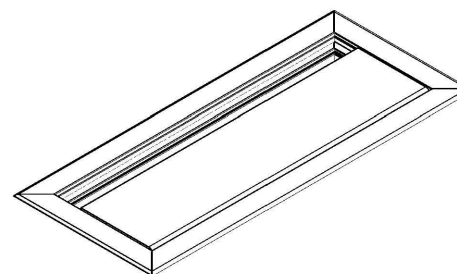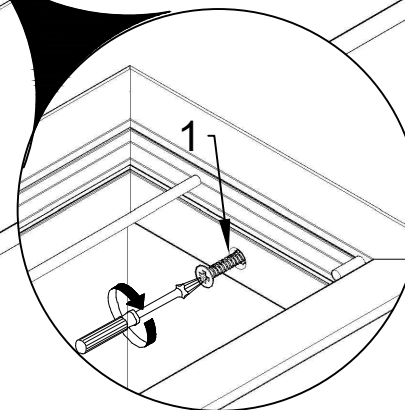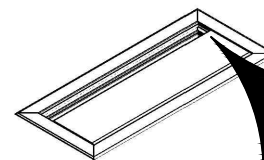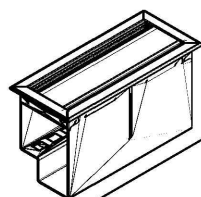




1




M04

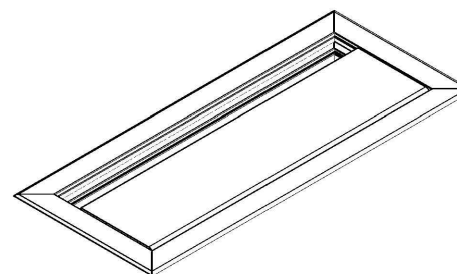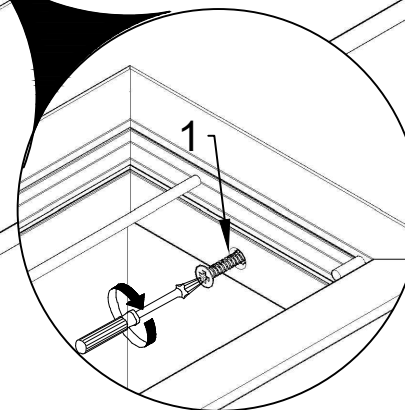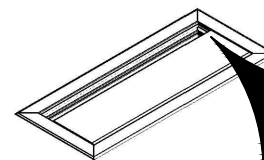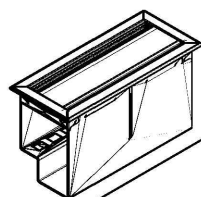

M07

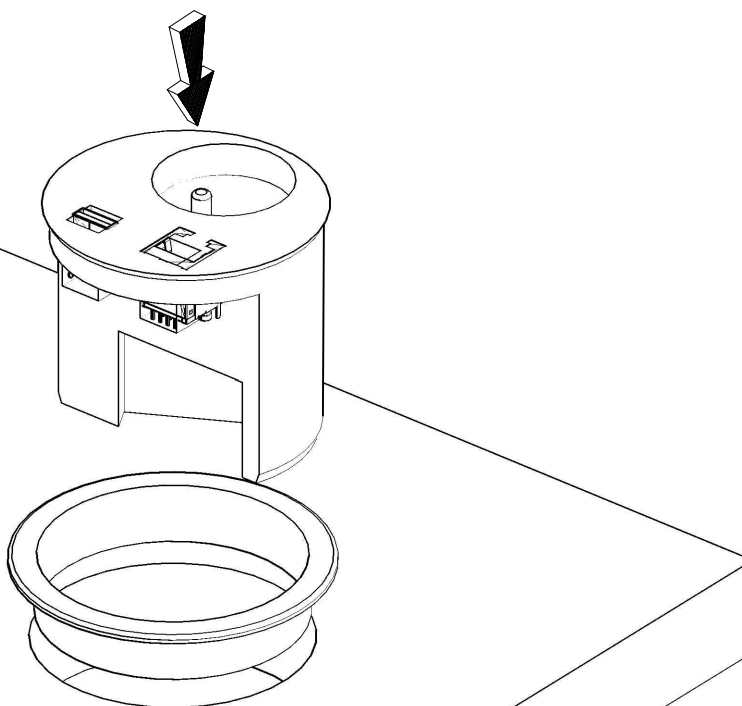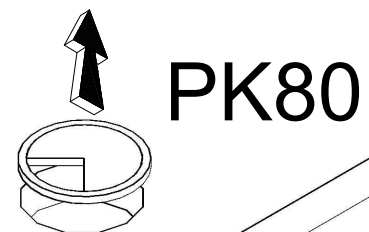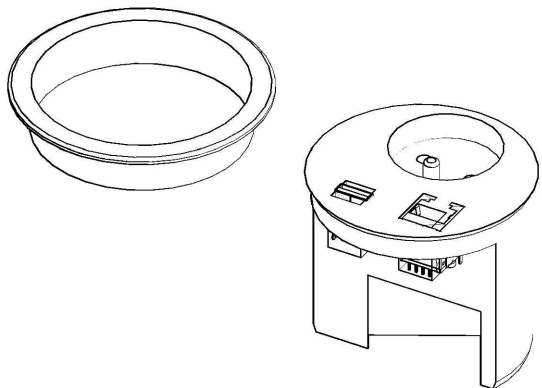

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

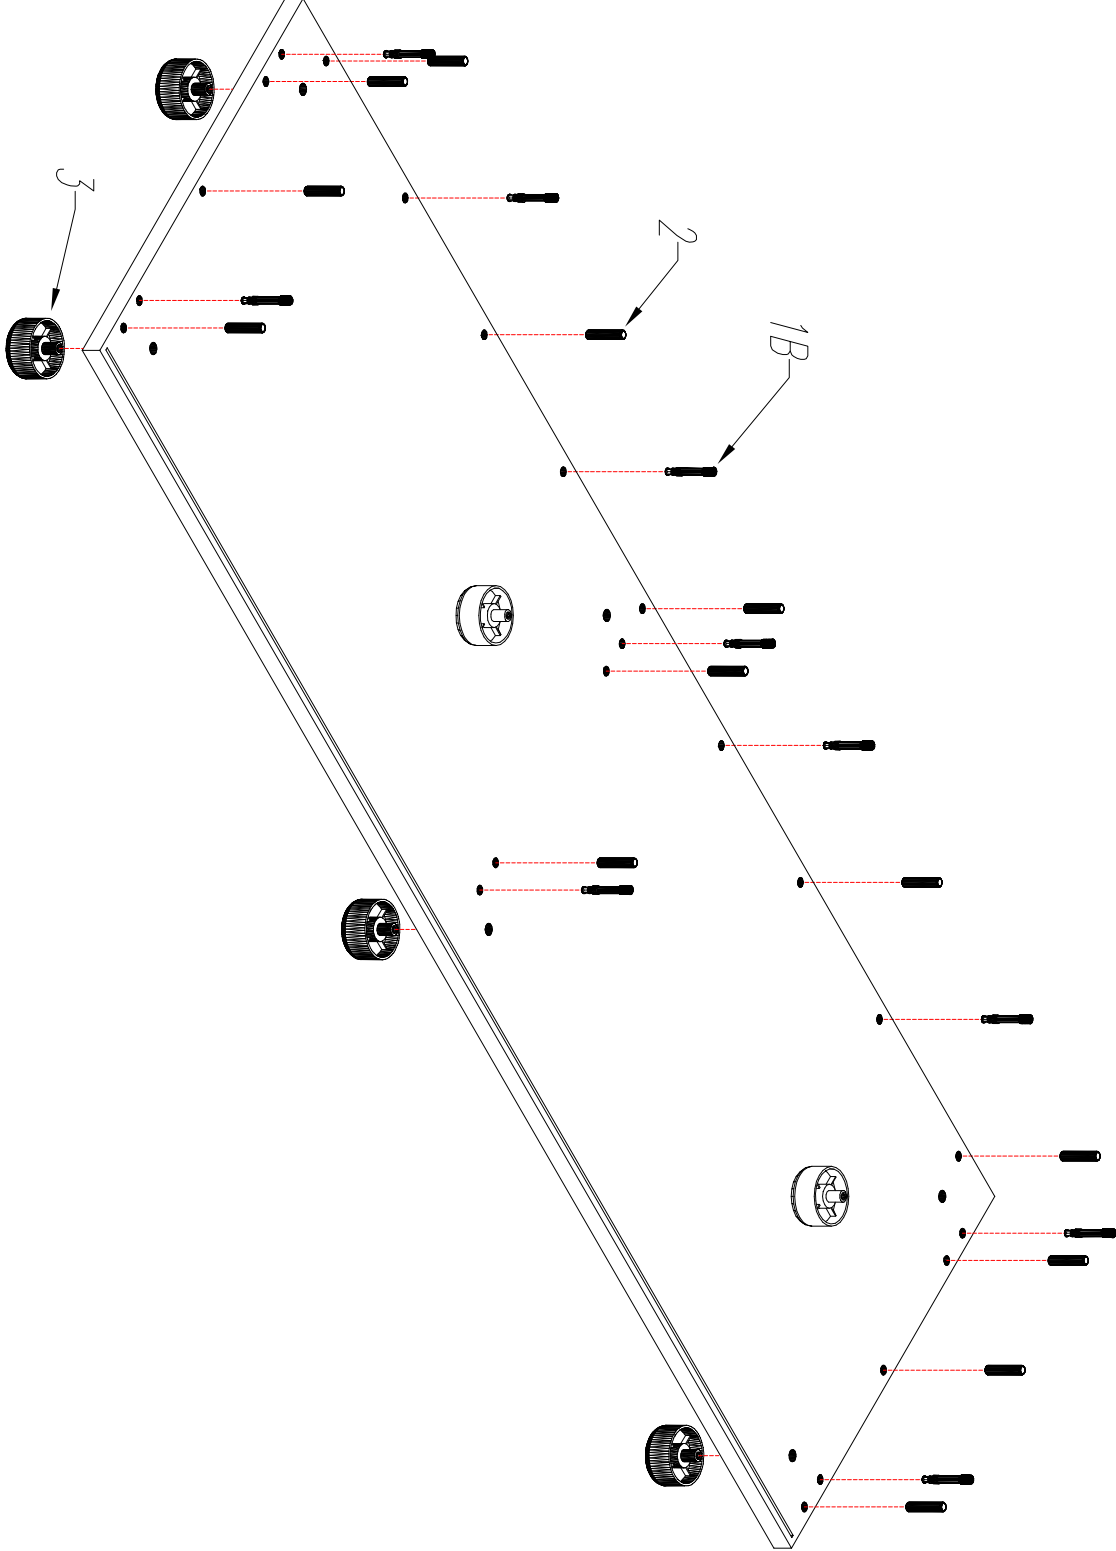

KOLEJNOŚĆ MONTAŻU
 ИМООРДООВ I КӨКӨМ.
 THE FITTINGS SEQUENCE OF THE
 CAMS AND DOWELS.
 DIE MONTAGEFOLGE VON
 EXZENTERN UND DIBBELN.

1


2


3


4

5


6

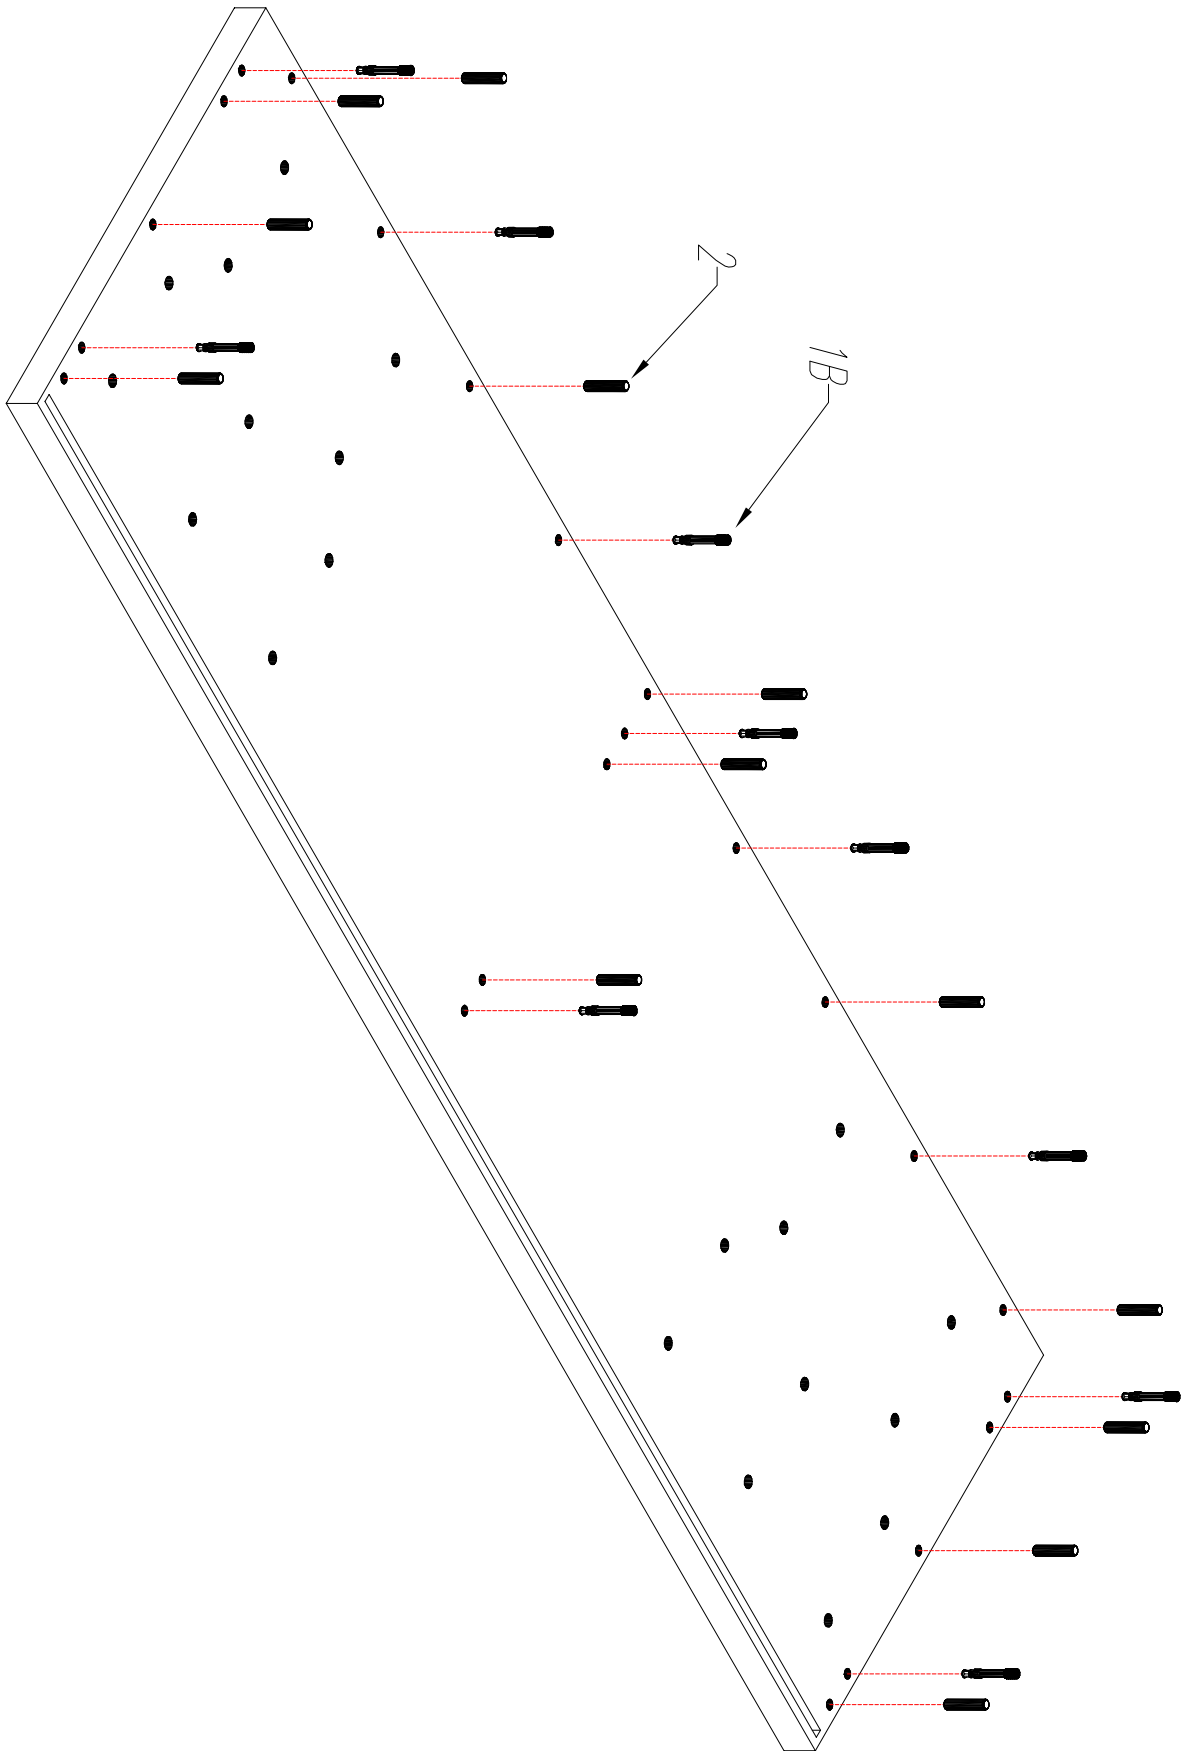

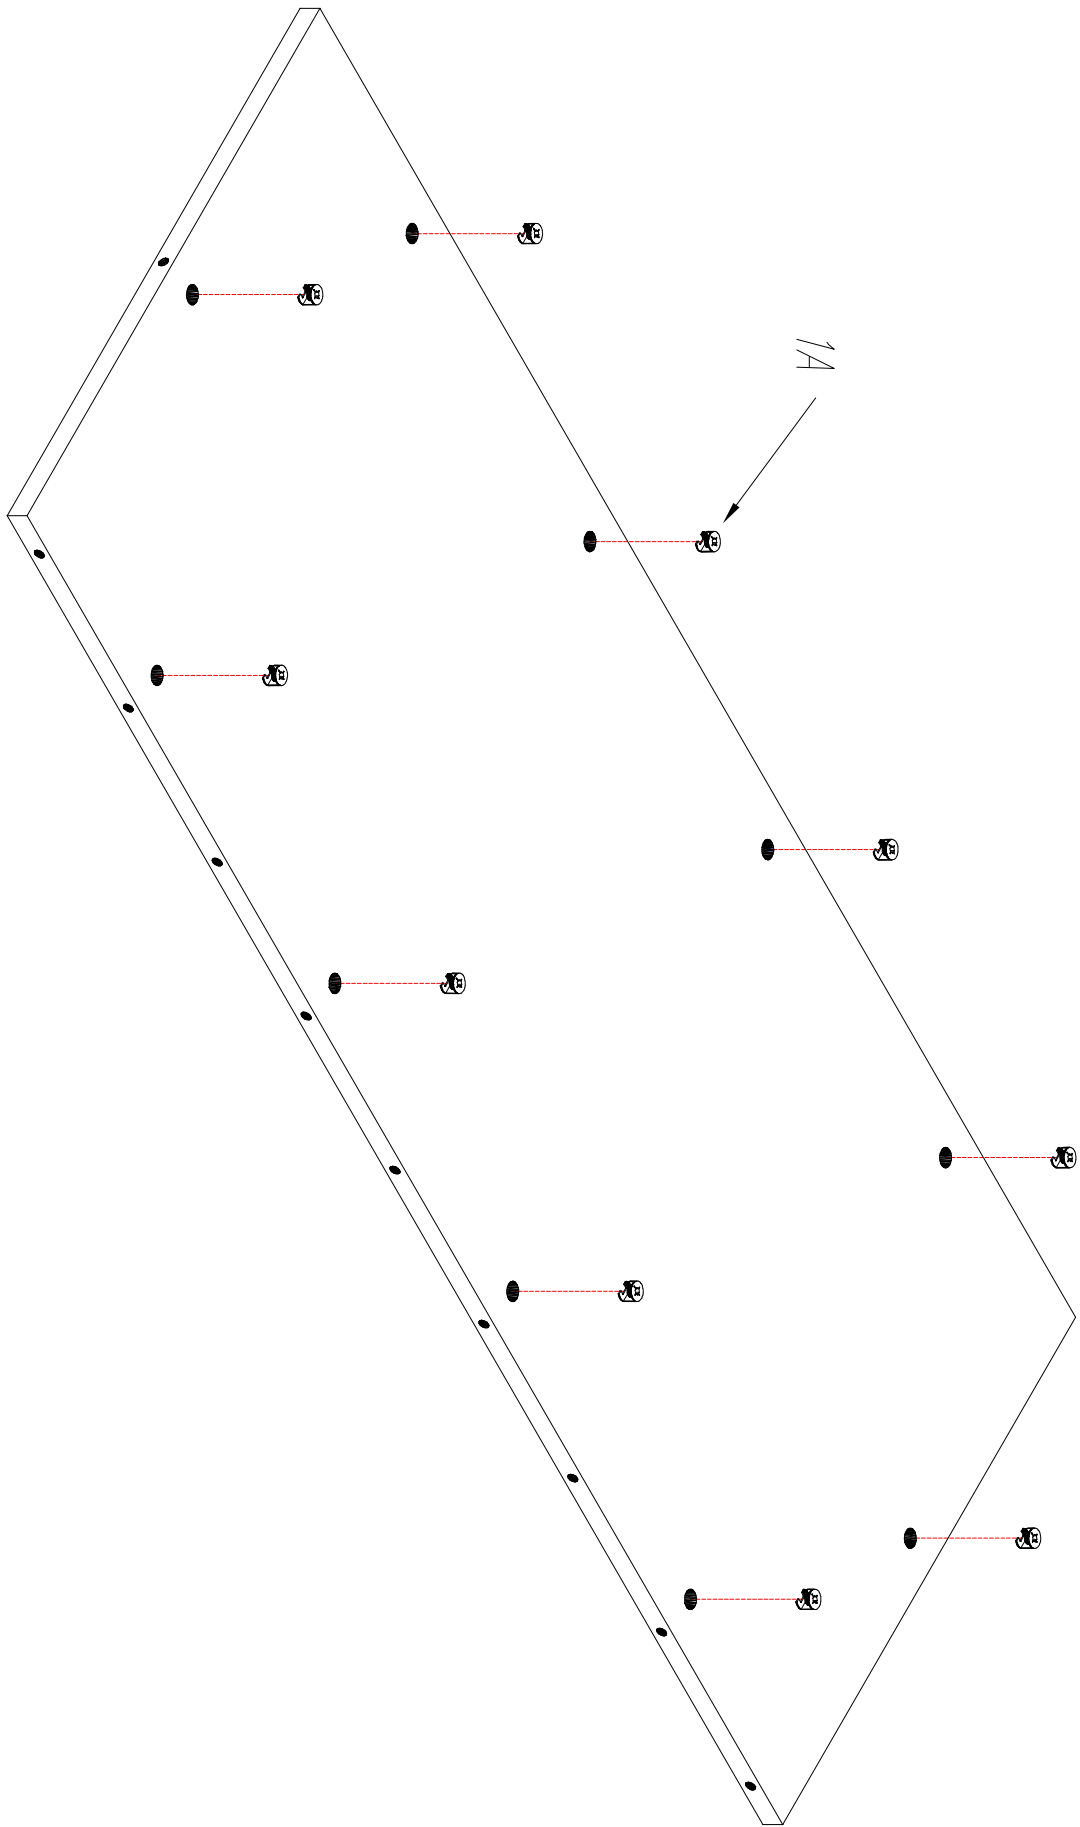


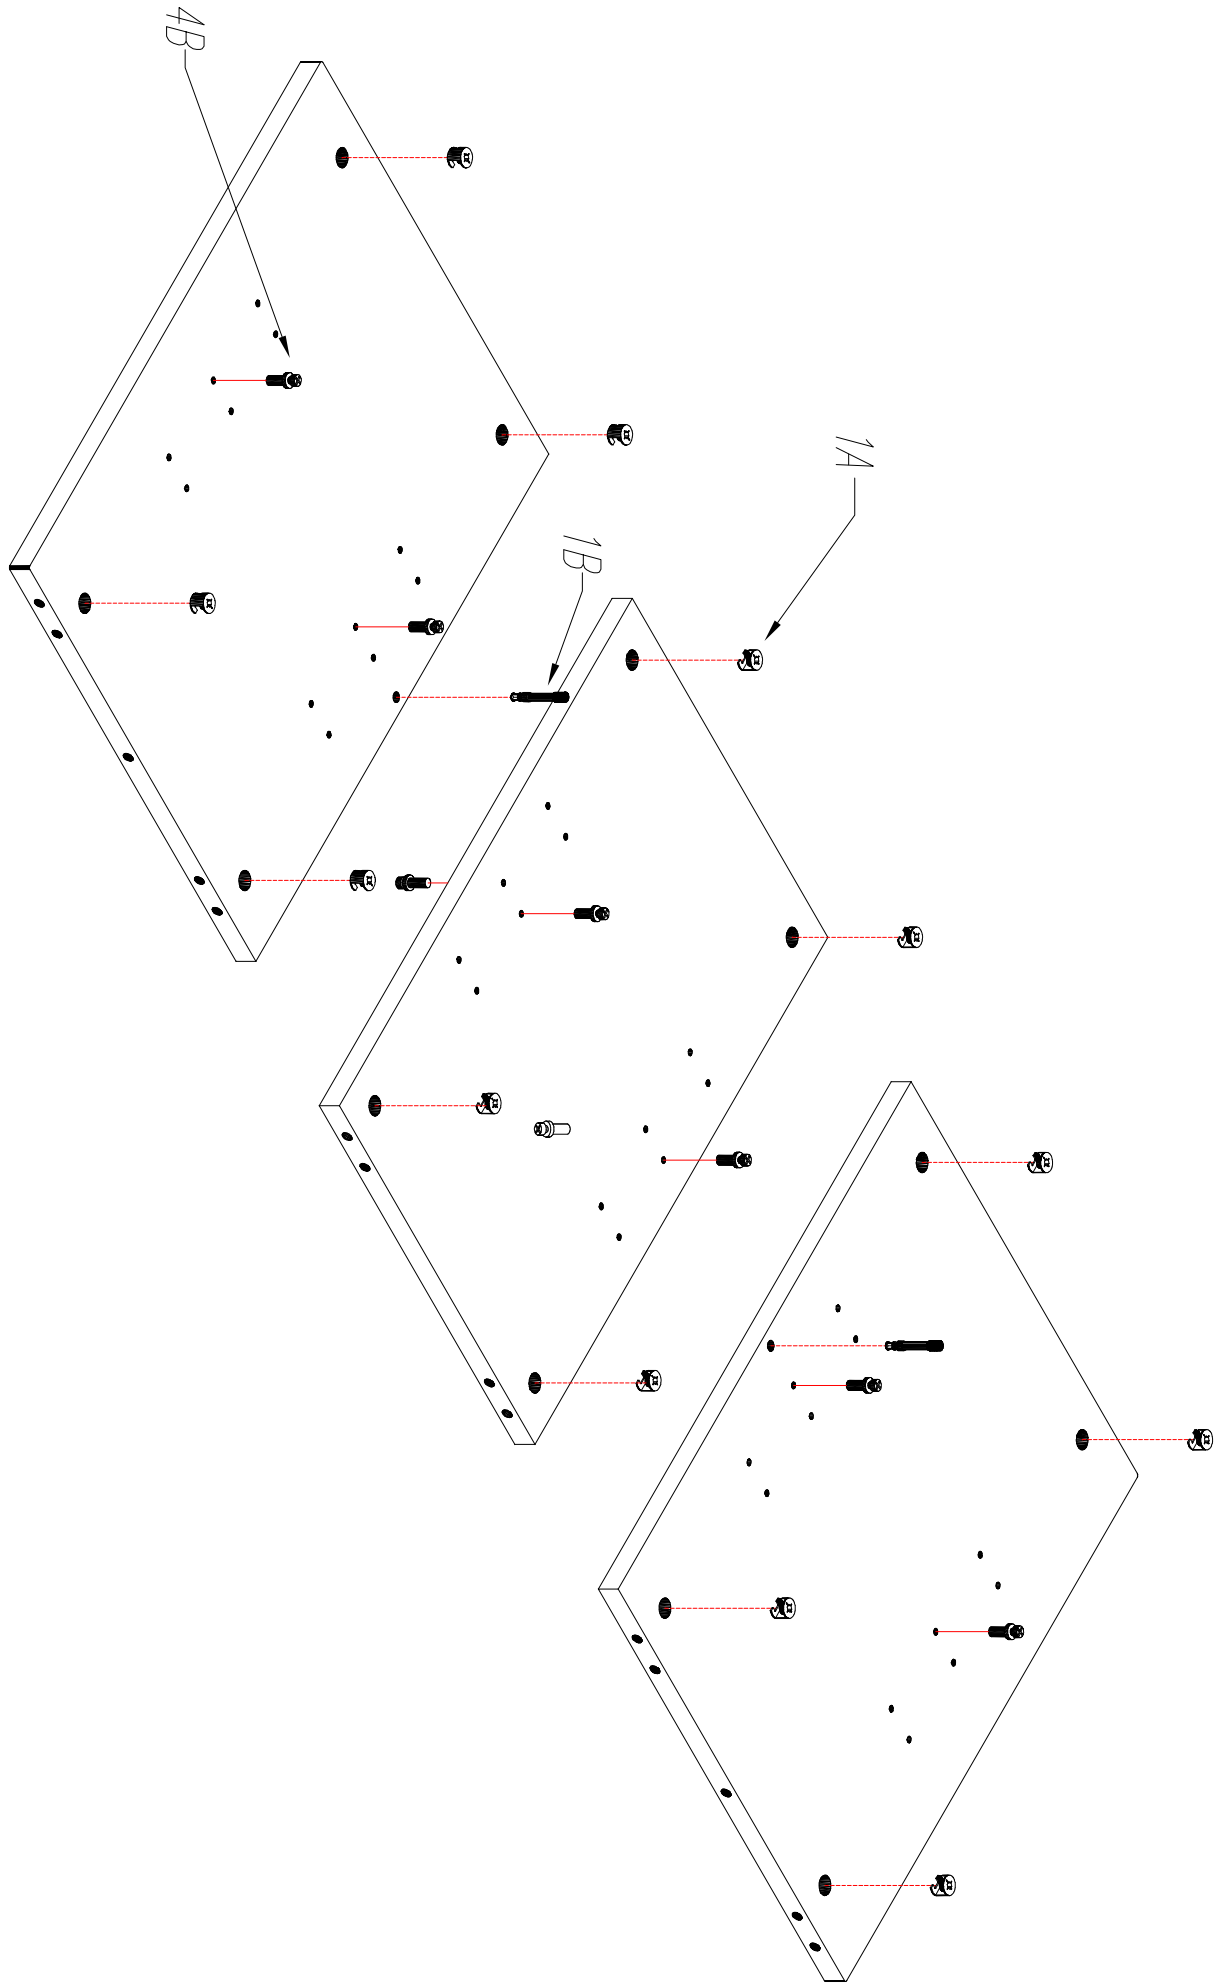


G

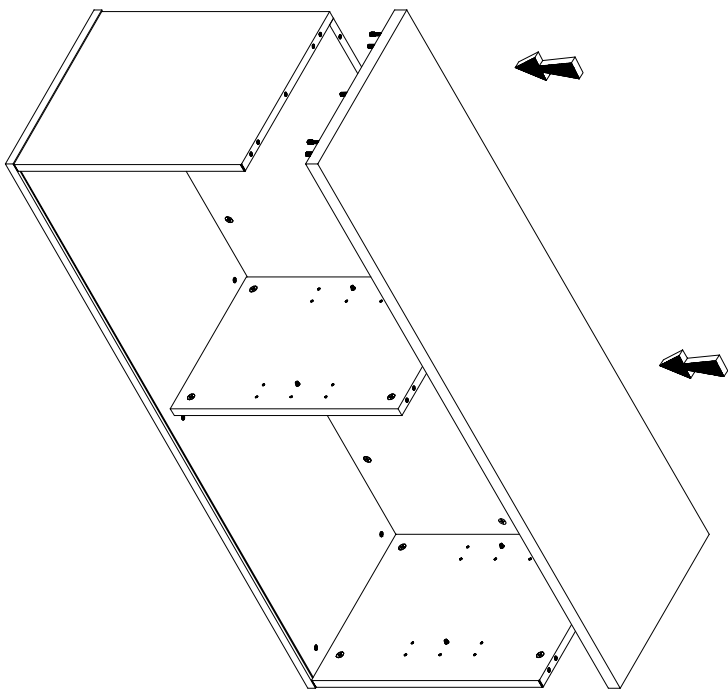


F



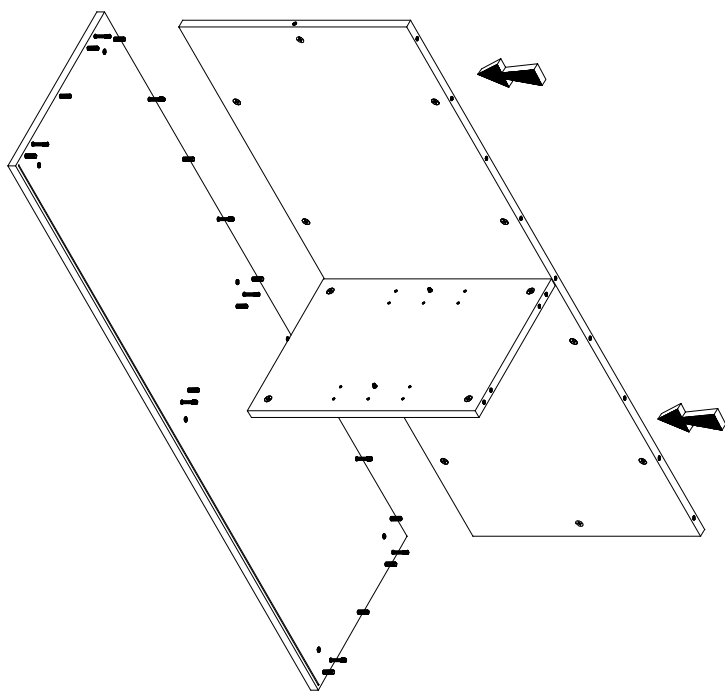


H

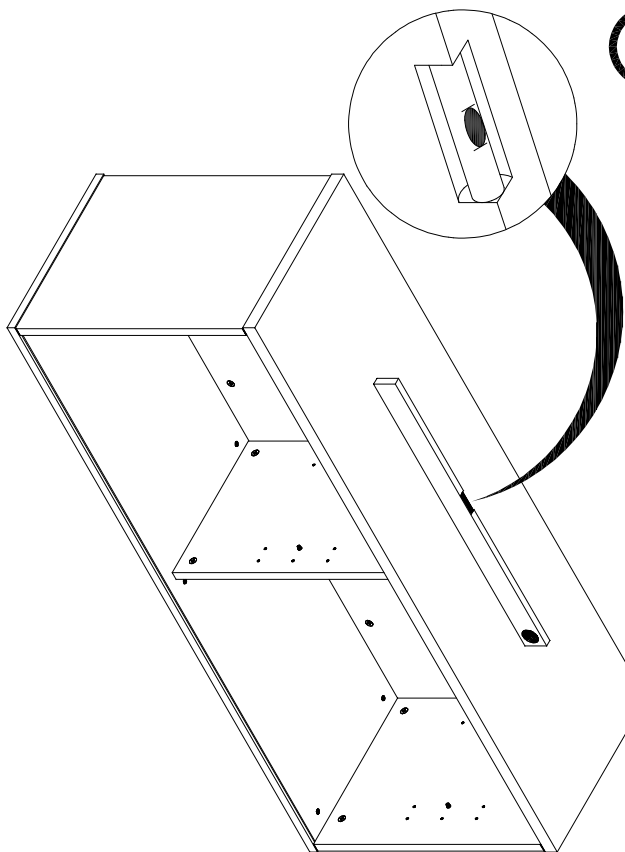


T


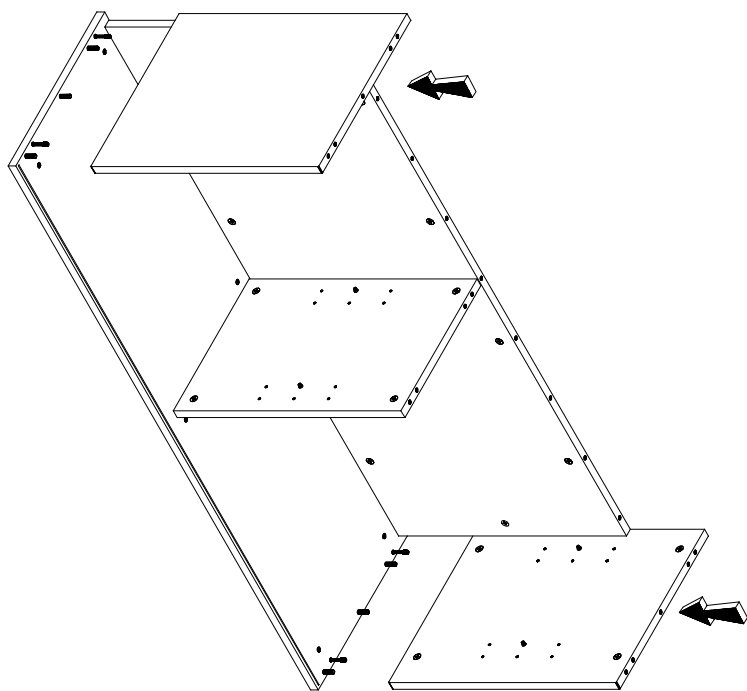


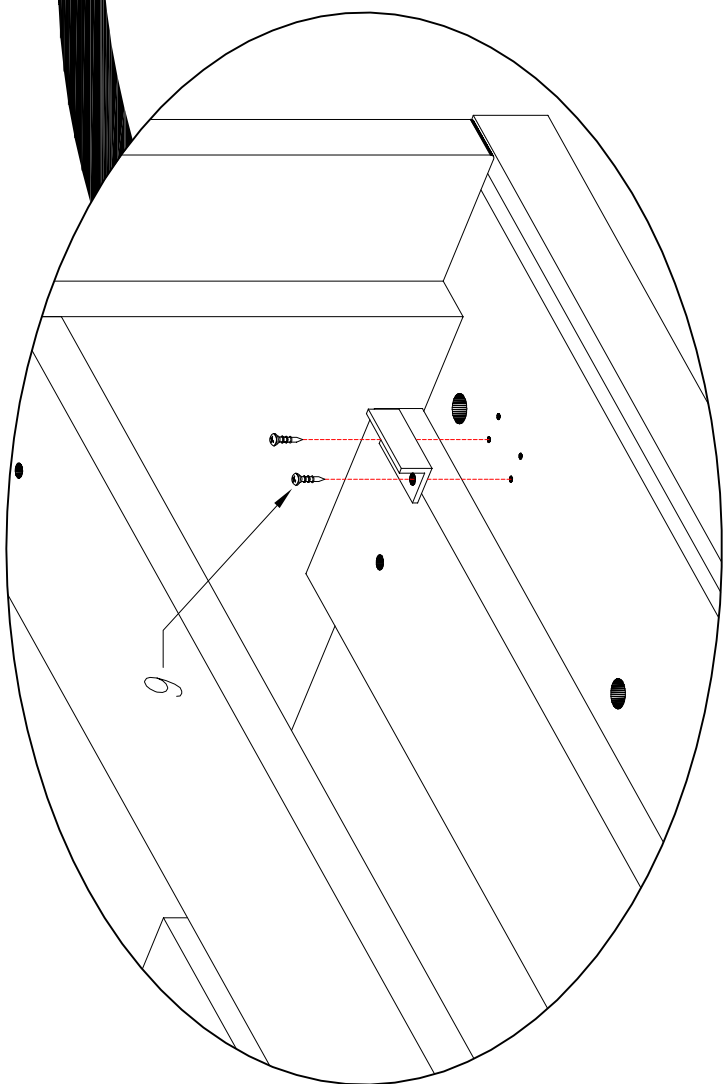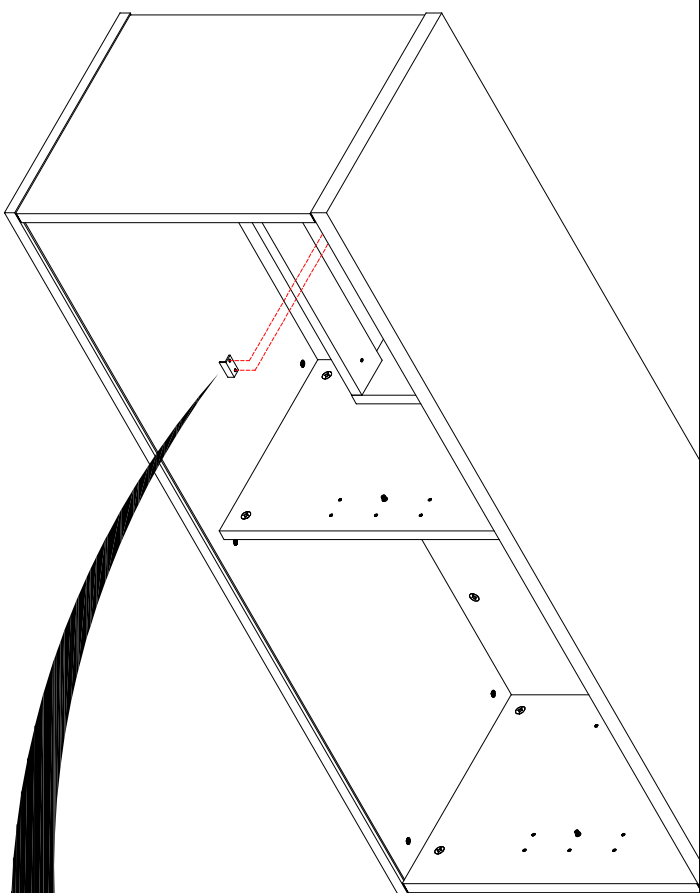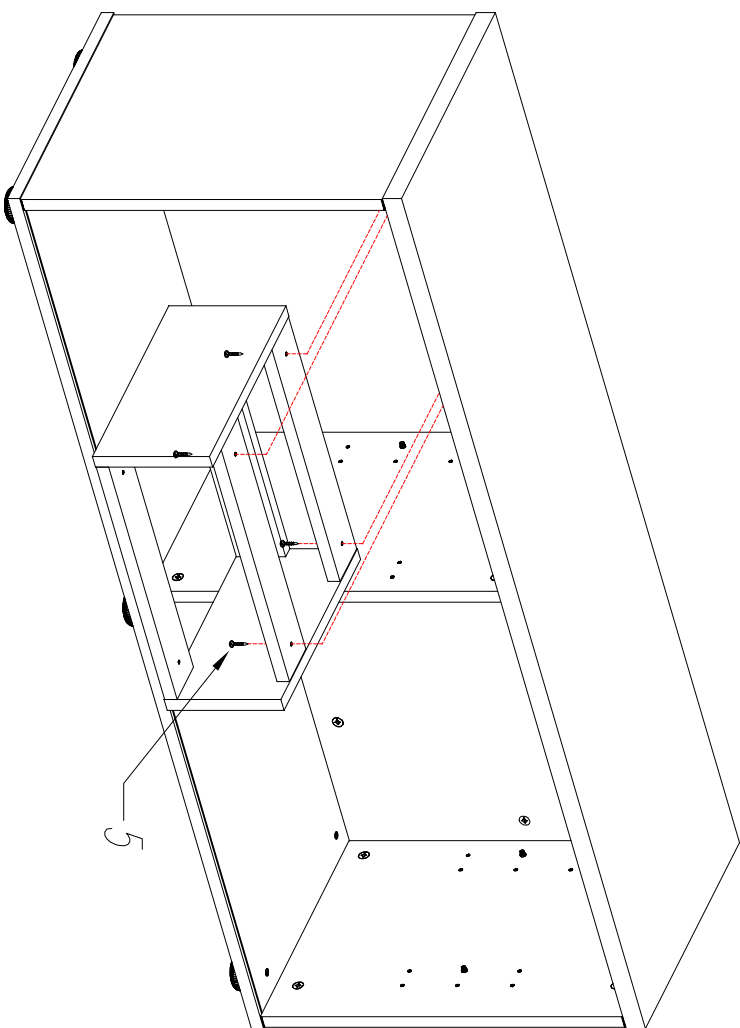


K

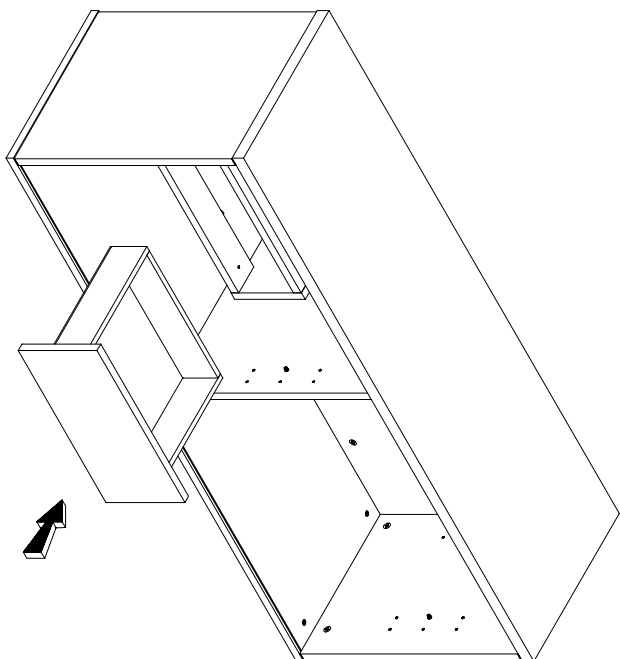


-Przykręcić śruby z
małą siłą.
-Put the screws gently.
-Anschrauben die
Schrauben zierlich.

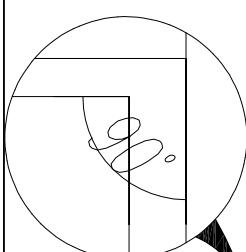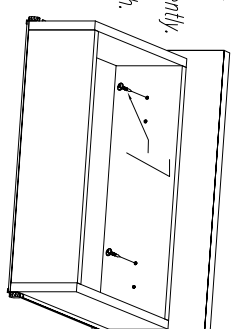



-Przykręcić śruby z
dużą siłą.
-Put the screws strongly.
-Anschrauben die
Schrauben staerklich.




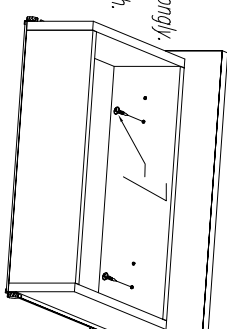



L

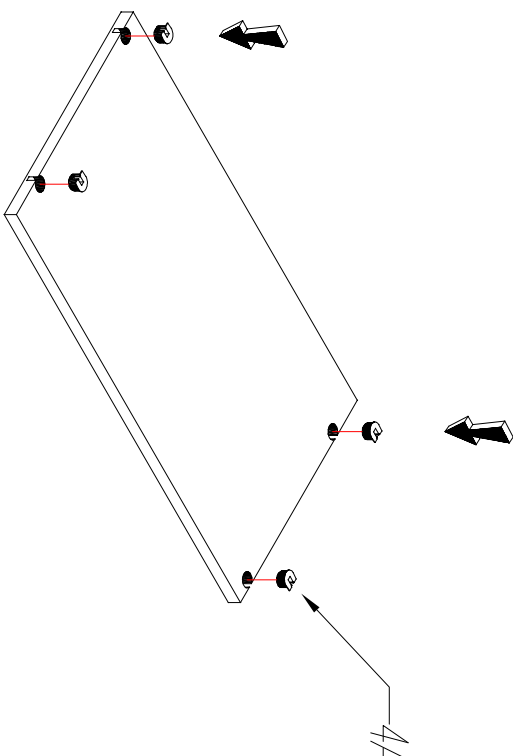



M

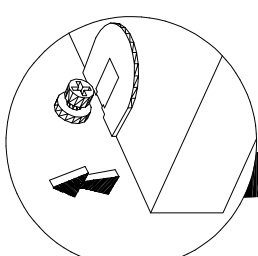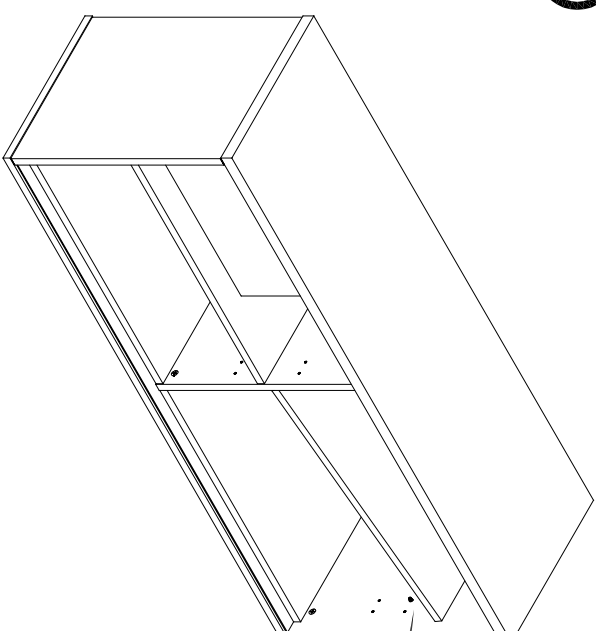

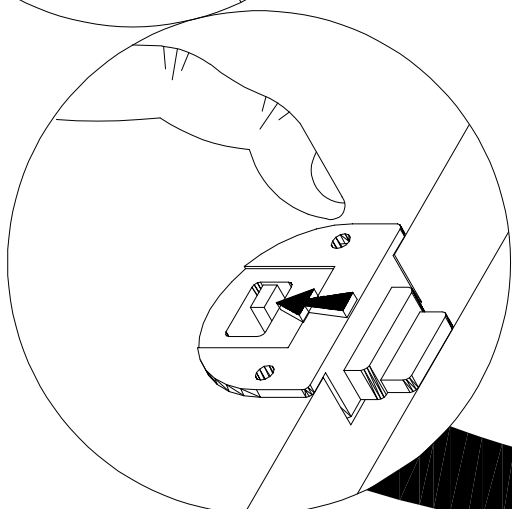
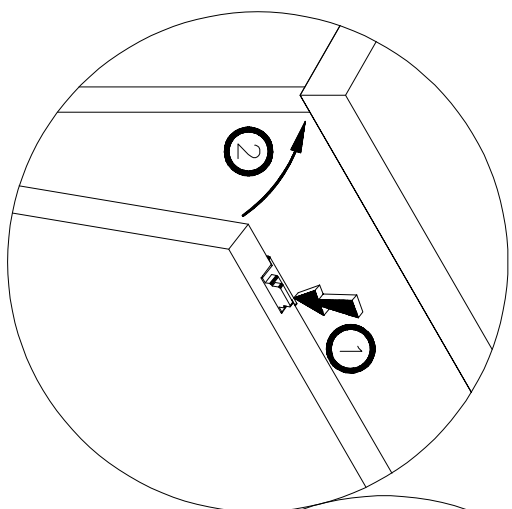
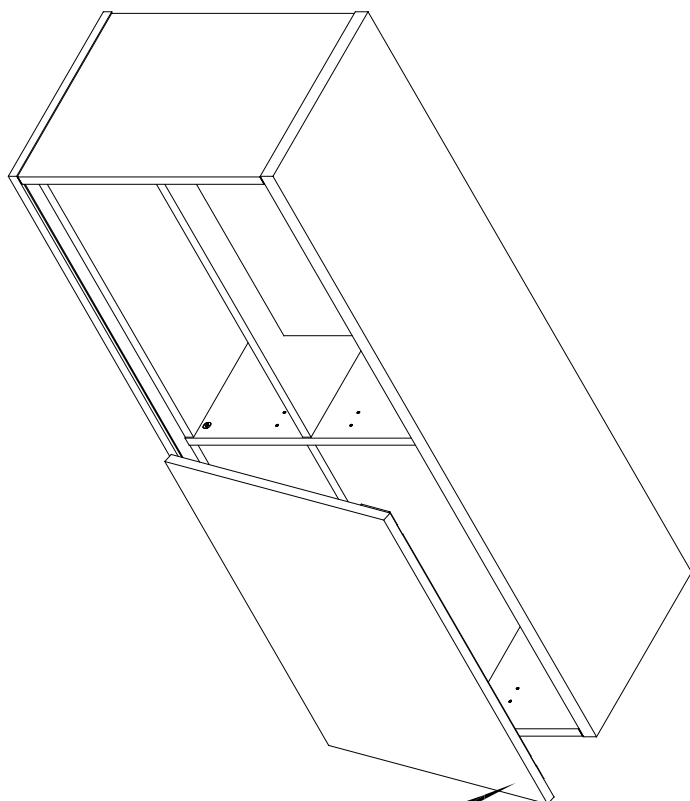
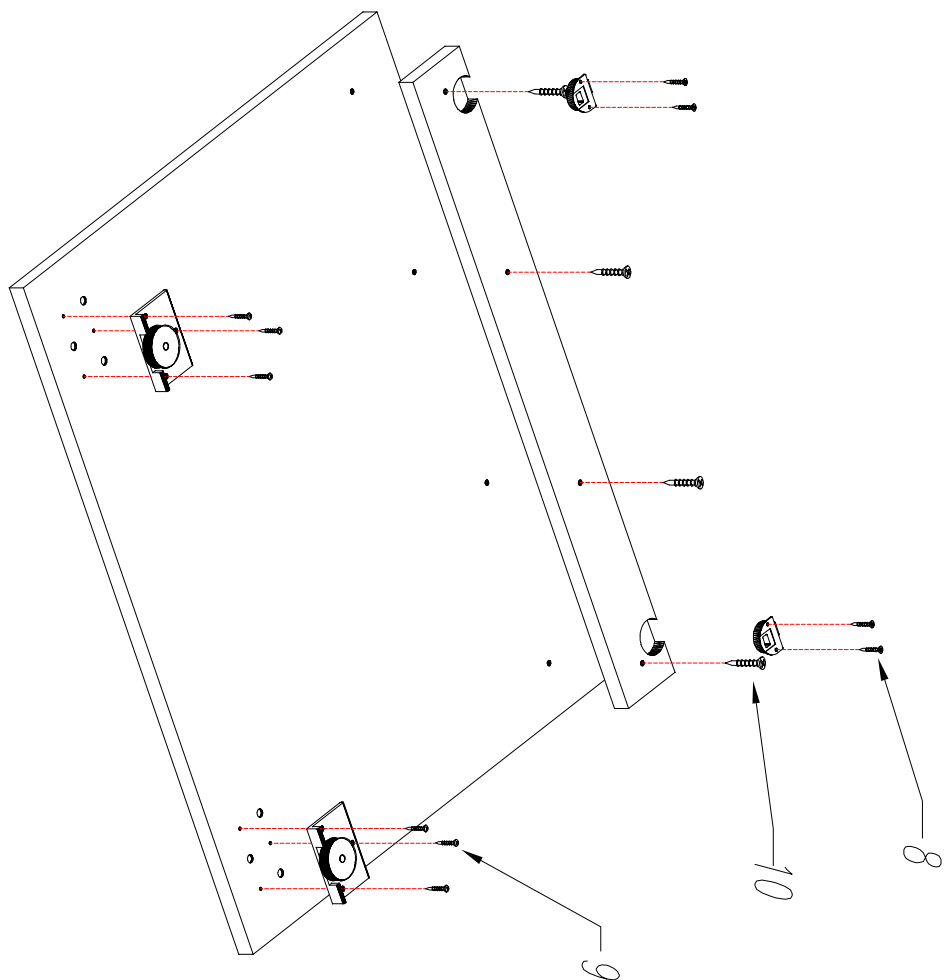




1		M6x20B
2		M6
3		M6

A

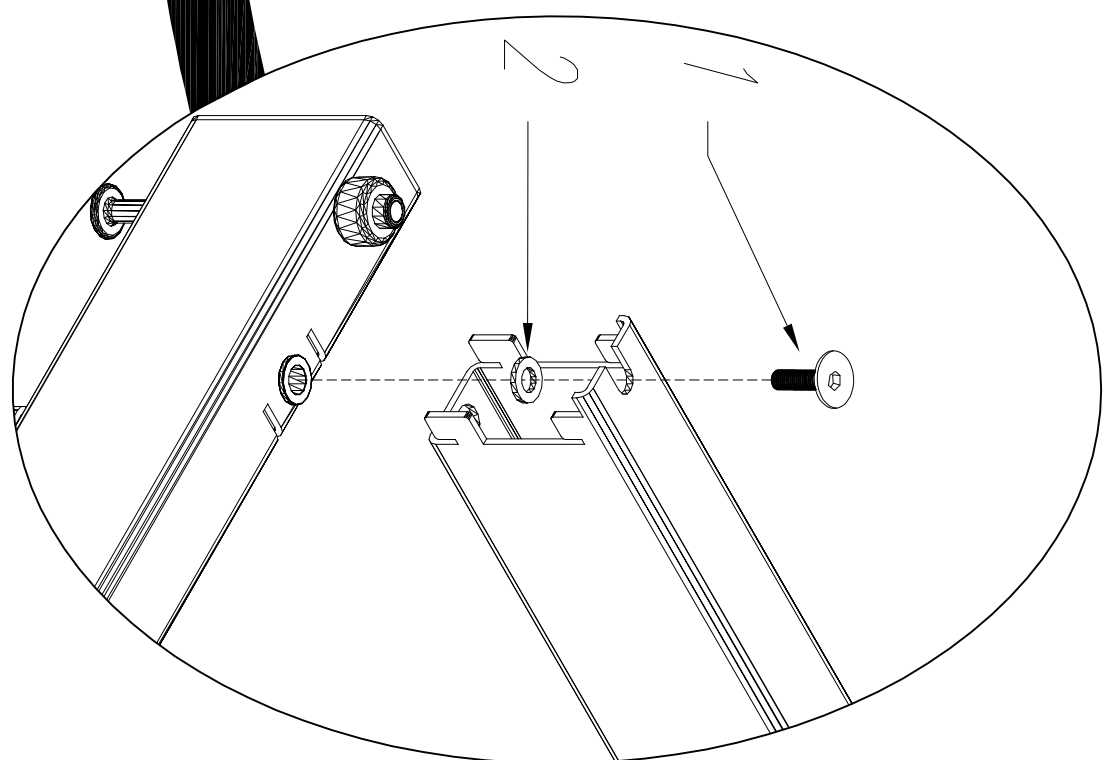


OGI

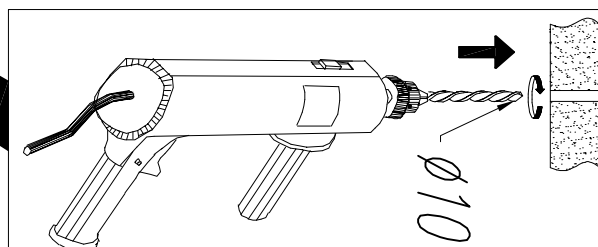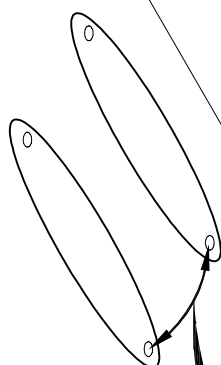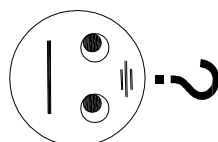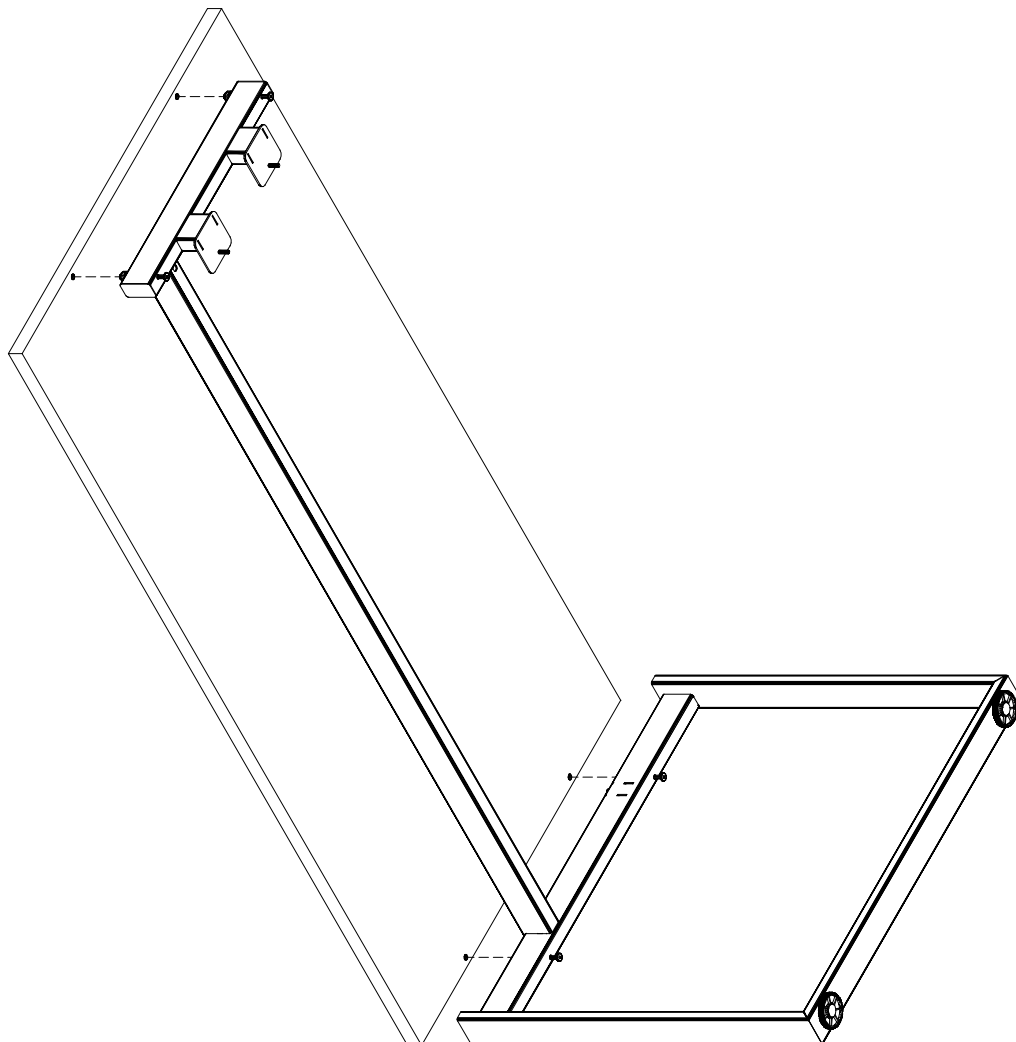

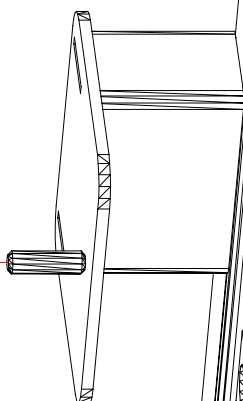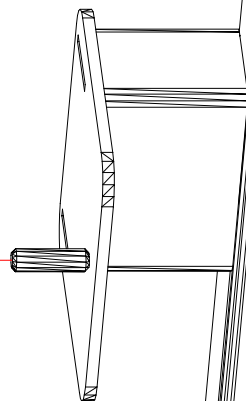


3




- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9


A12M

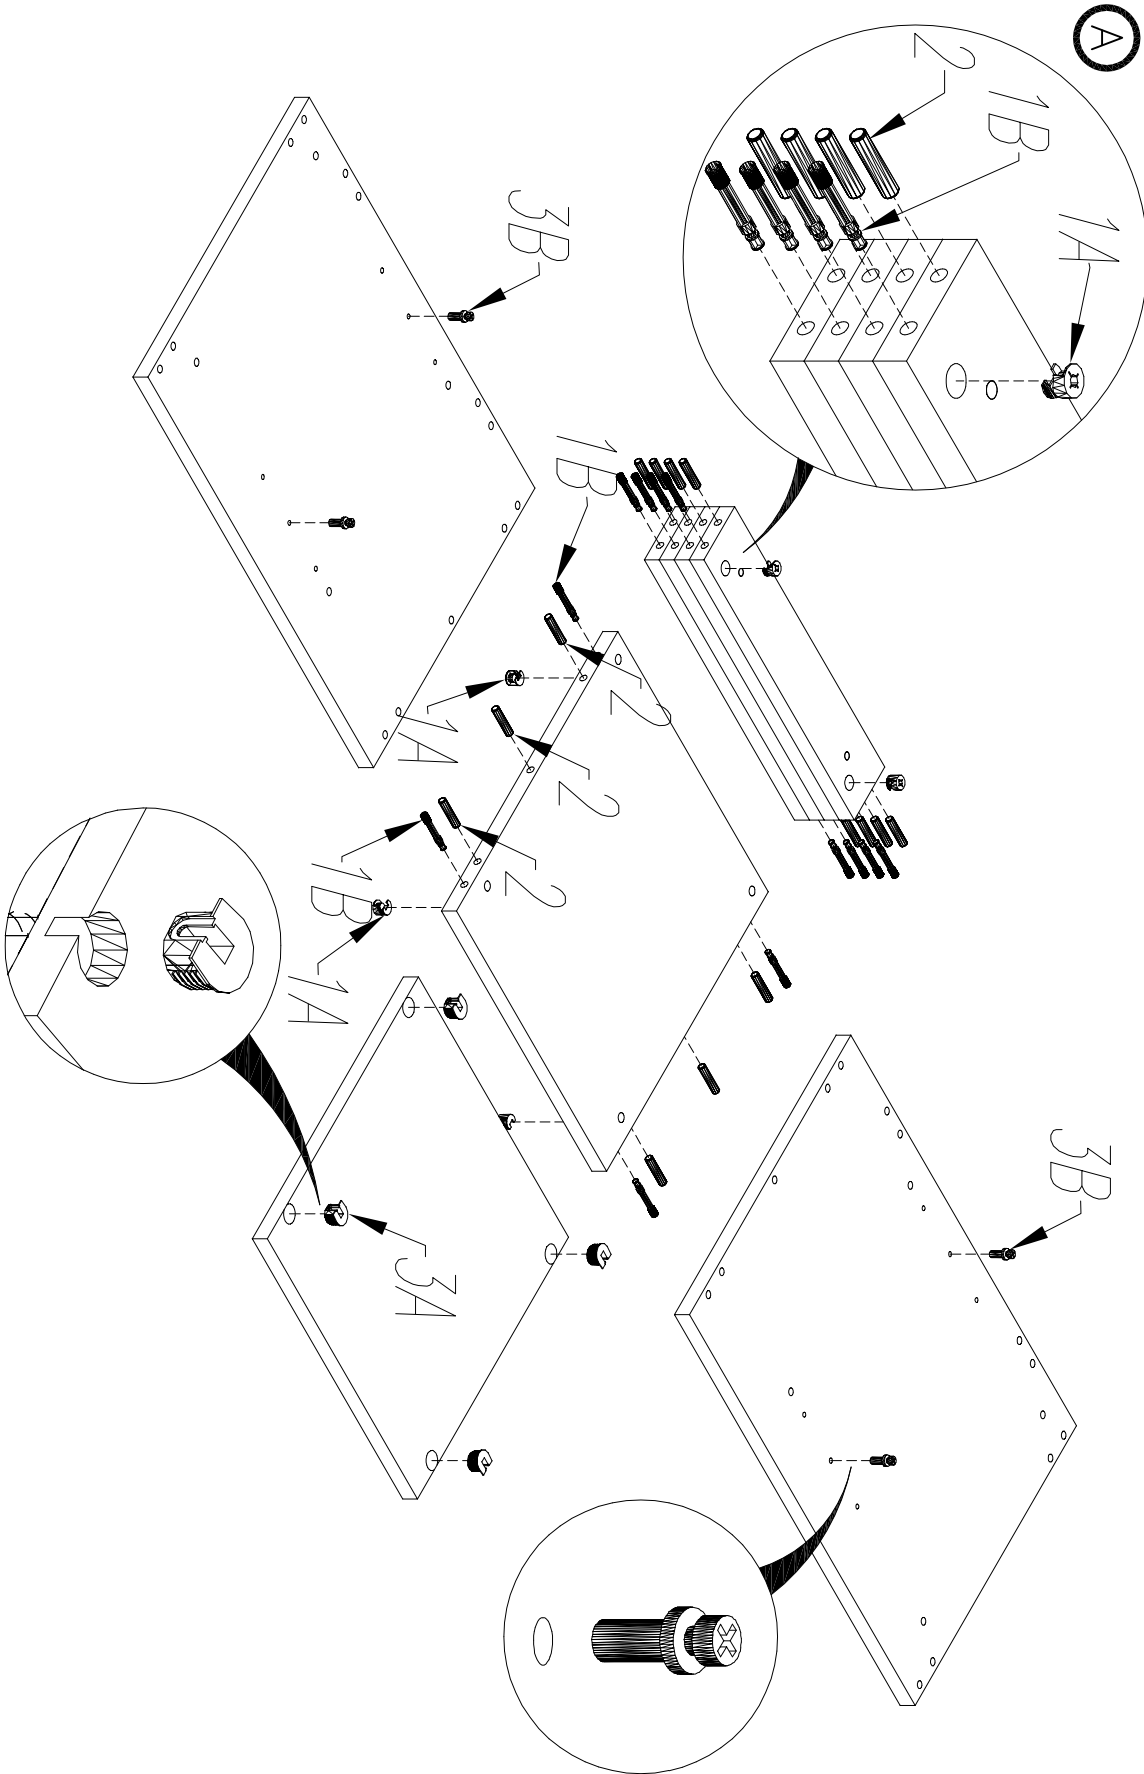


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

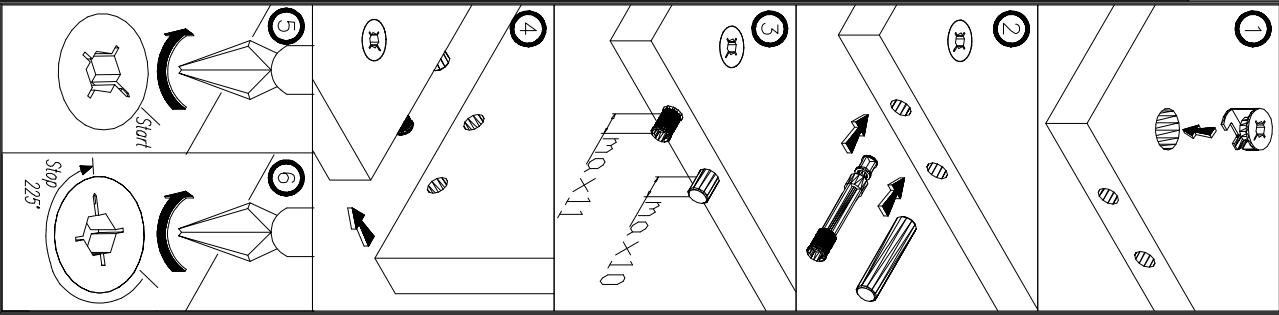

B

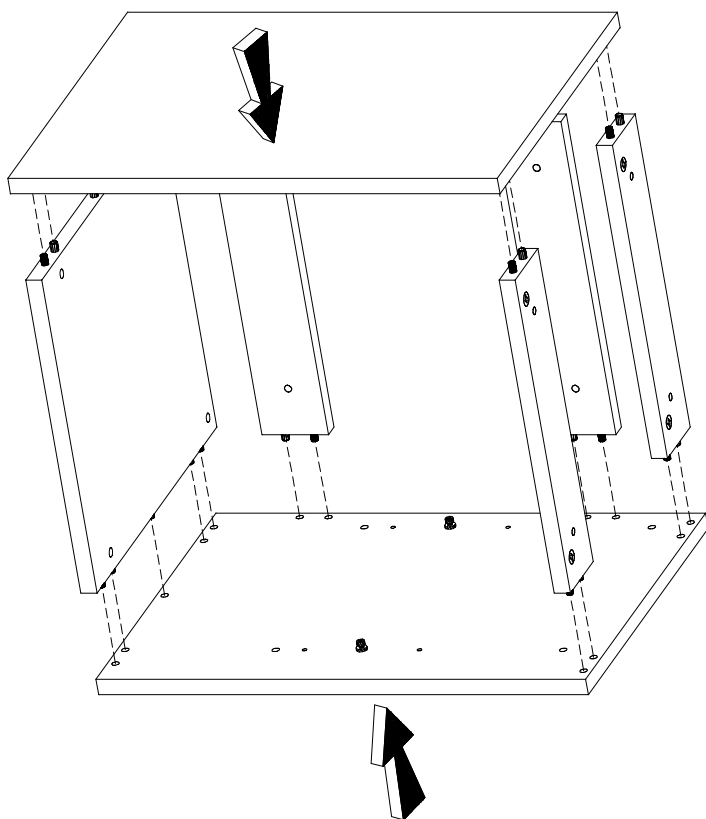

C

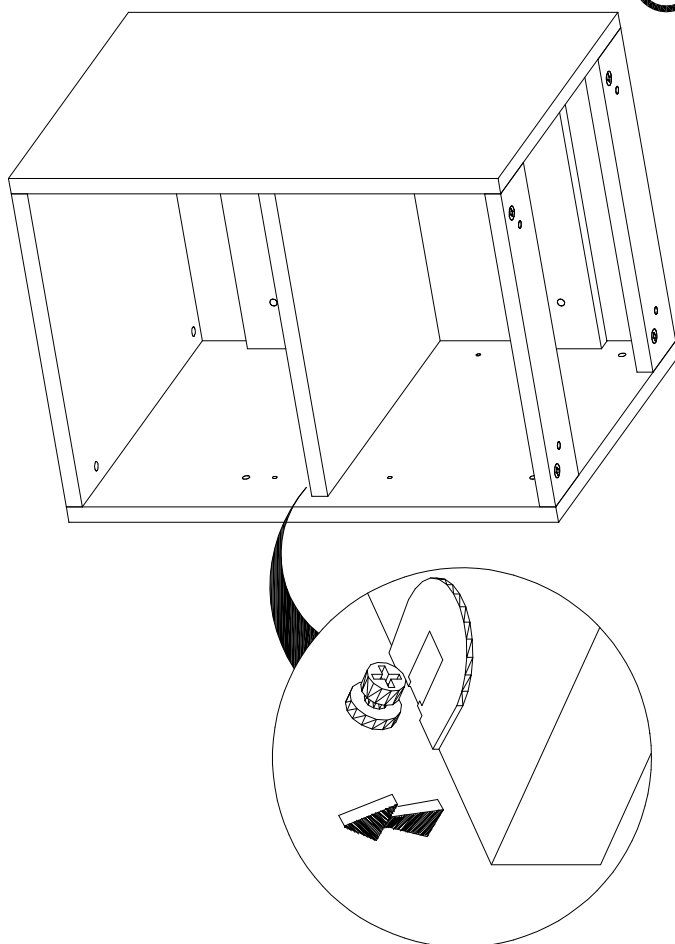

D

