




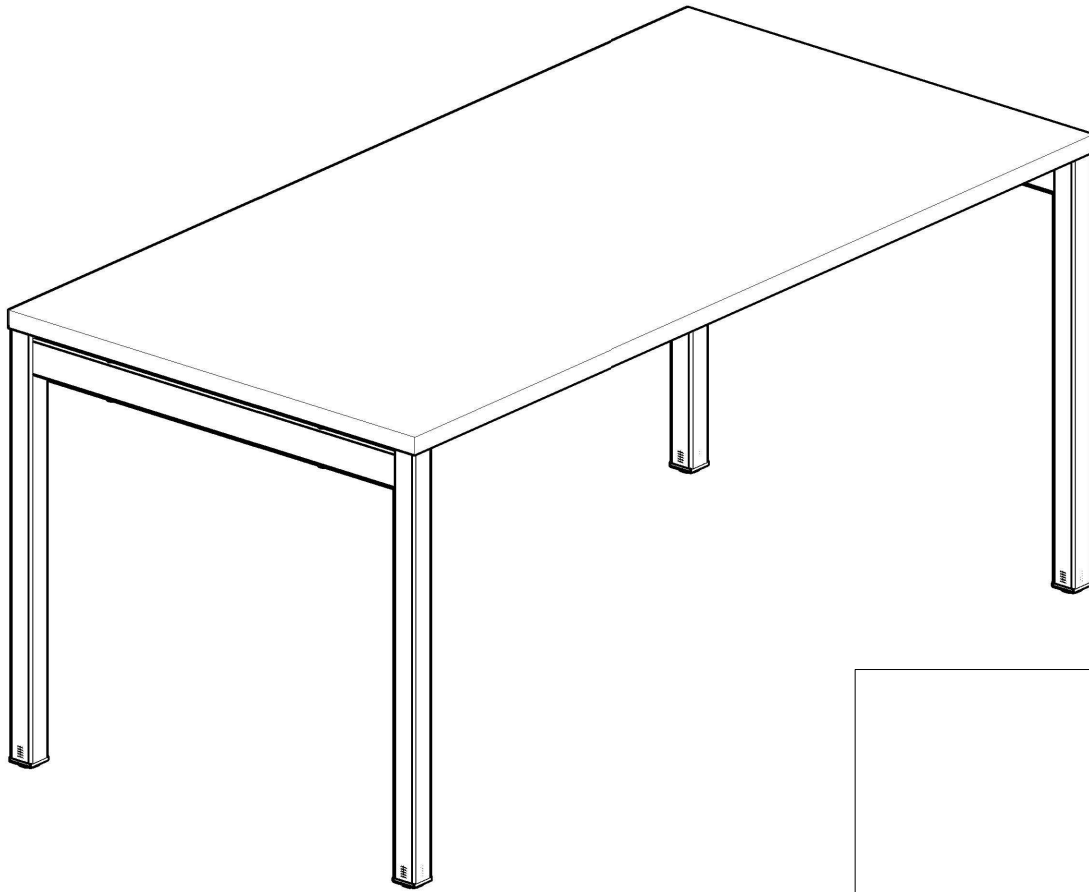


# OGI SLIDE

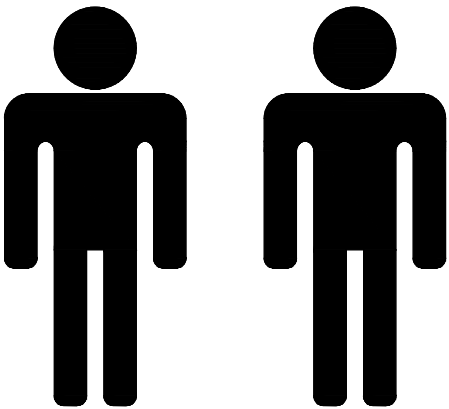

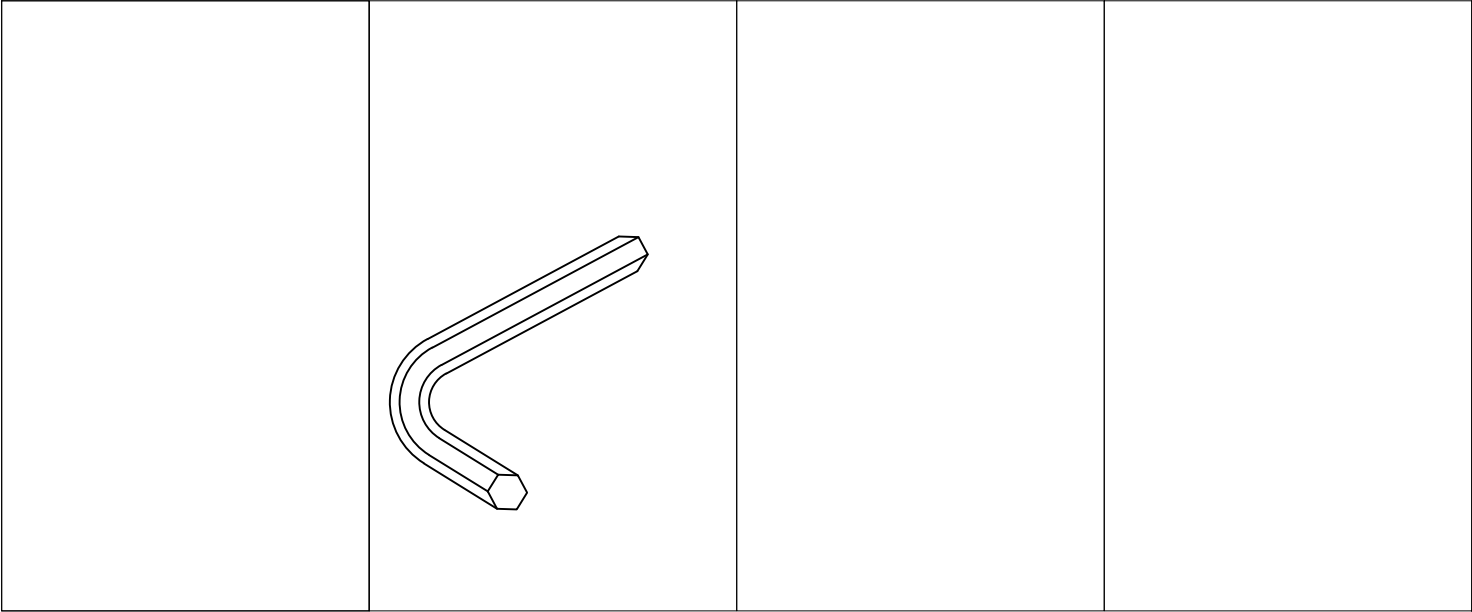


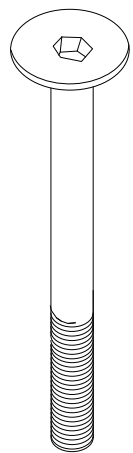

M6x68

**4x**


**1**

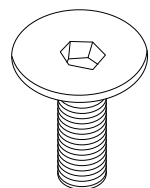

M6x10


**2x**

**2**

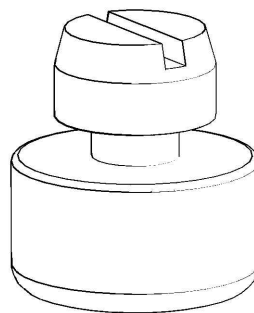


**4x**

**3**

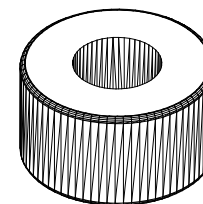


**2x**

**4**

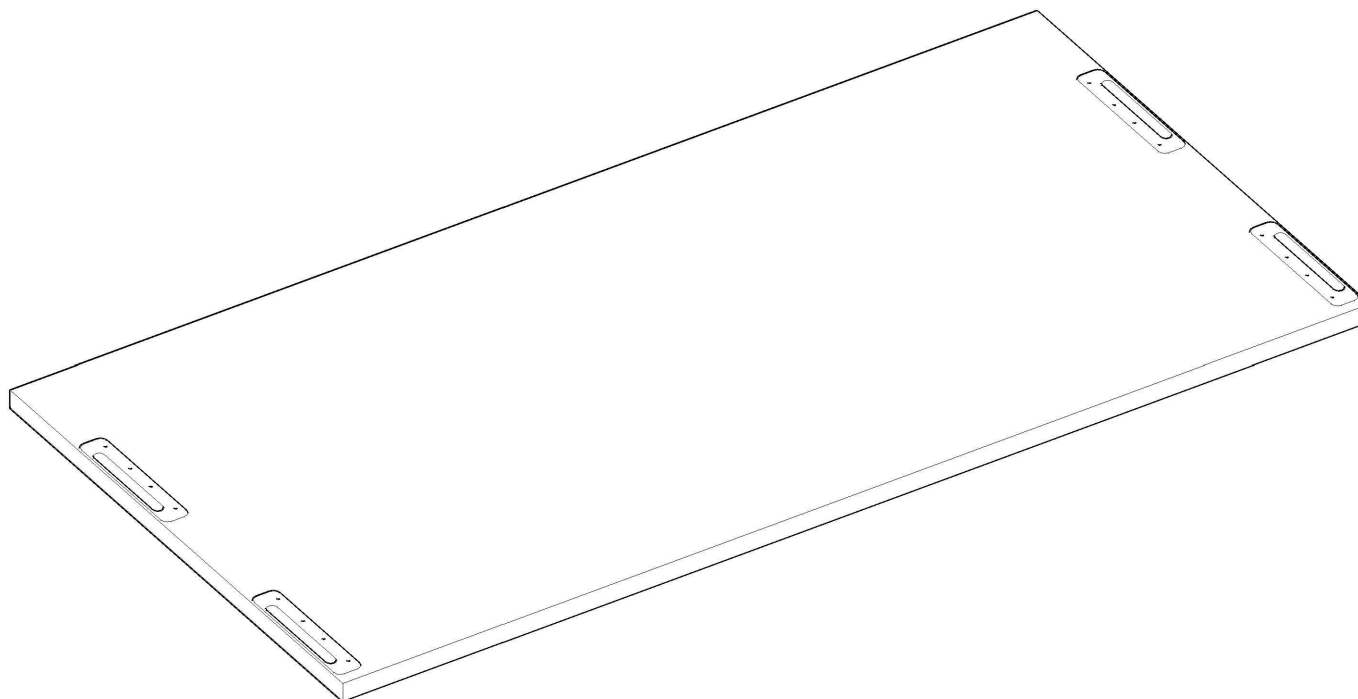


**3**


**5**

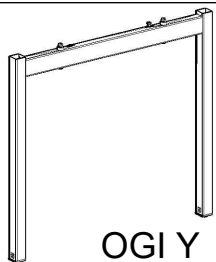


OGI Y

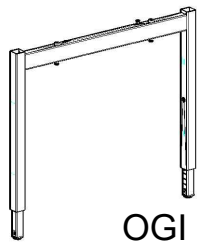


OGI Y

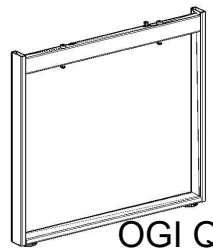


OGI Q

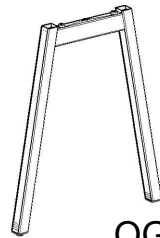


OGI M


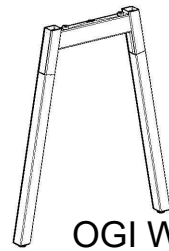






OGI W


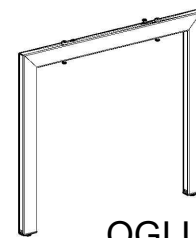


OGI U

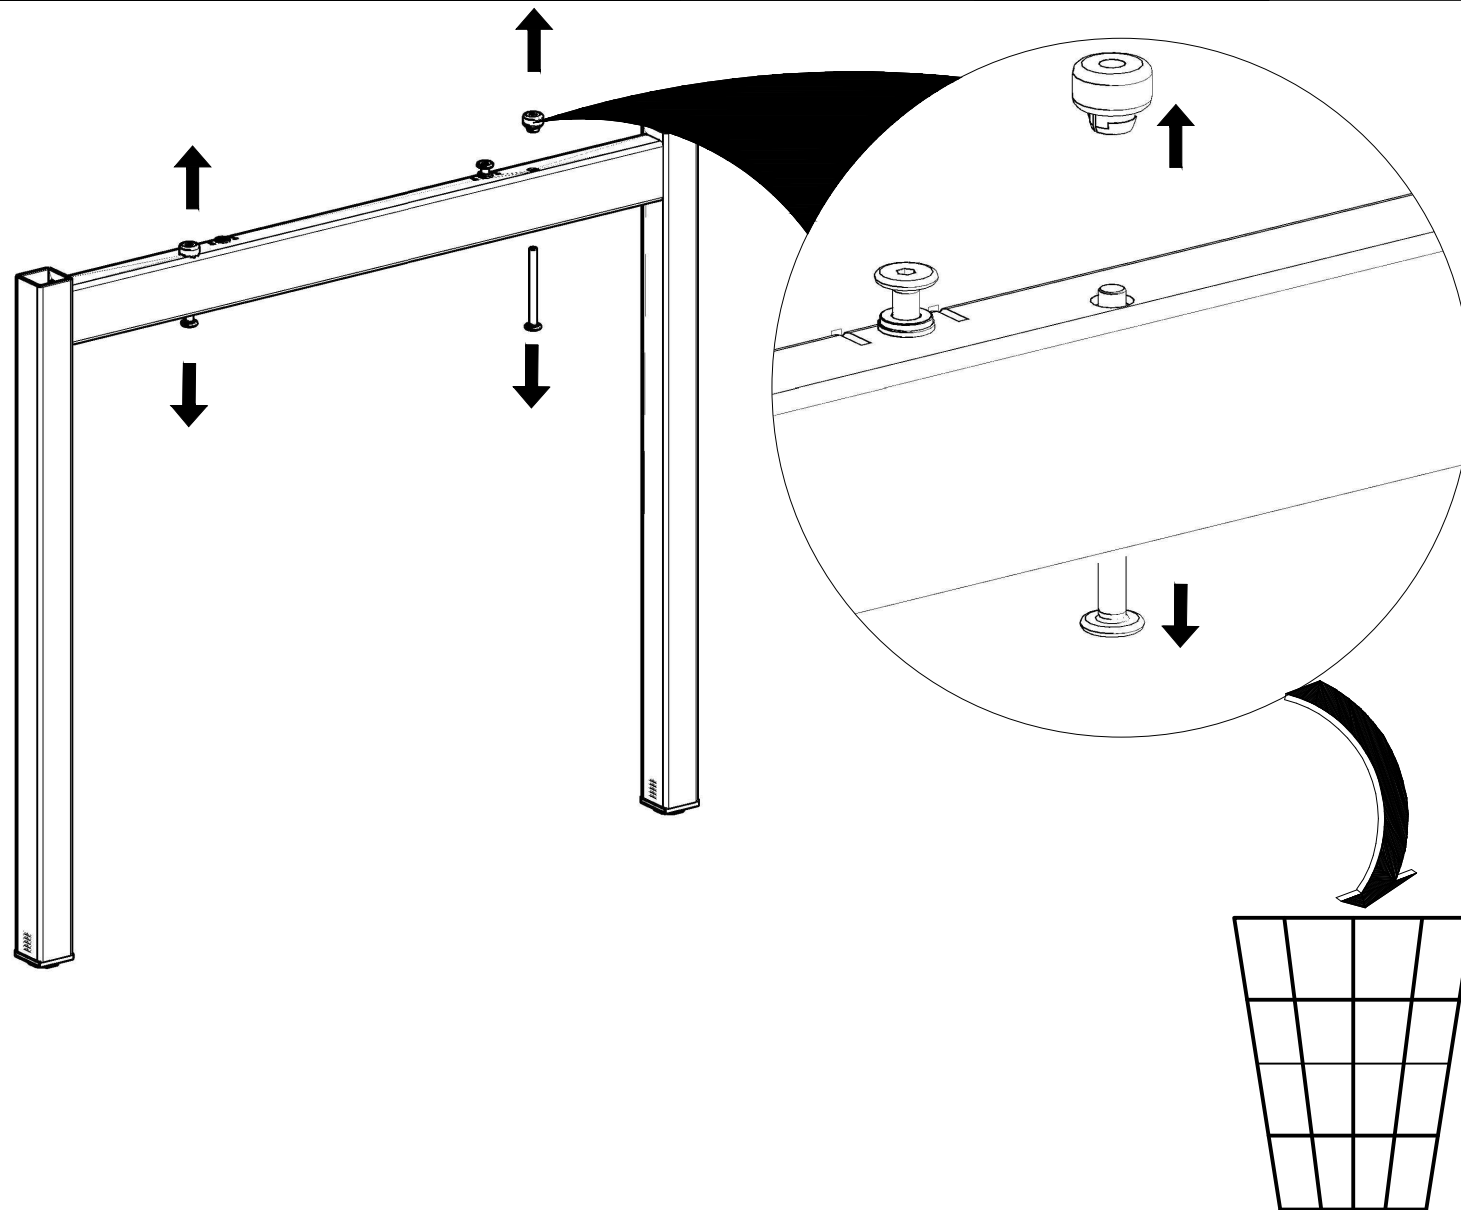


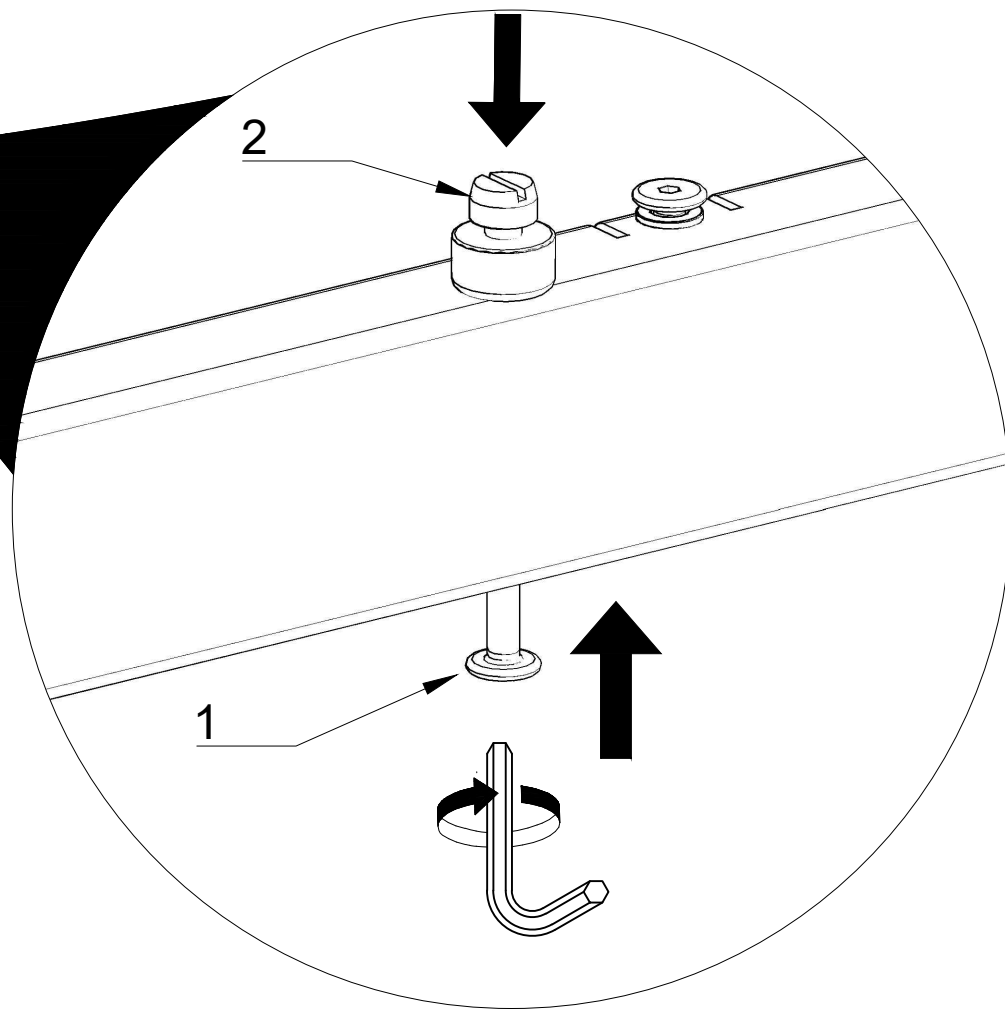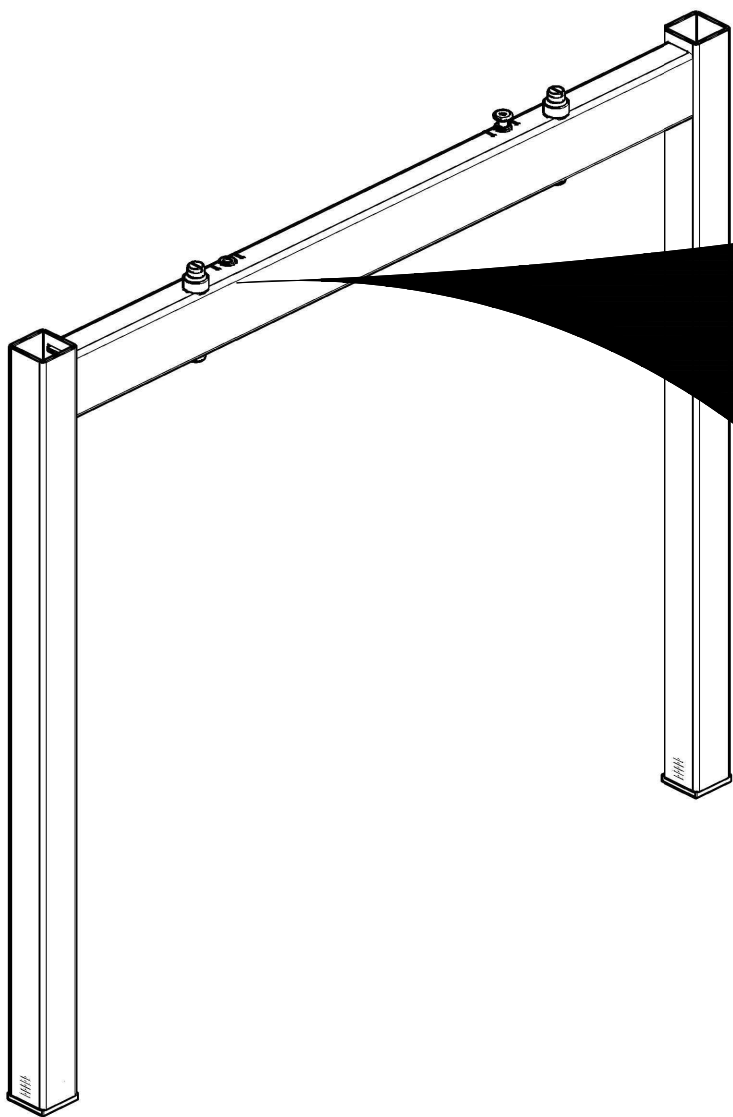


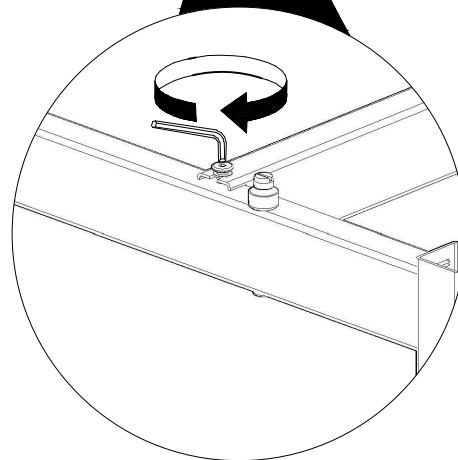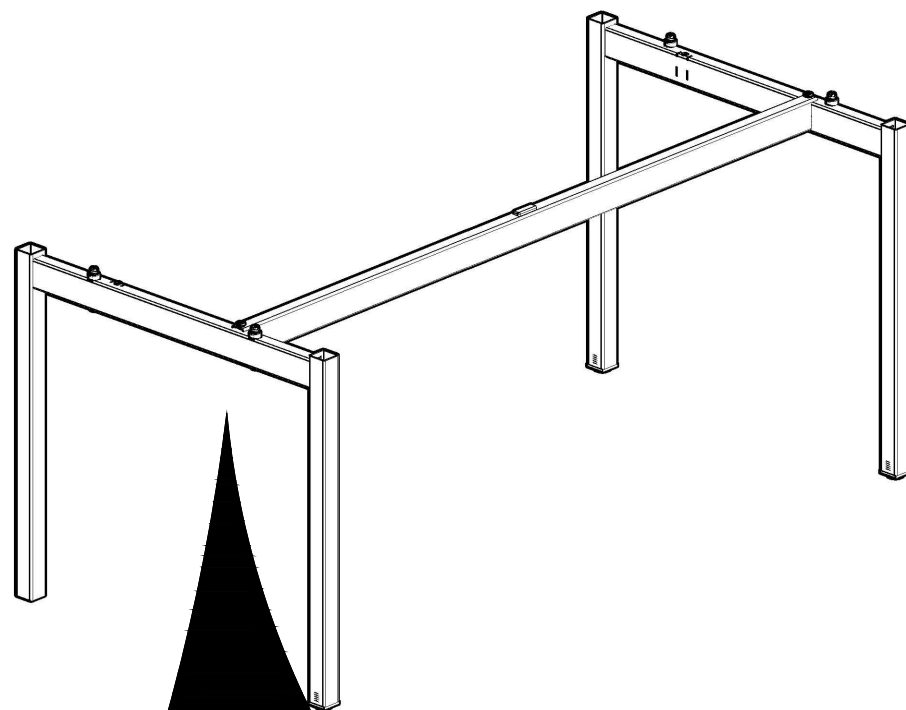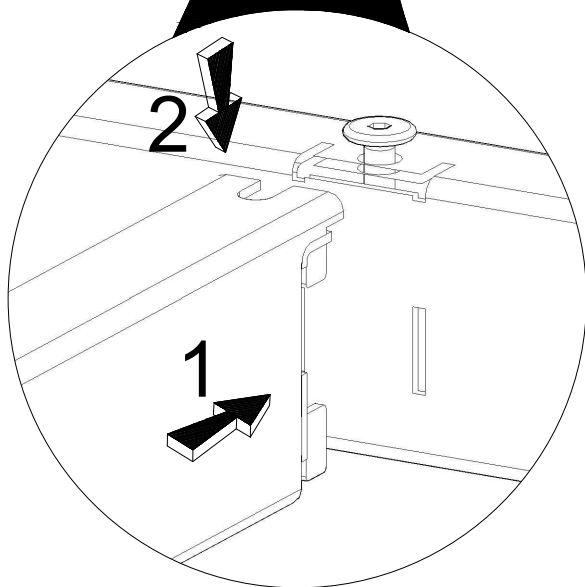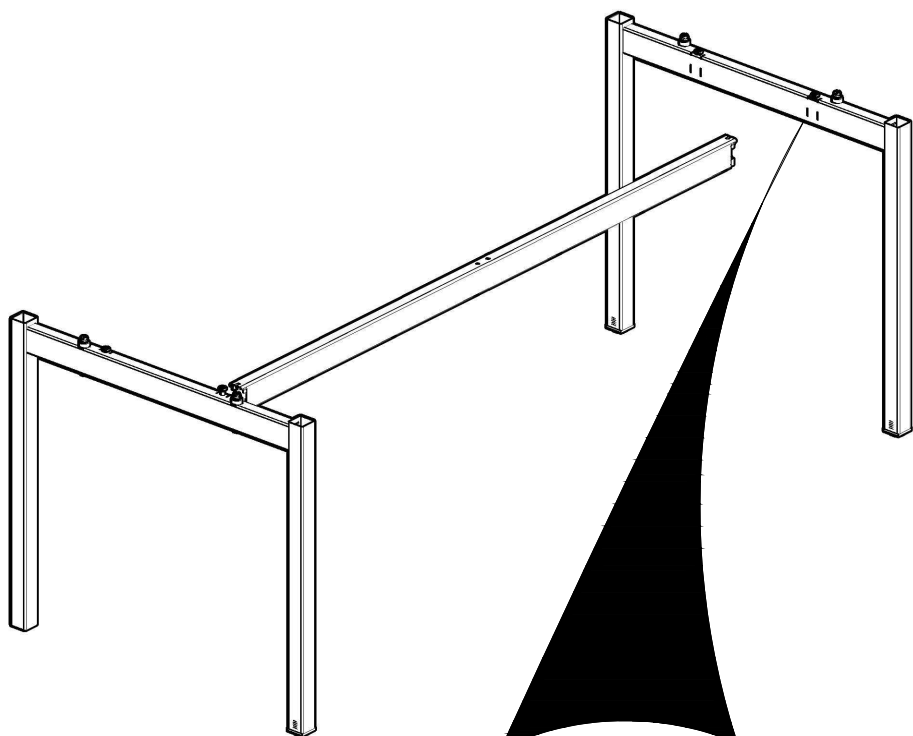

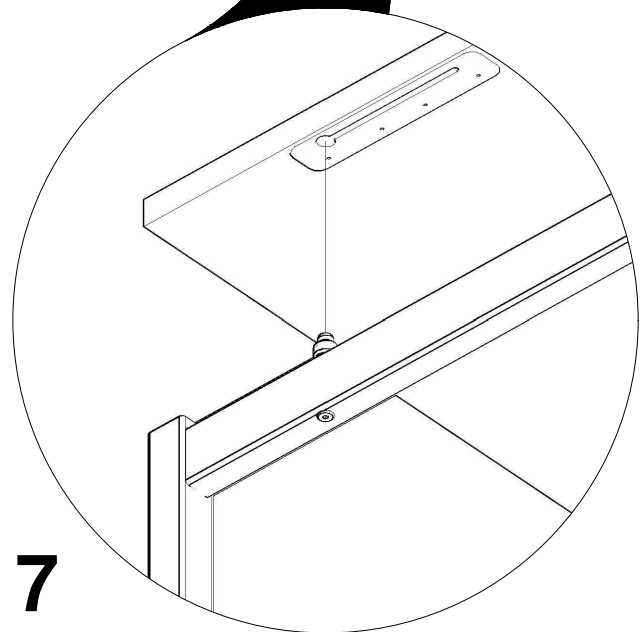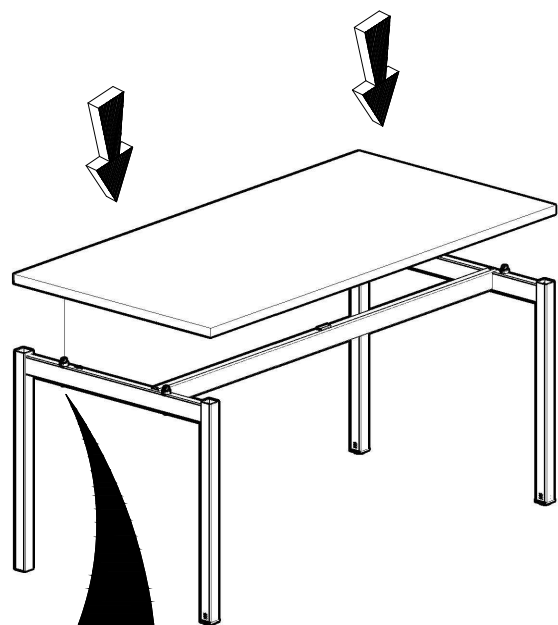


7

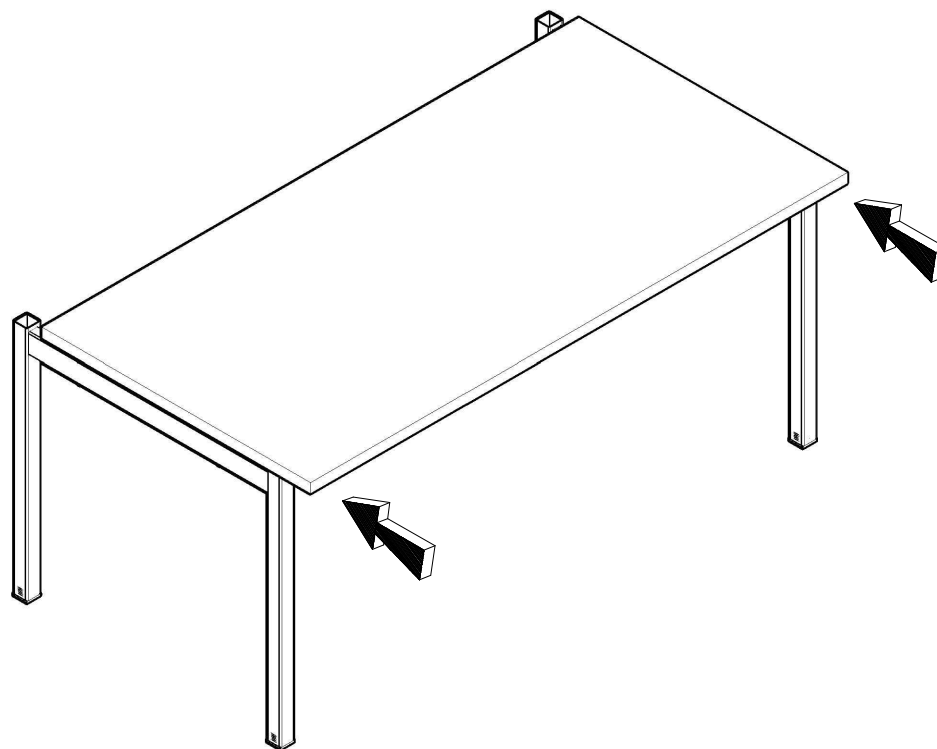

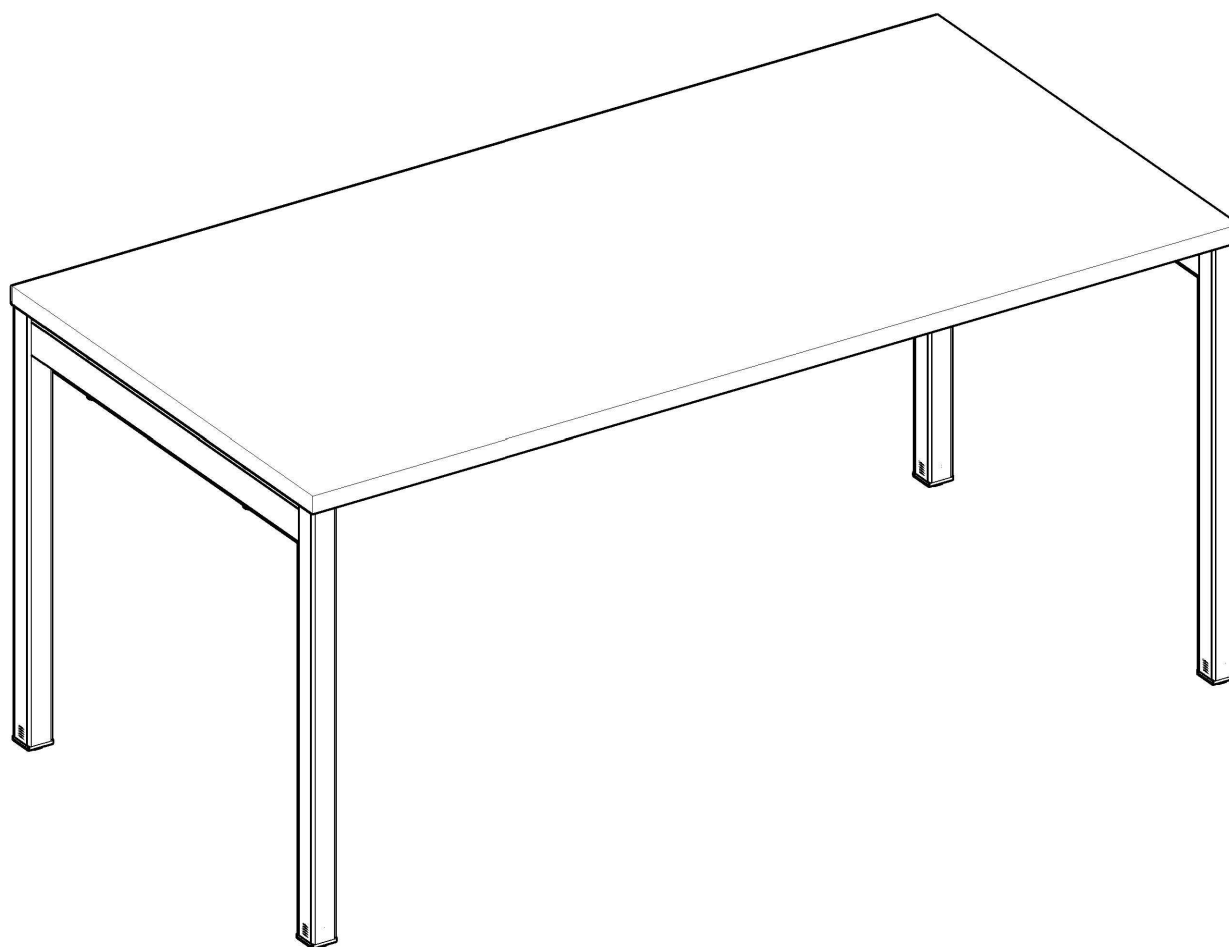


# OGI SLIDE


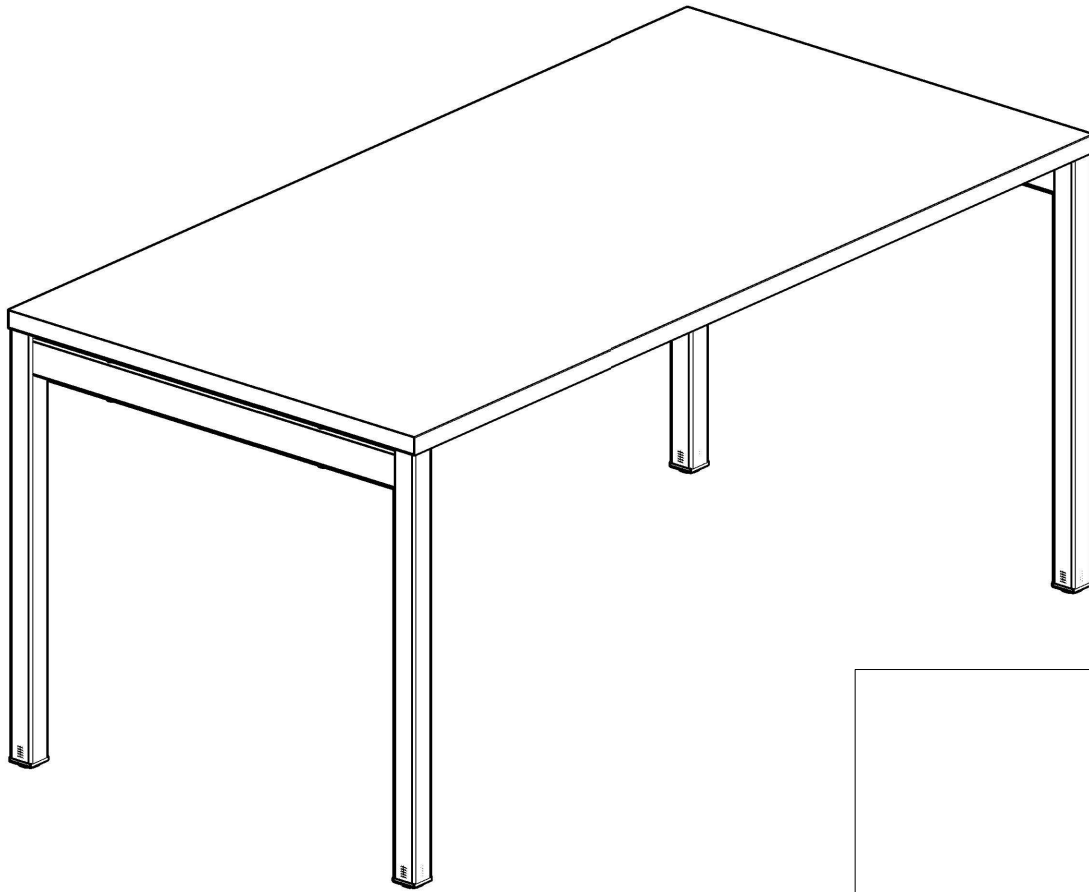



BOX 1

BOX 2

BOX 3

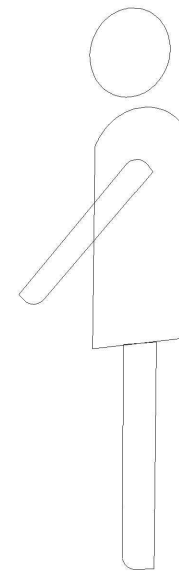

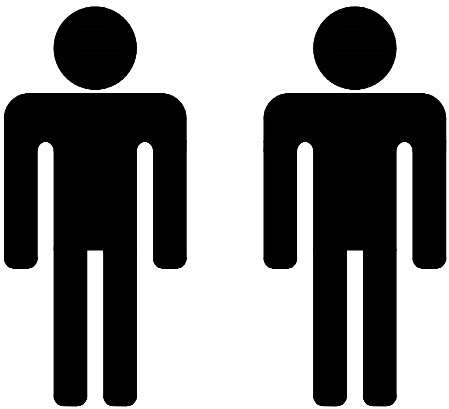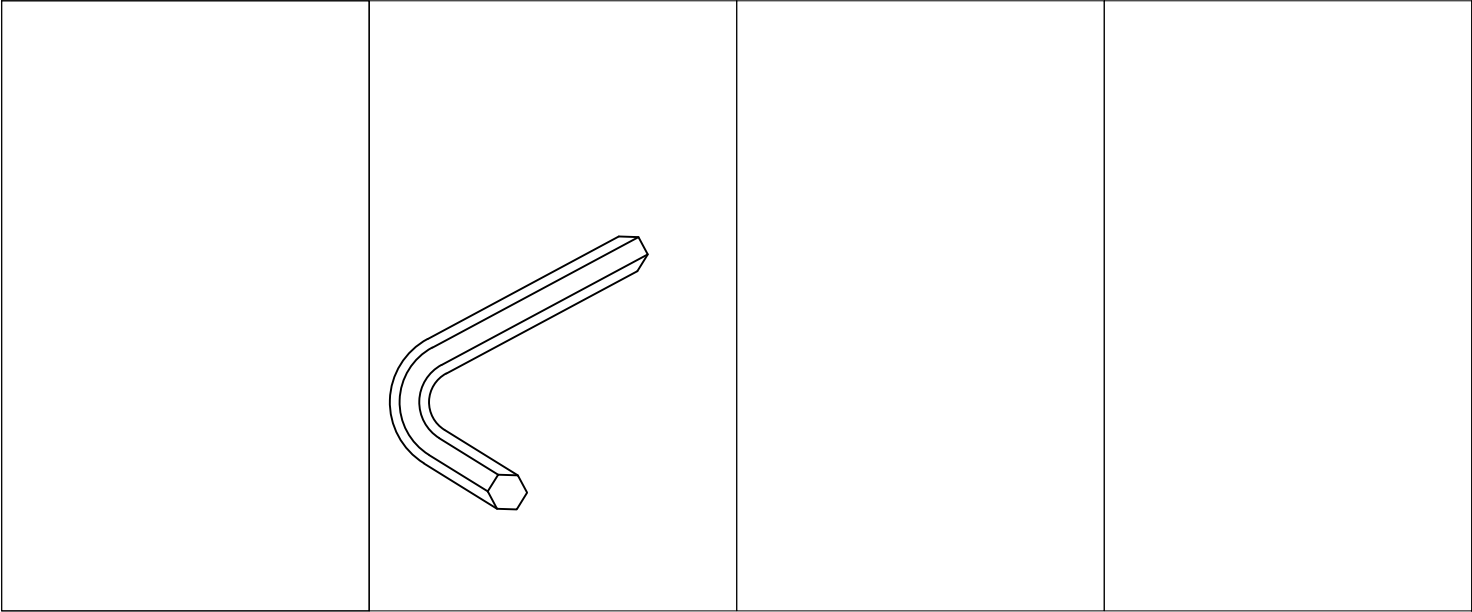


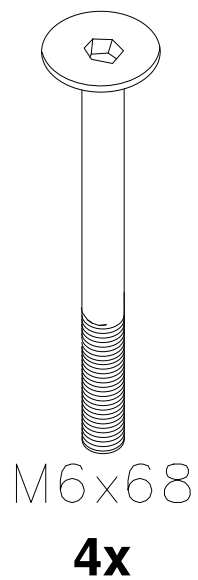


1




2

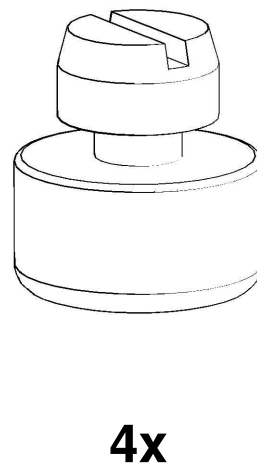


3

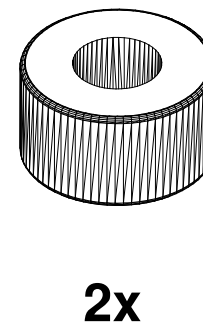


4

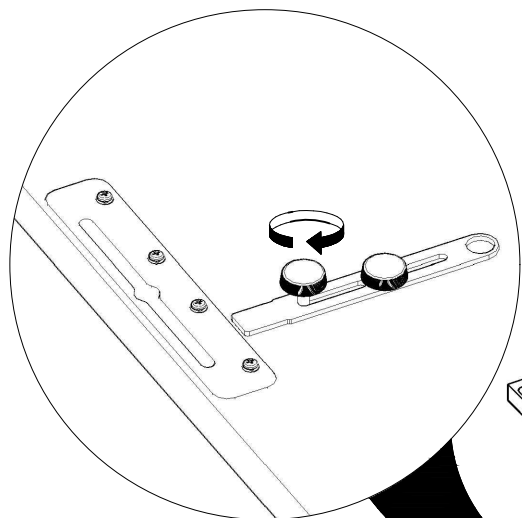


3

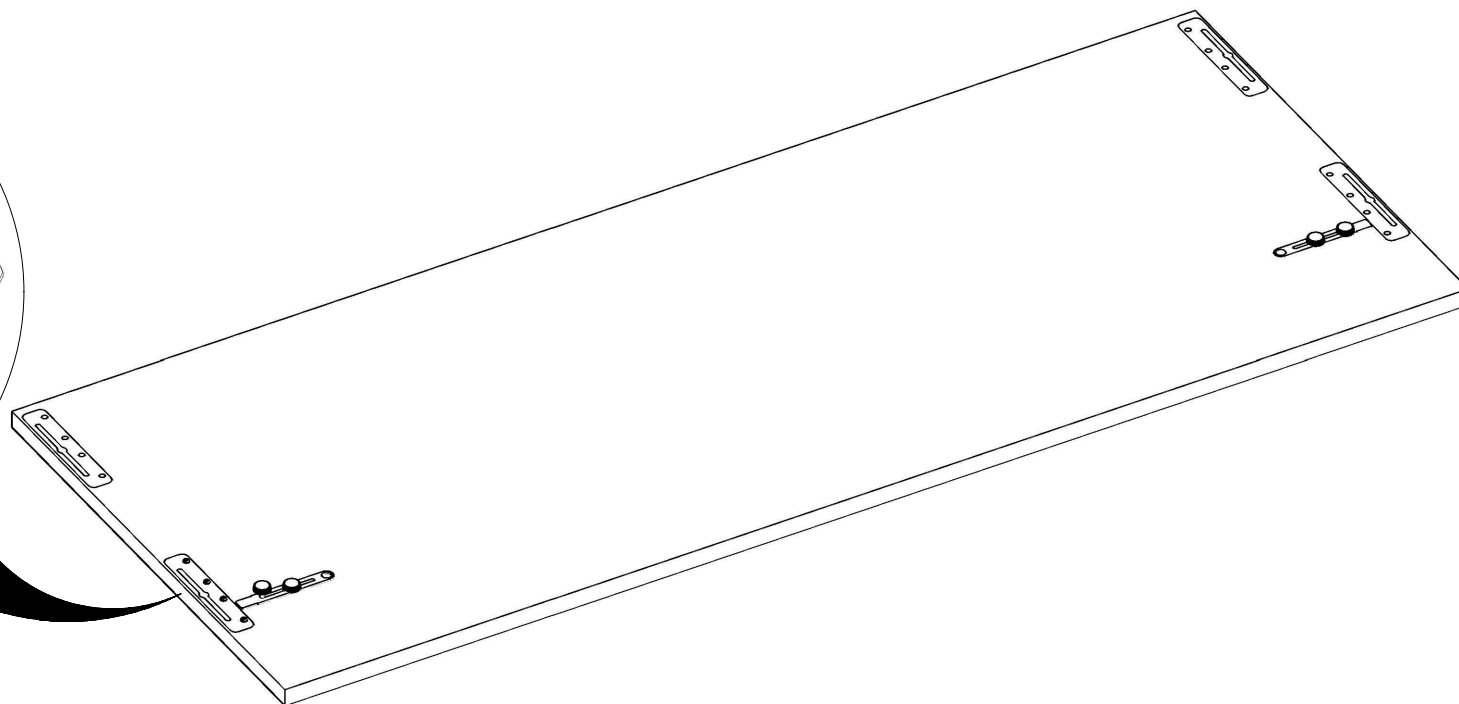


5

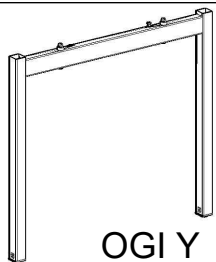


OGI Y

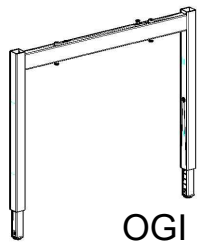


OGI Y

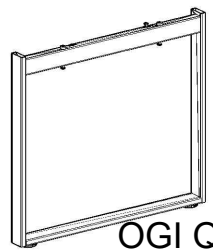


OGI Q

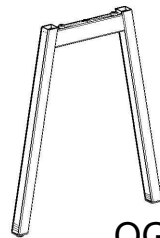


OGI M


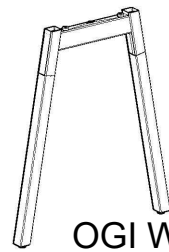






OGI W


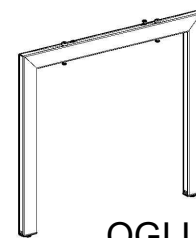


OGI U

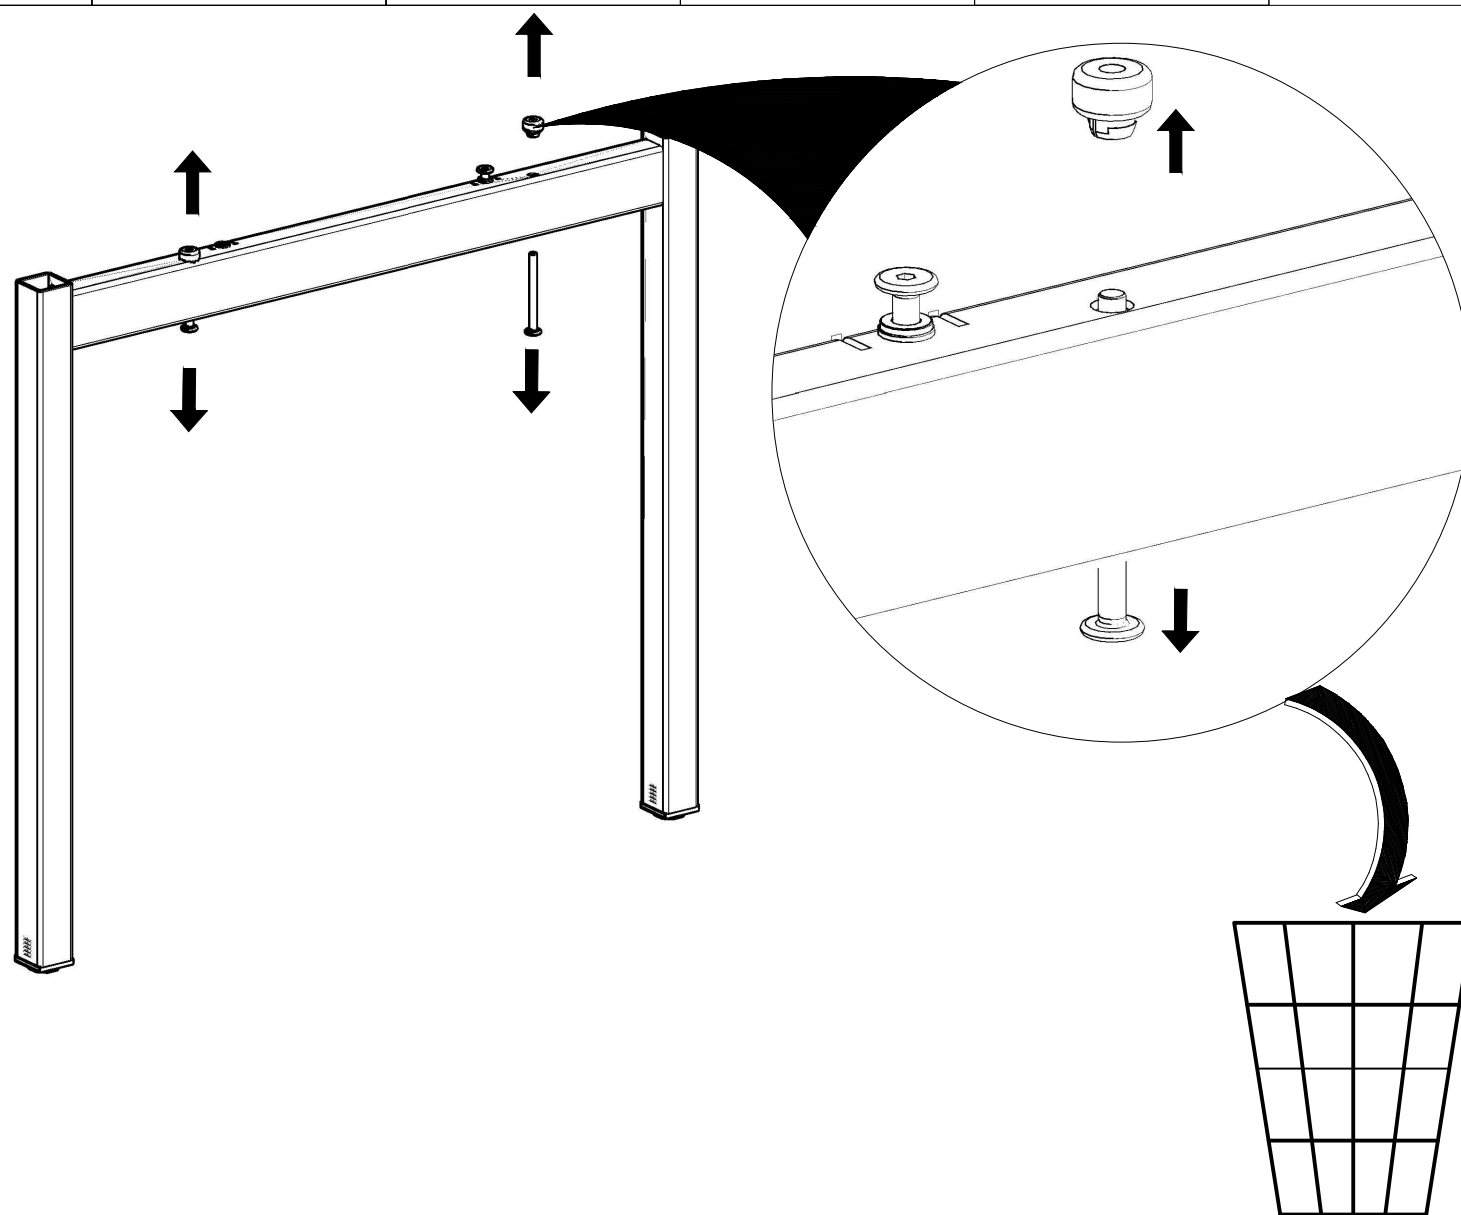


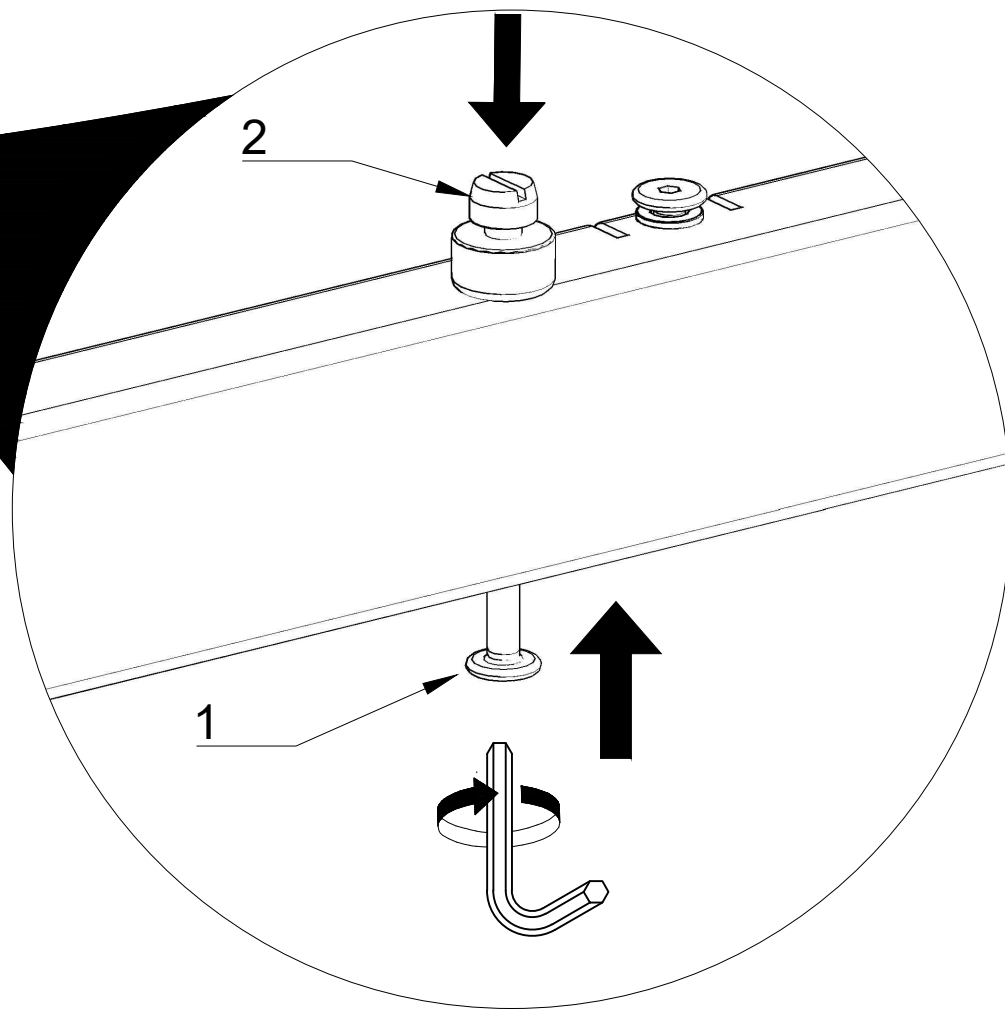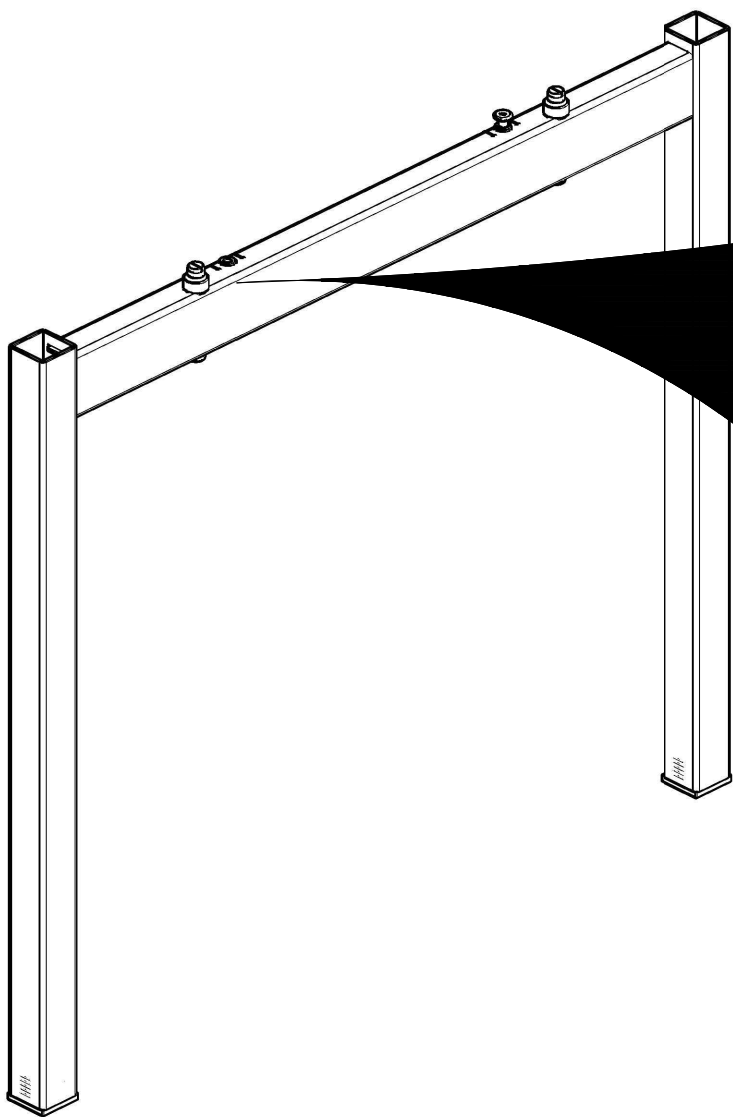


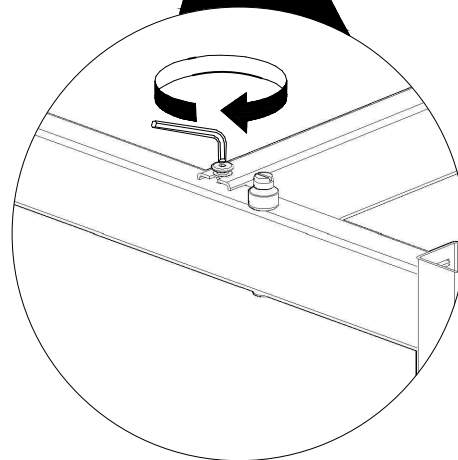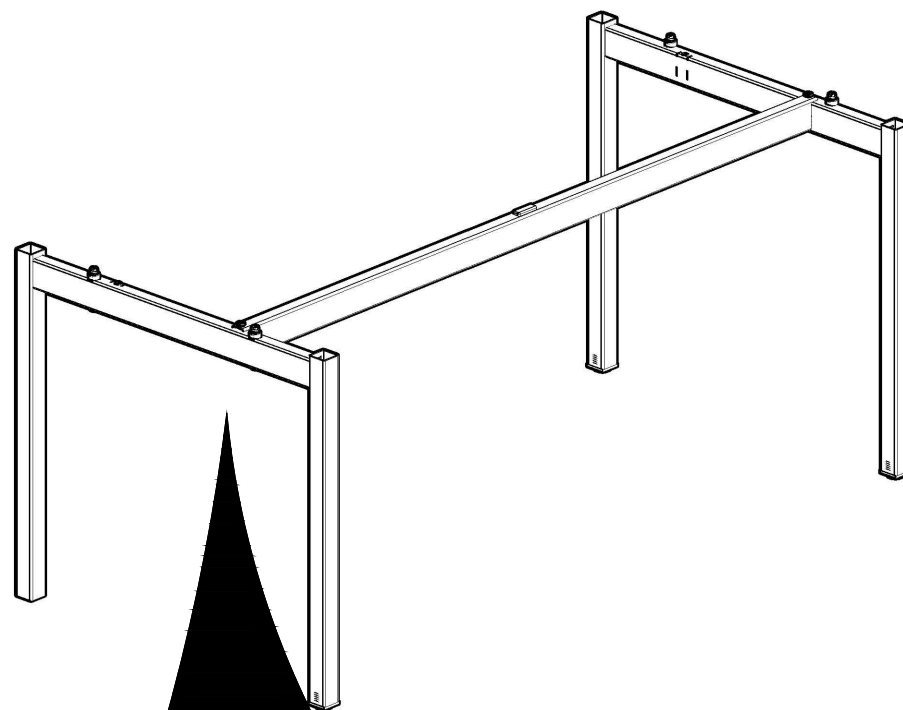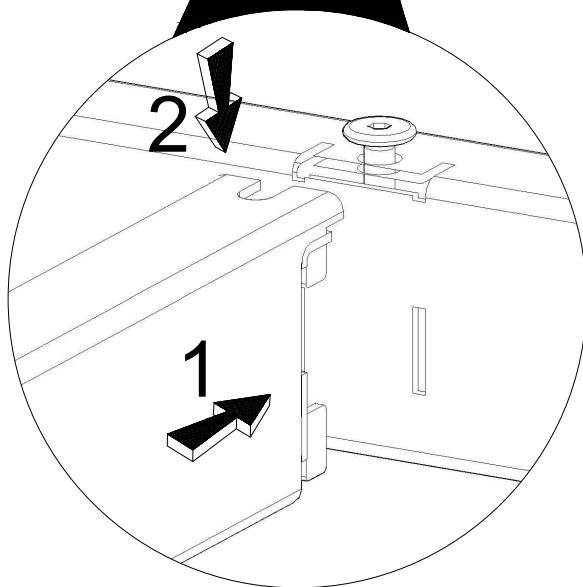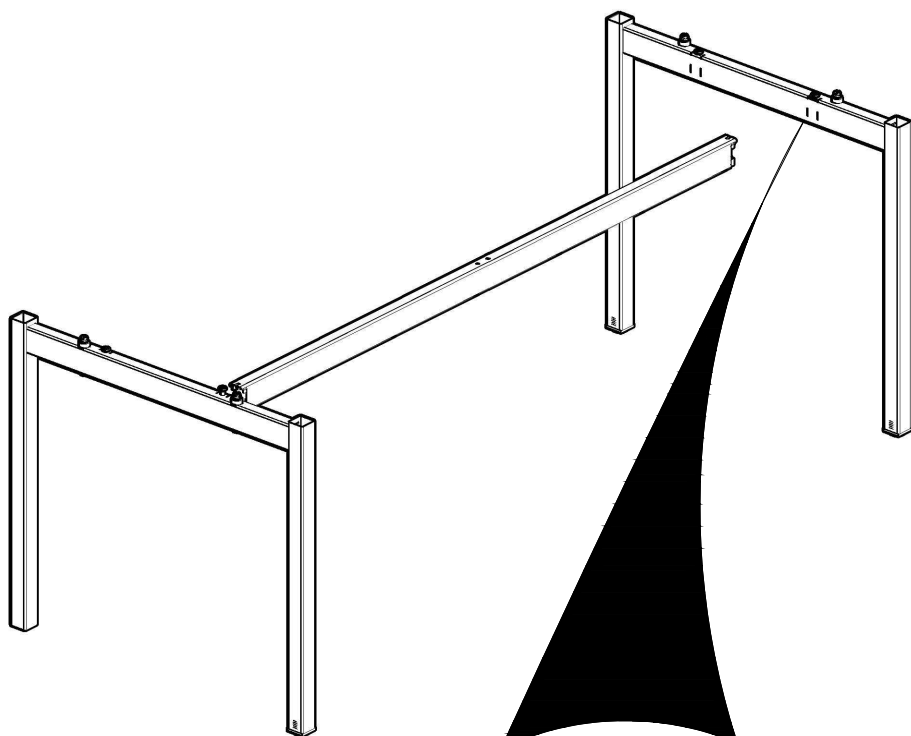

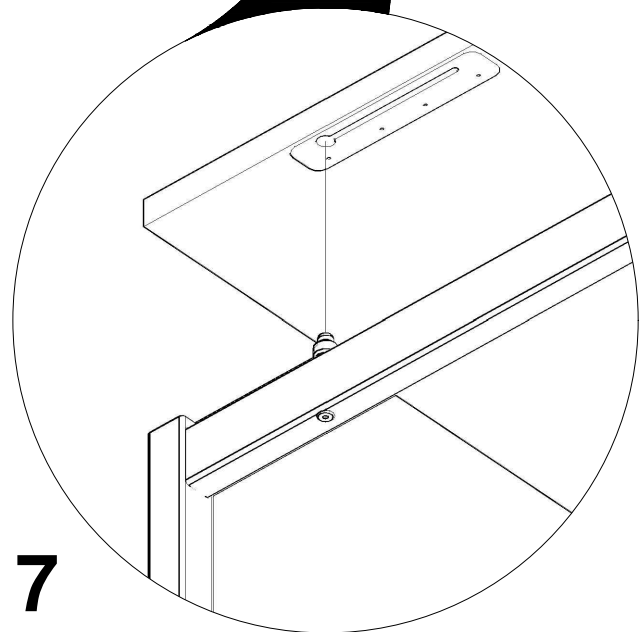
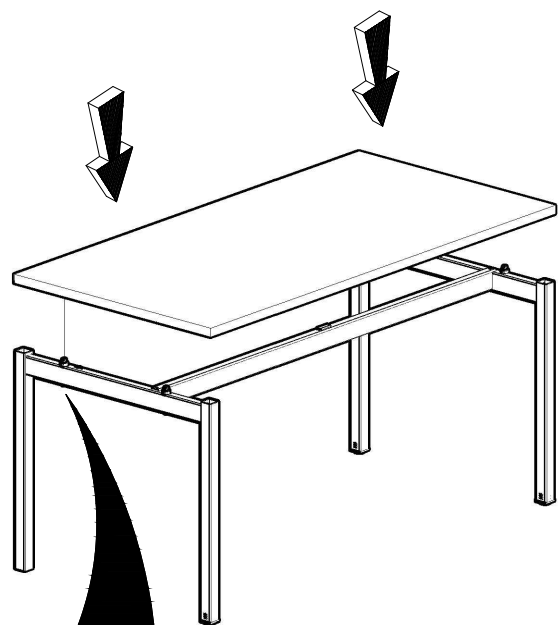




7

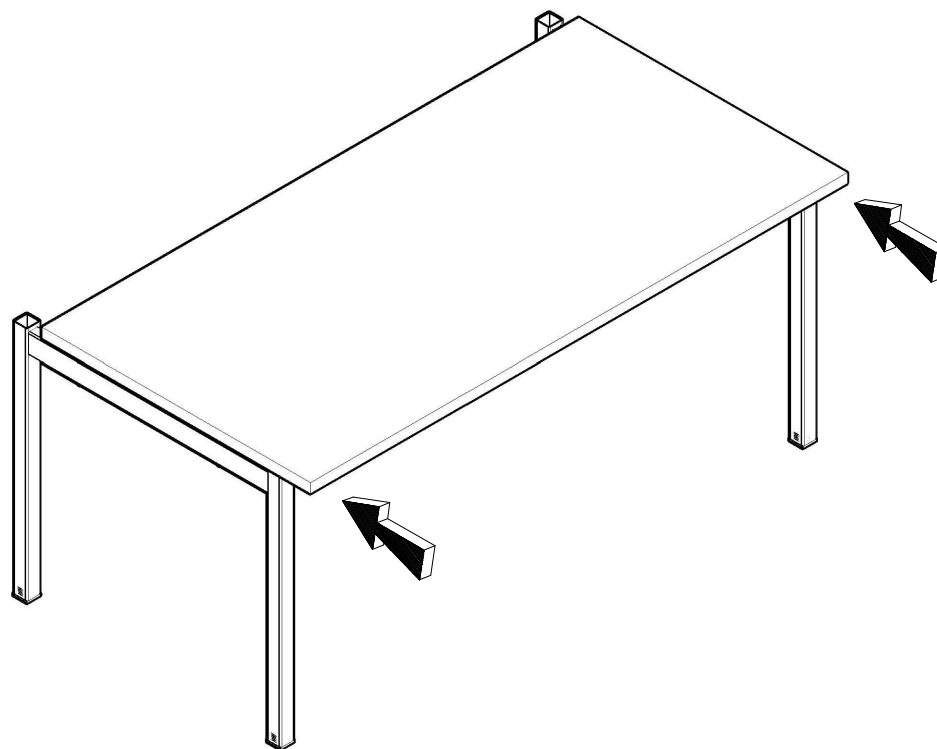


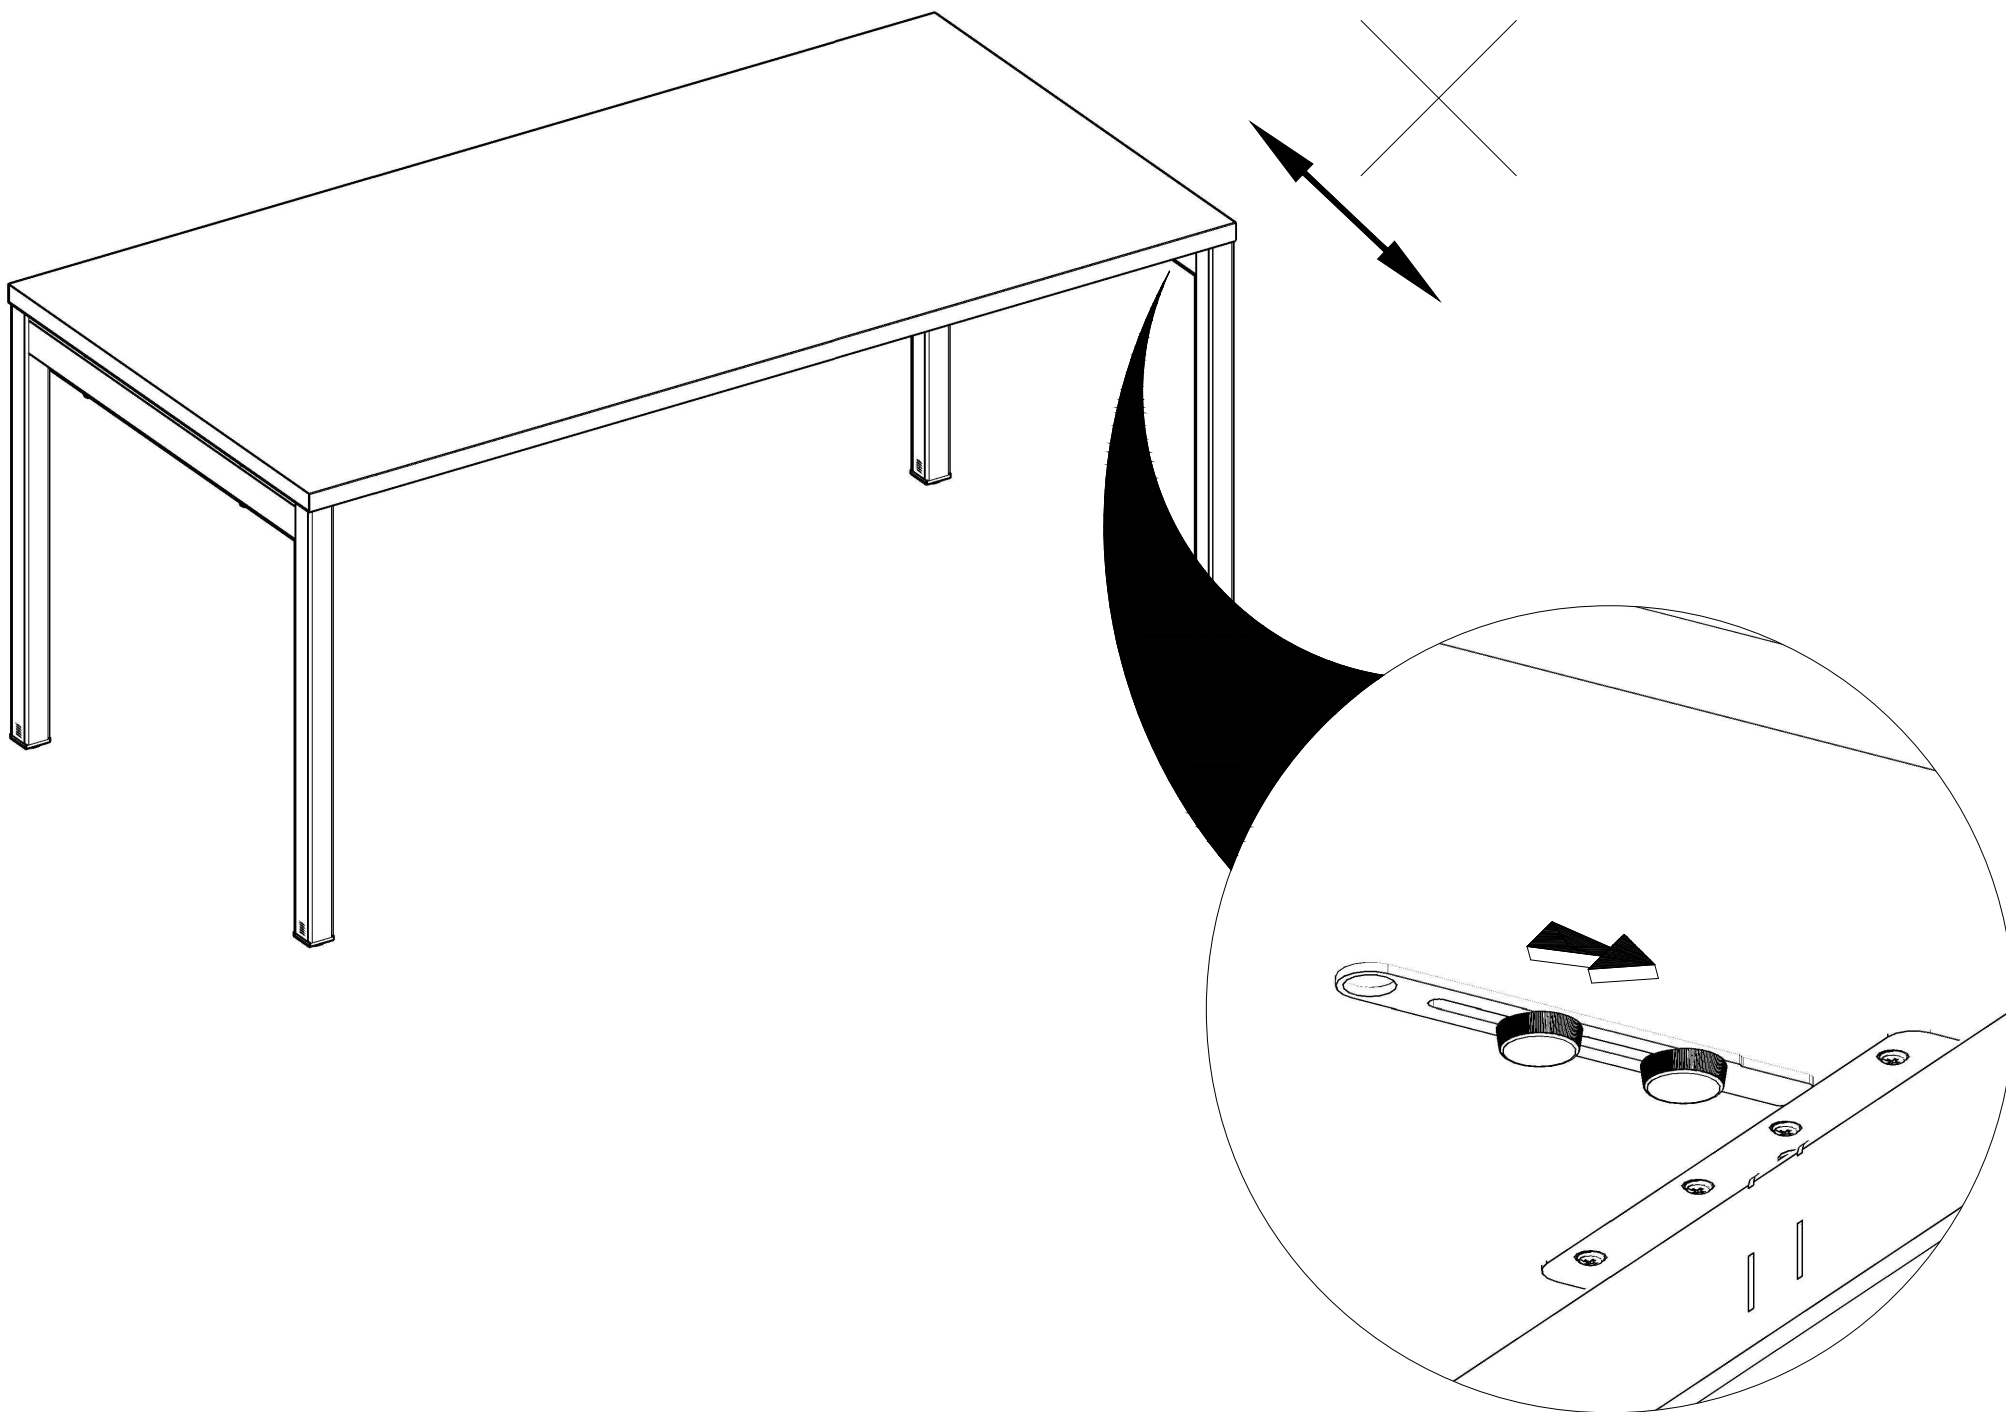

# OGI SLIDE

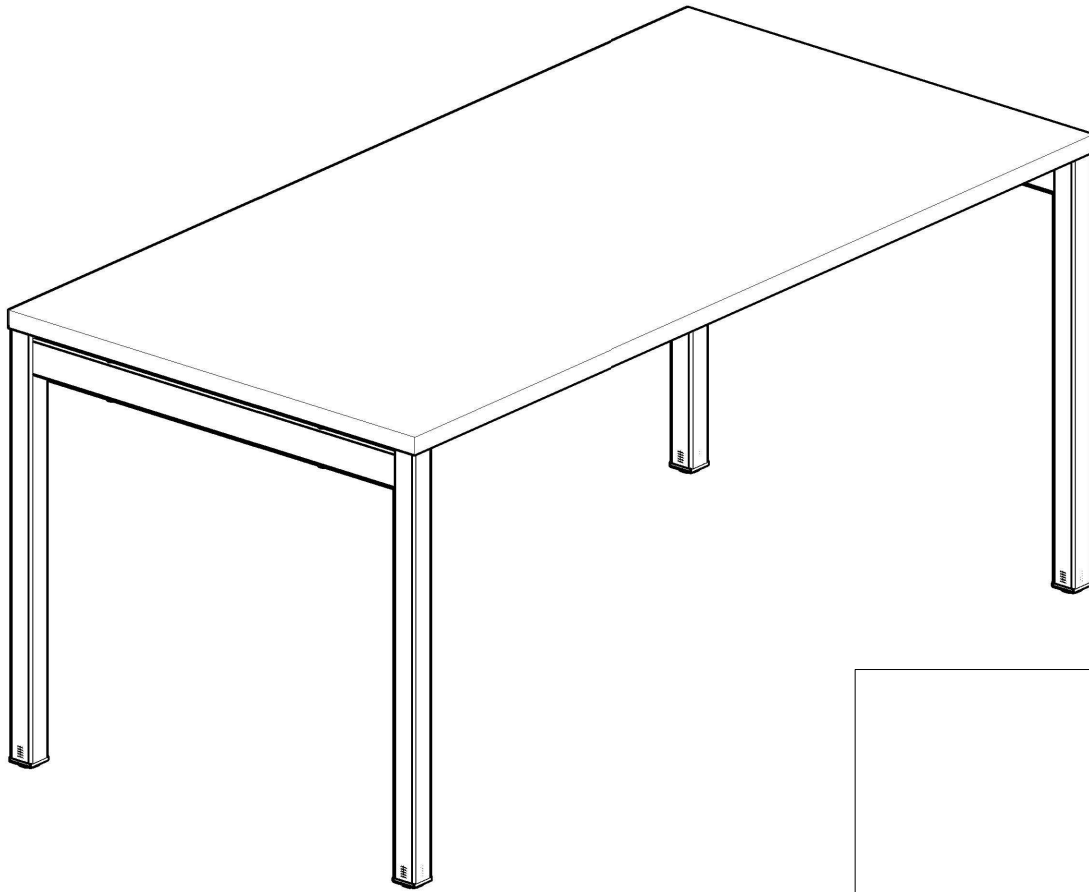

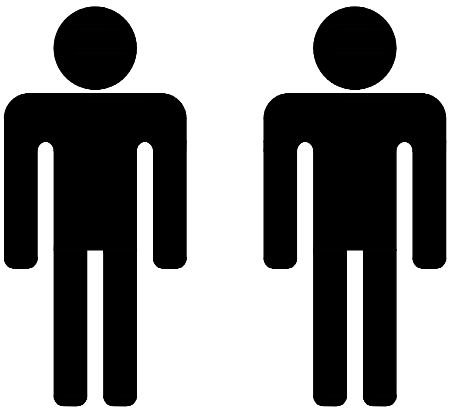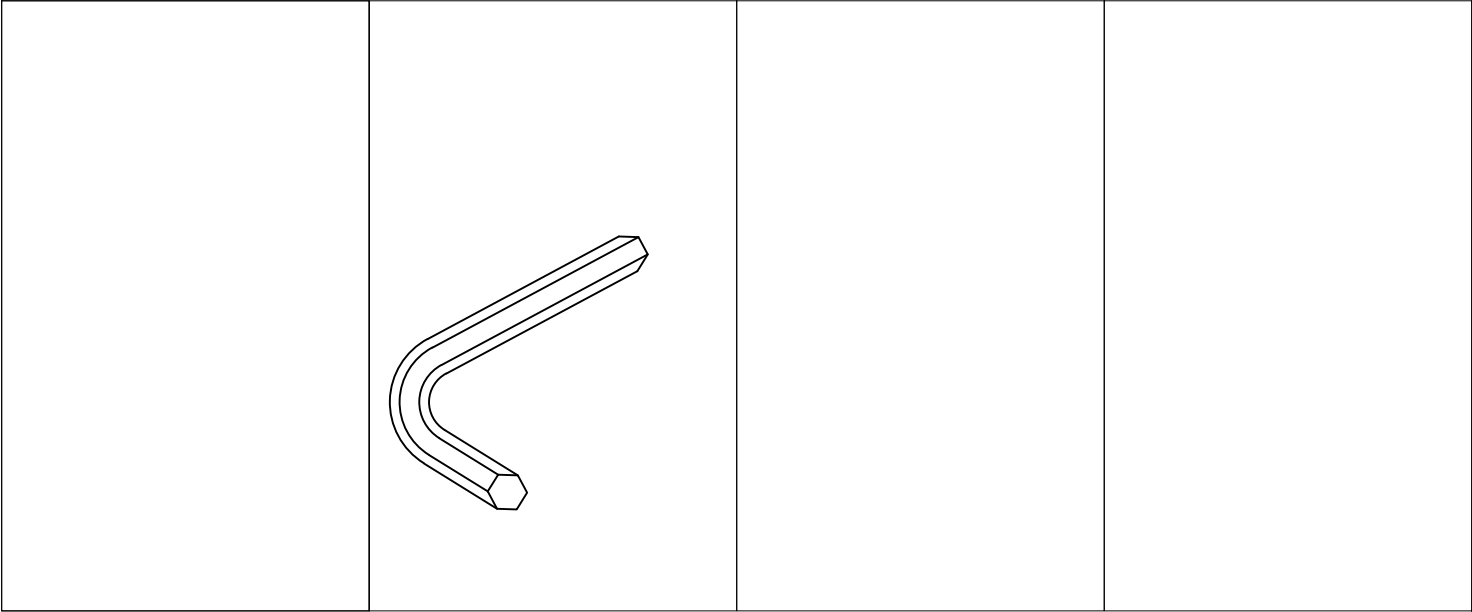


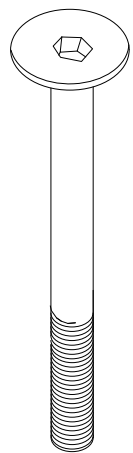

M6x68

**4x**


**1**

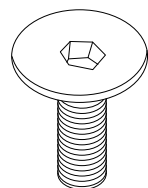

M6x10


**2x**

**2**

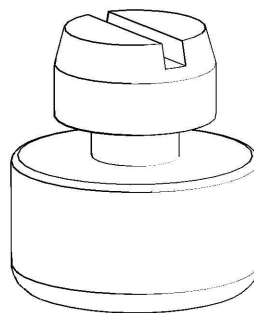


**4x**

**3**

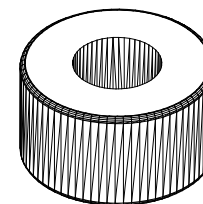


**2x**

**4**

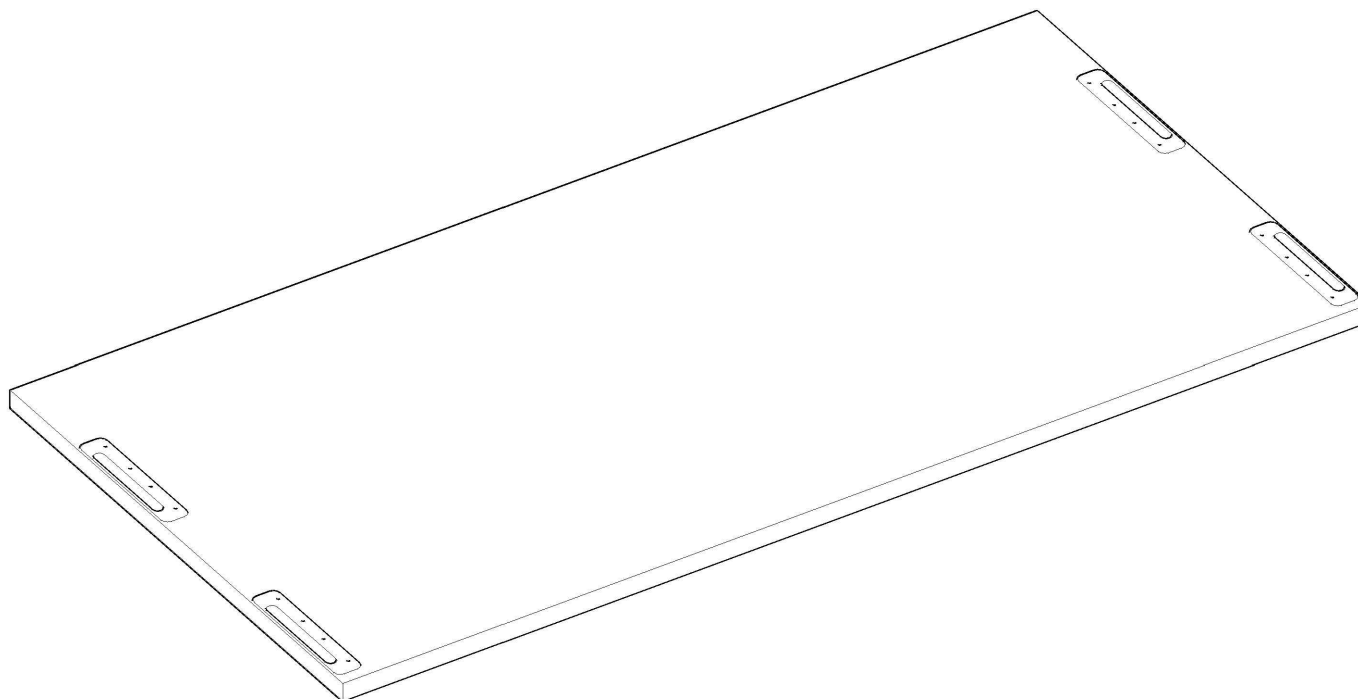


**3**


**5**

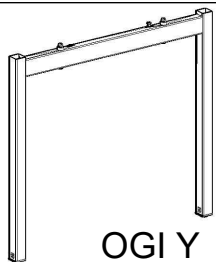


OGI Y

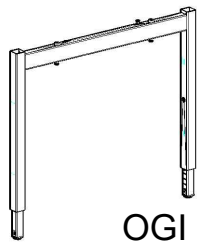


OGI Y

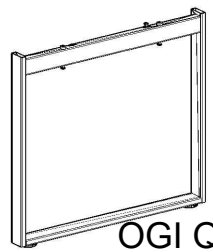


OGI Q

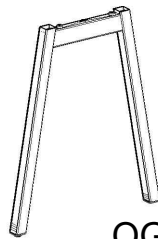


OGI M


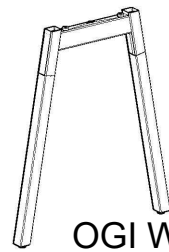




OGI W


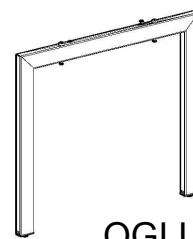


OGI U

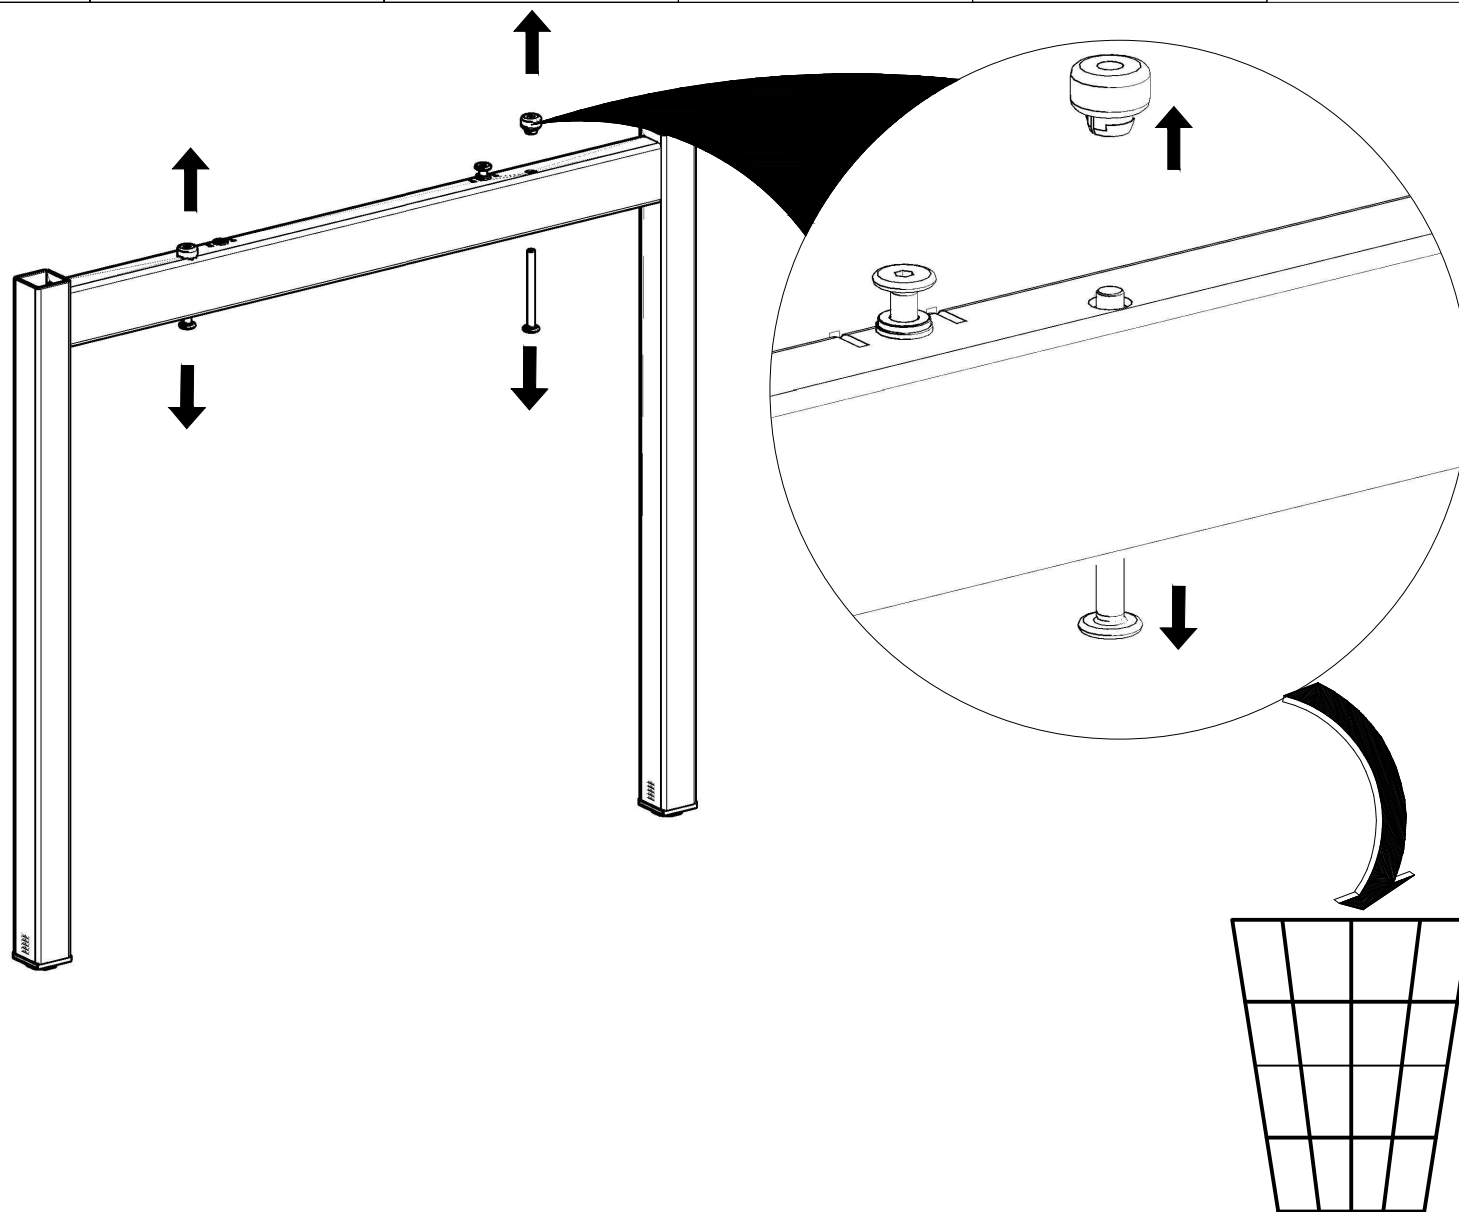


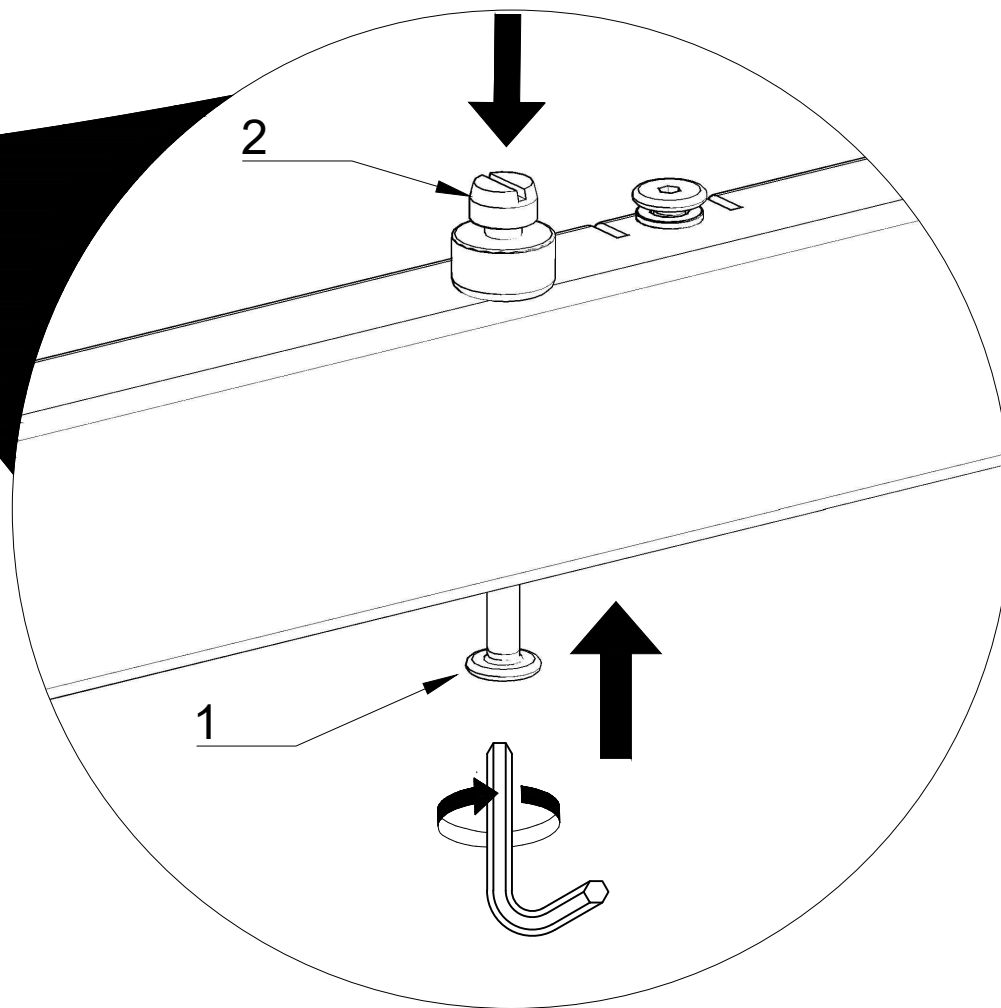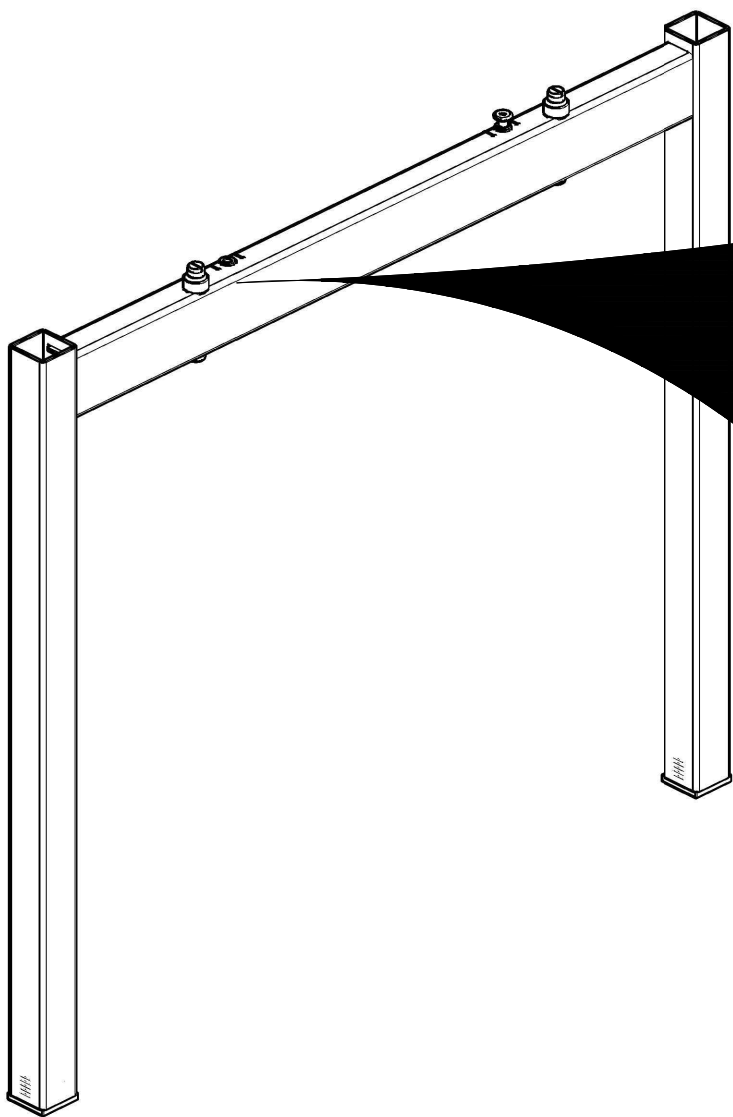


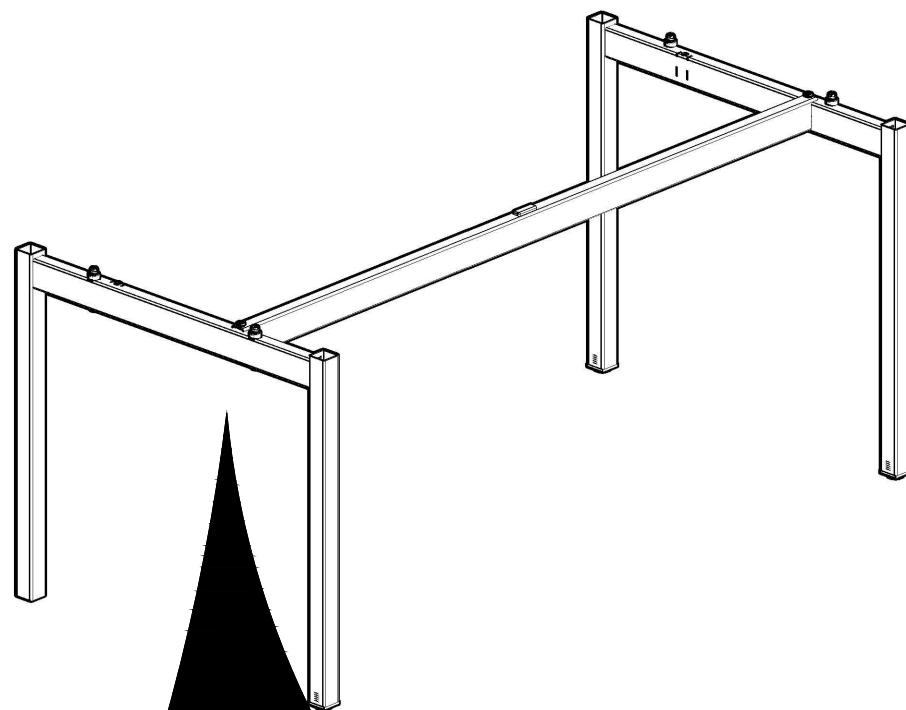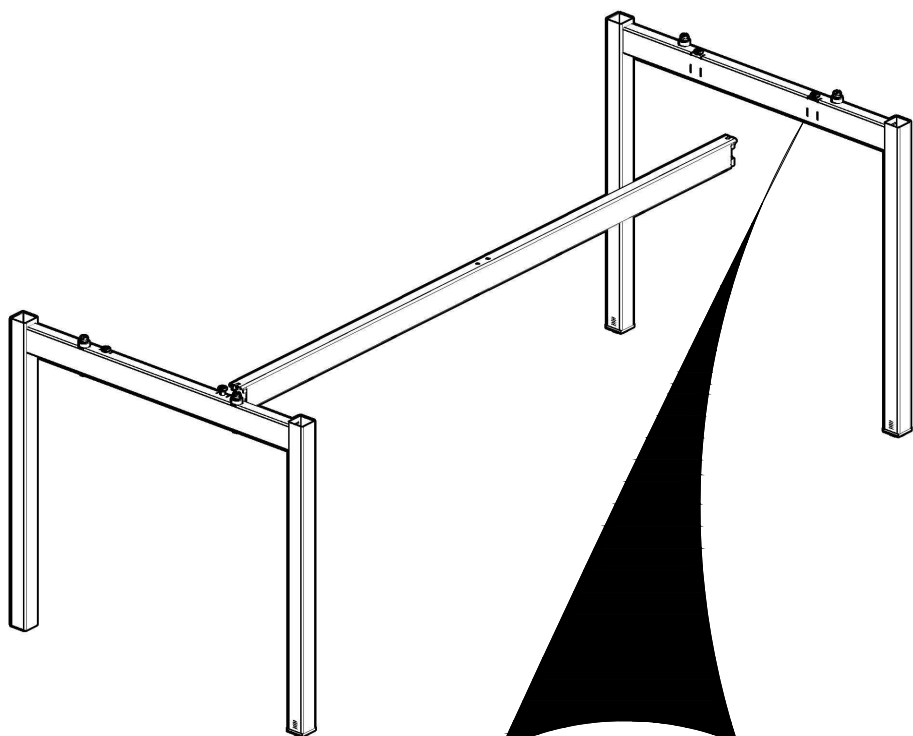


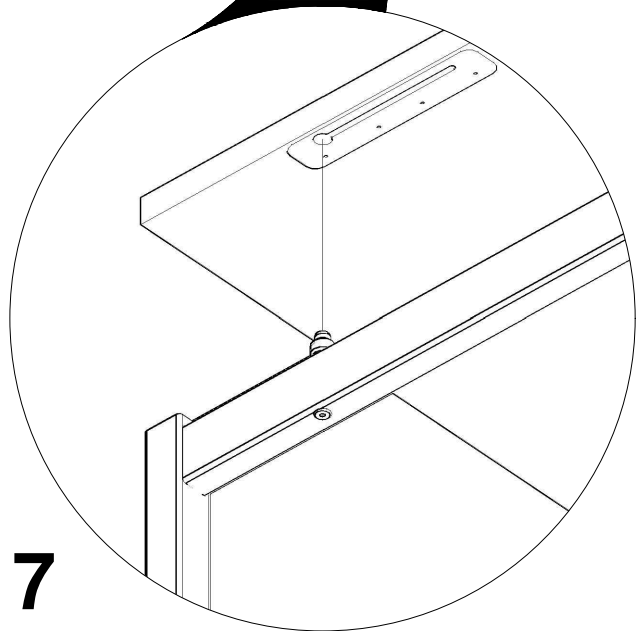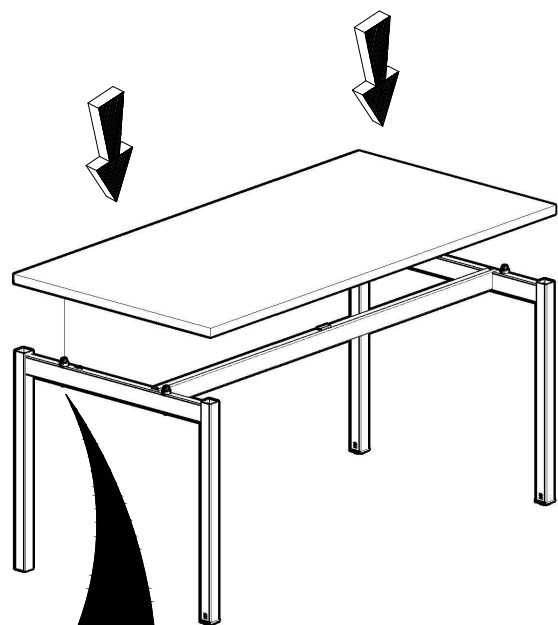


7

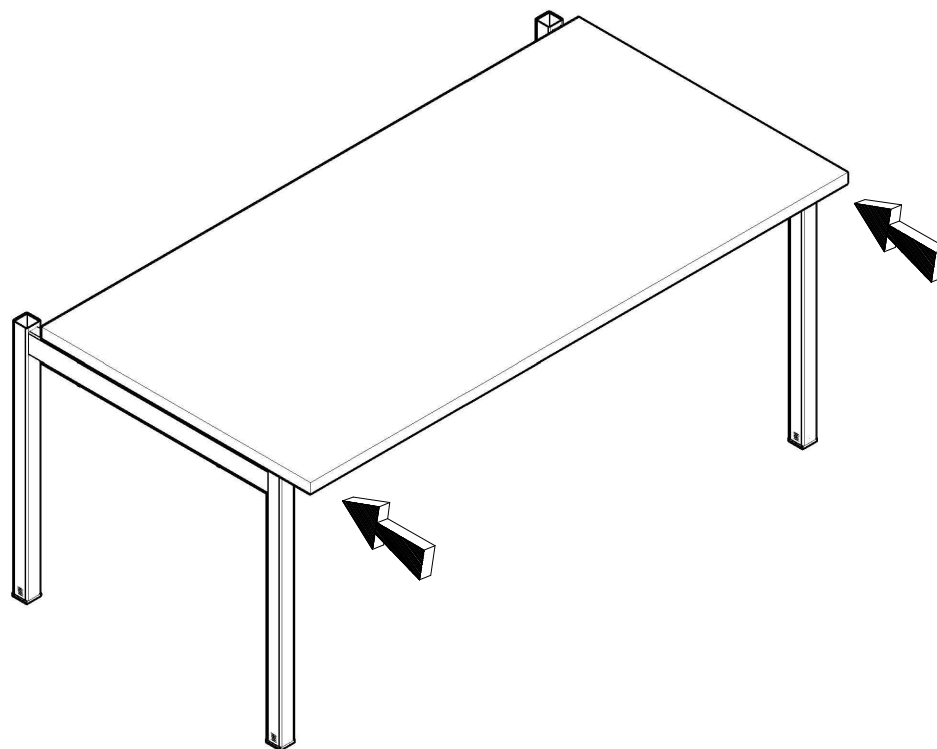

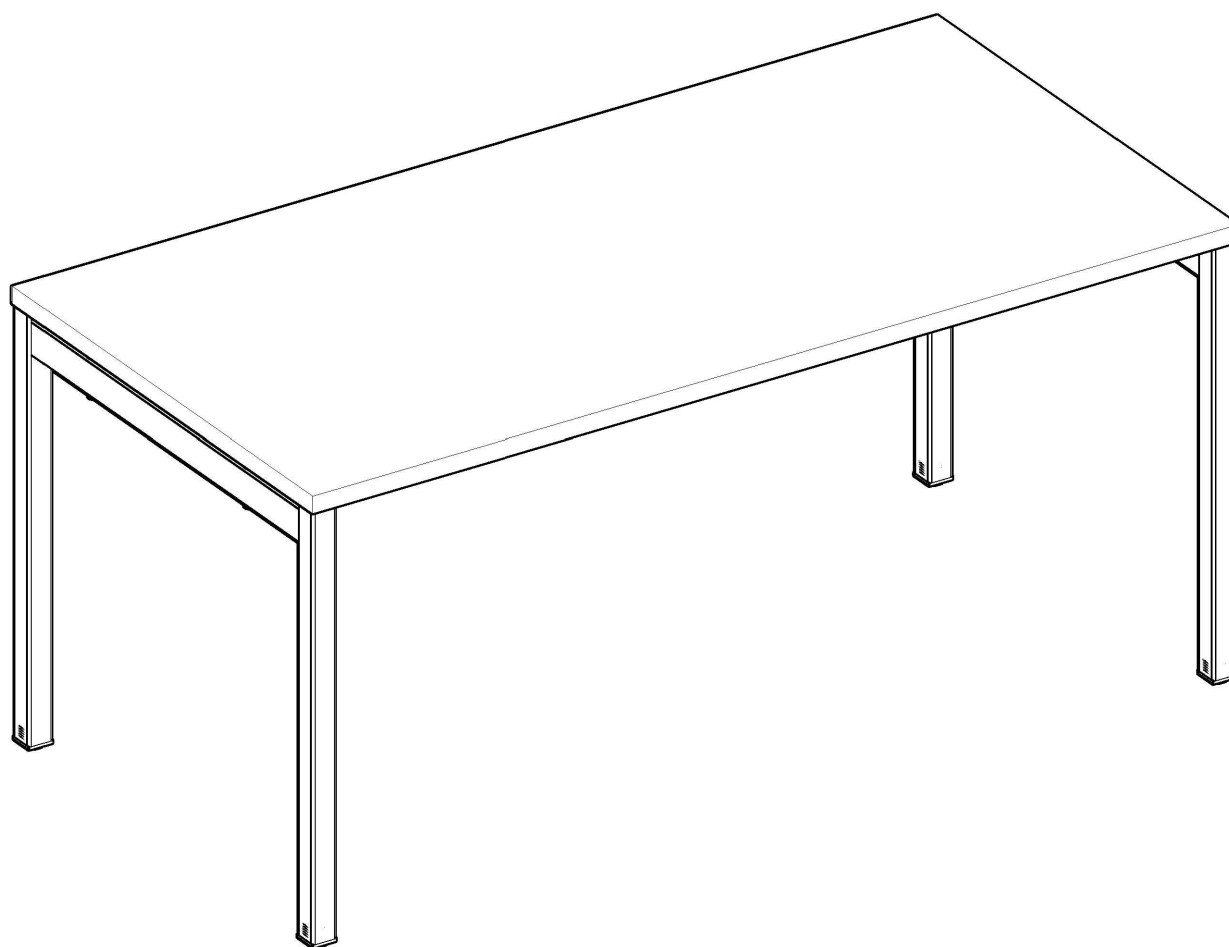


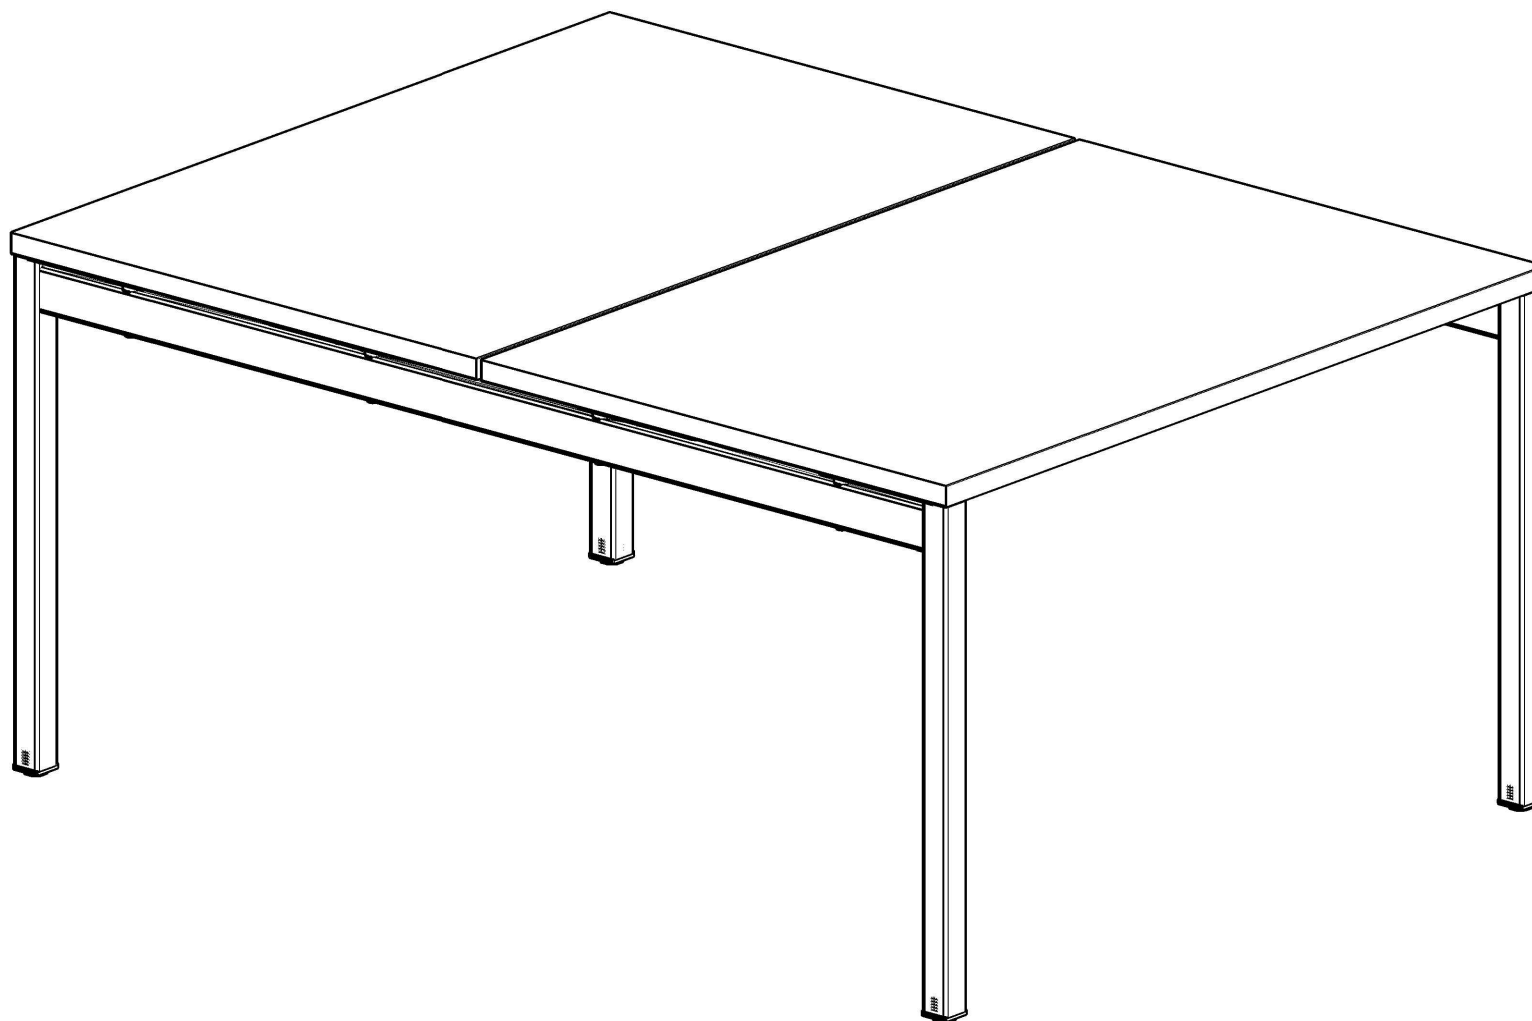

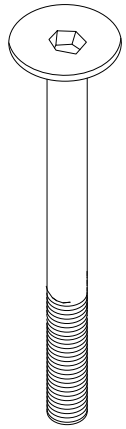


M6x68  
**8x**

**1**

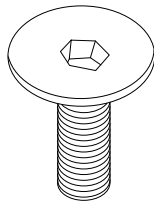


M6x10  
**2x**

**2**

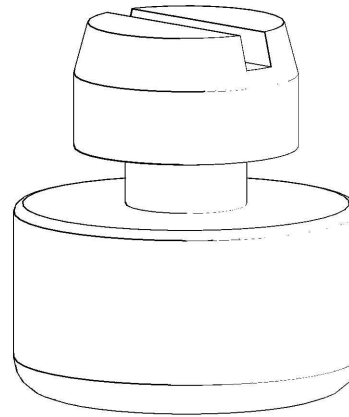


**4x**

**3**

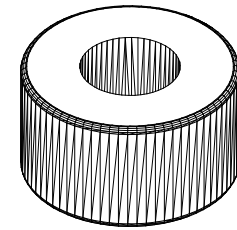



**2x**





**4**



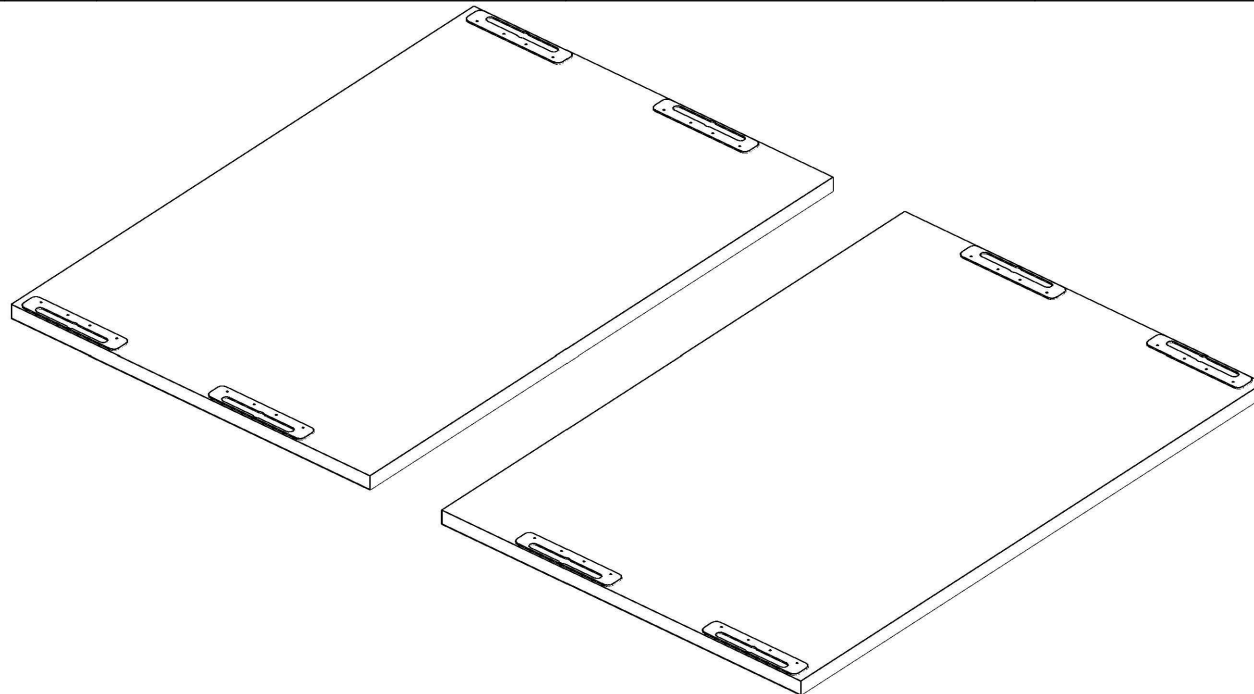



**5**

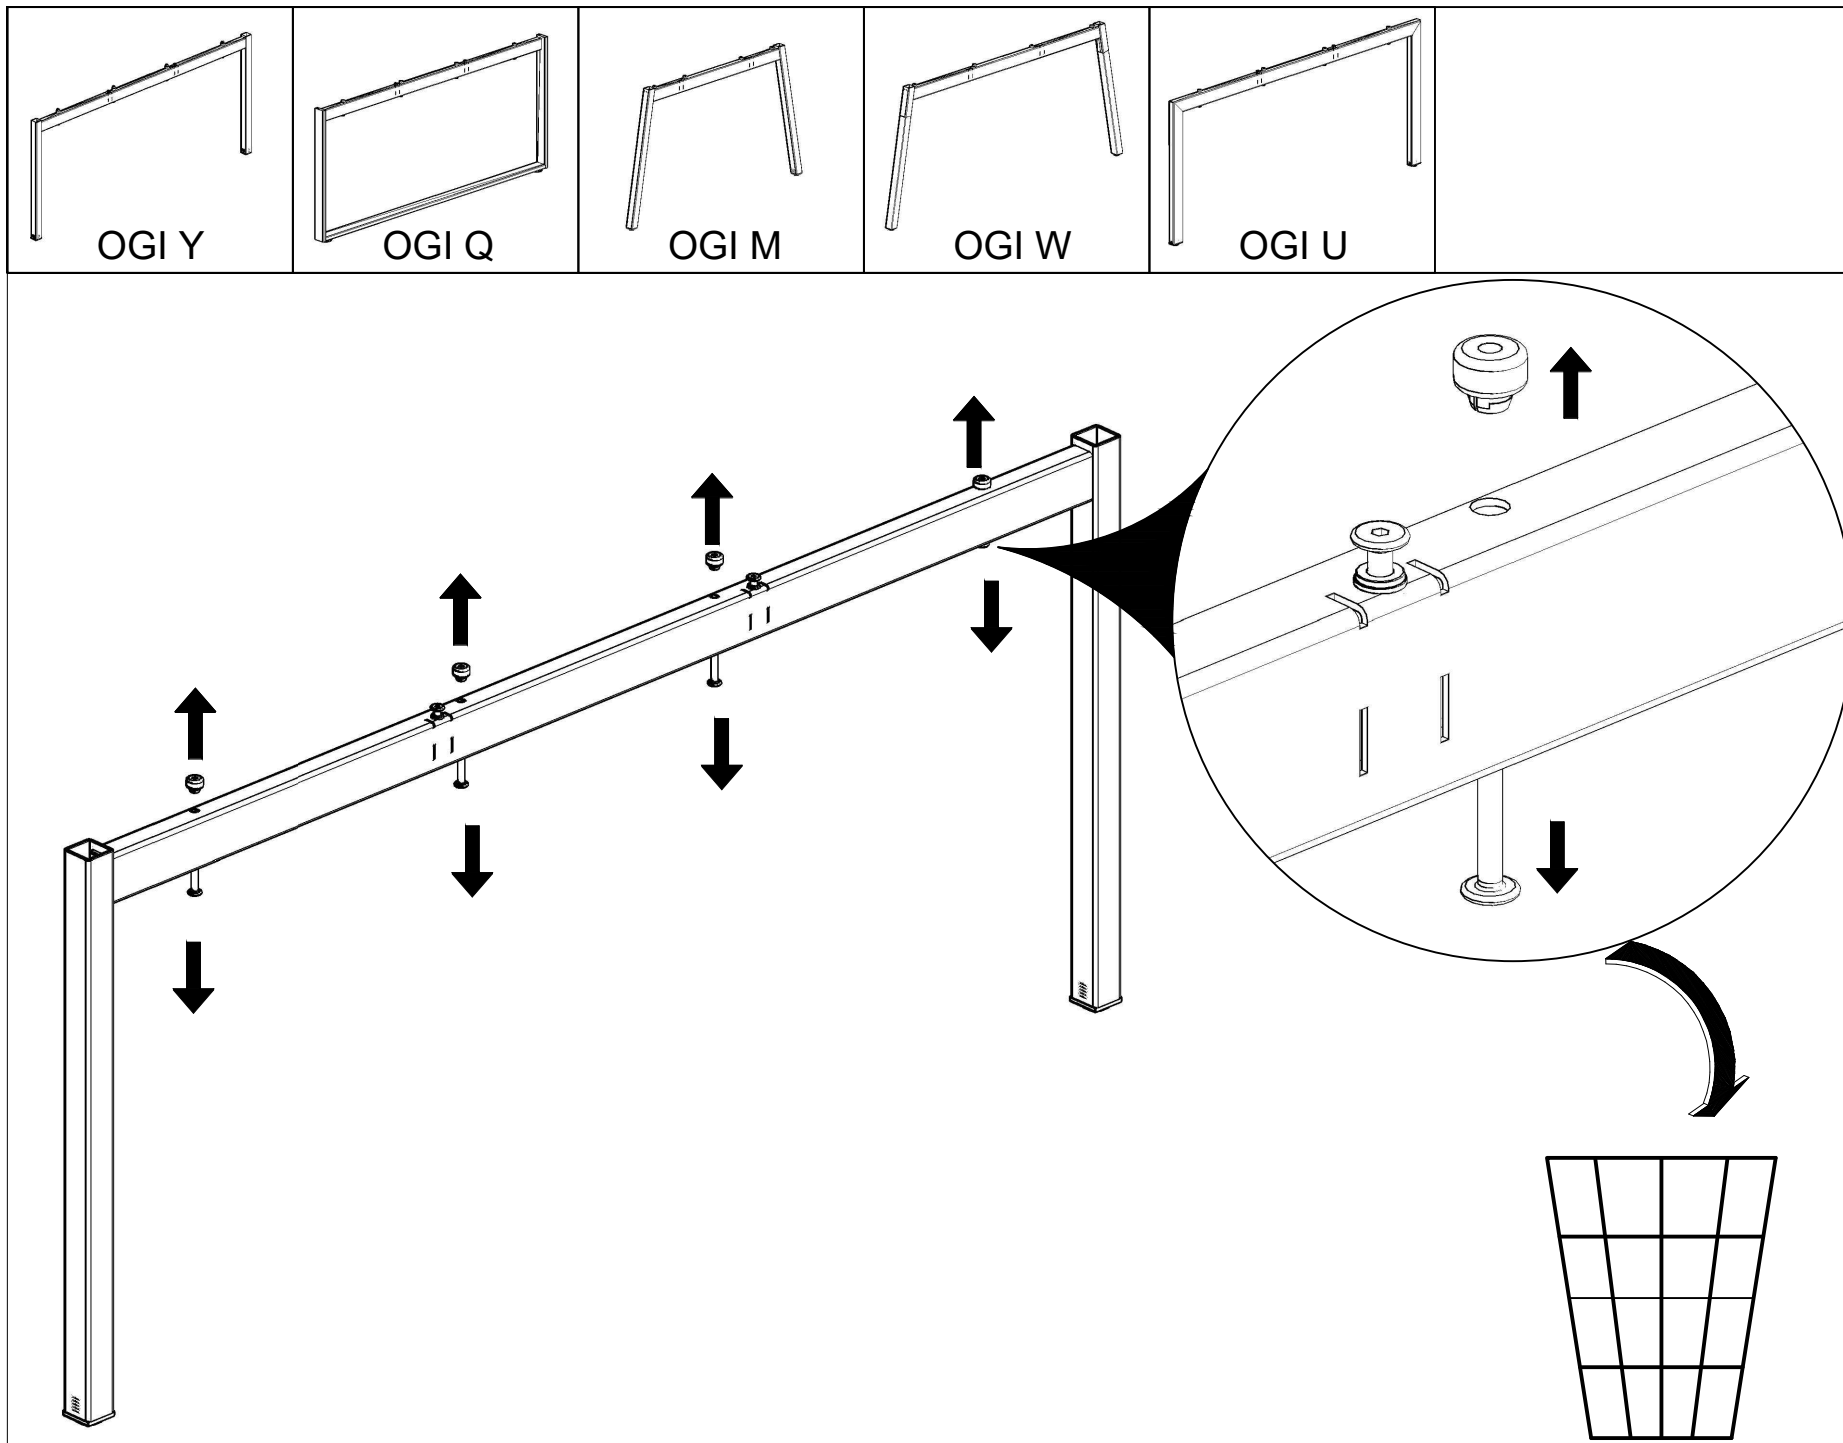

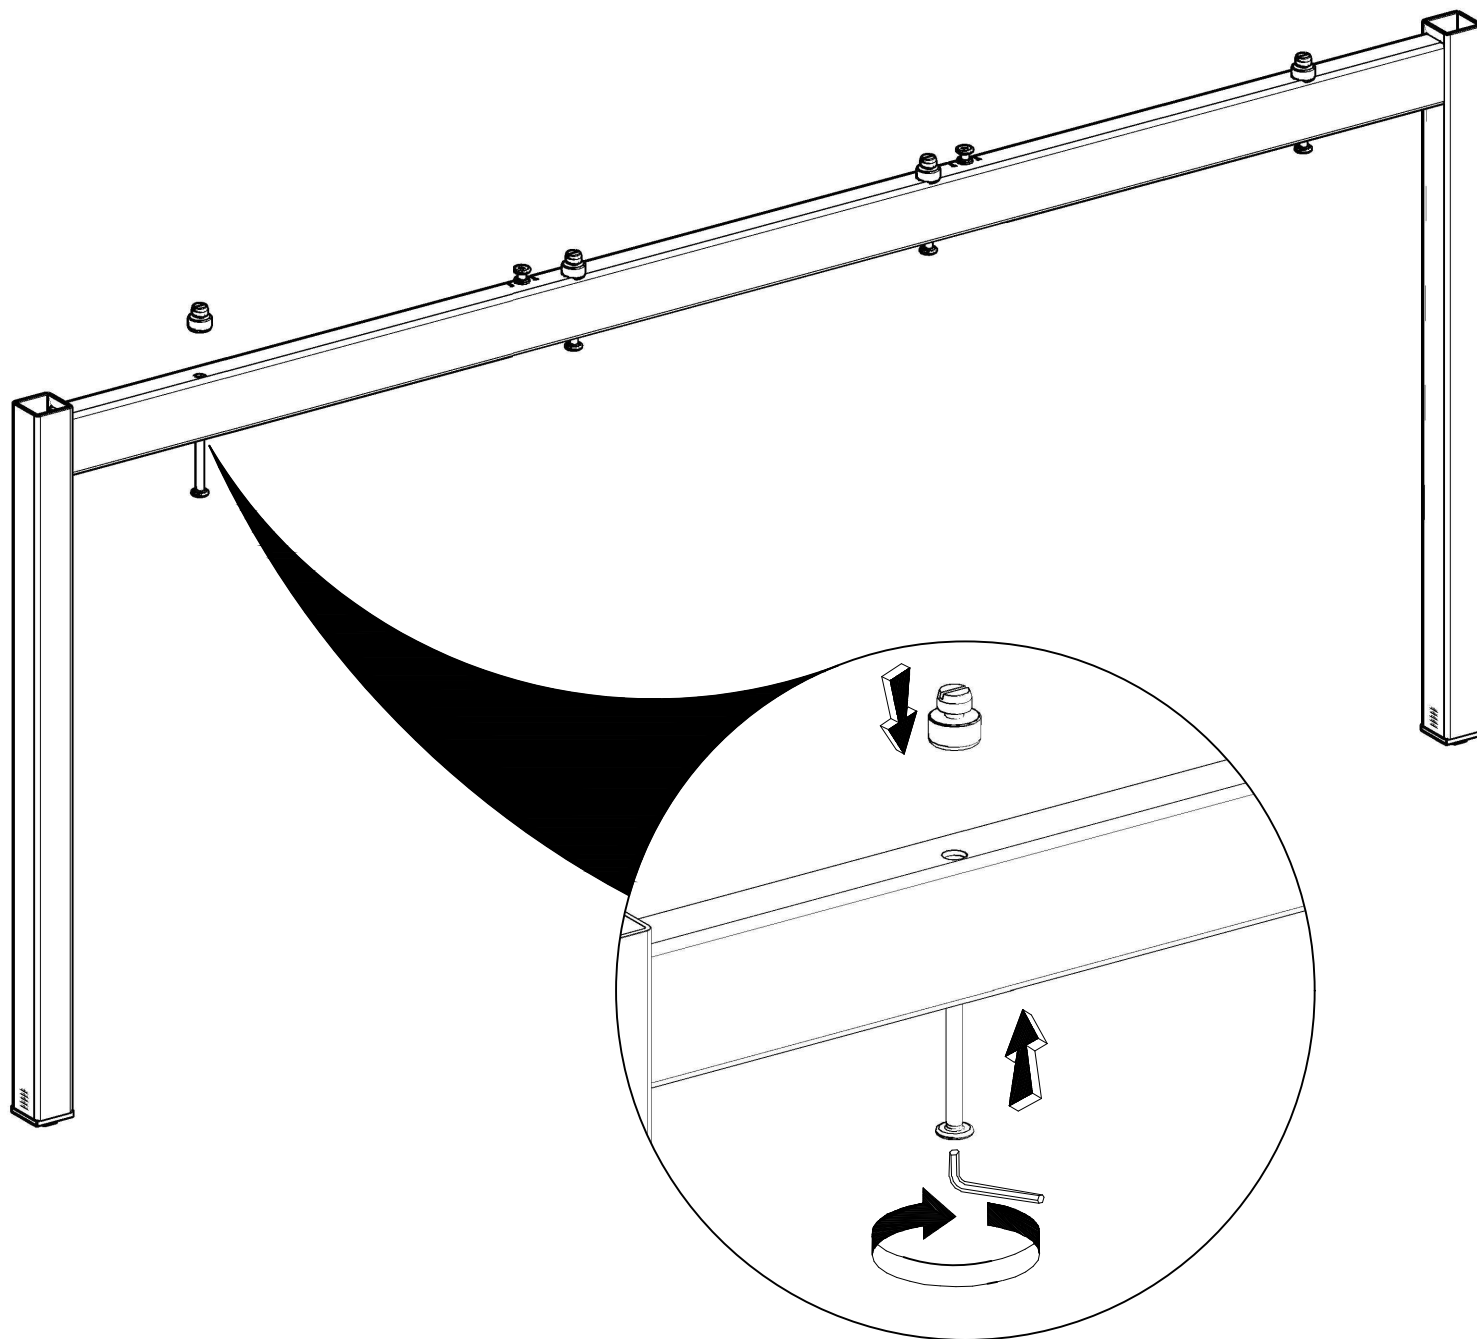

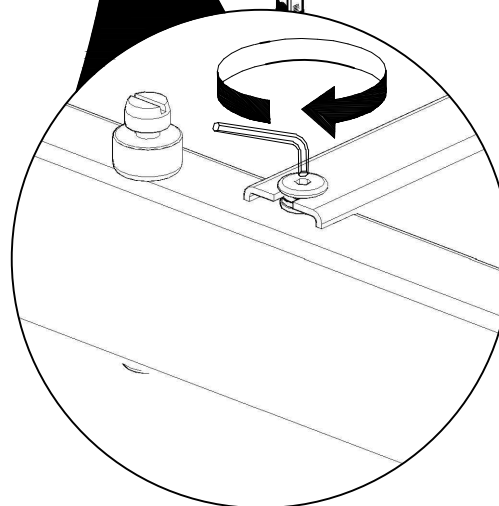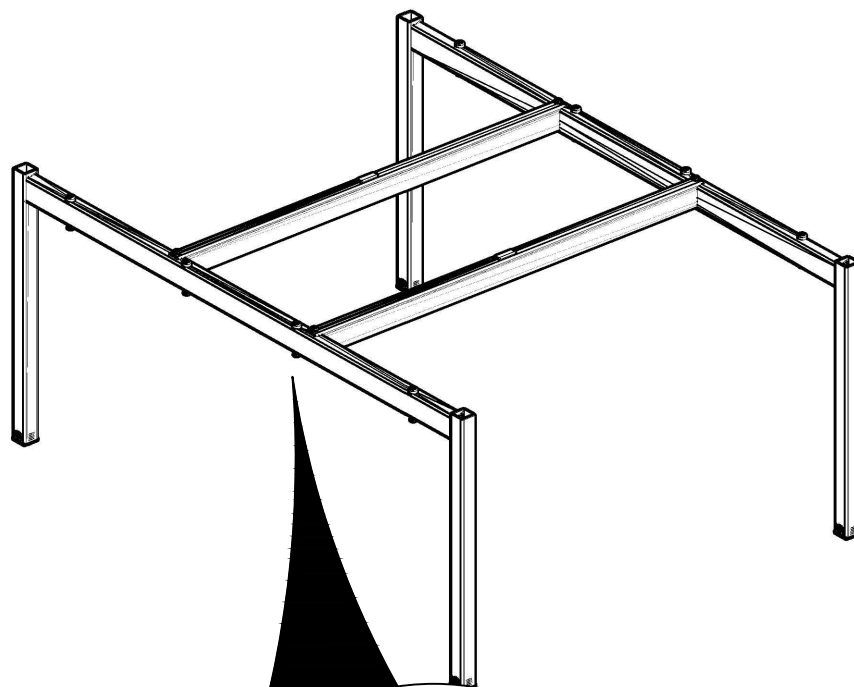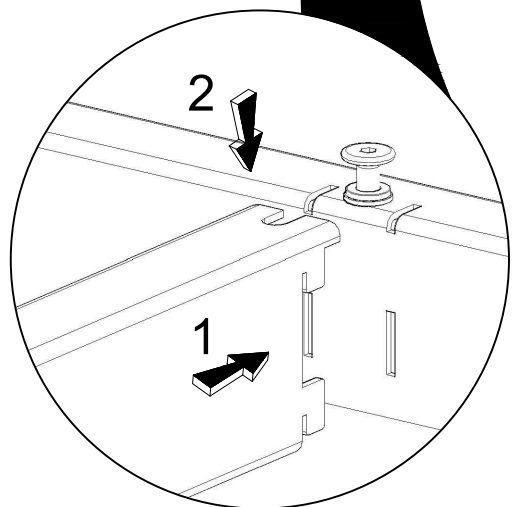
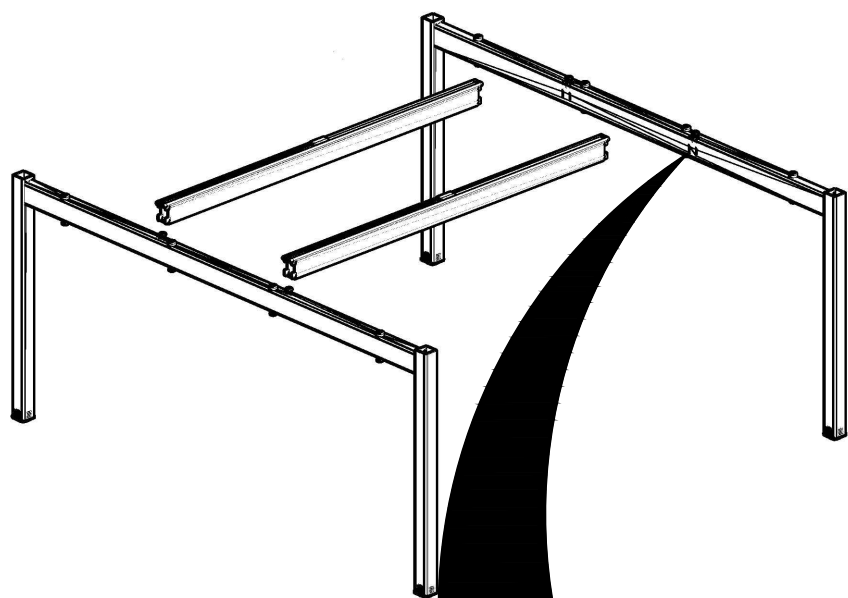


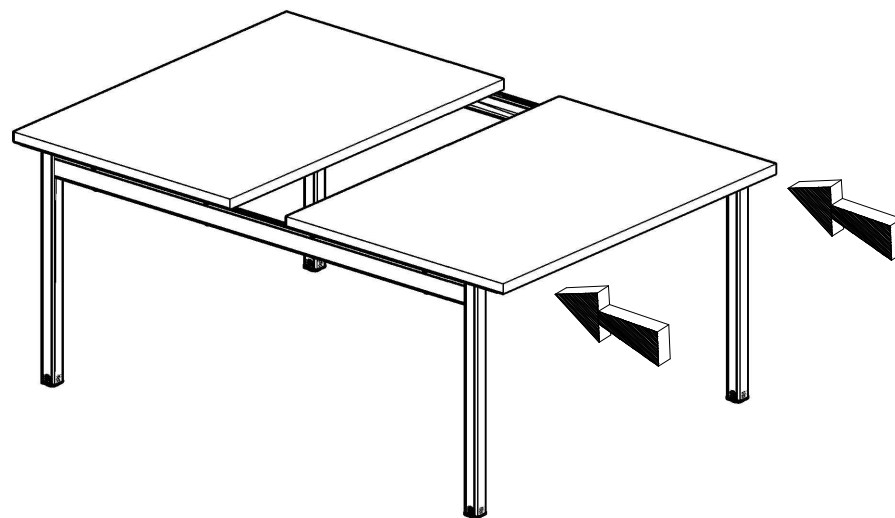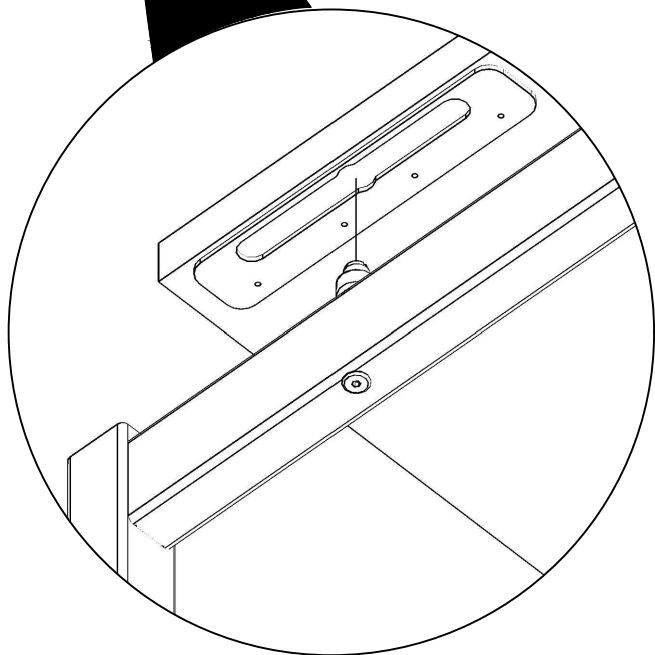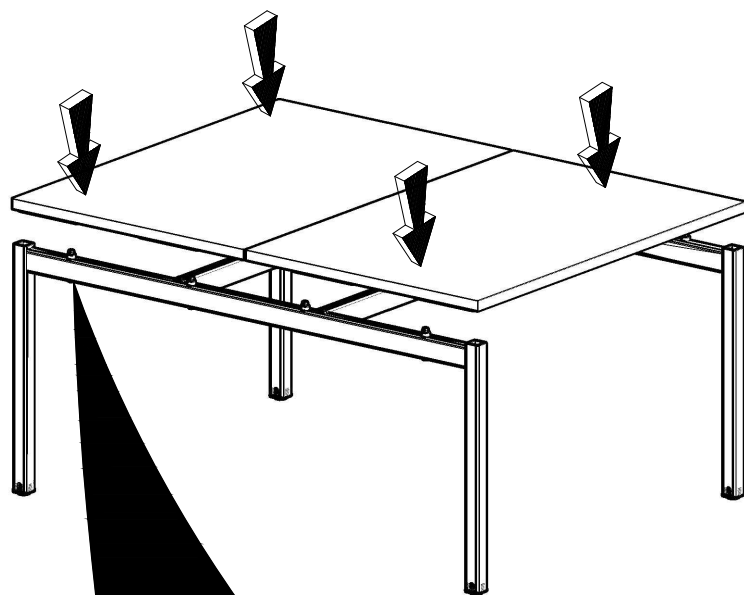


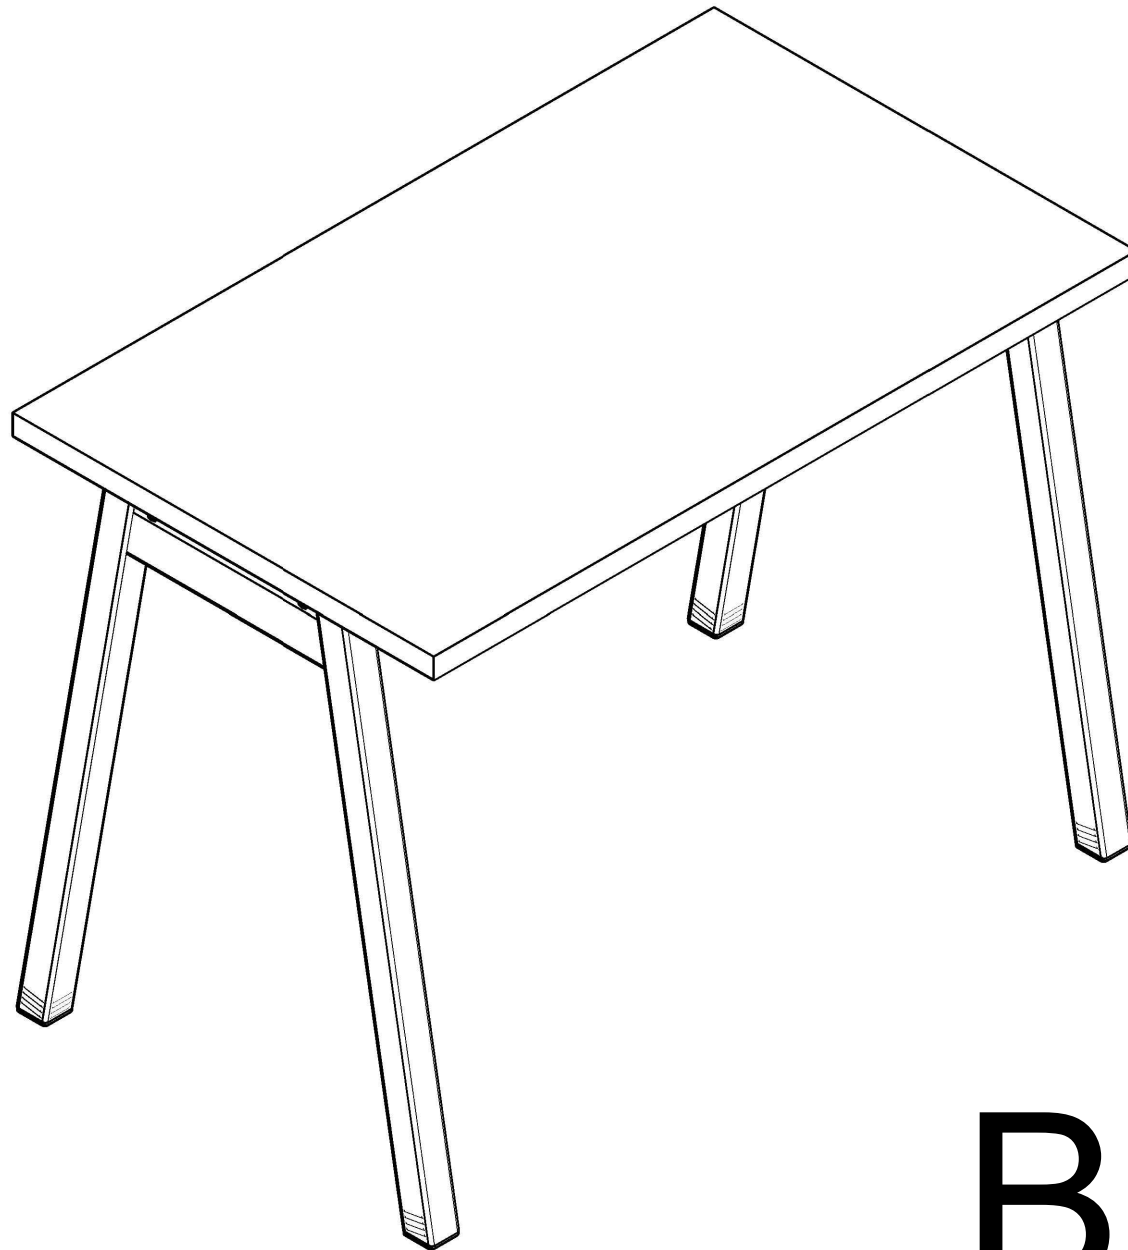



**BOM**

BOM04

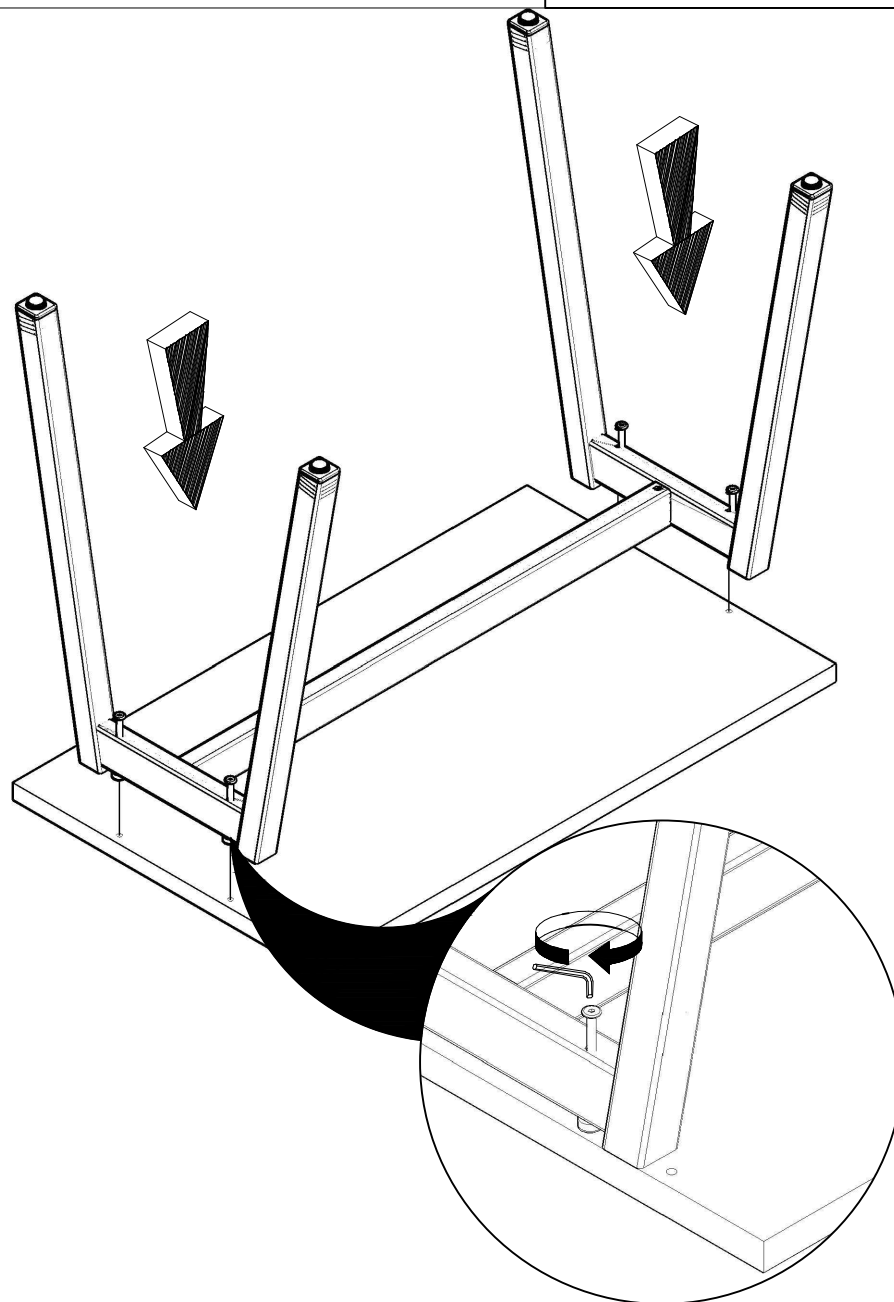
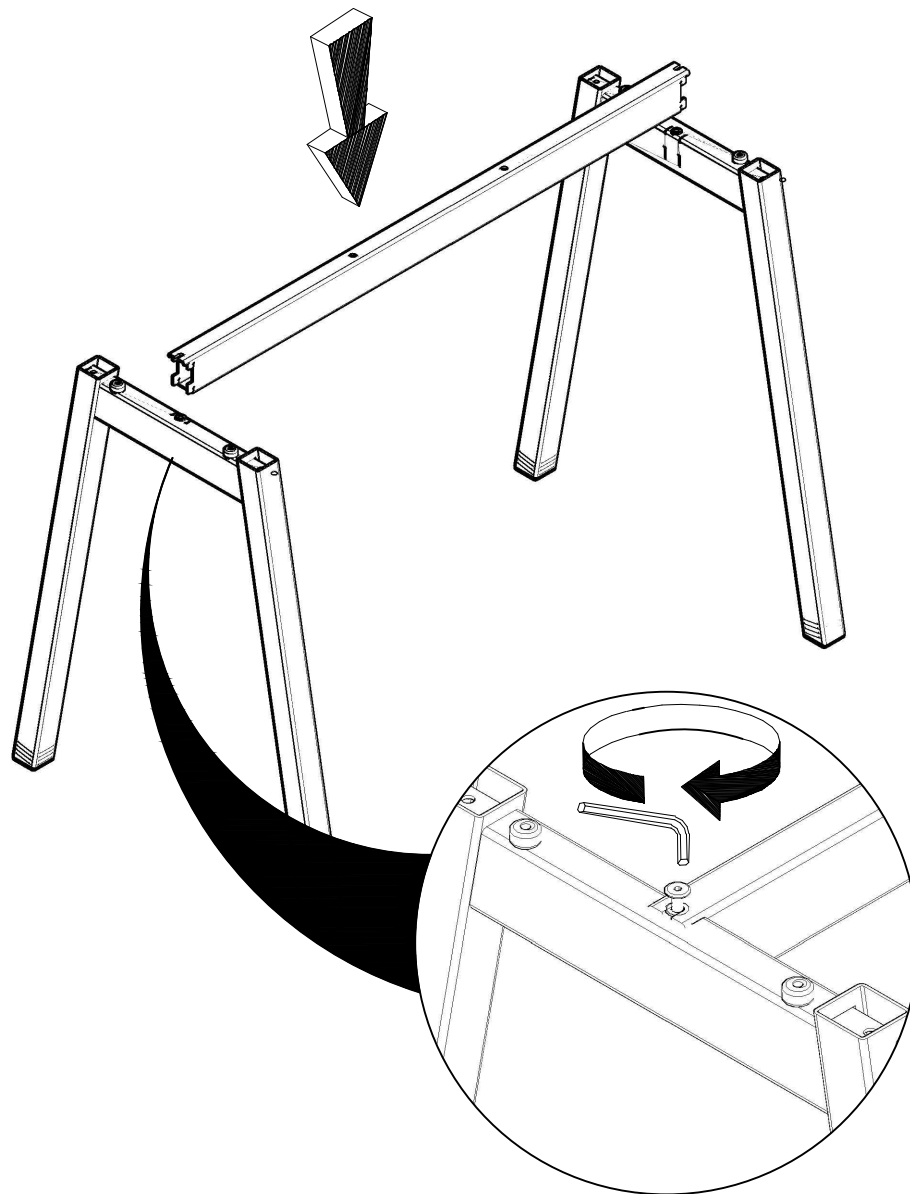


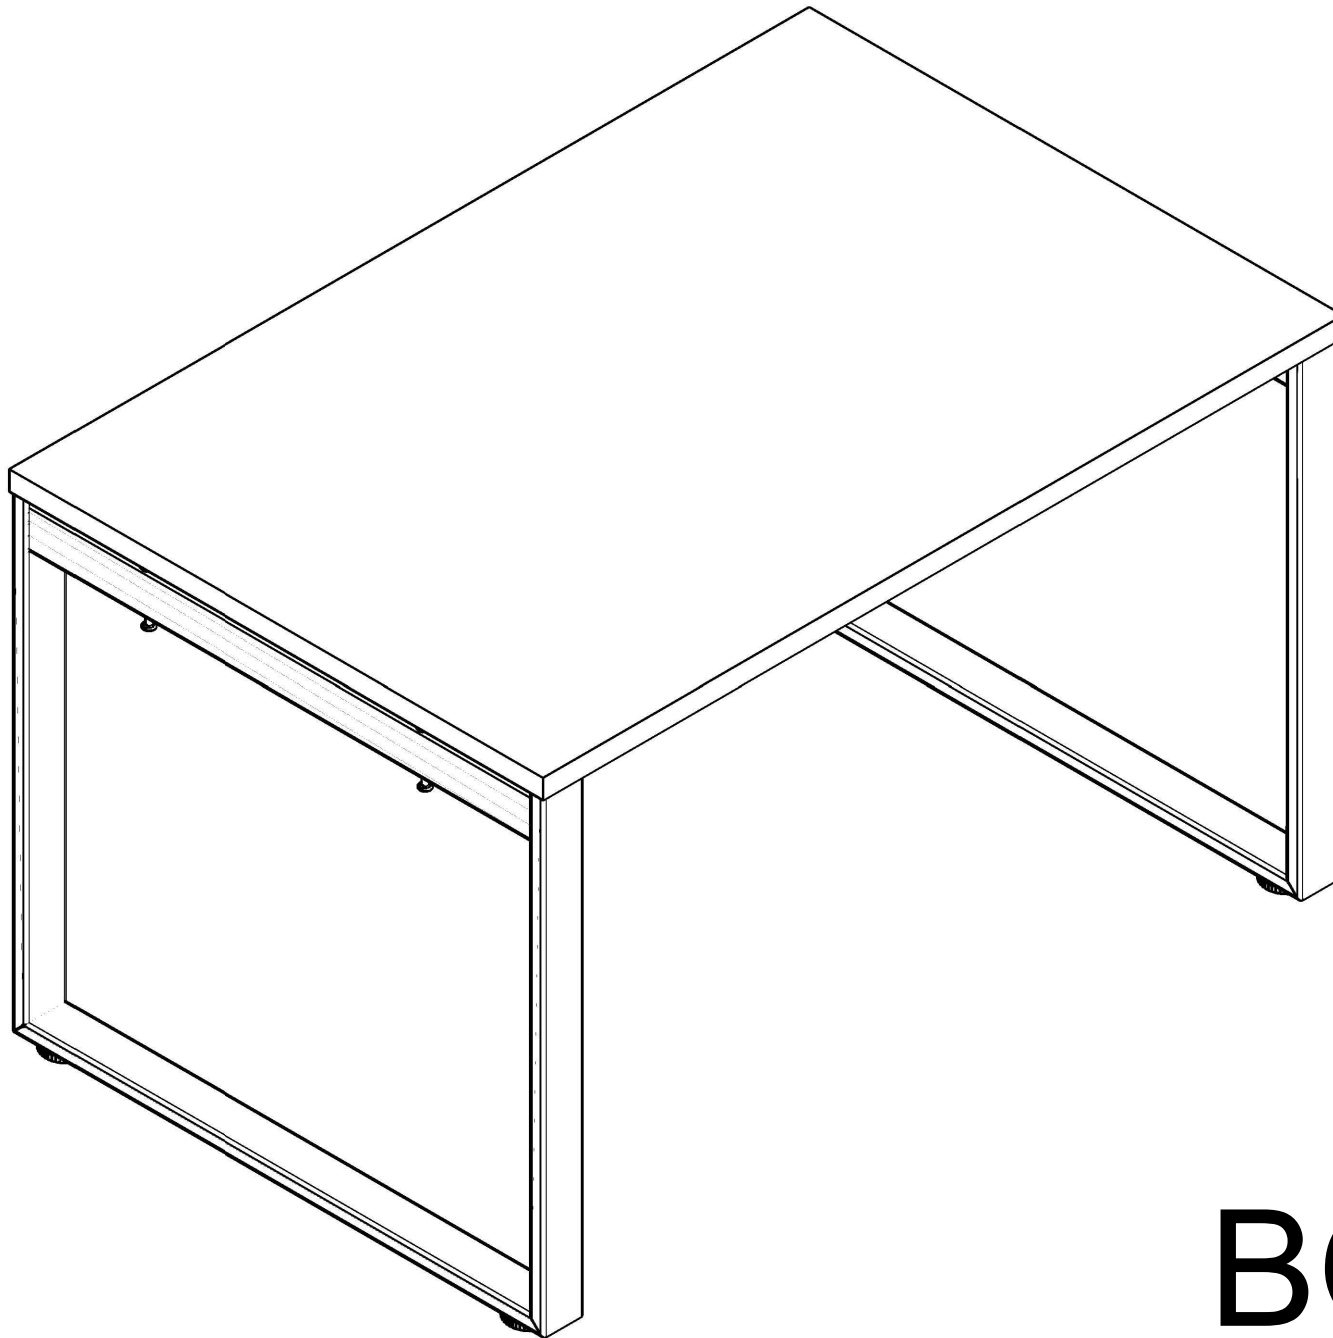

BOQ04

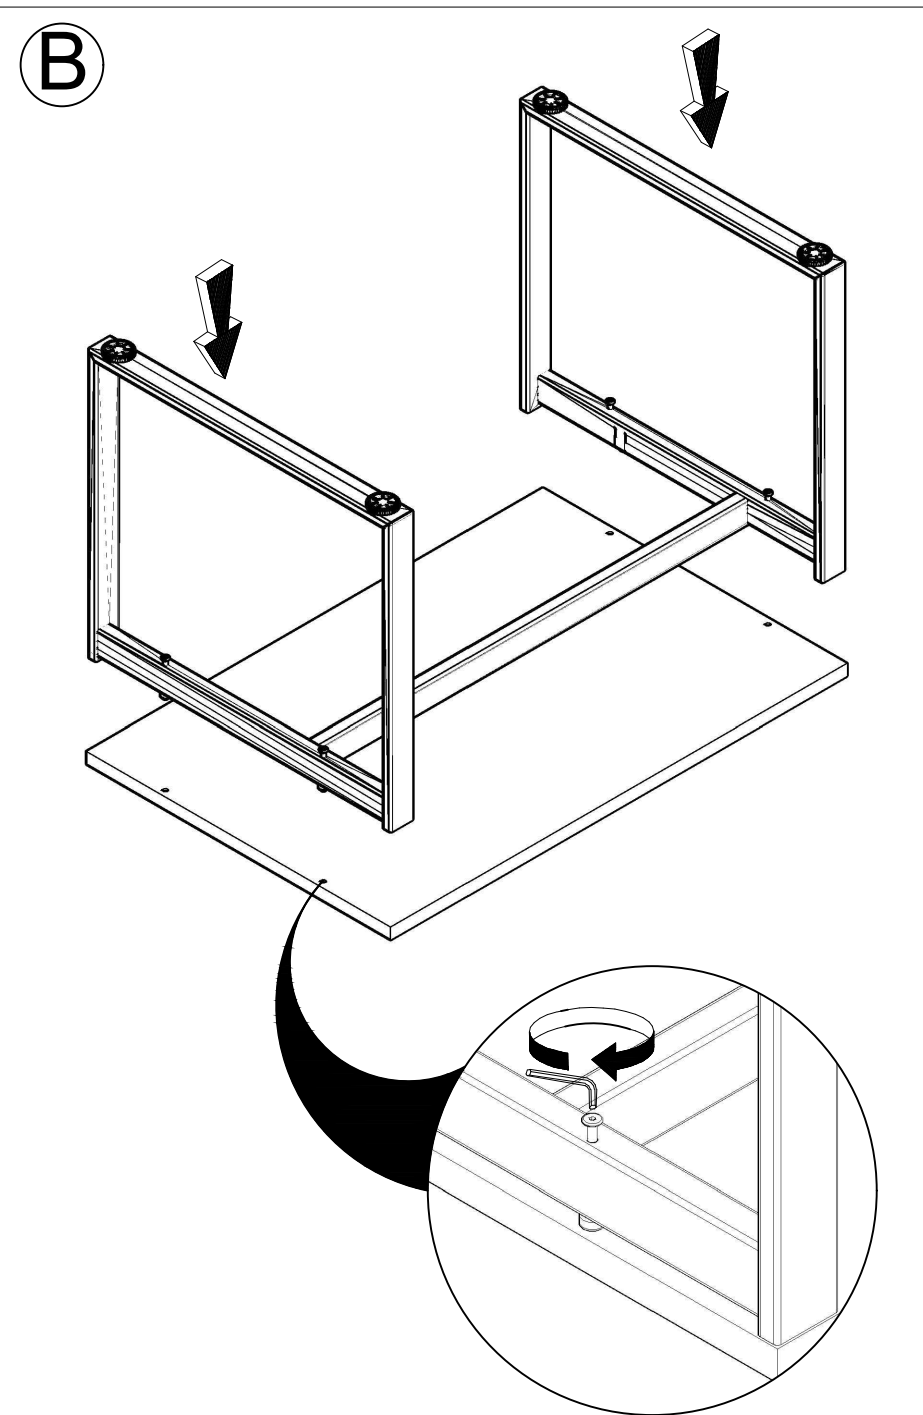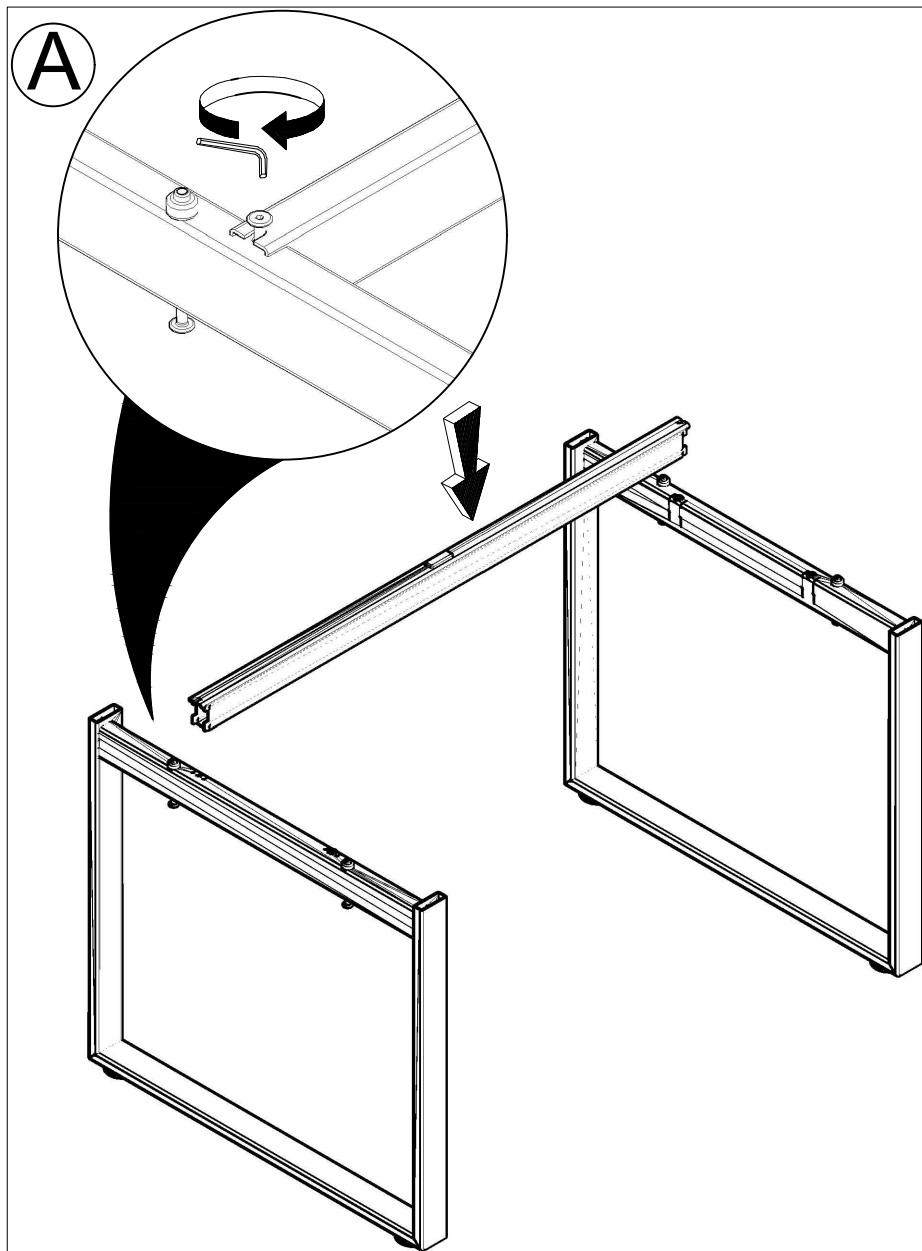




C

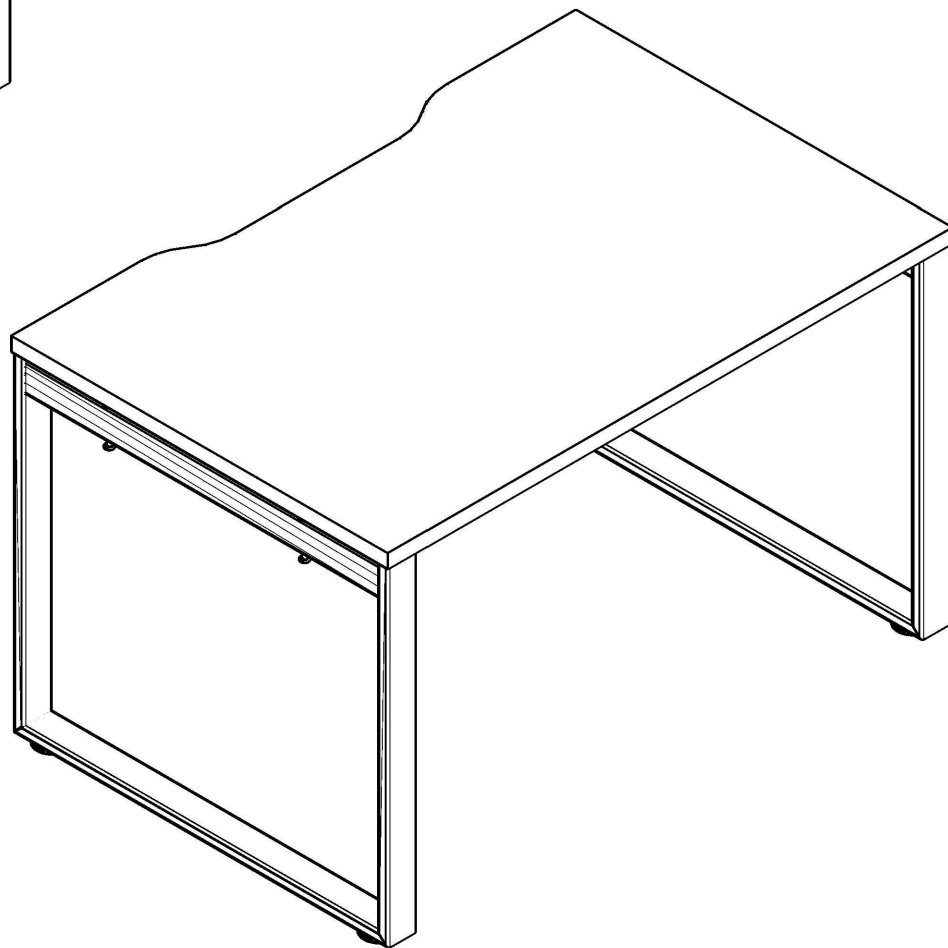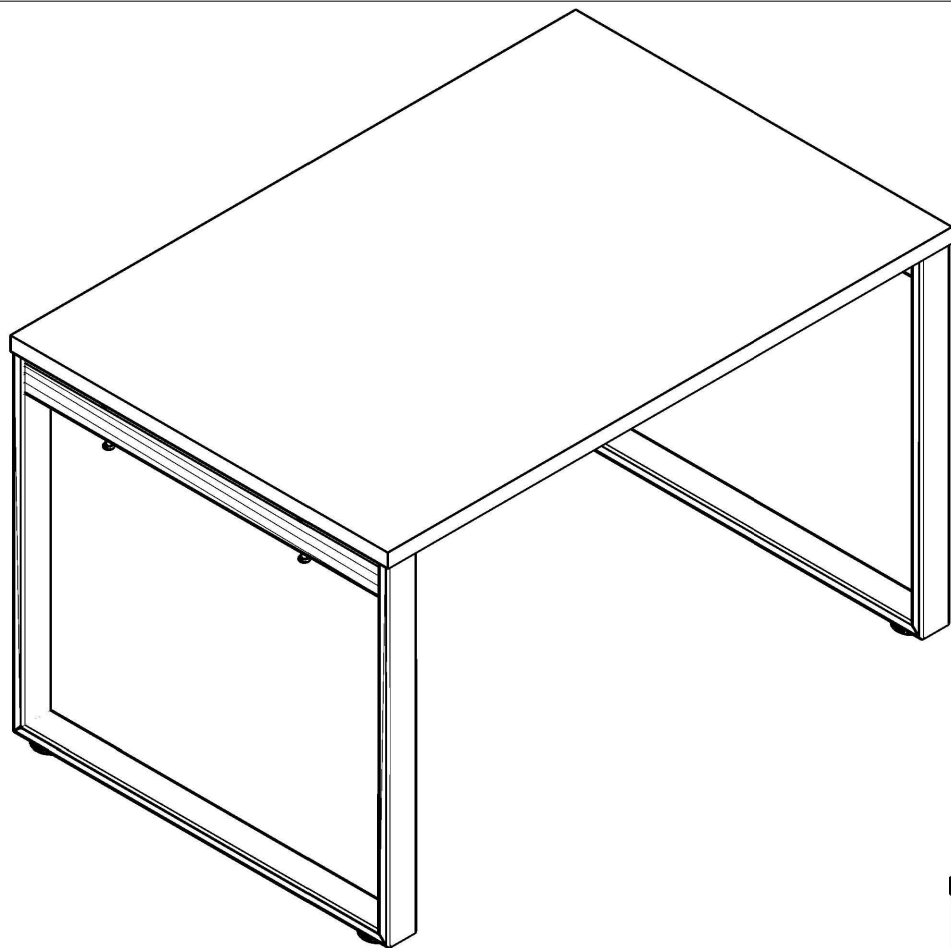

1









M05

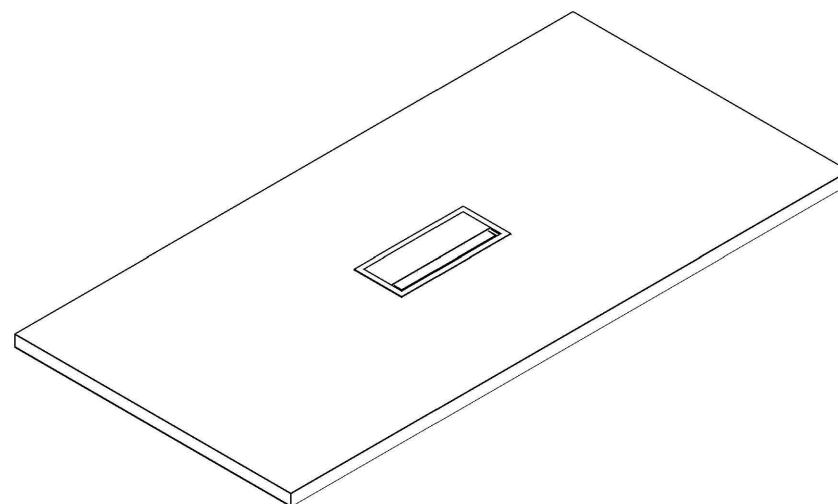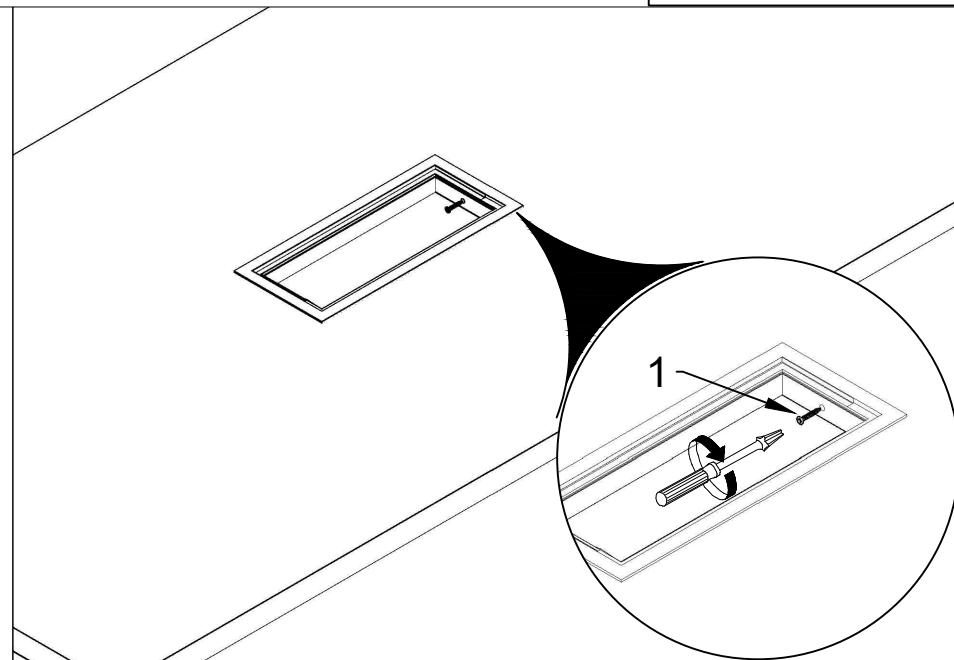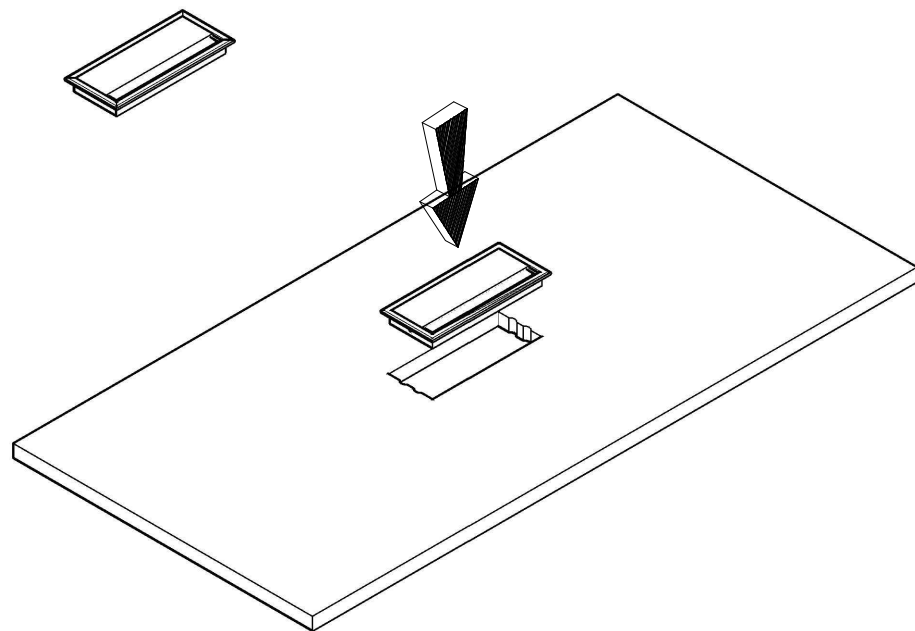

1









M04

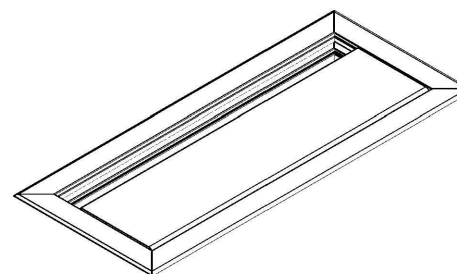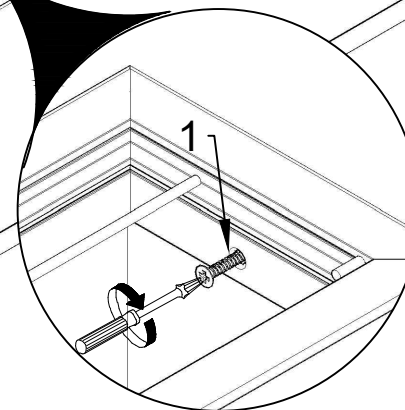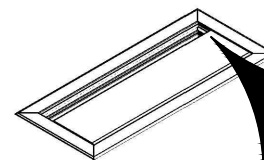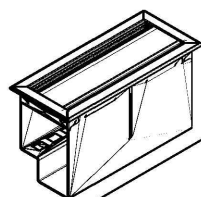




1




M04

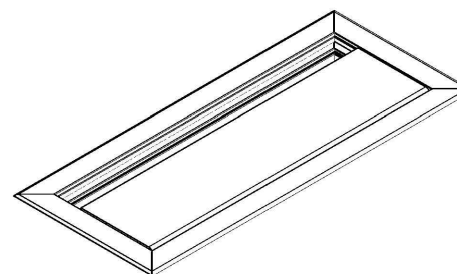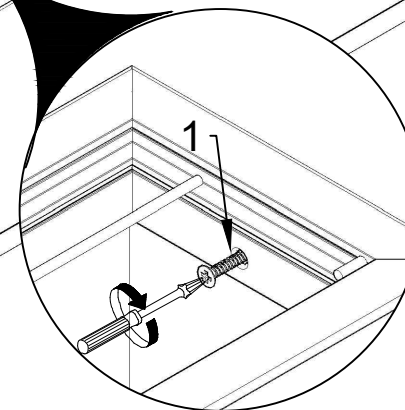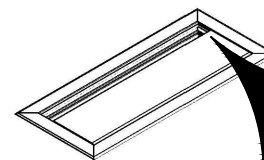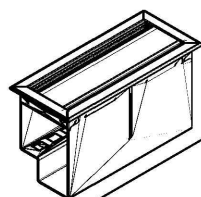

M07

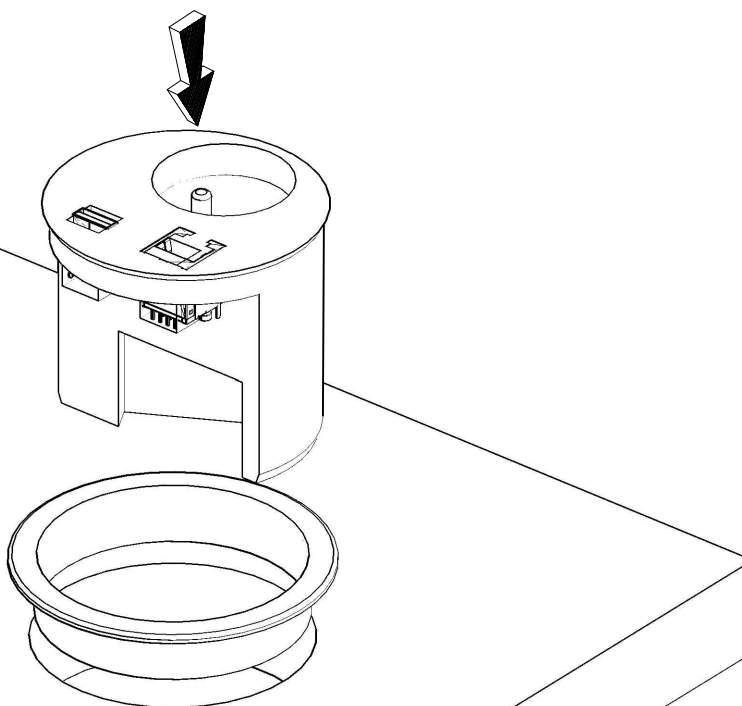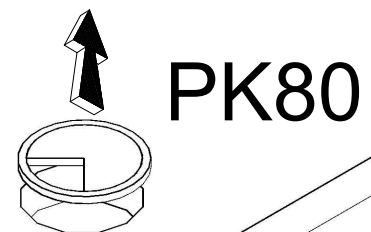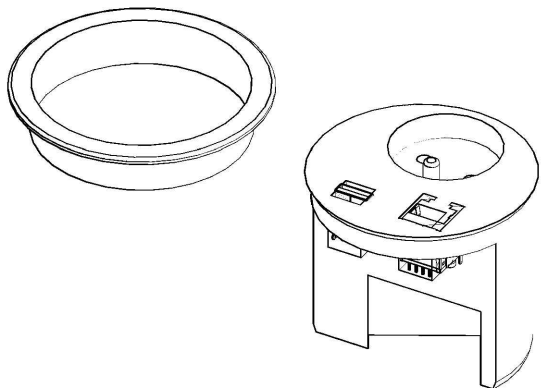


|    |  |
|----|--|
| 1  |  |
| 2  |  |
| 3  |  |
| 4  |  |
| 5  |  |
| 6  |  |
| 7  |  |
| 8  |  |
| 9  |  |
| 10 |  |

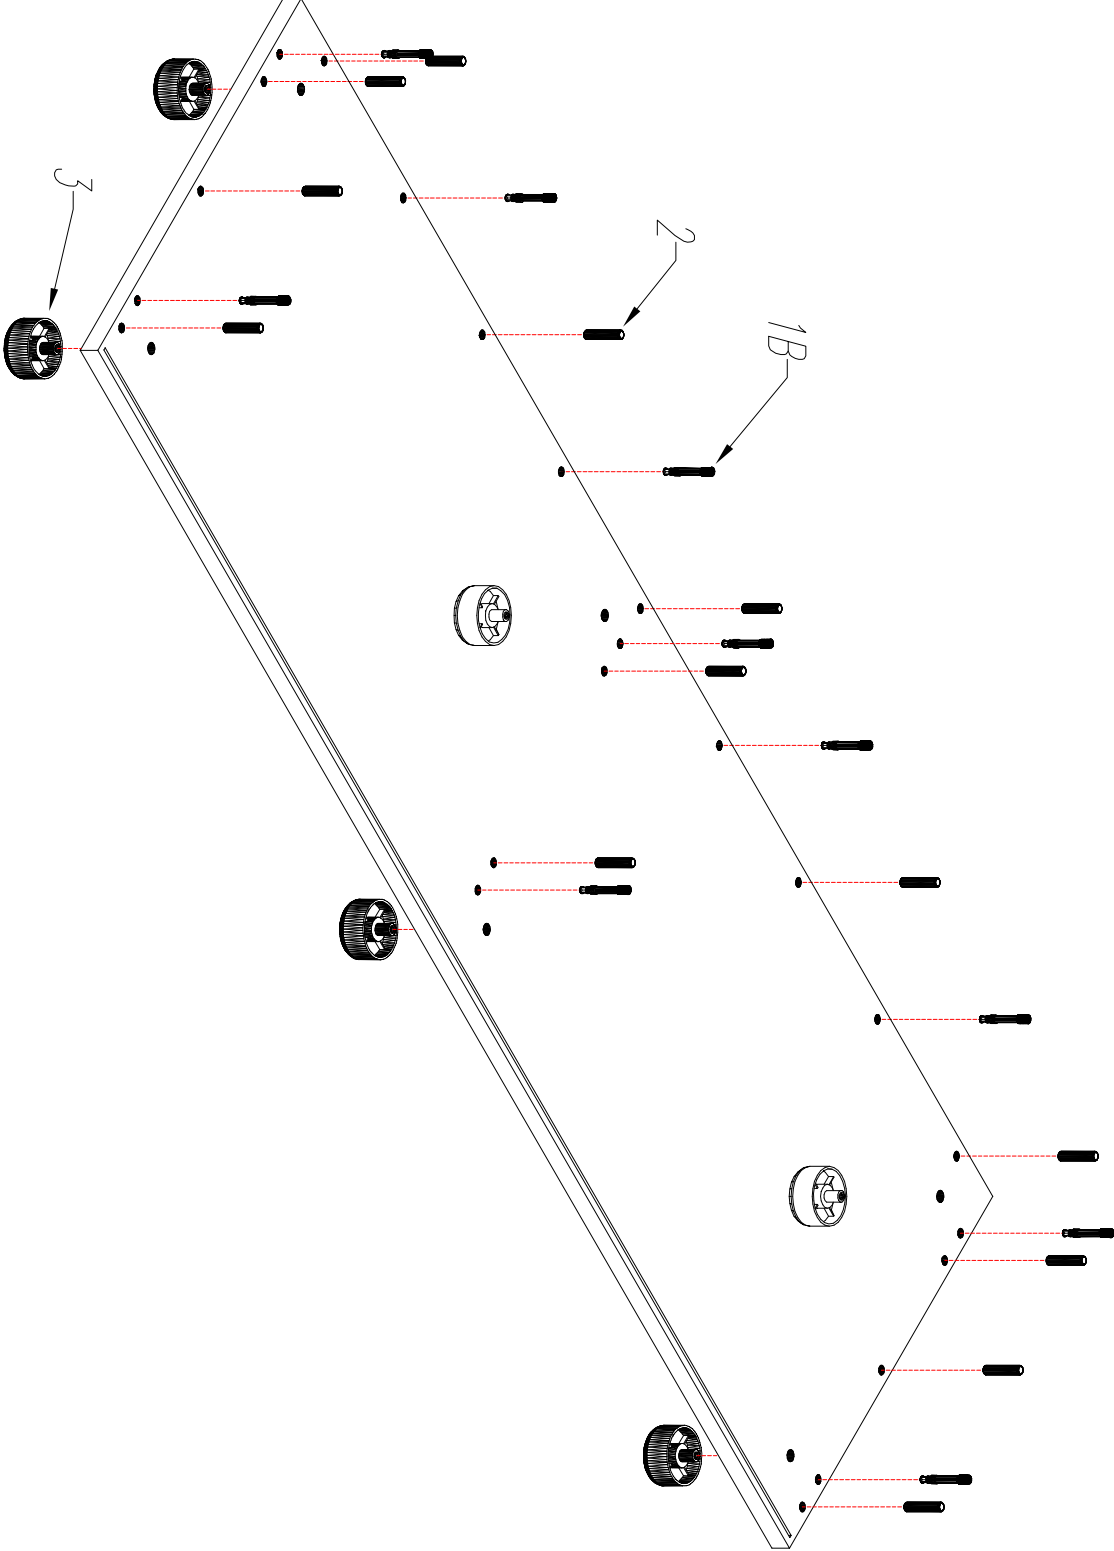



KOLEJNOŚĆ MONTAŻU  
MONTAZH PO RYADU I KOLEKOW.

THE FITTINGS SEQUENCE OF THE  
CAMS AND DOWELS.


DIE MONTAGEFOLGE VON  
EXZENTERN UND DIBBELN.

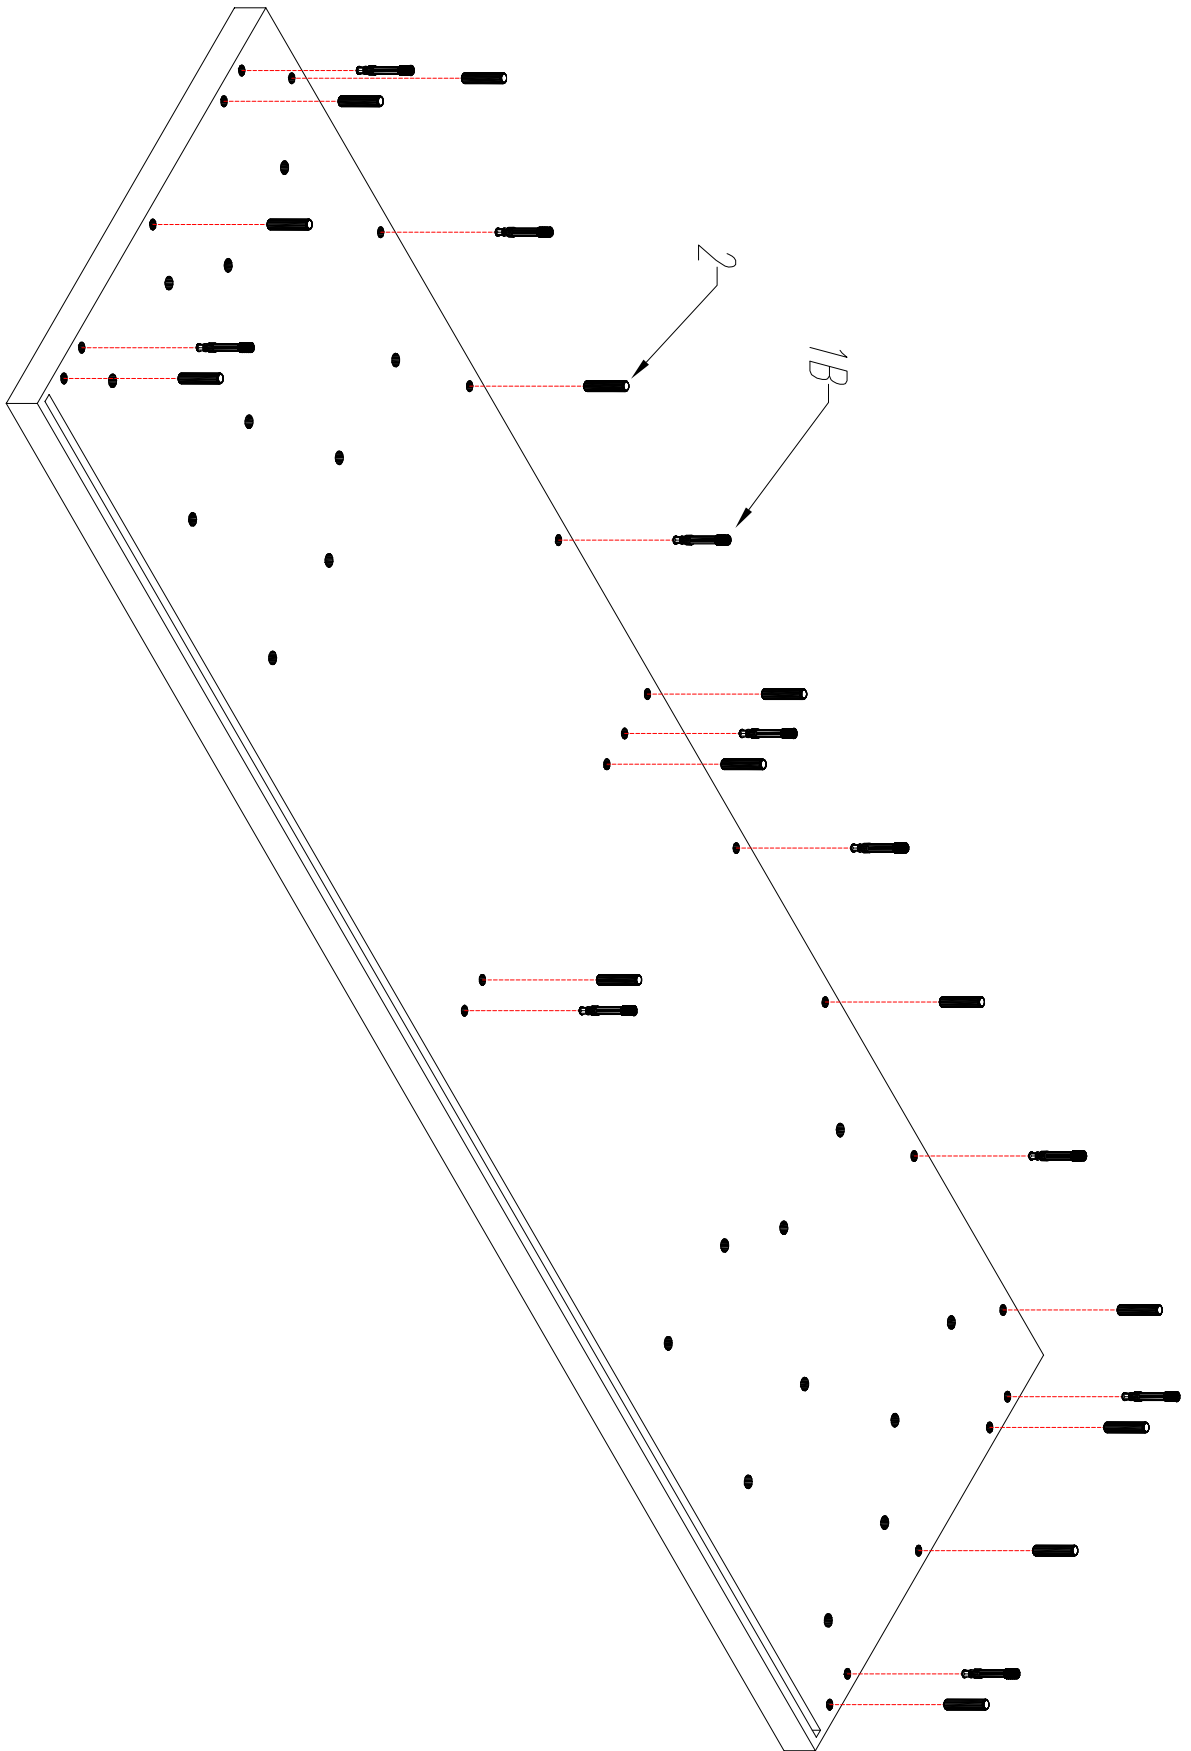

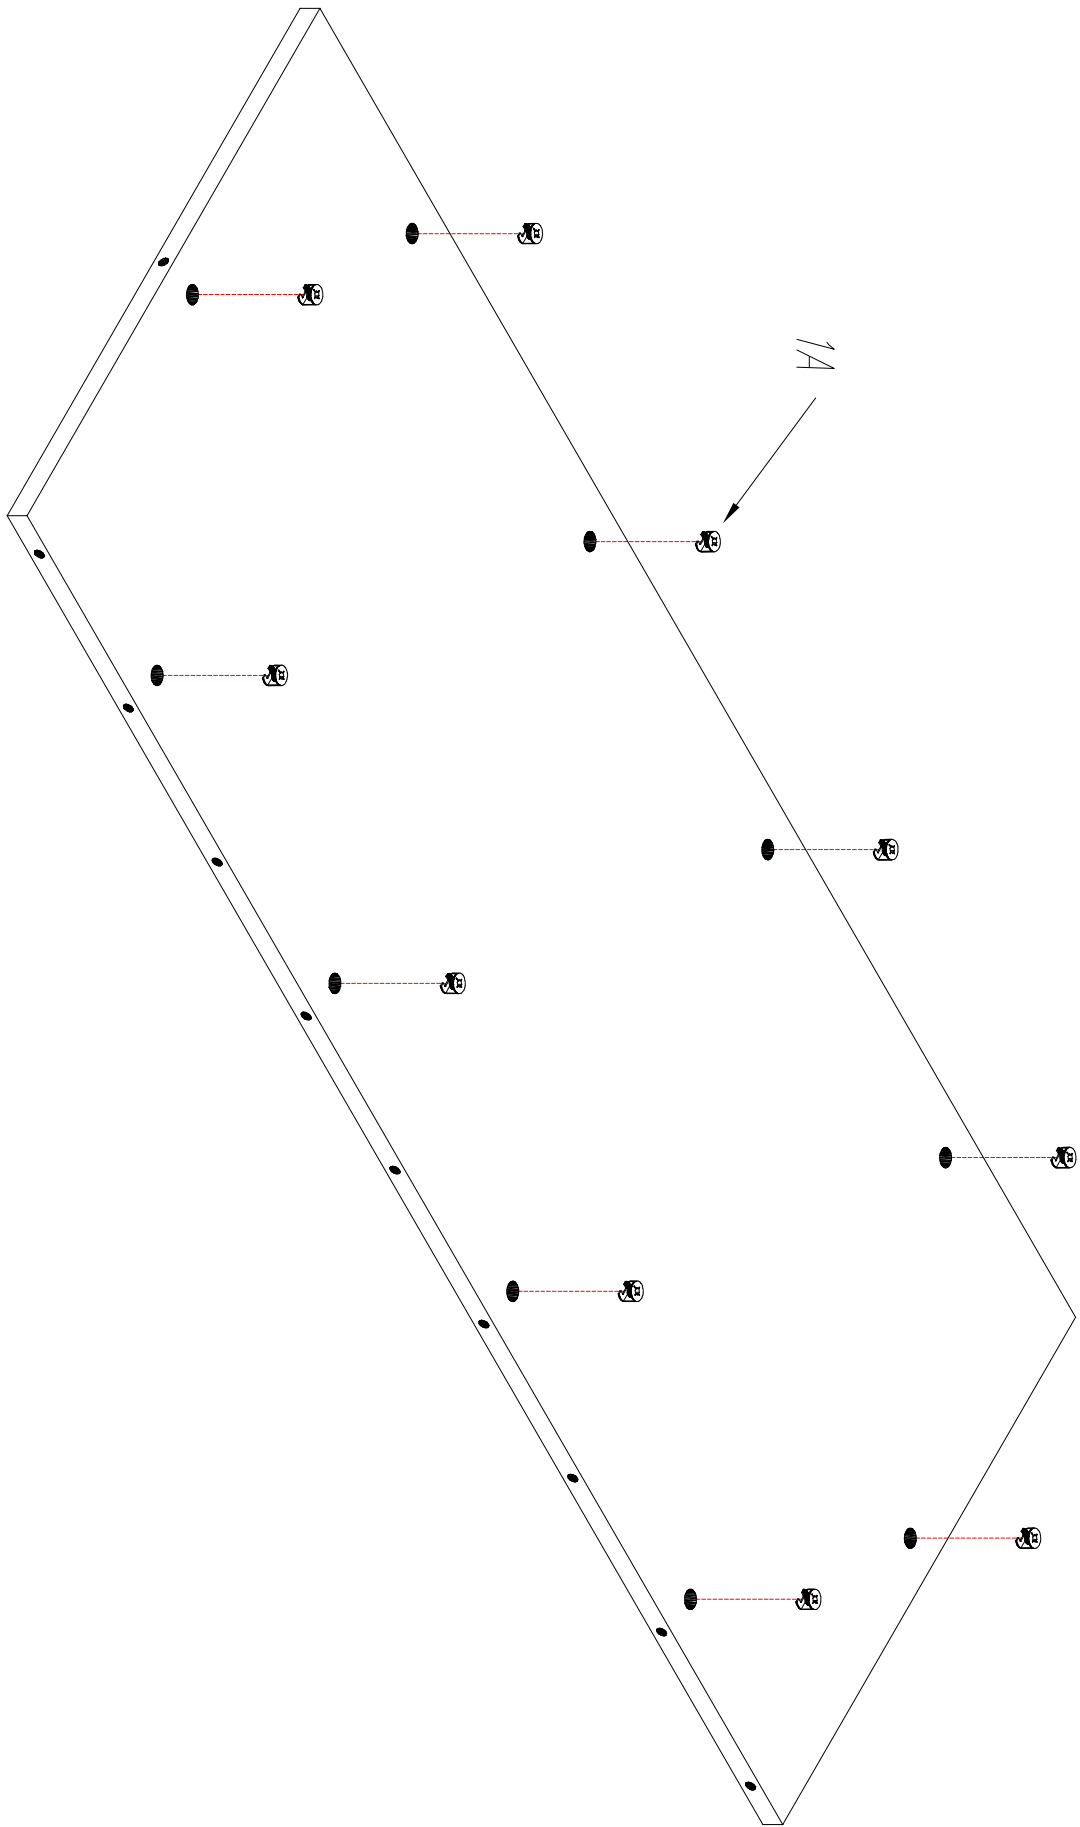


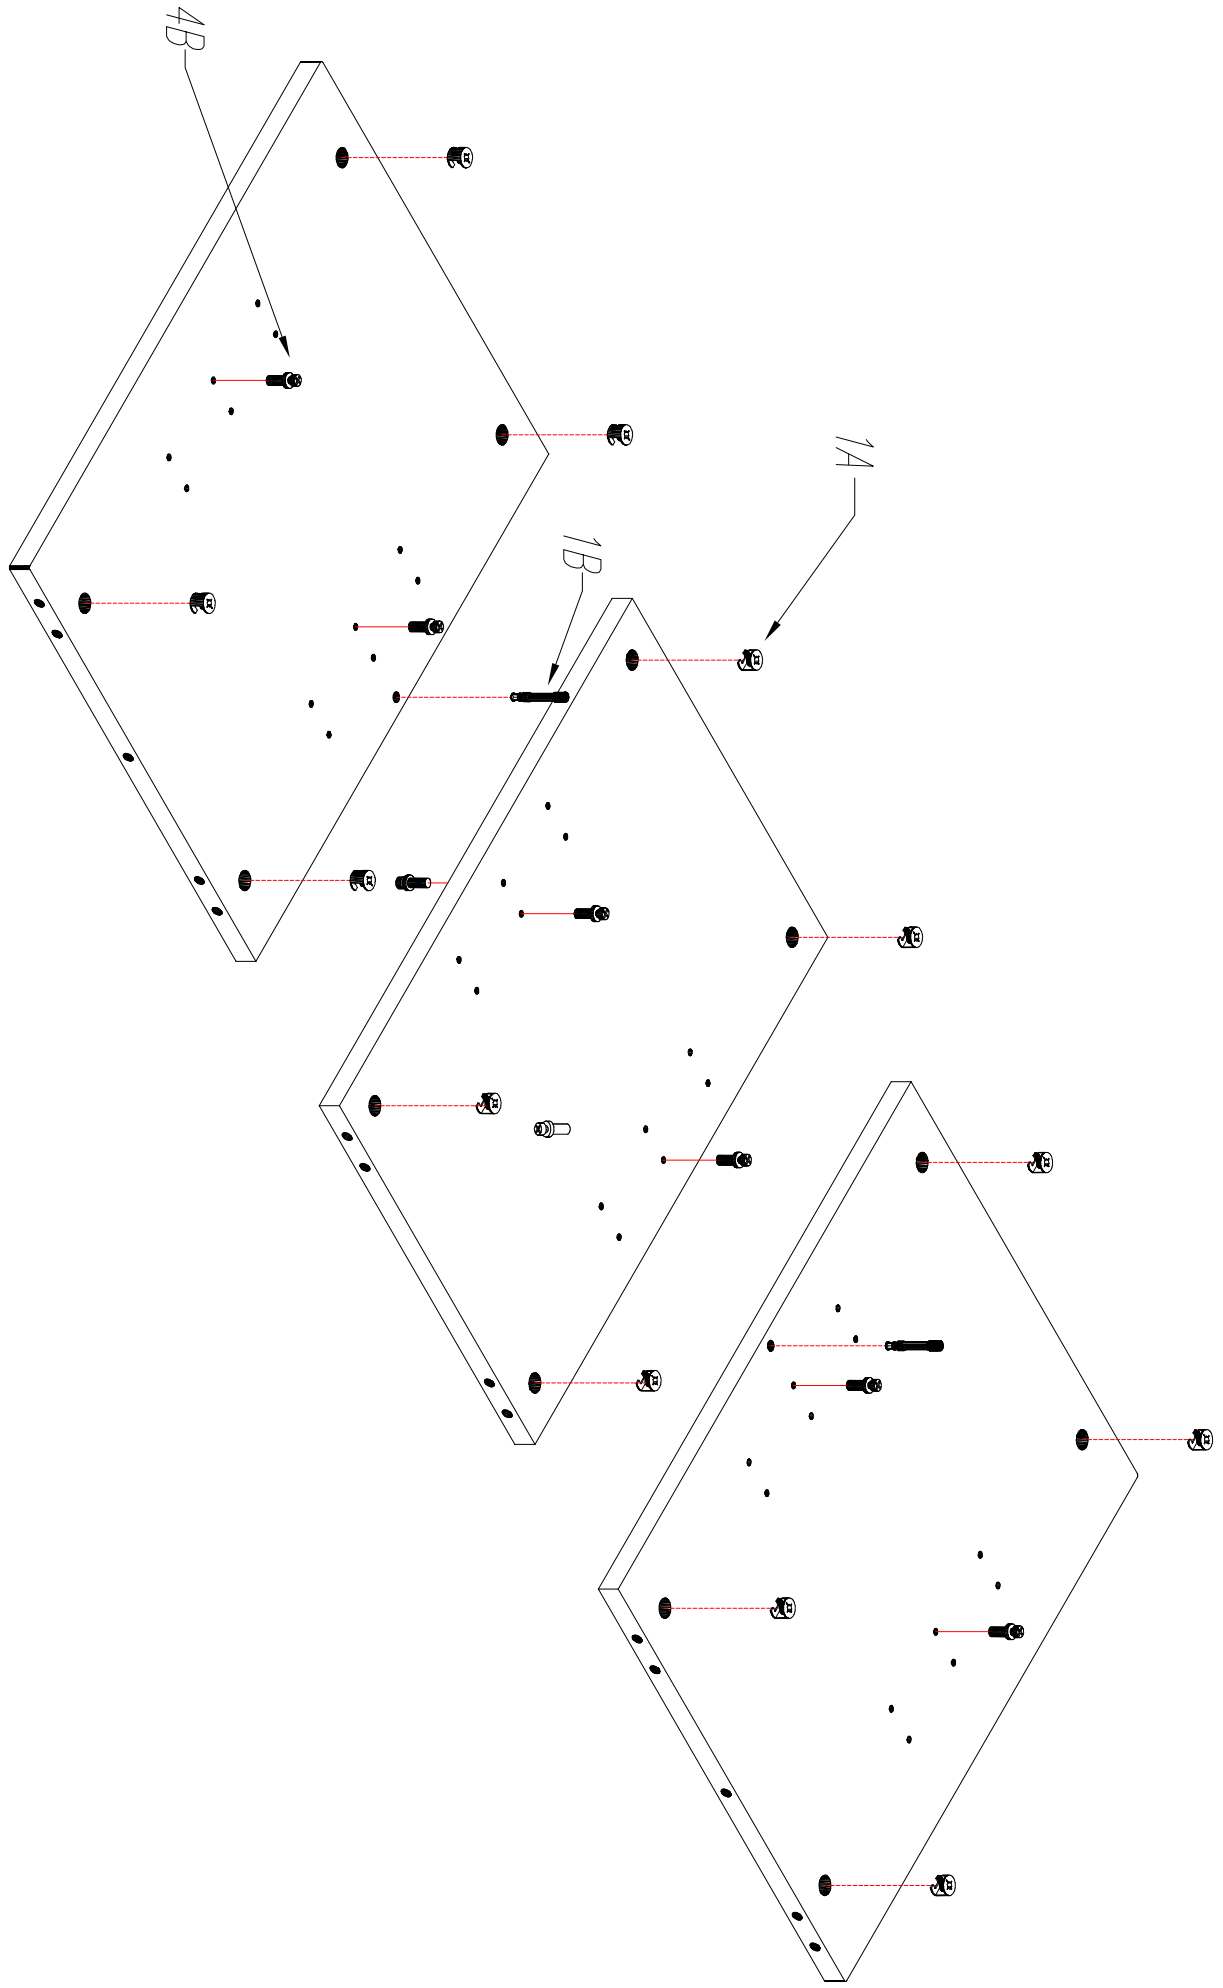


G

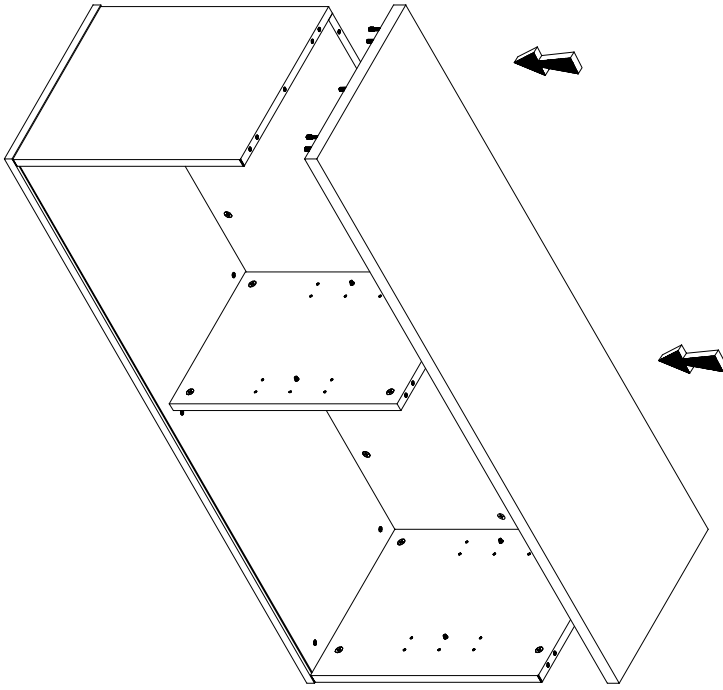


F



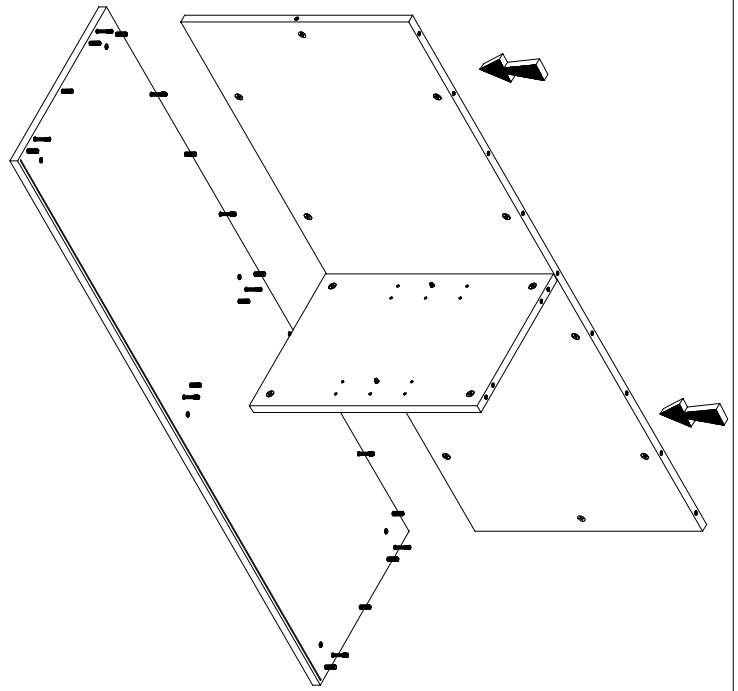


H

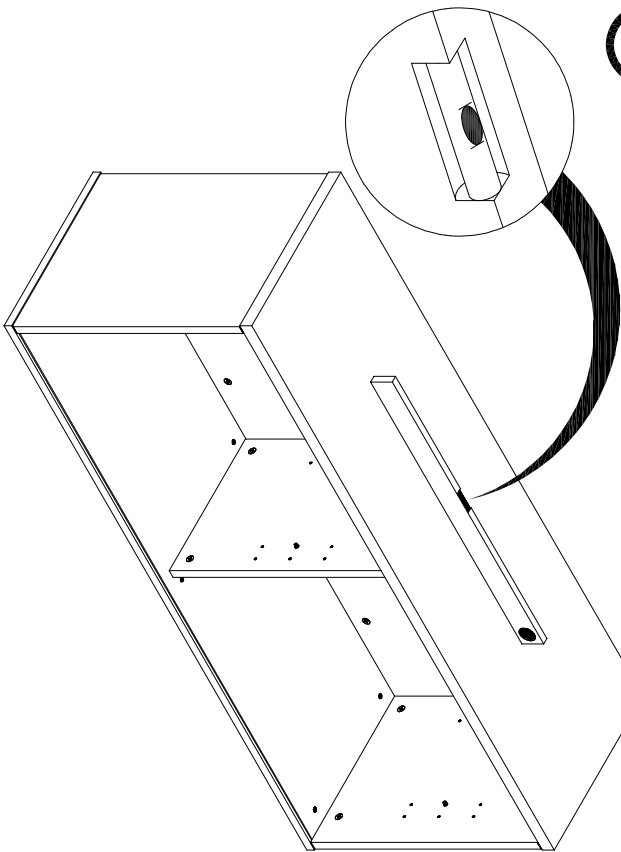


T


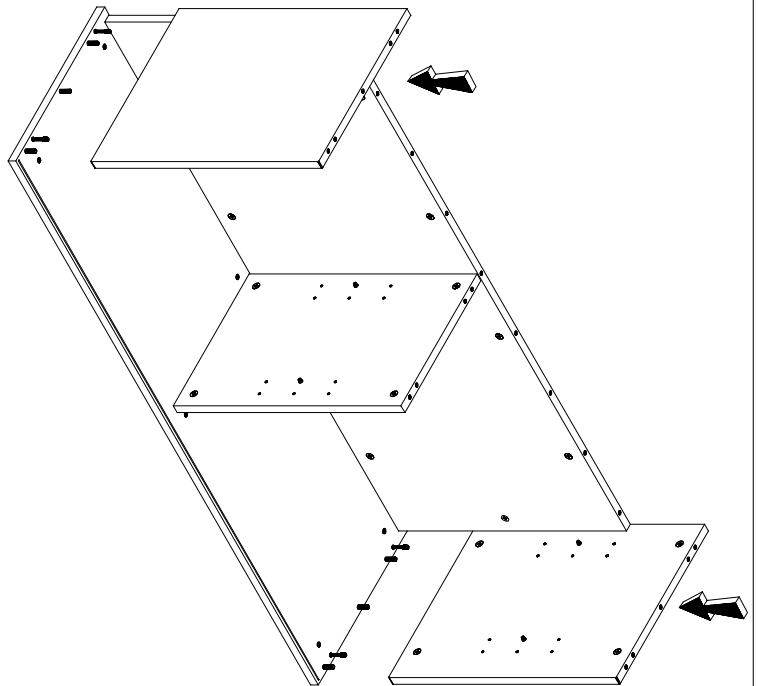


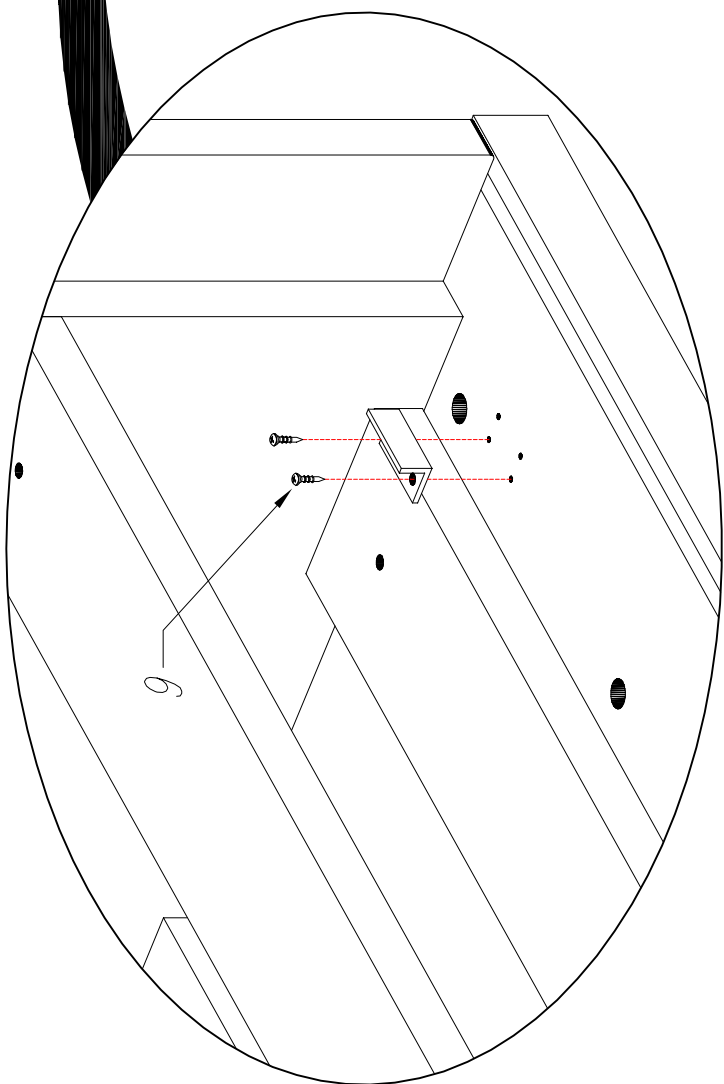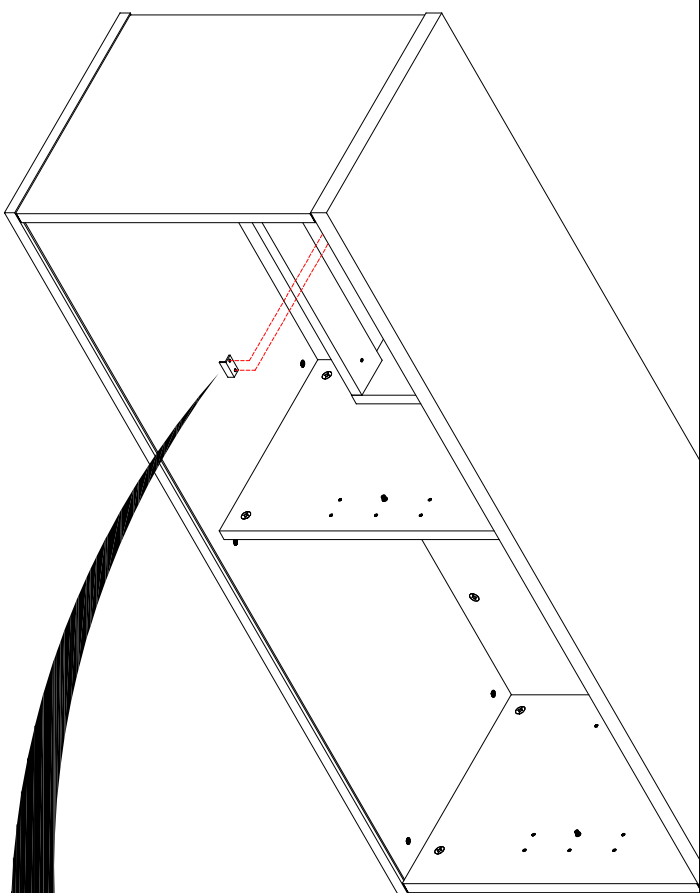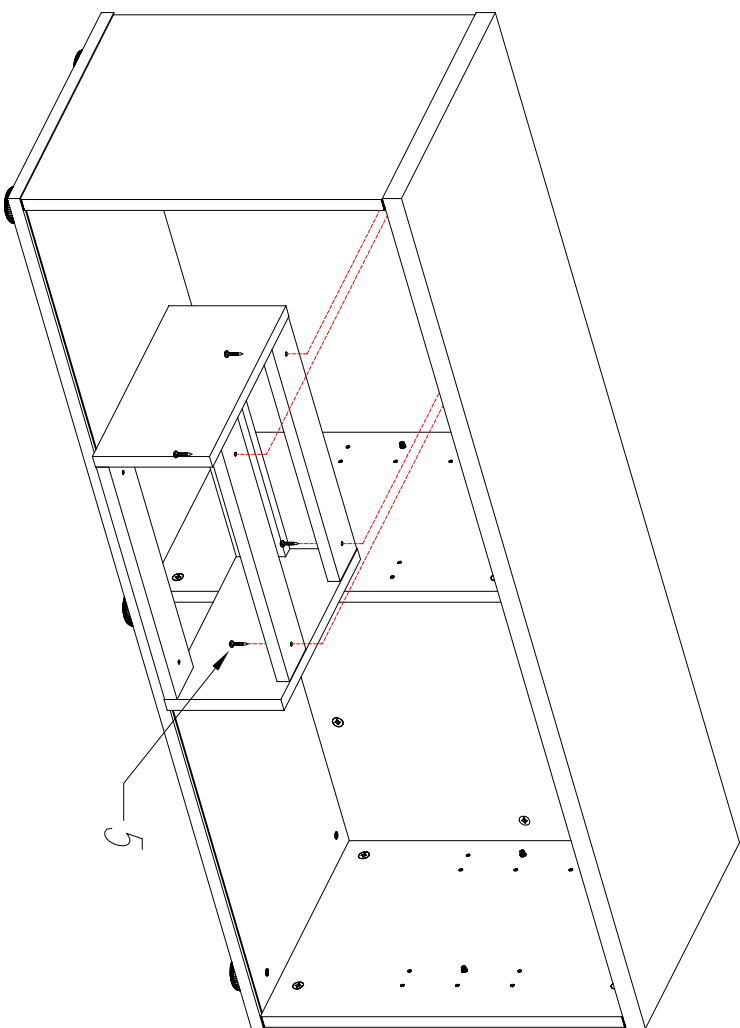


K

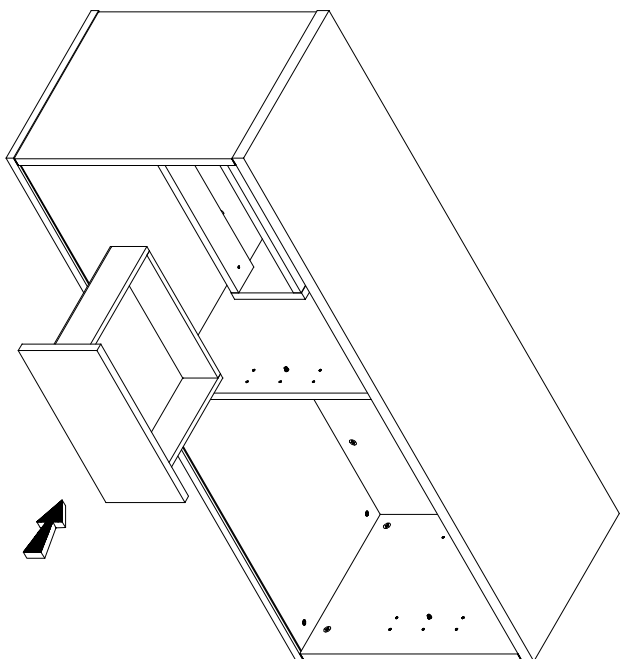


-Przykręcić śruby z  
małą siłą.  
-Put the screws gently.  
-Anschrauben die  
Schrauben zierlich.

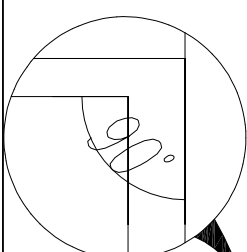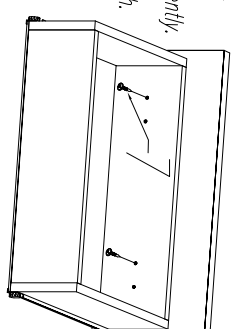



-Przykręcić śruby z  
dużą siłą.  
-Put the screws strongly.  
-Anschrauben die  
Schrauben steerklich.




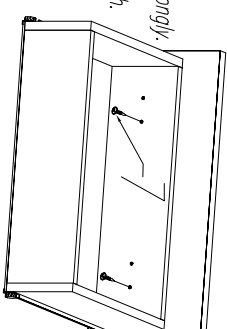



L

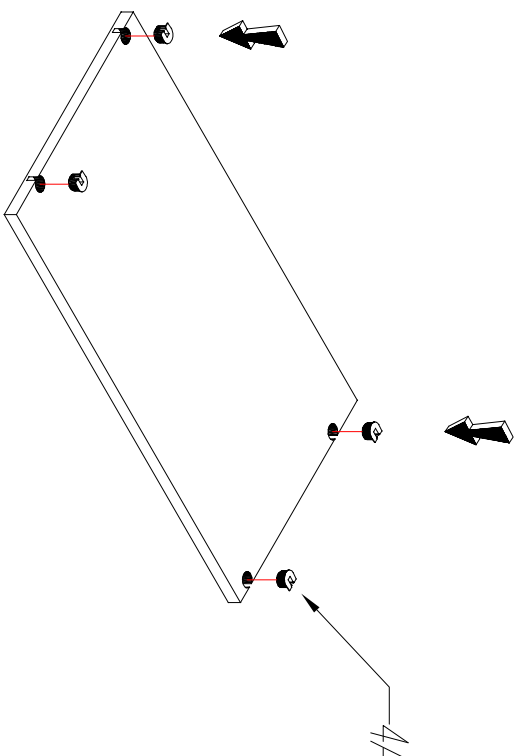



M

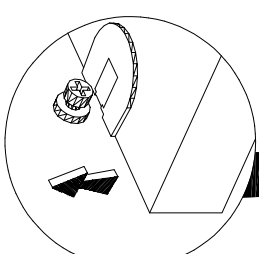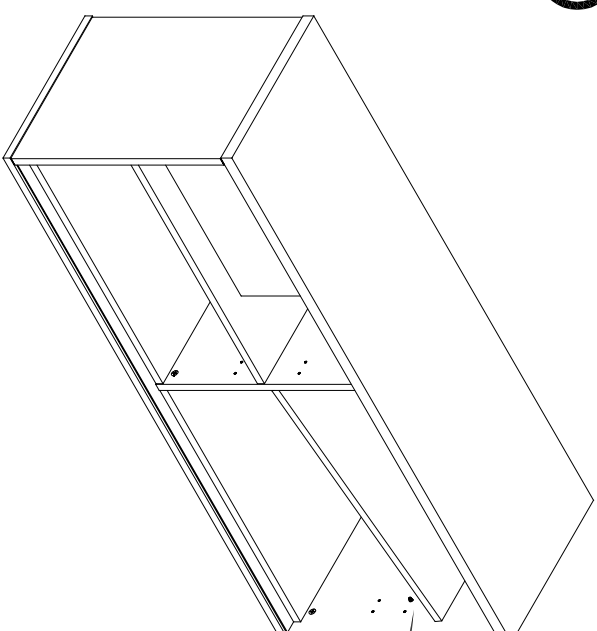

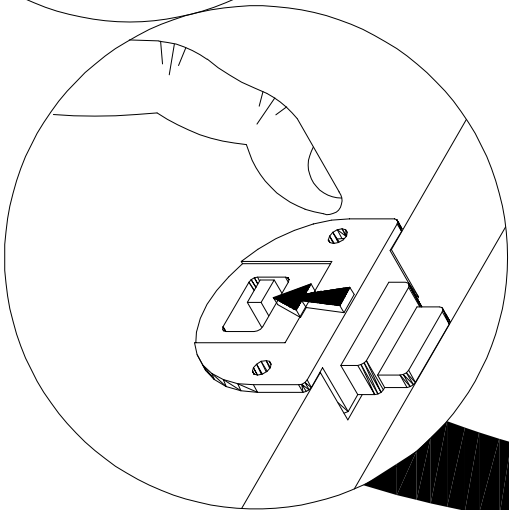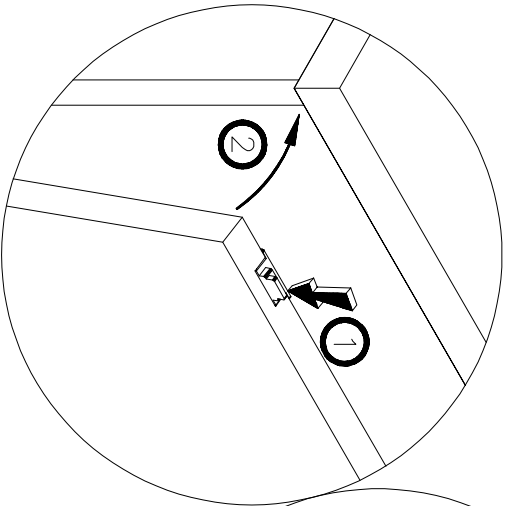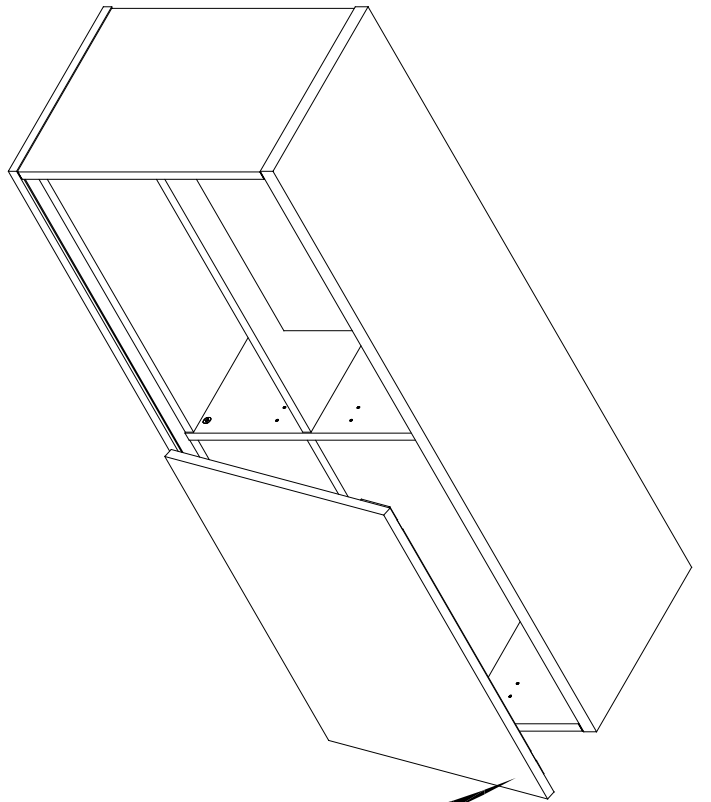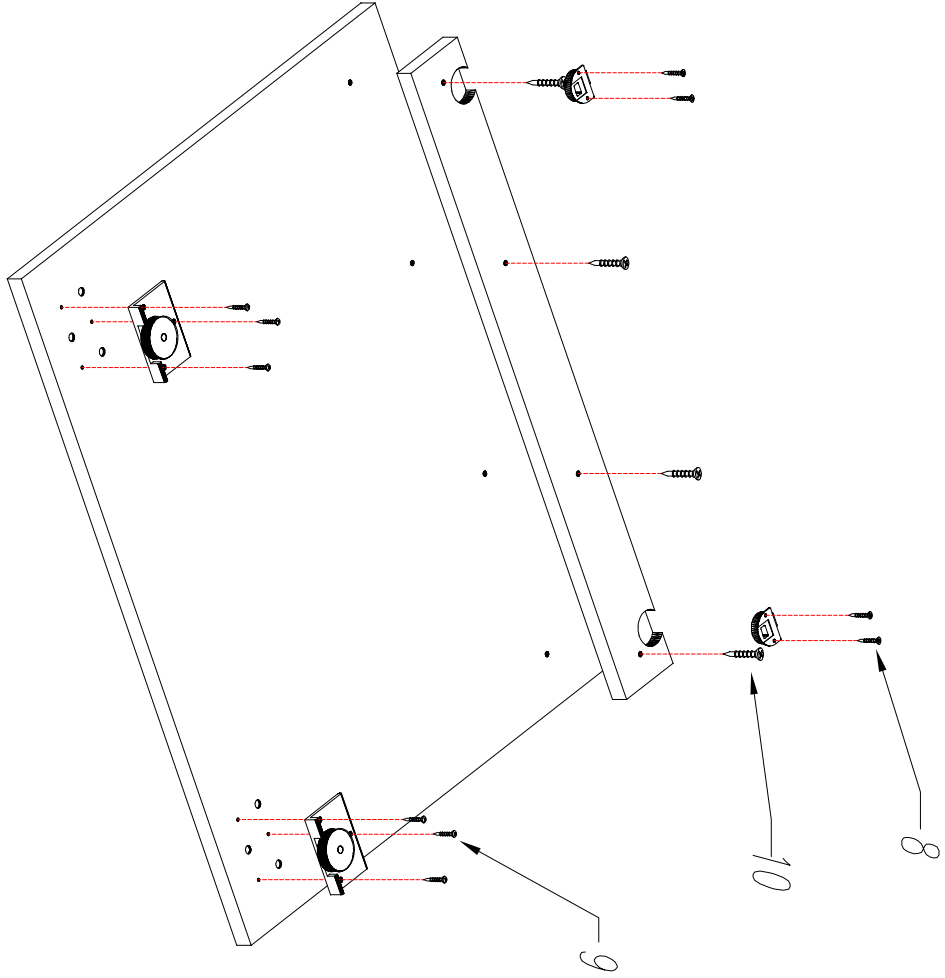





|   |                                                                                     |        |
|---|-------------------------------------------------------------------------------------|--------|
| 1 |   | M6x20B |
| 2 |  | M6     |
| 3 |  | M6     |




A

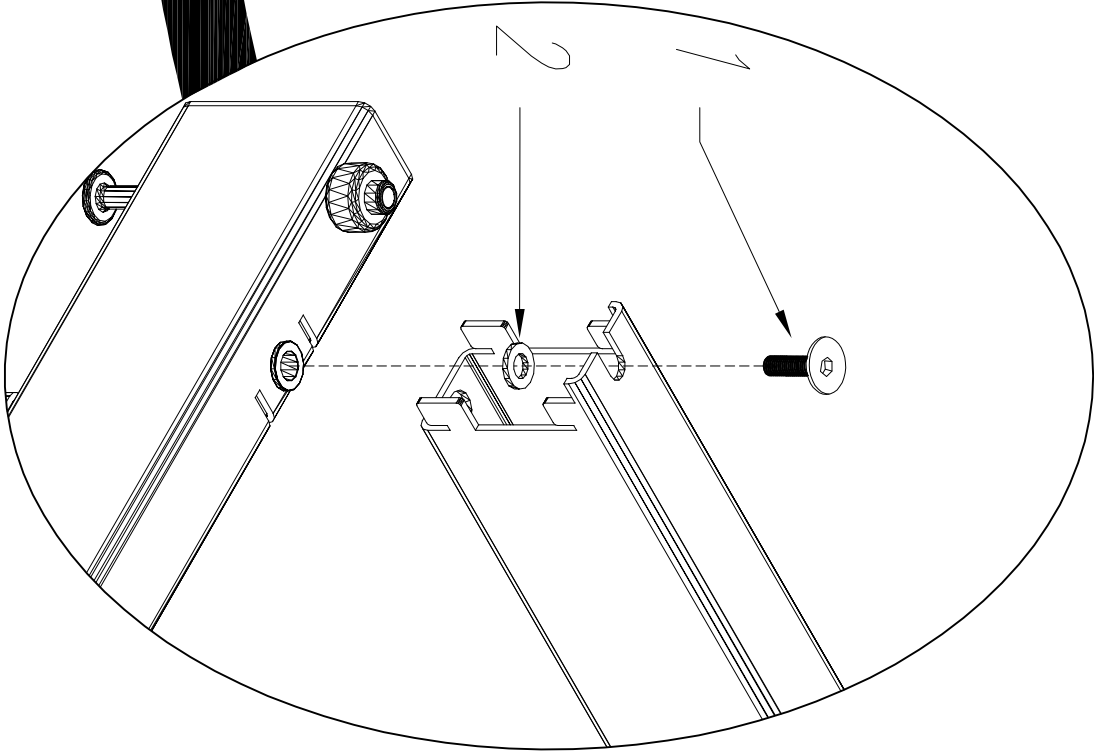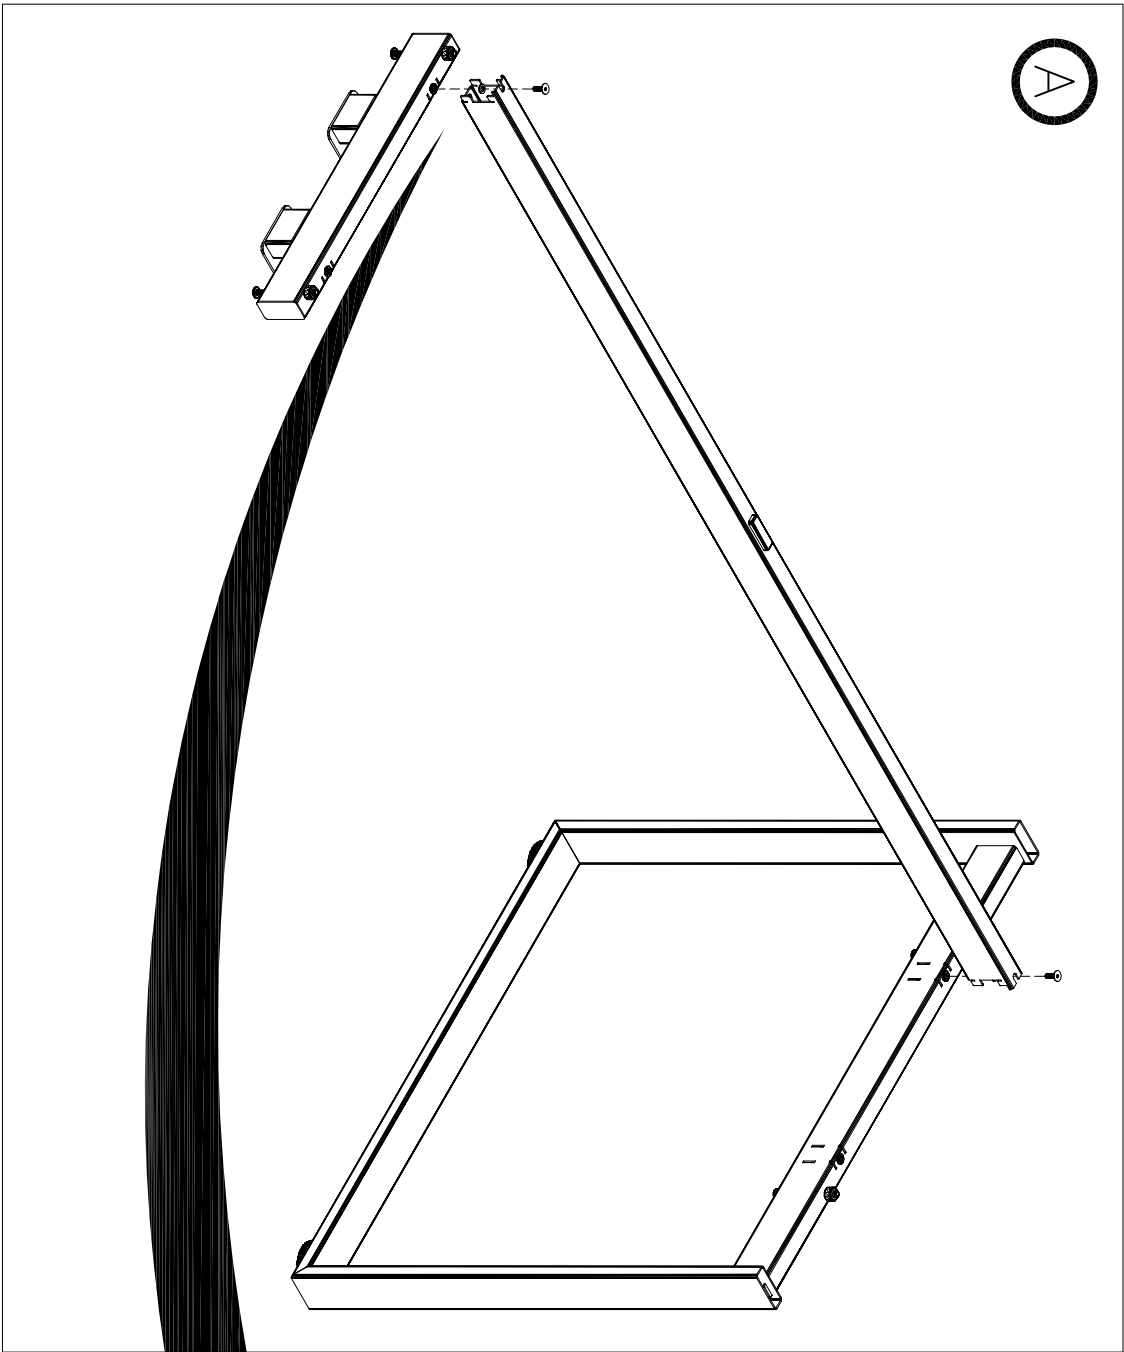





OGI

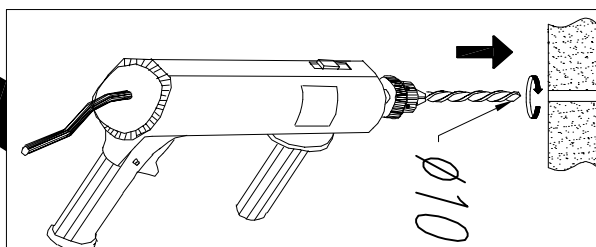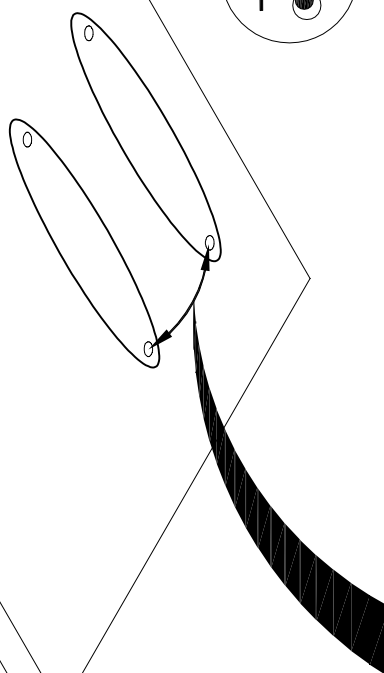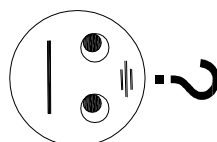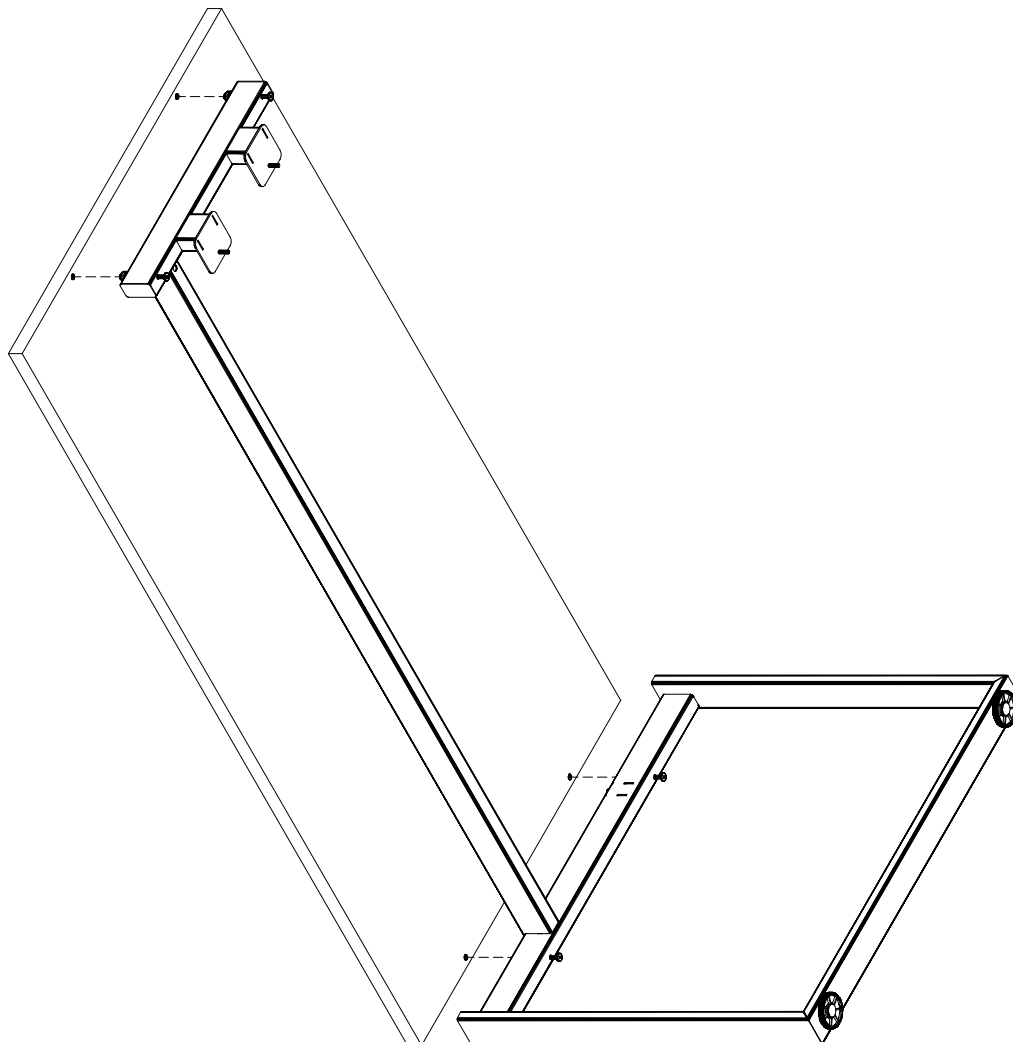

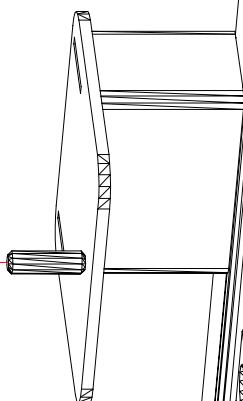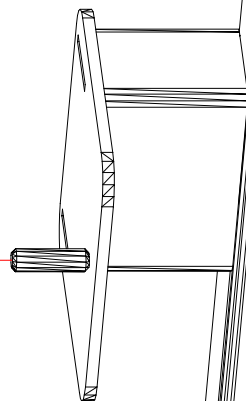


|   |  |
|---|--|
| 1 |  |
| 2 |  |
| 3 |  |
| 4 |  |
| 5 |  |
| 6 |  |
| 7 |  |
| 8 |  |
| 9 |  |


**A12M**

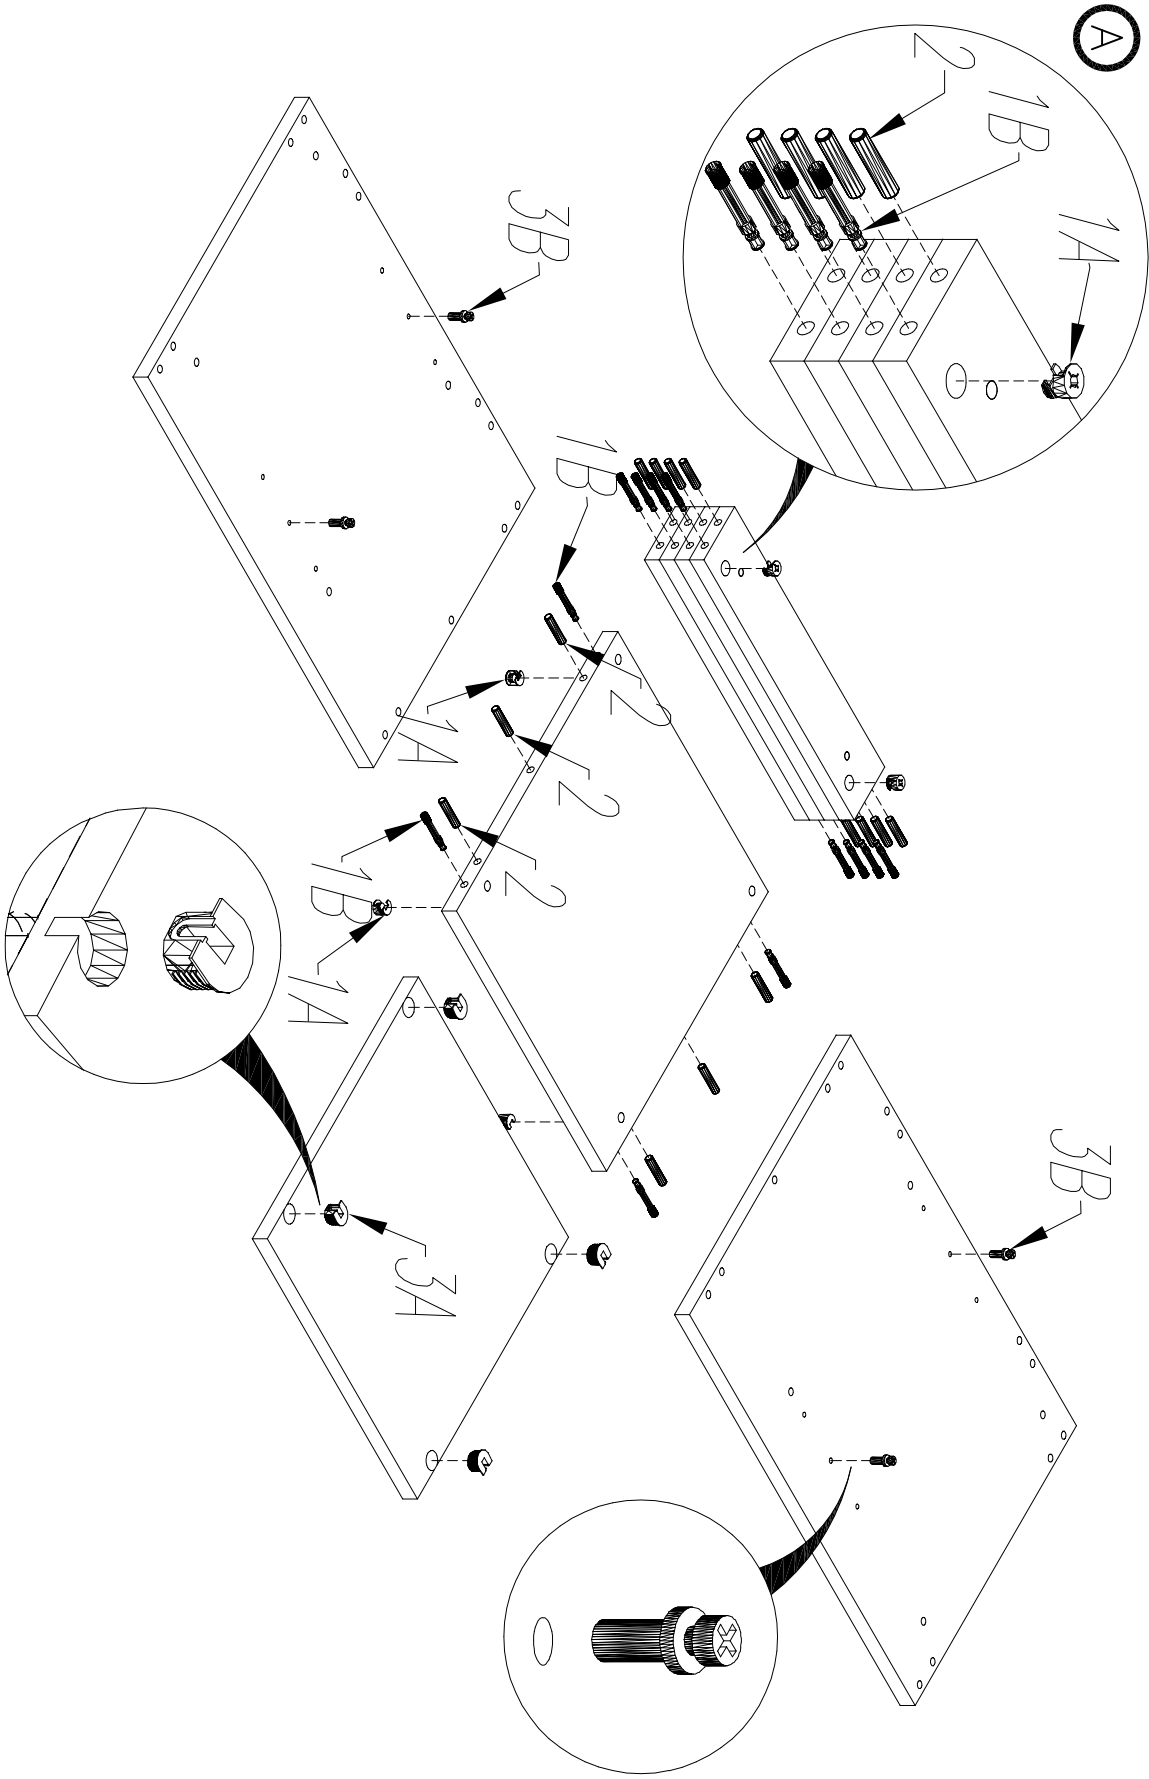


KOLEJNOŚĆ MONTAŻU  
MIMOSRODOW I KOLEKOW.  
THE FITTINGS SEQUENCE OF THE  
CAMS AND DOWELS.  
DIE MONTAGEABFOLGE VON  
EXZENTERN UND DÜBELN.

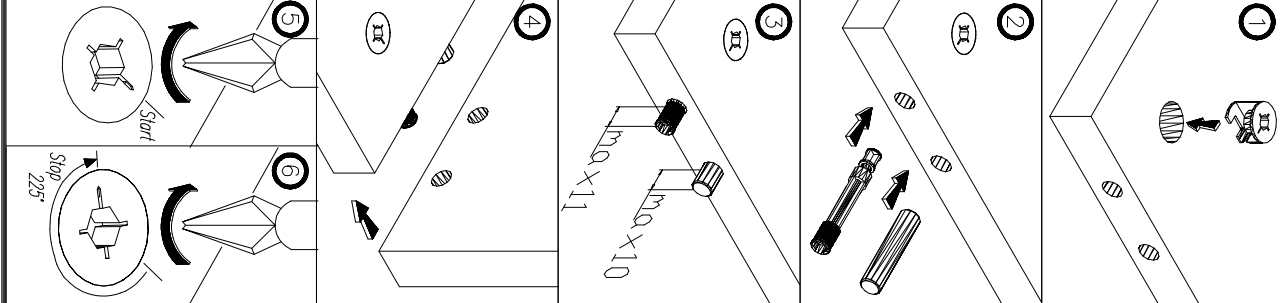

B

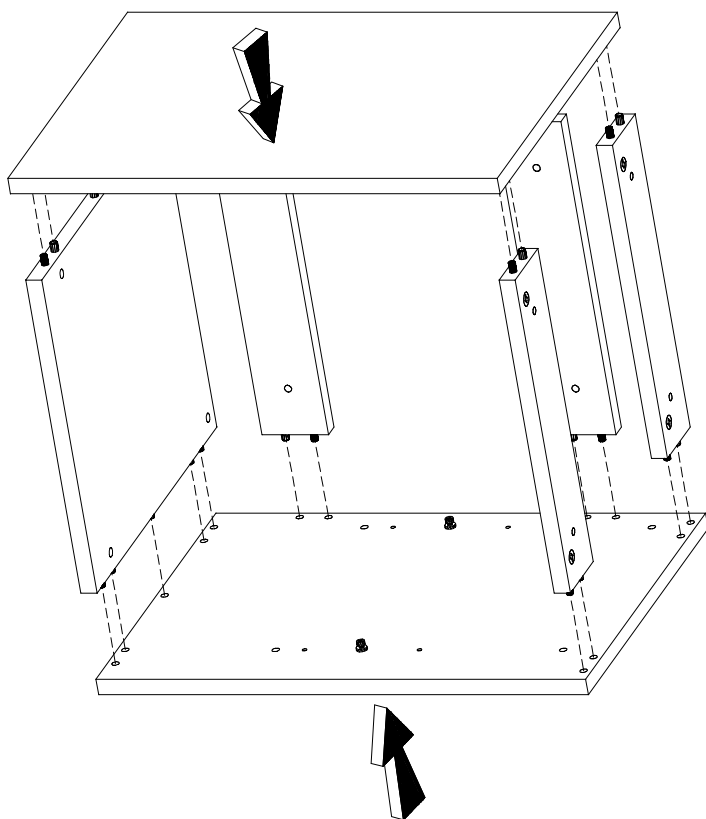

C

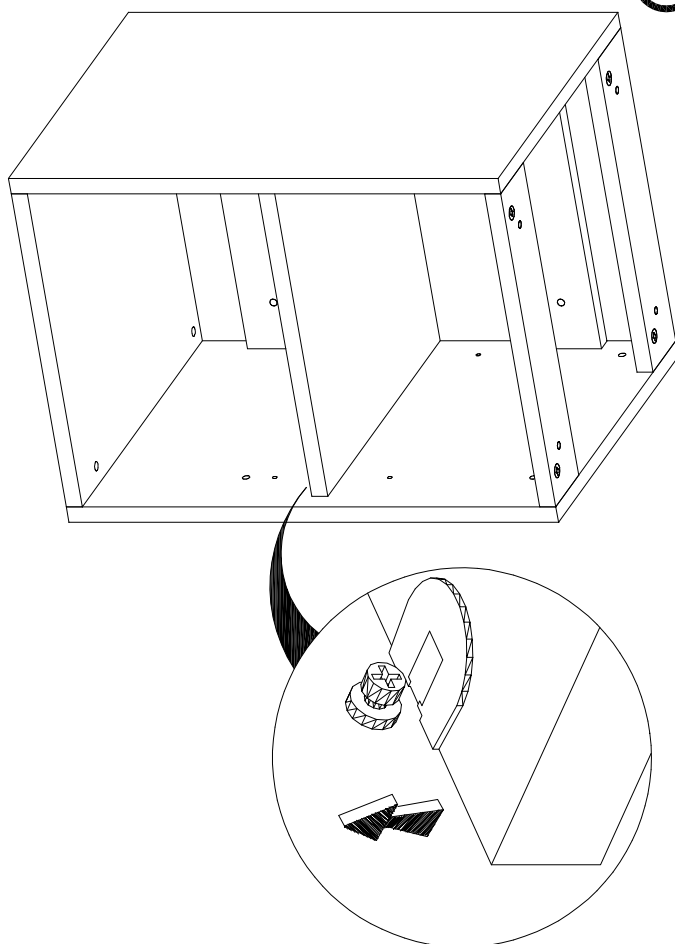

D

