



1  M8x20	2  H15	3  M8x45		ZUS_YAN_DESK
---	---	---	---	-----------------------



A

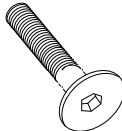


B

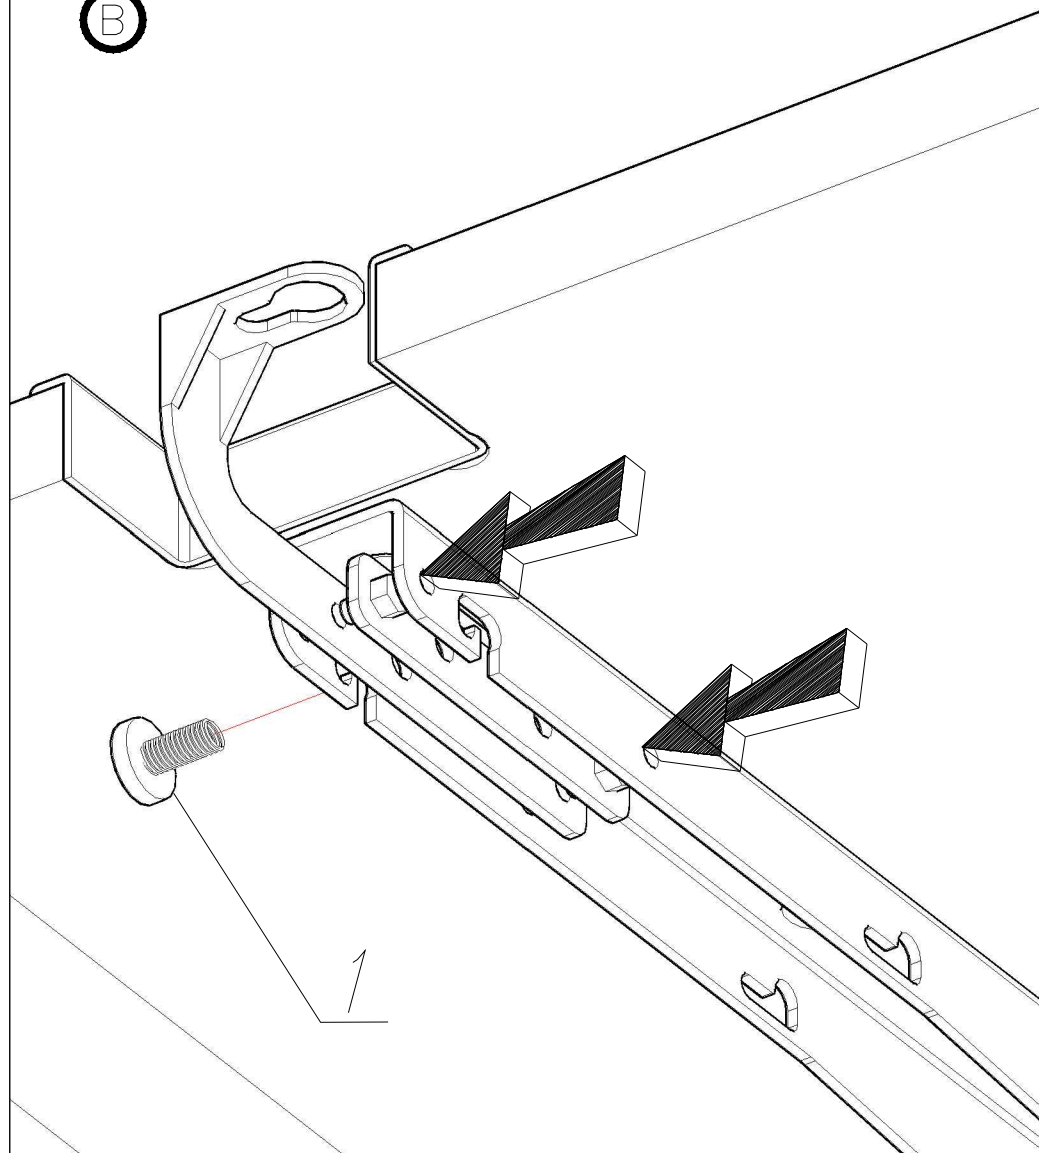


C

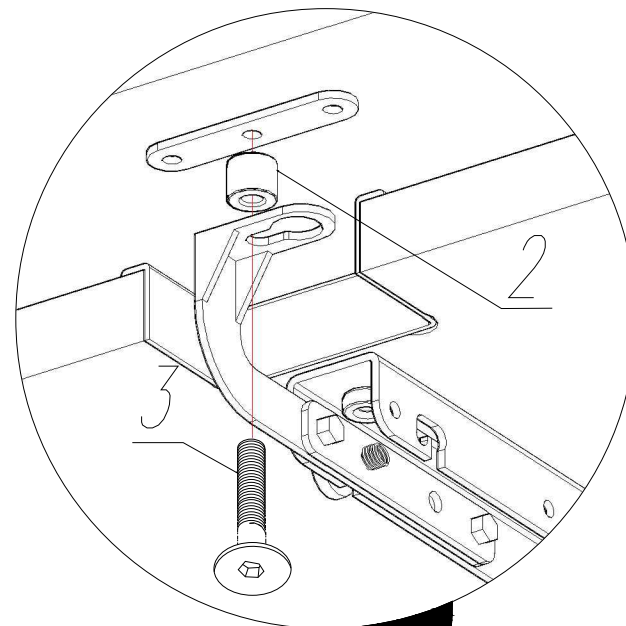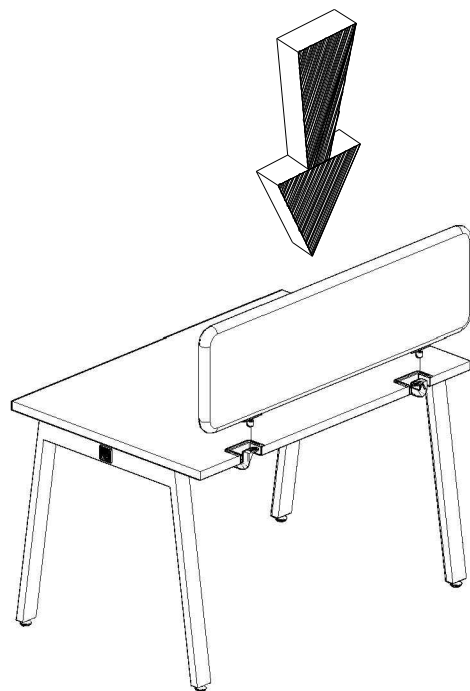


D



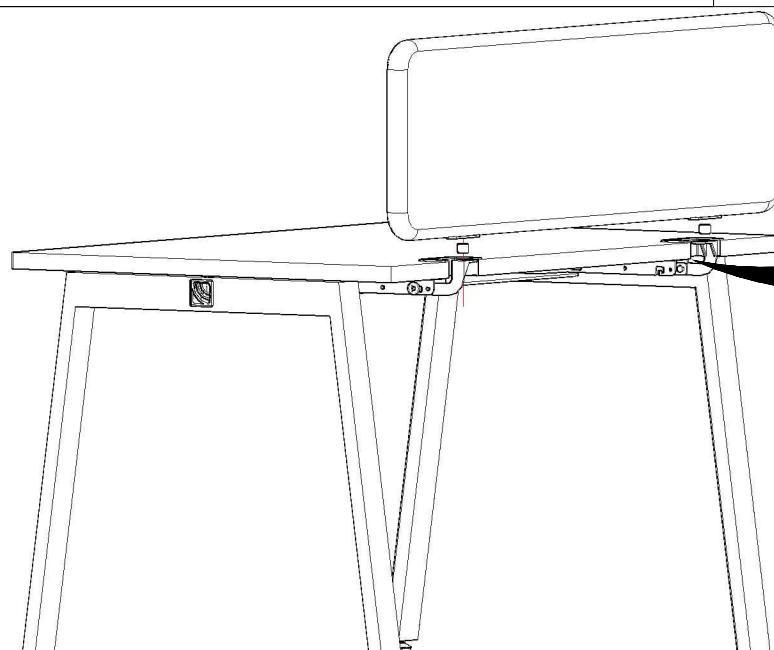


1 	2  M8	3  M8x45	4  H15	 	ZUS_OGI_DESK
--	--	---	--	--	---------------------

A

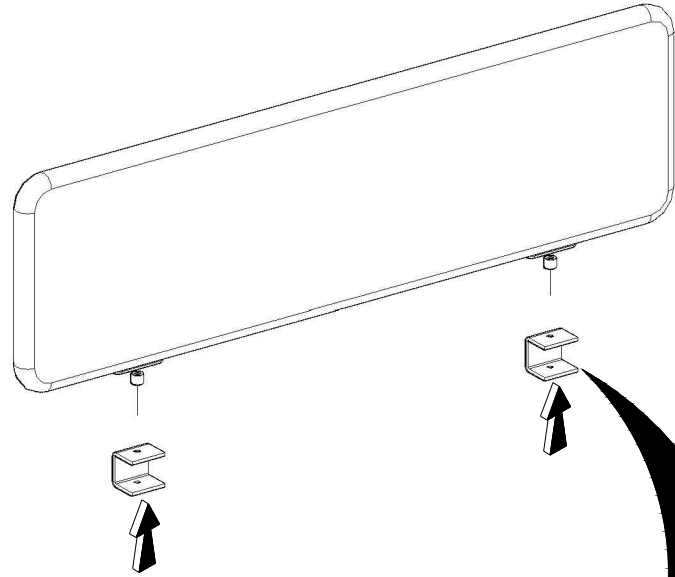

B

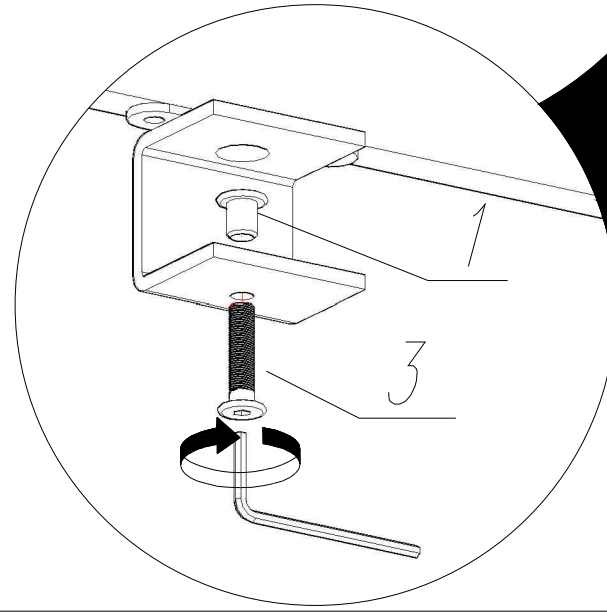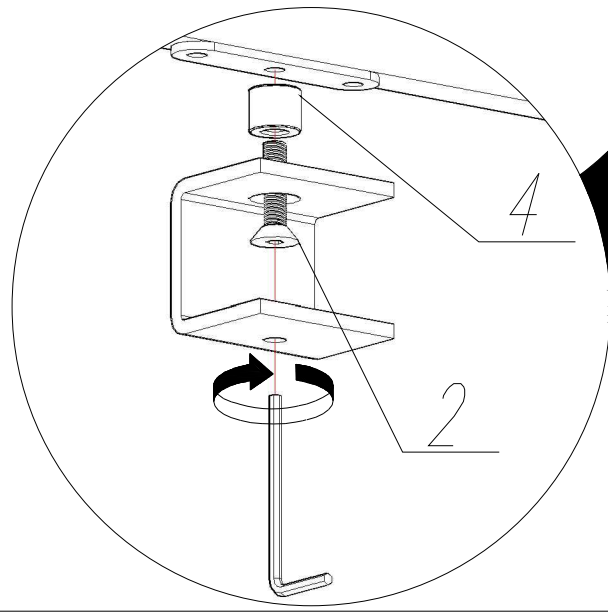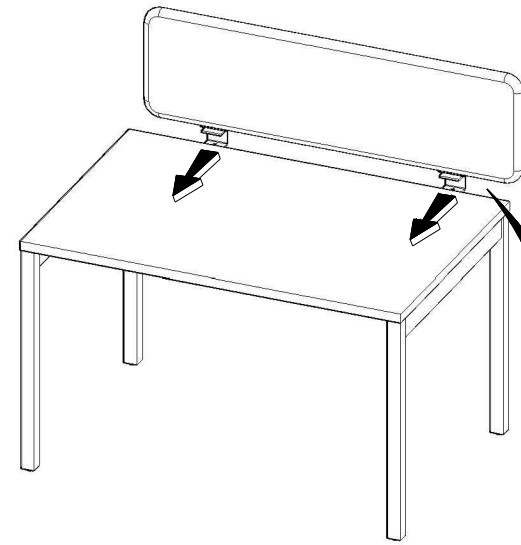

1



M8x60

2




H35






ZUS_YAN_BENCH


A

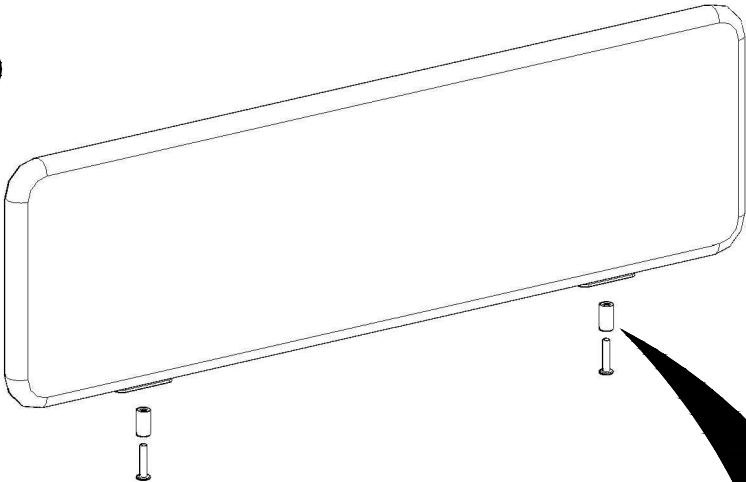



B


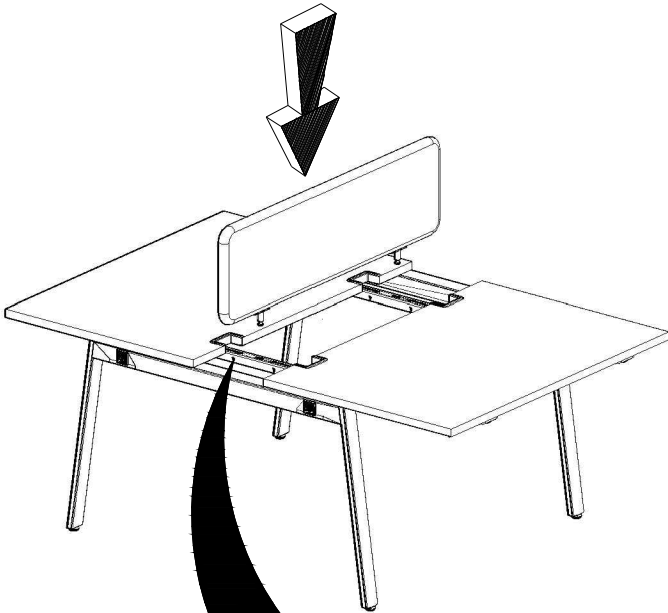


C


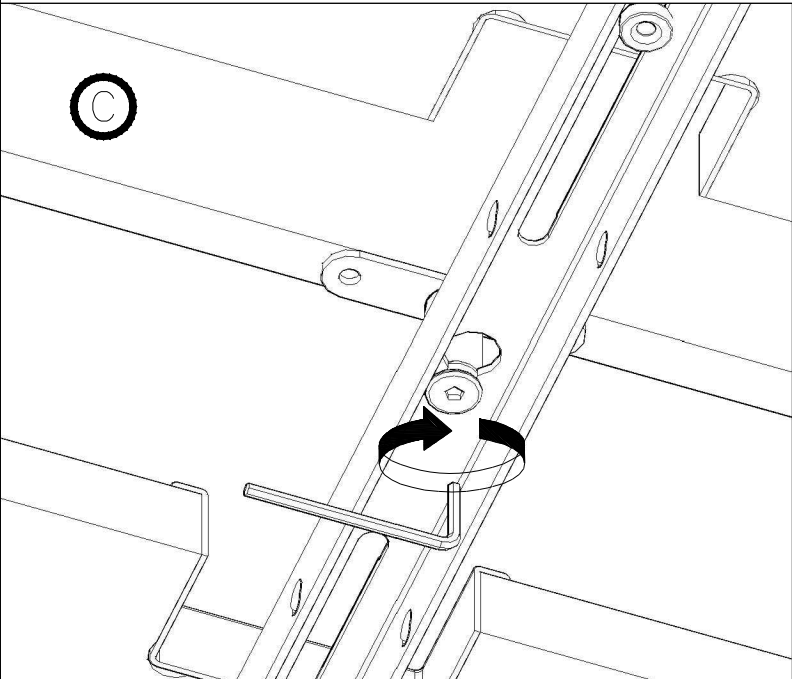


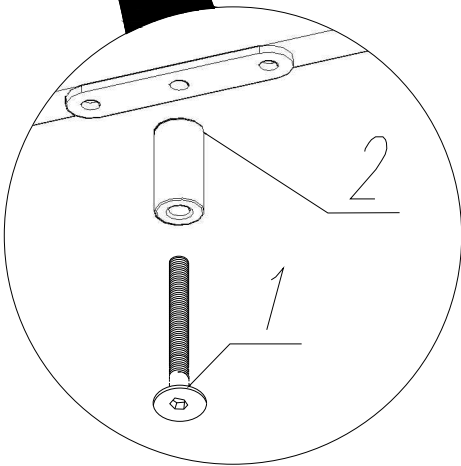

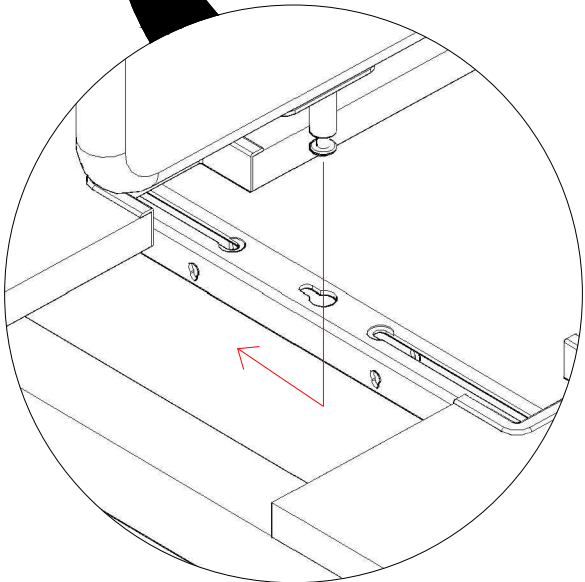


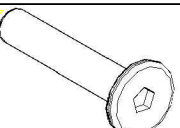1  ø5x17	2  M8x80	3  H15		ZUS_OGI_BENCH
---	---	---	--	------------------------

A

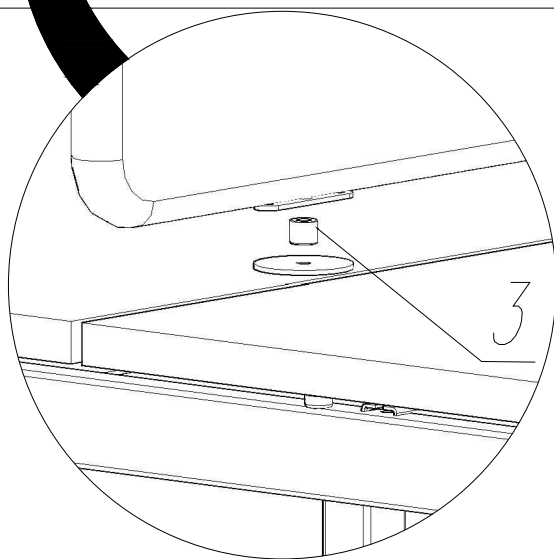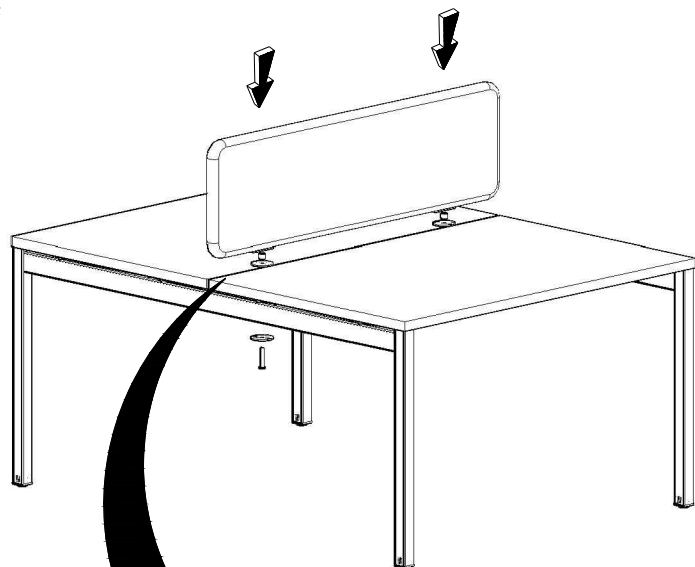


B

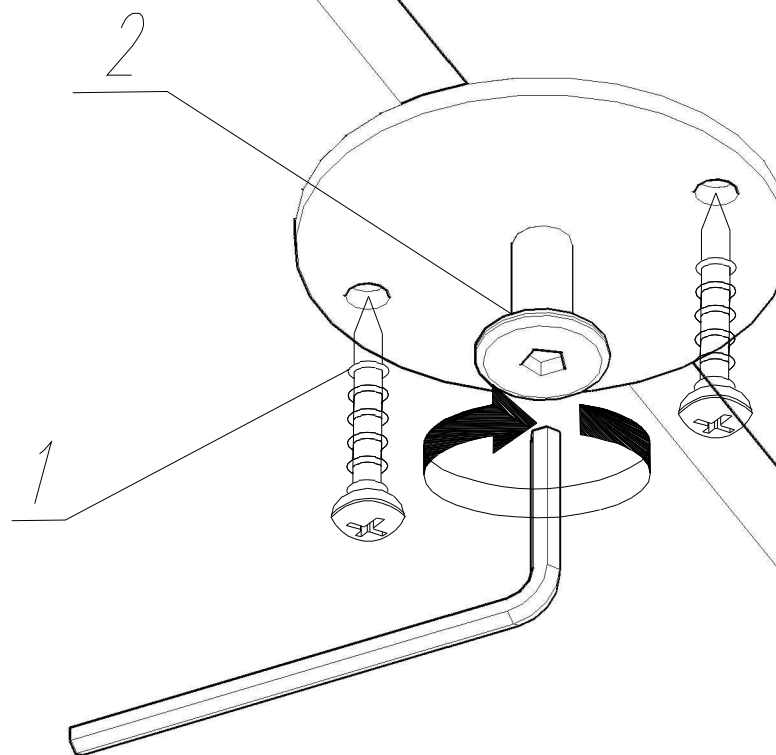

Assembling instruction – TWIN panels

1. Stick two bumpers onto rear side of your accessories in lower corners

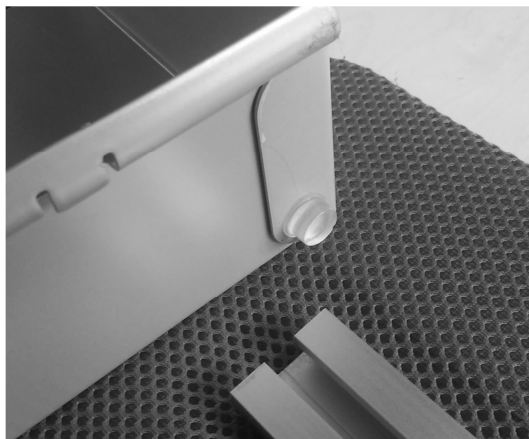

2. Hang your accessories on panel TWIN

