

M8x20




ZUT_YAN_DESK



A




B

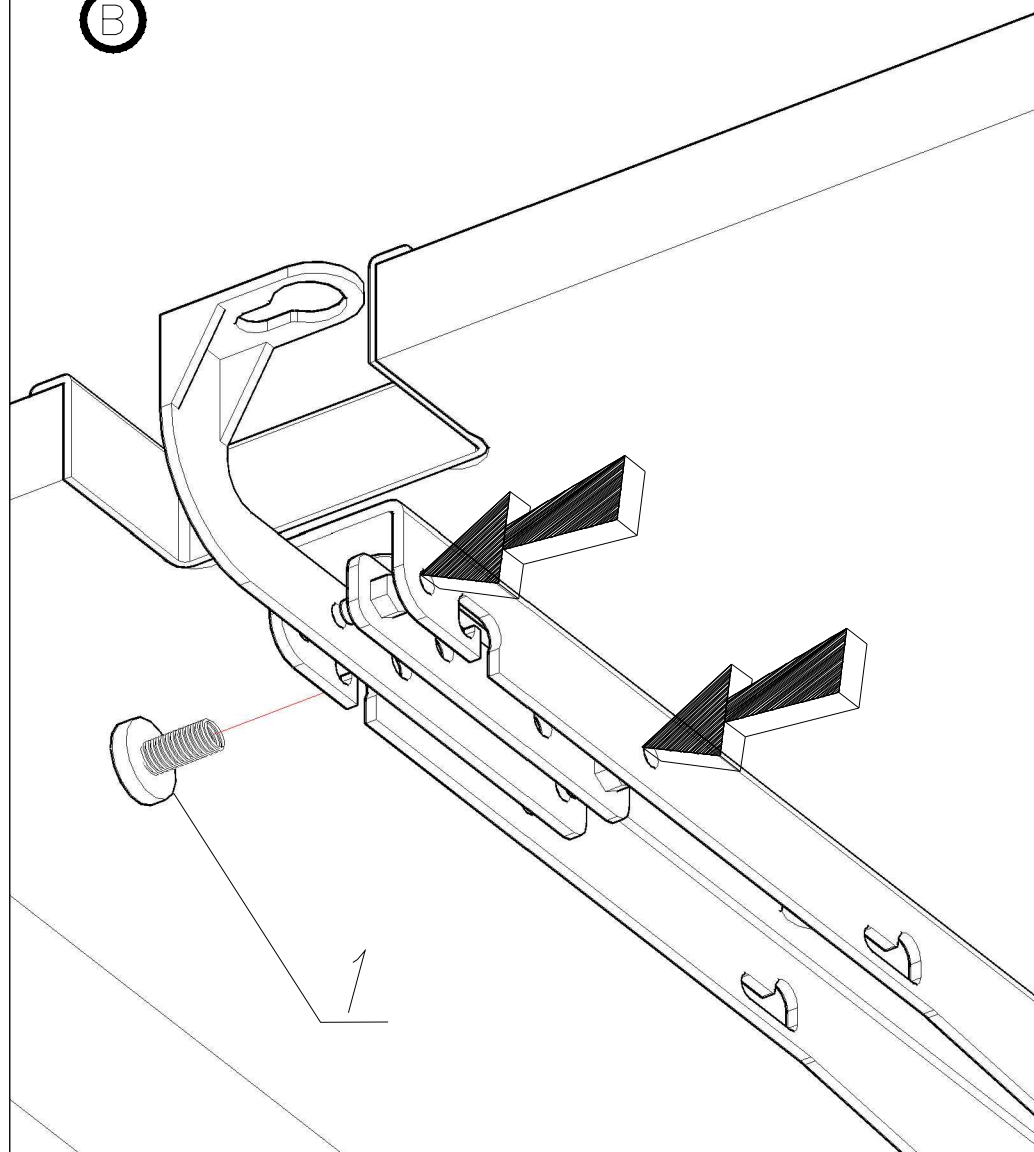

C

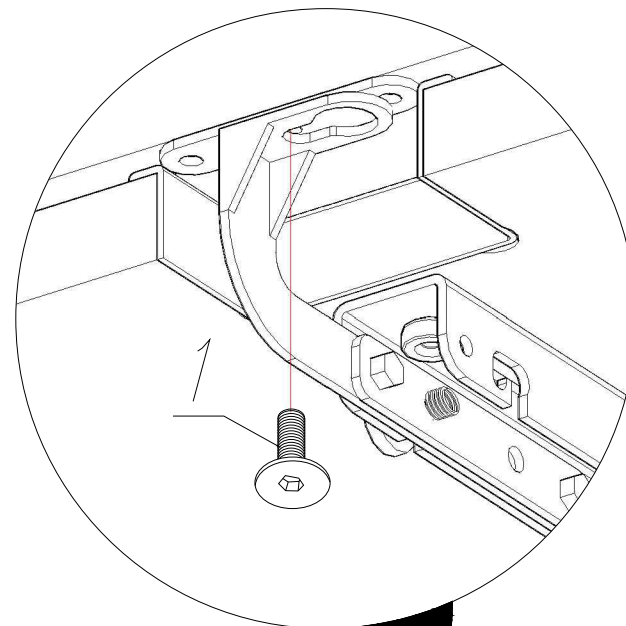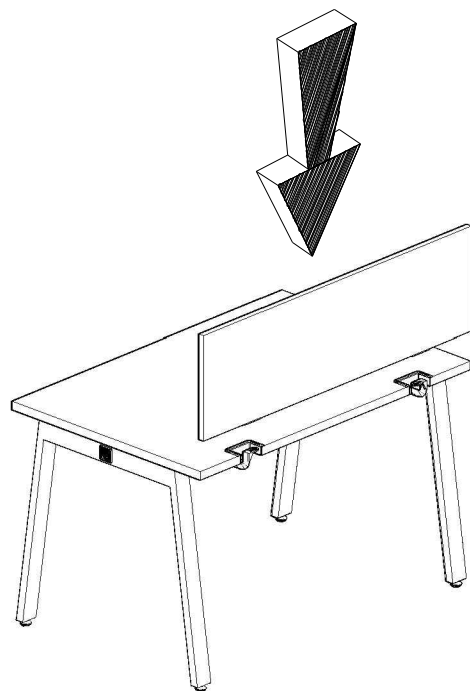


D



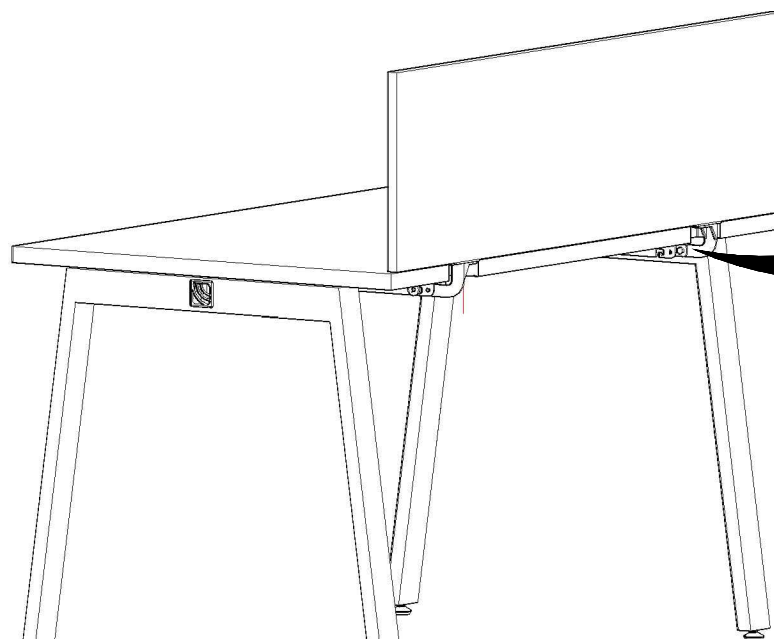



1  M8	2  M8x30	3  M8x35	 	ZUT_OGI_DESK
--	---	---	---	-----------------------

A

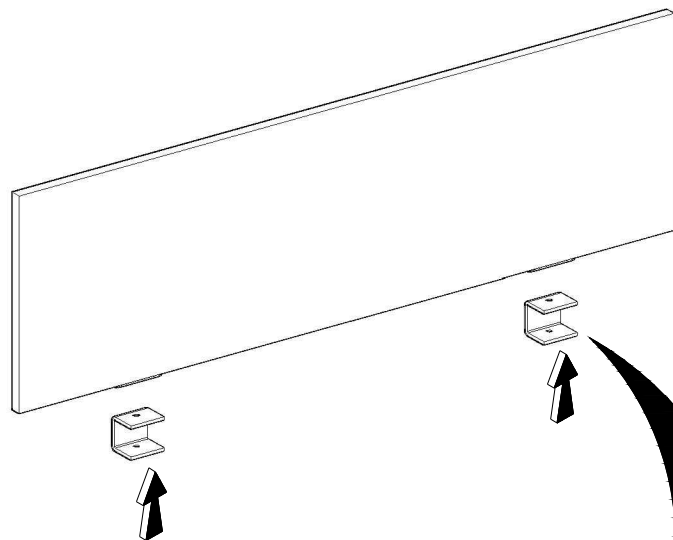


B

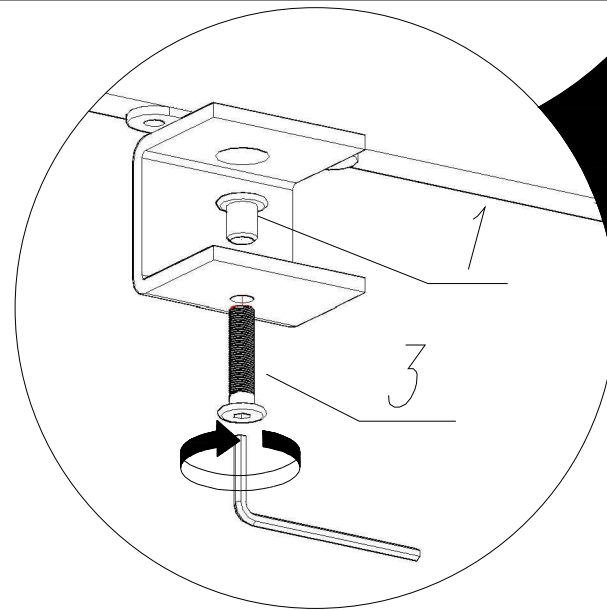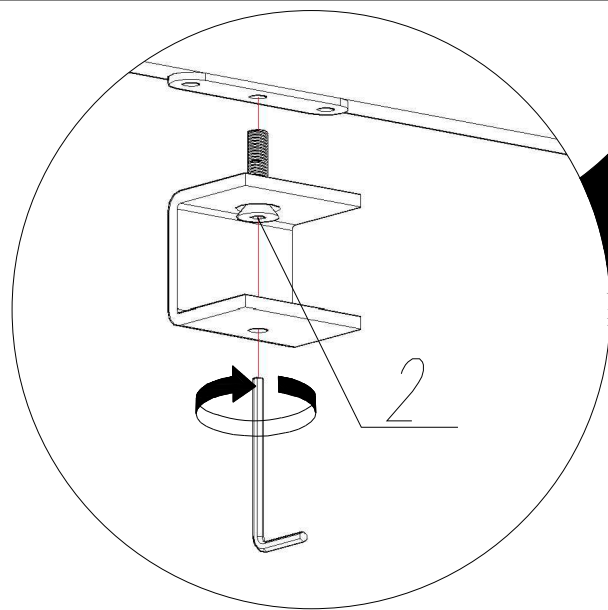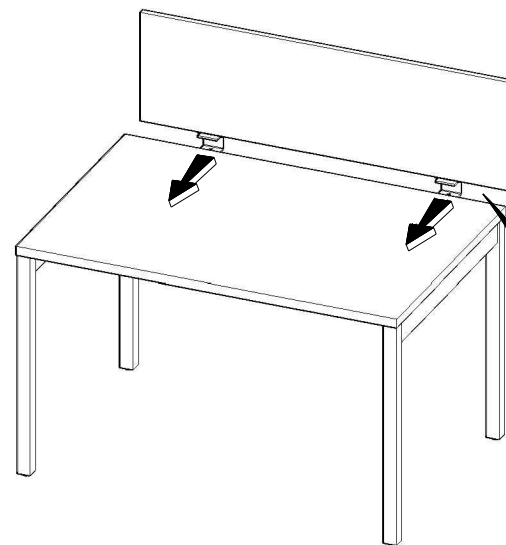

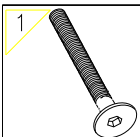

M8x60

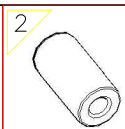


H35




ZUT_YAN_BENCH




A

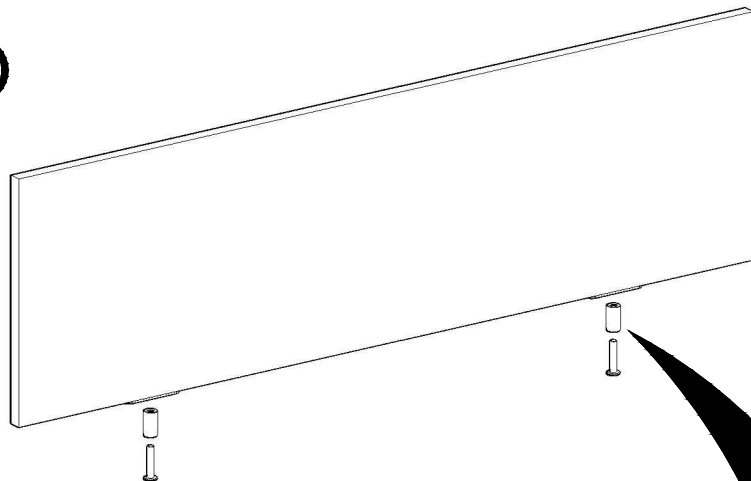


B

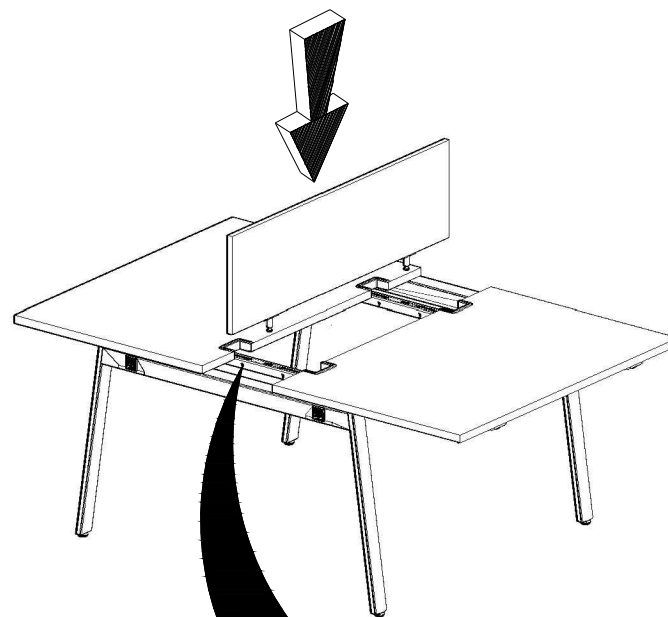


C

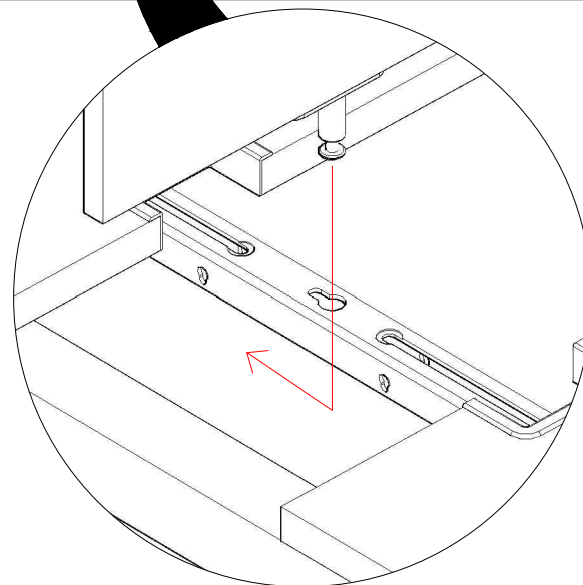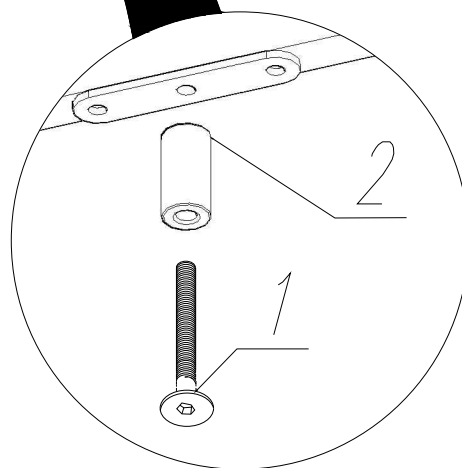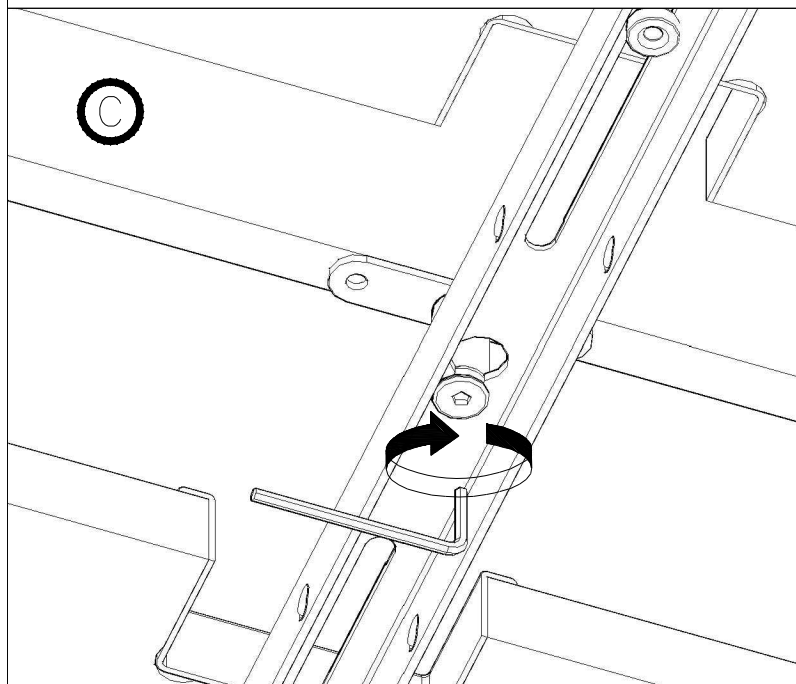





Ø5x17

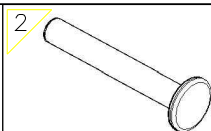

M8x60




ZUT_OGI_BENCH

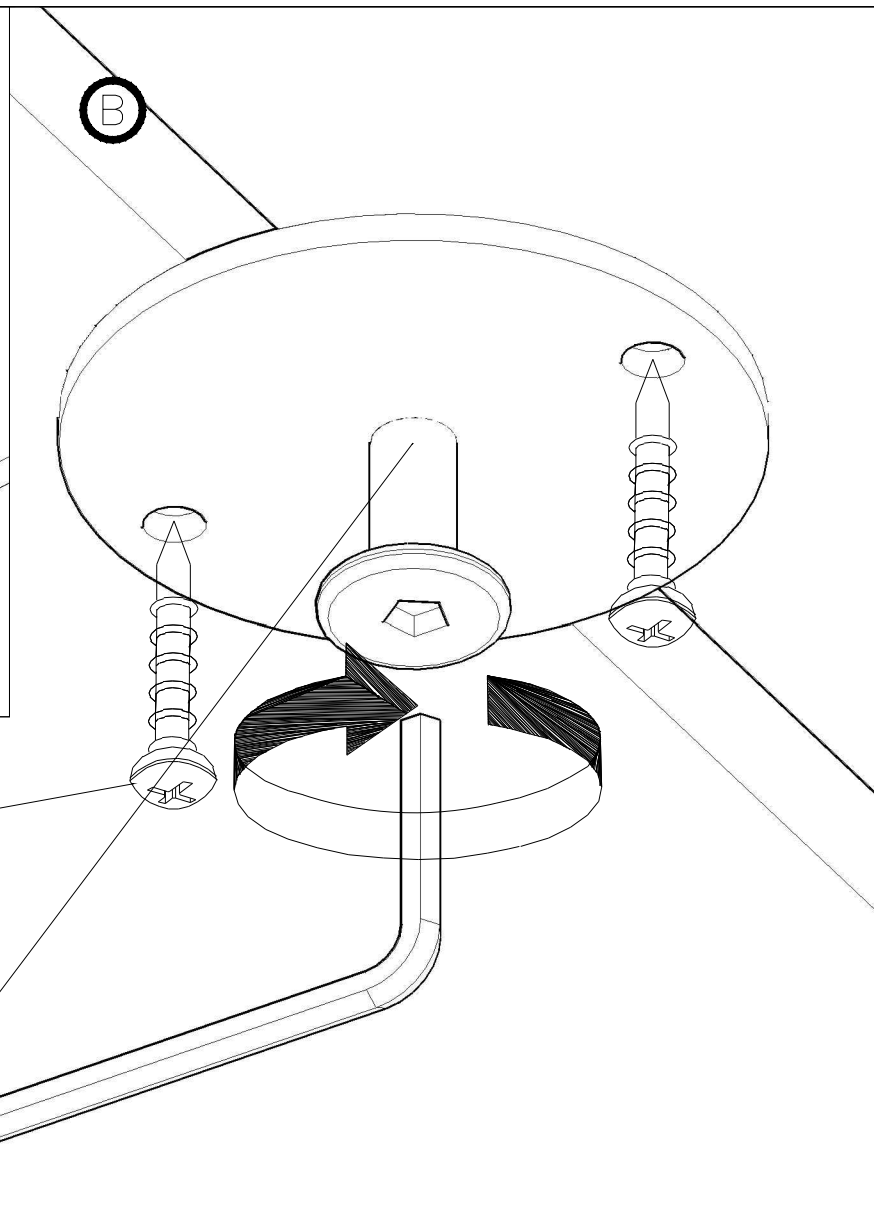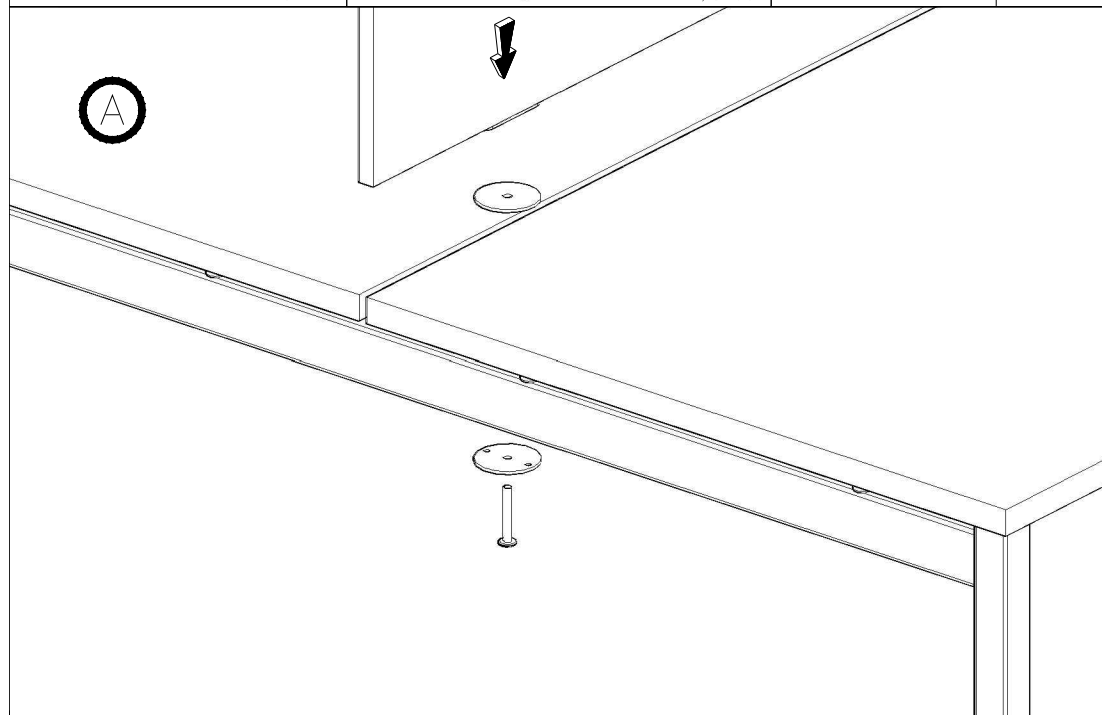

Assembling instruction – TWIN panels

1. Stick two bumpers onto rear side of your accessories in lower corners

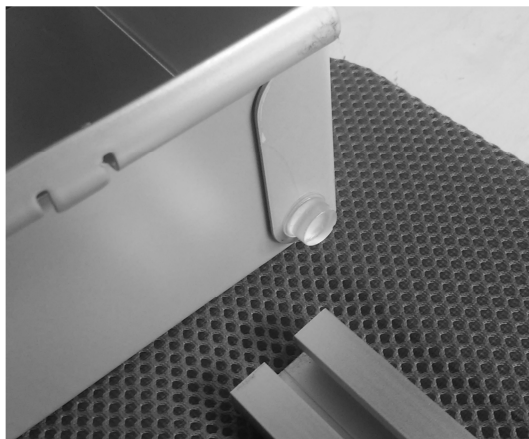

2. Hang your accessories on panel TWIN

