

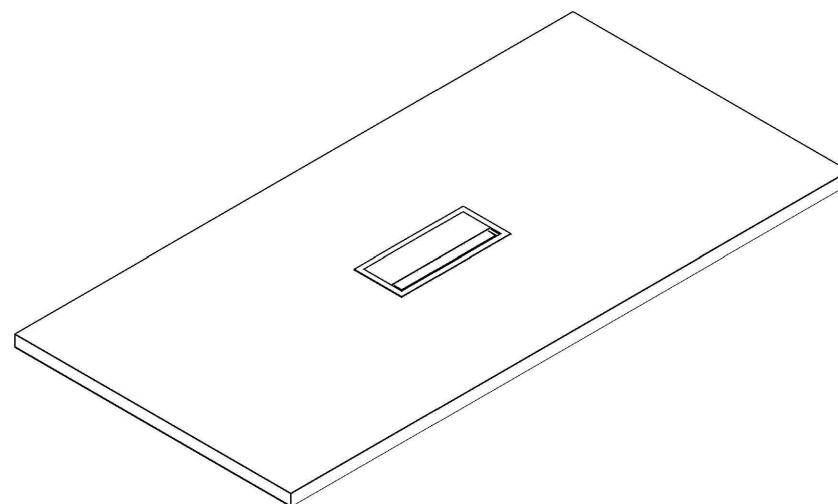


1

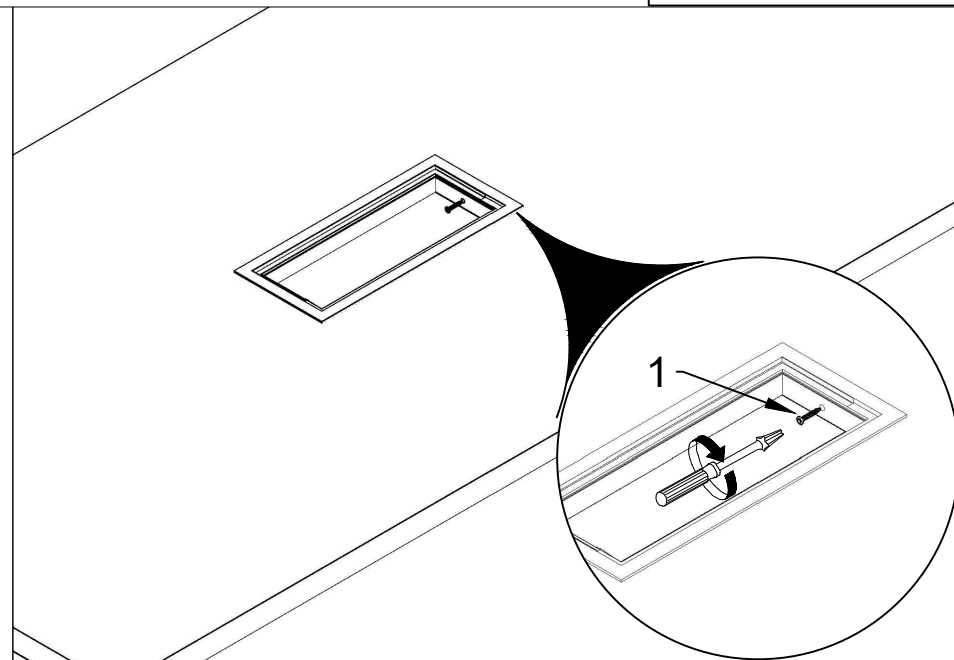







M05

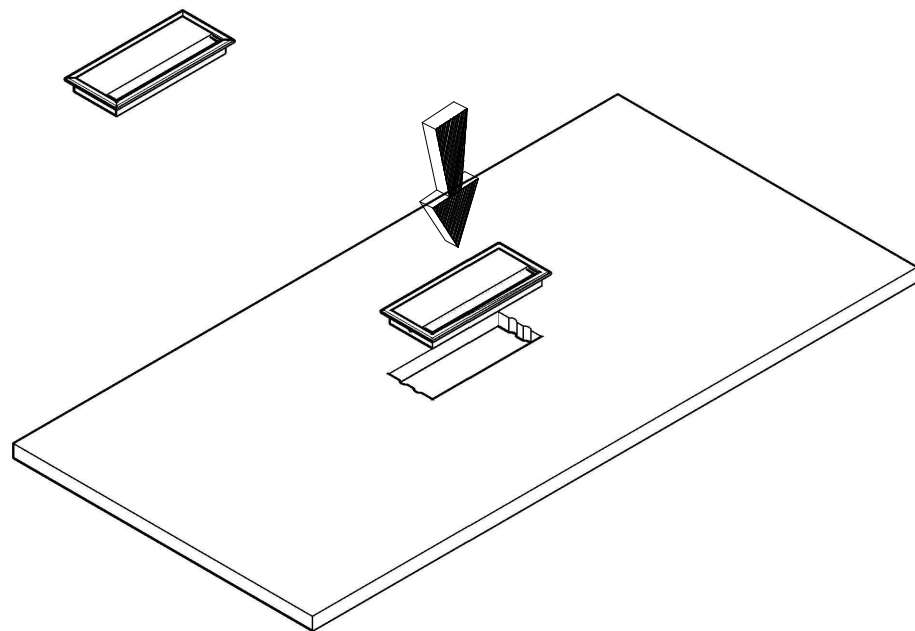

1









M04

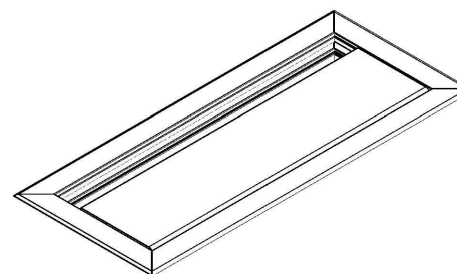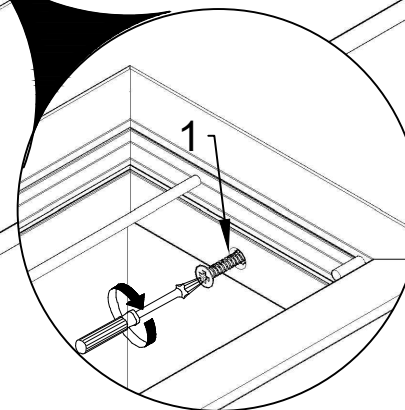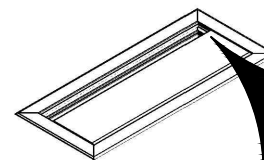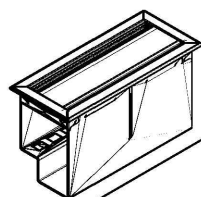

1



M04

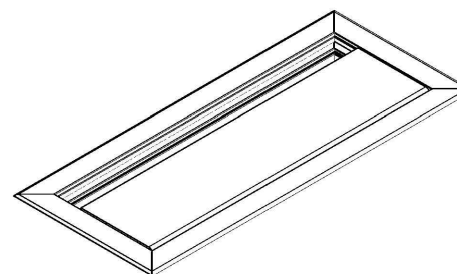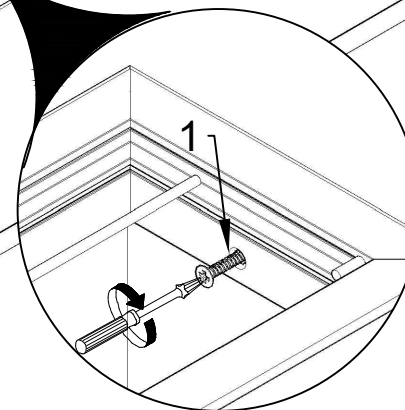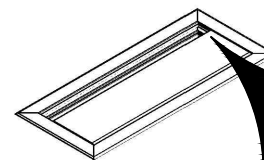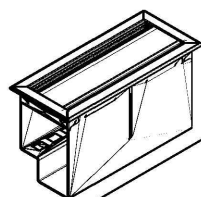


1  
Ø5x20




# OGI BENCH


A

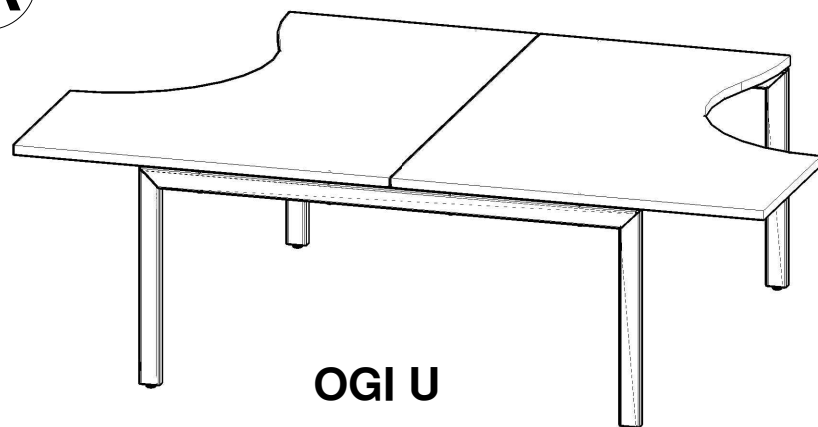


OGI U

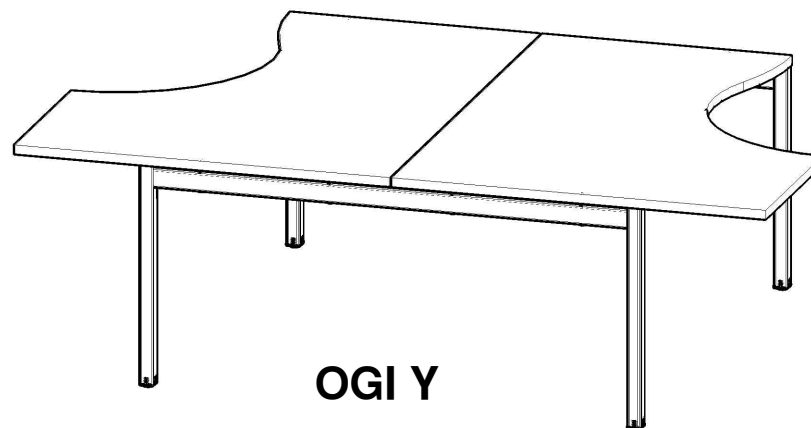


OGI Y

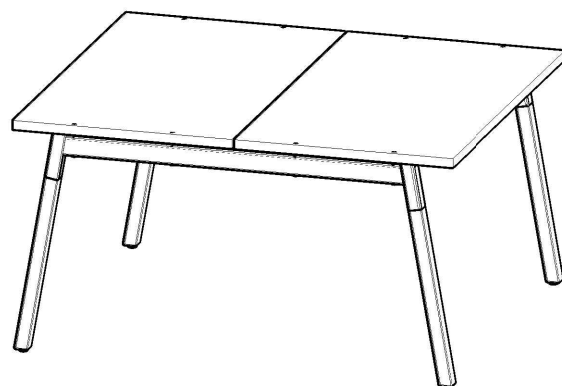

OGI W



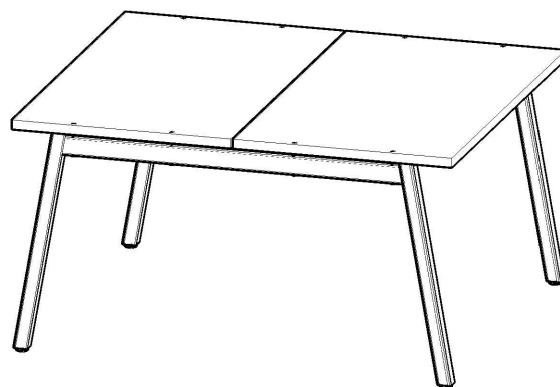


OGI M



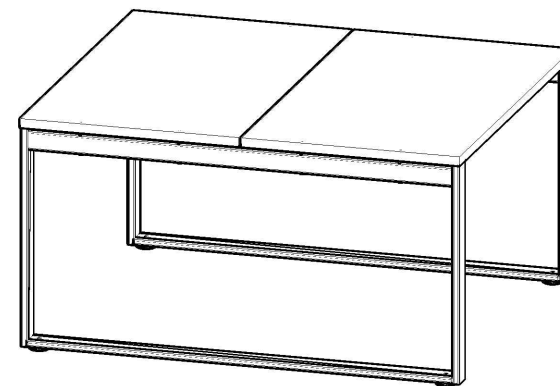


OGI Q


B

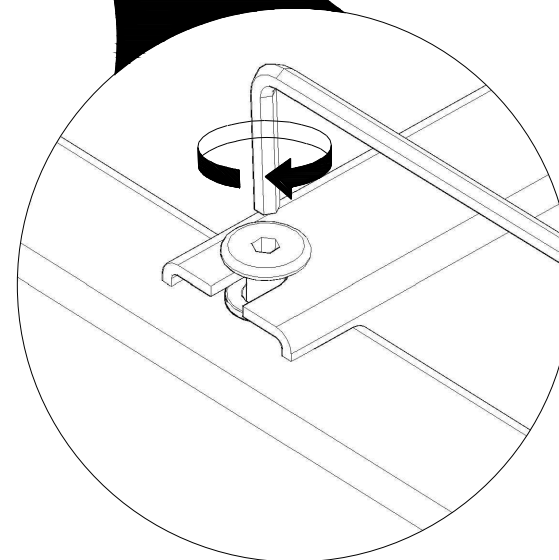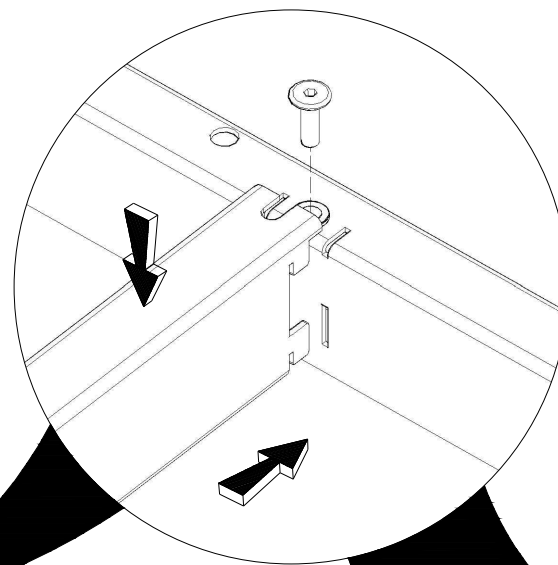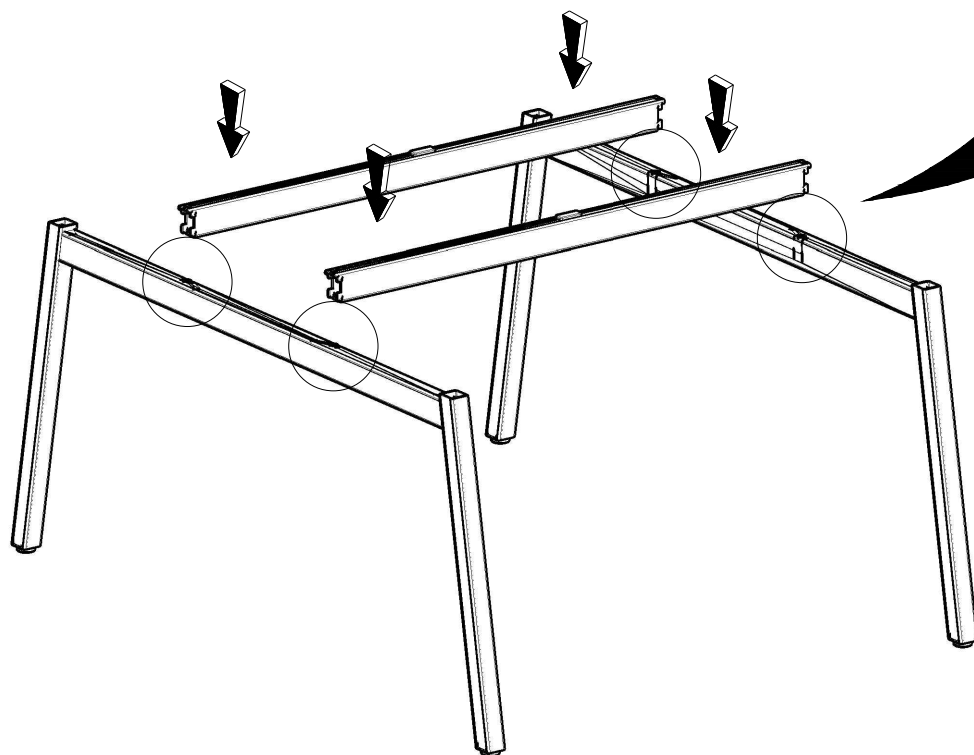




C

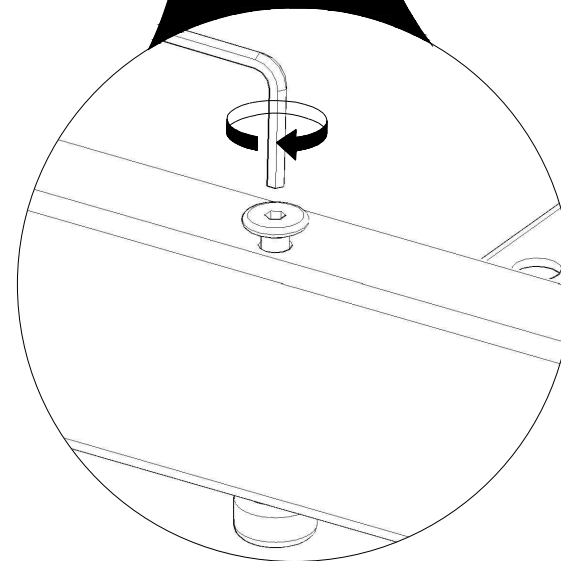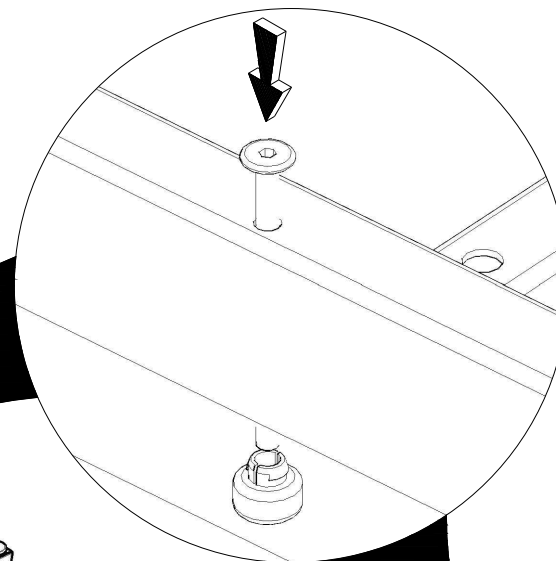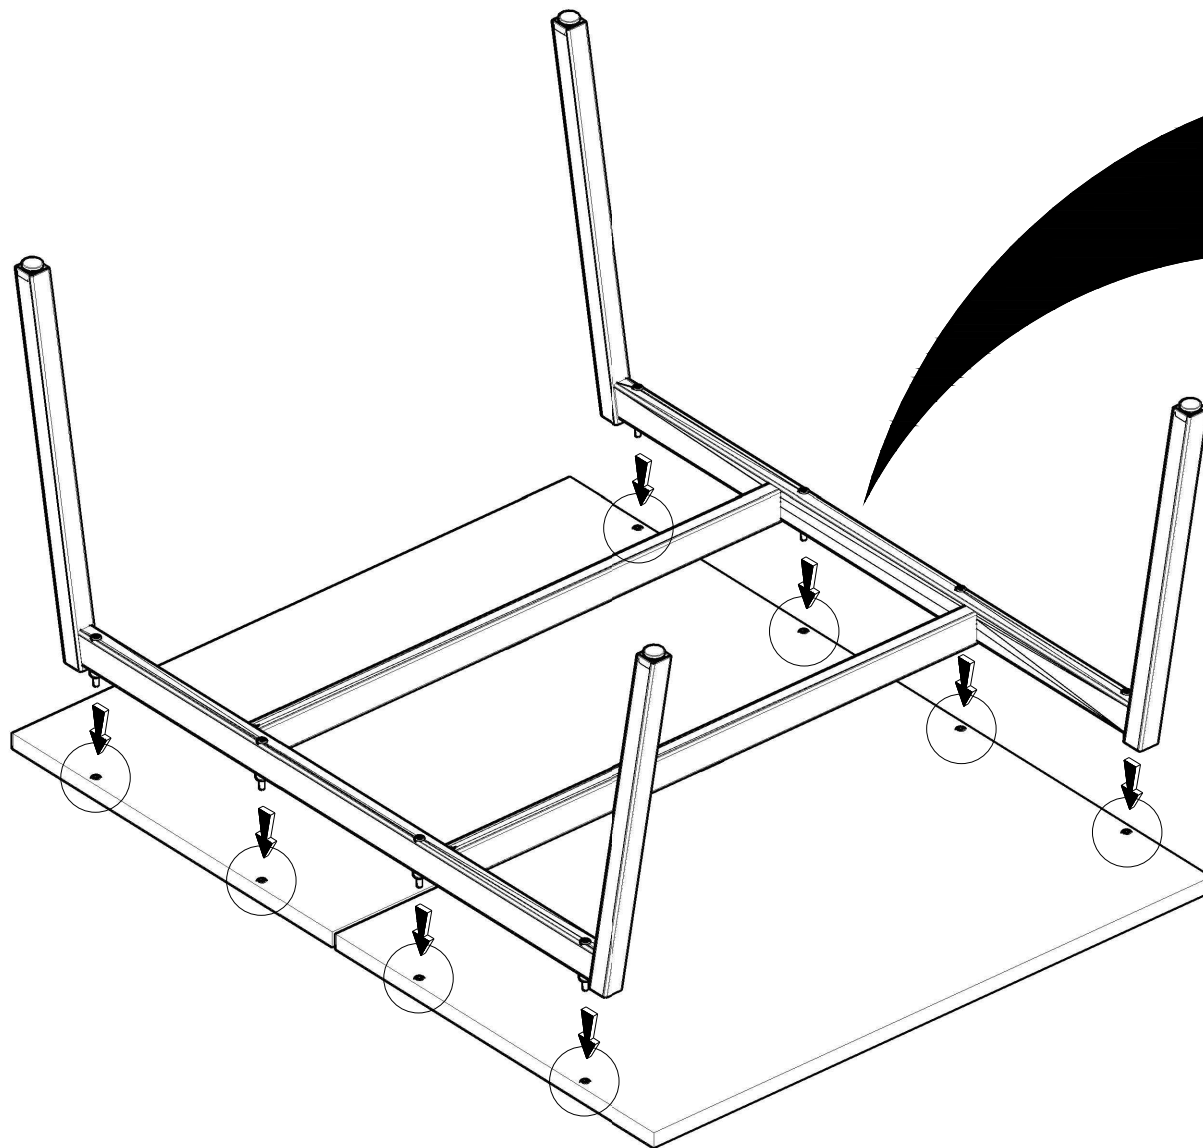

D

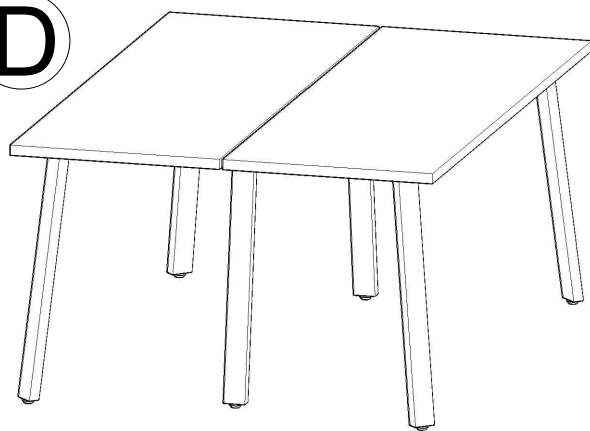

OGI A

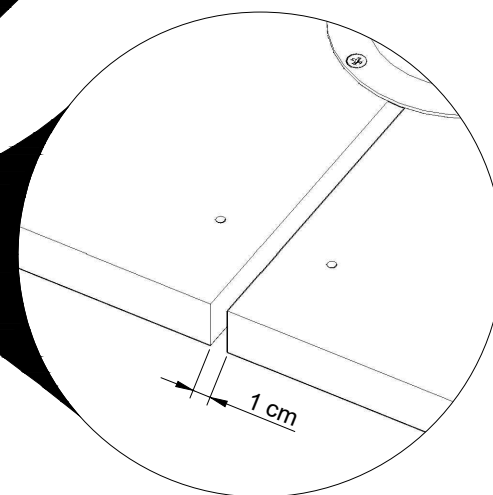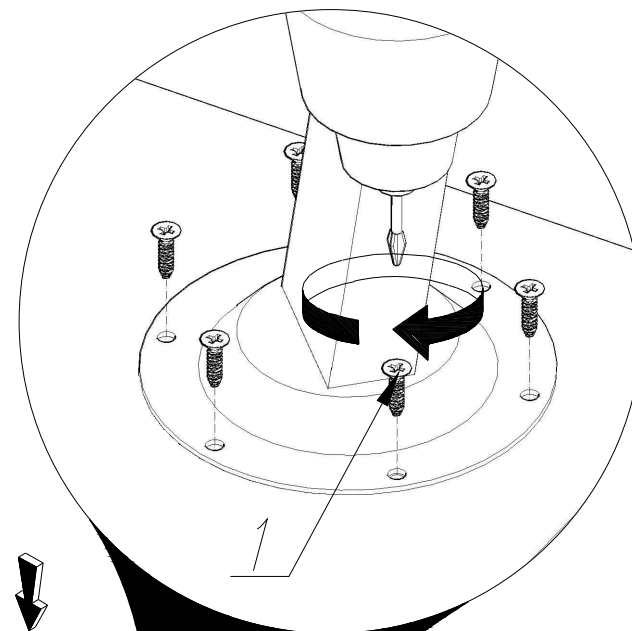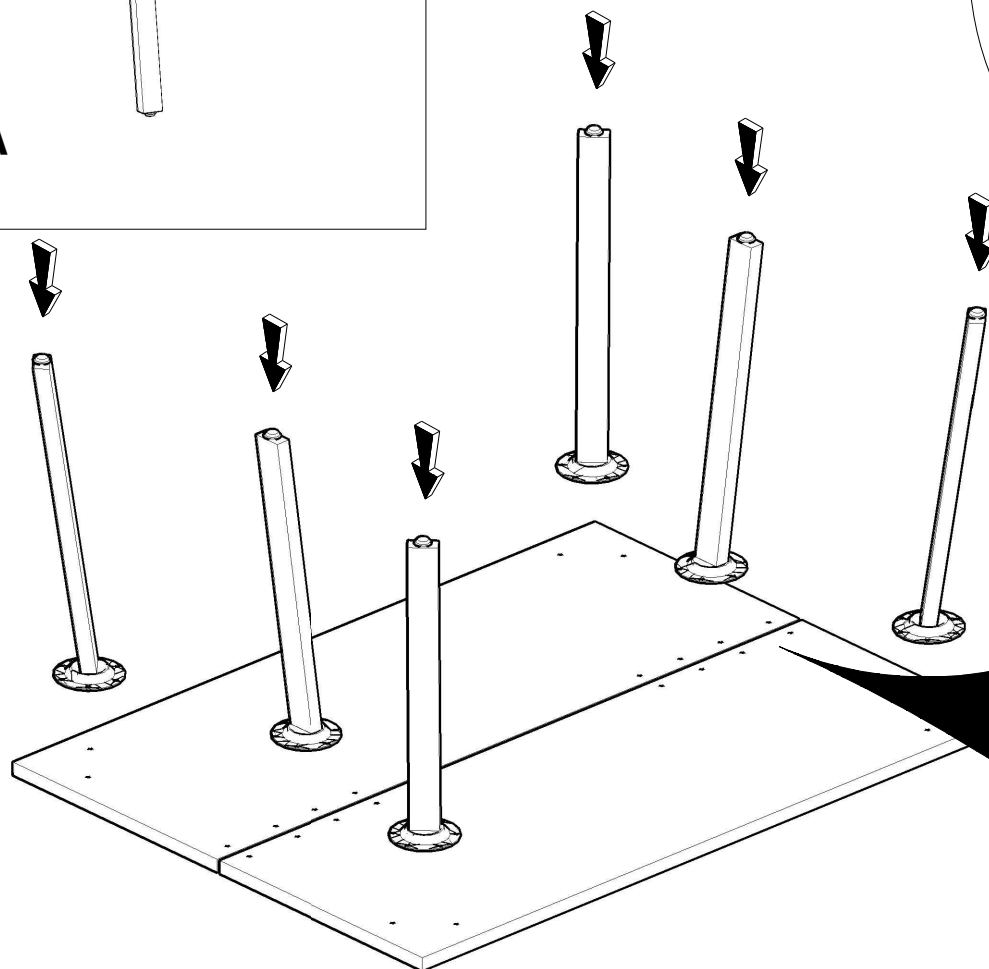




1  
Ø5x20




## OGI ATTACHMENT

A


OGI M  
OGI W  
OGI Q  
OGI U  
OGI Y

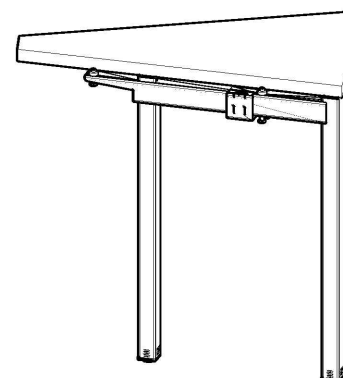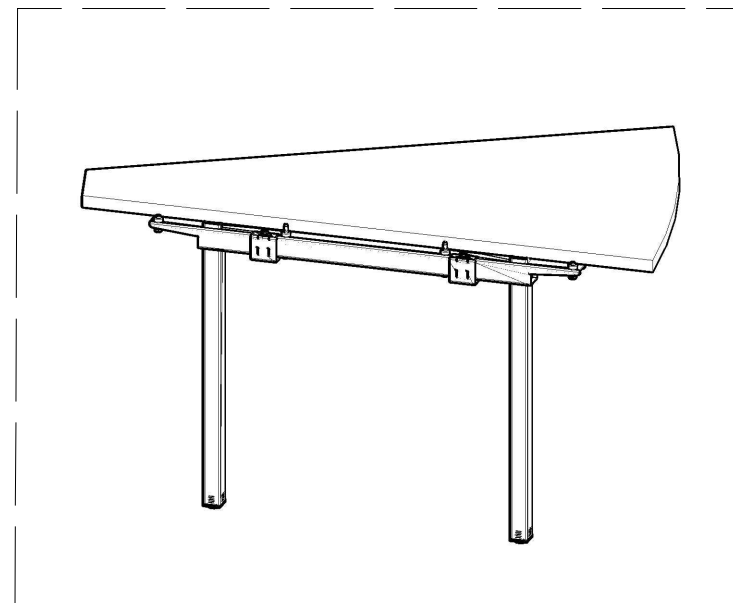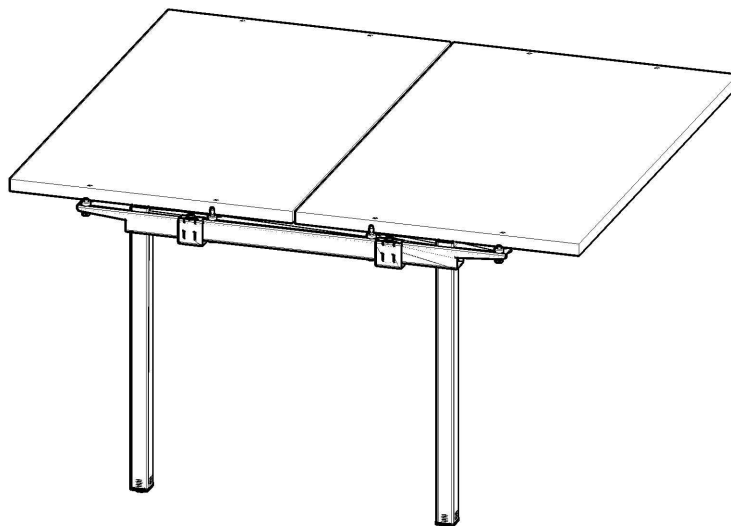




B

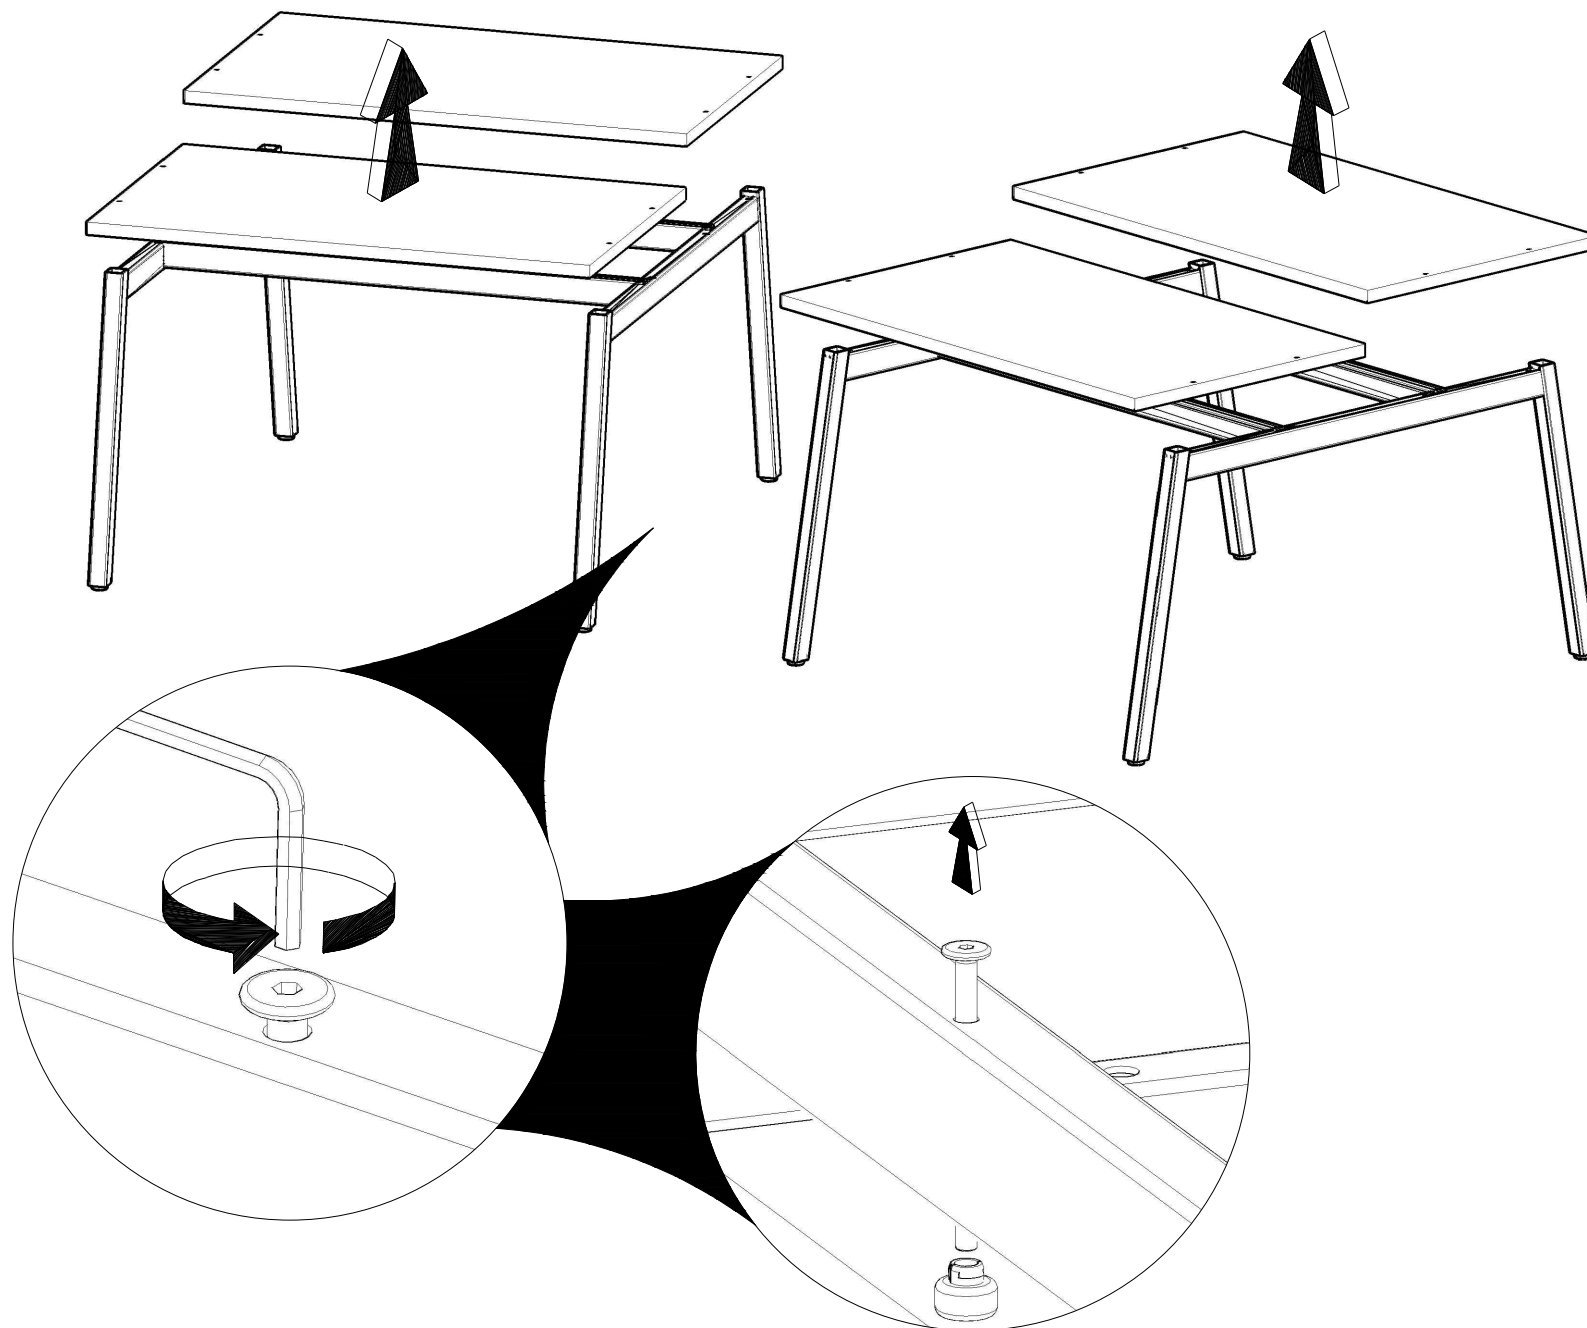


C

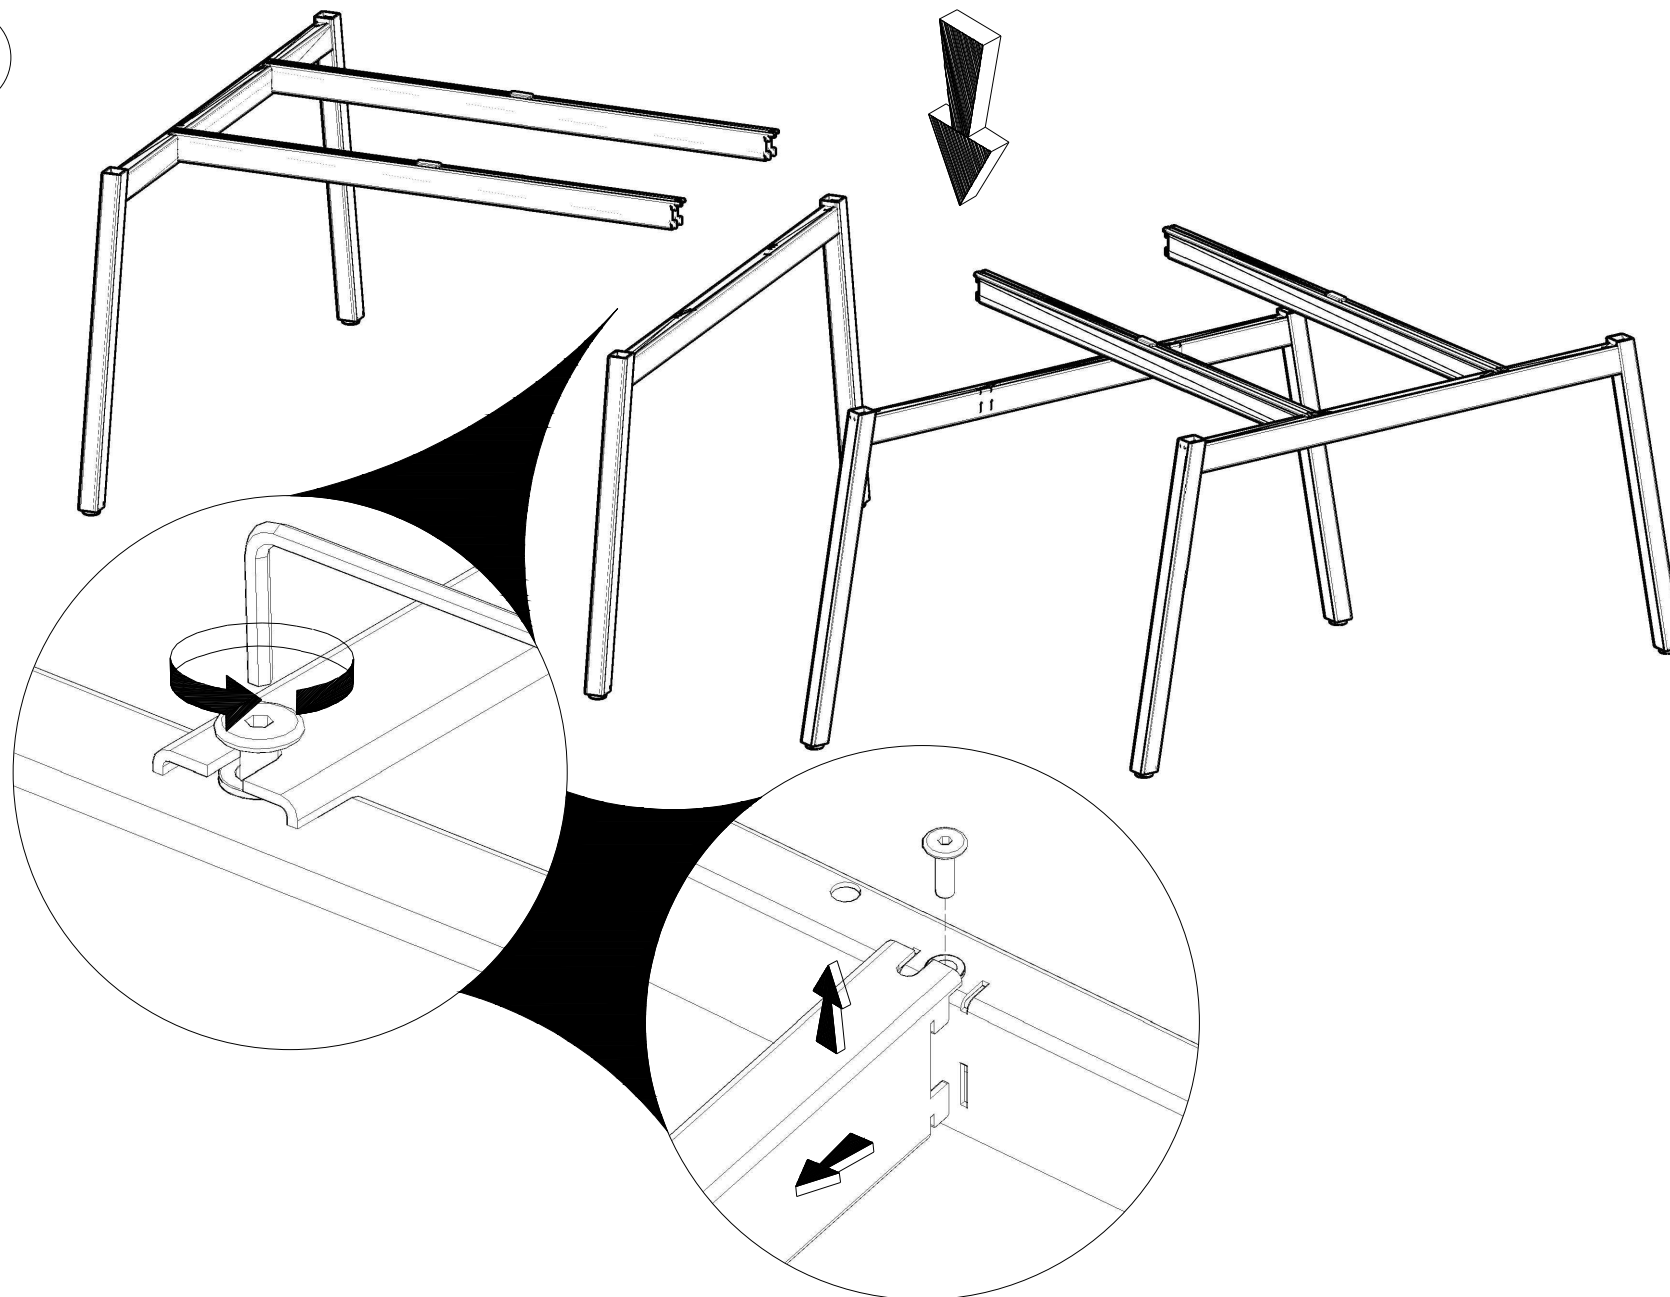


D

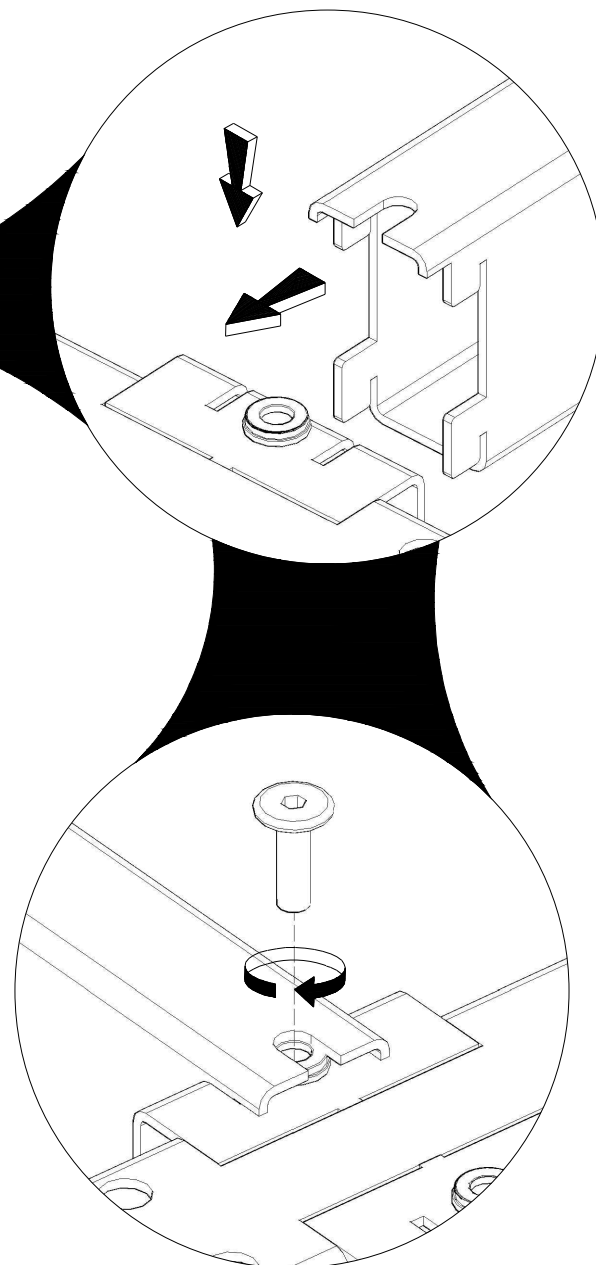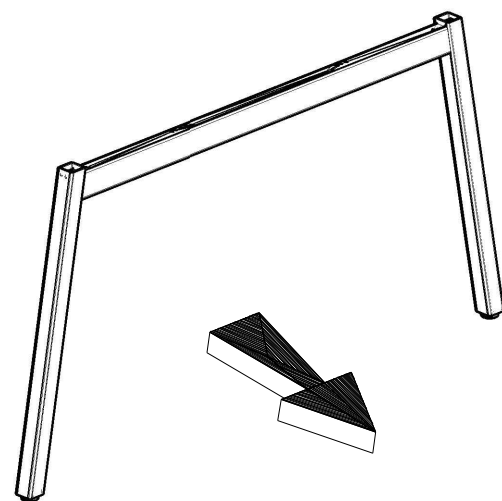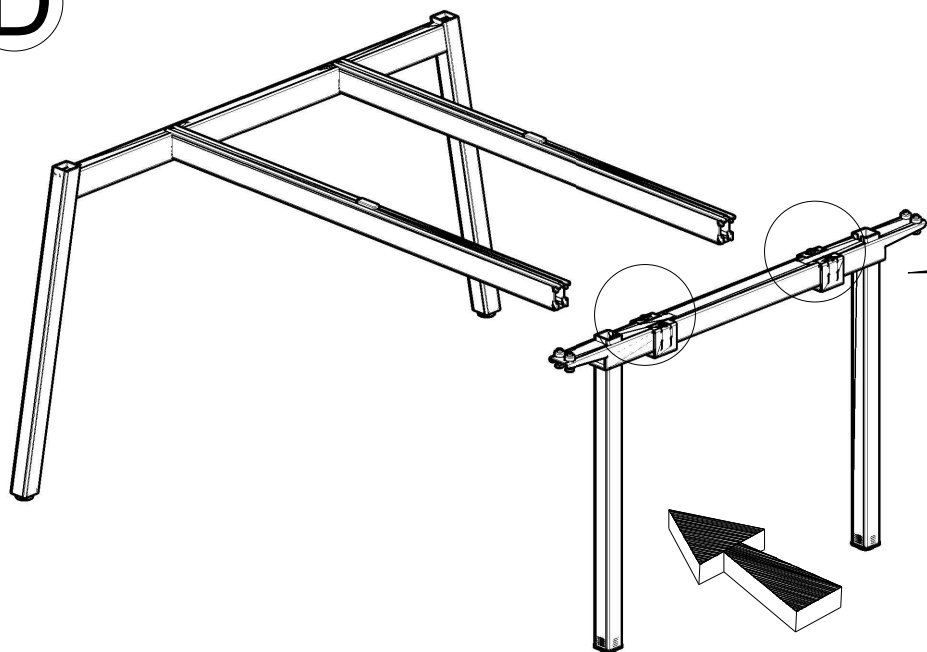



E

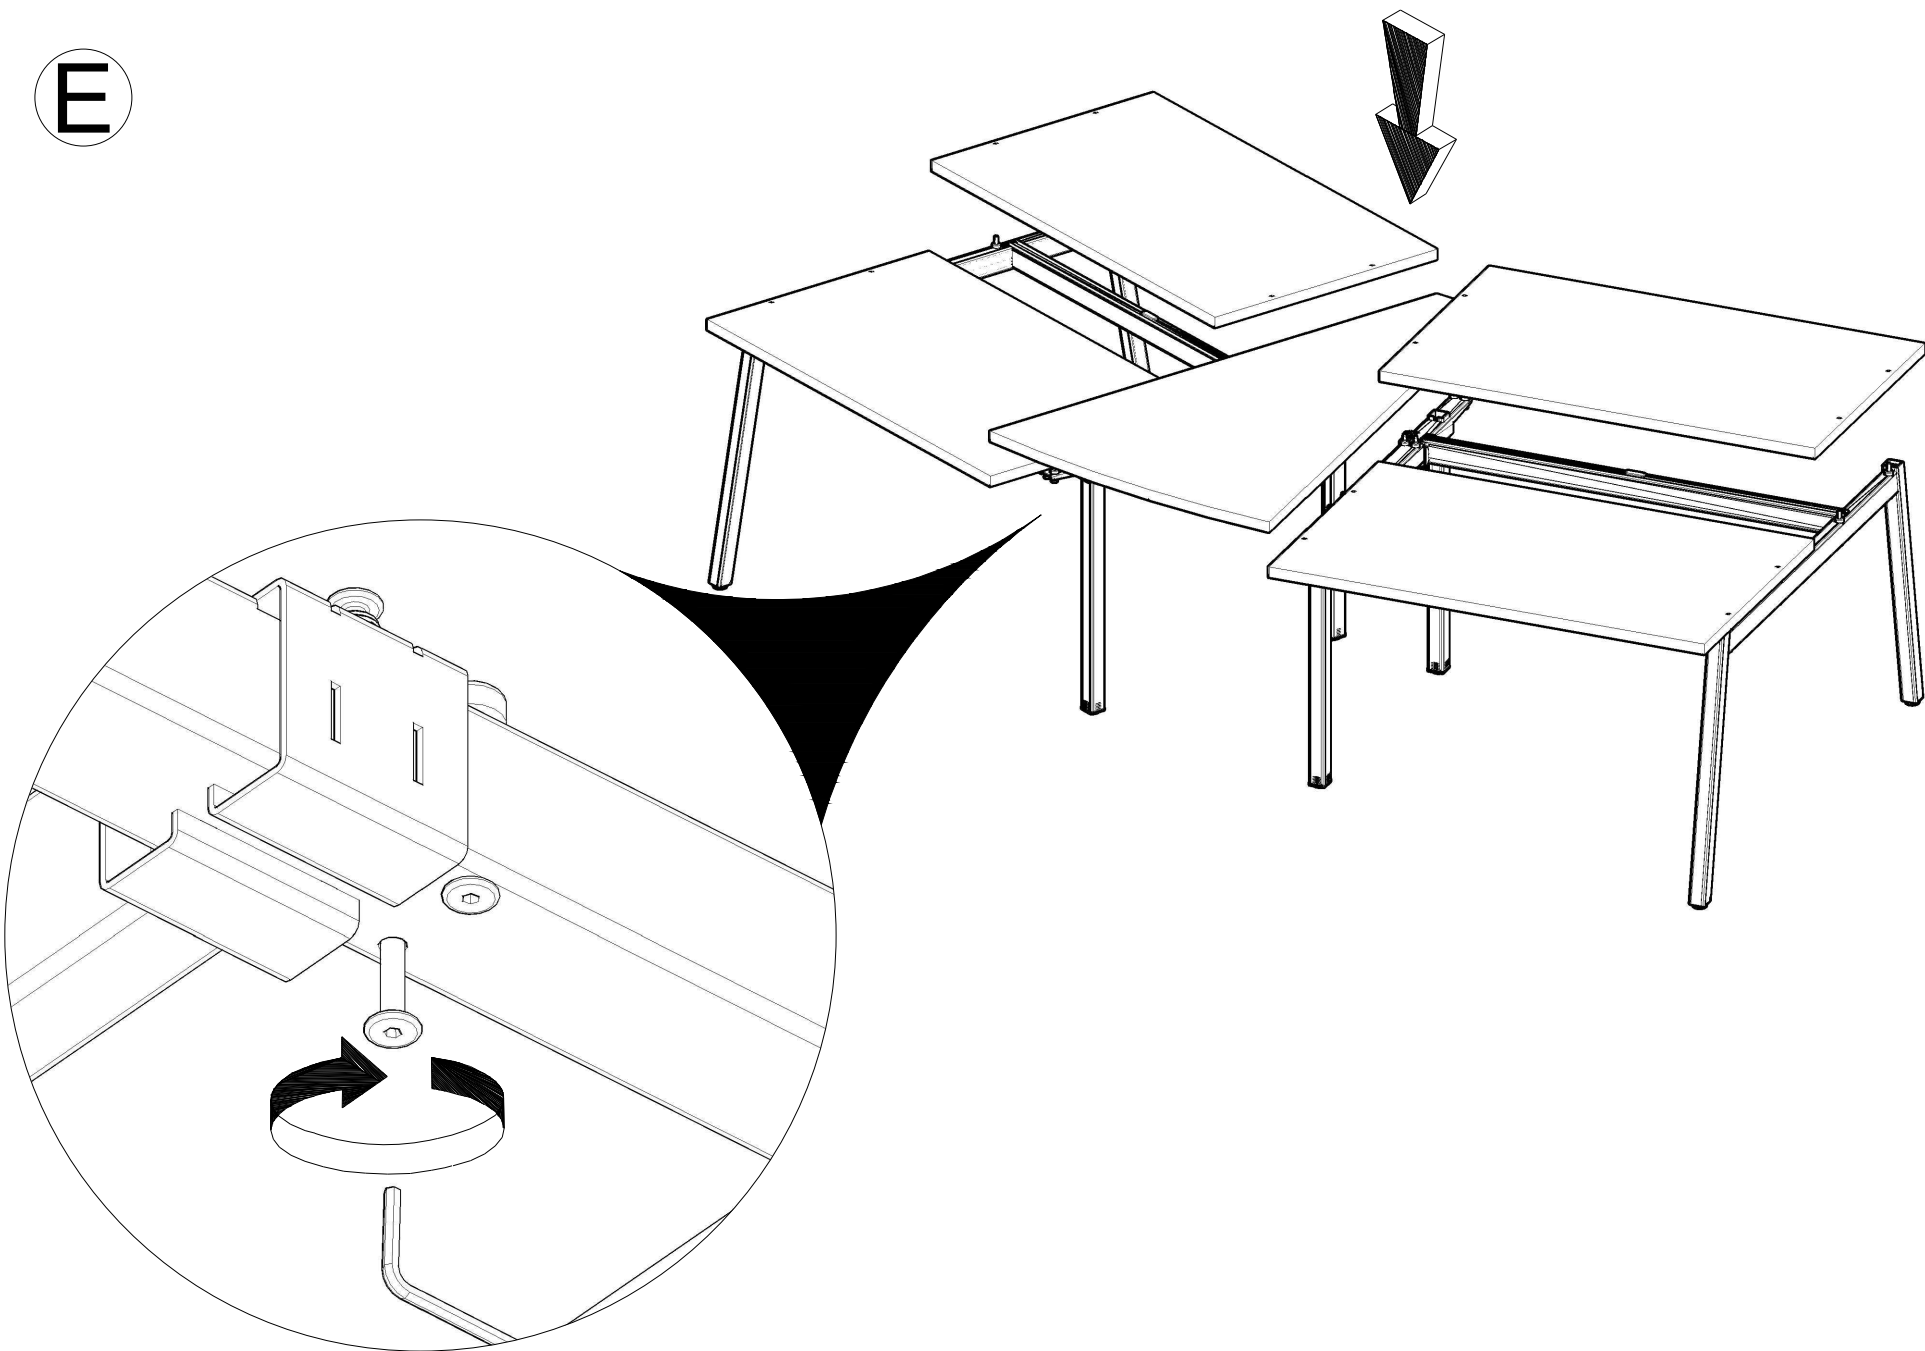

F

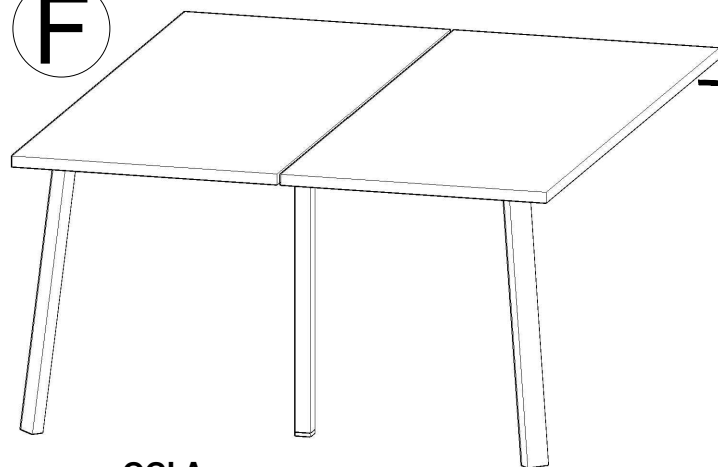

OGI A

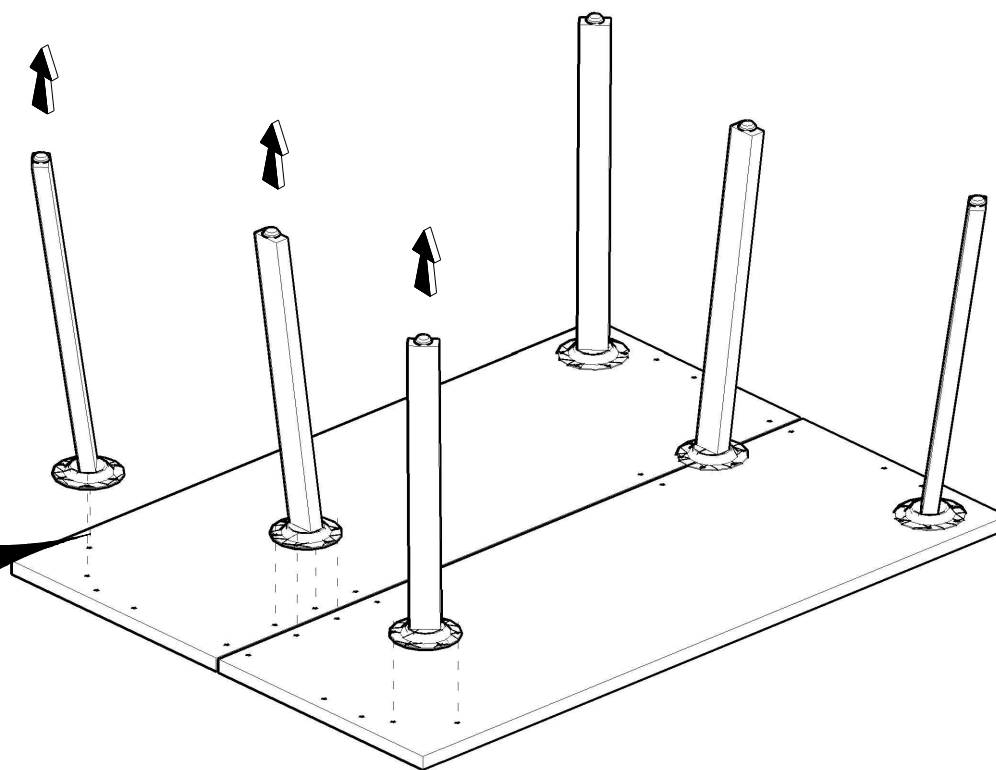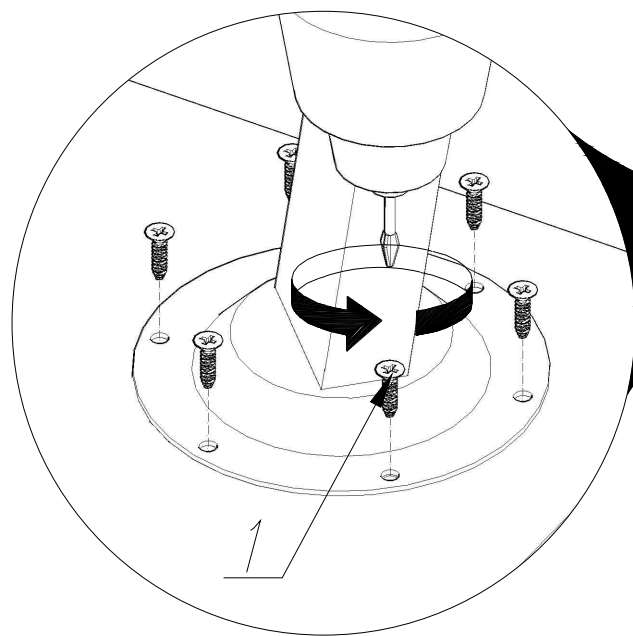

G

