





E40

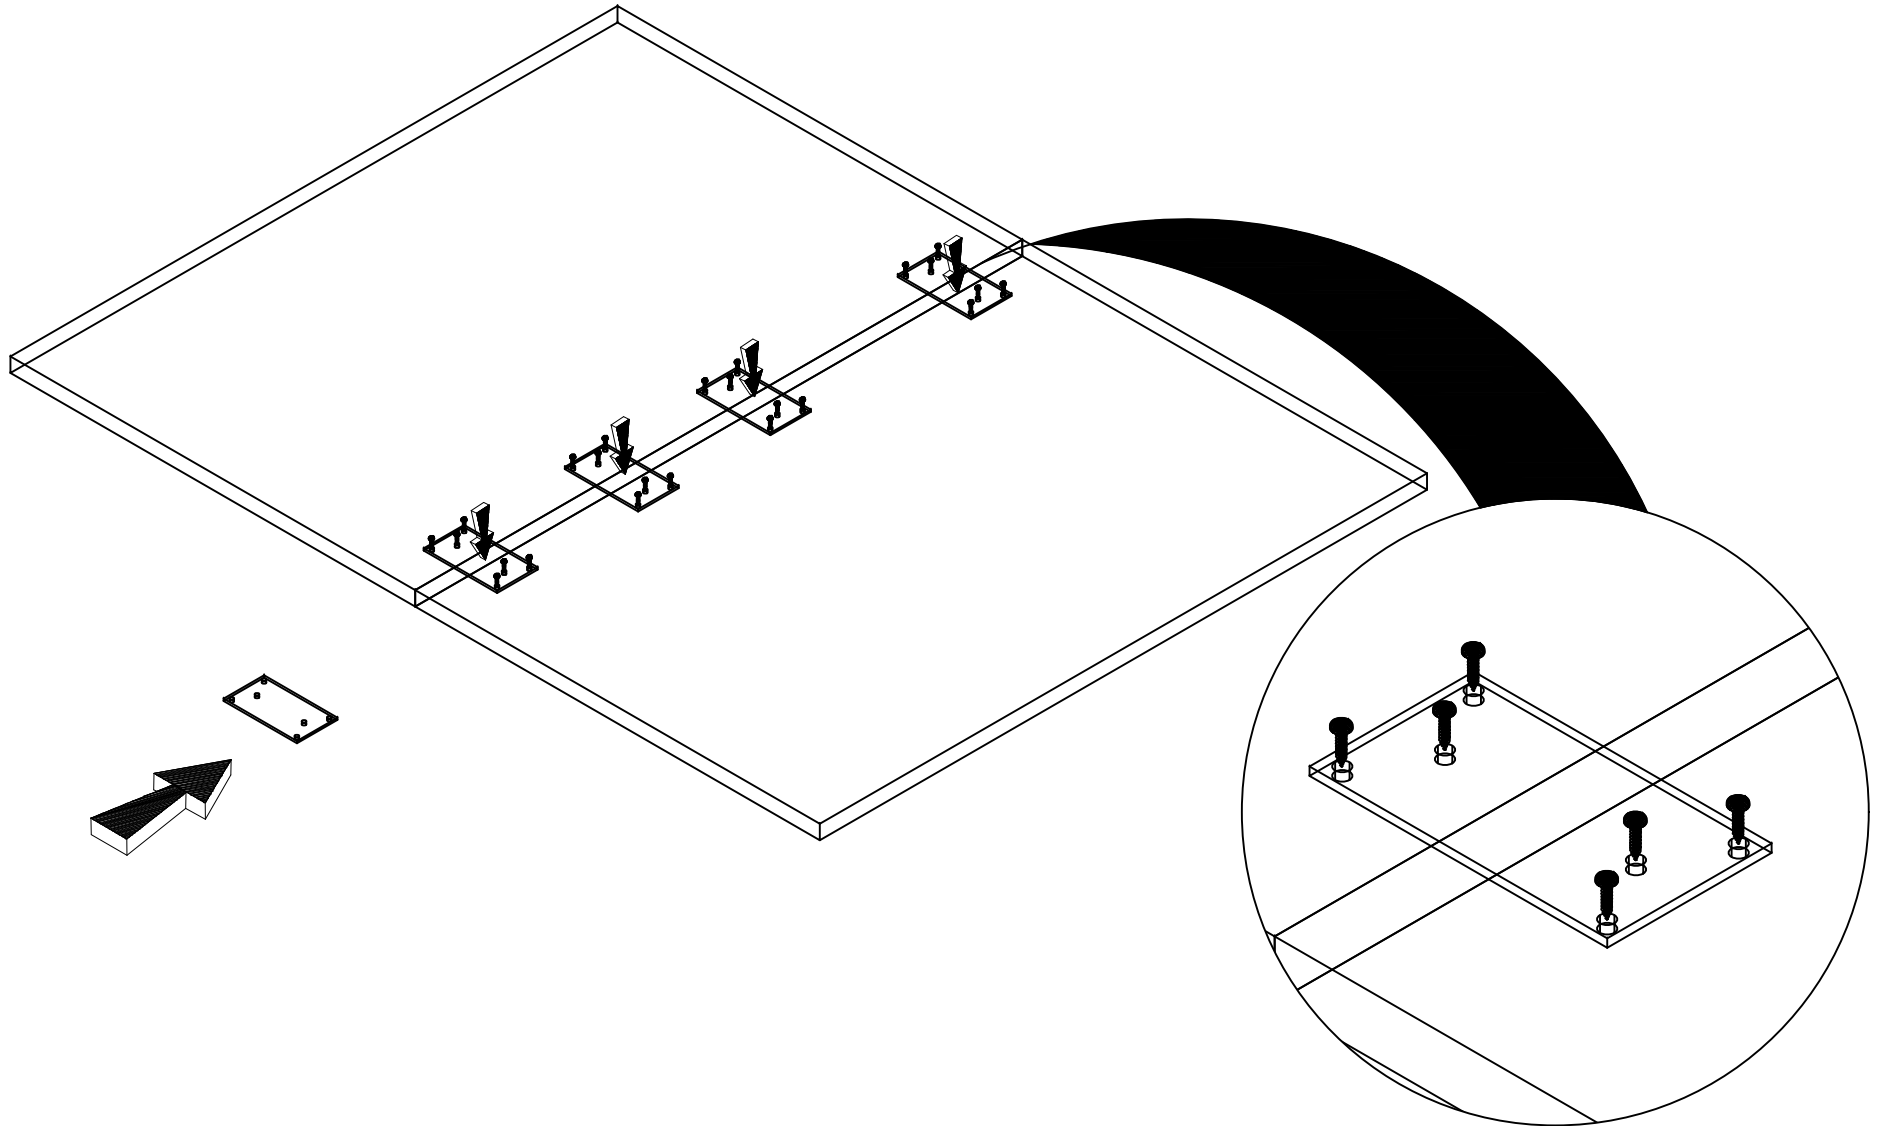

1









M05

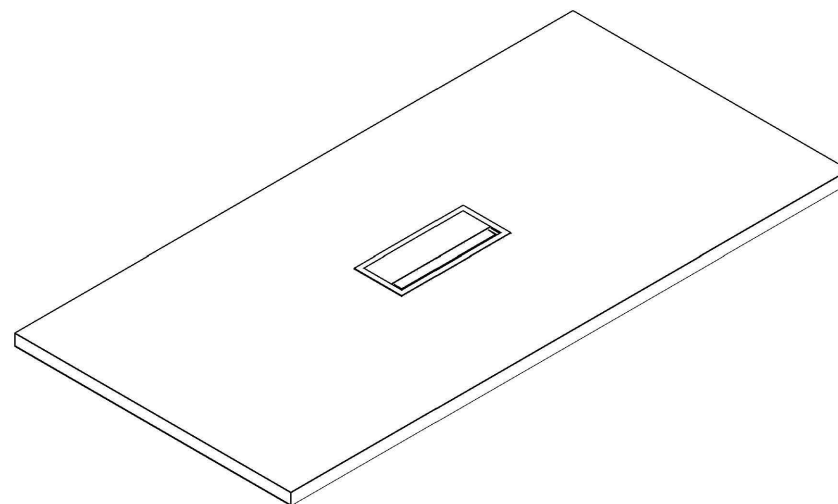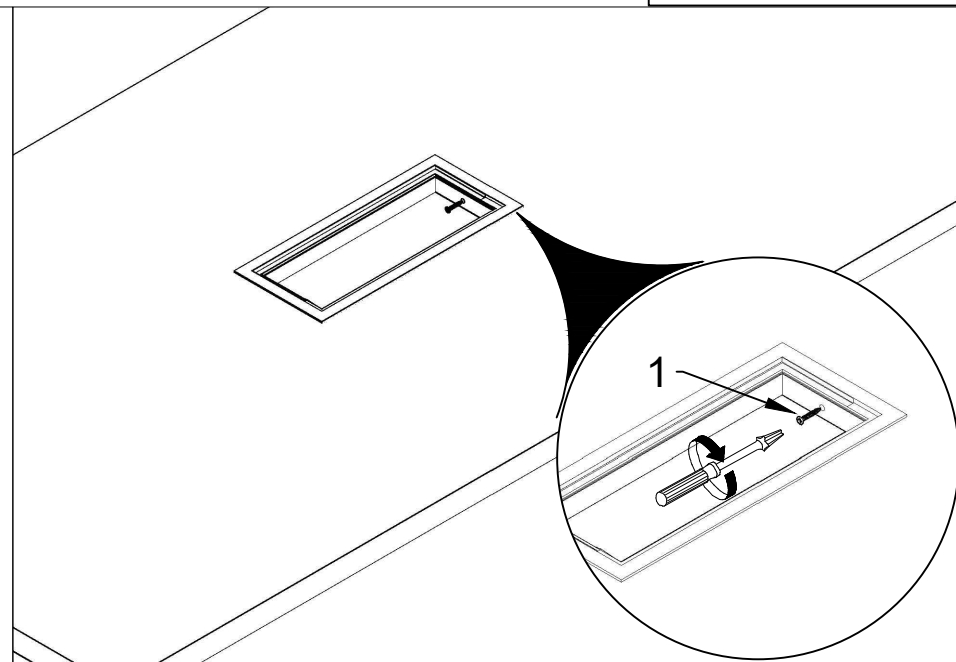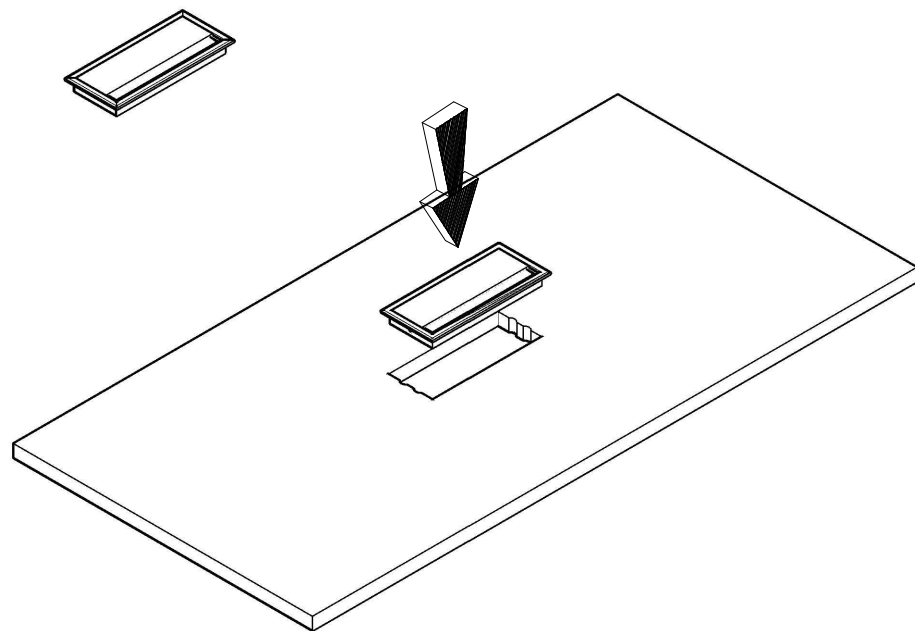

1









M04

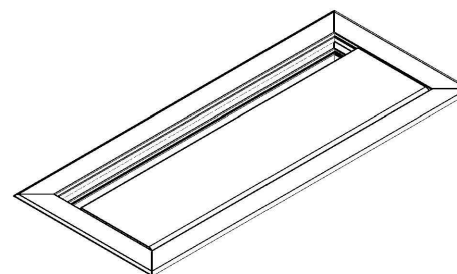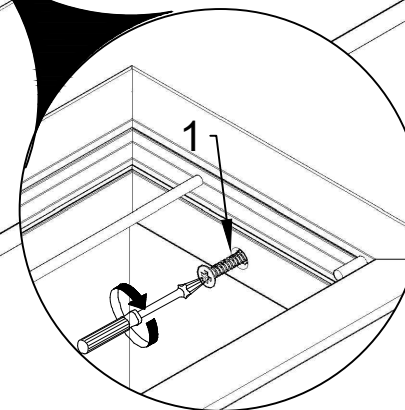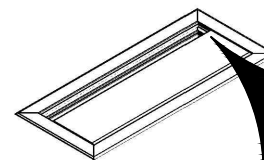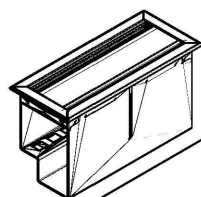

1



M04

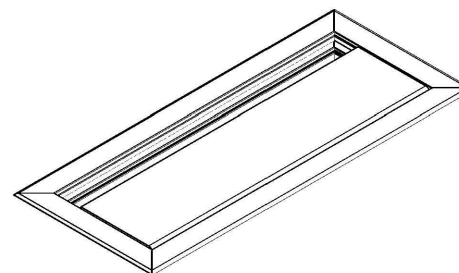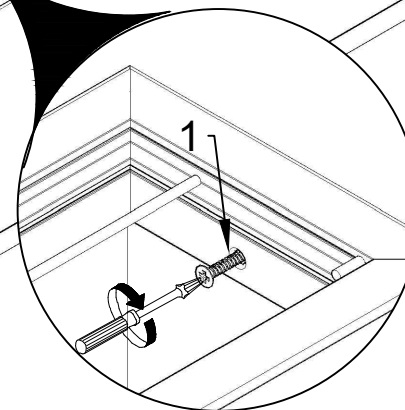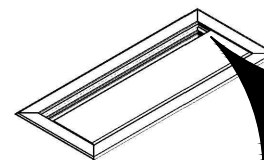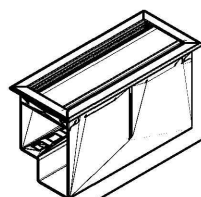


1
Ø5x20




OGI BENCH


A

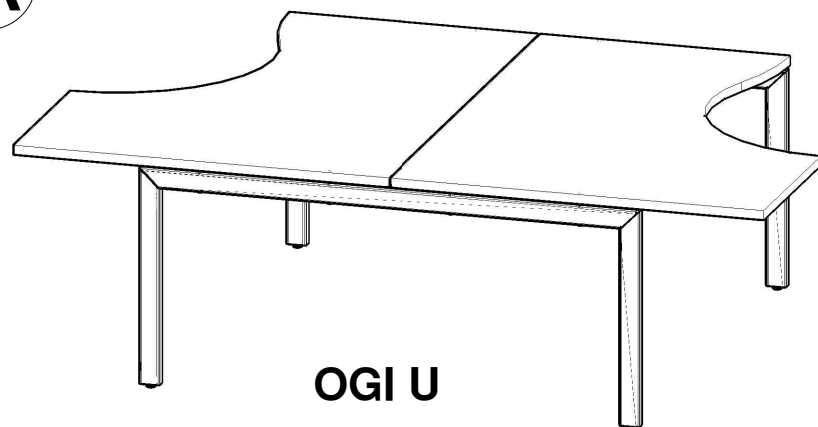


OGI U

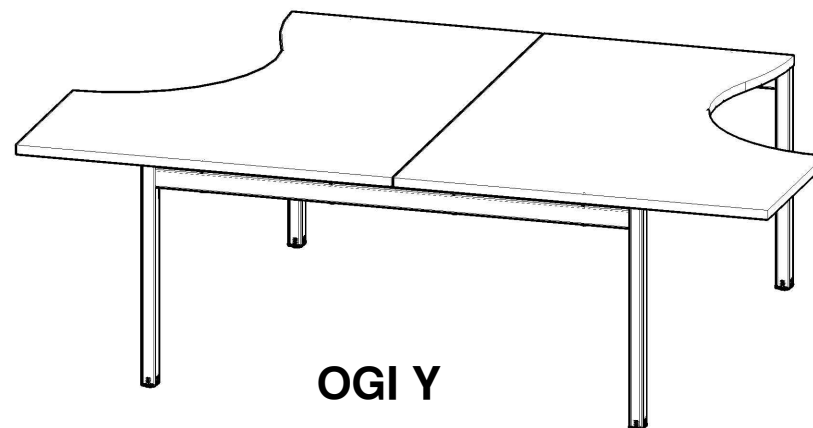


OGI Y

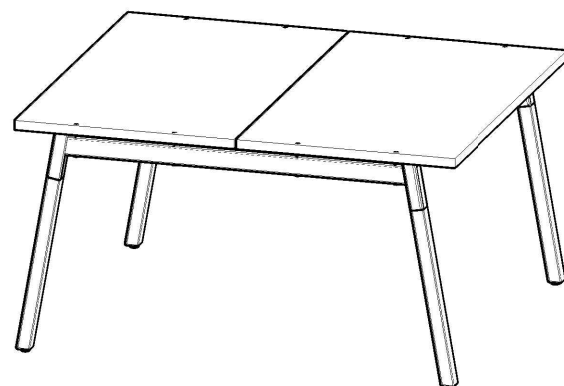

OGI W



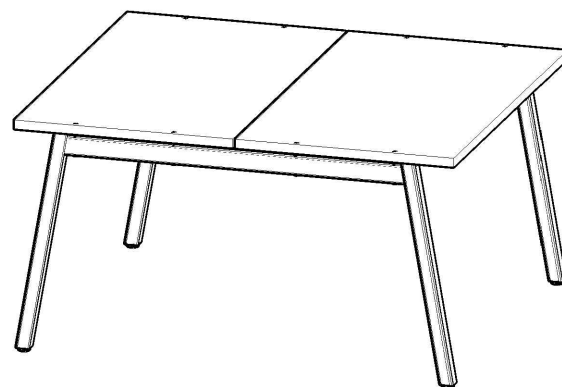


OGI M



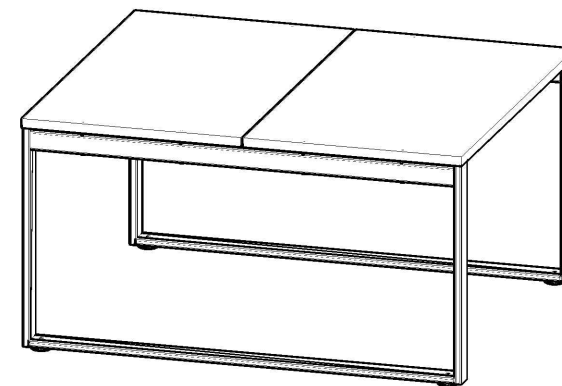


OGI Q


B

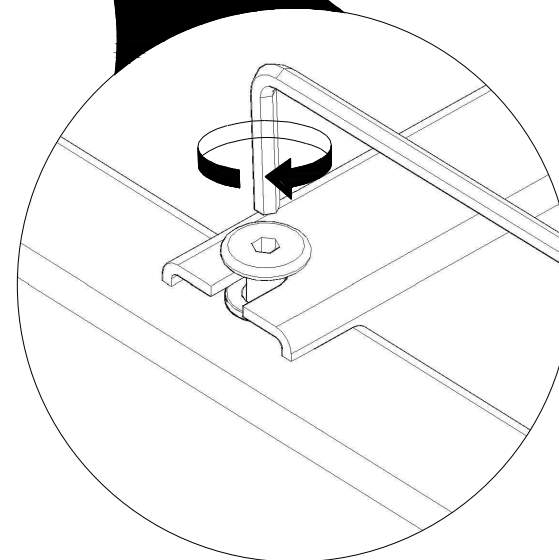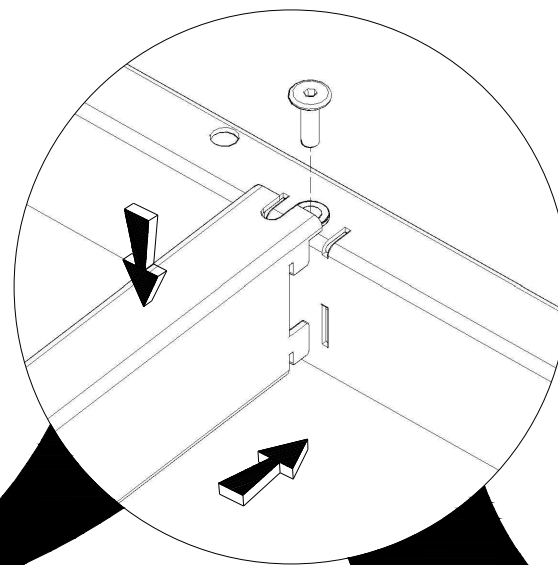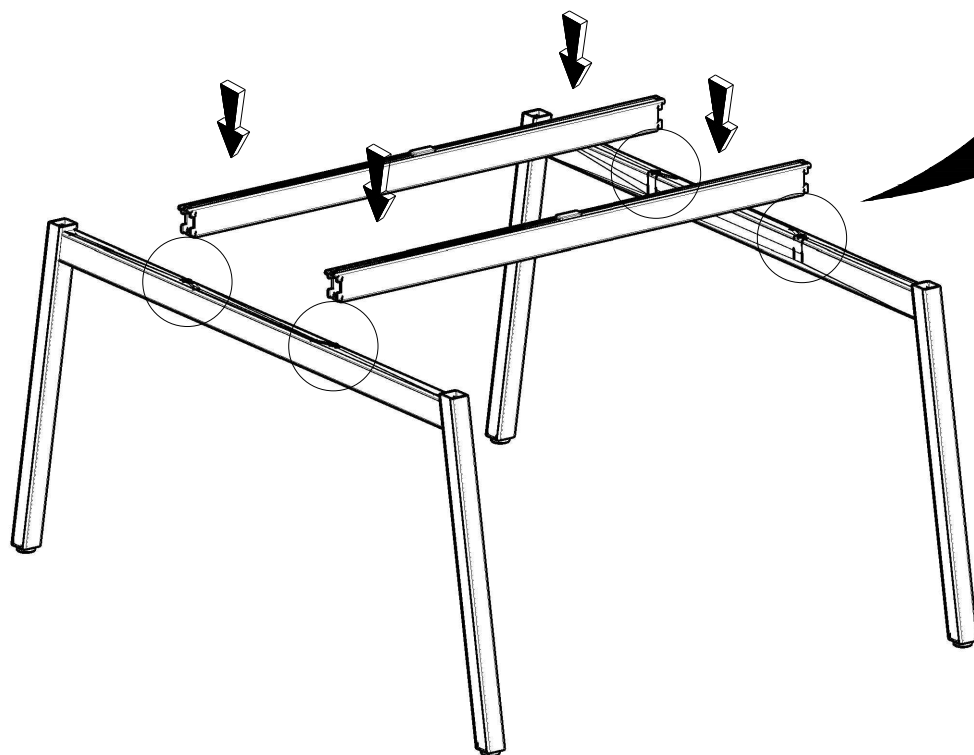




C

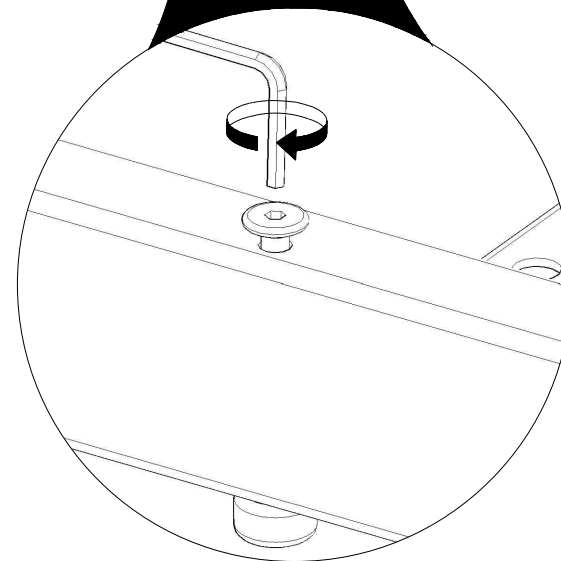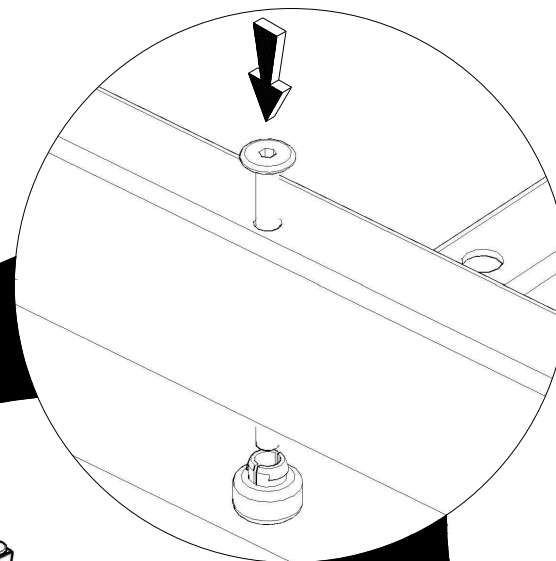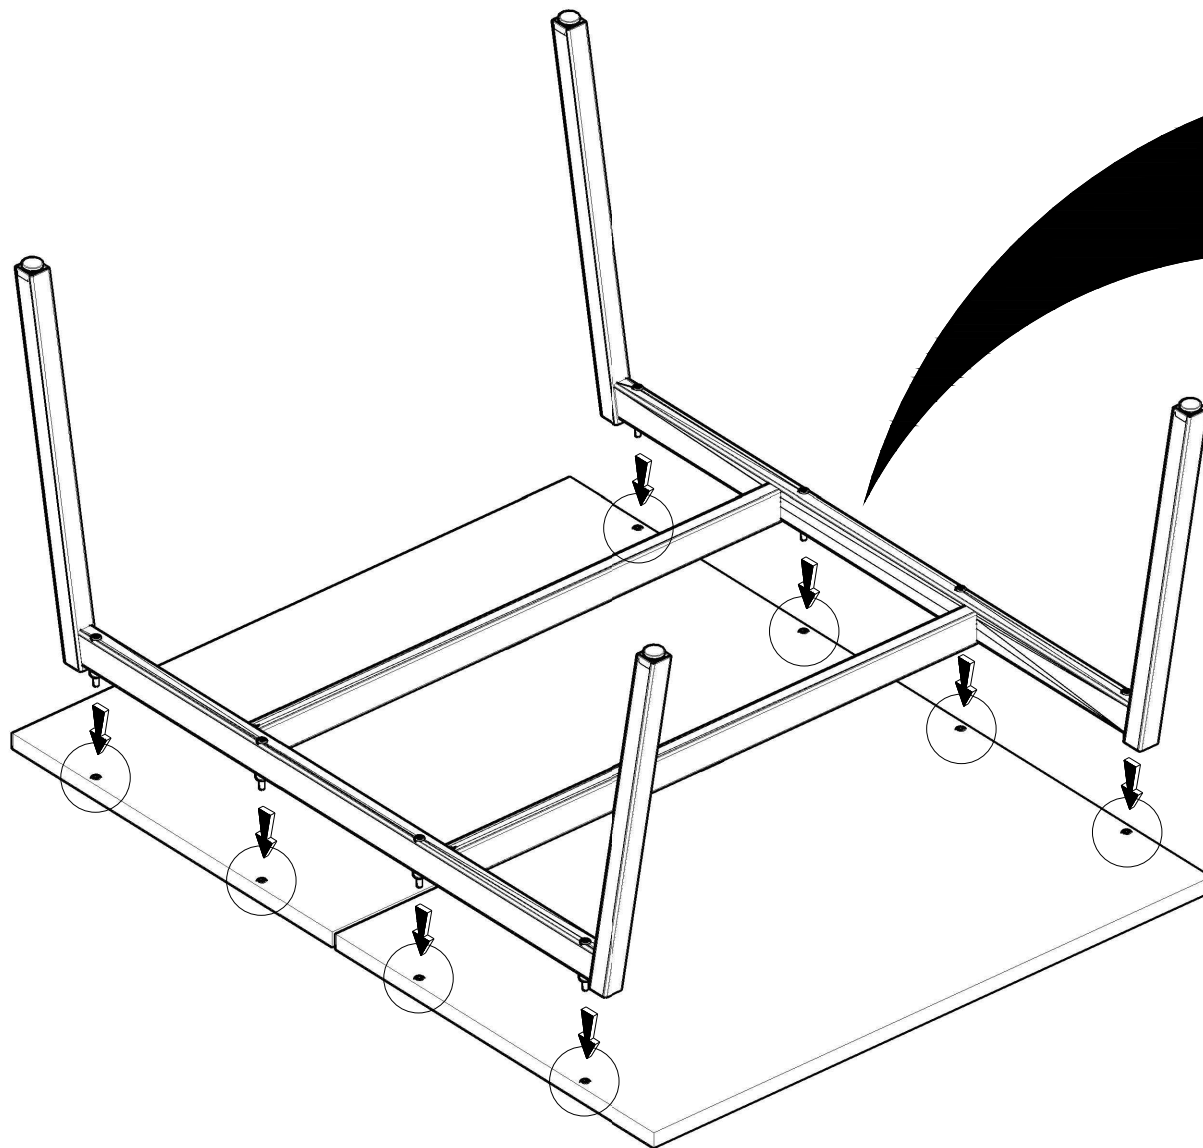

D

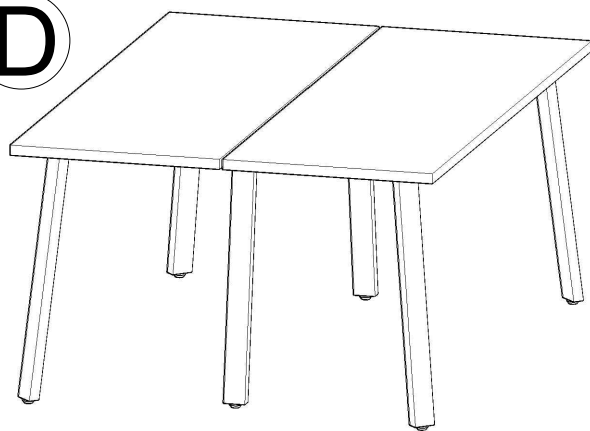

OGI A

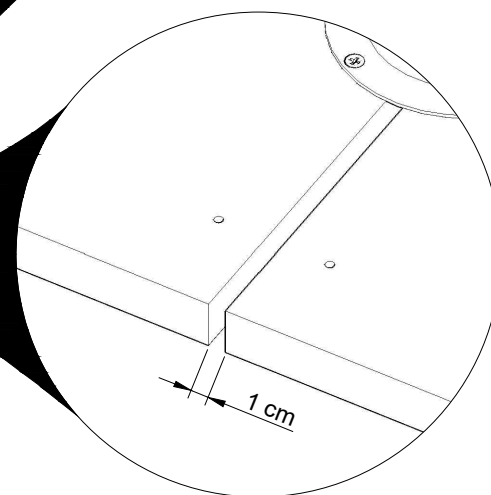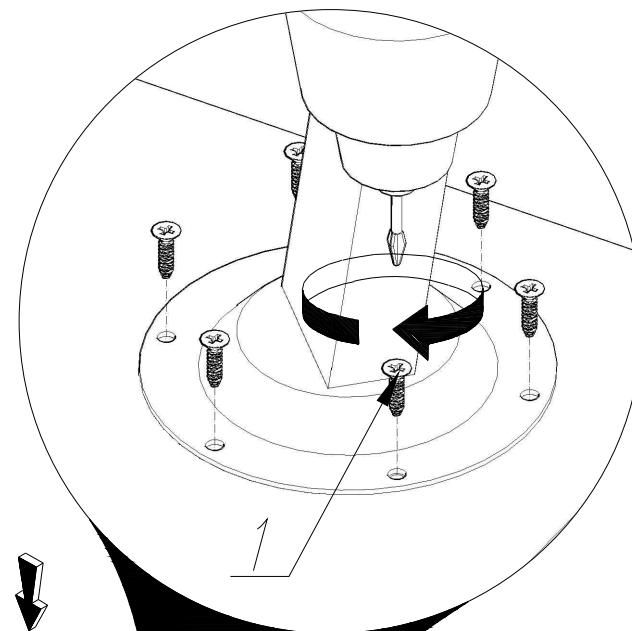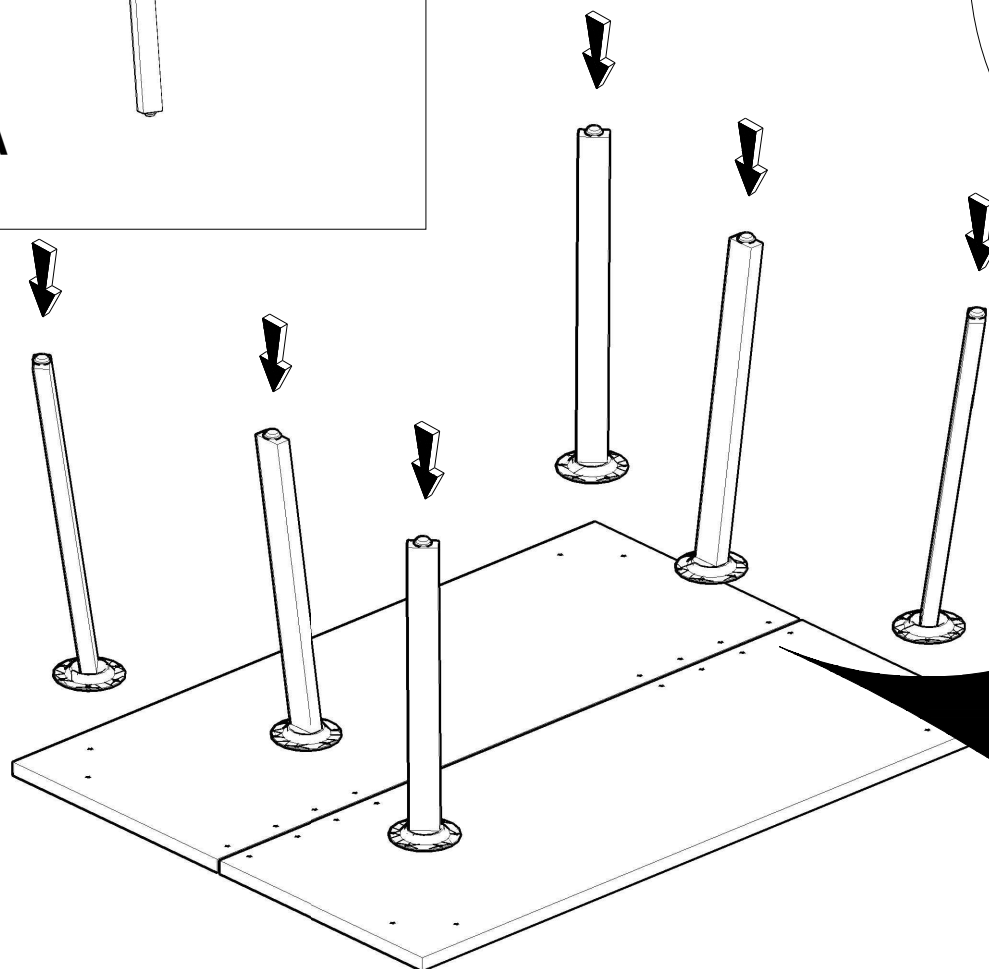




1
Ø5x20




OGI ATTACHMENT

A


OGI M
OGI W
OGI Q
OGI U
OGI Y

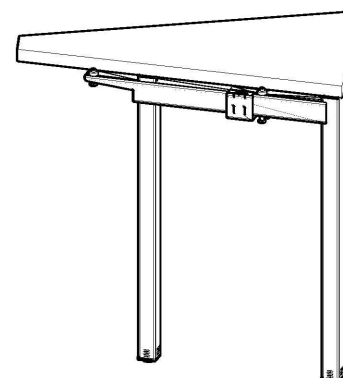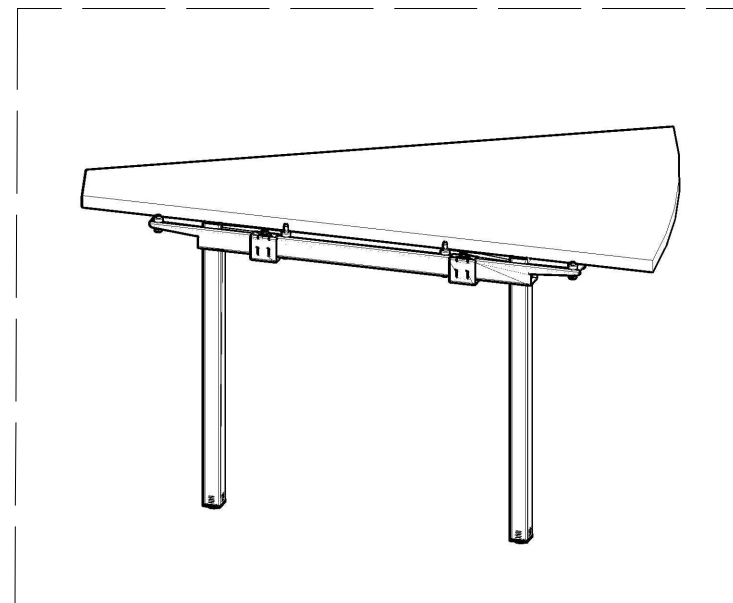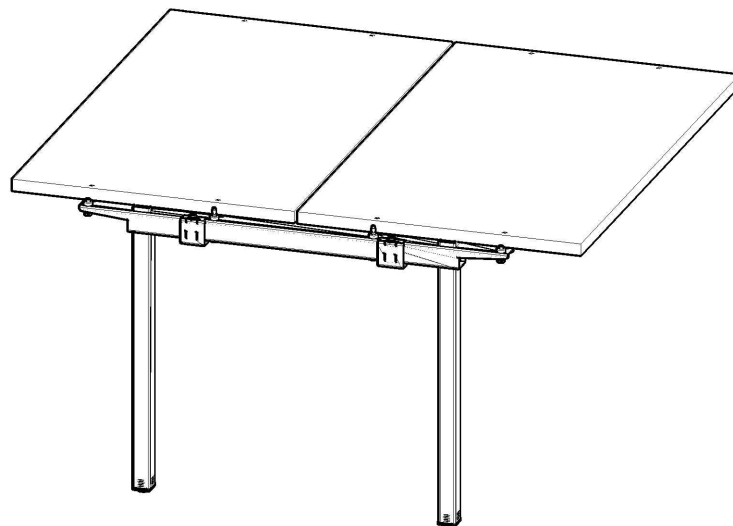





B

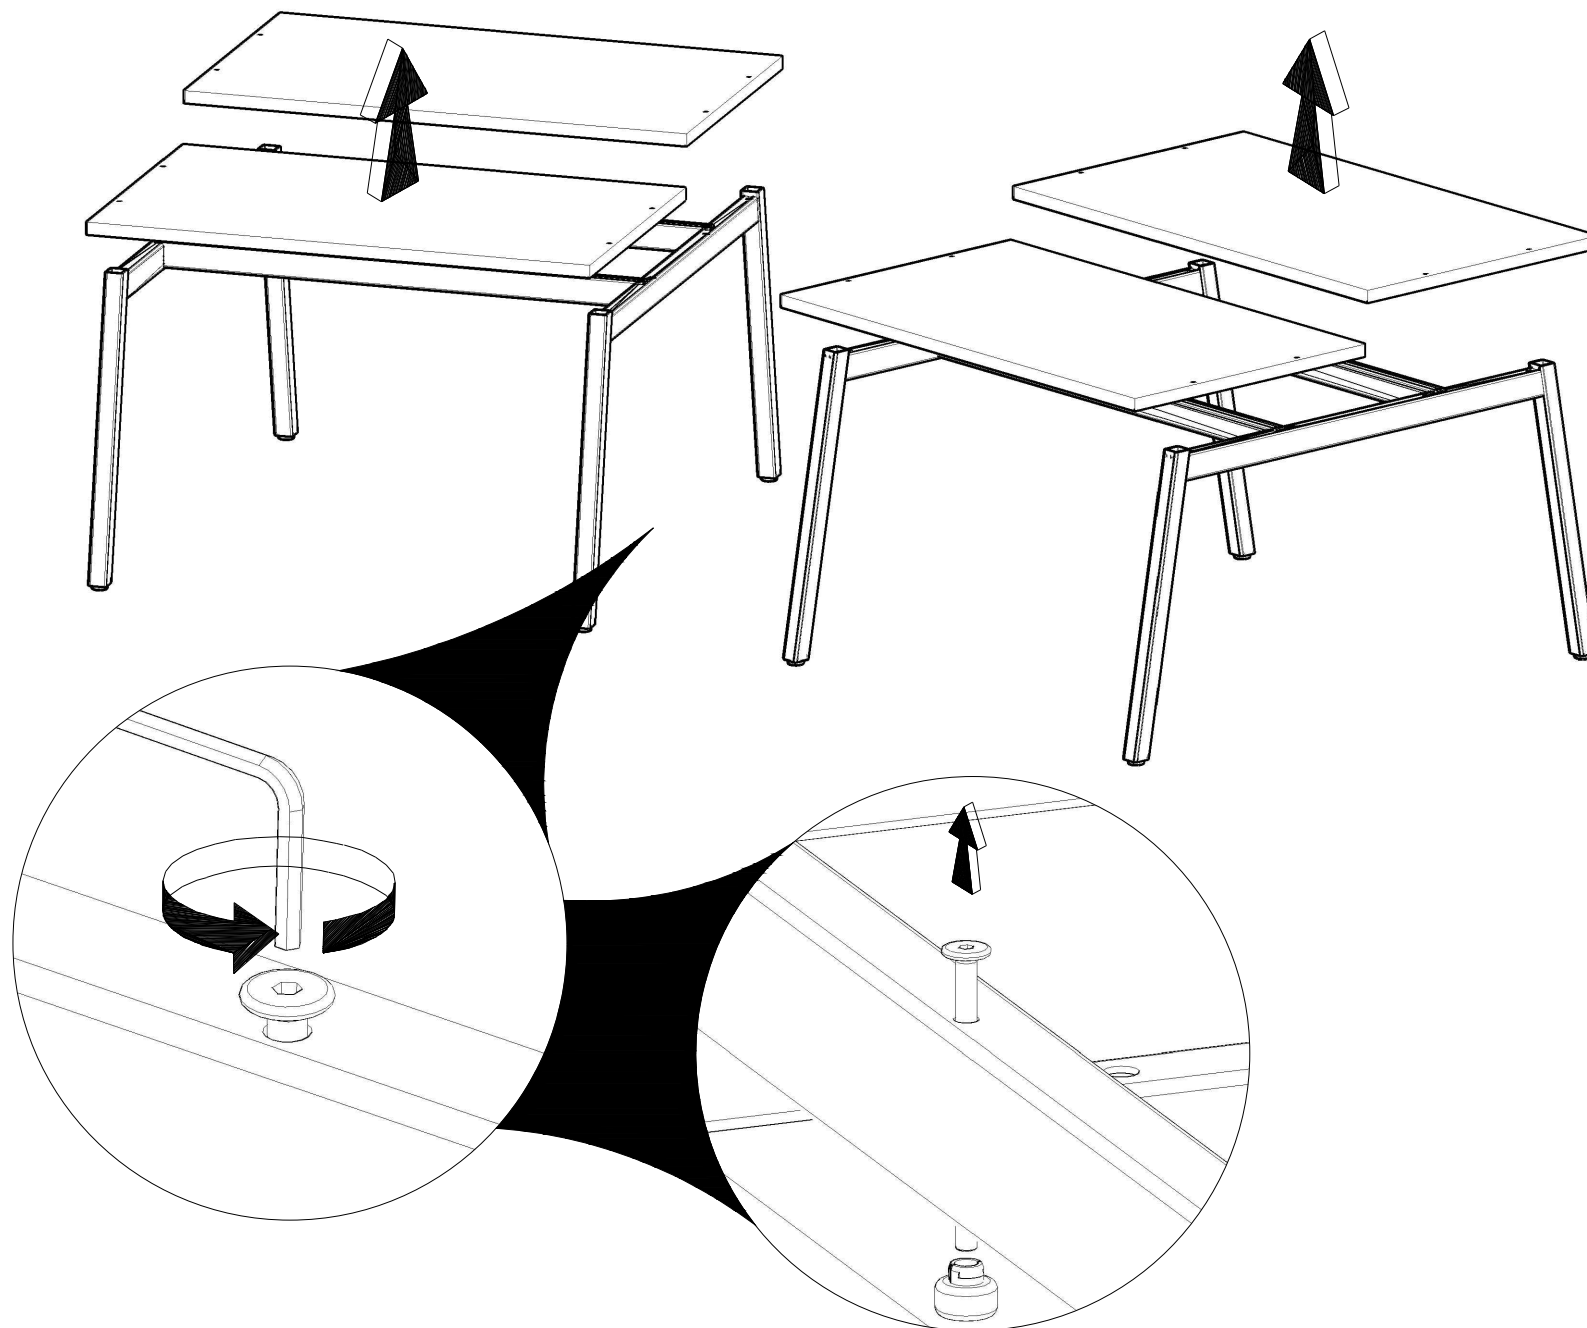


C

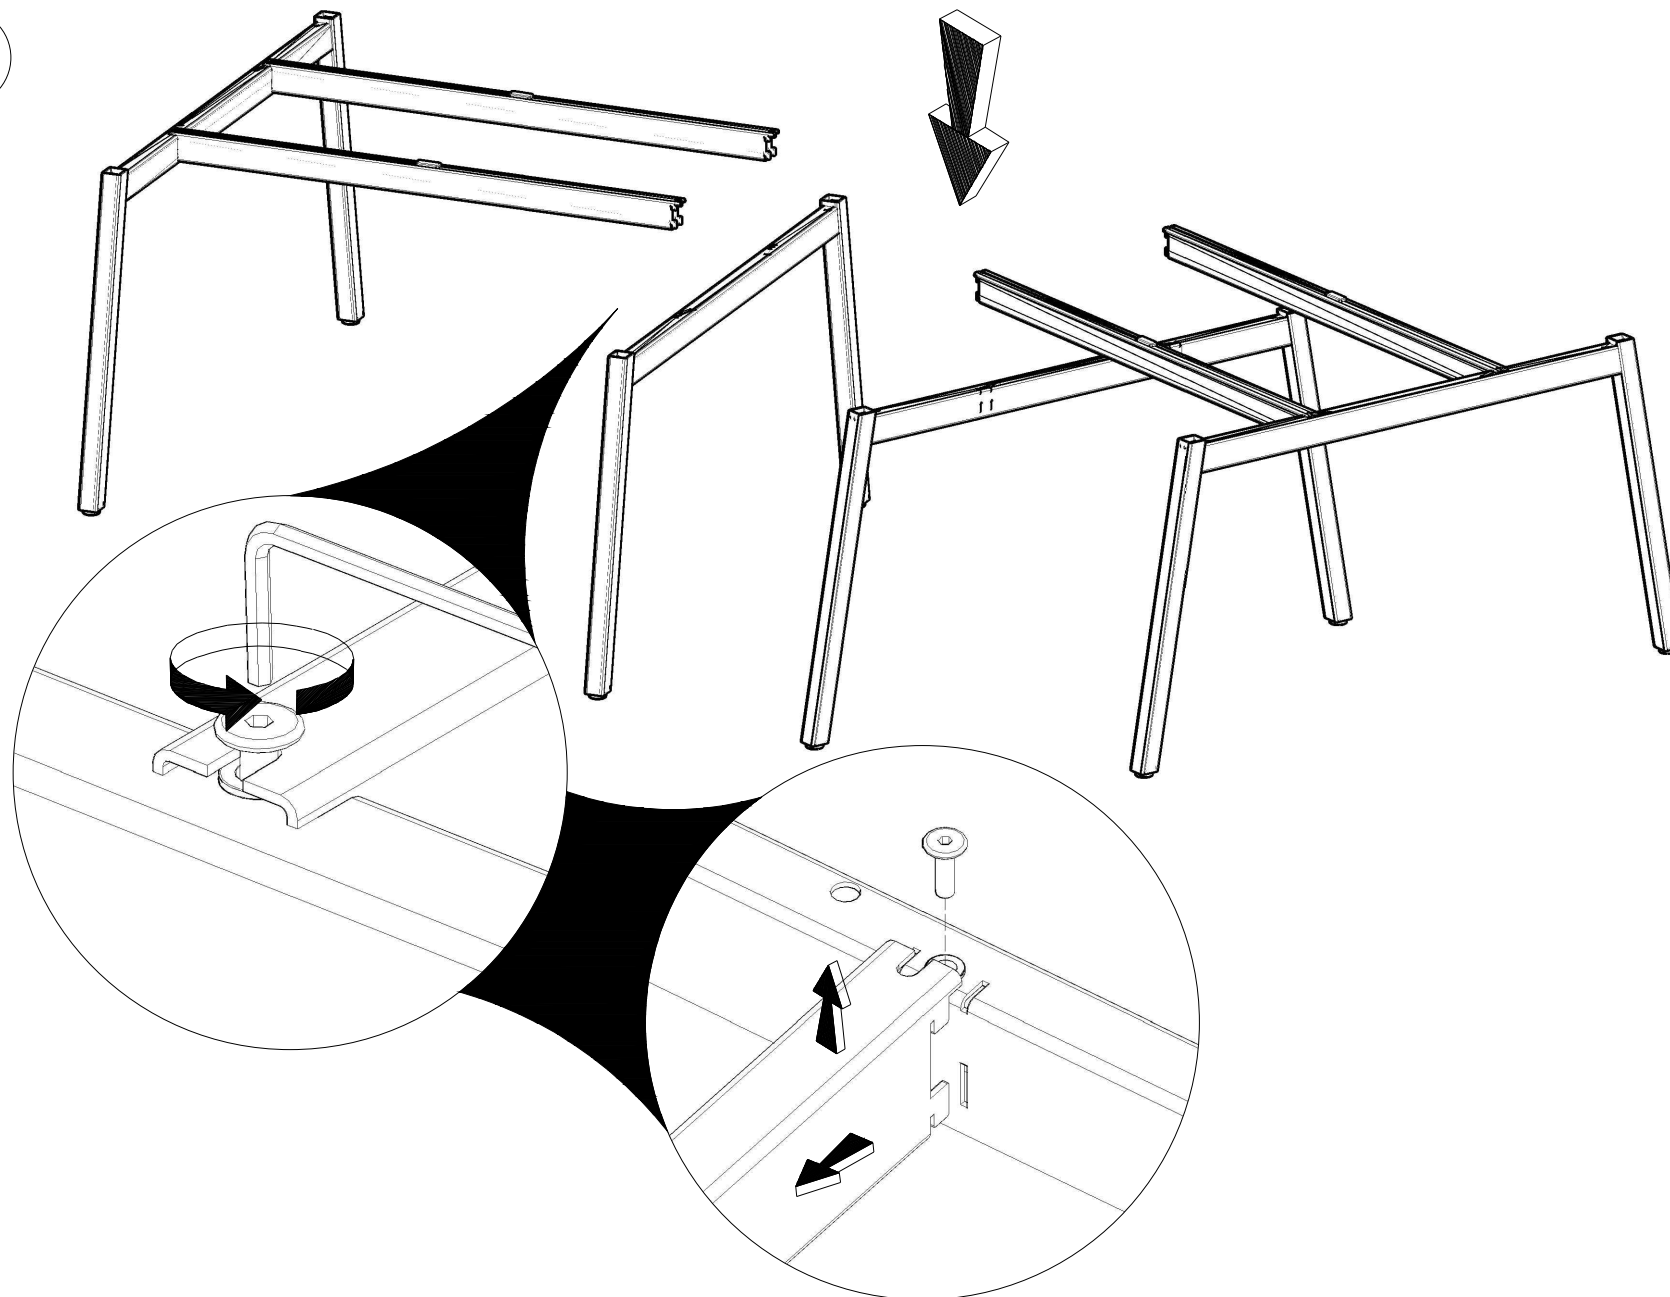


D

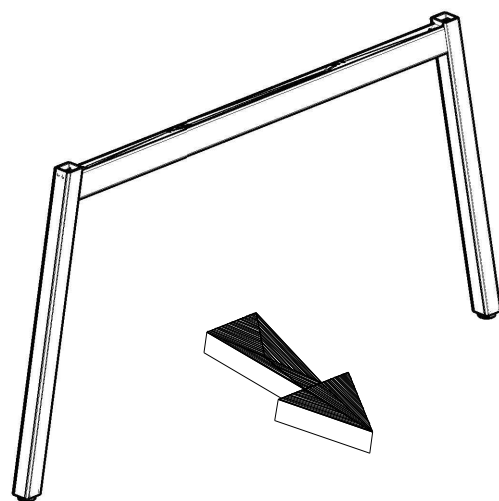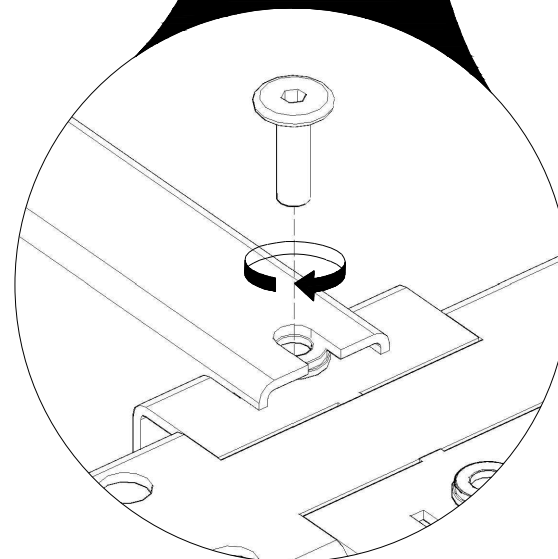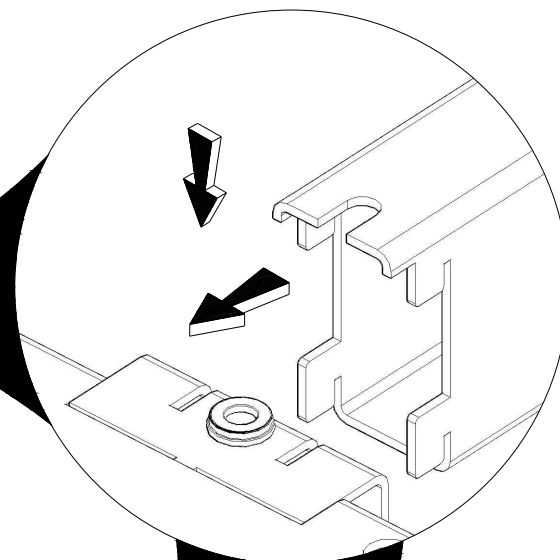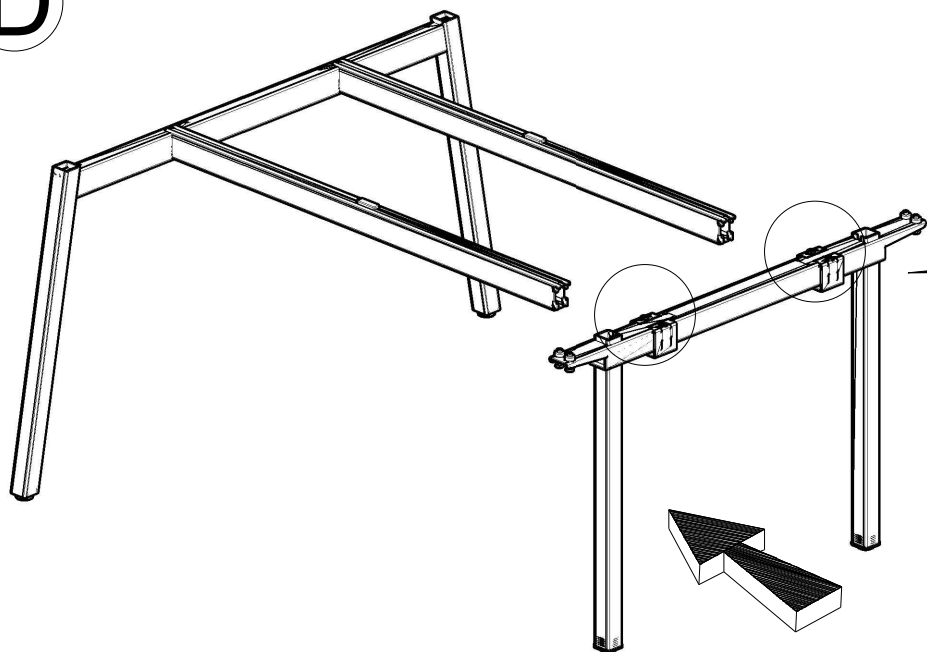



E

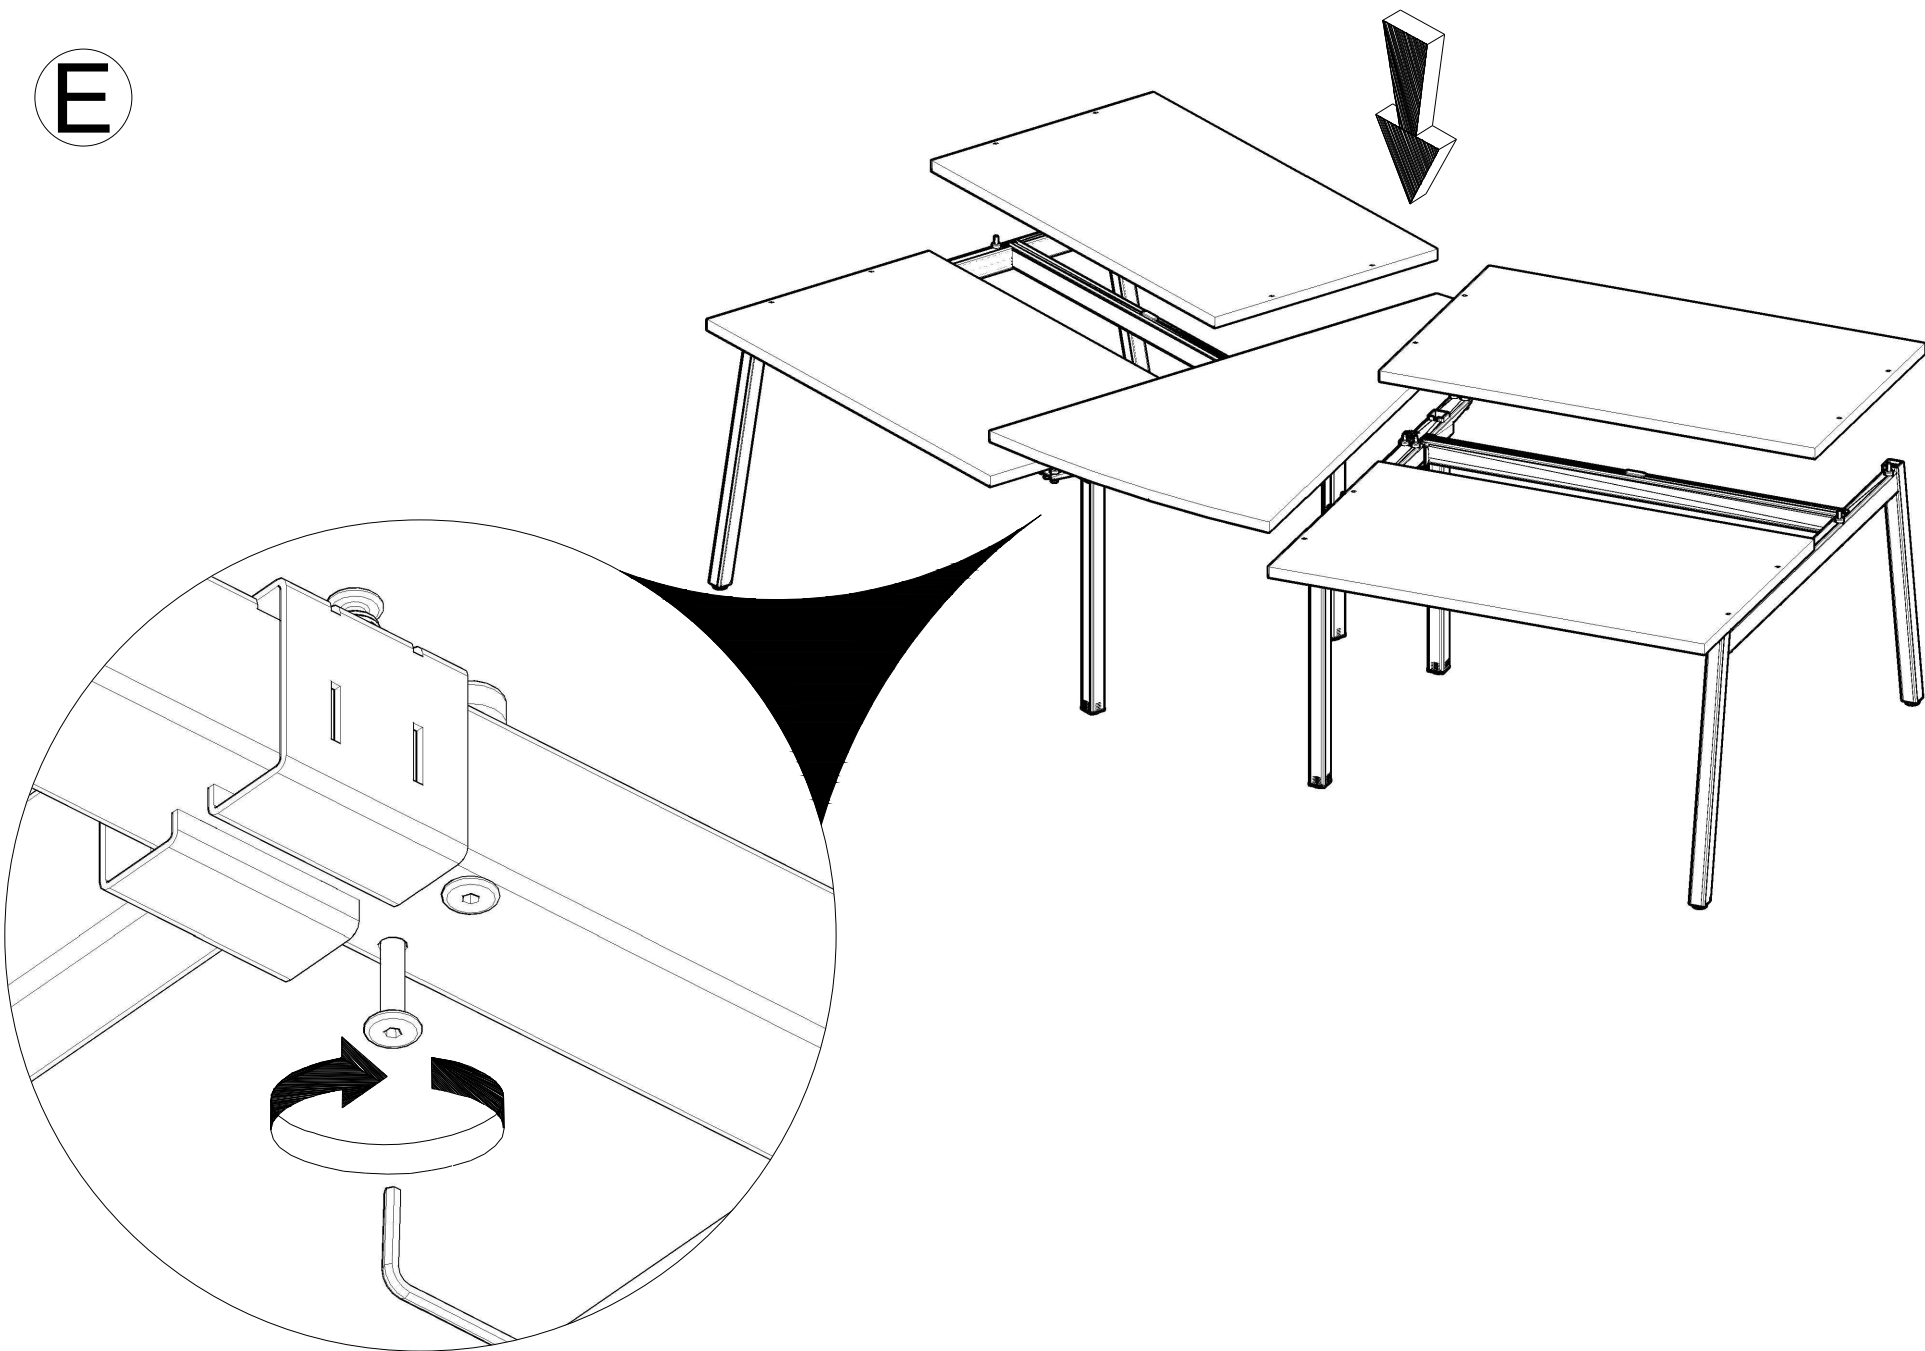


F


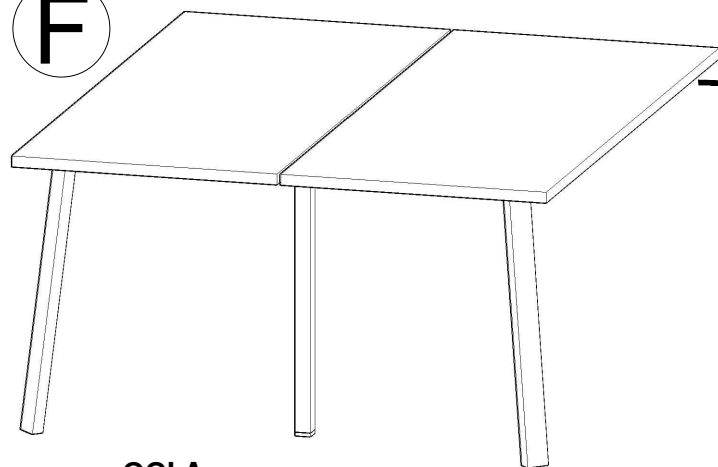


OGI A

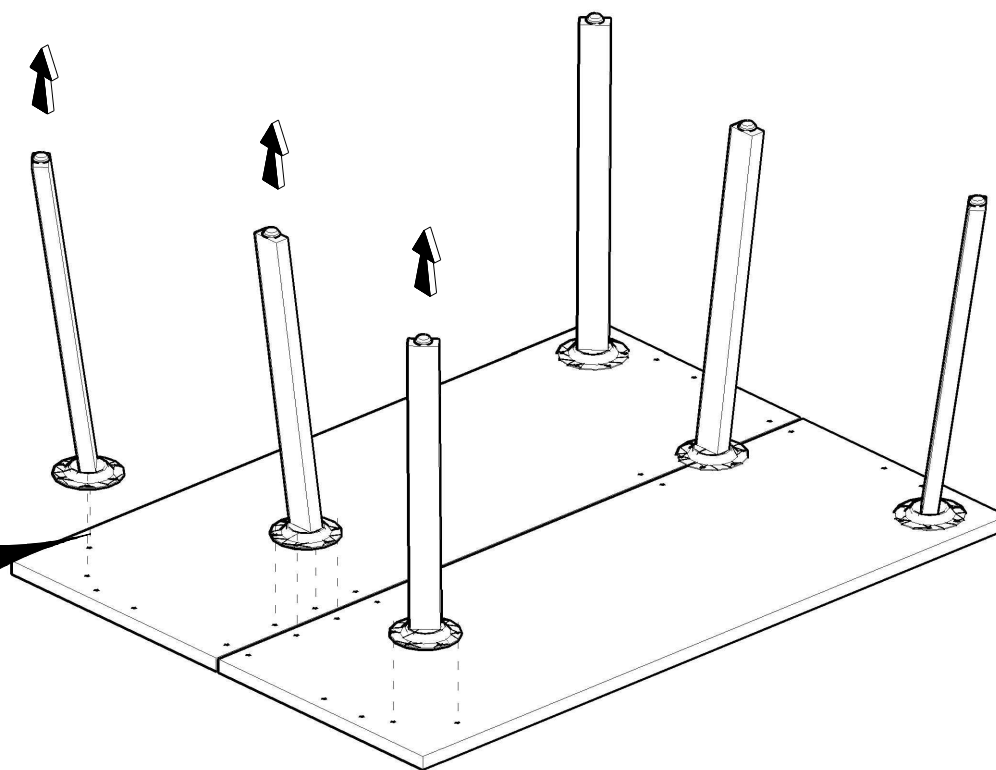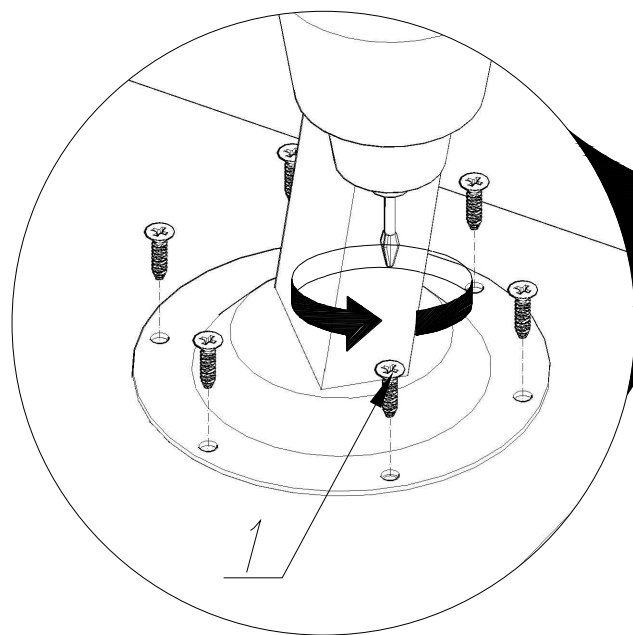


G

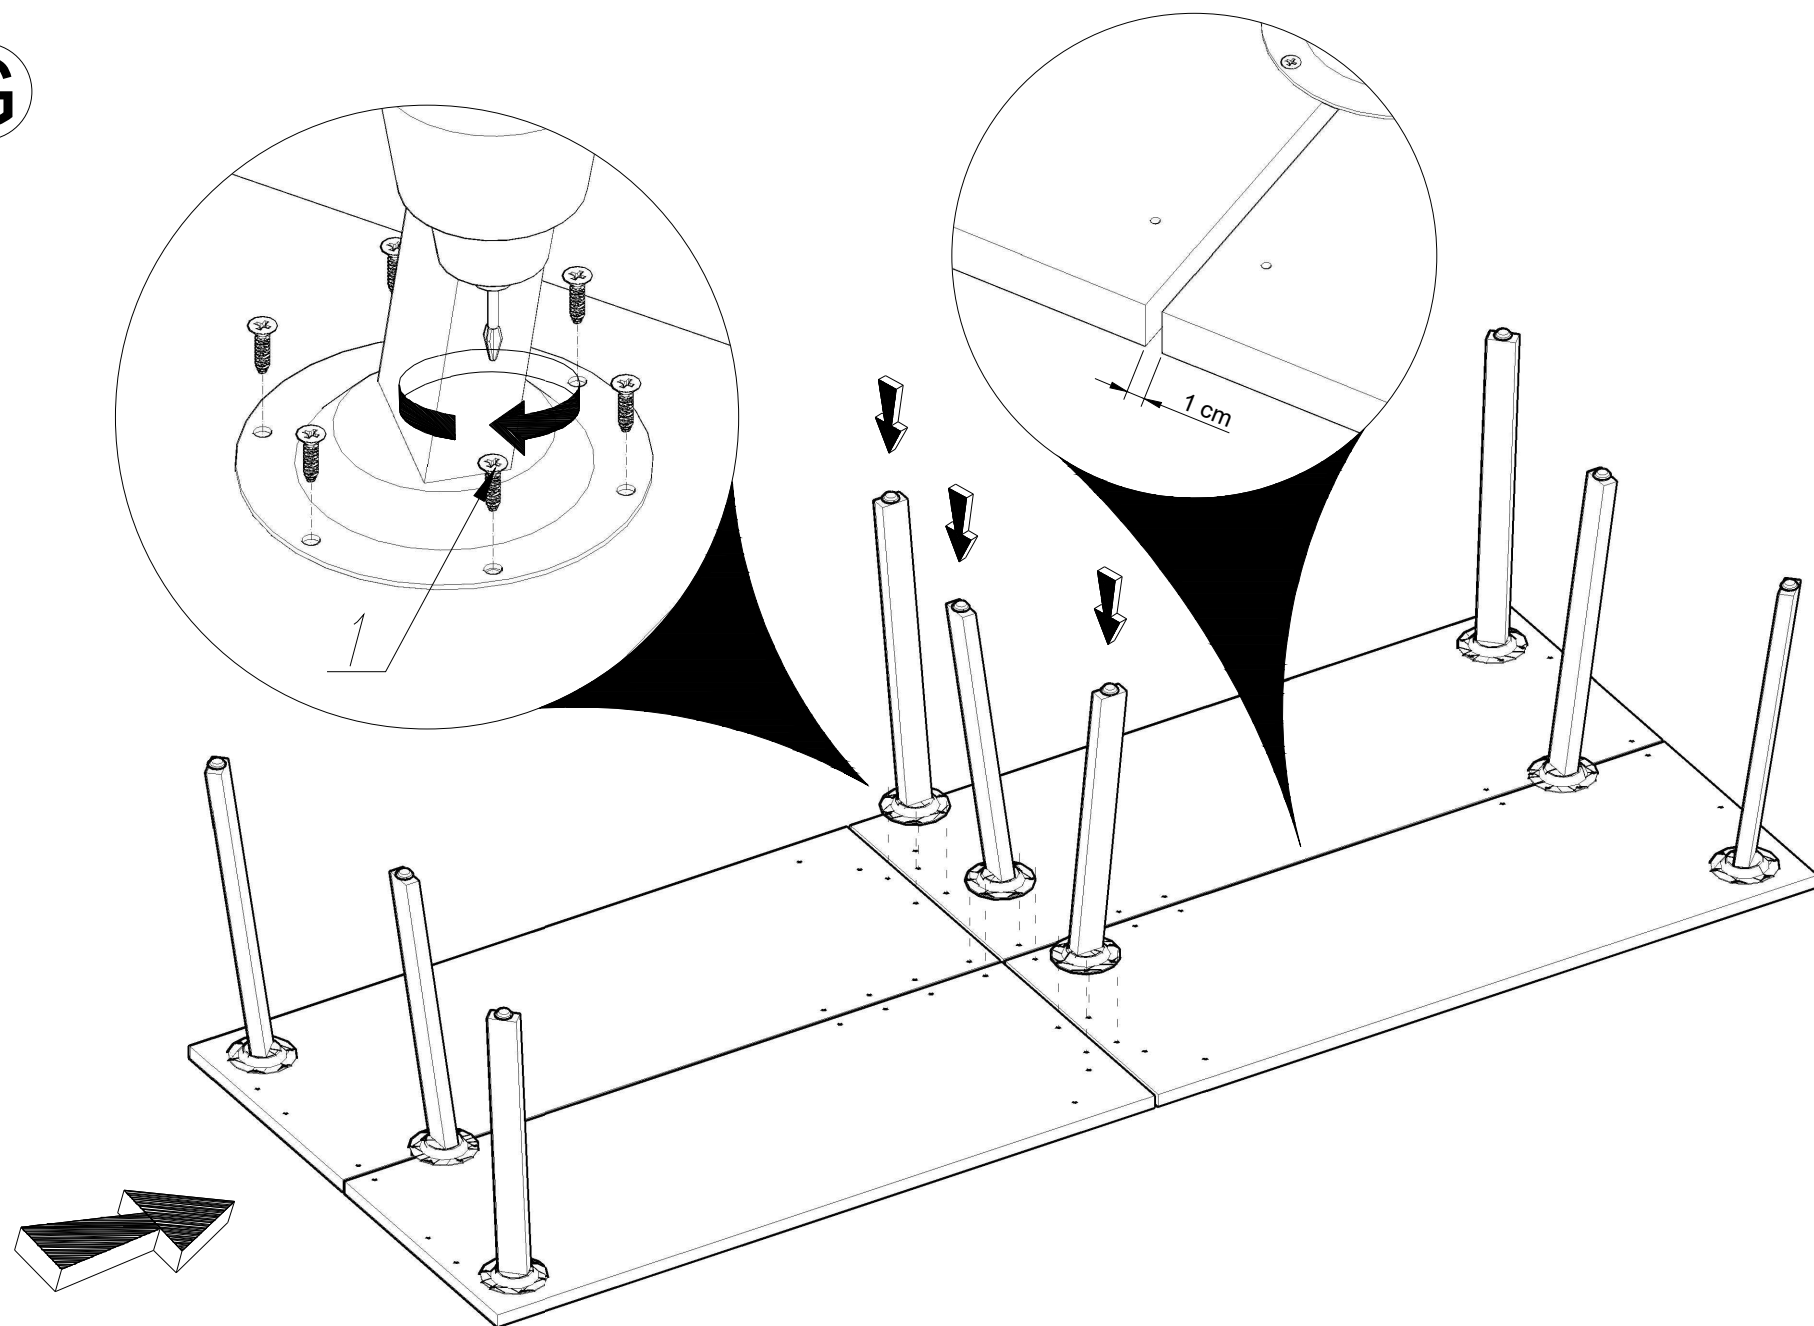


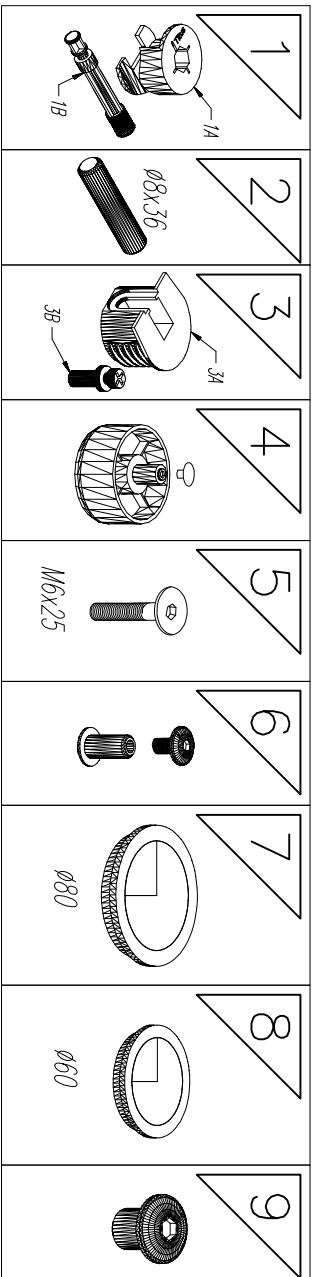


A12M

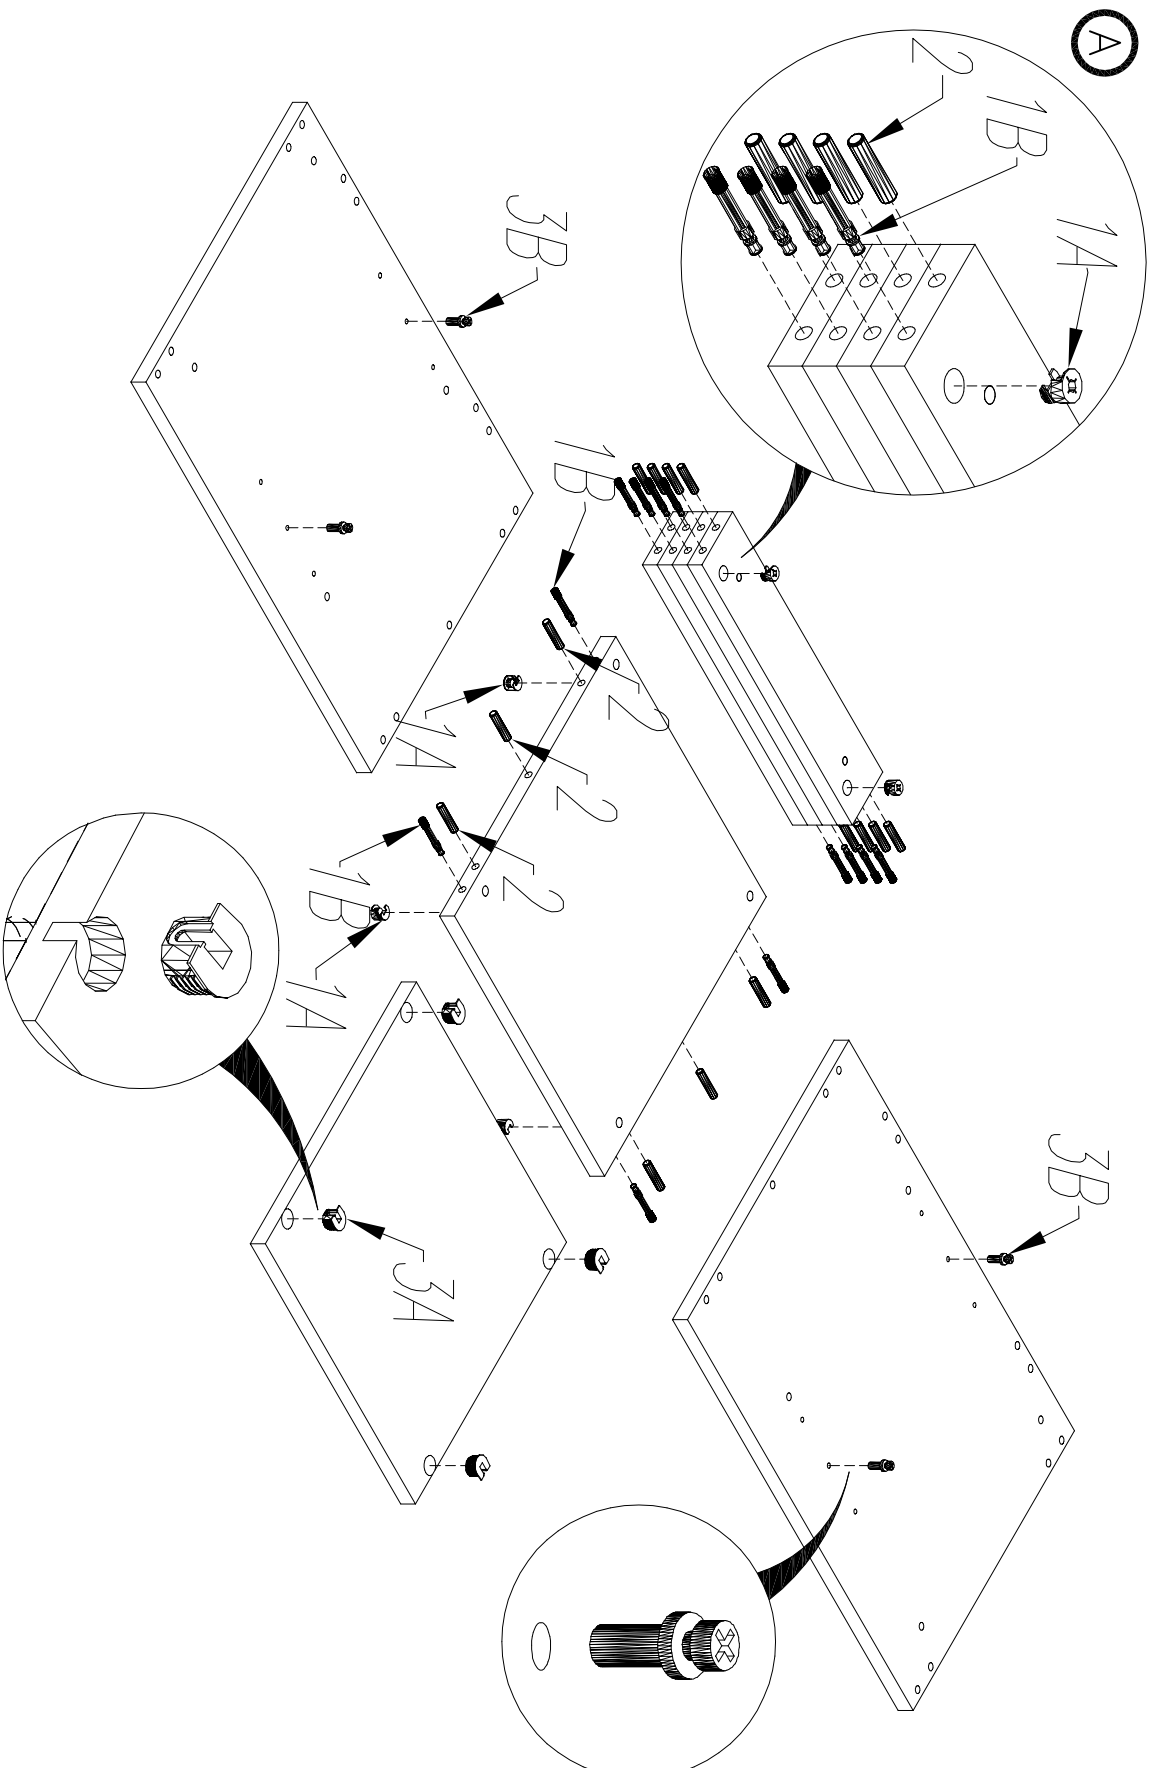


KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOLKÓW.
THE FITTINGS SEQUENCE OF THE
CAWS AND DOWELS.
DIE MONTAGEFOLGE VON
EXZENTERN UND DÜBELN.

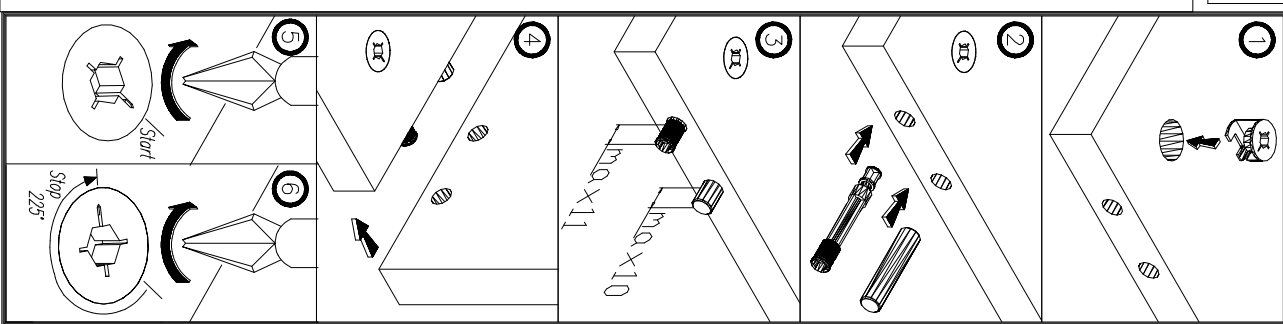

B

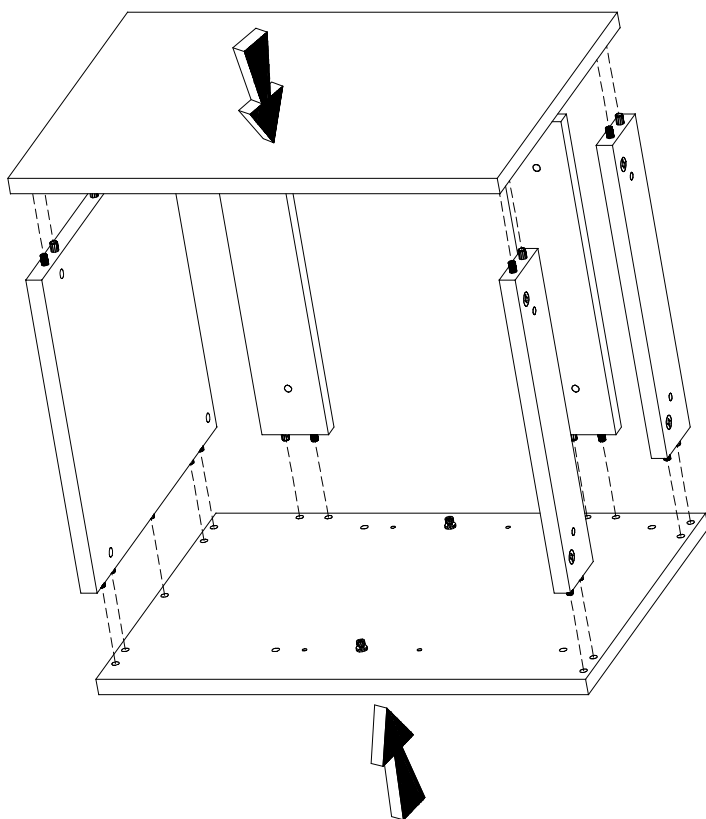

C

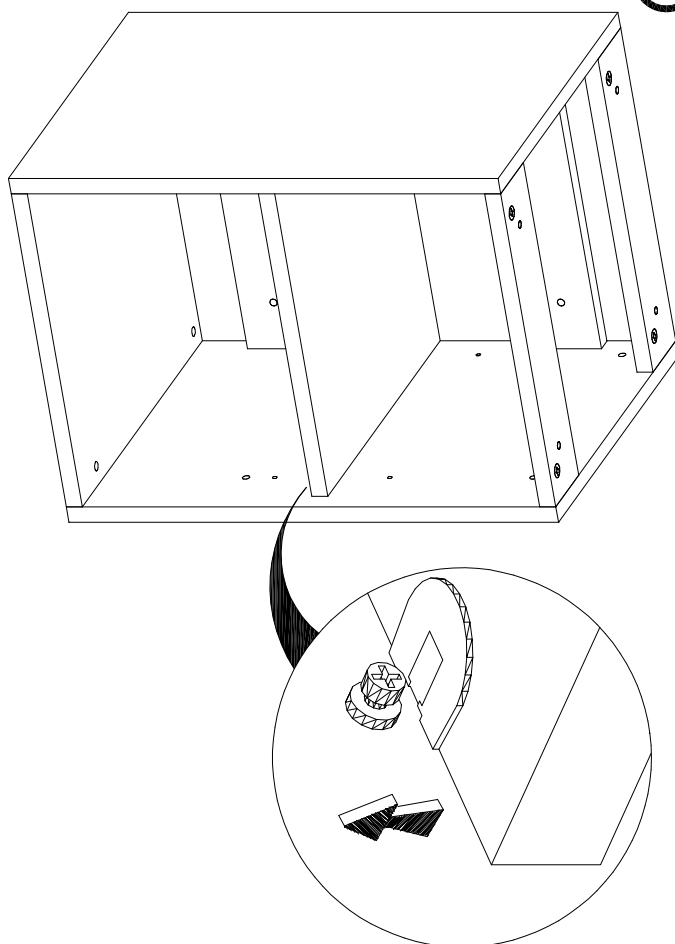

D

