







E40

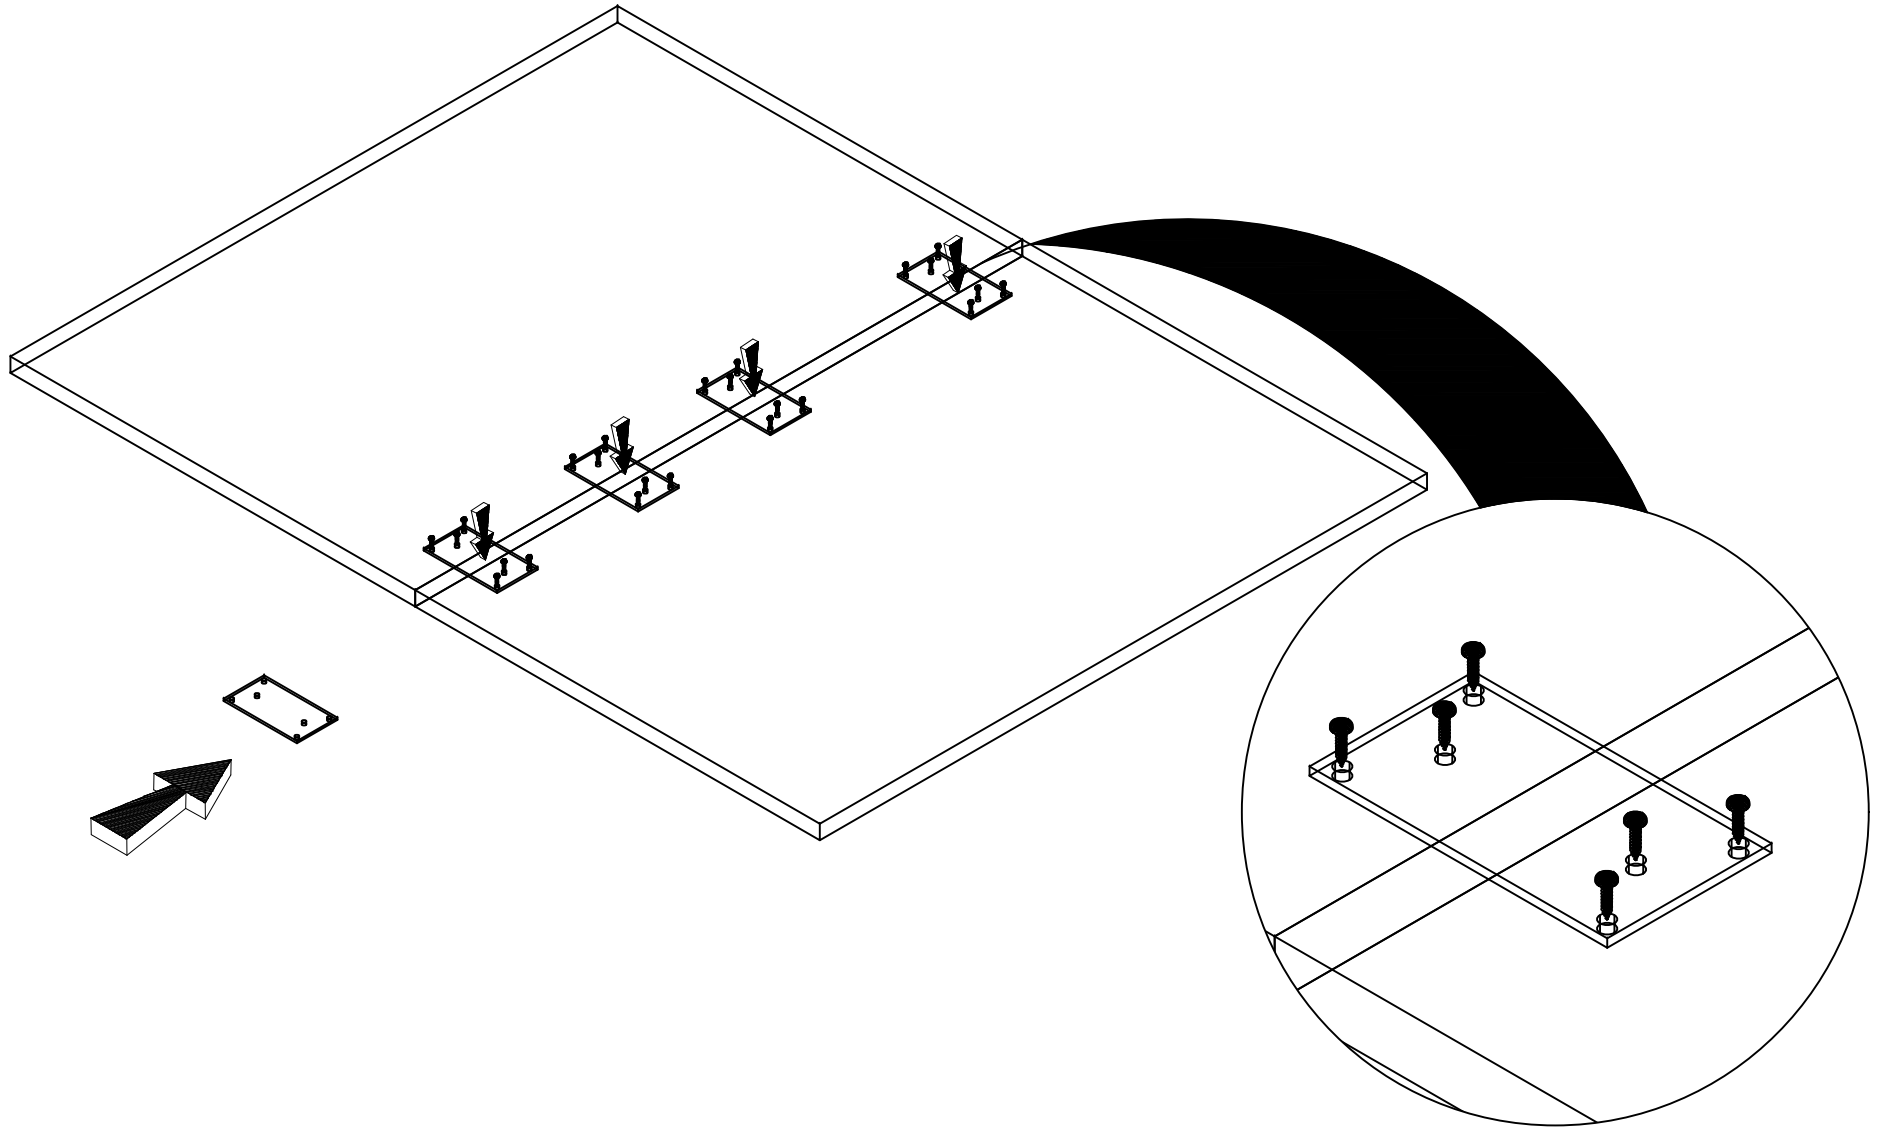


1





M05

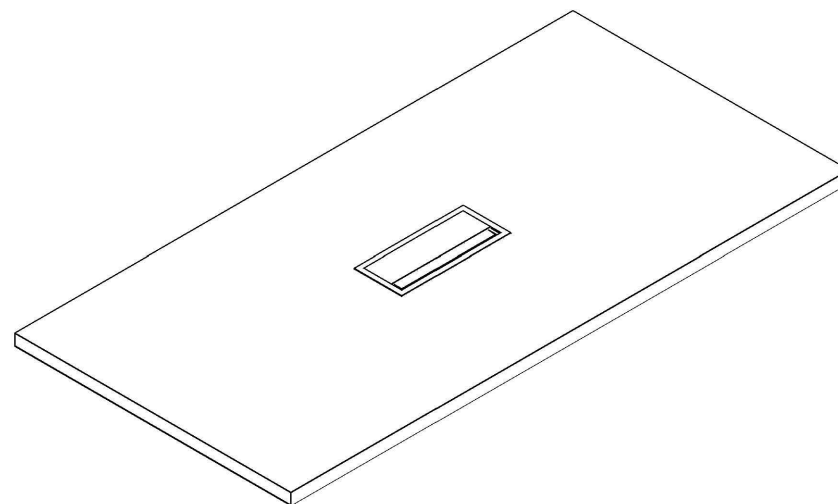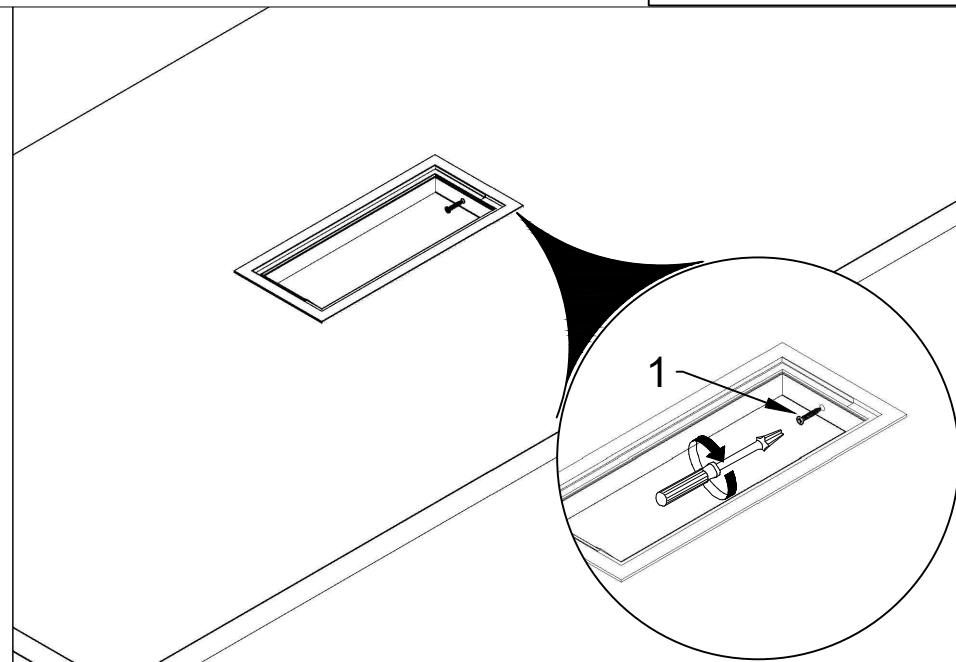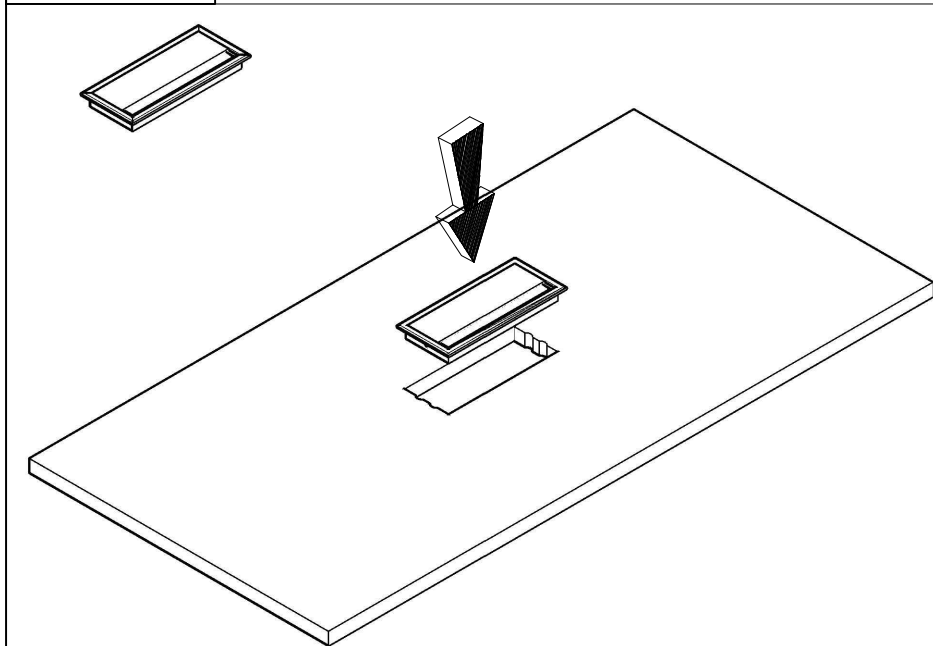

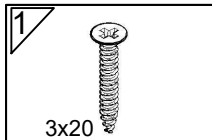


M04

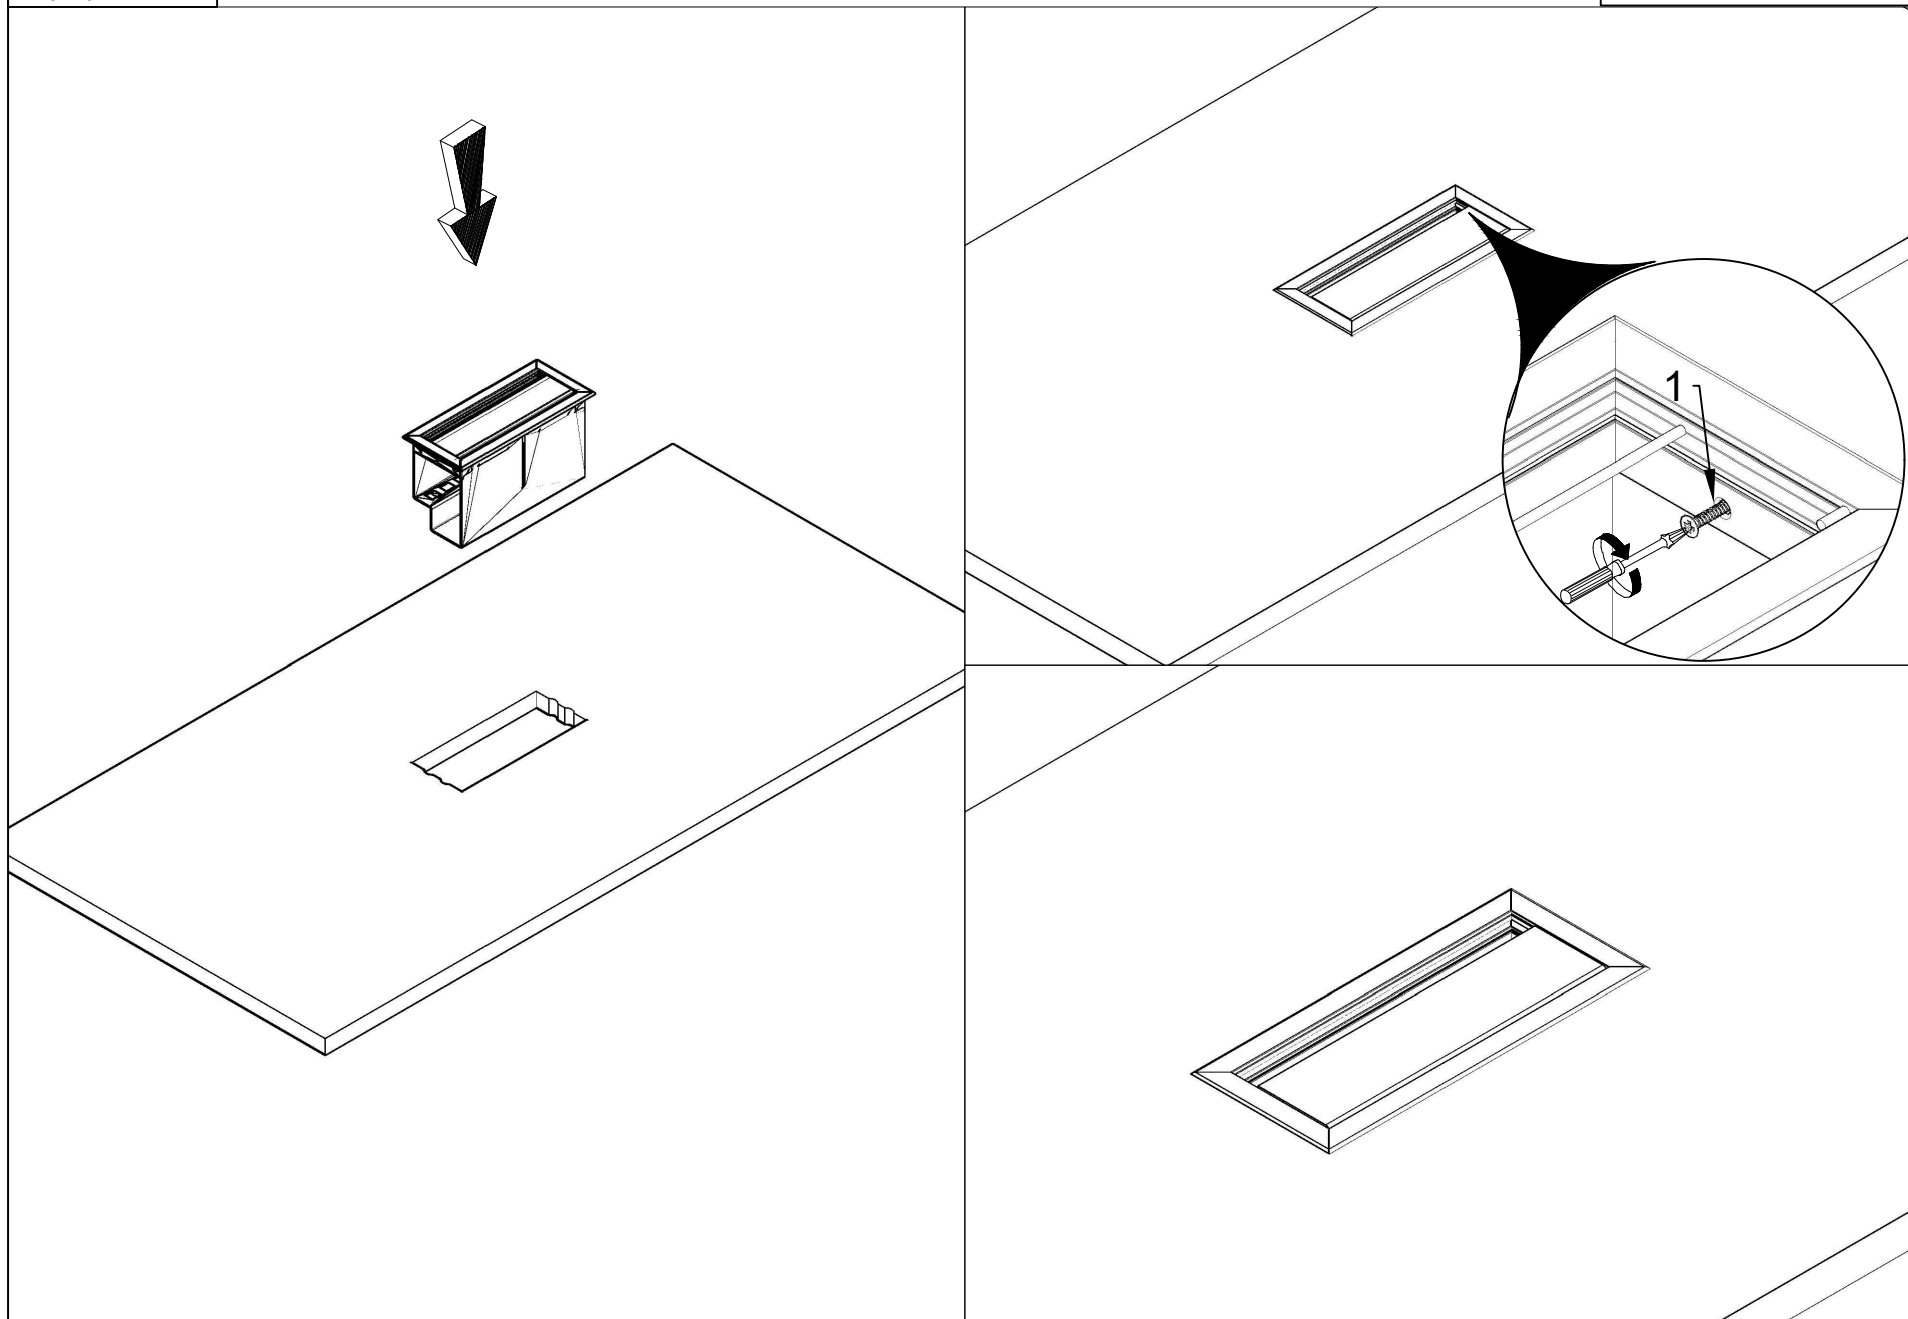

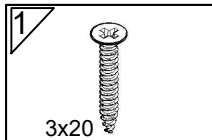

M04

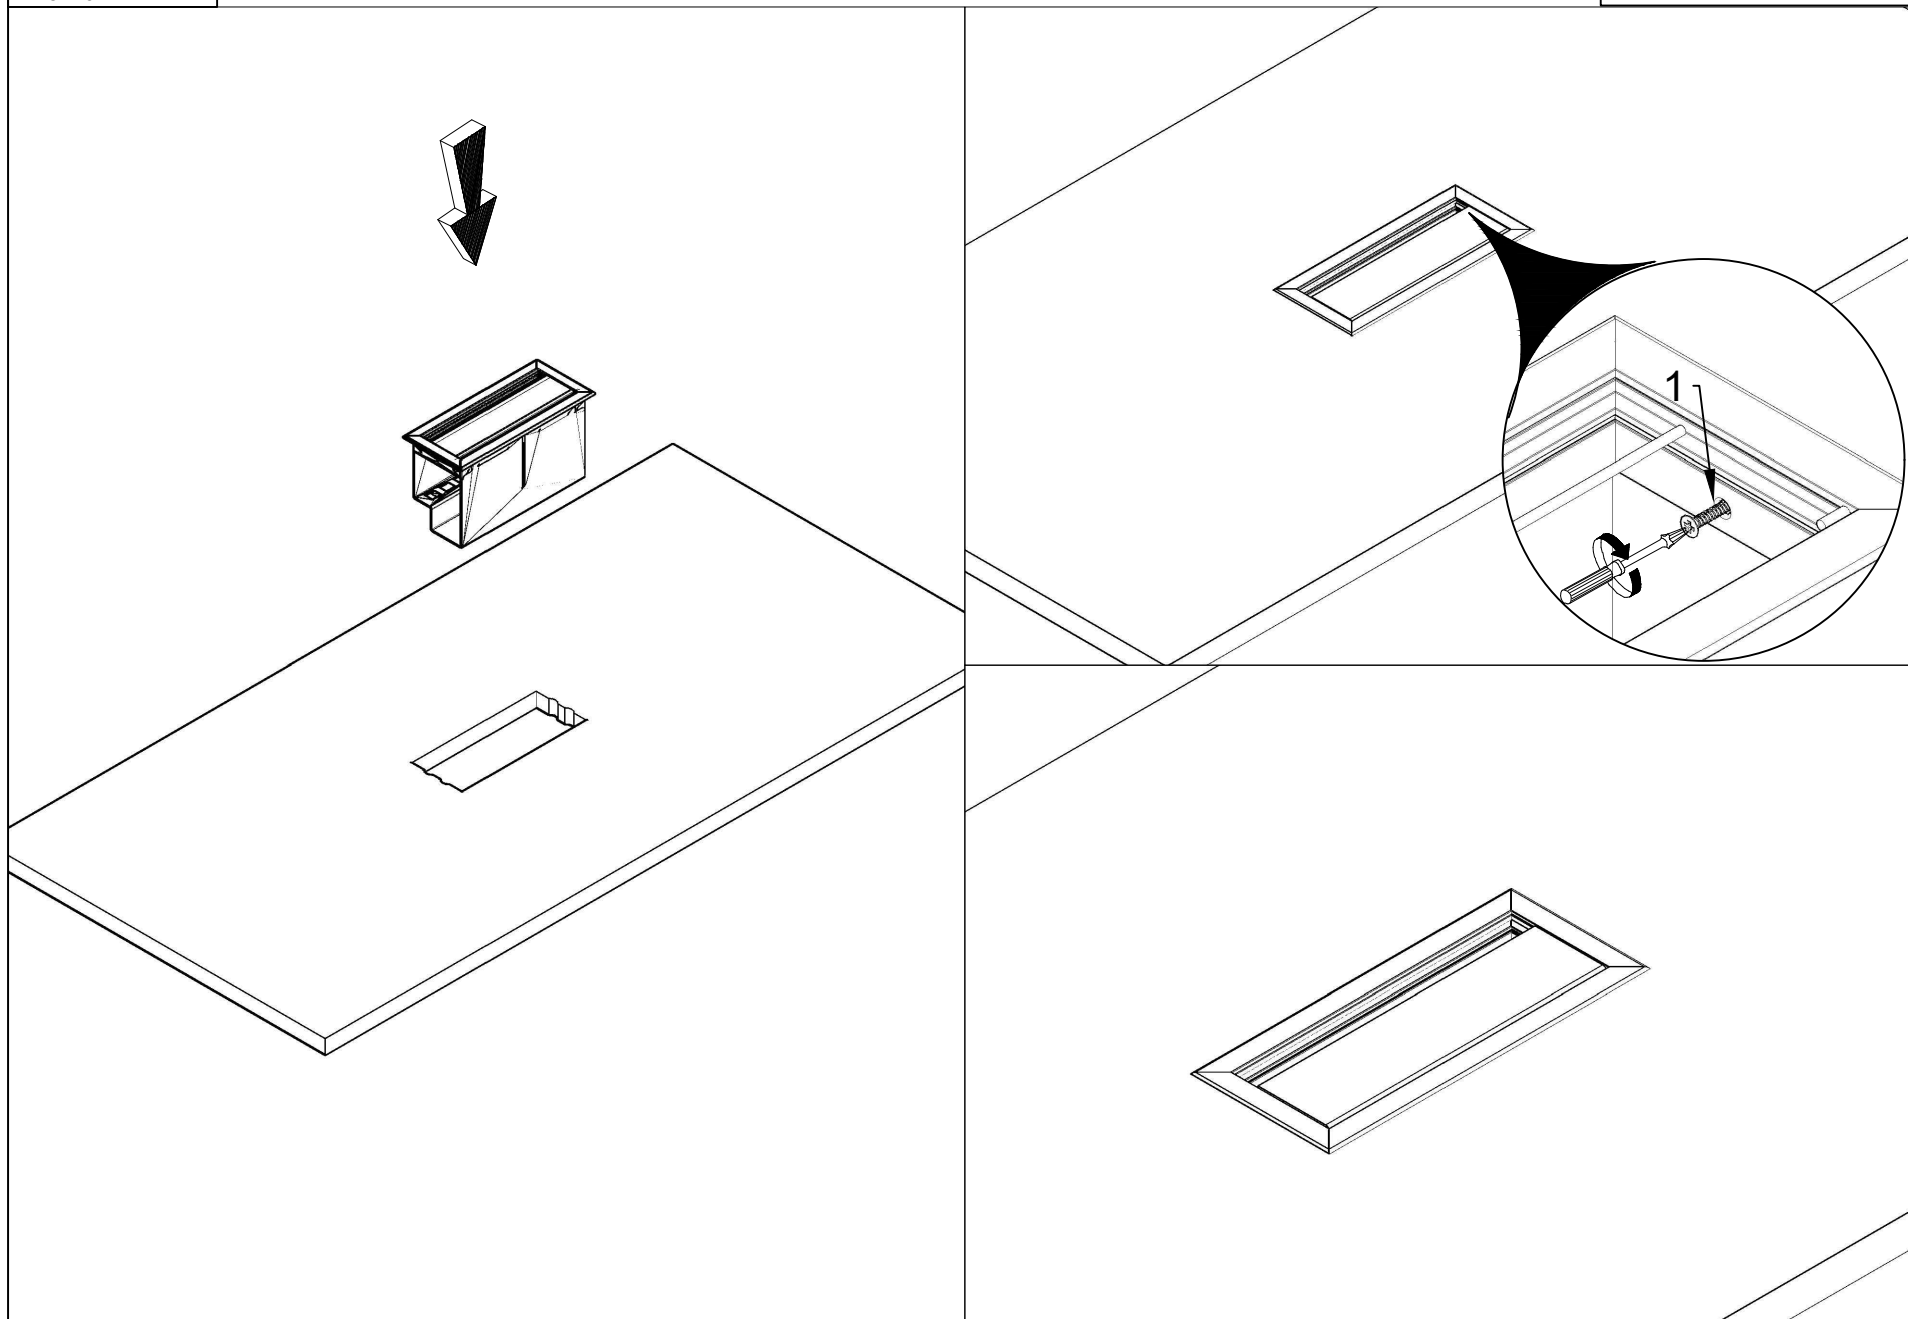


1
Ø5x20




OGI BENCH


A

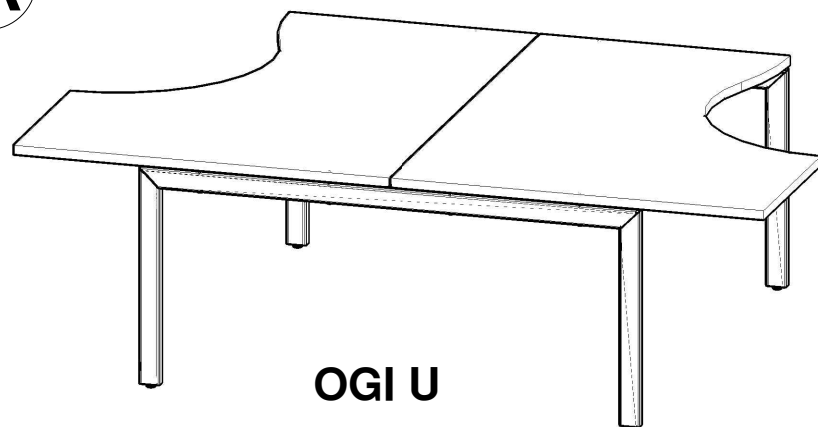


OGI U

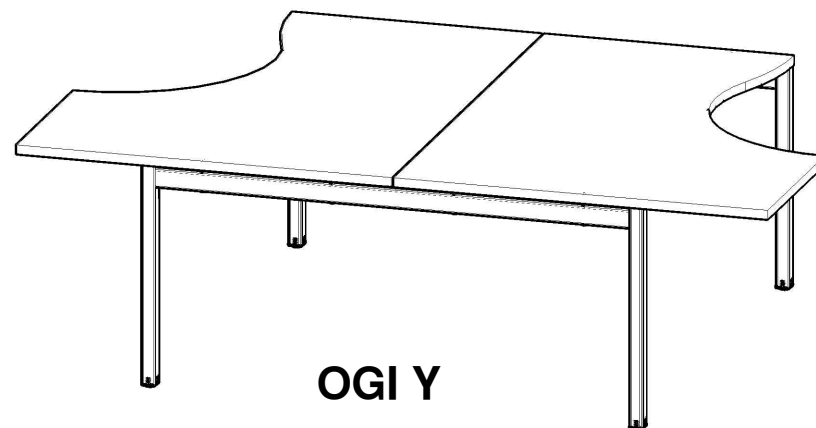


OGI Y

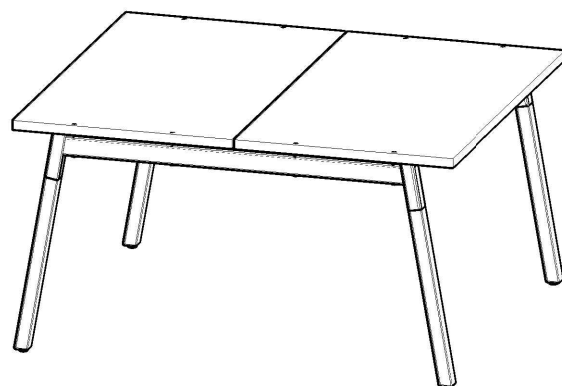

OGI W



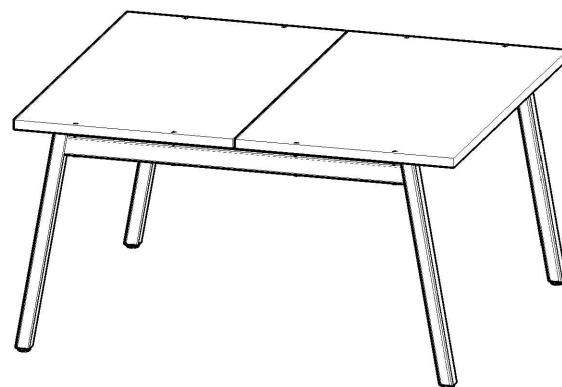


OGI M



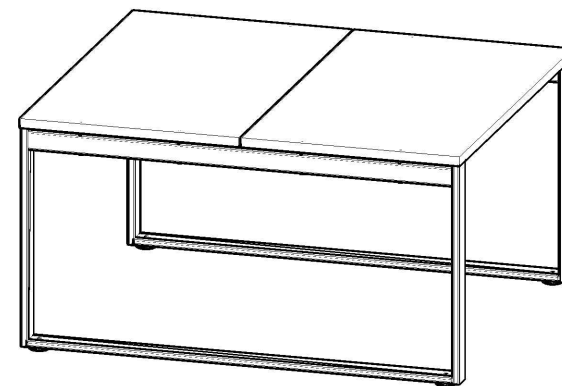


OGI Q


B

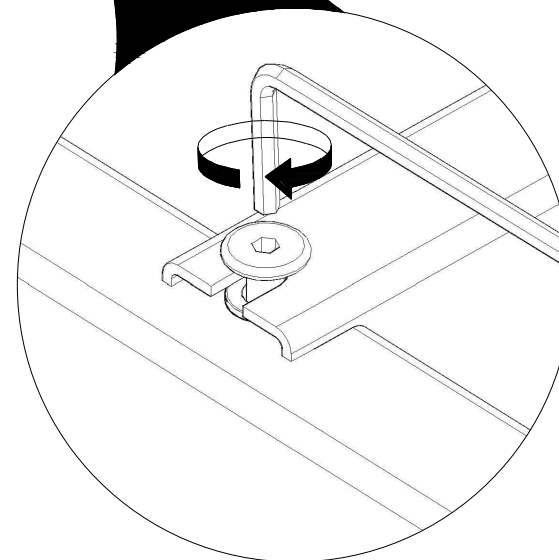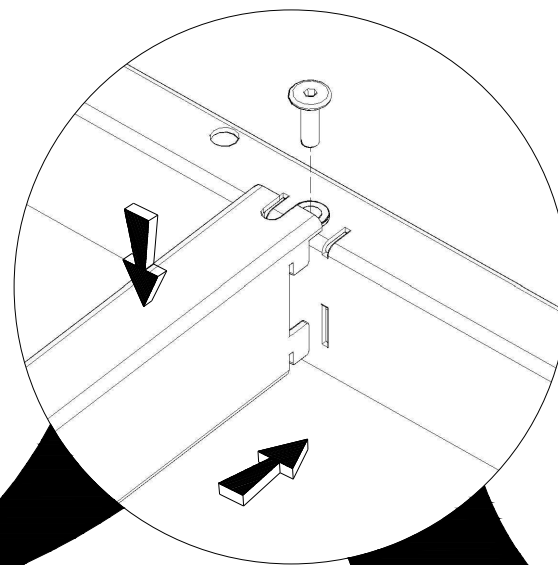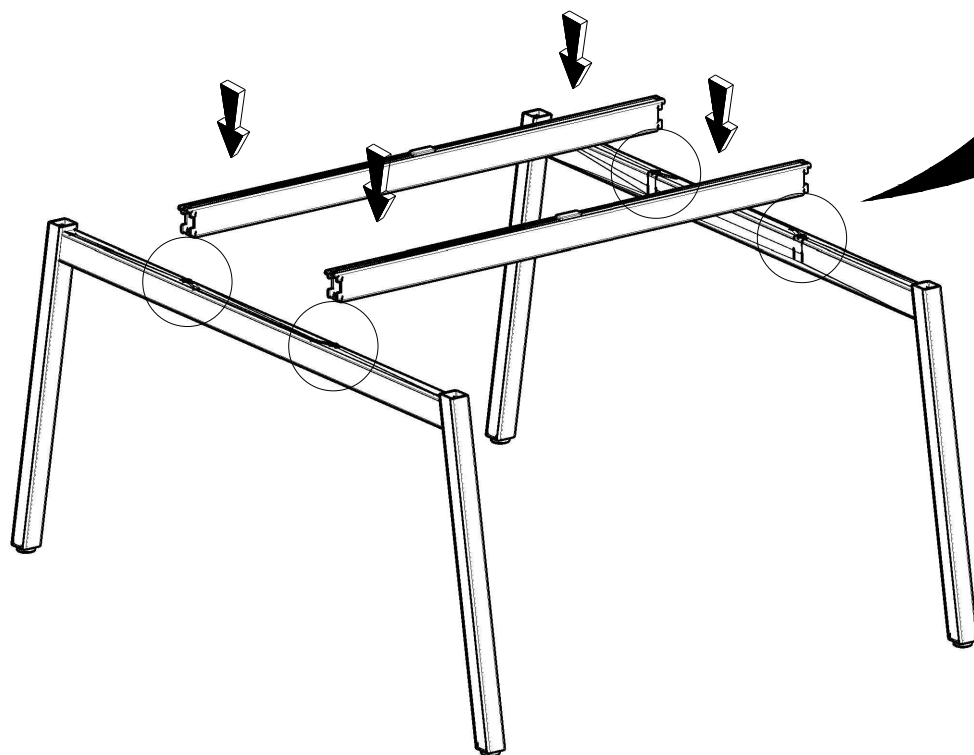




C

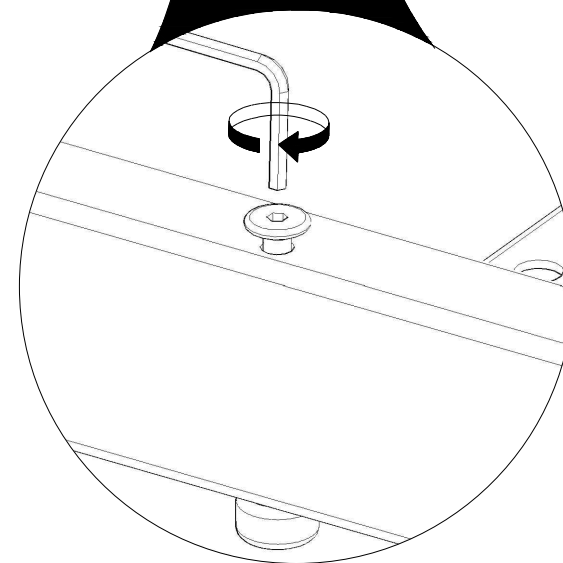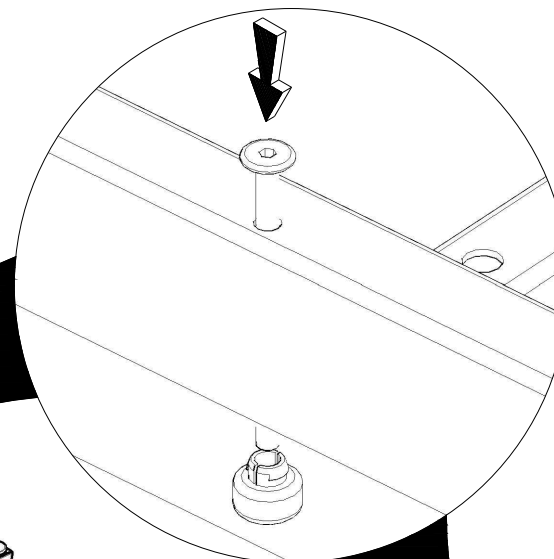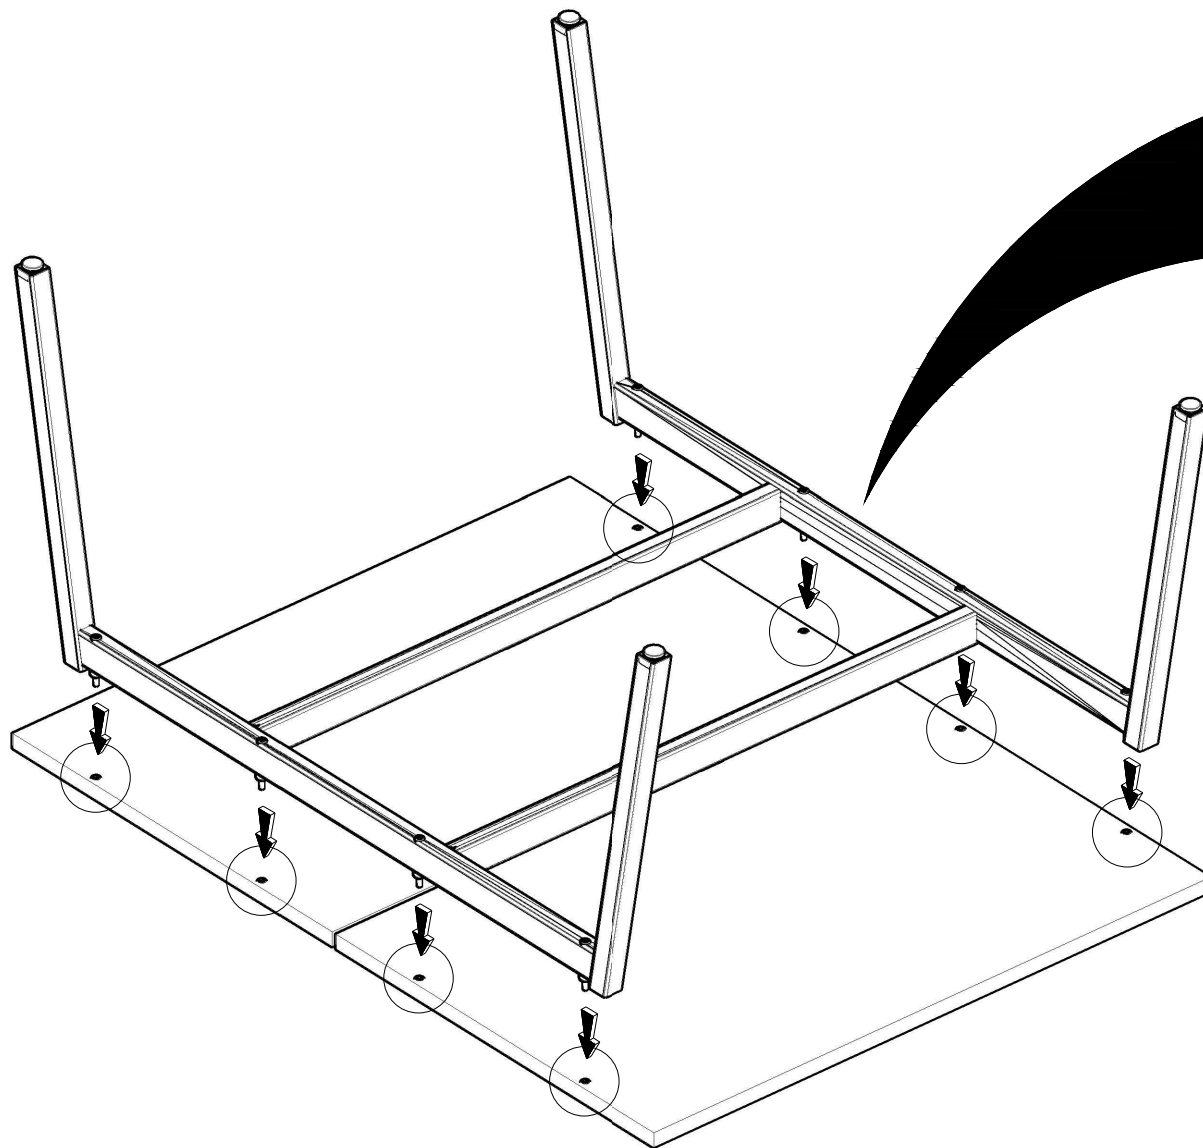

D

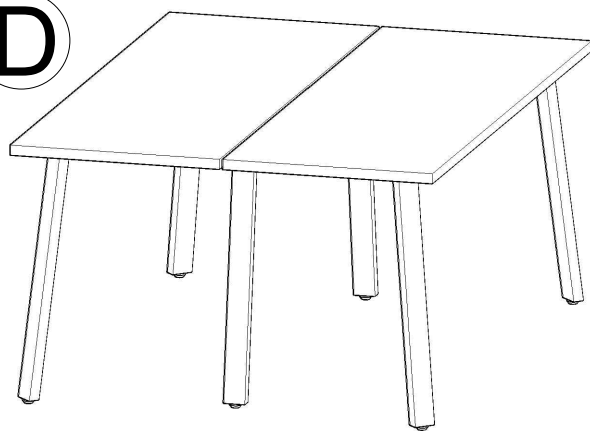

OGI A

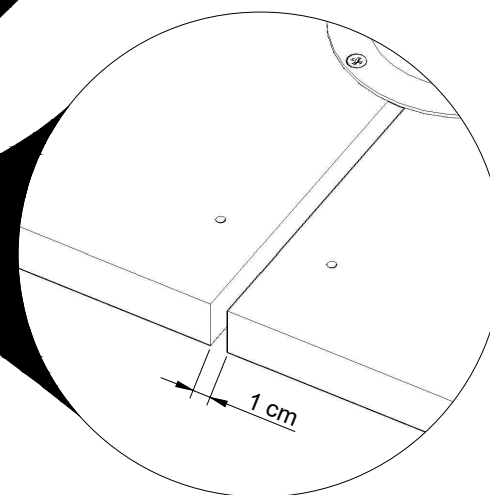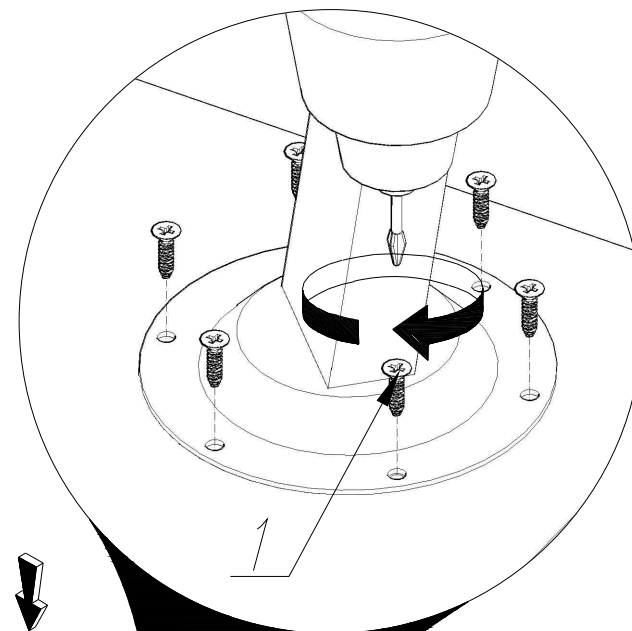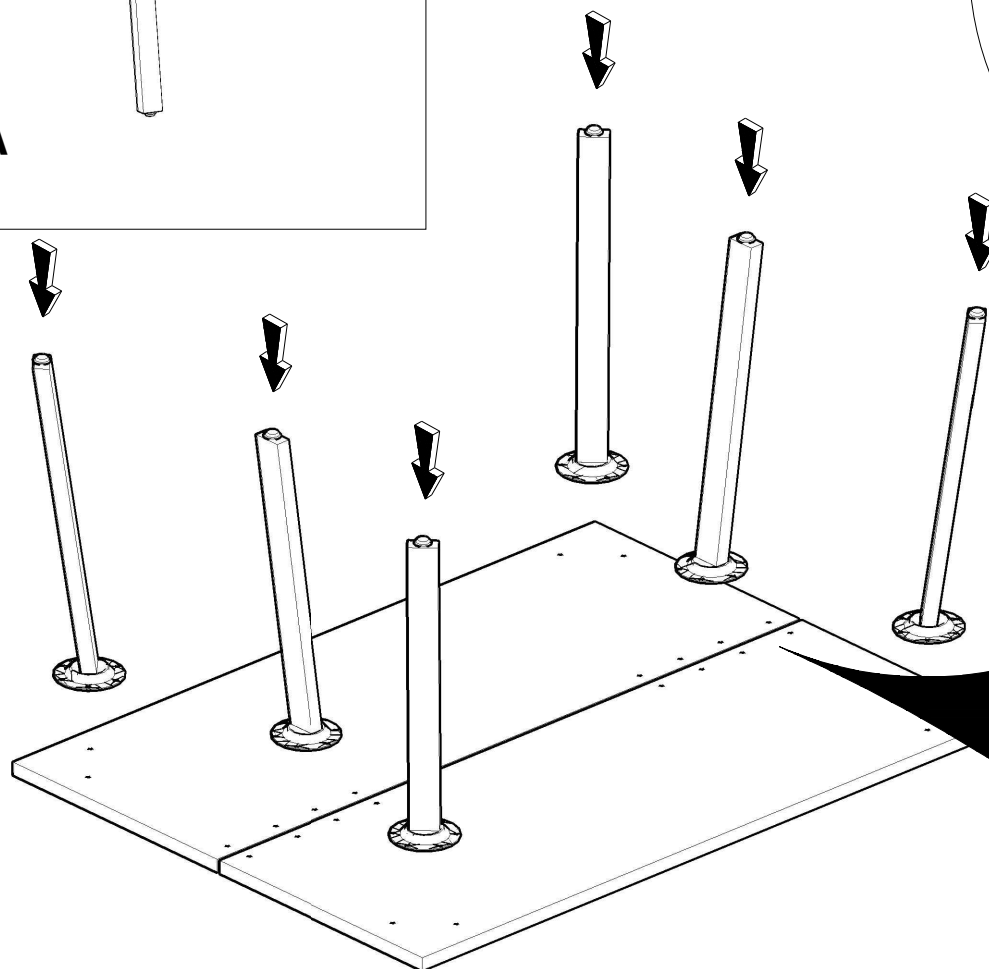




1
Ø5x20




OGI ATTACHMENT

A


OGI M
OGI W
OGI Q
OGI U
OGI Y

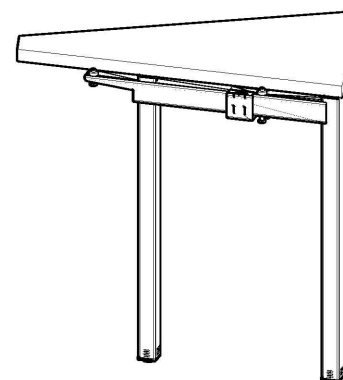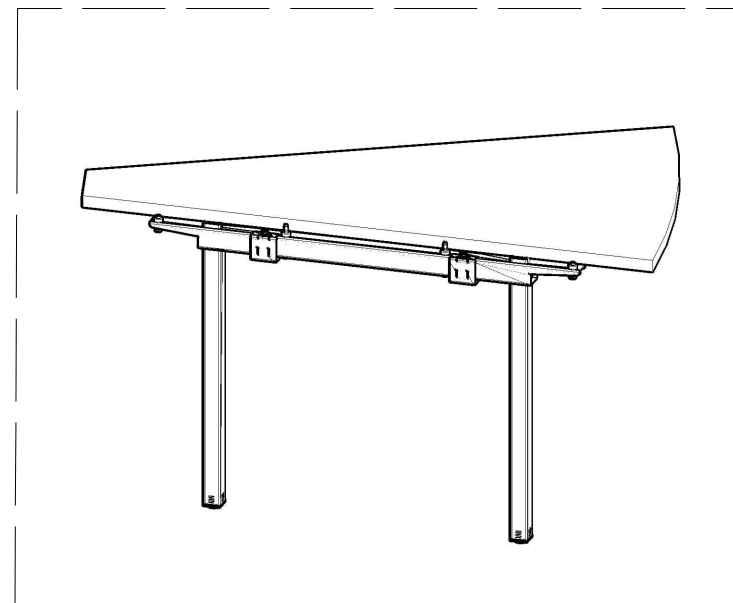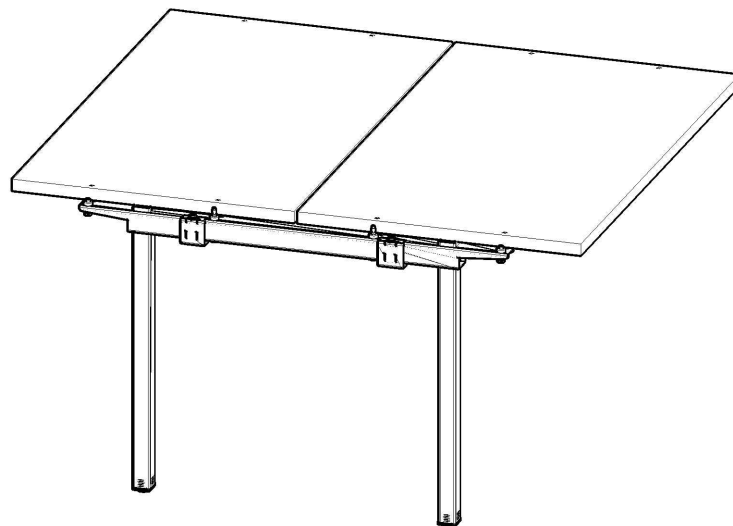




B

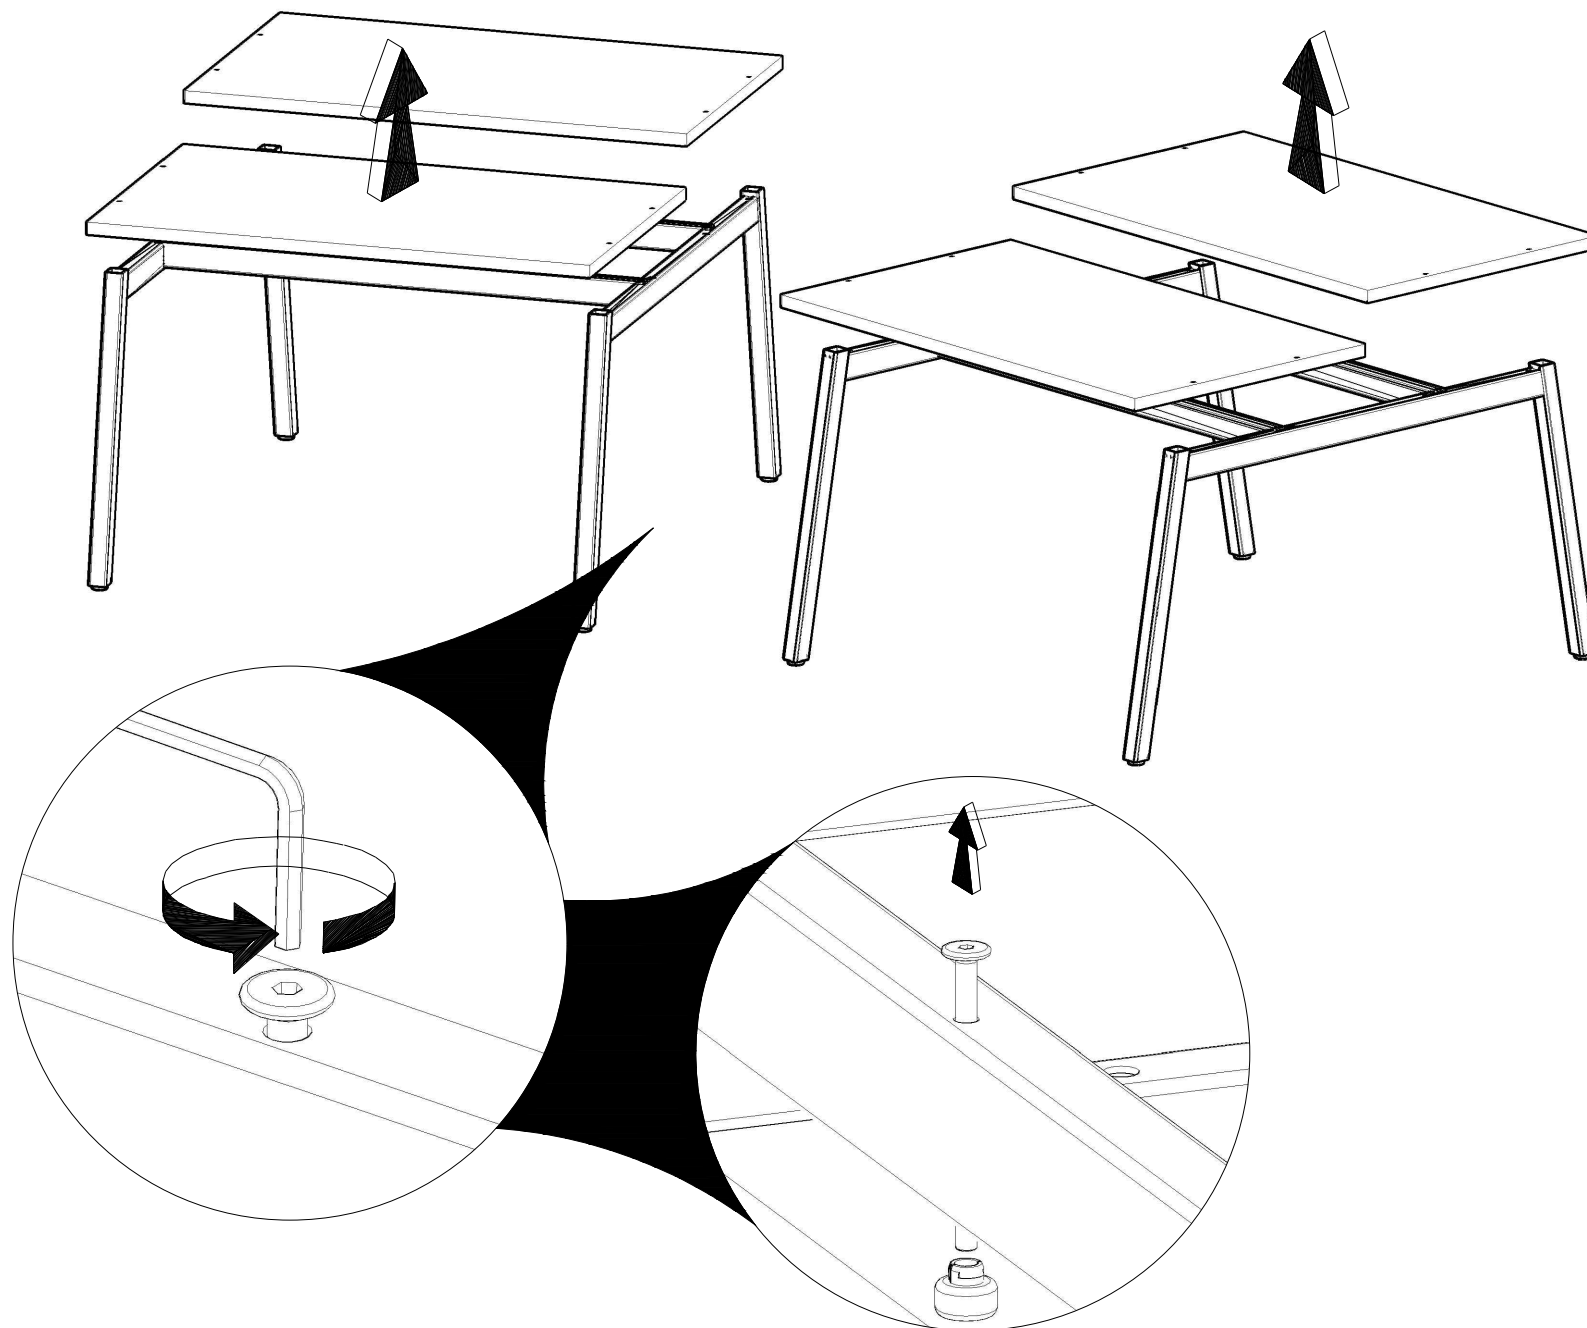


C

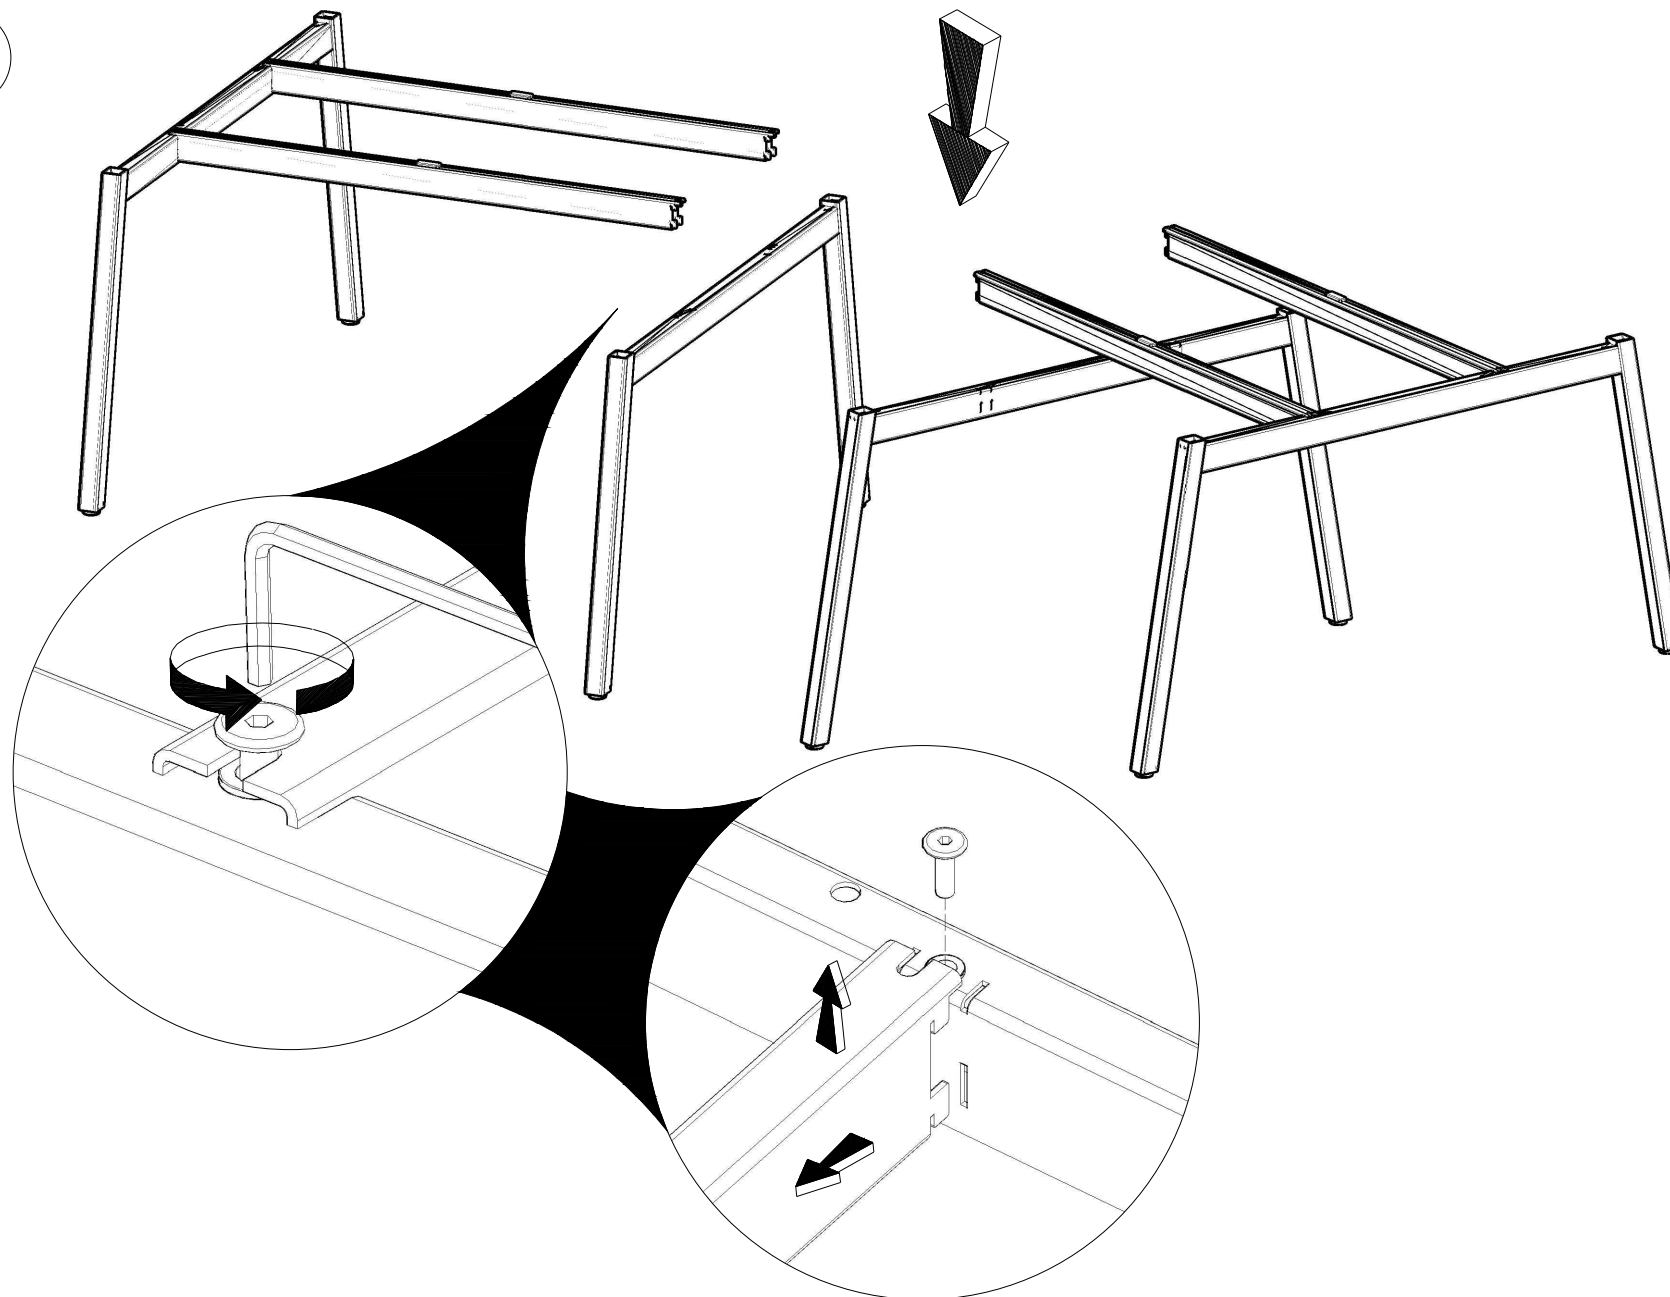


D

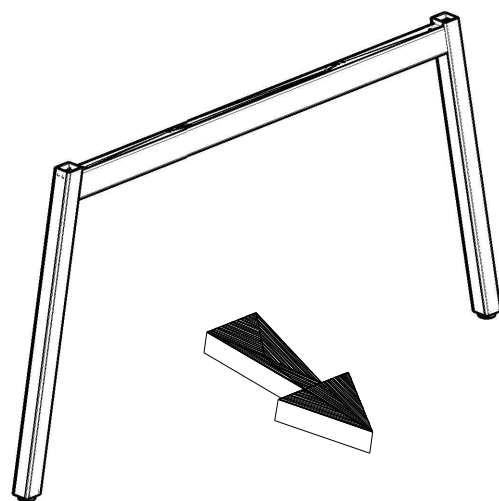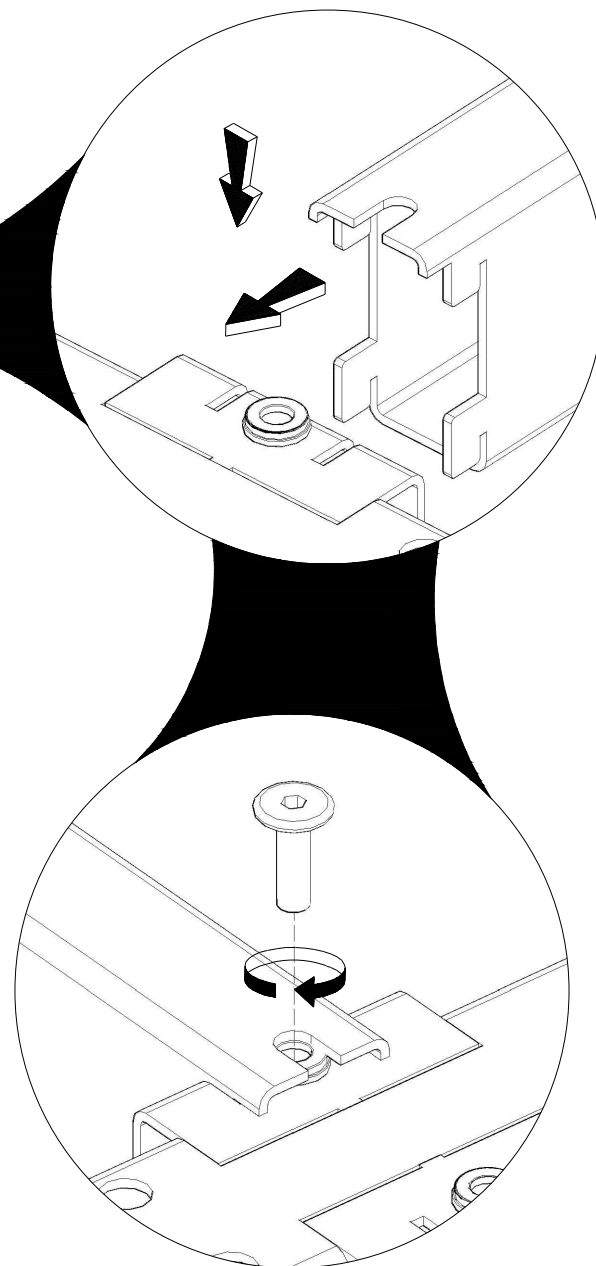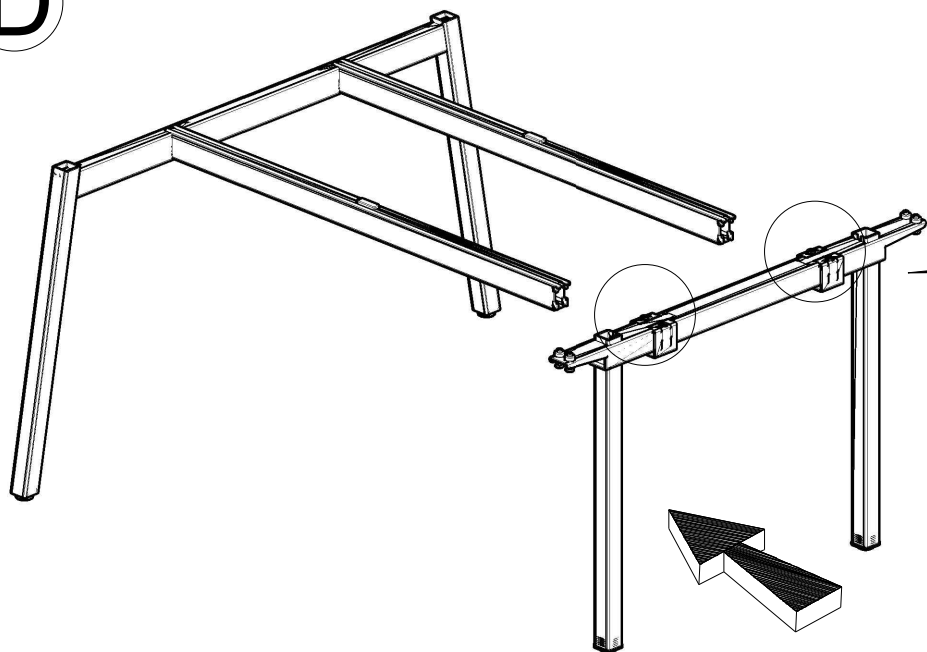



E

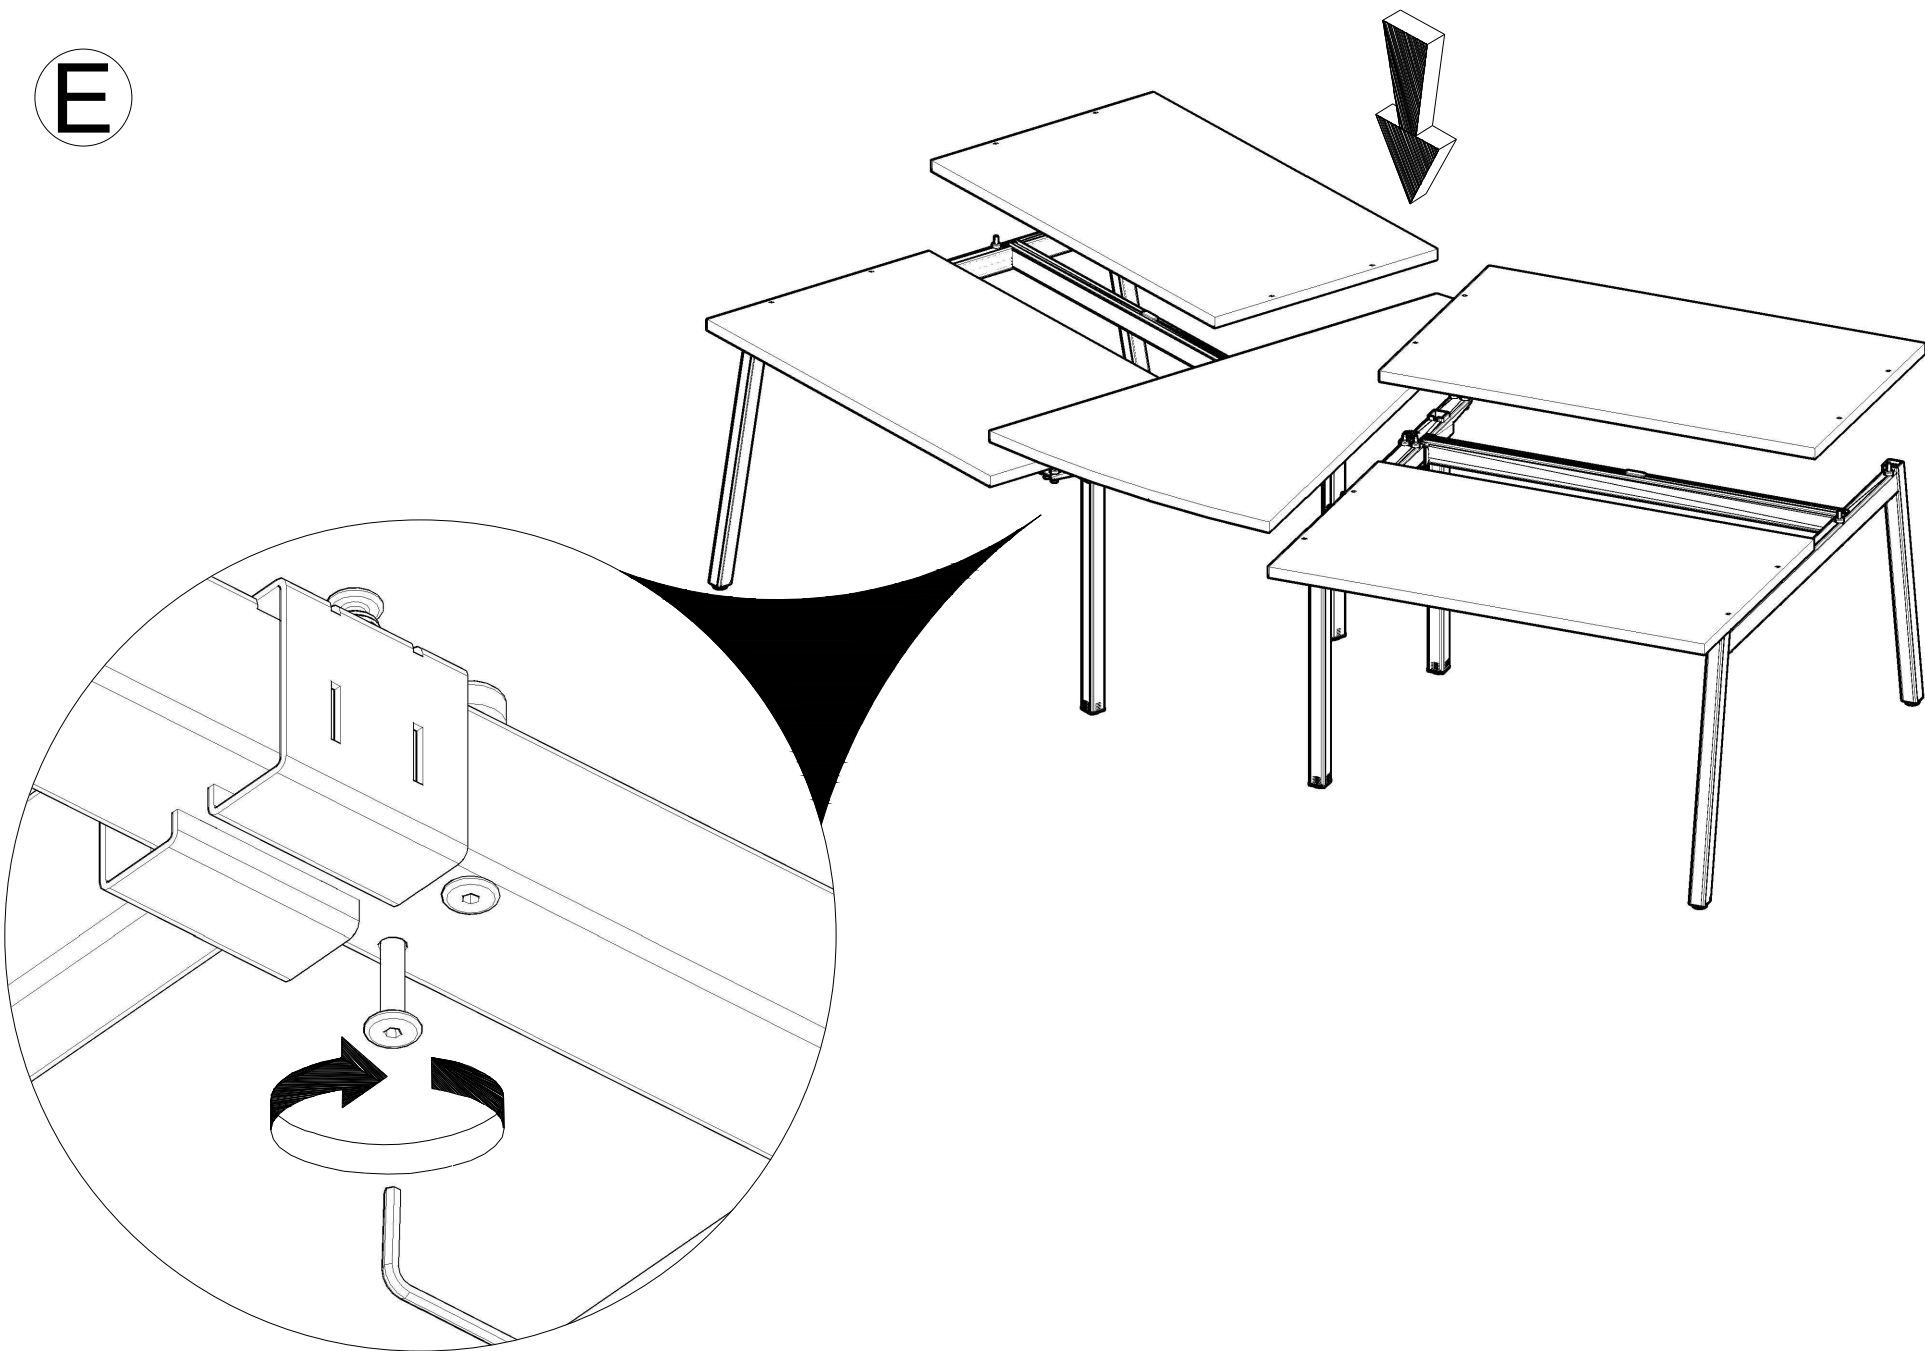


F

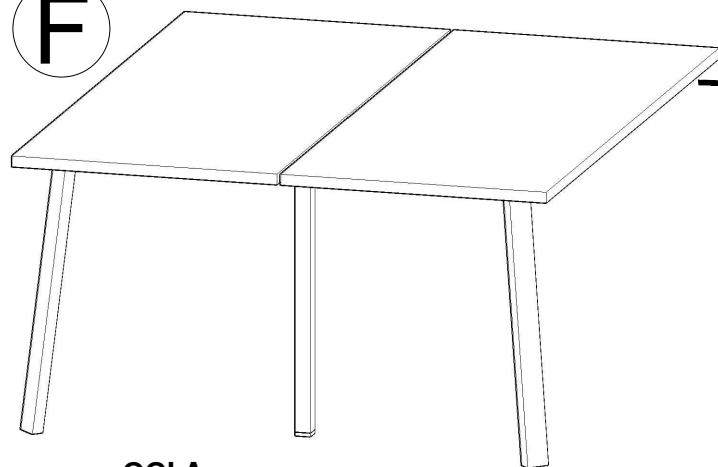

OGI A

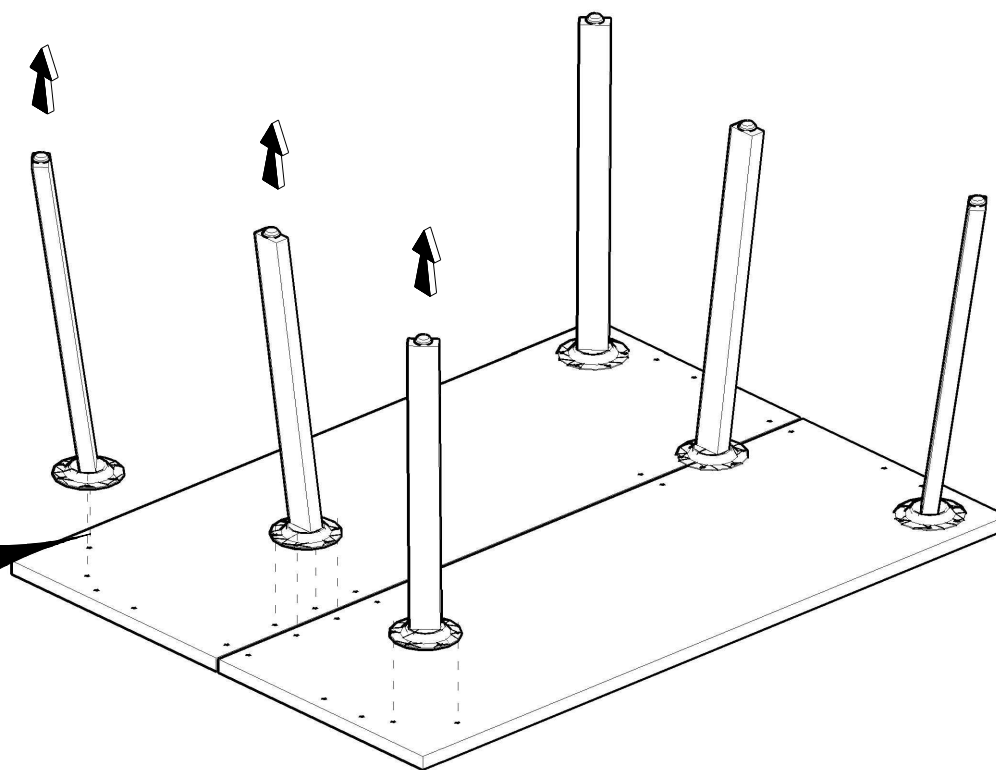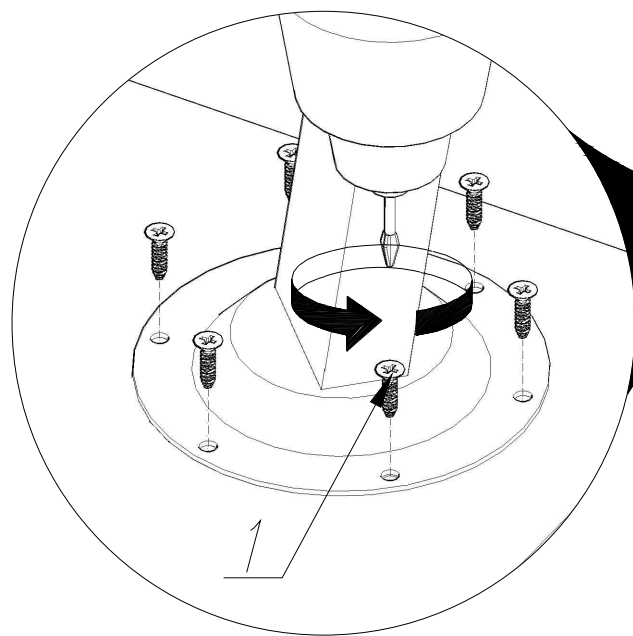


G

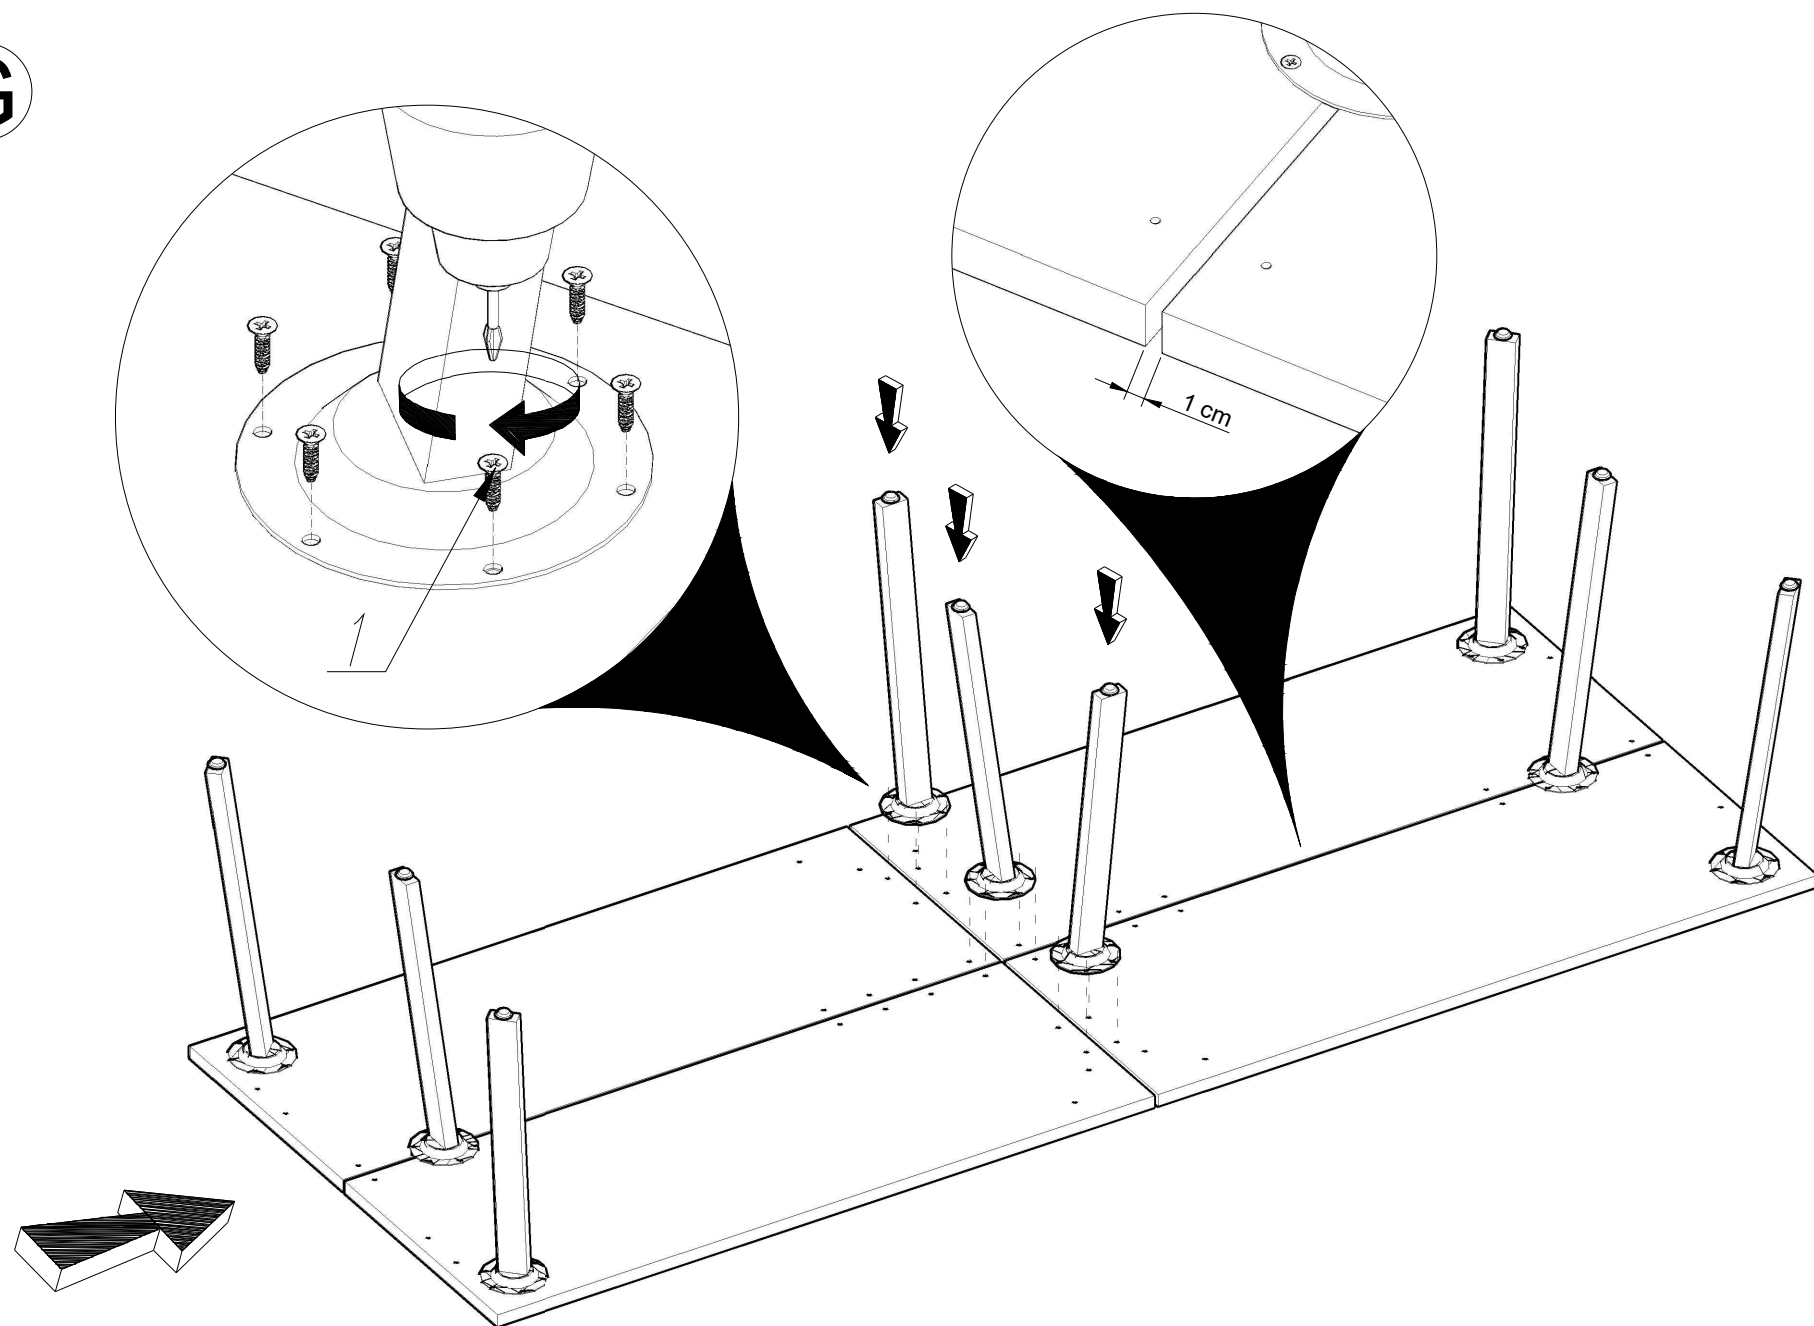


1	
2	
3	
4	
5	
6	
7	
8	
9	


A12M

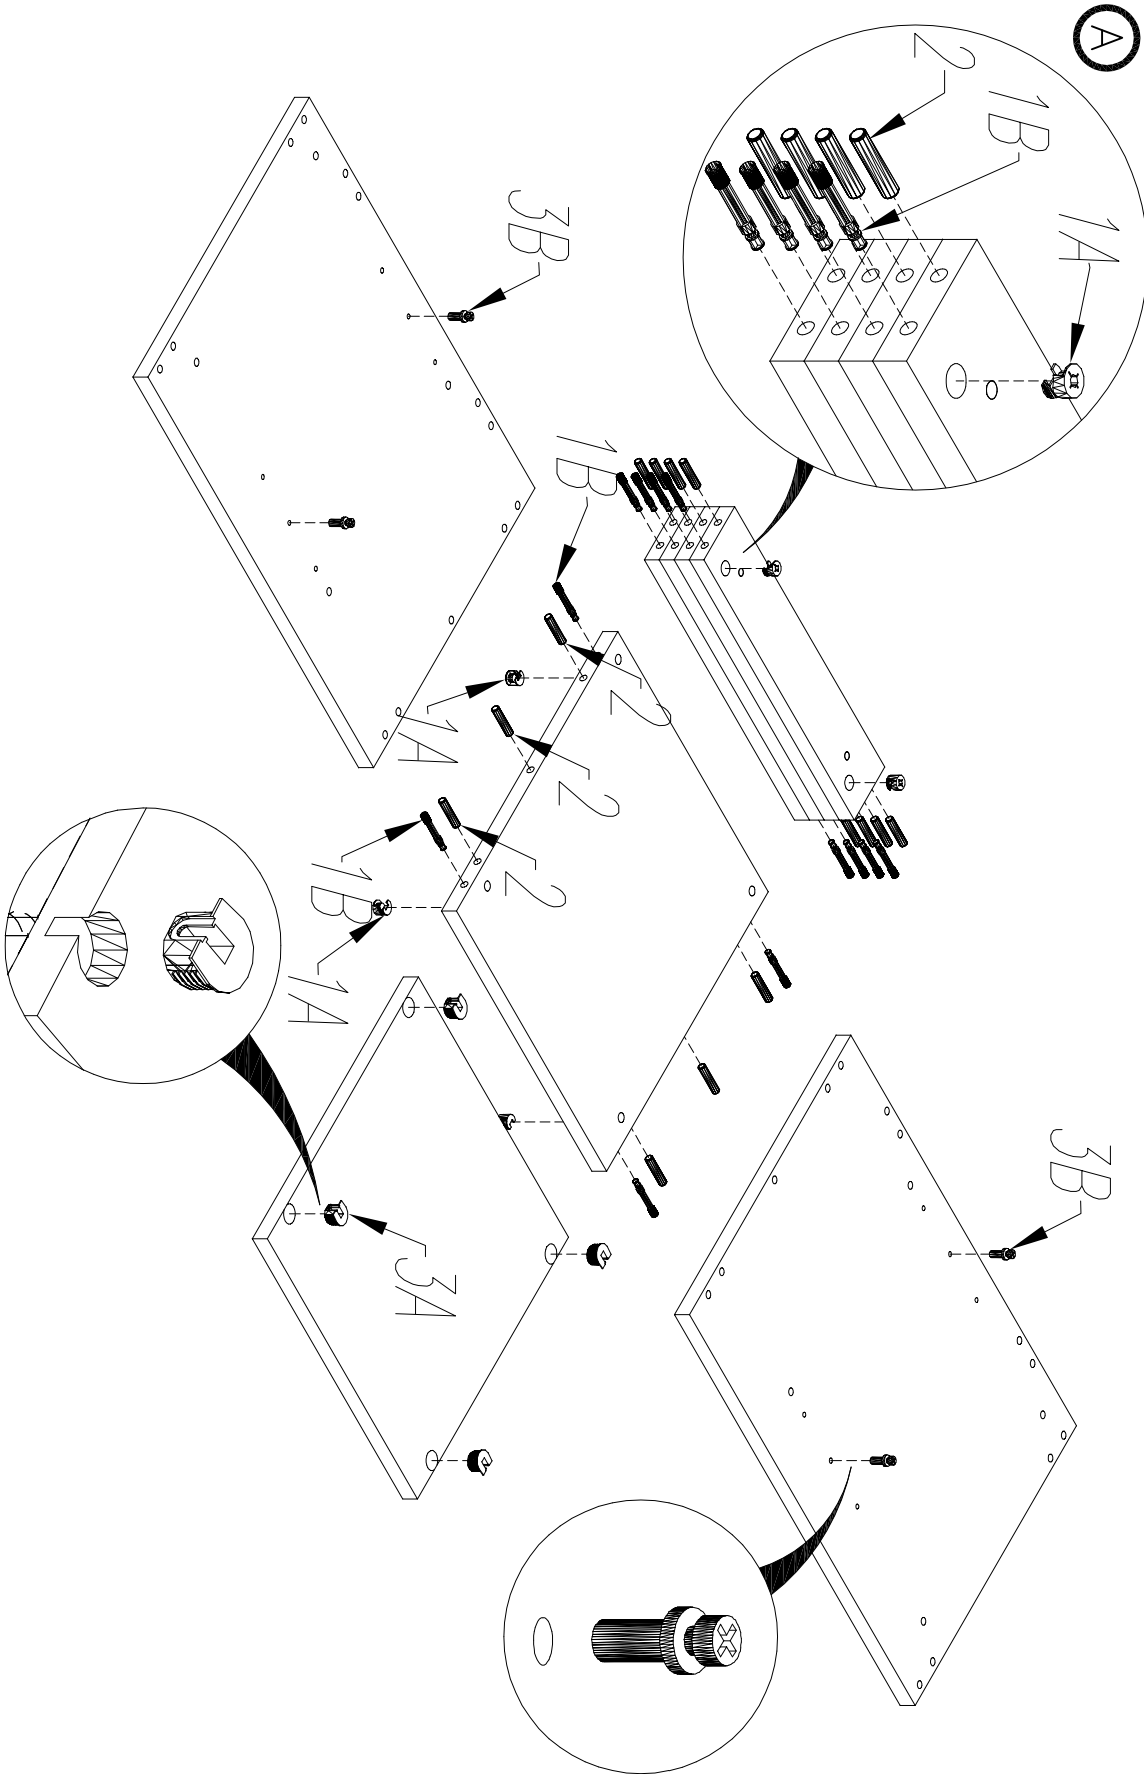


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

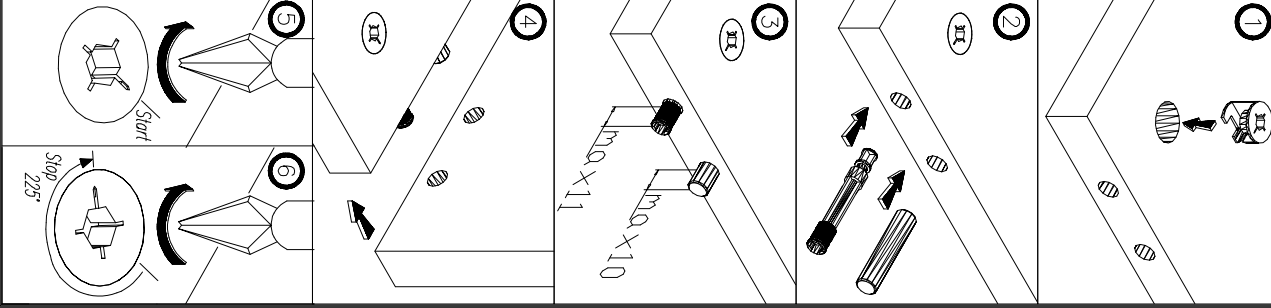

B

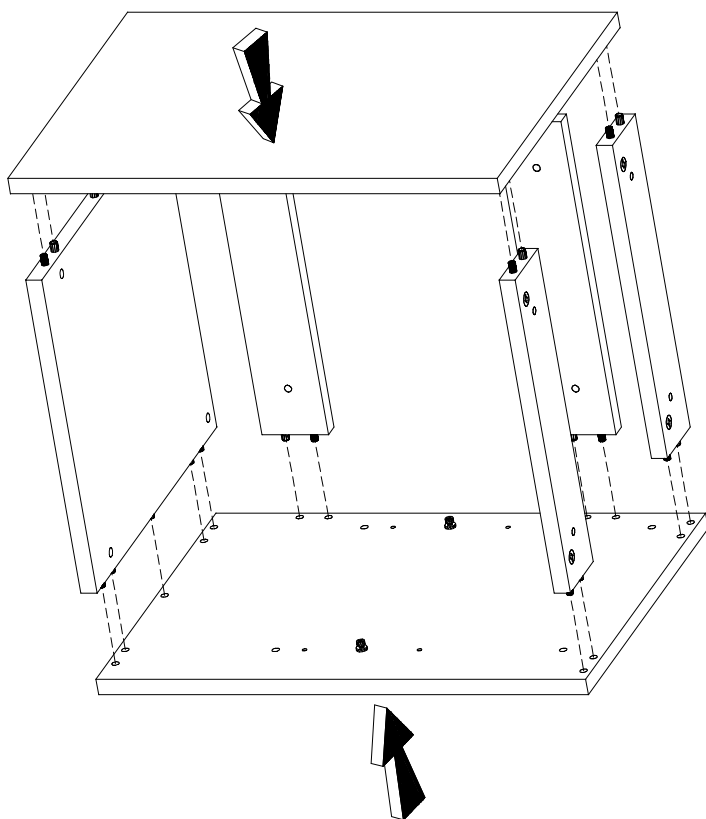

C

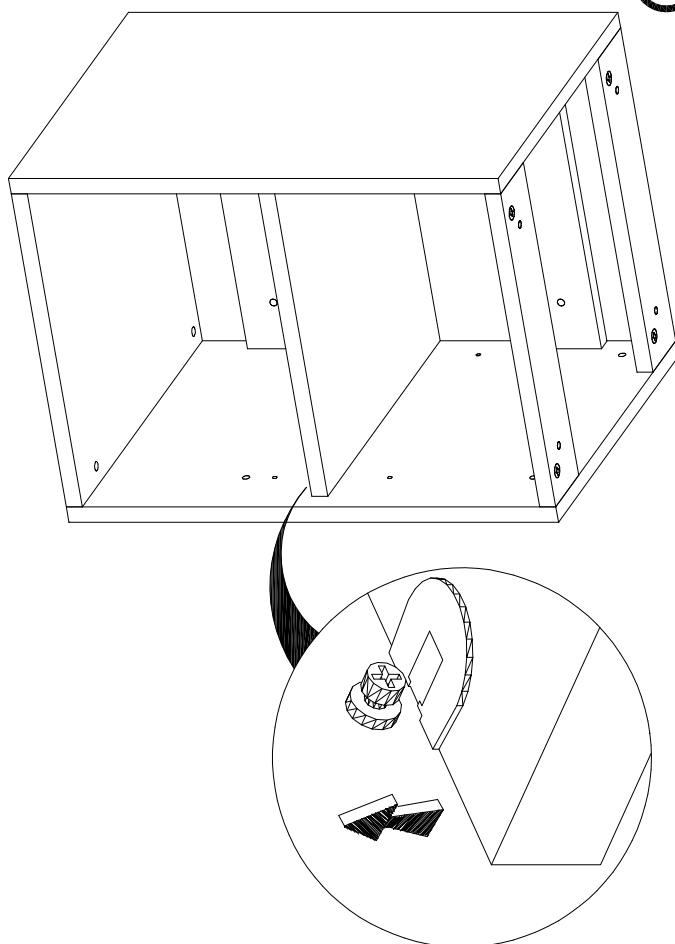

D

