

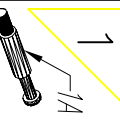


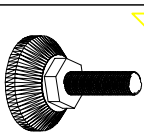
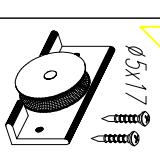
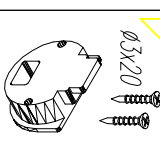
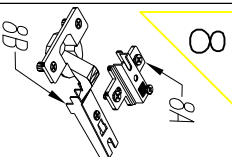
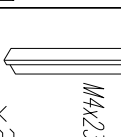
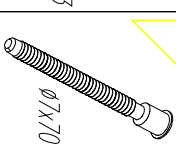


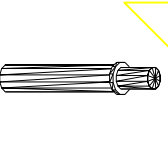


1		1A	1/4	1/4
2		2	3/2	3/2
3		3A	1/2	1/2
4		4	1	1
5		5	8	8
6		6	2	2
7		7	2	2
8		8	4	4
9		9	2	2
10		10	2	2
11		11	2	2
12		12	4	4
13		13	2	2




QR16

A

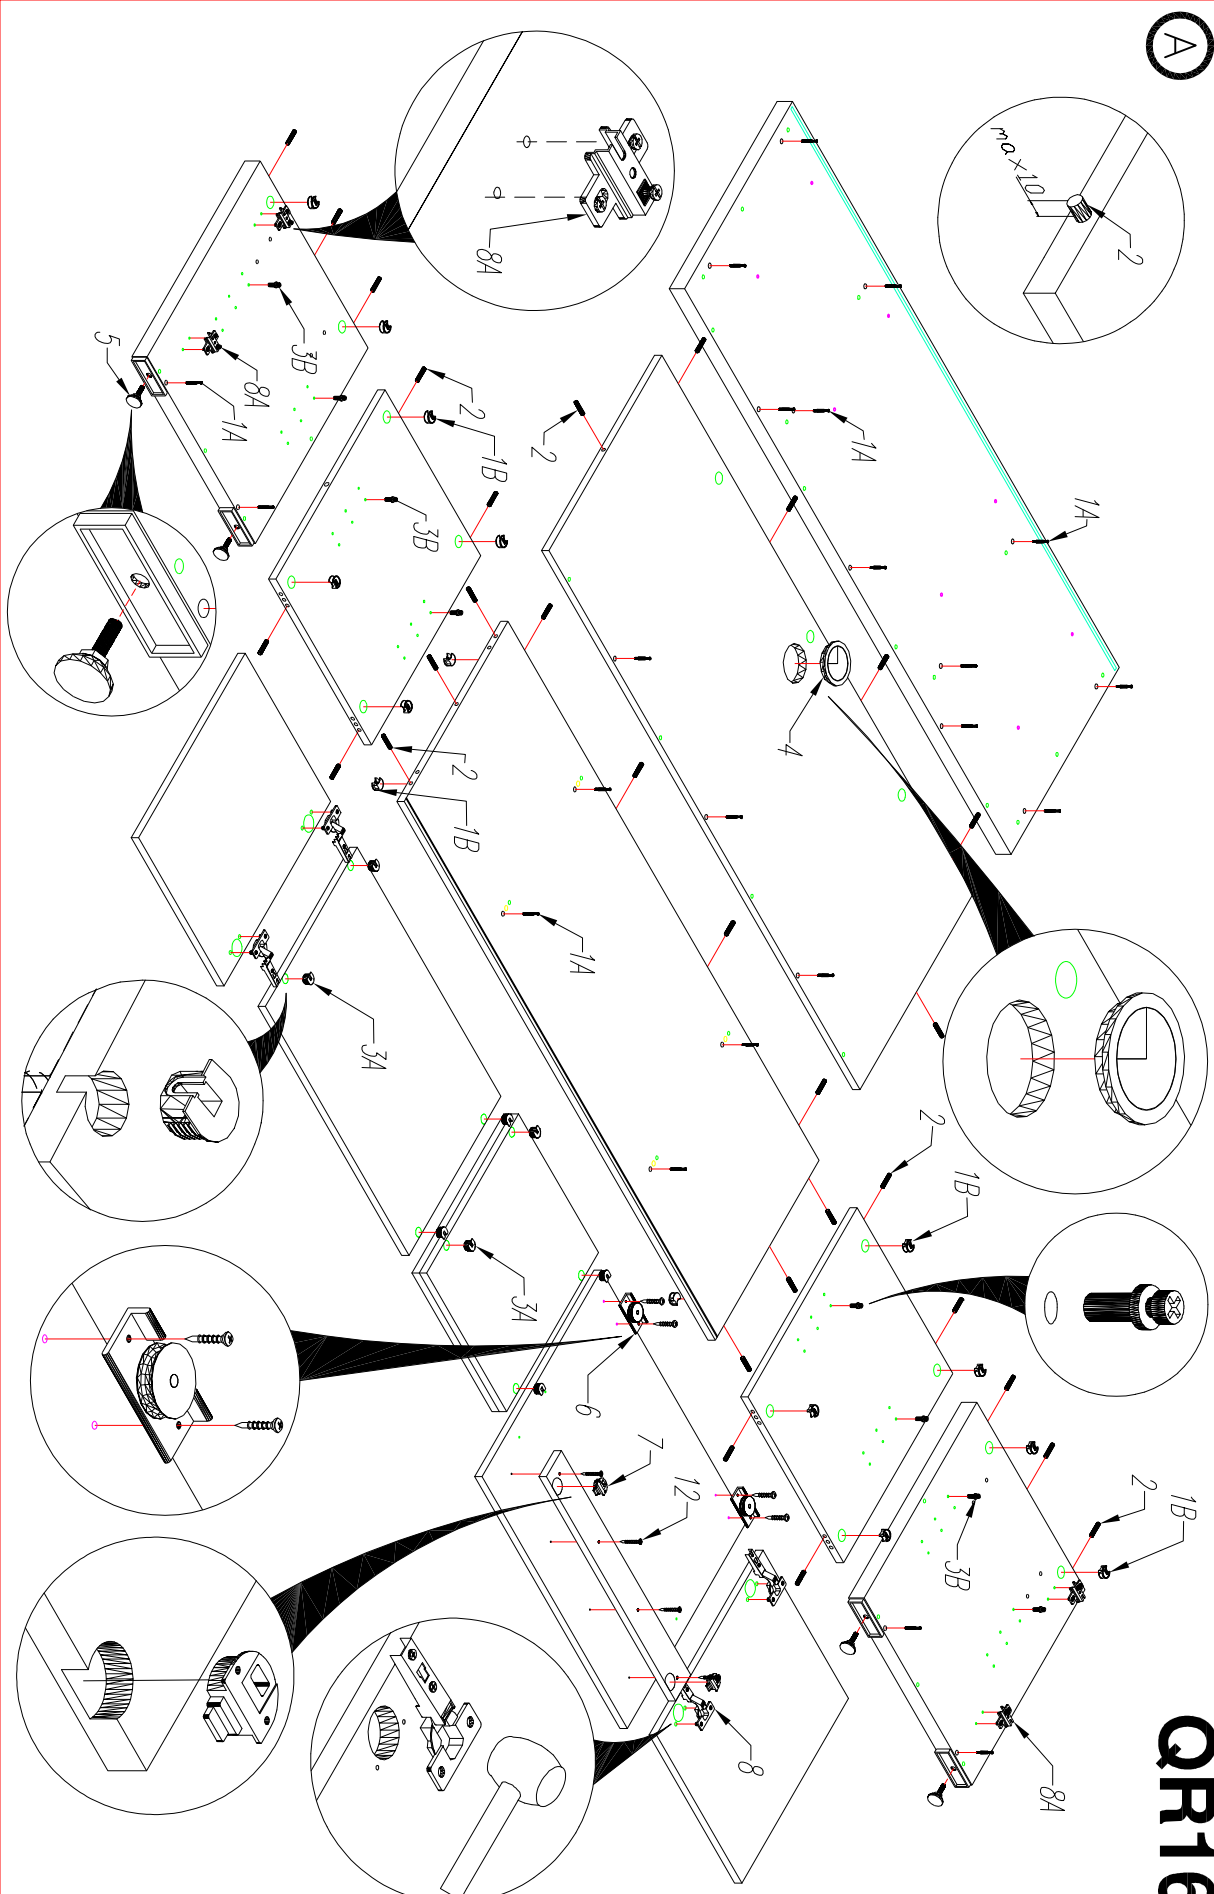


KOLEIŃOŚĆ MONTAŻU
MONTASZSODŲ.
THE FITTING SEQUENCE OF THE
CAM.
DIE MONTAGEFOLGE VON
EXZENTERN.


①

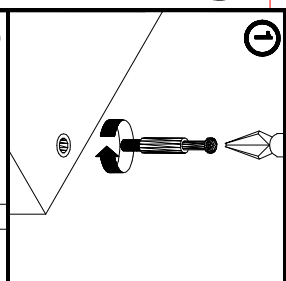

②

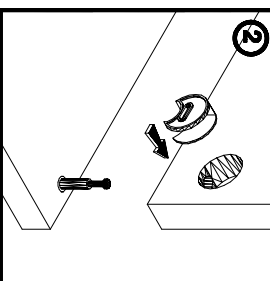


③

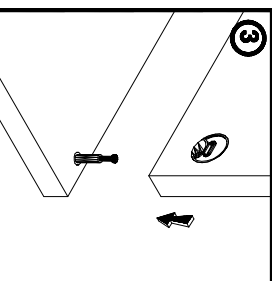


④




⑤

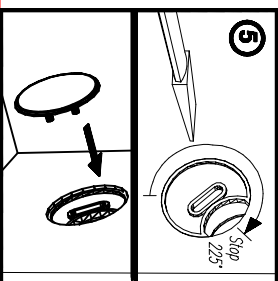


B

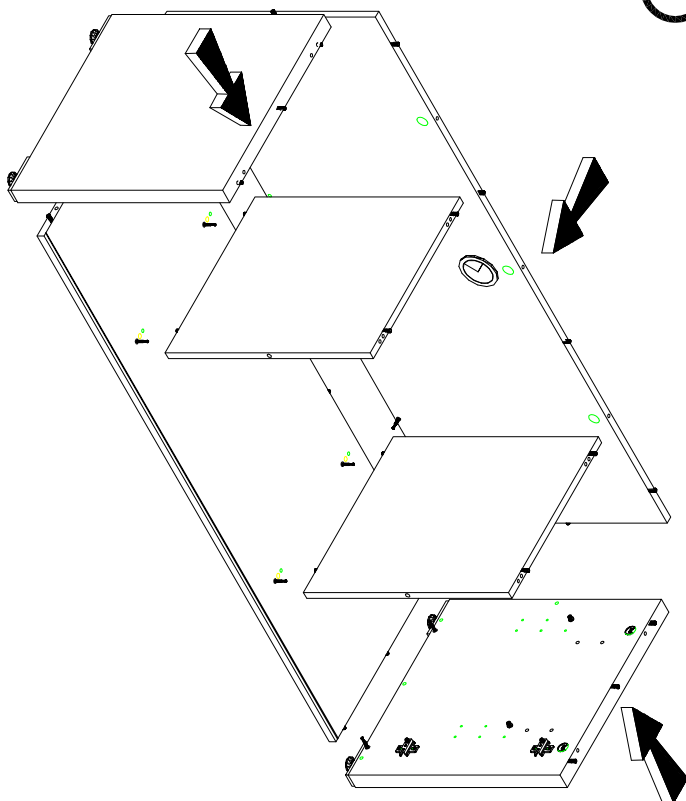


C

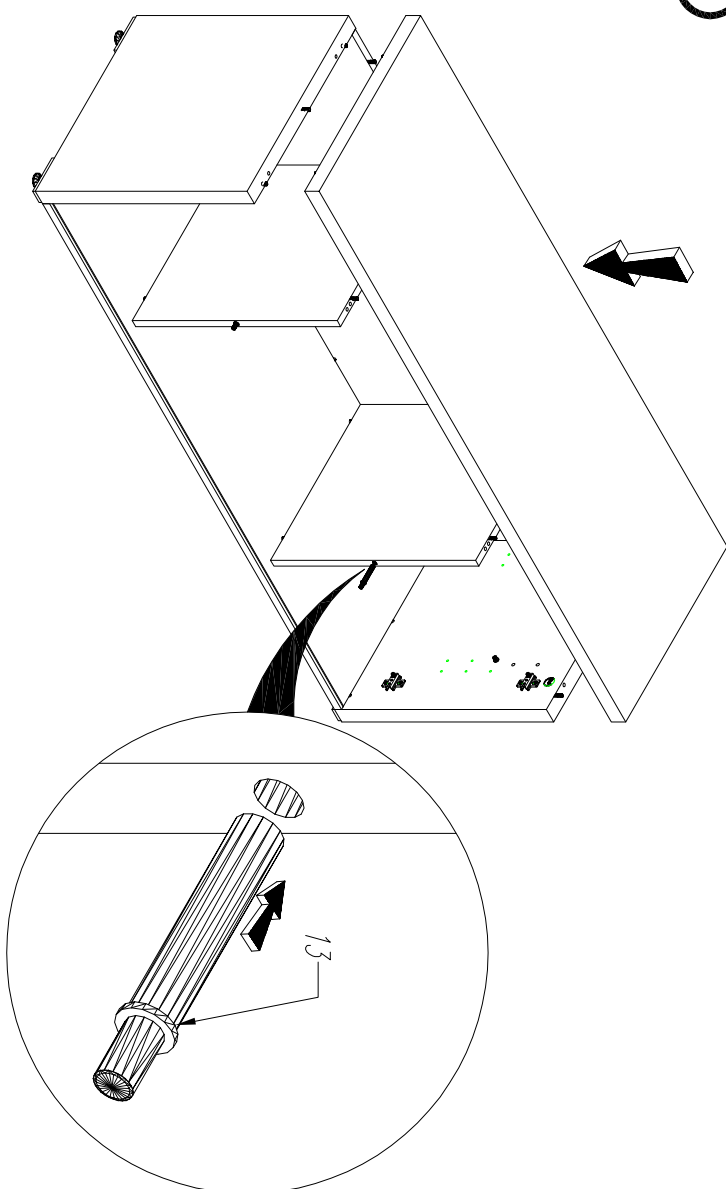

D

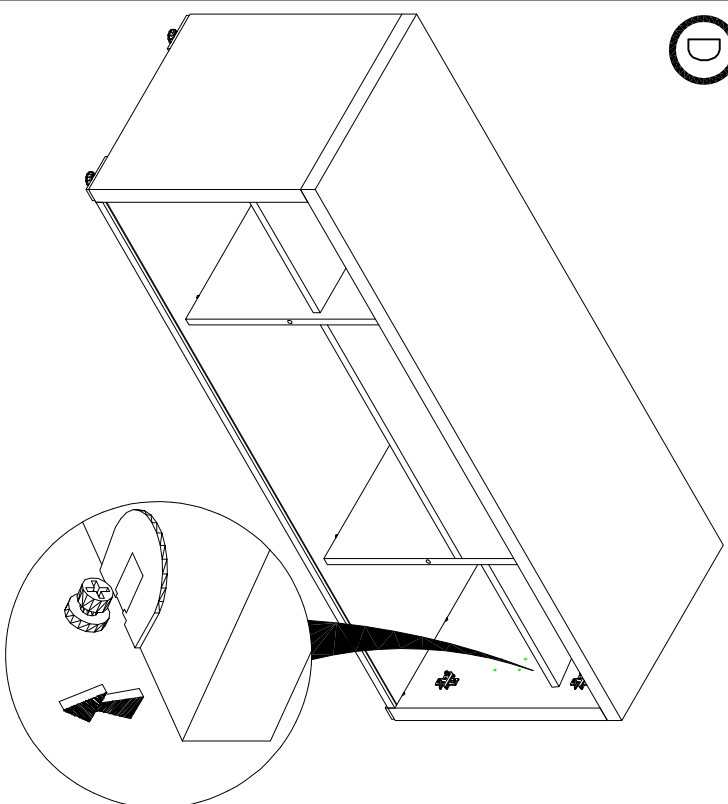

E

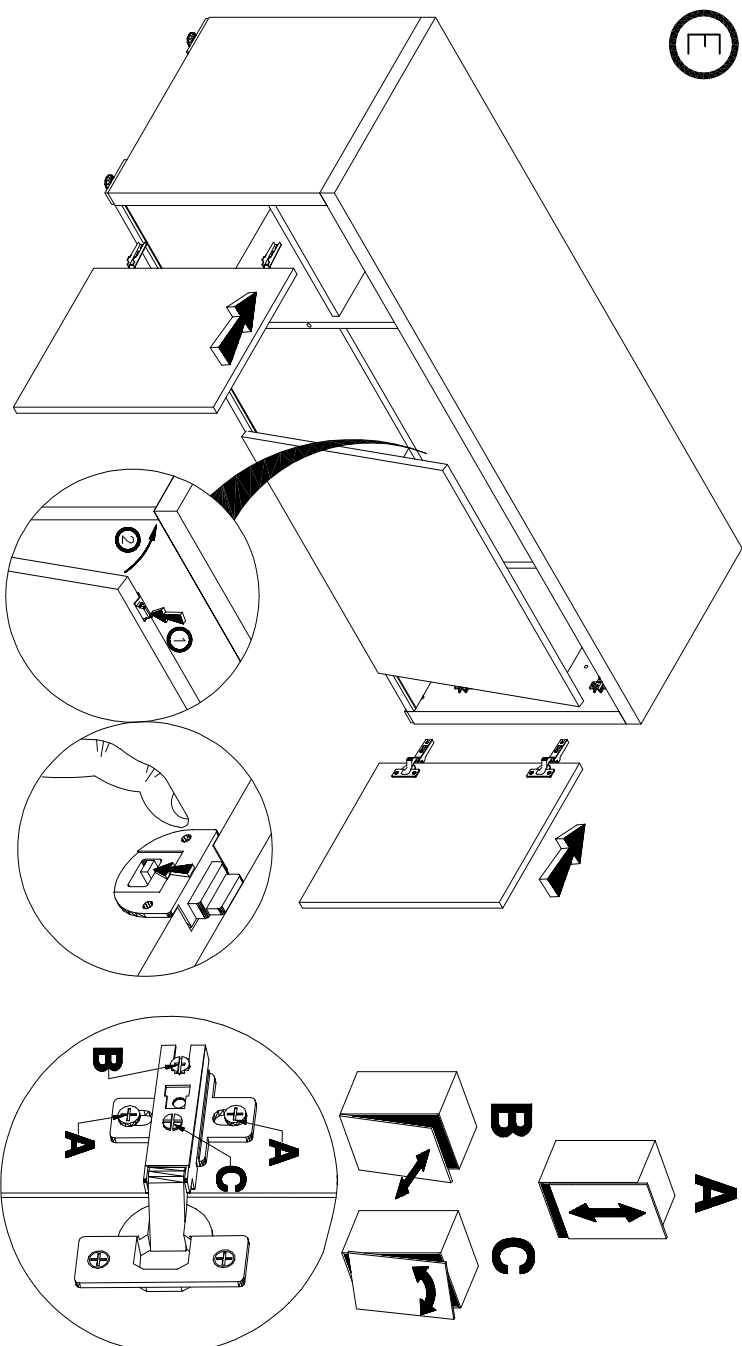

QU19 QU16

