
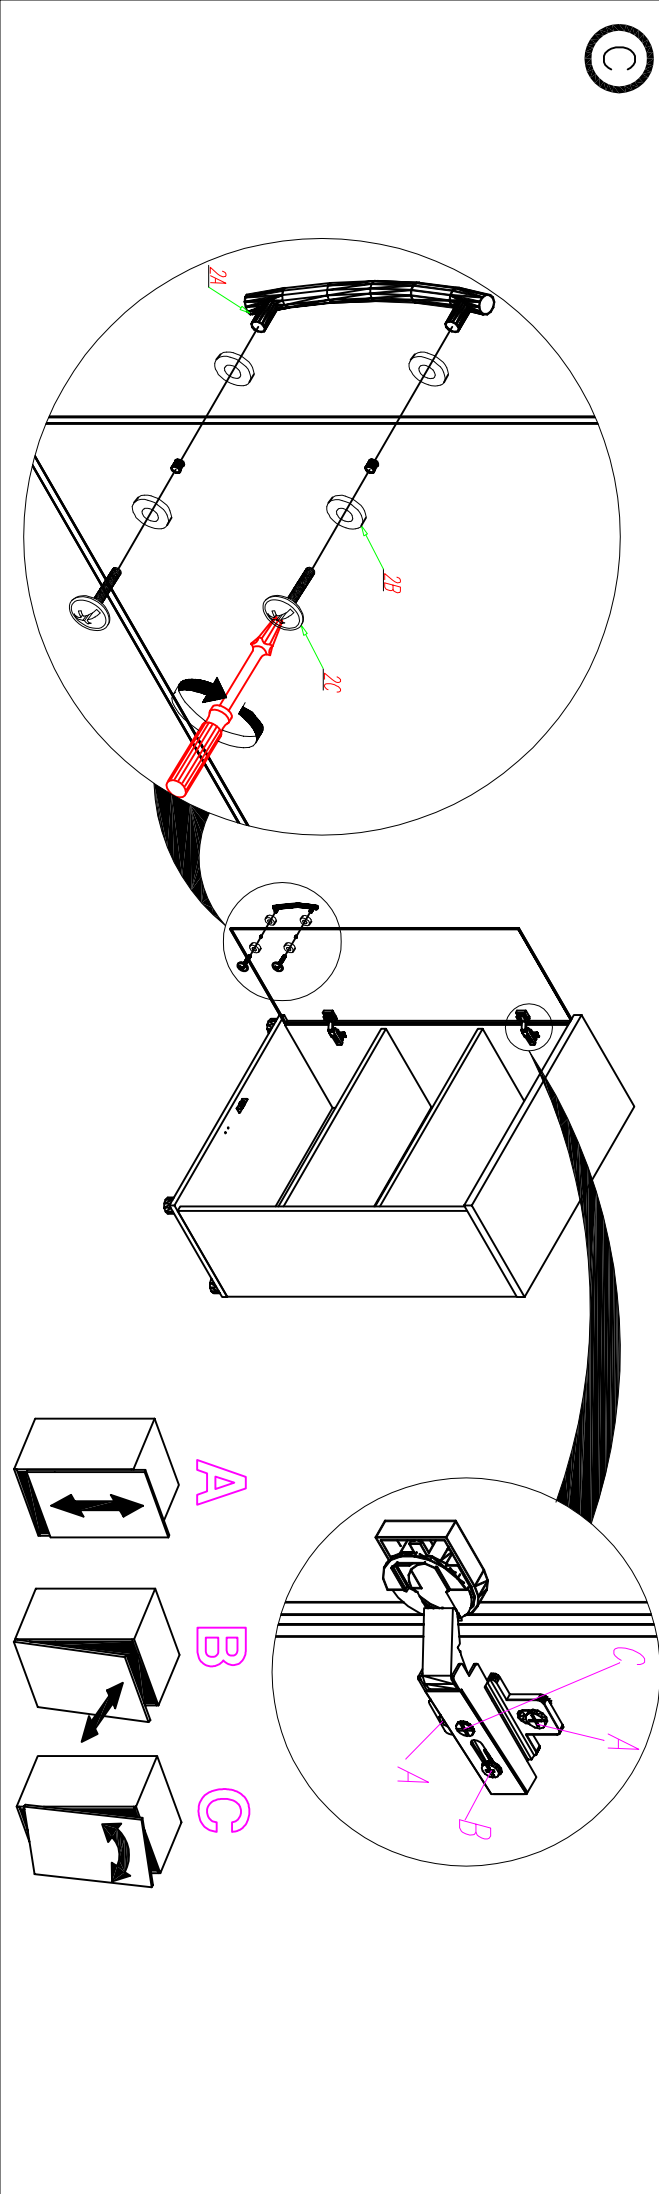
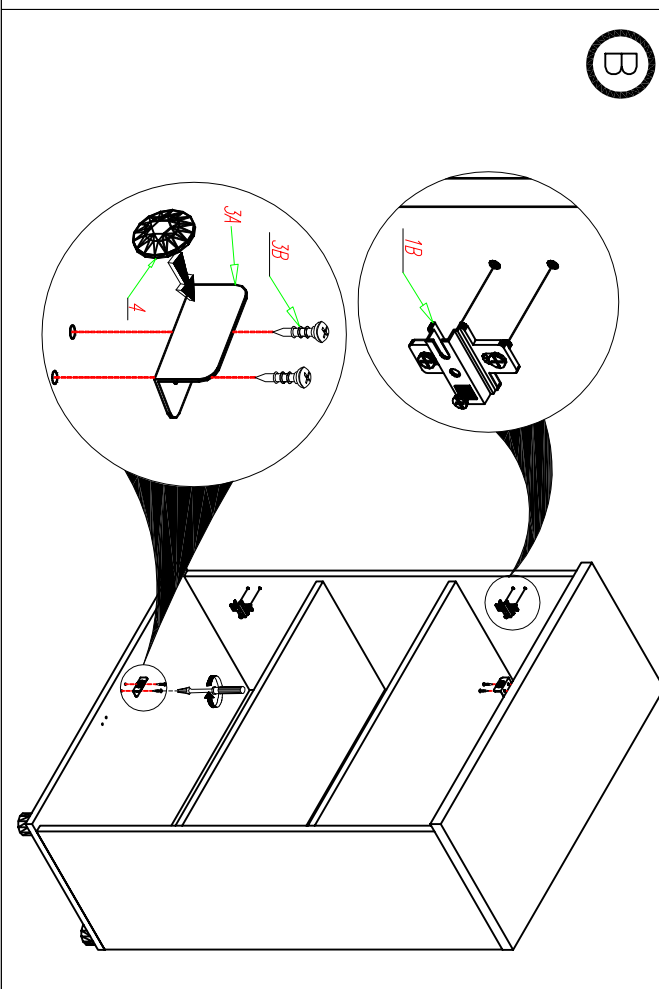






- 1
1C
1B
1A
1E
1D
1F
1G
1H
1I
1J
1K
1L
1M
1N
1O
1P
1Q
1R
1S
1T
1U
1V
1W
1X
1Y
1Z
- 2
2A
2B
2C
2D
2E
2F
2G
2H
2I
2J
2K
2L
2M
2N
2O
2P
2Q
2R
2S
2T
2U
2V
2W
2X
2Y
2Z
- 3
3A
3B
3C
3D
3E
3F
3G
3H
3I
3J
3K
3L
3M
3N
3O
3P
3Q
3R
3S
3T
3U
3V
3W
3X
3Y
3Z
- 4
4A
4B
4C
4D
4E
4F
4G
4H
4I
4J
4K
4L
4M
4N
4O
4P
4Q
4R
4S
4T
4U
4V
4W
4X
4Y
4Z






AS	
----	--

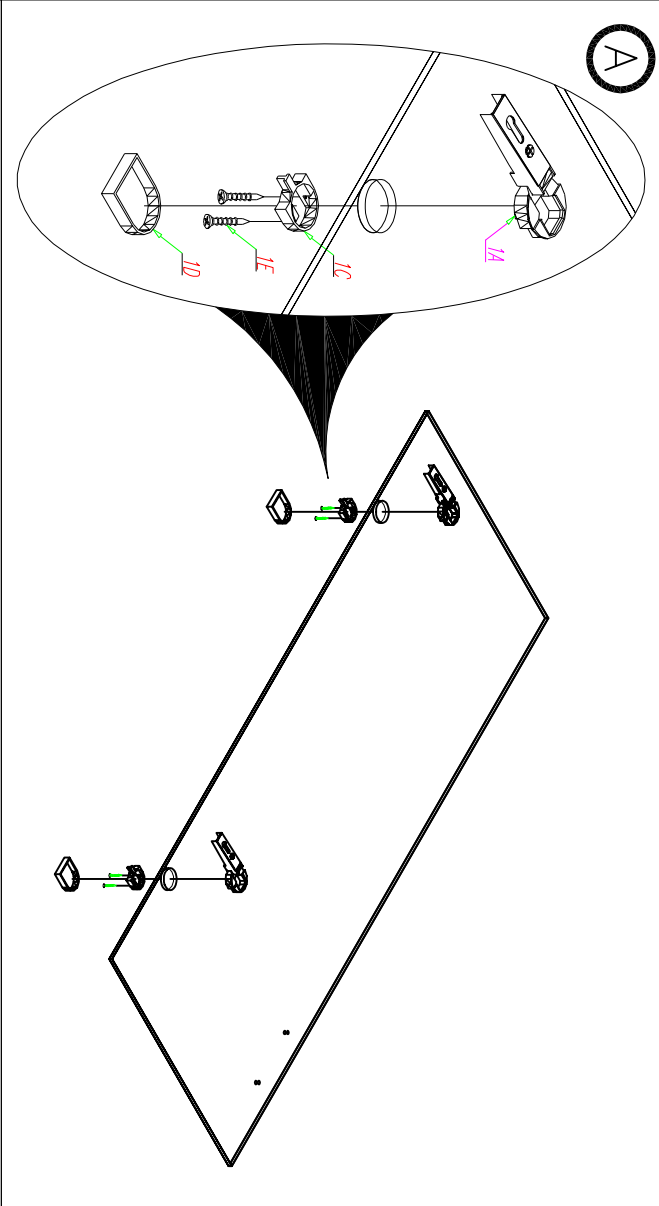

- 1C
1D
1E
1B
AS2 x2
AS3 x3
ø5x9
- 2A
2B
2C
M4x12
x1
- 3A
3B
ø3x16
x2
- 4
x2






	AS
--	-----------

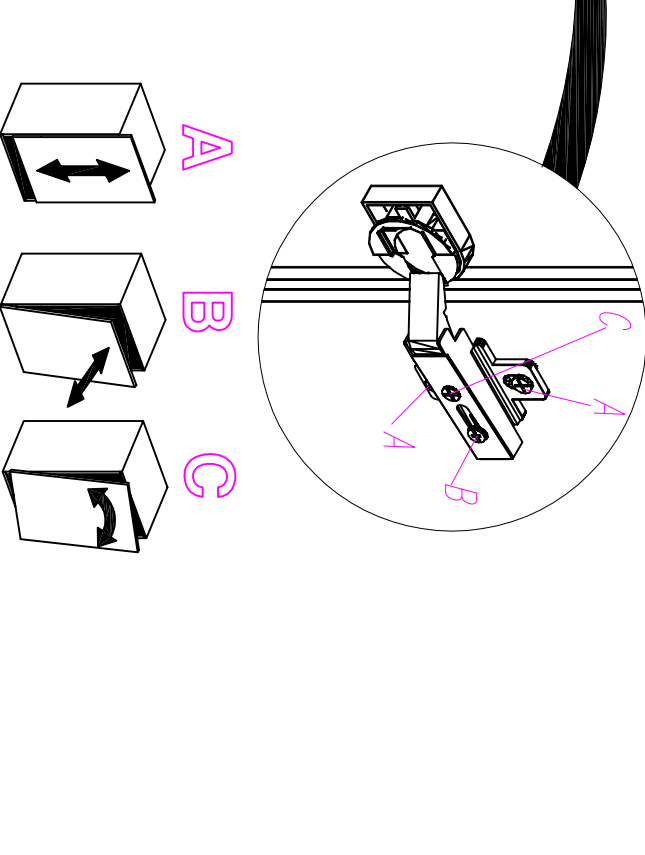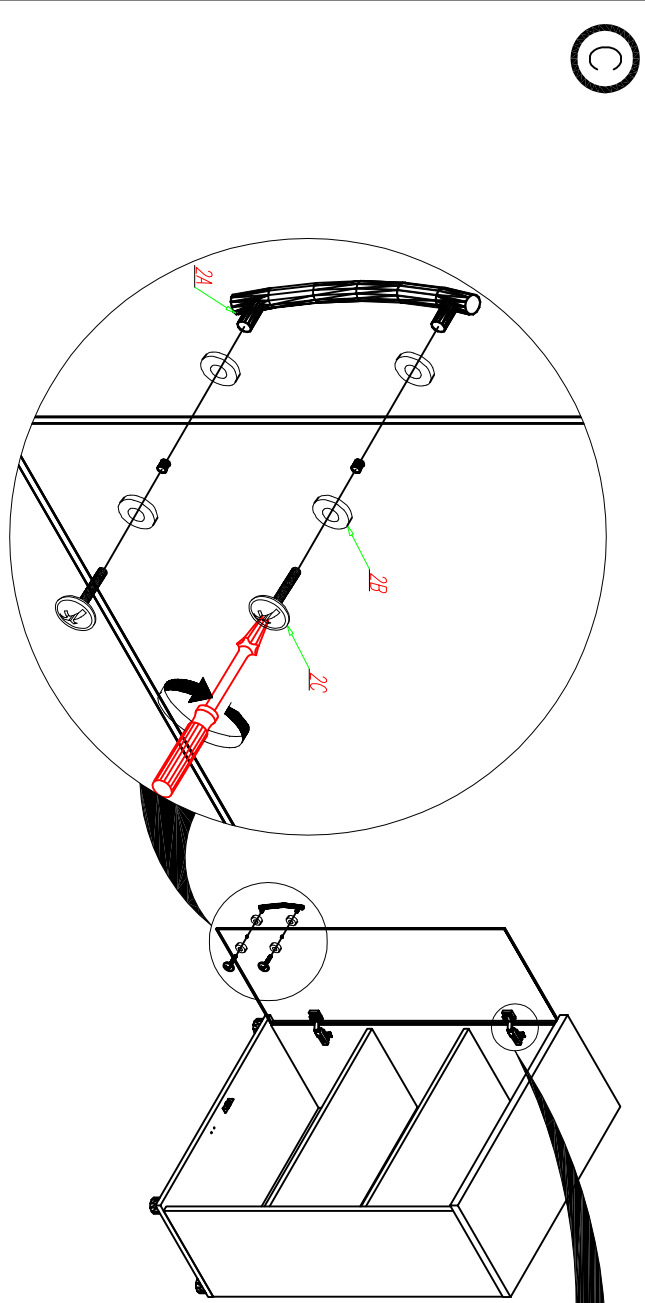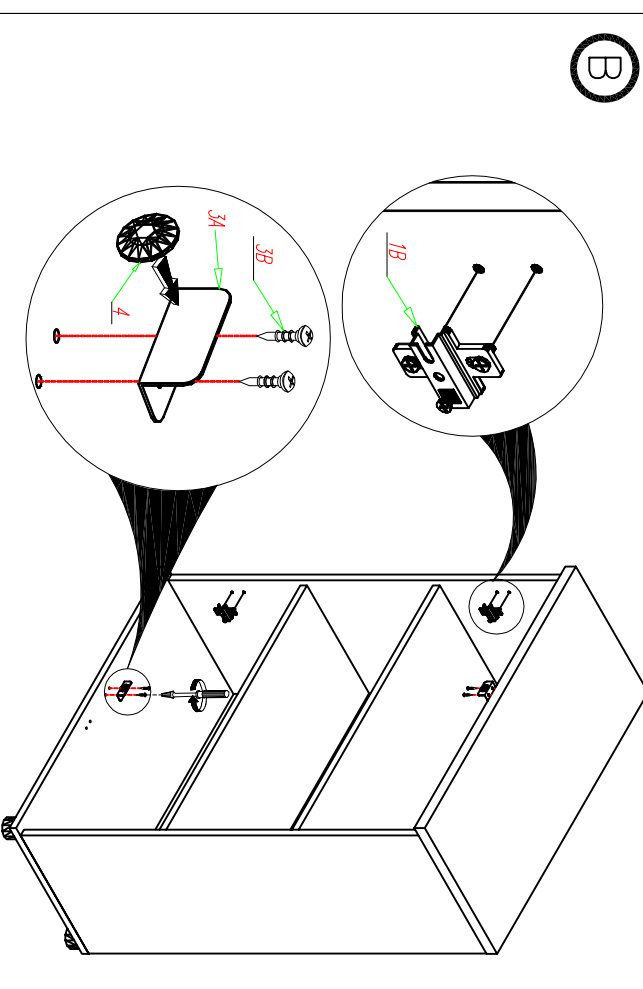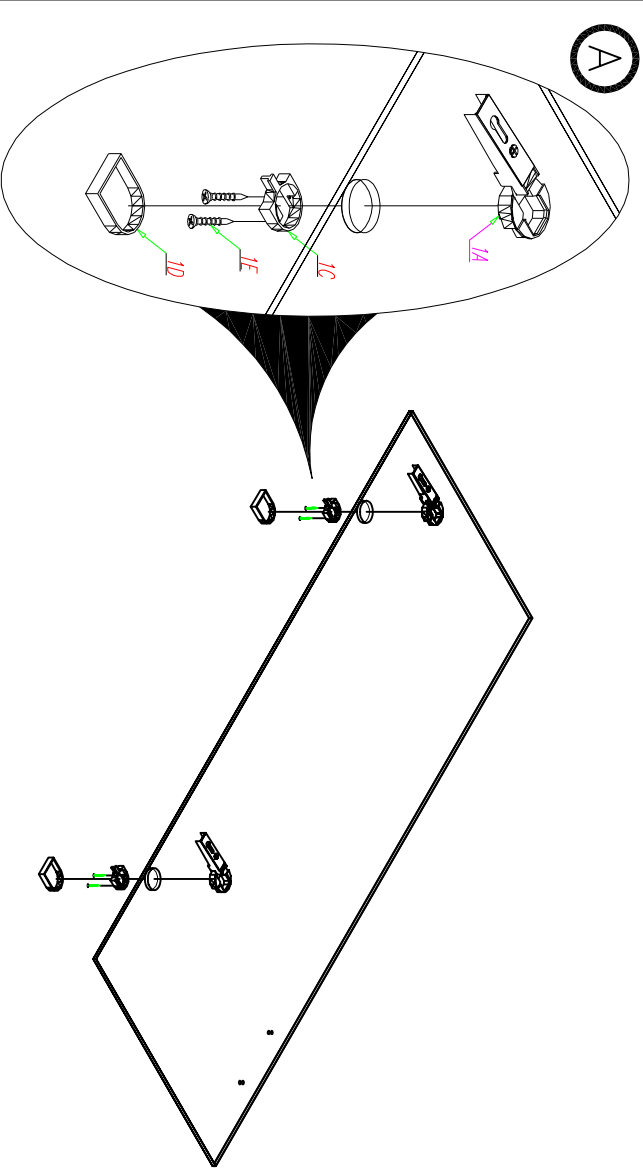

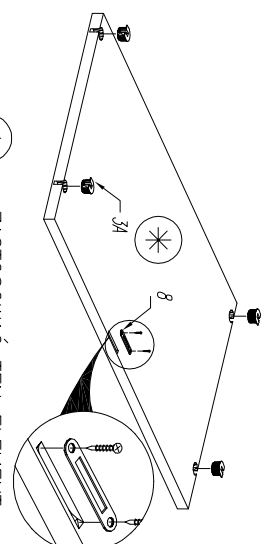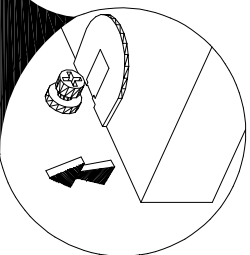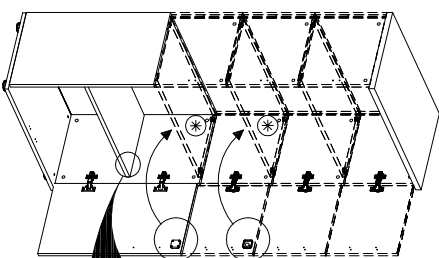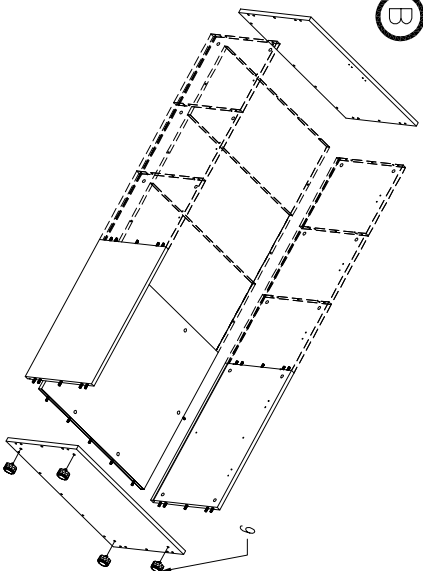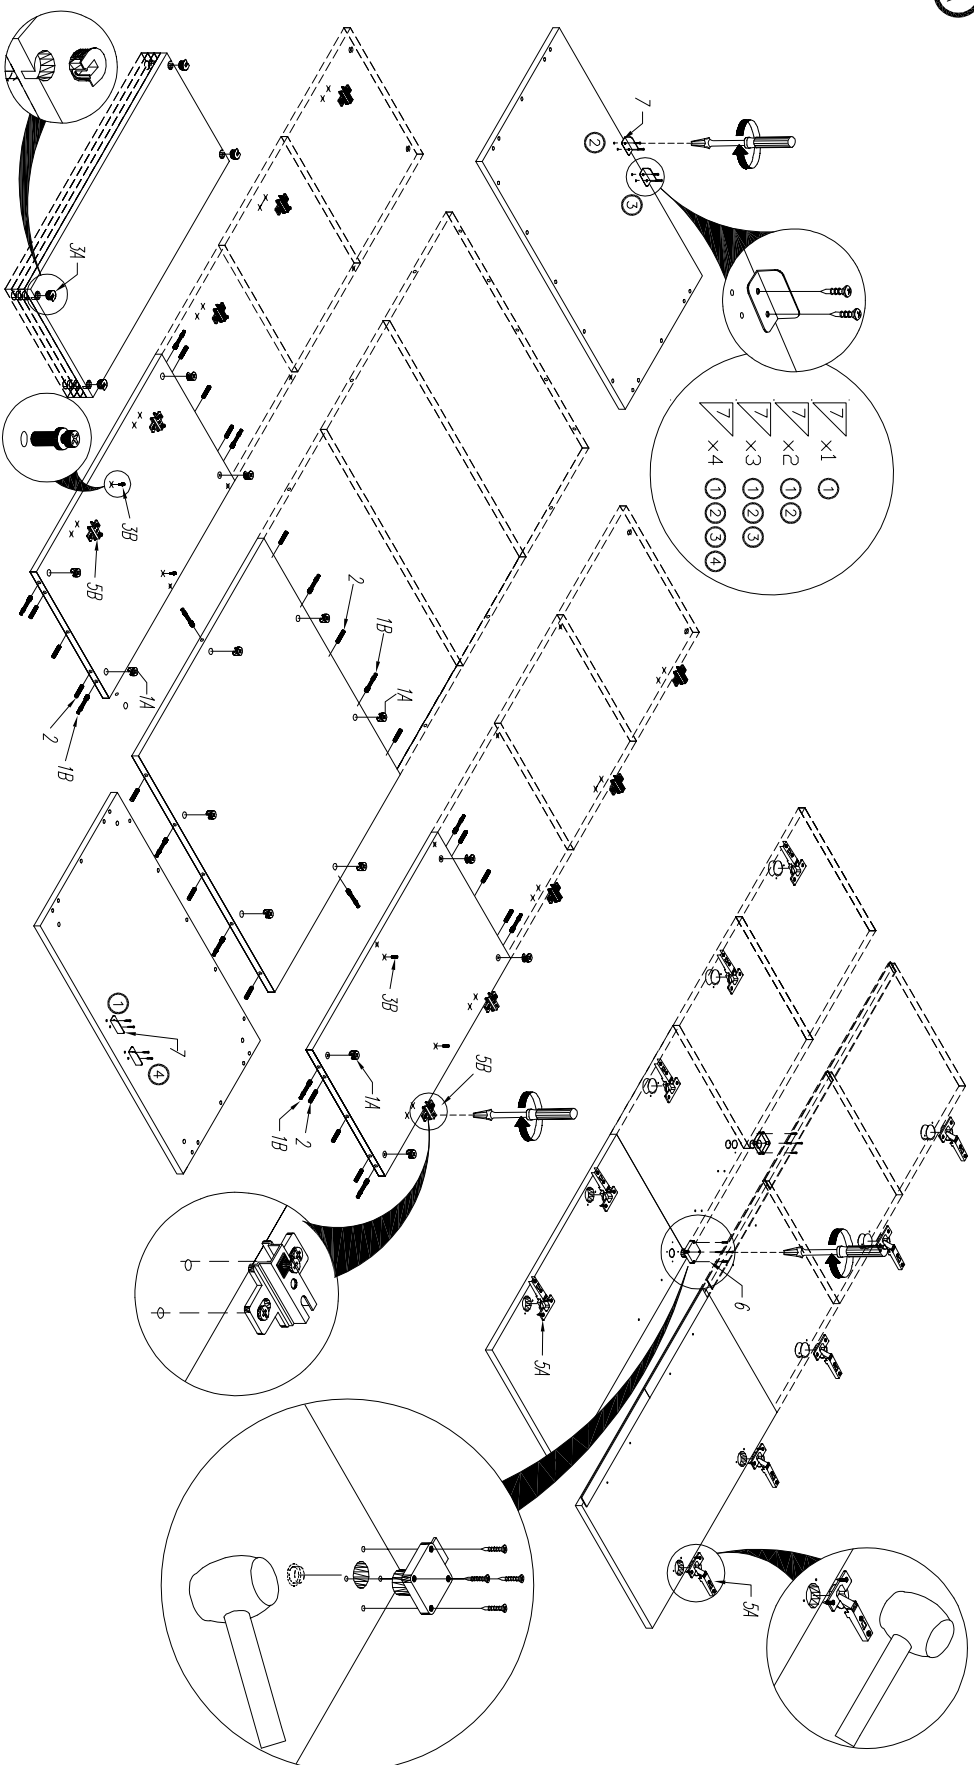


⊛ – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



*KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEFOLGE VON
EXZENTERN UND DÜBELN.*

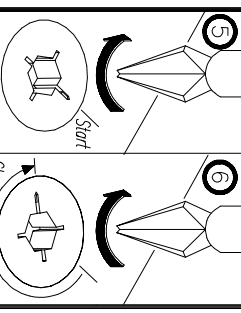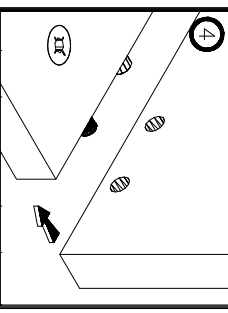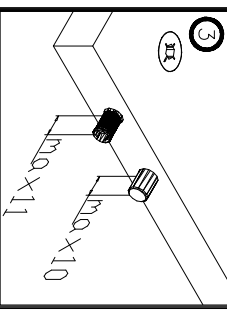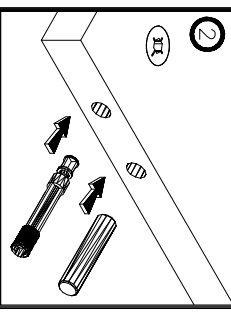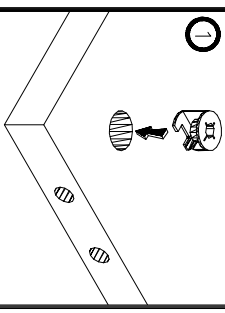


D

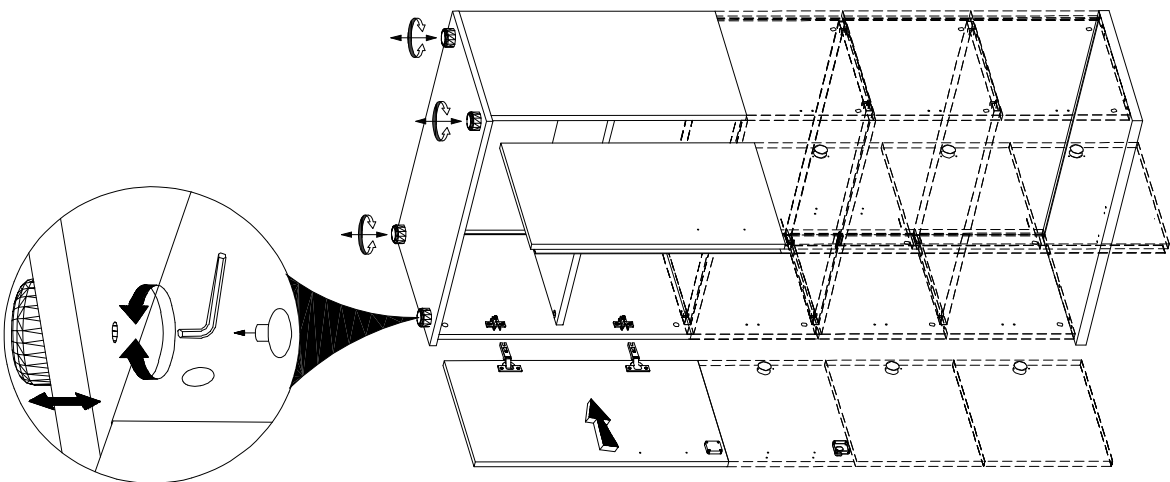

E

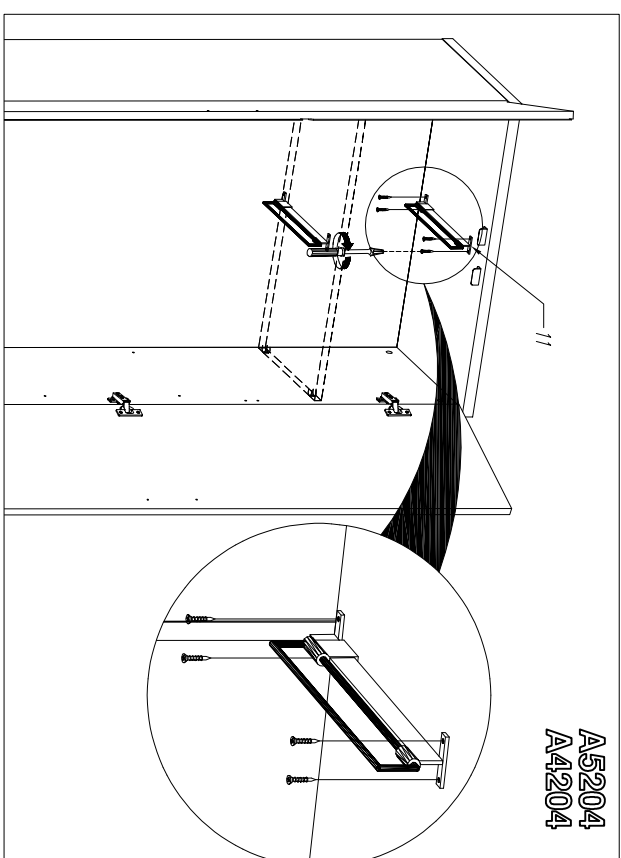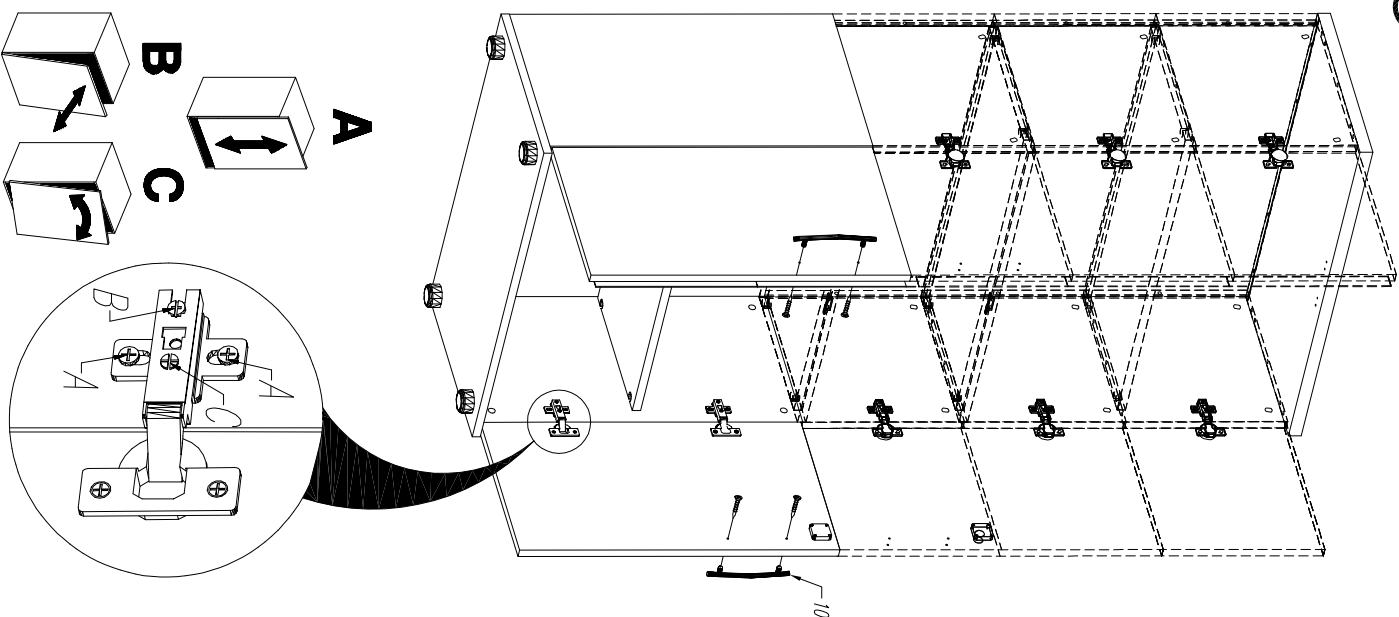


A5204
A4204

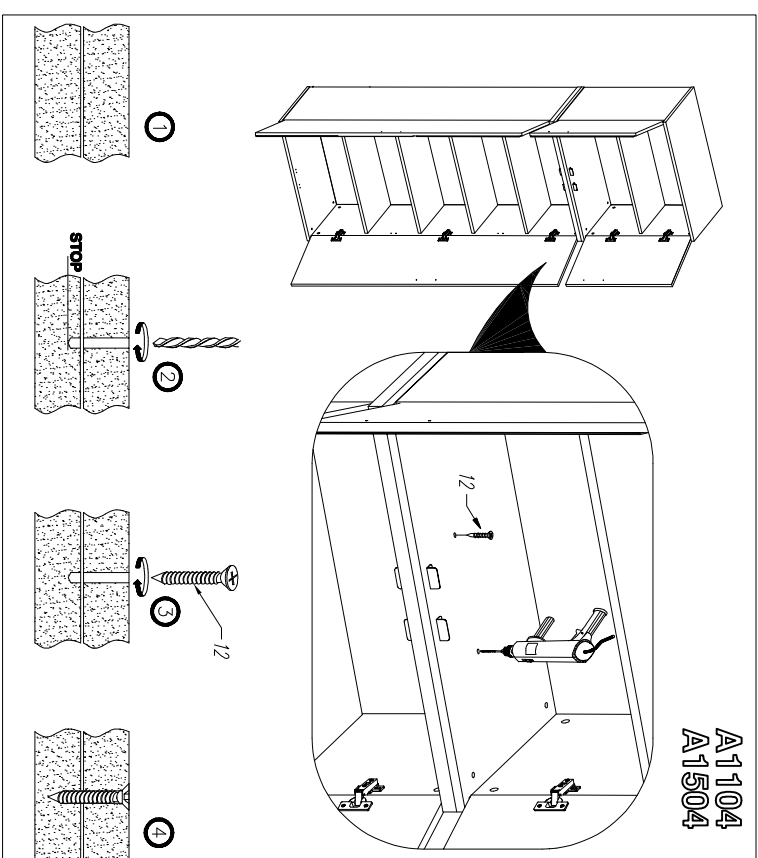


A1104
A1504




A

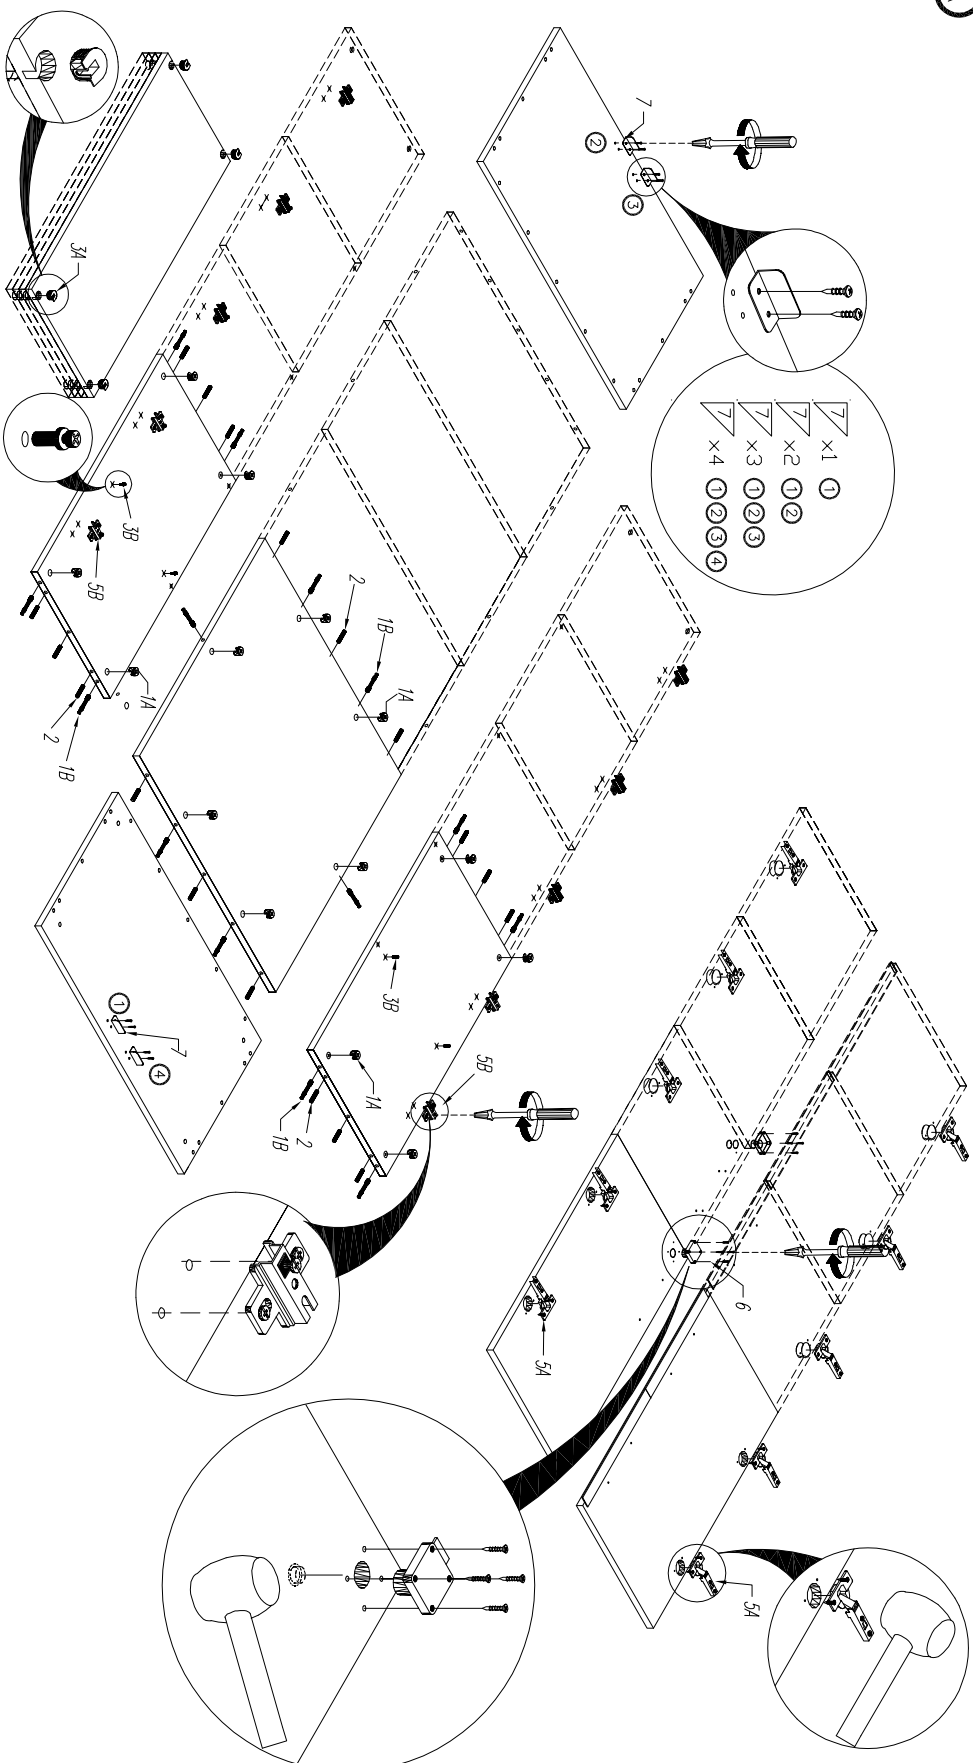

B





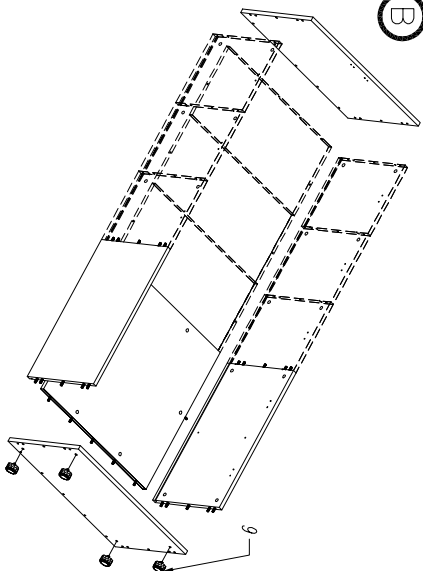


C

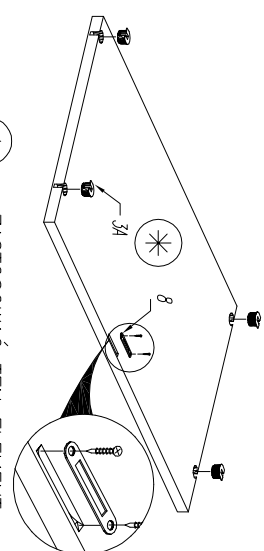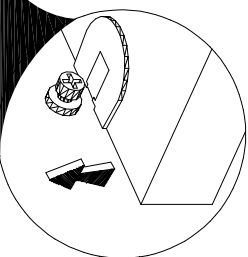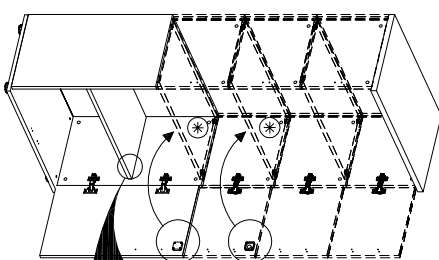


(*) – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

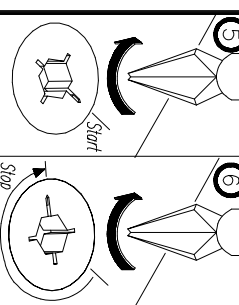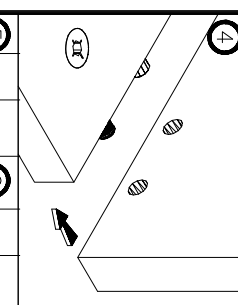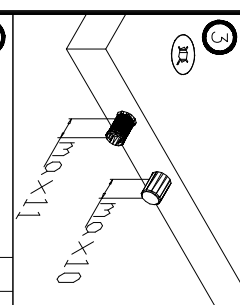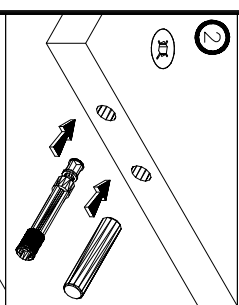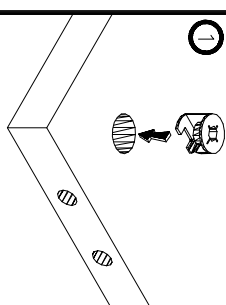


D

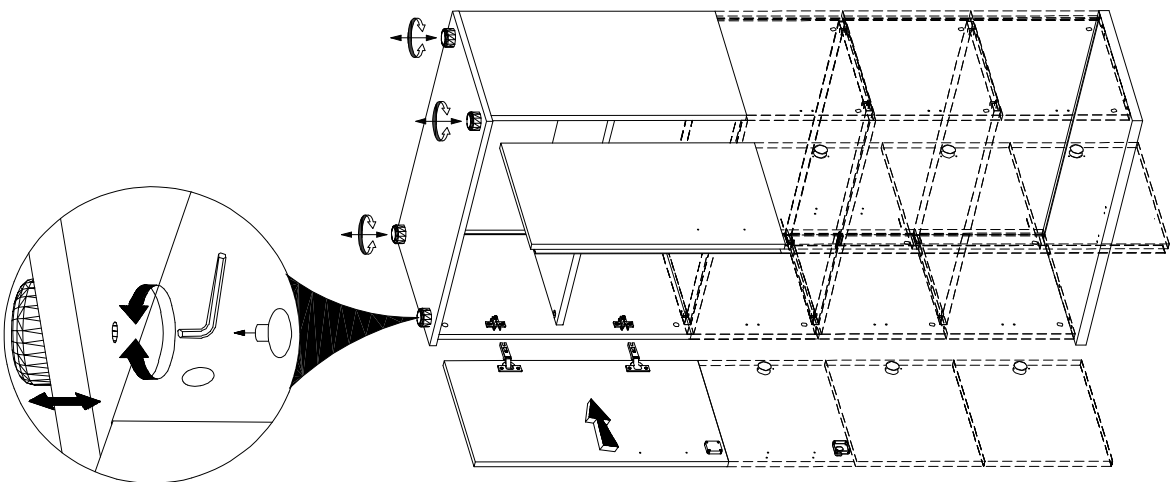

E

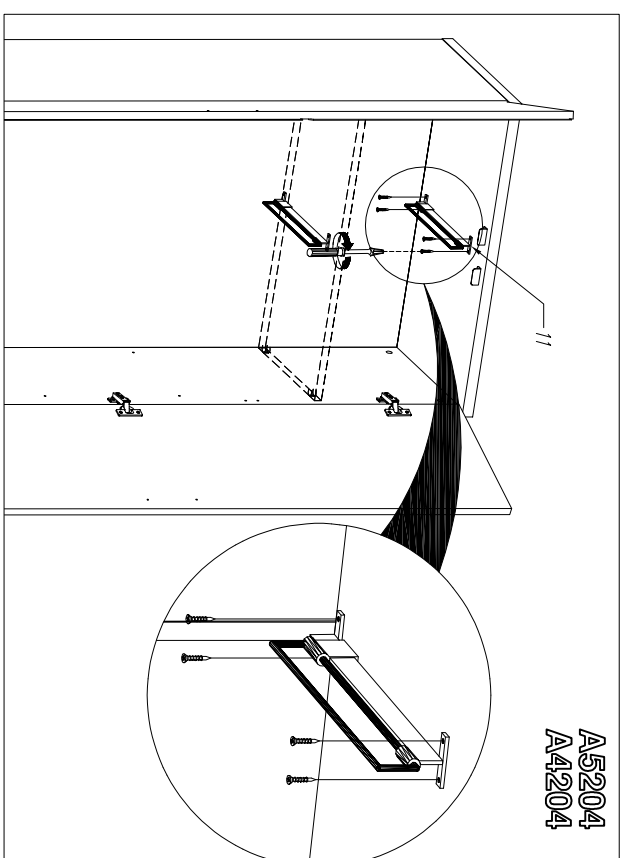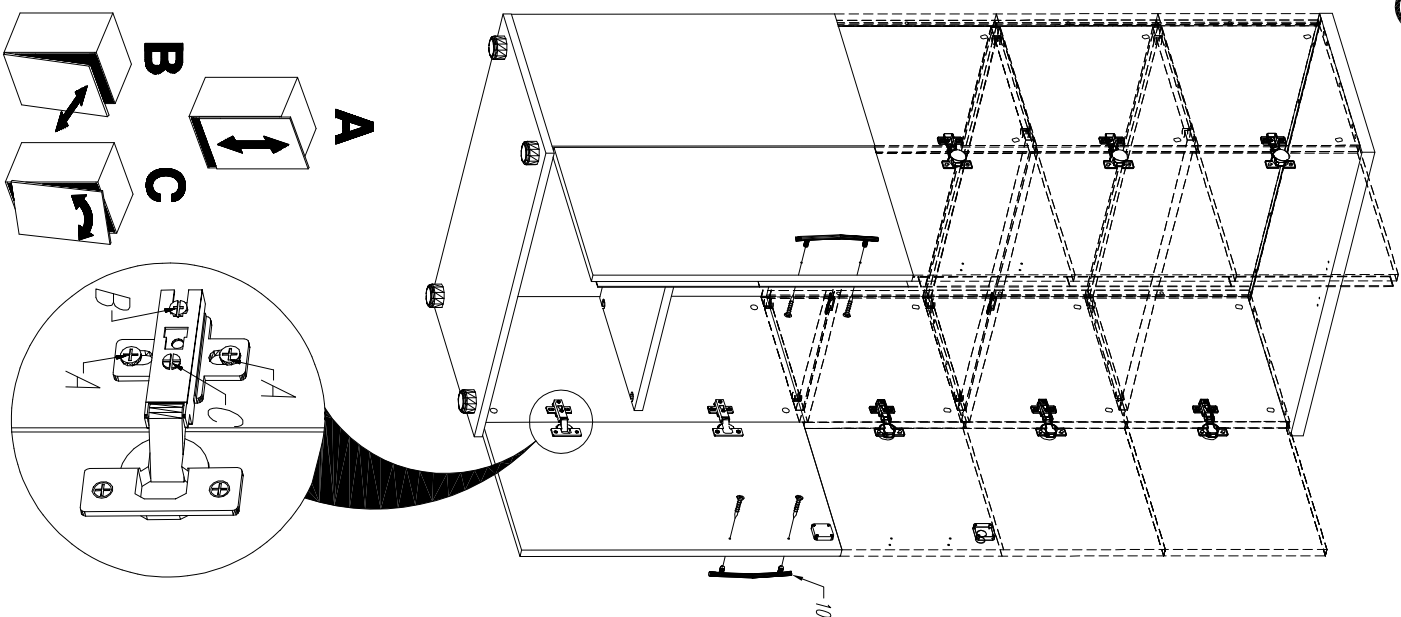

A5204
A4204

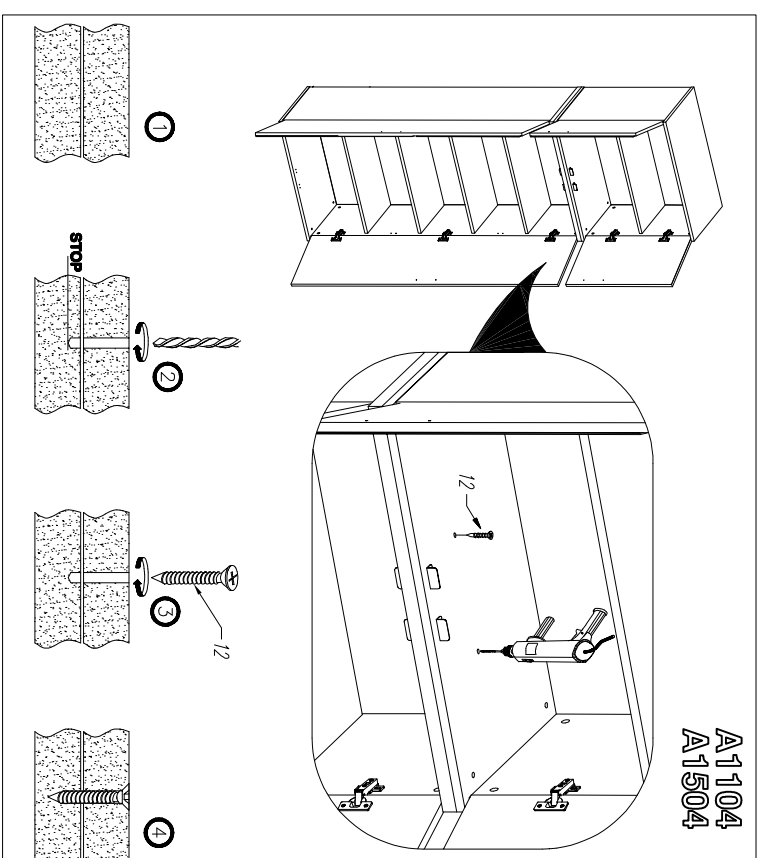

A1104
A1504

