




1

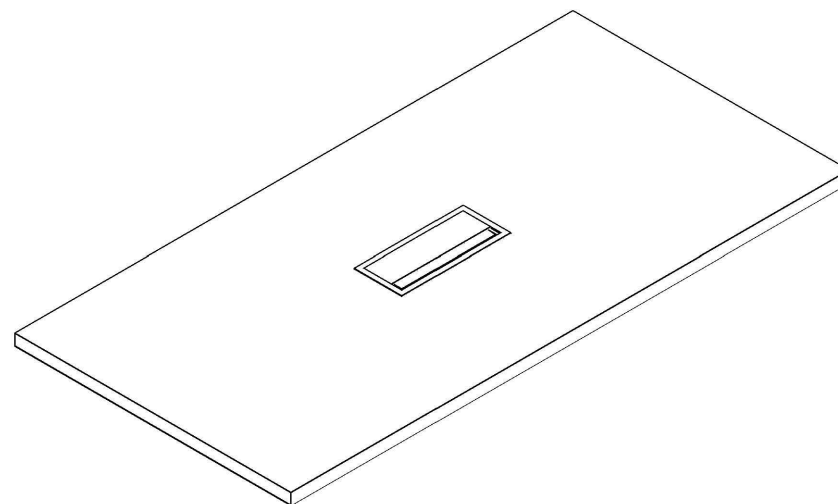

M05






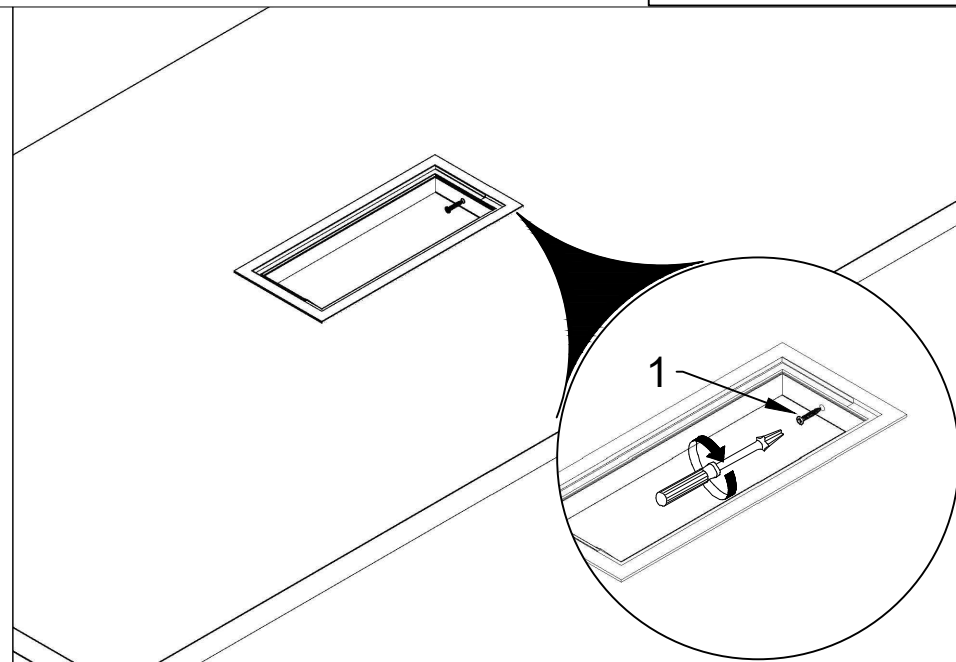


1



3x20



M04

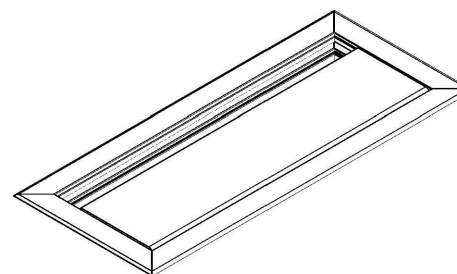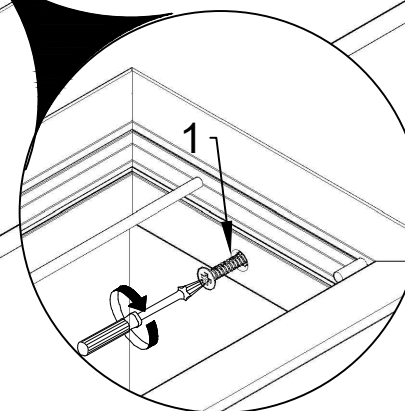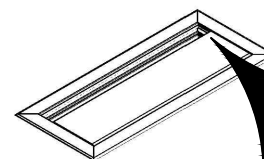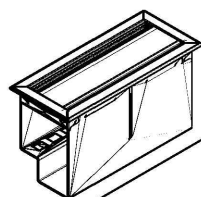

1



M04

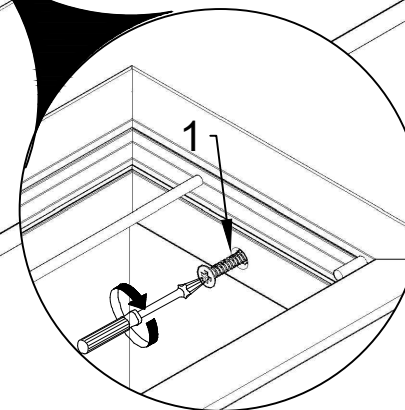



QS19

KOLEJNOŚĆ MONTAŻU
IMOSRODOW.

THE FITTINGS SEQUENCE OF THE
CAMS.



DIE MONTAGEABFOLGE VON
EXZENTERN.

- 1
1A
1B
1C
x6


2
x4

3
ø8x36
x4

A

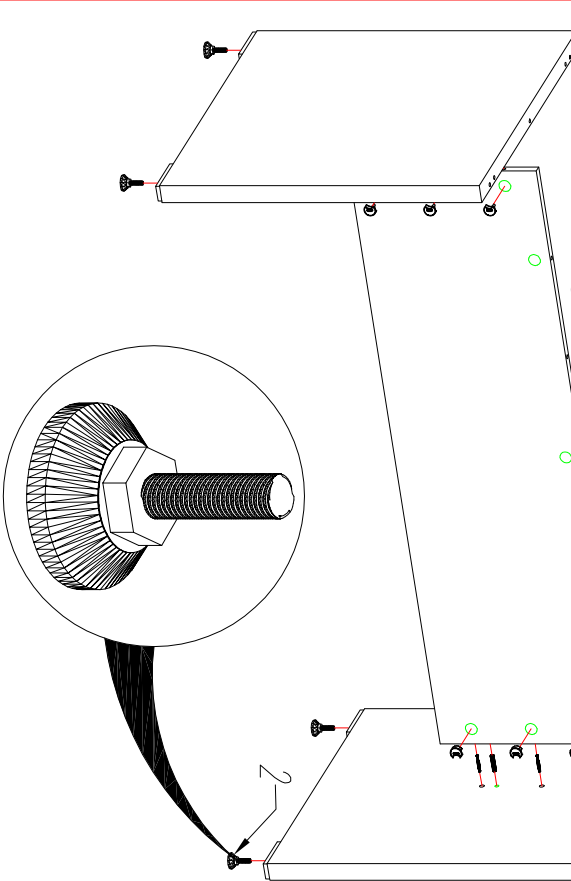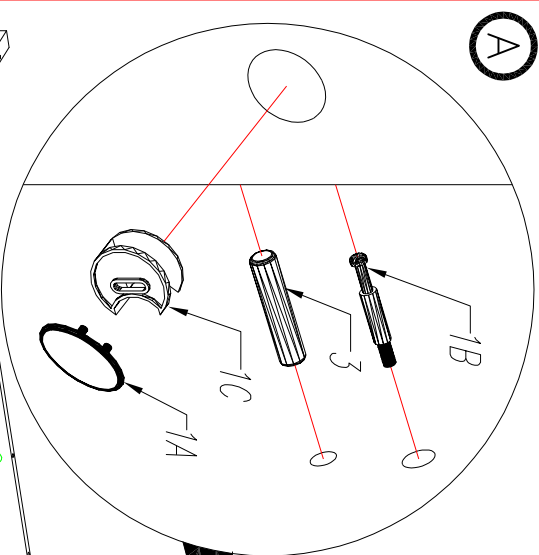

B

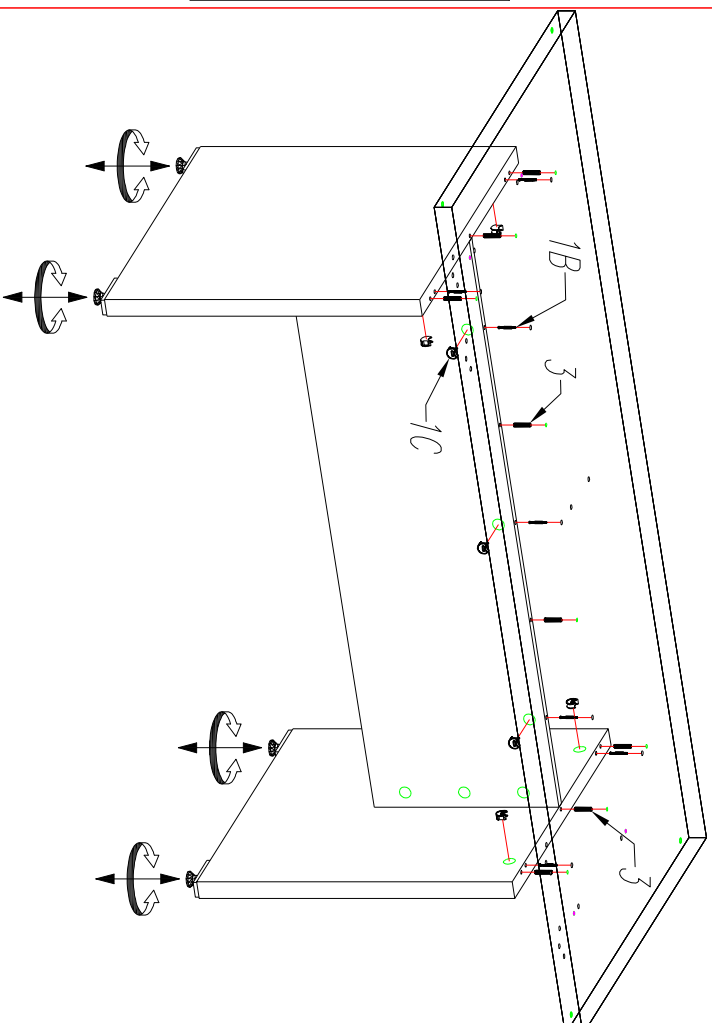

- 1

2

3

4
Start

5
Stop 225°