





E40

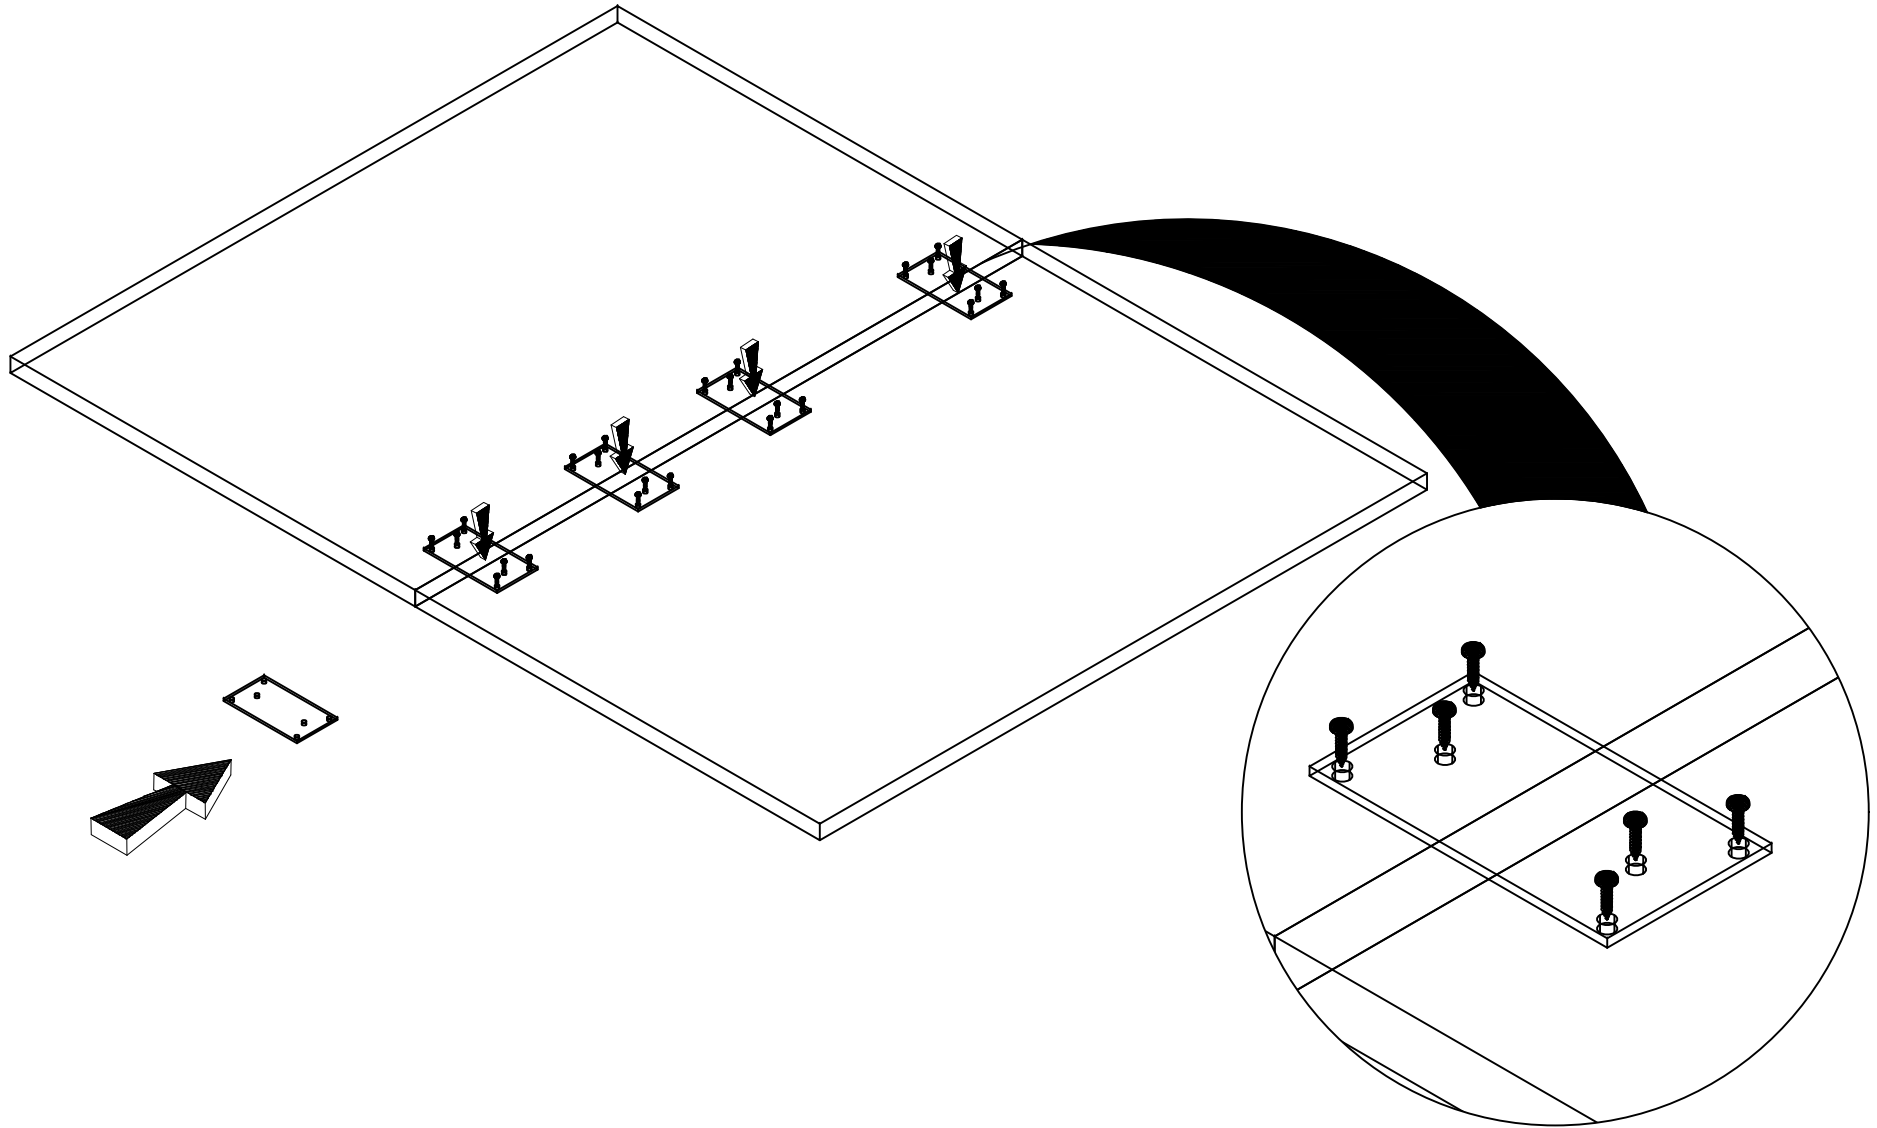

1









M05

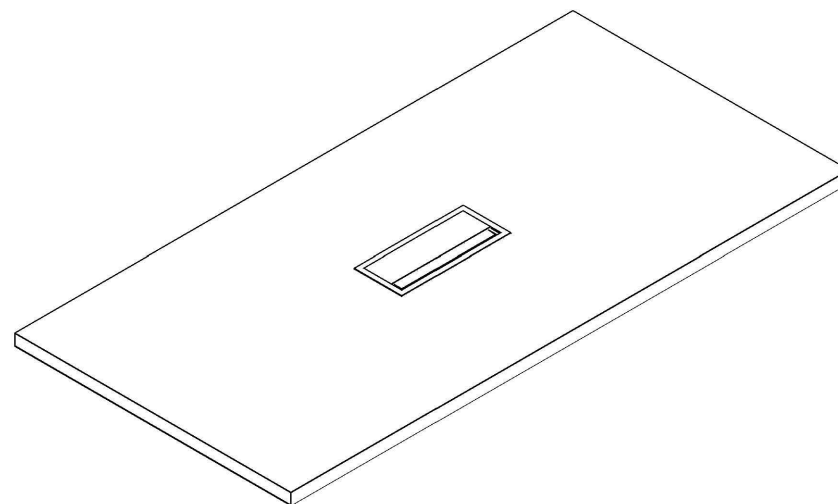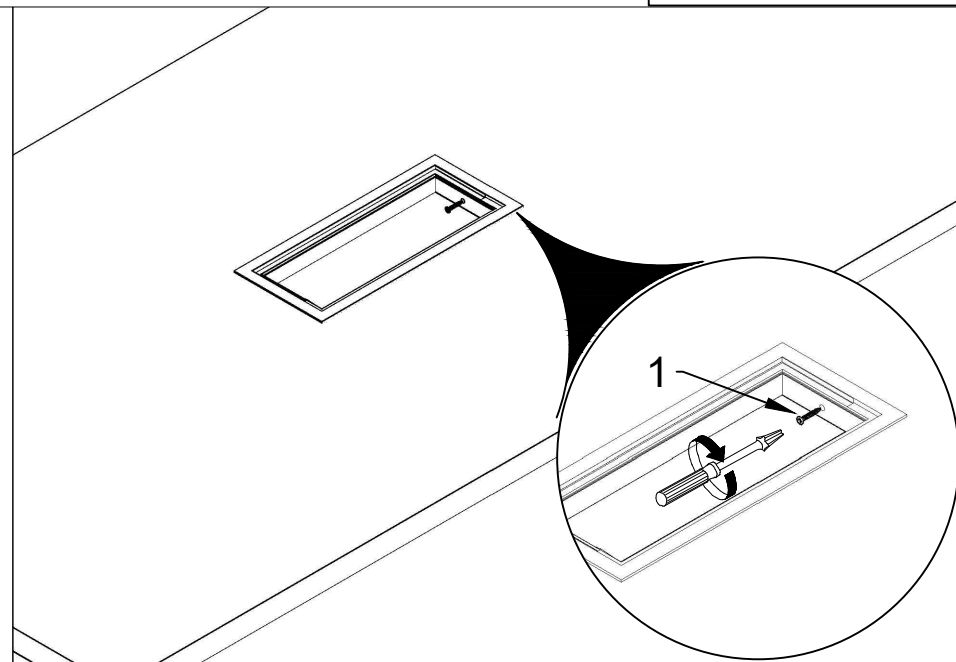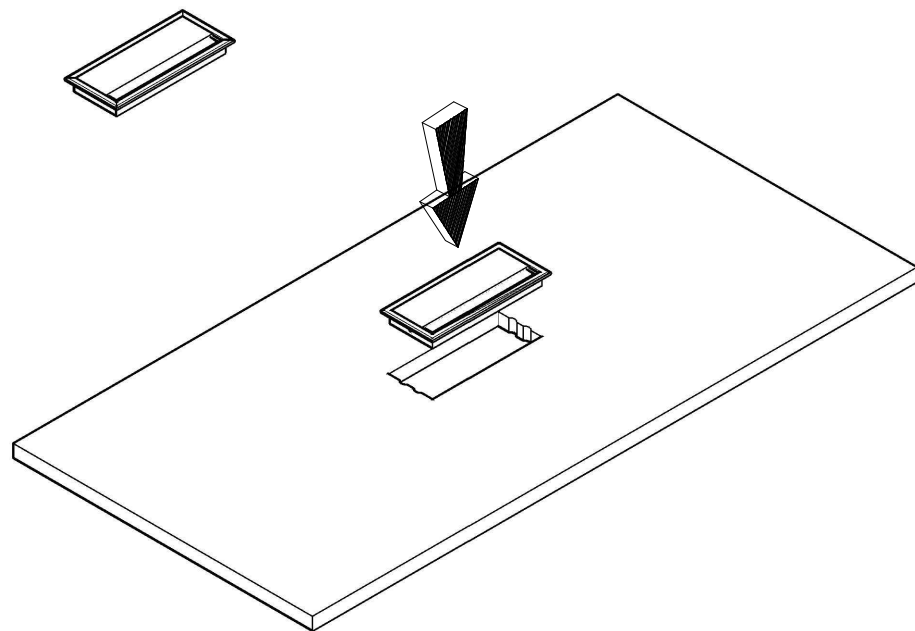

1









M04

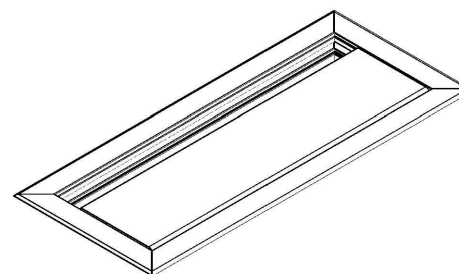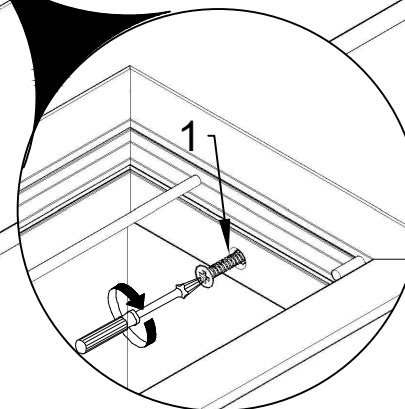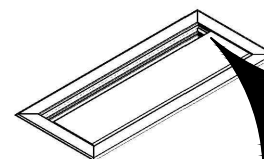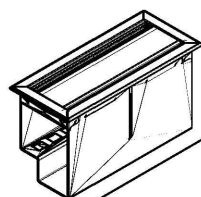

1



M04

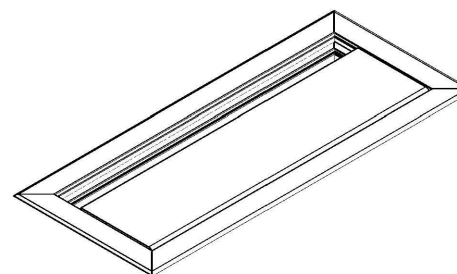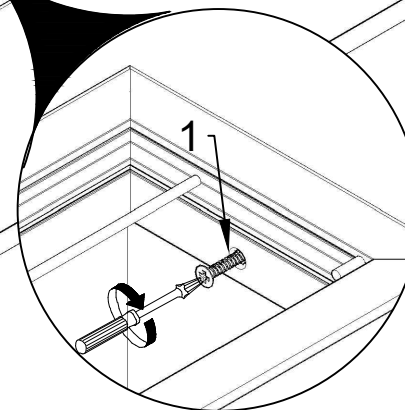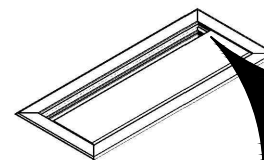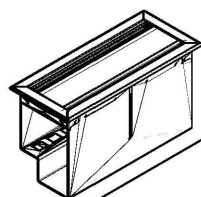


1  
Ø5x20




# OGI BENCH


A

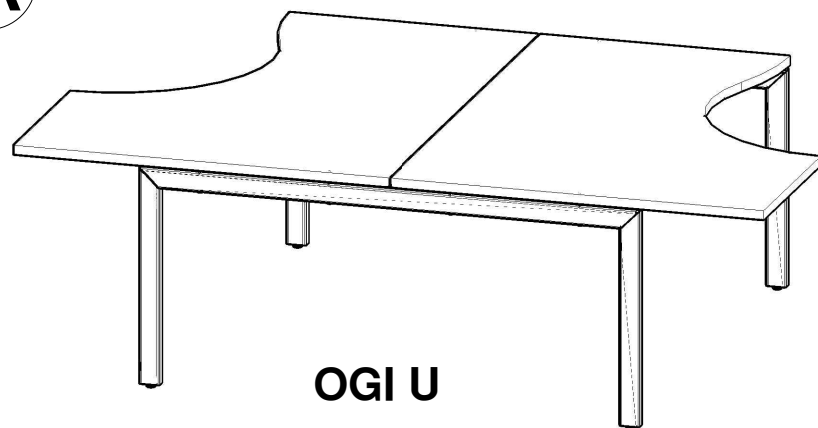


OGI U

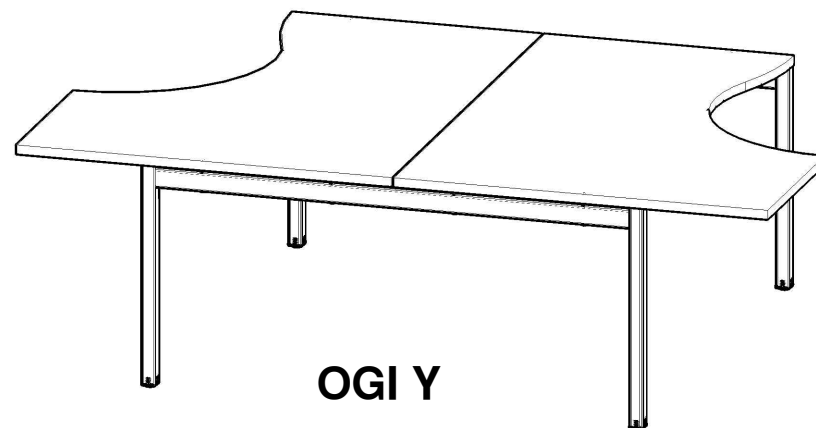


OGI Y

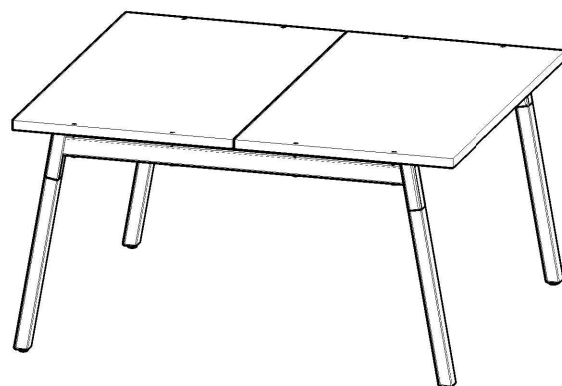

OGI W



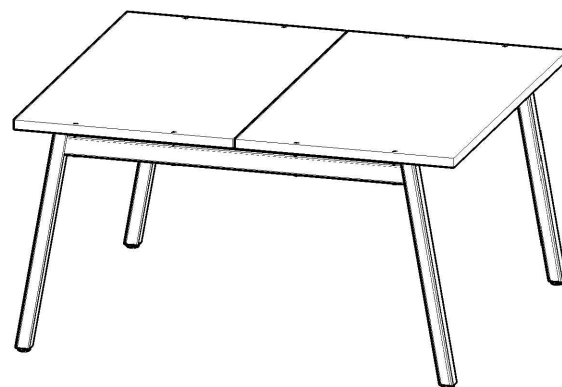


OGI M



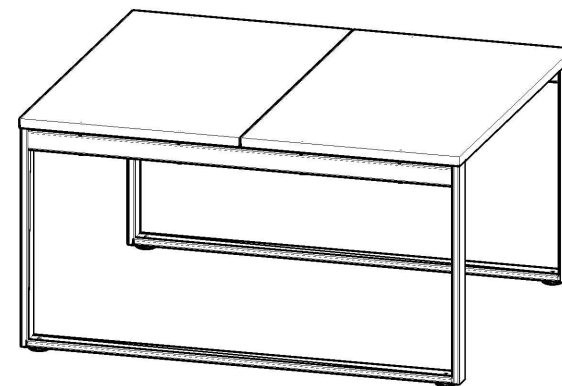


OGI Q


B

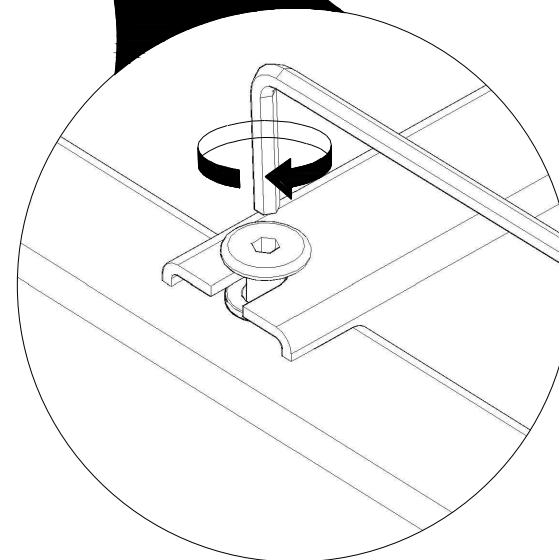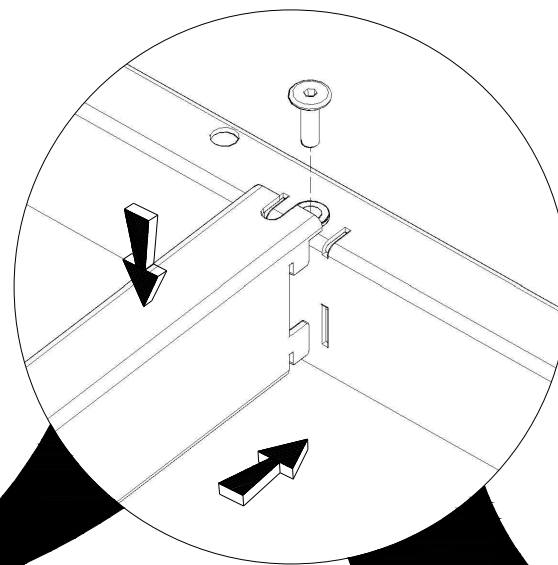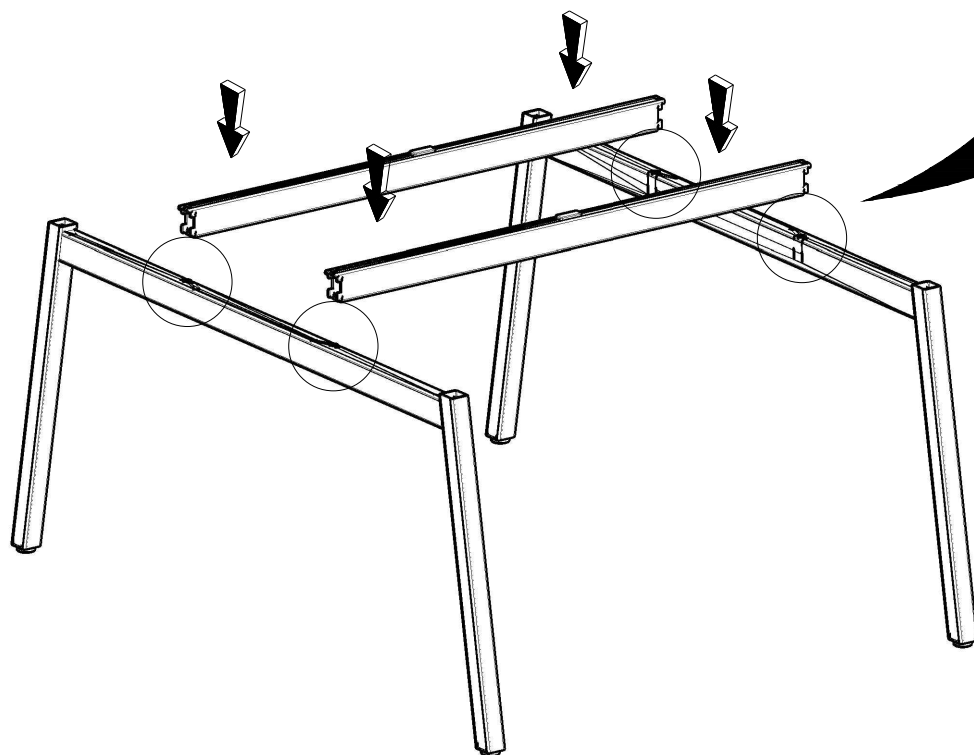

C

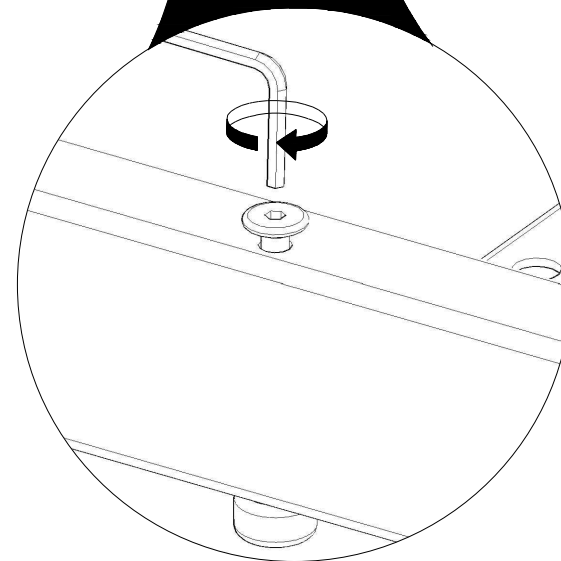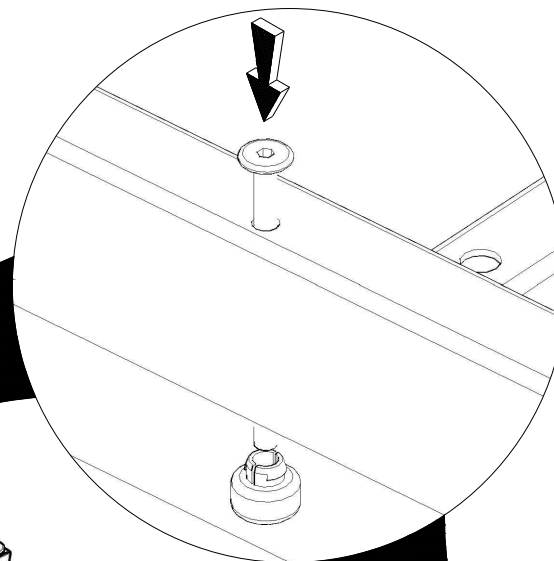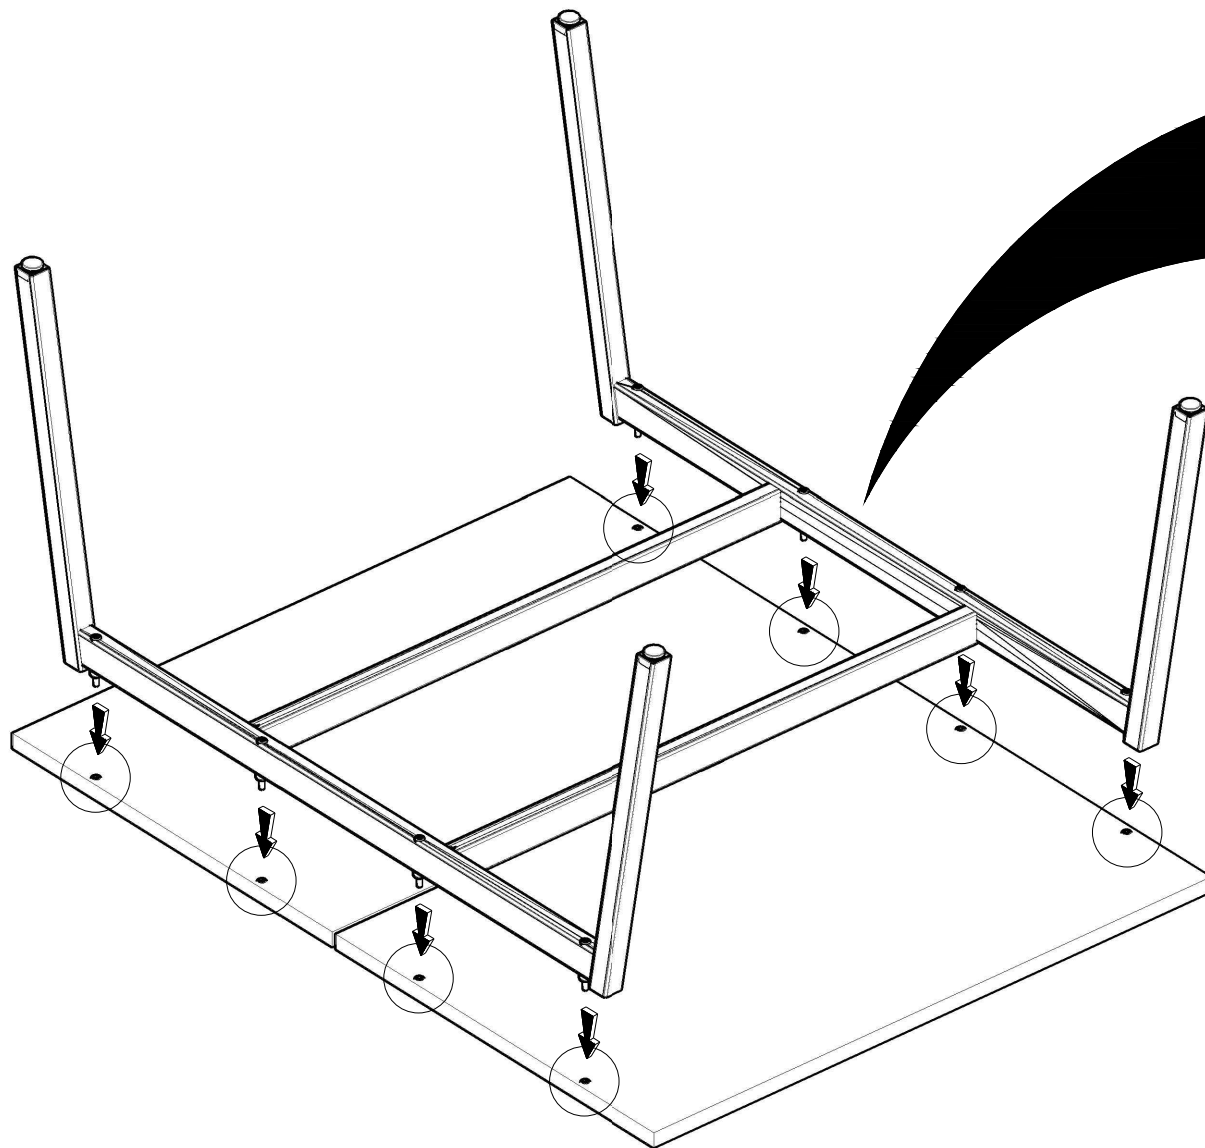

D

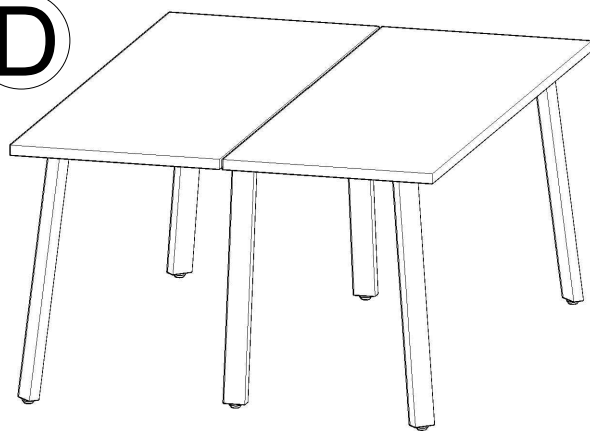

OGI A

