


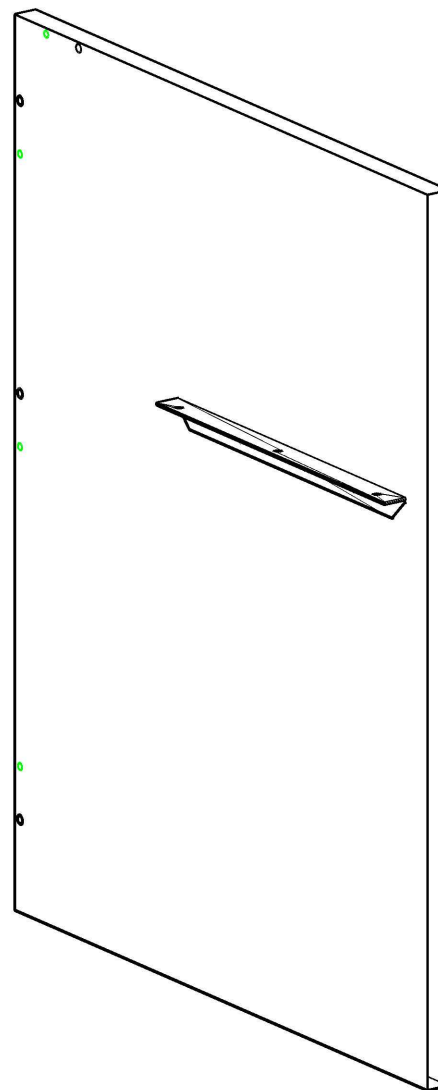


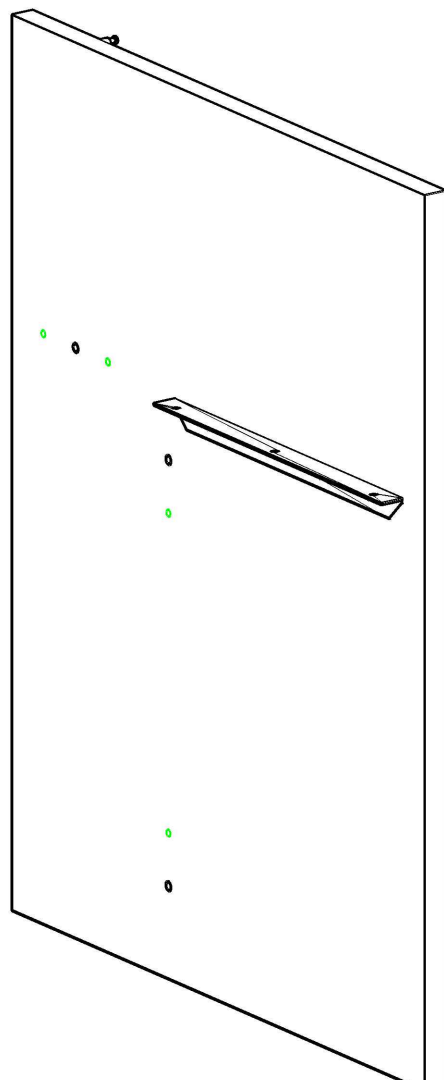

TR7L TR7P

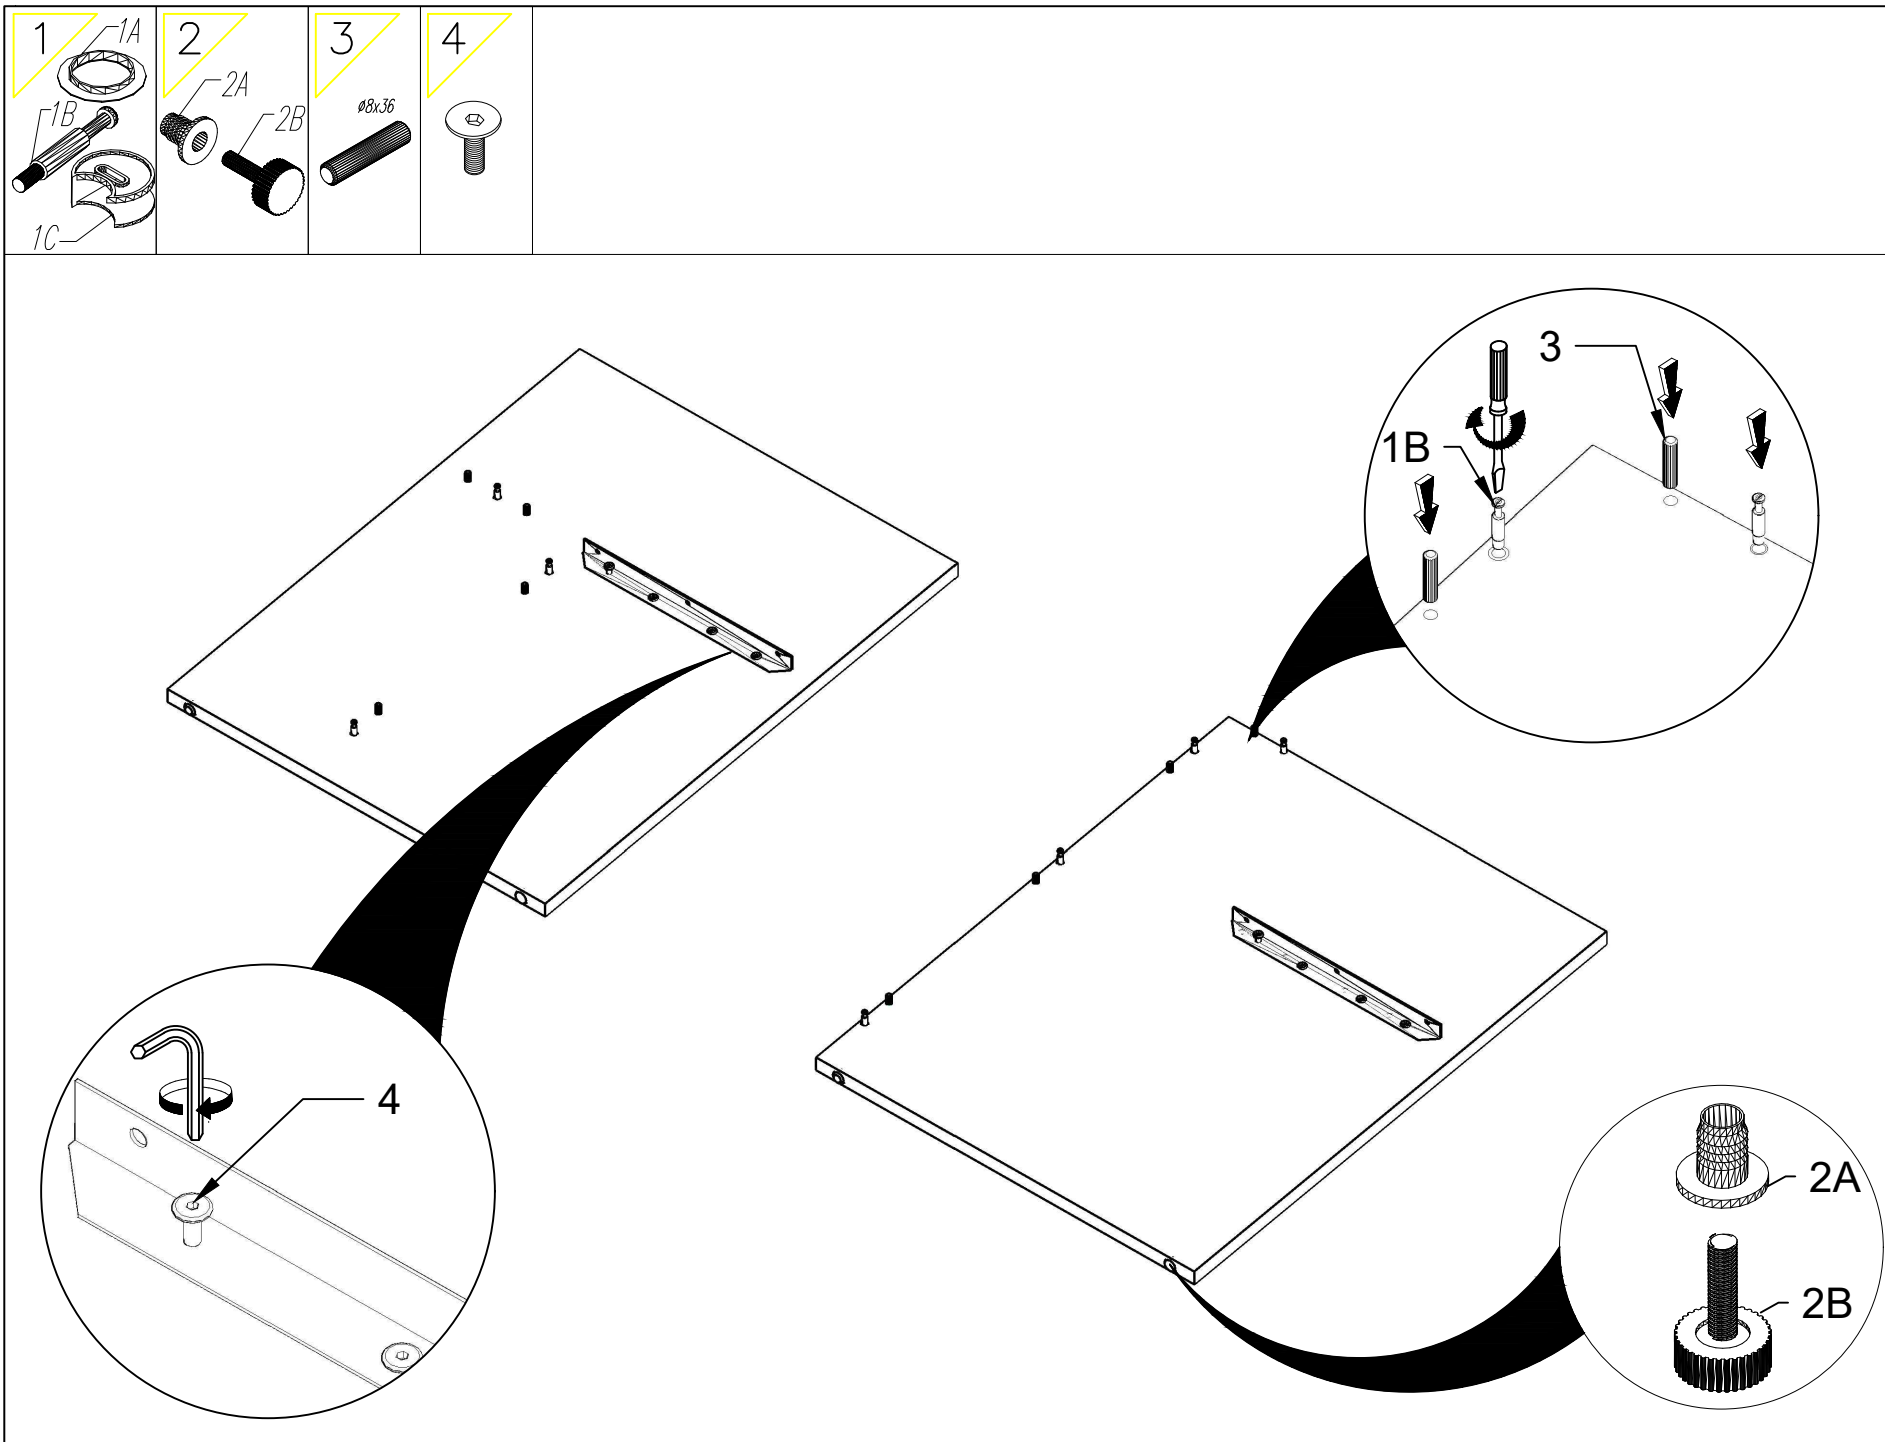

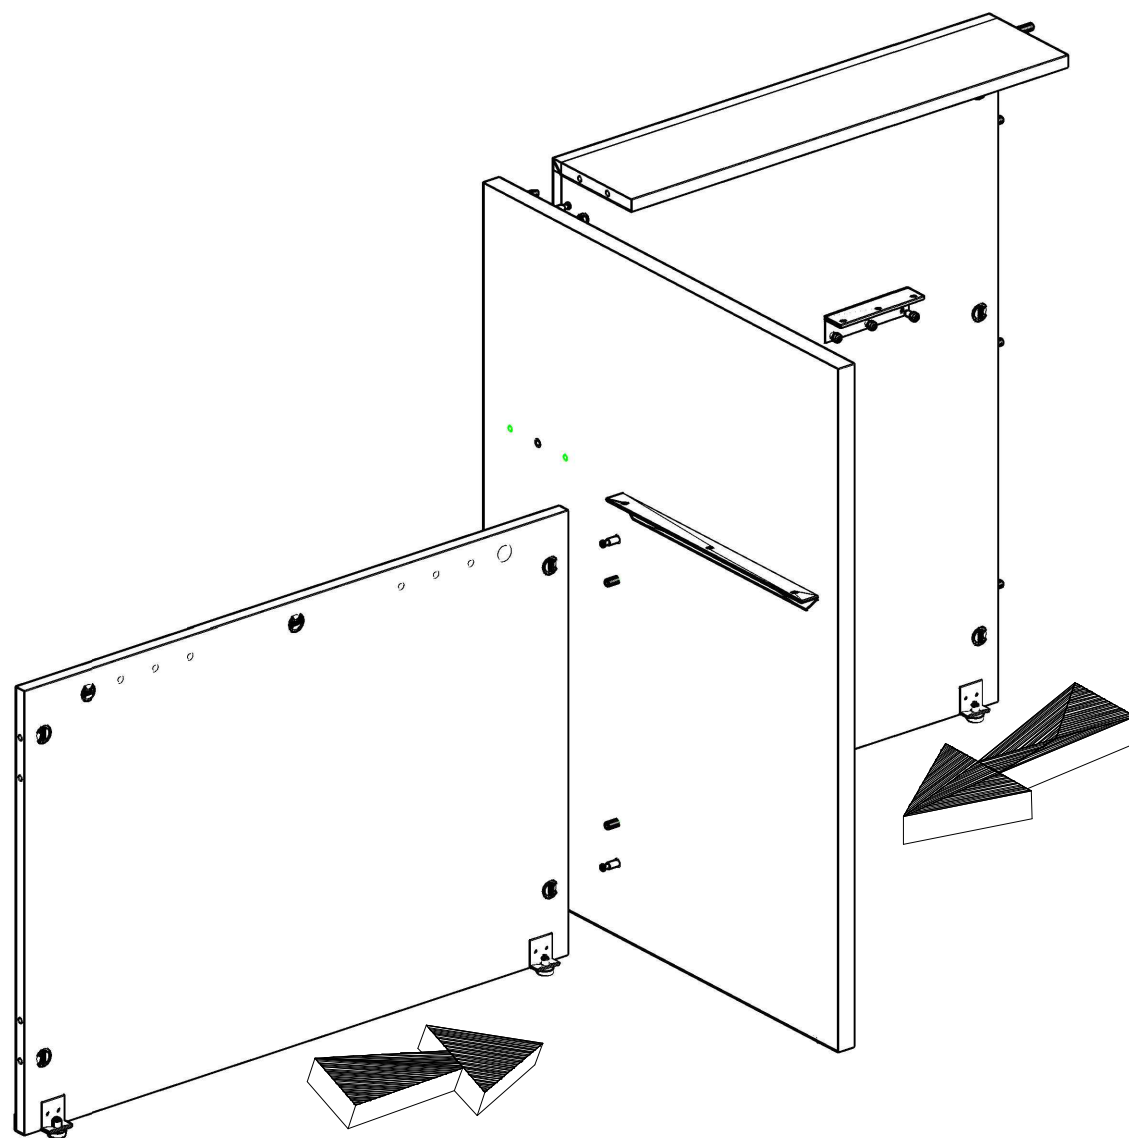

KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW.
THE FITTINGS SEQUENCE OF THE
CAMS.
DIE MONTAGEABFOLGE VON
EXZENTERN.

①

②

③

④

⑤

Start

Stop 225°

The sequence of diagrams illustrates the correct way to fit a cam into a door handle. It starts with the cam being inserted into the handle (1), followed by pushing it into the handle (2), then pushing it into the handle (3), then pushing it into the handle (4), and finally pushing it into the handle (5). The sequence ends with a diagram showing the cam being pushed into the handle.