




1  M6x25 XT116 x5 XT11 x4 XT16 x3 XT1 x2 XT6 x1	2  XT116 x4 XT11 x4 XT16 x4 XT1 x2 XT6 x2	3  M8x30 XT116 x4 XT11 x4 XT16 x4 XT1 x2 XT6 x2 x 4	4  XT116 x4 XT11 x4 XT16 x4 XT1 x2 XT6 x2 x 4	 FABRYKA MEBLI BIUROWYCH STATUS XT...
---	--	---	---	--

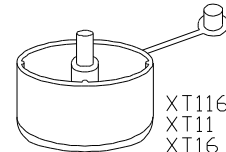

1 XK55 x2 XK27 x1 XK26 x1 XK37 x1 XK36 x1 XK57 x1 XK56 x1 XK21 x2 XK31 x2 XK51 x2	2 M4x25 XK55 x4 XK27 x2 XK26 x1 XK37 x2 XK36 x1 XK57 x2 XK56 x2 XK21 x4 XK31 x4 XK51 x4	3 XK55 x2 XK27 x1 XK26 x1 XK37 x2 XK36 x1 XK57 x1 XK56 x1 XK21 x2 XK31 x2 XK51 x2	4 4B XK27 x2 XK26 x2 XK37 x2 XK36 x2 XK57 x4 XK56 x4 XK21 x4 XK31 x4 XK51 x8	5 Ø8x36 XK55 x22 XK39 x14 XK59 x14 XK27 x14 XK26 x14 XK37 x14 XK36 x14 XK57 x14 XK56 x14 XK21 x18 XK31 x22 XK51 x22	6 Ø15 XK55 x24 XK39 x16 XK59 x20 XK27 x16 XK26 x16 XK37 x16 XK36 x16 XK57 x20 XK56 x20 XK21 x18 XK31 x20 XK51 x24	7 7A XK55 x32 XK39 x8 XK59 x16 XK27 x4 XK26 x4 XK37 x8 XK36 x8 XK57 x16 XK56 x16 XK21 x8 XK31 x16 XK51 x32	8 M6x25 XK55 x5 XK39 x5 XK59 x5 XK27 x5 XK26 x5 XK37 x5 XK36 x5 XK57 x5 XK56 x5 XK21 x5 XK31 x5 XK51 x5	9 Ø10 XK55 x8 XK39 x4 XK59 x4 XK27 x4 XK26 x4 XK37 x4 XK36 x4 XK57 x4 XK56 x4 XK21 x4 XK31 x4 XK51 x4	10 10A XK55 x10 XK39 x5 XK59 x10 XK27 x5 XK26 x5 XK37 x5 XK36 x5 XK57 x10 XK56 x10 XK21 x5 XK31 x5 XK51 x5	11 11G 11F 11E 11D 11C 11B 11A XK55 x12 XK39 x6 XK59 x12 XK27 x6 XK26 x6 XK37 x6 XK36 x6 XK57 x12 XK56 x12 XK21 x6 XK31 x6 XK51 x12	12 Ø3,5x16 12A Ø3x16 12B XK55 x4 XK39 x2 XK59 x4 XK27 x2 XK26 x2 XK37 x2 XK36 x2 XK57 x4 XK56 x4 XK21 x2 XK31 x2 XK51 x4
---	--	---	--	--	--	---	--	--	---	--	--

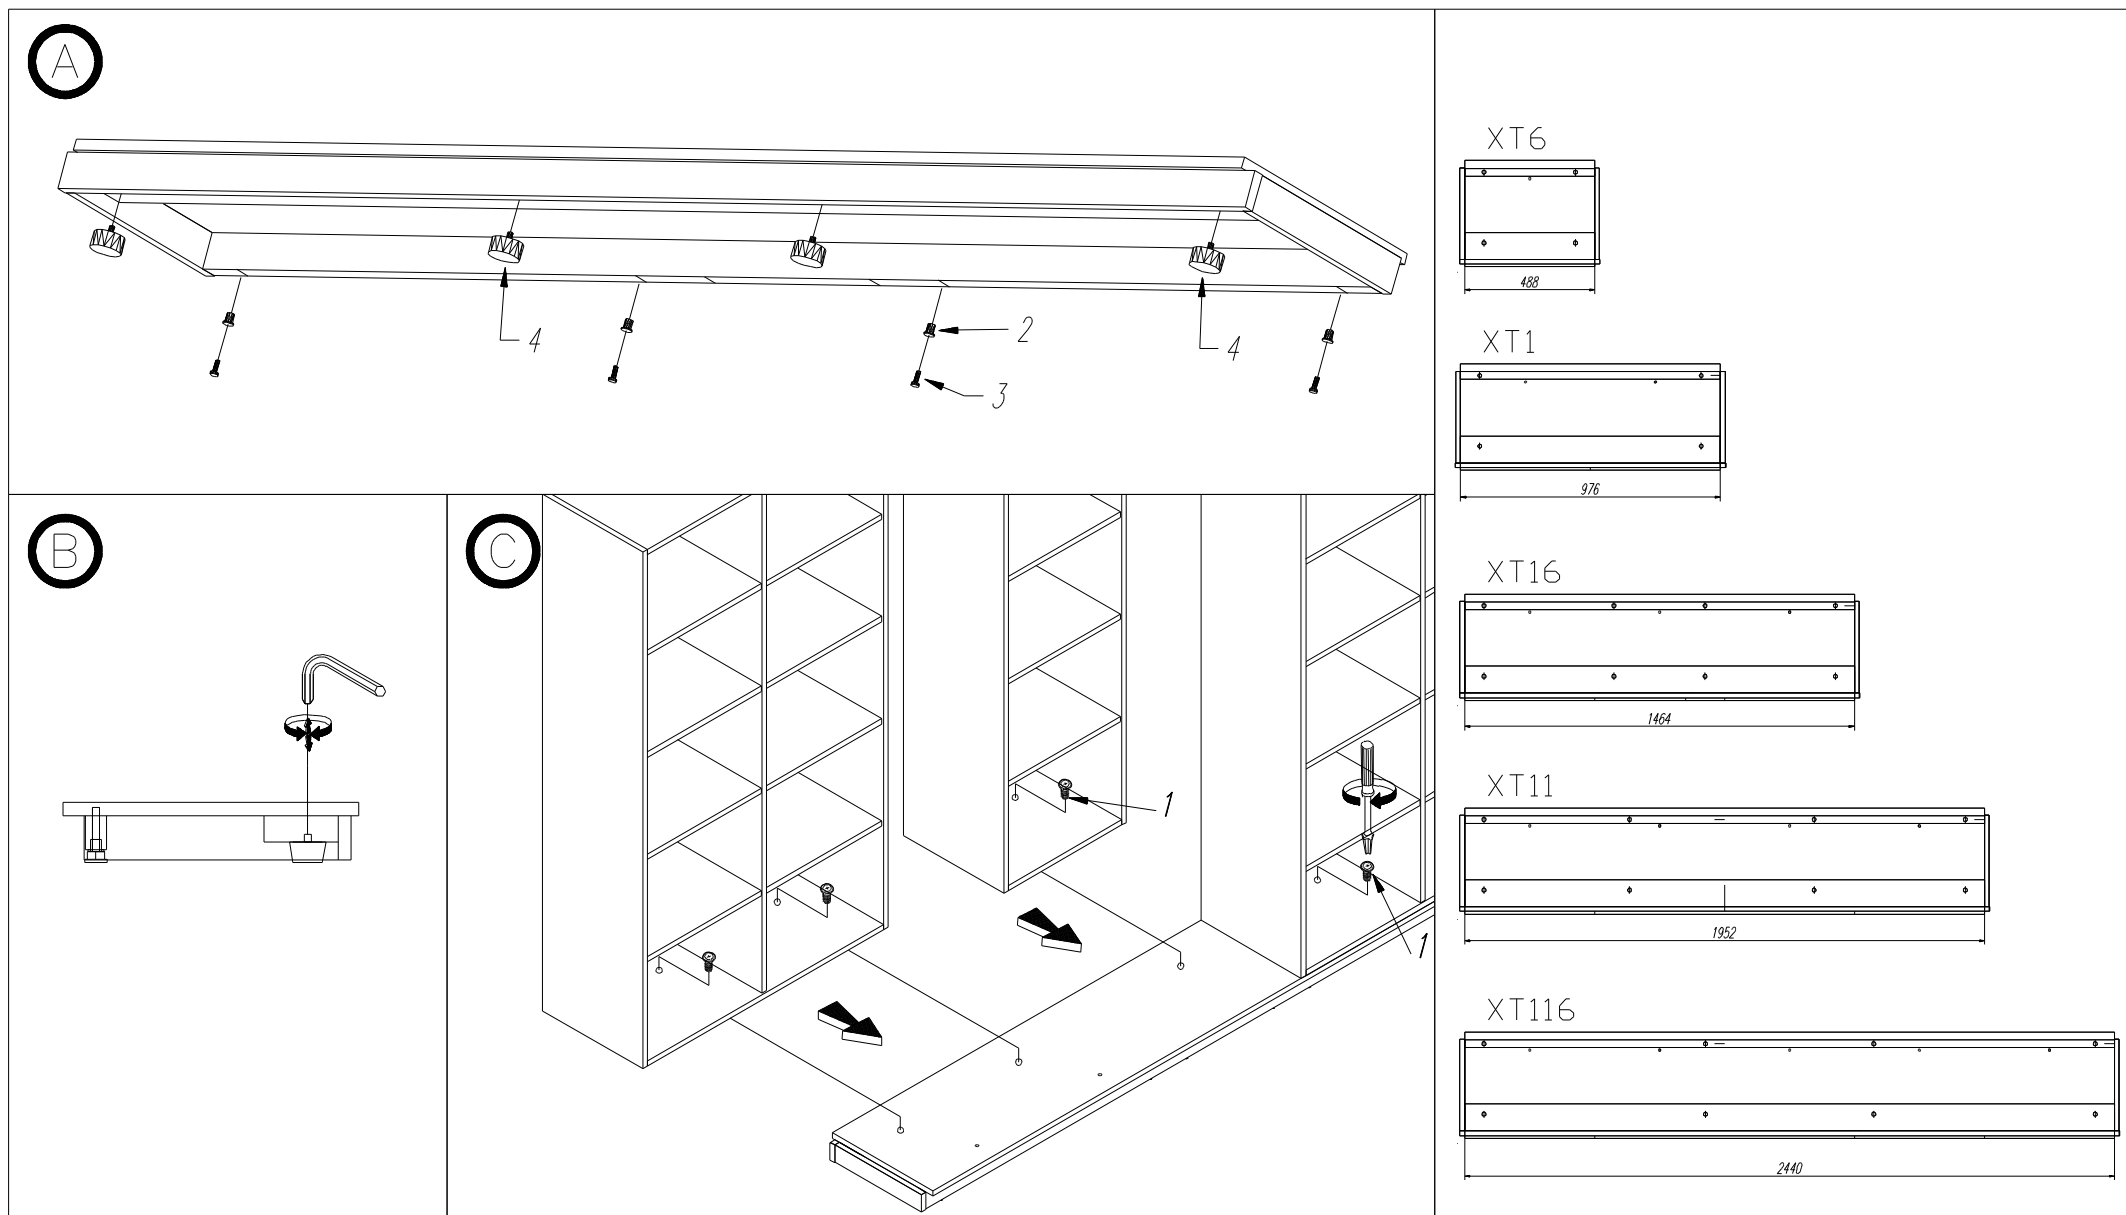


MDD
FABRYKA MEBLI BIUROWYCH





XK

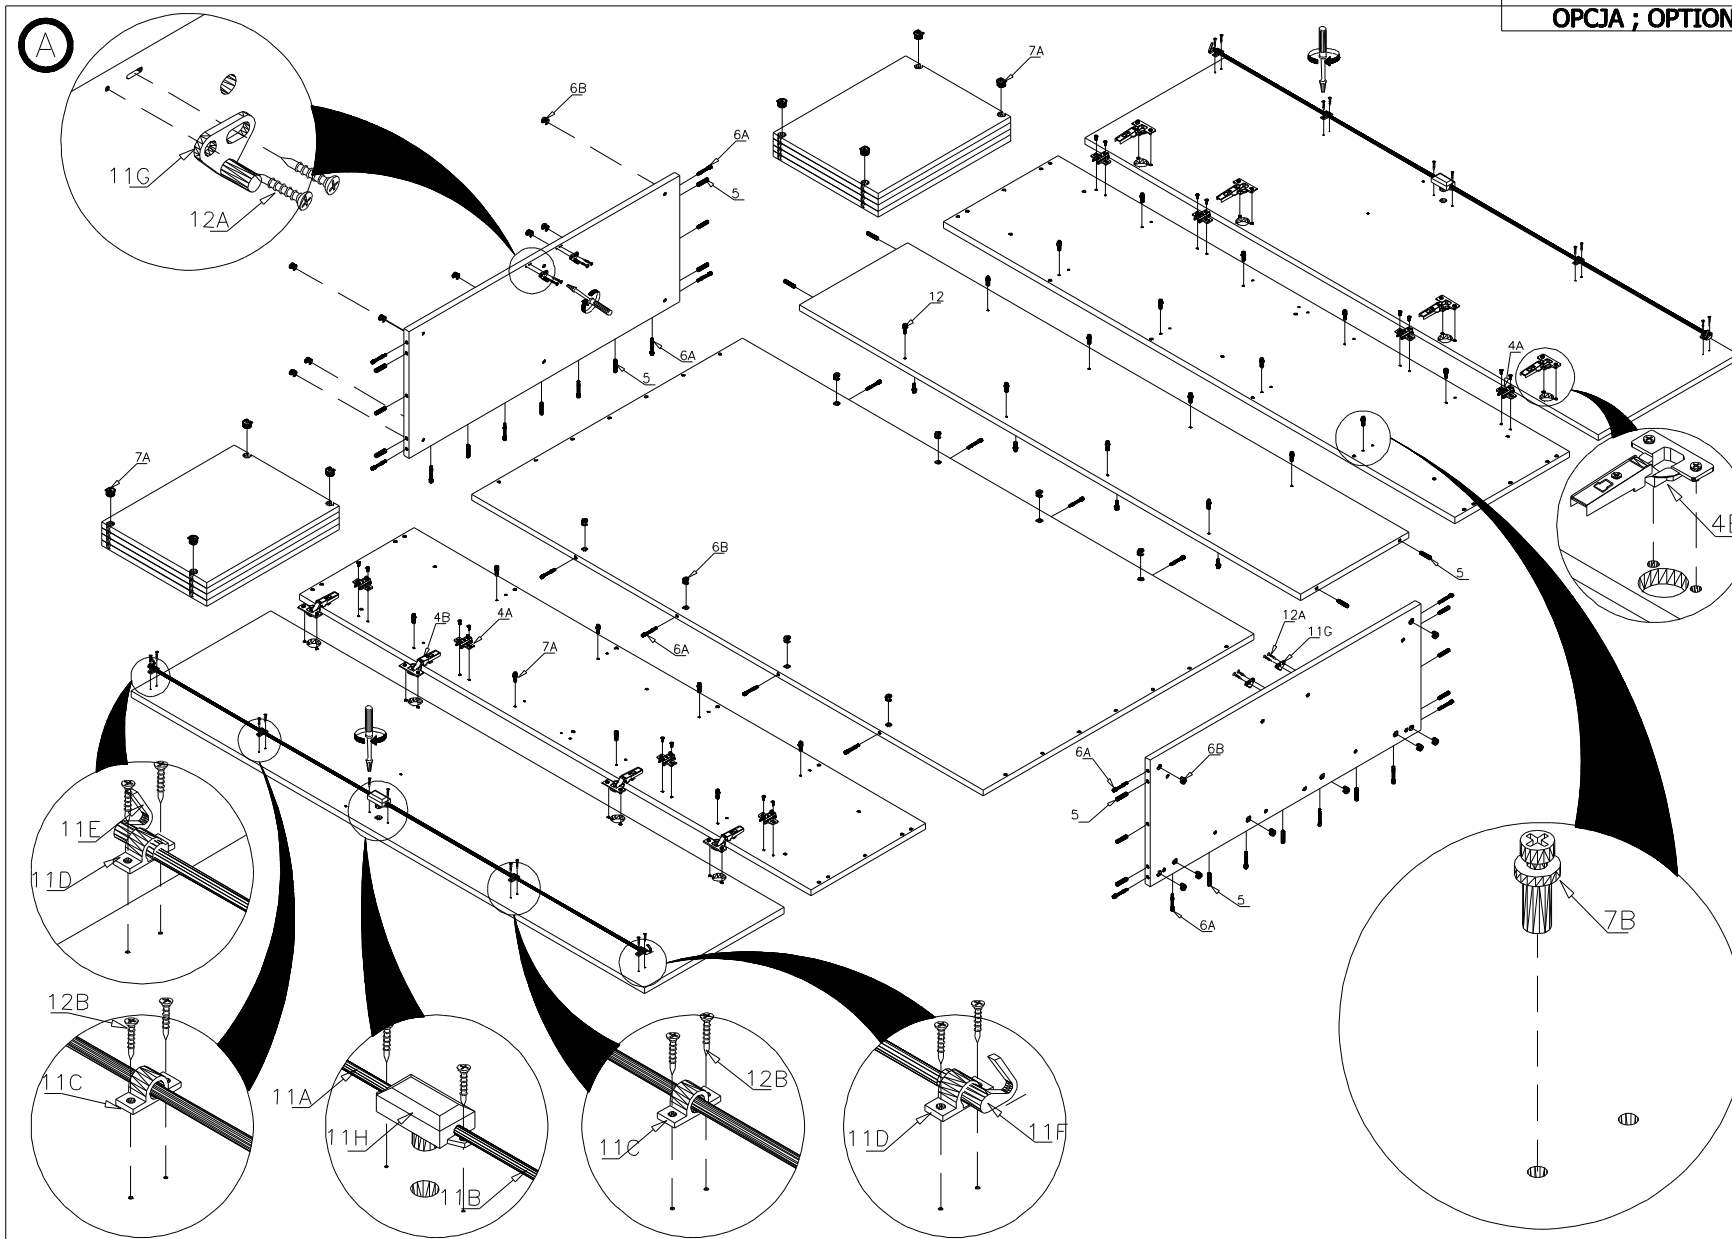

OPCJA ; OPTION

KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOŁKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

1


2



3


4



5


6



Start
Stop 225°






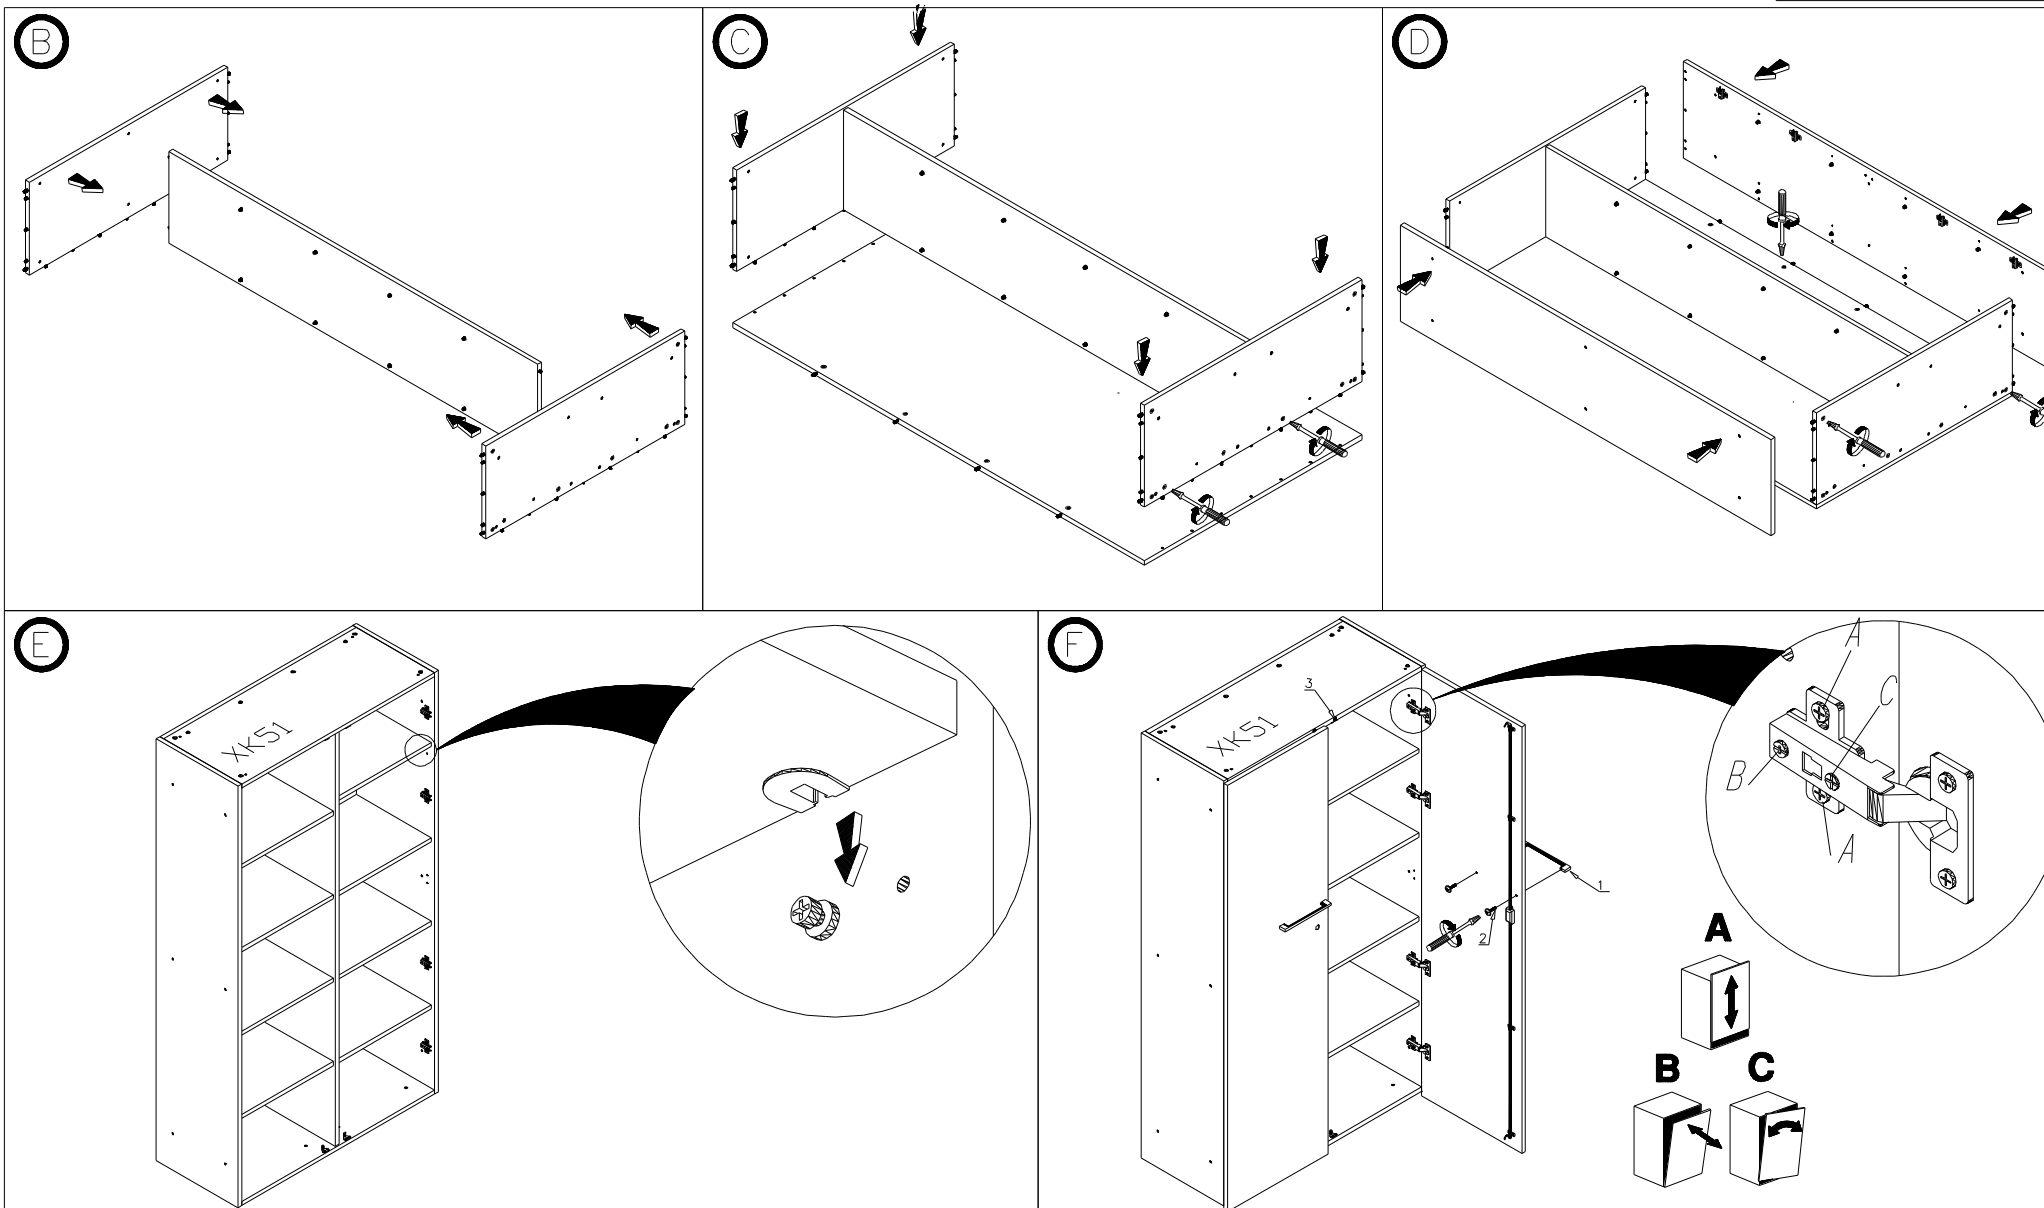


G

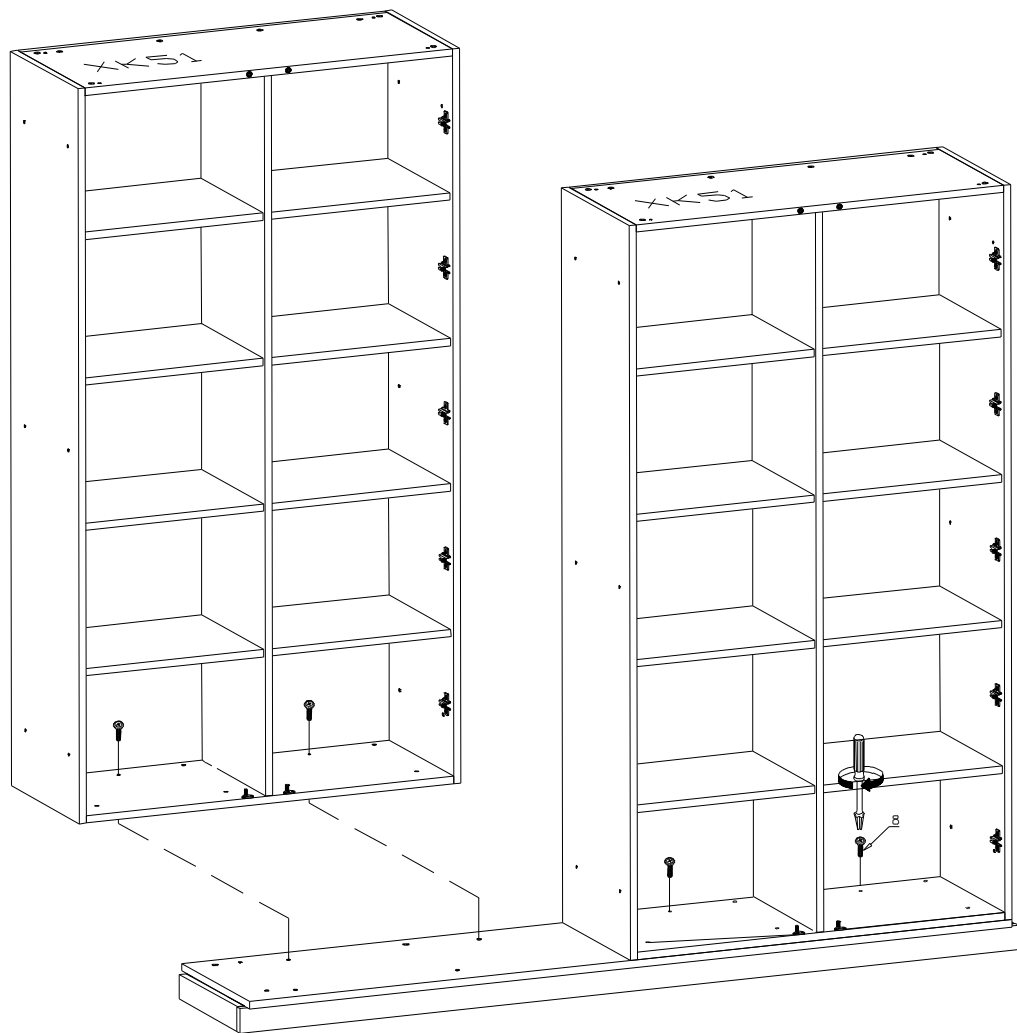


H

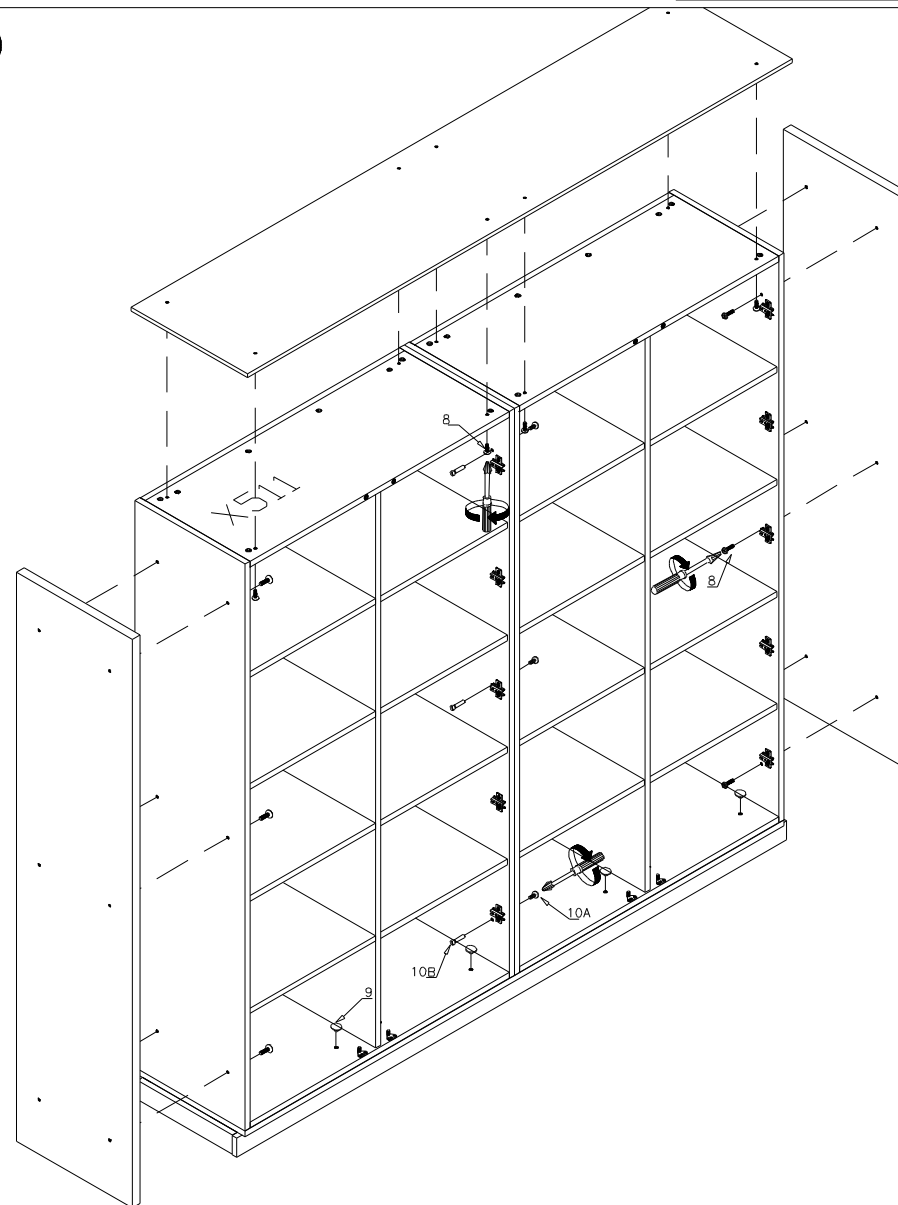


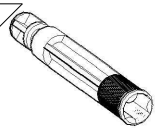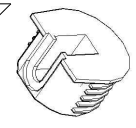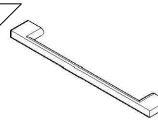1 	2 	3 	4 	5  M6x25	6 	7  M4x12
8 	9 	10  10A  10B	11 	12  M8x30	STATUS   	


A

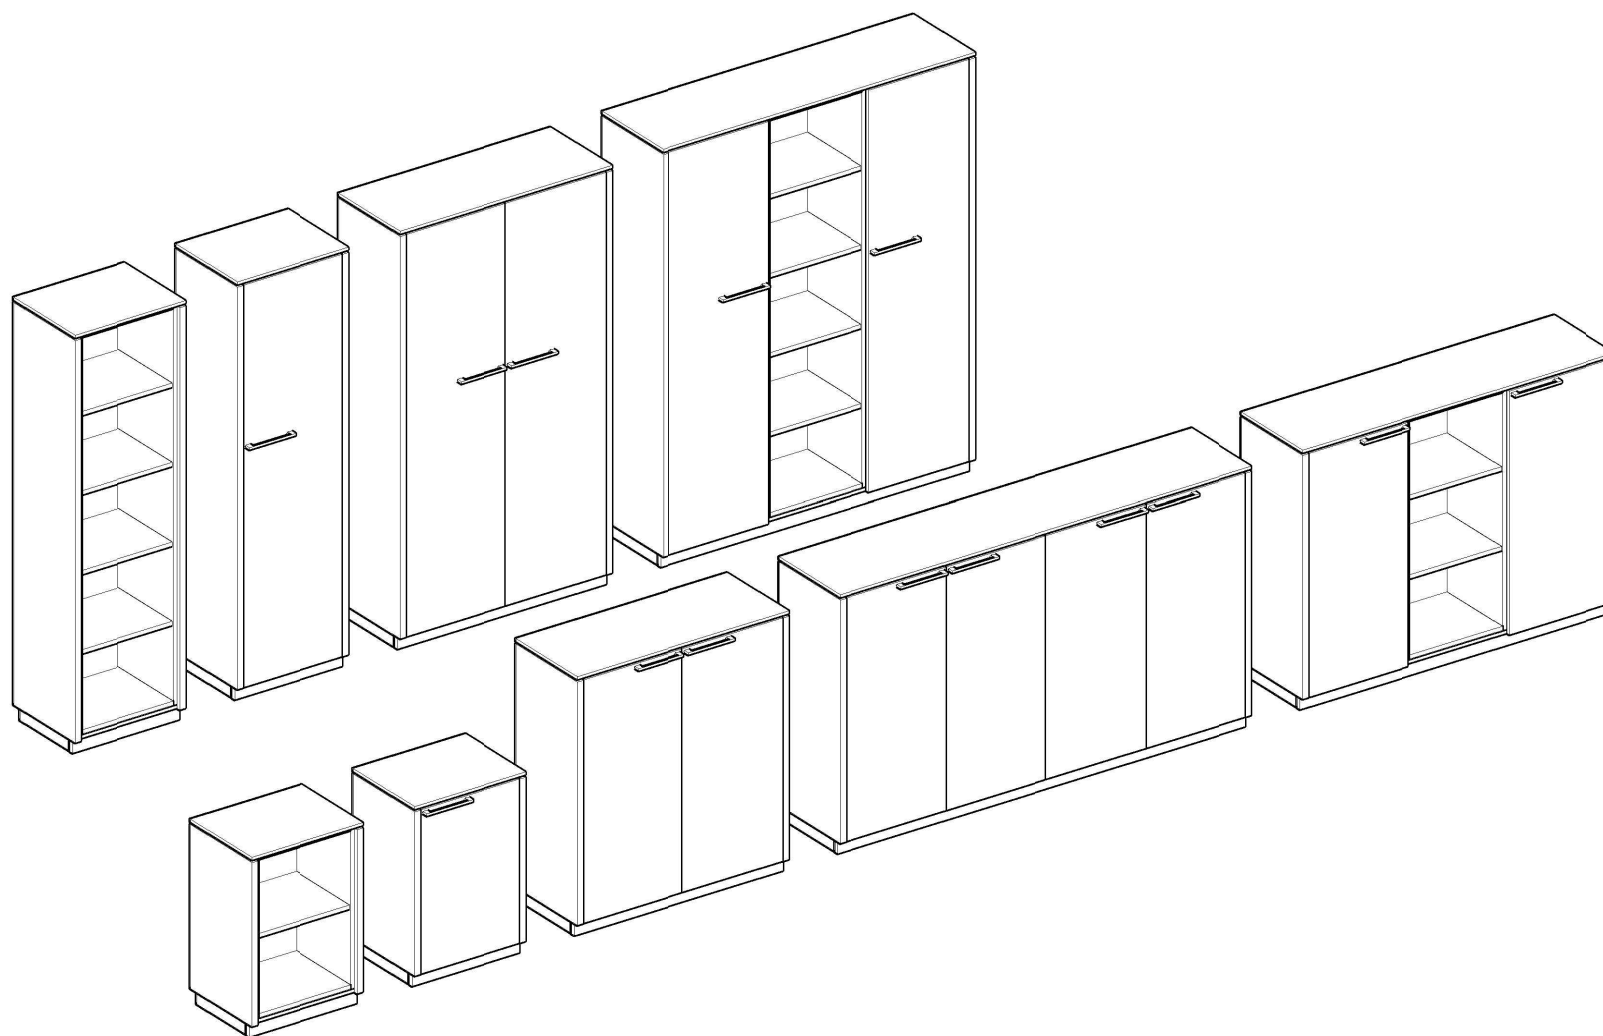



B

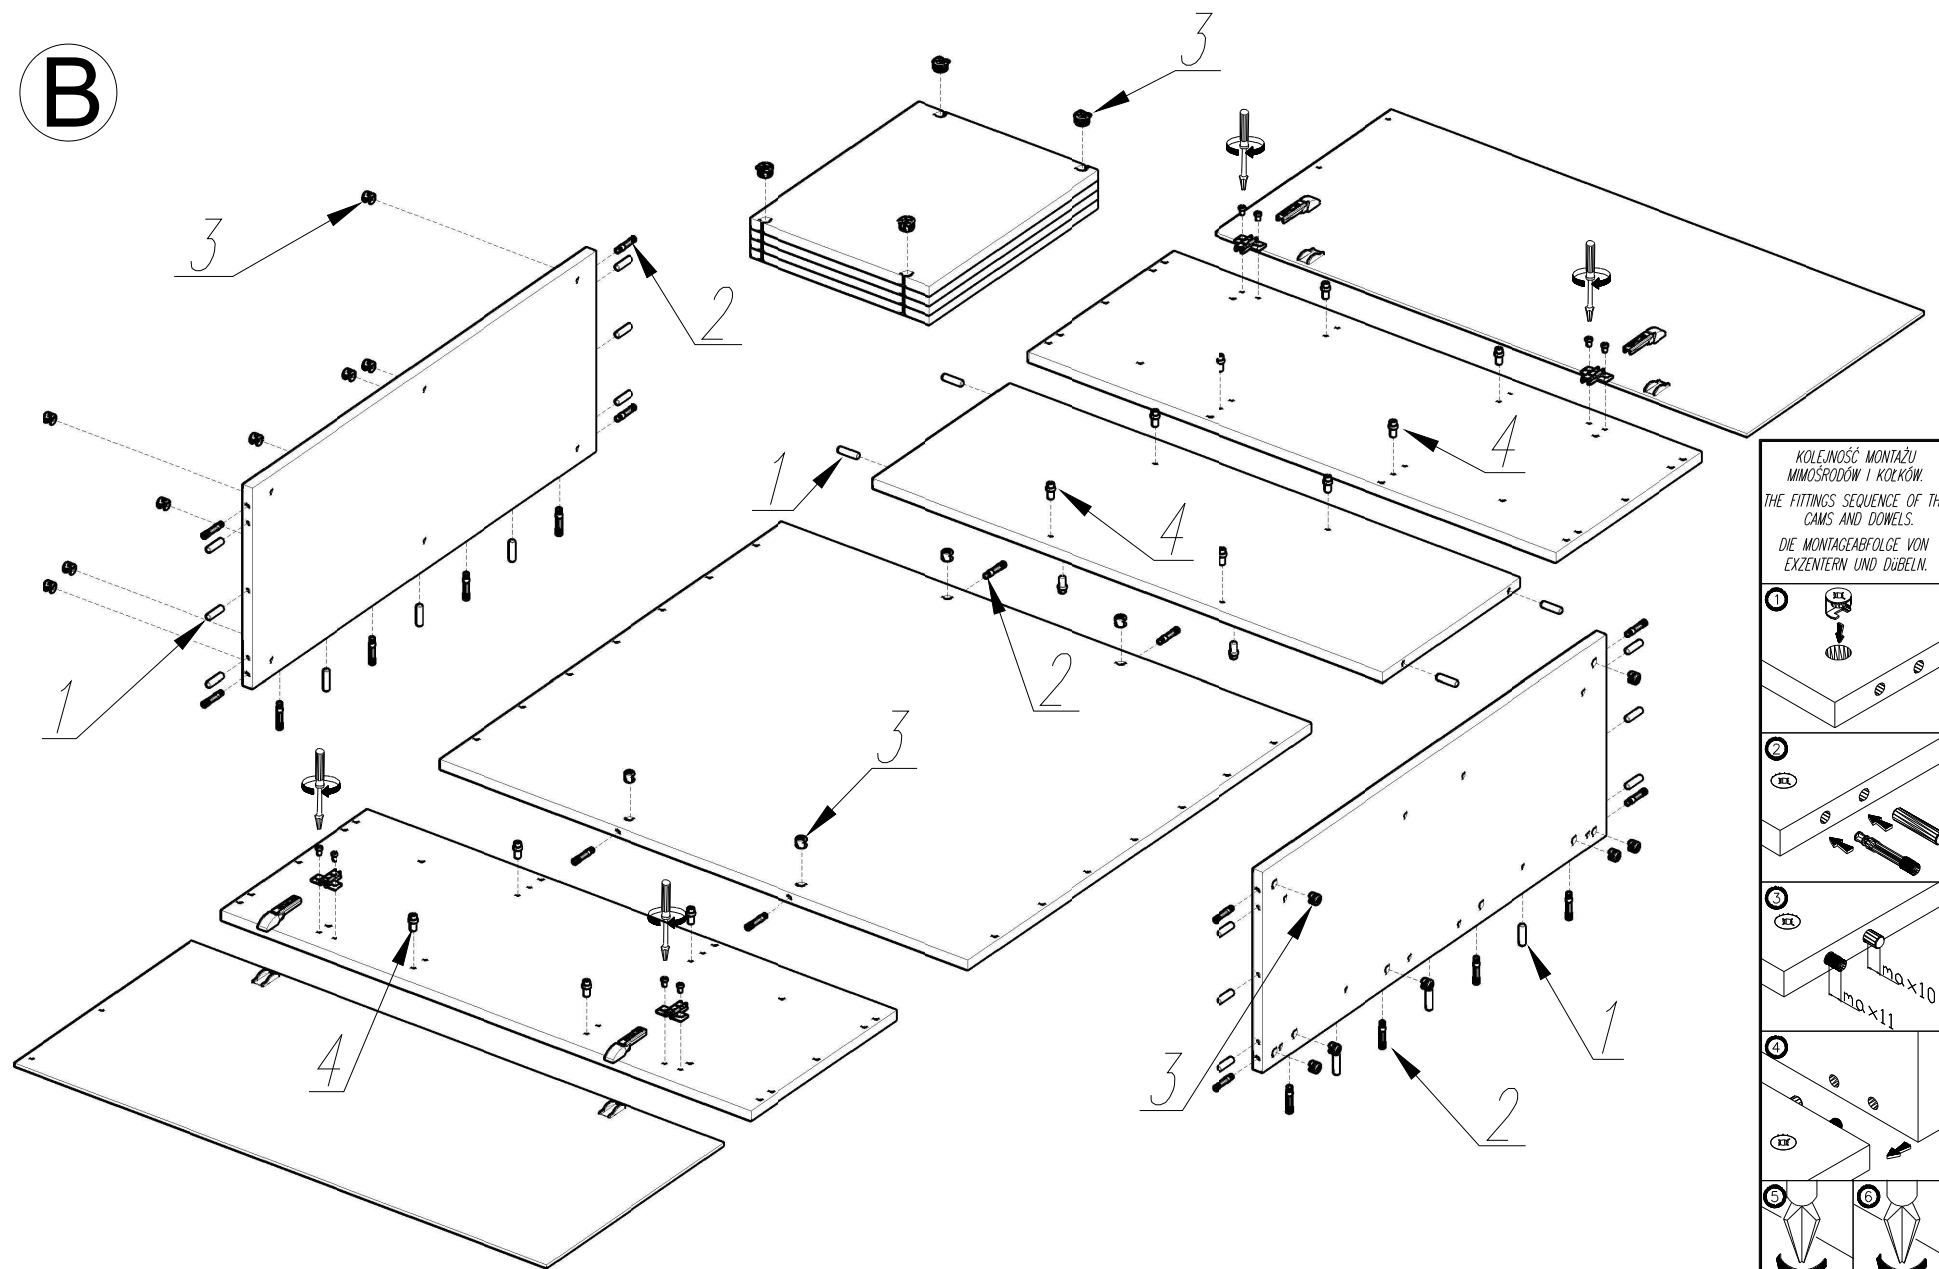






KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW I KOLKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

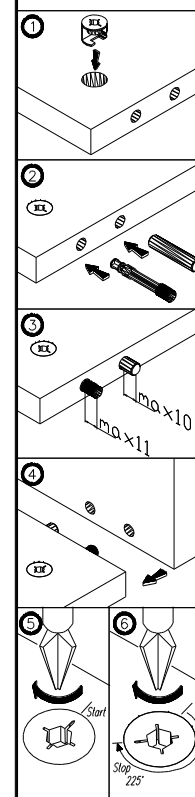





C

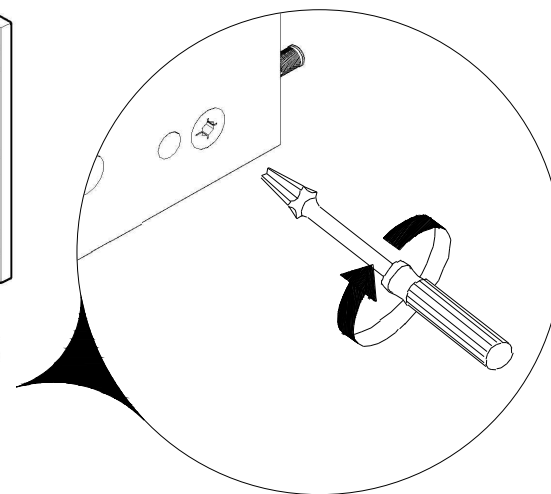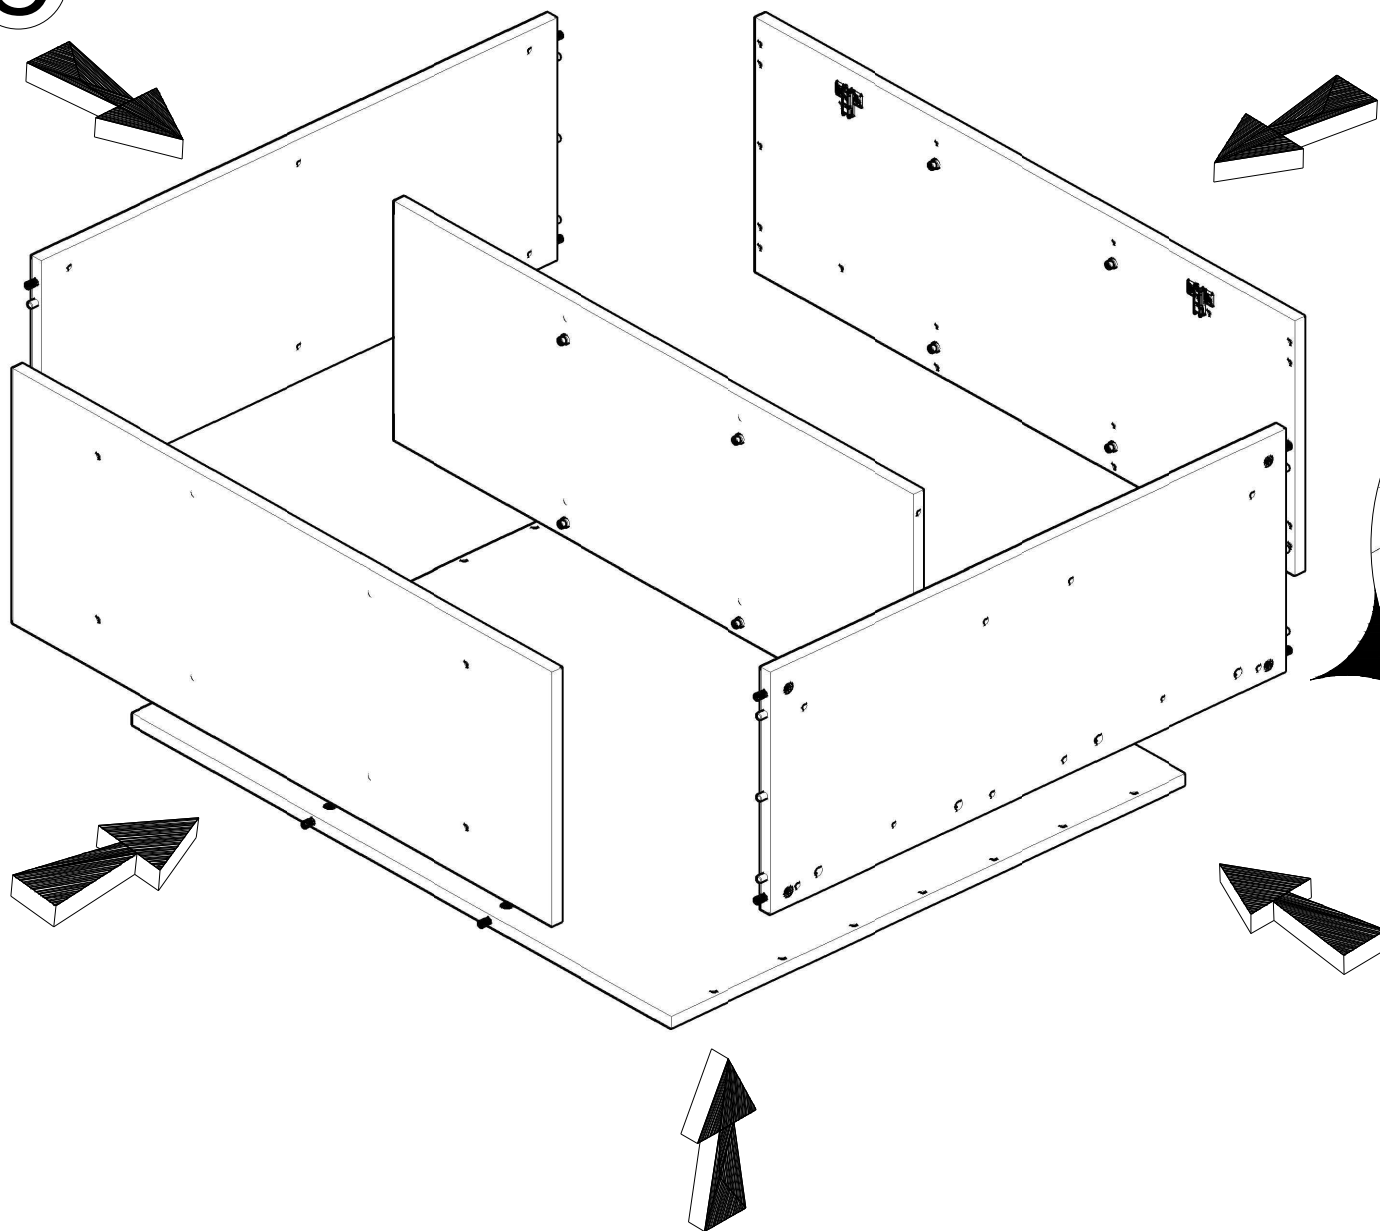









D

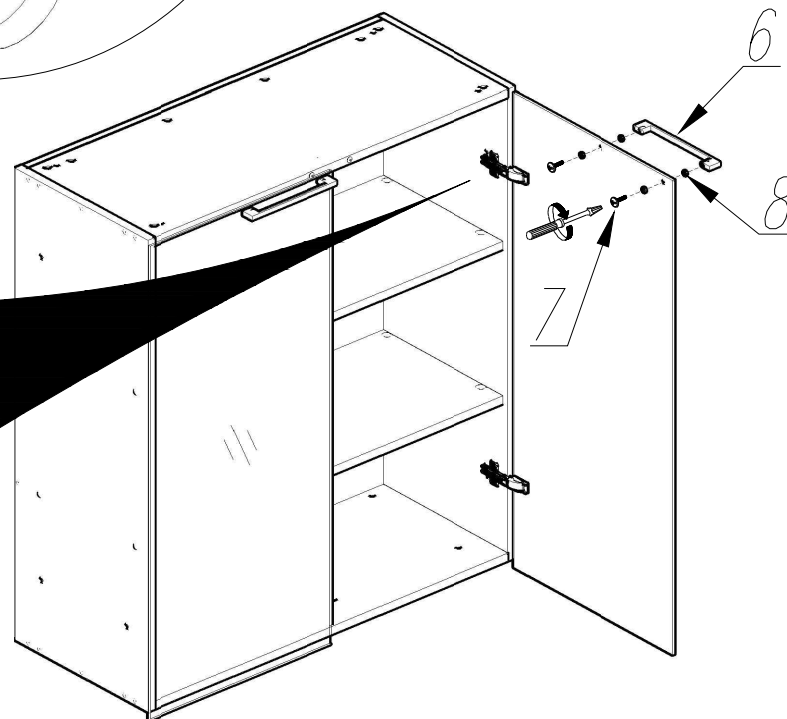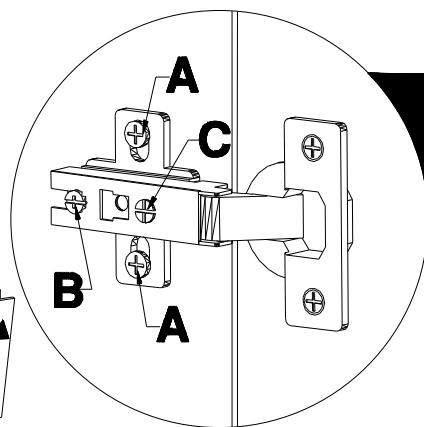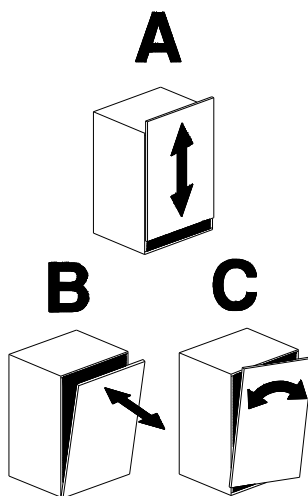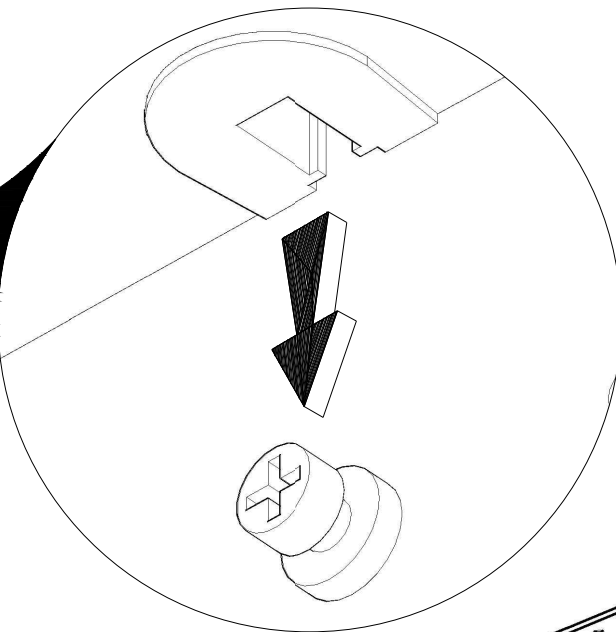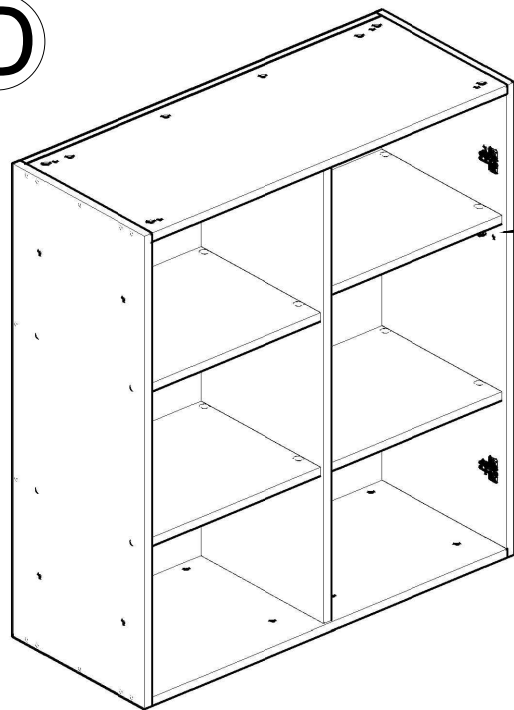

E

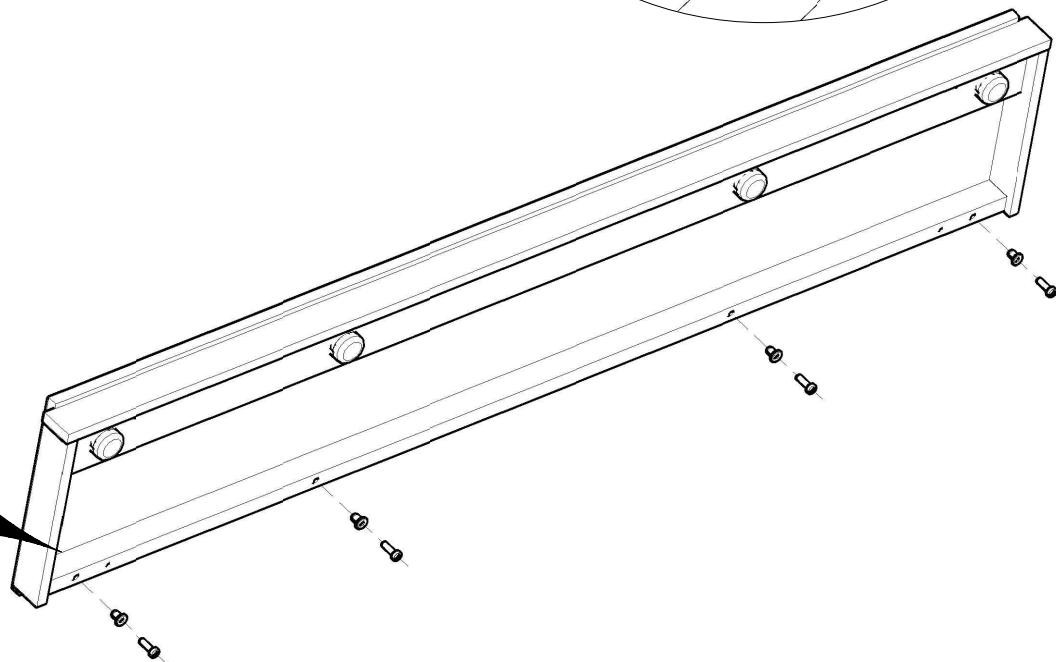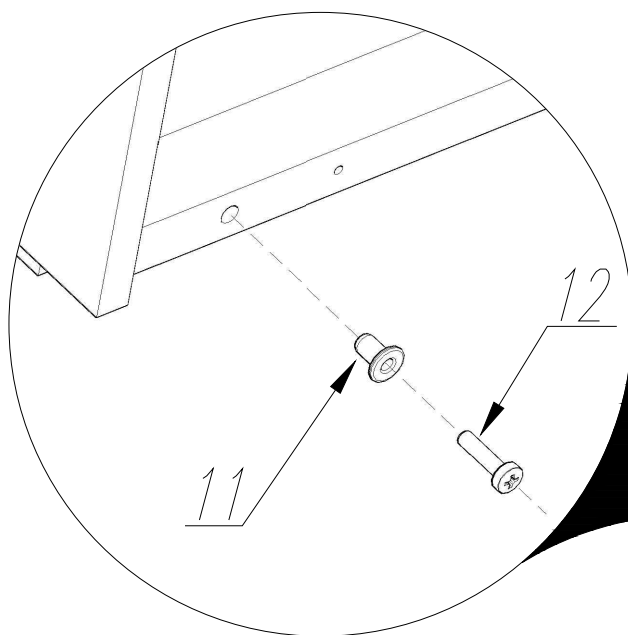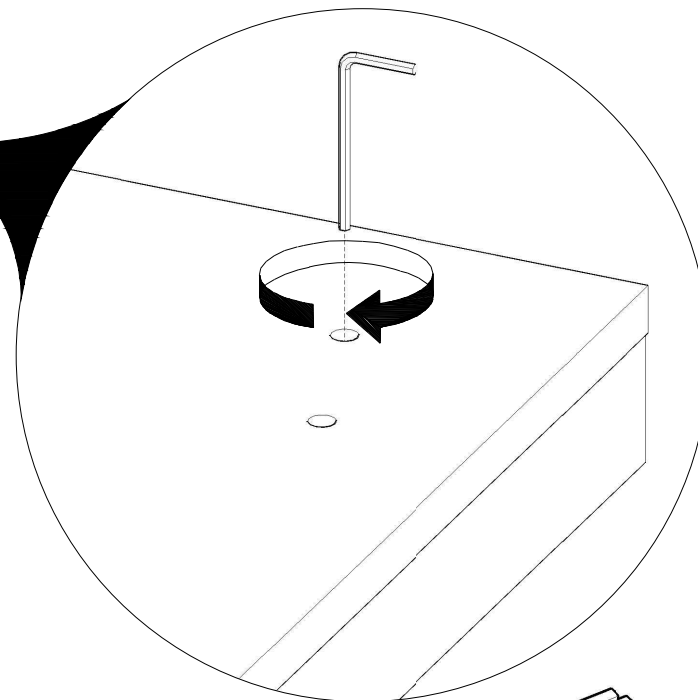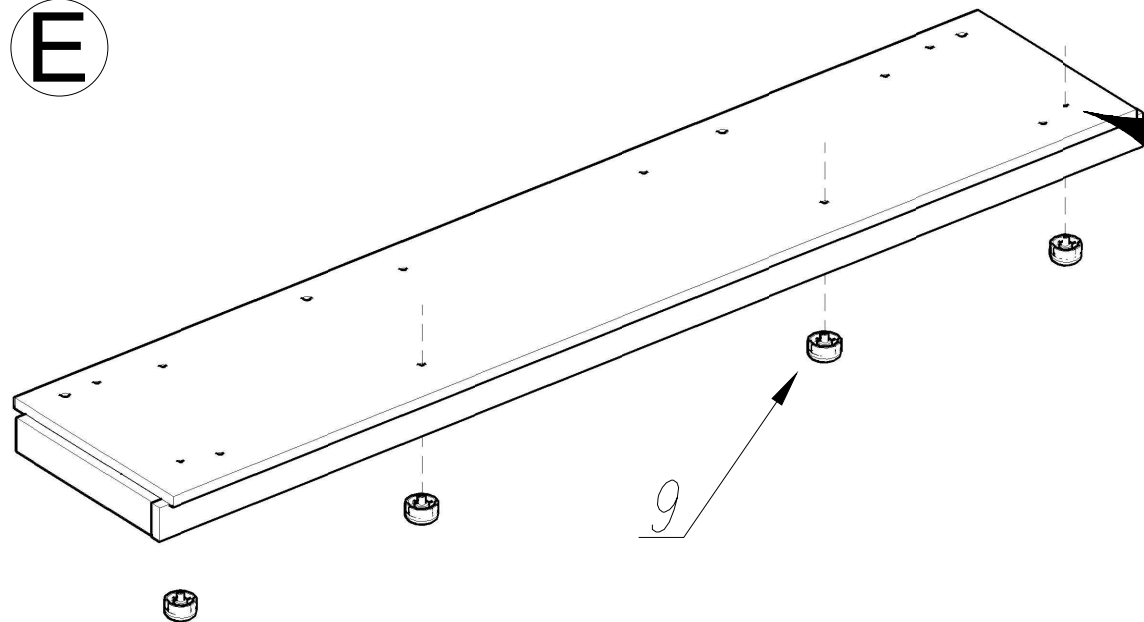

F

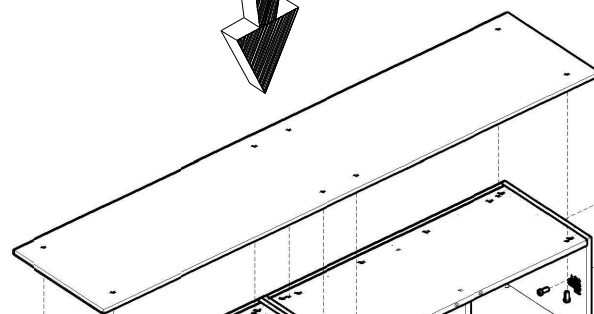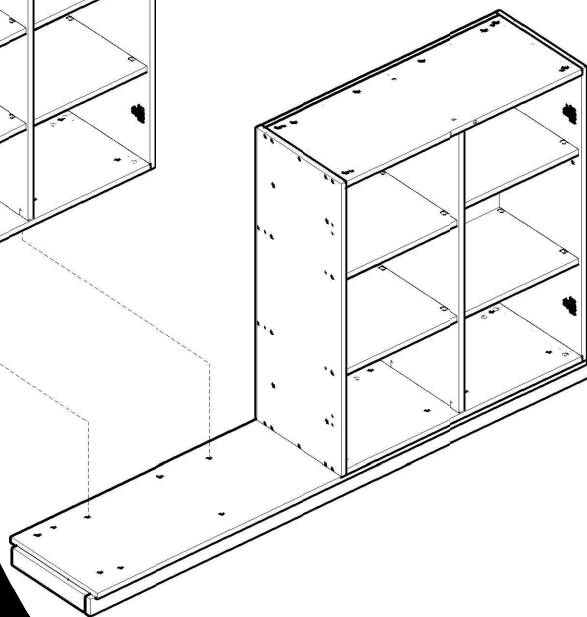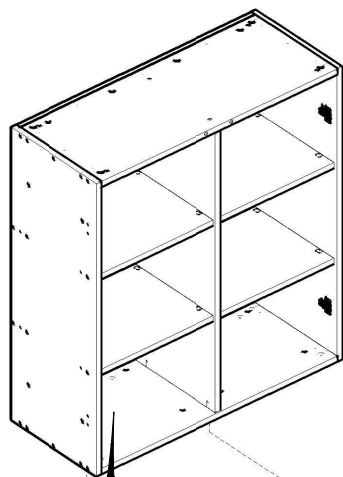

10B

10A

5

5

