


1



M05









1




3x20

M04

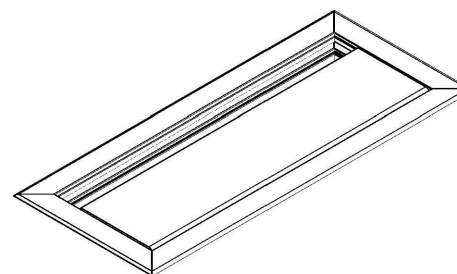
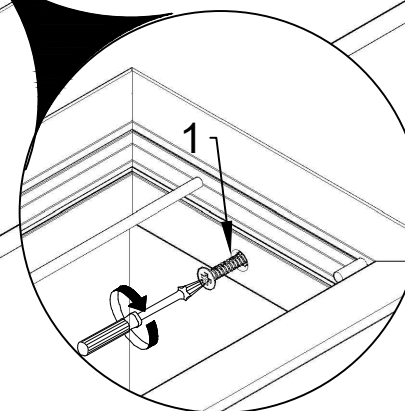
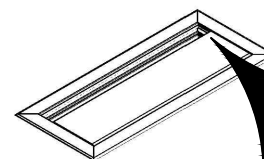

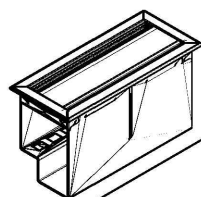



1




3x20


M04

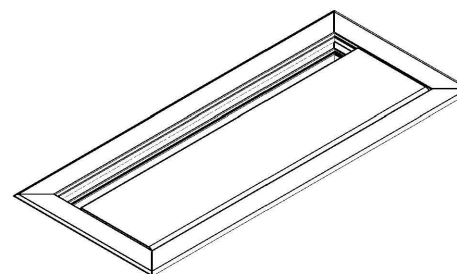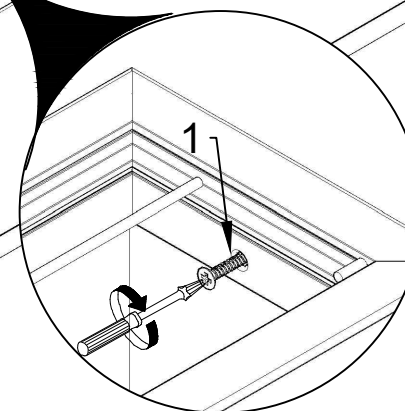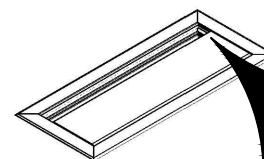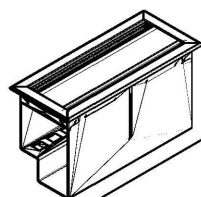



YAN_M

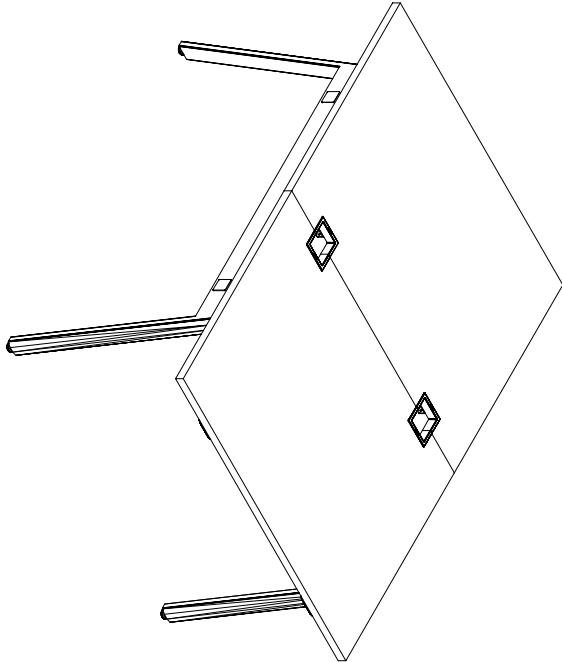


YAN_Z

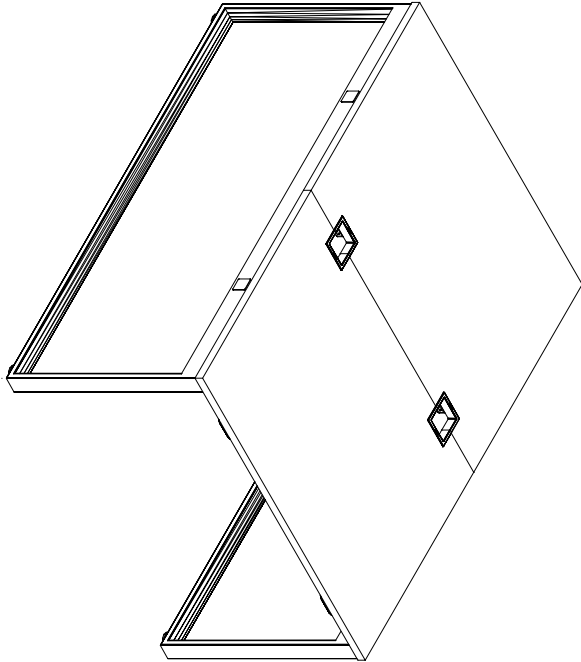








YAN_C




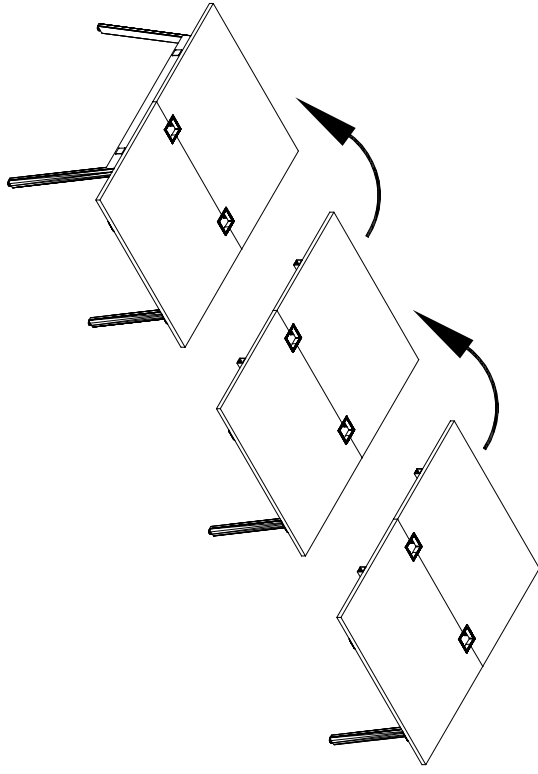
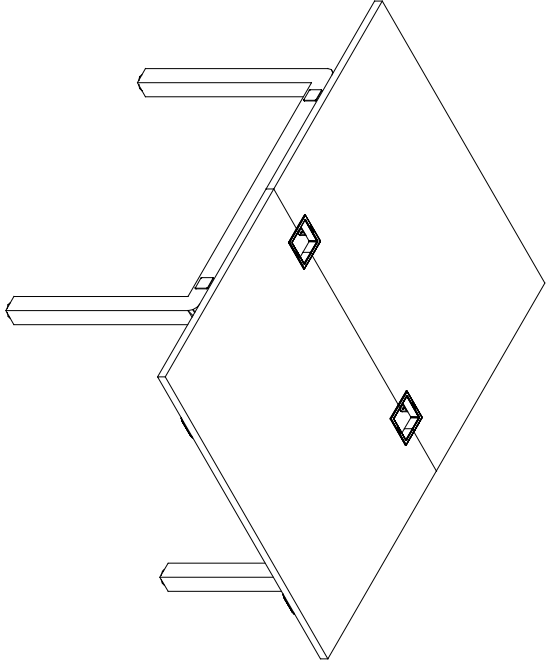


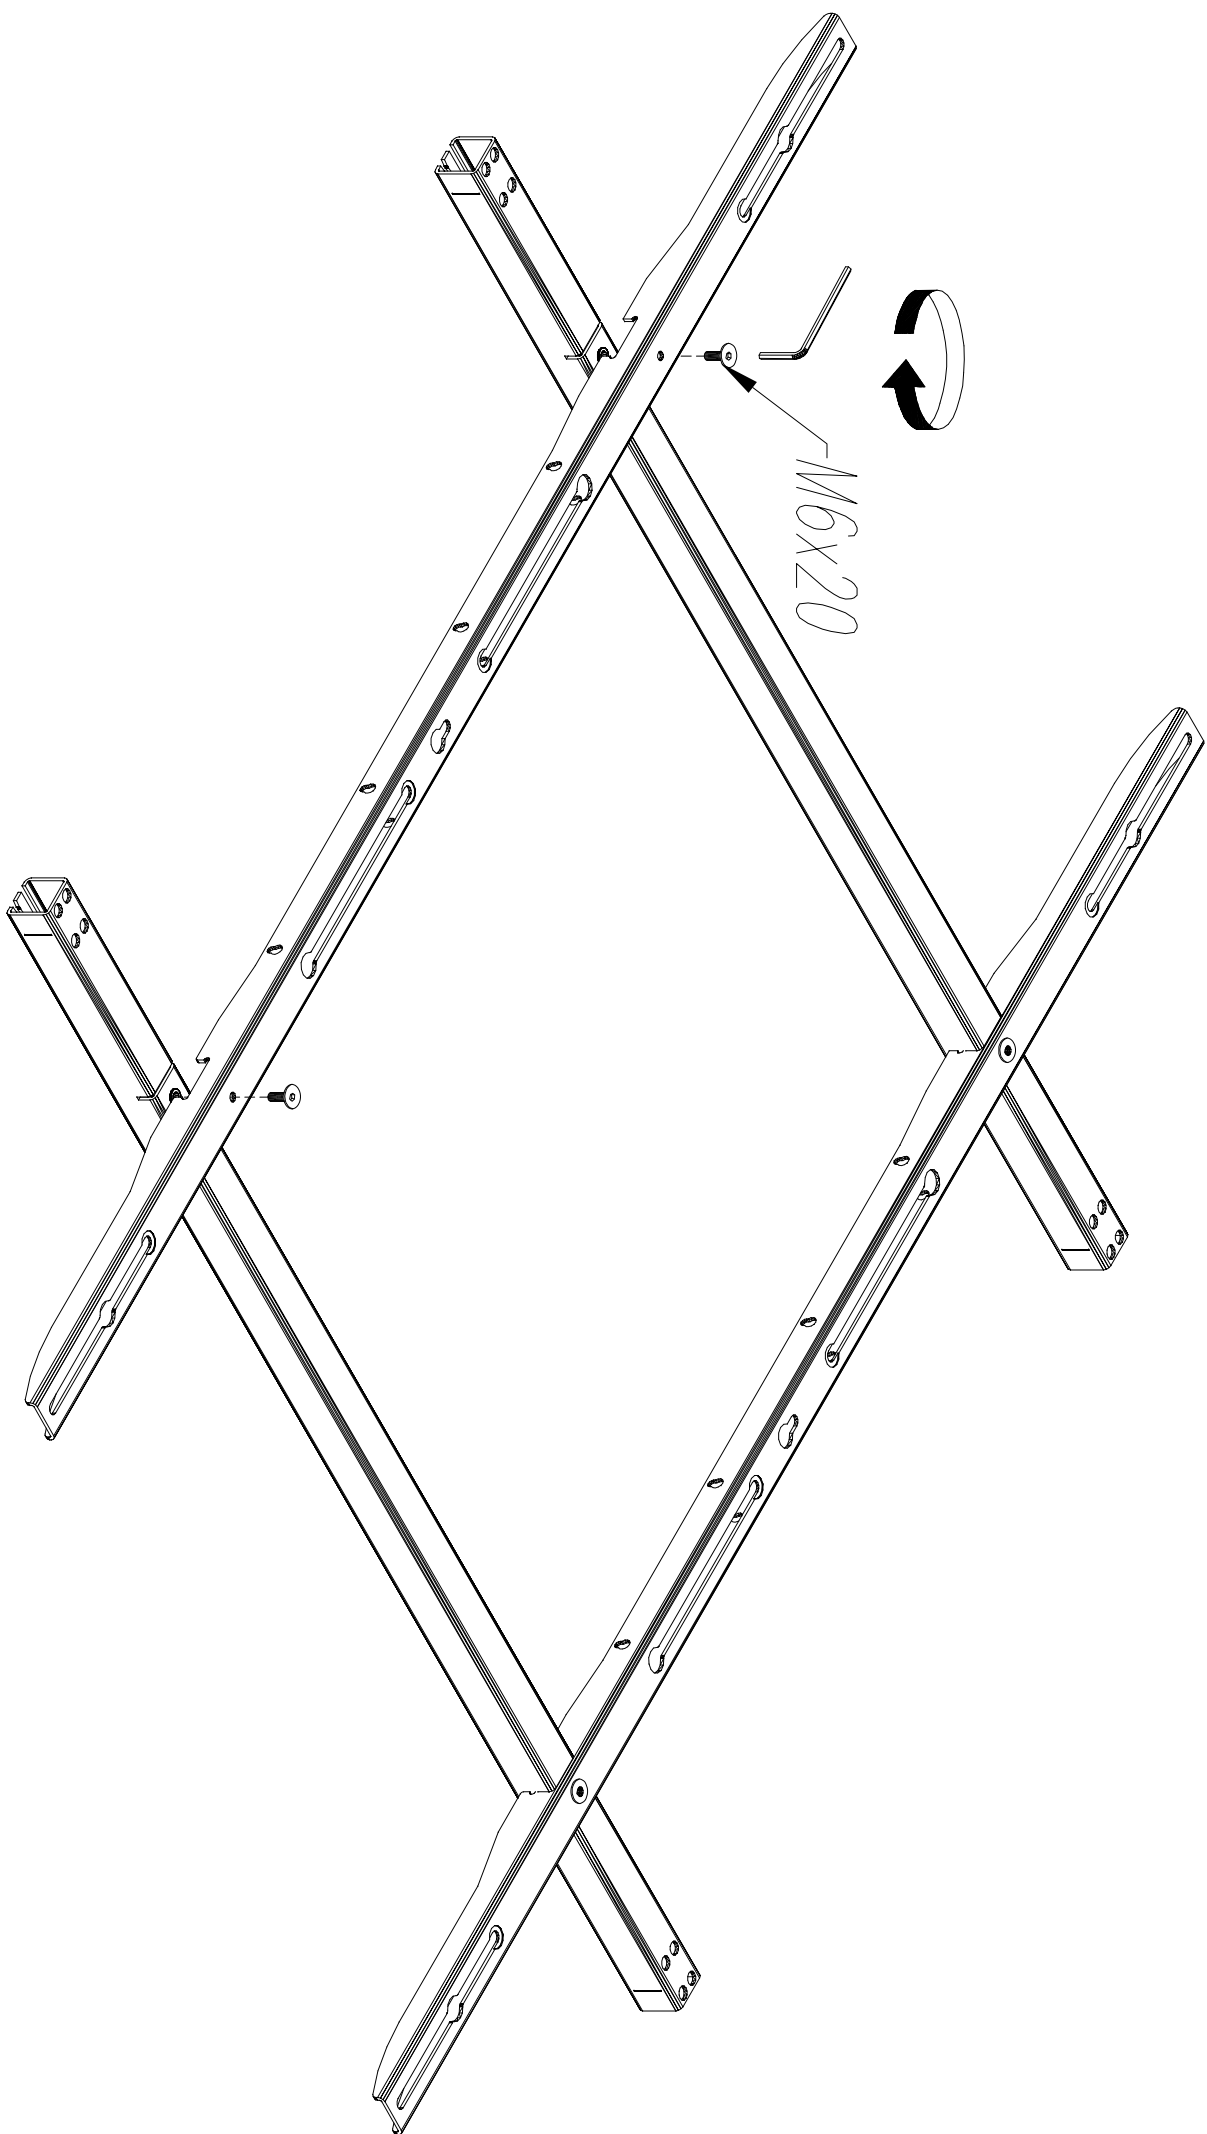



YAN_BENCH

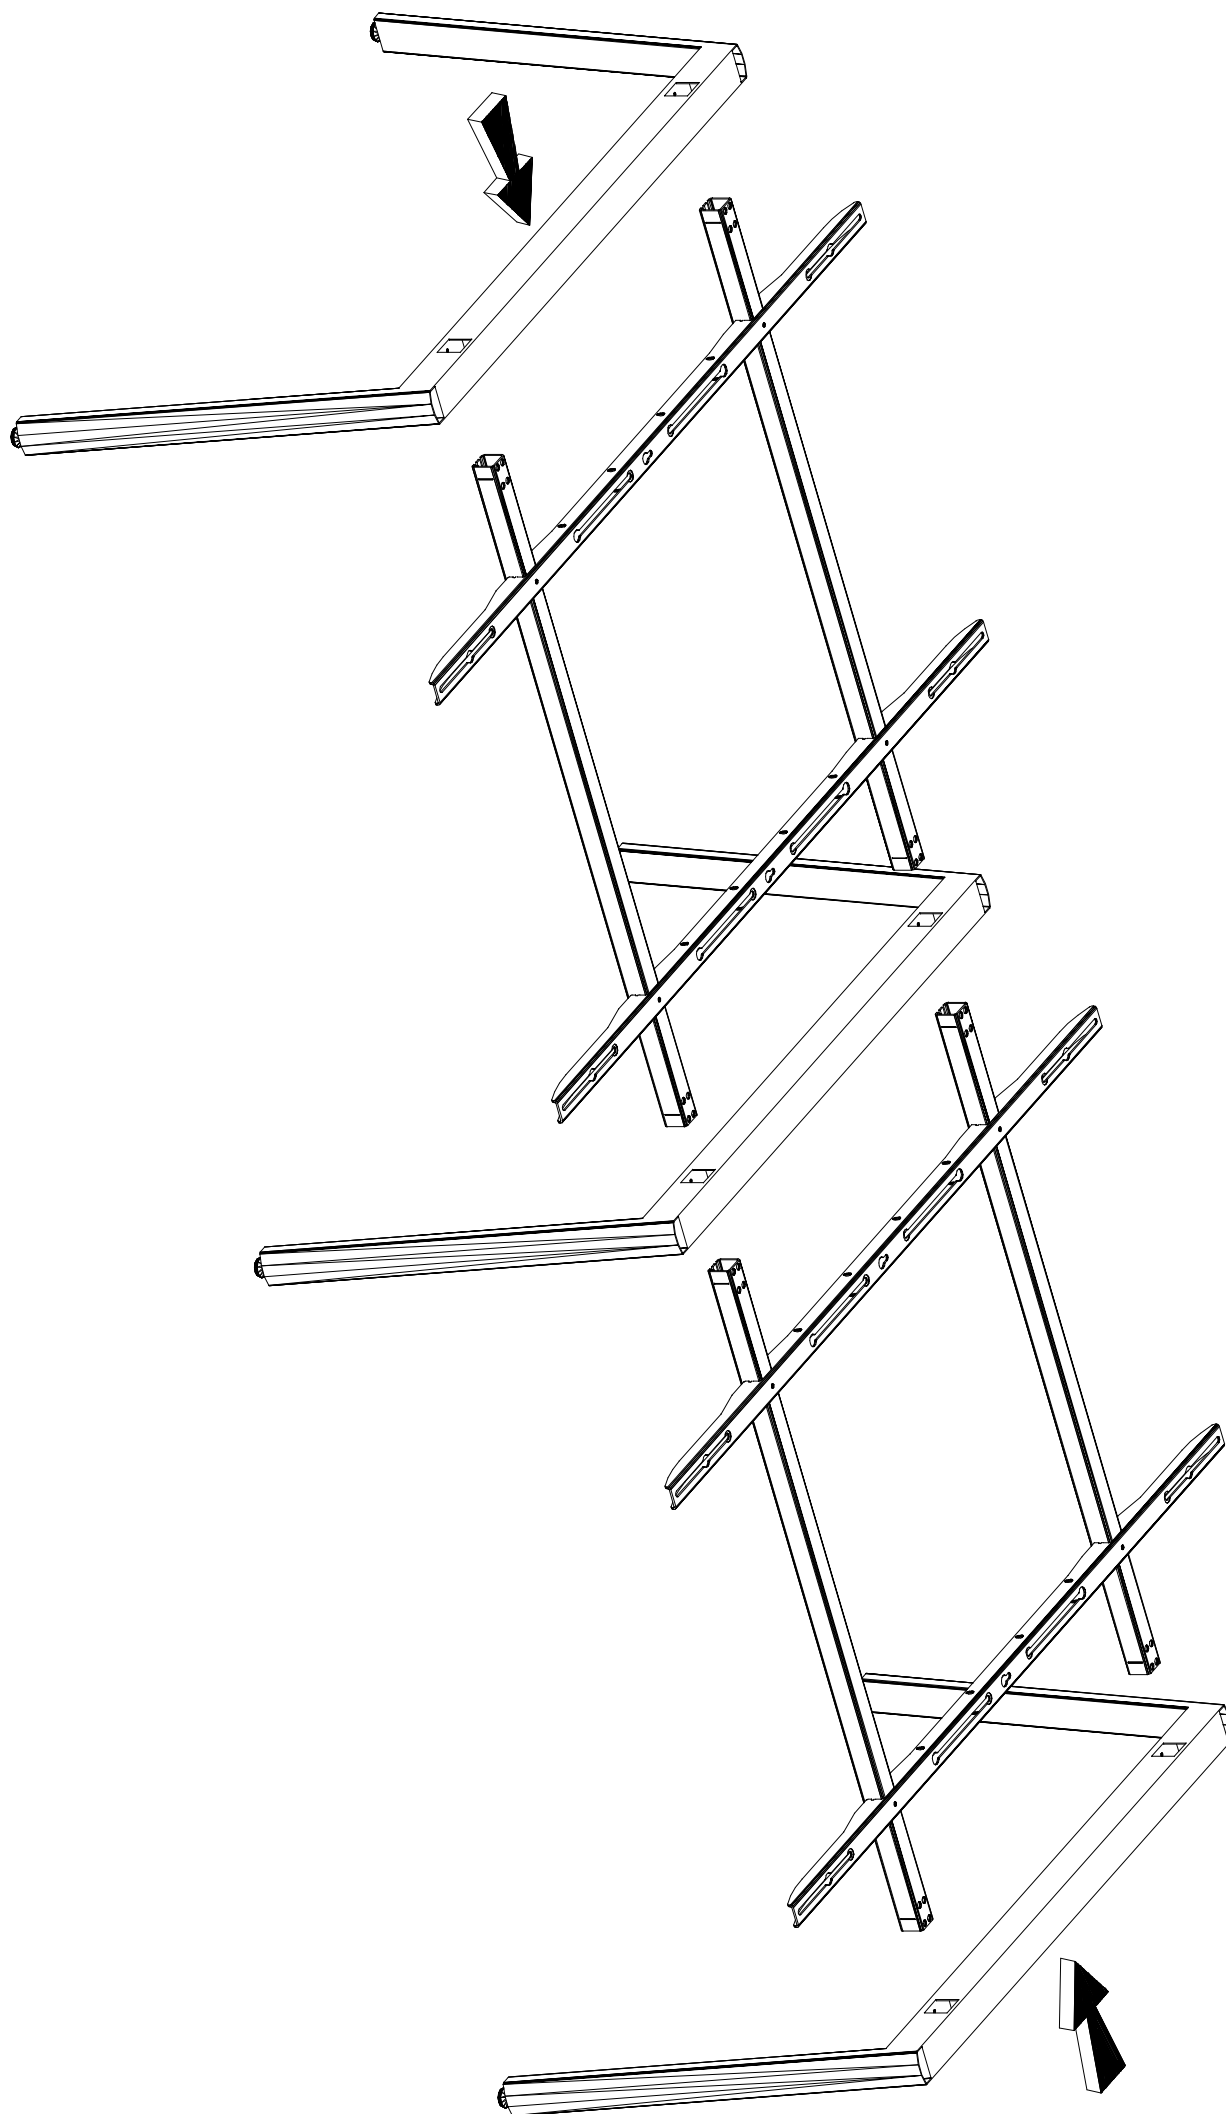

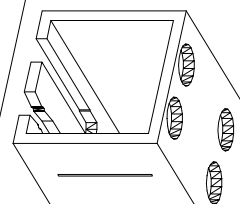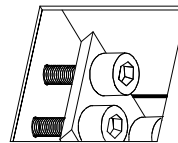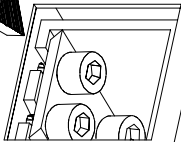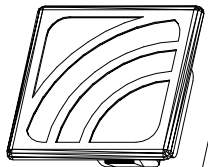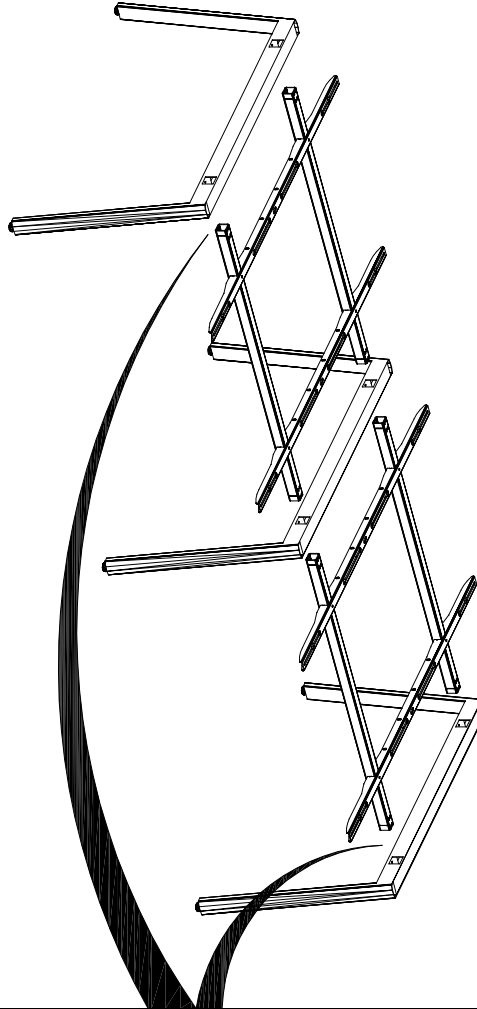

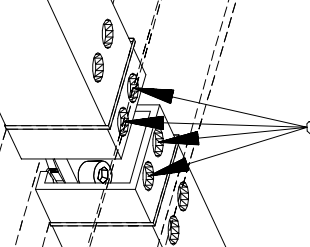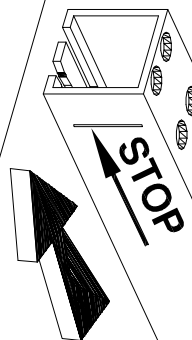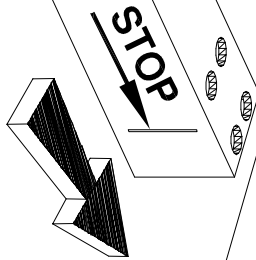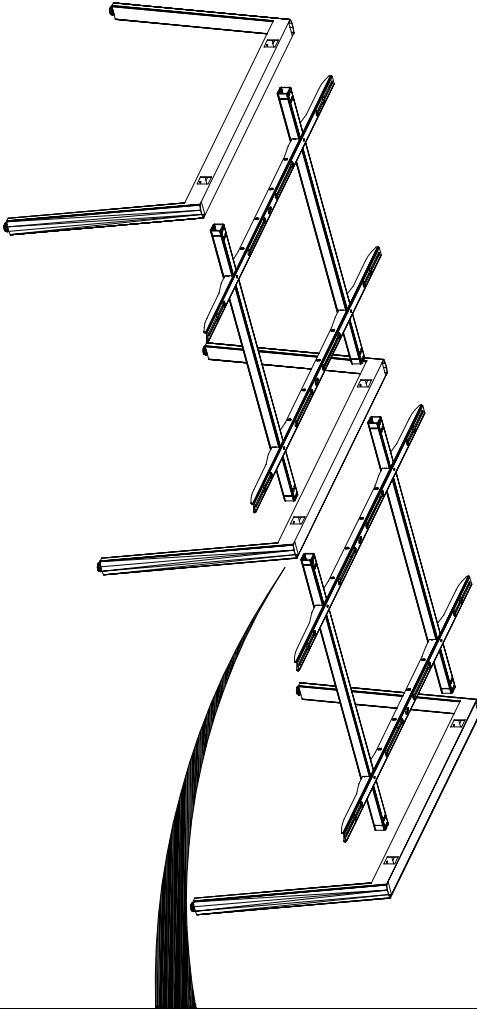


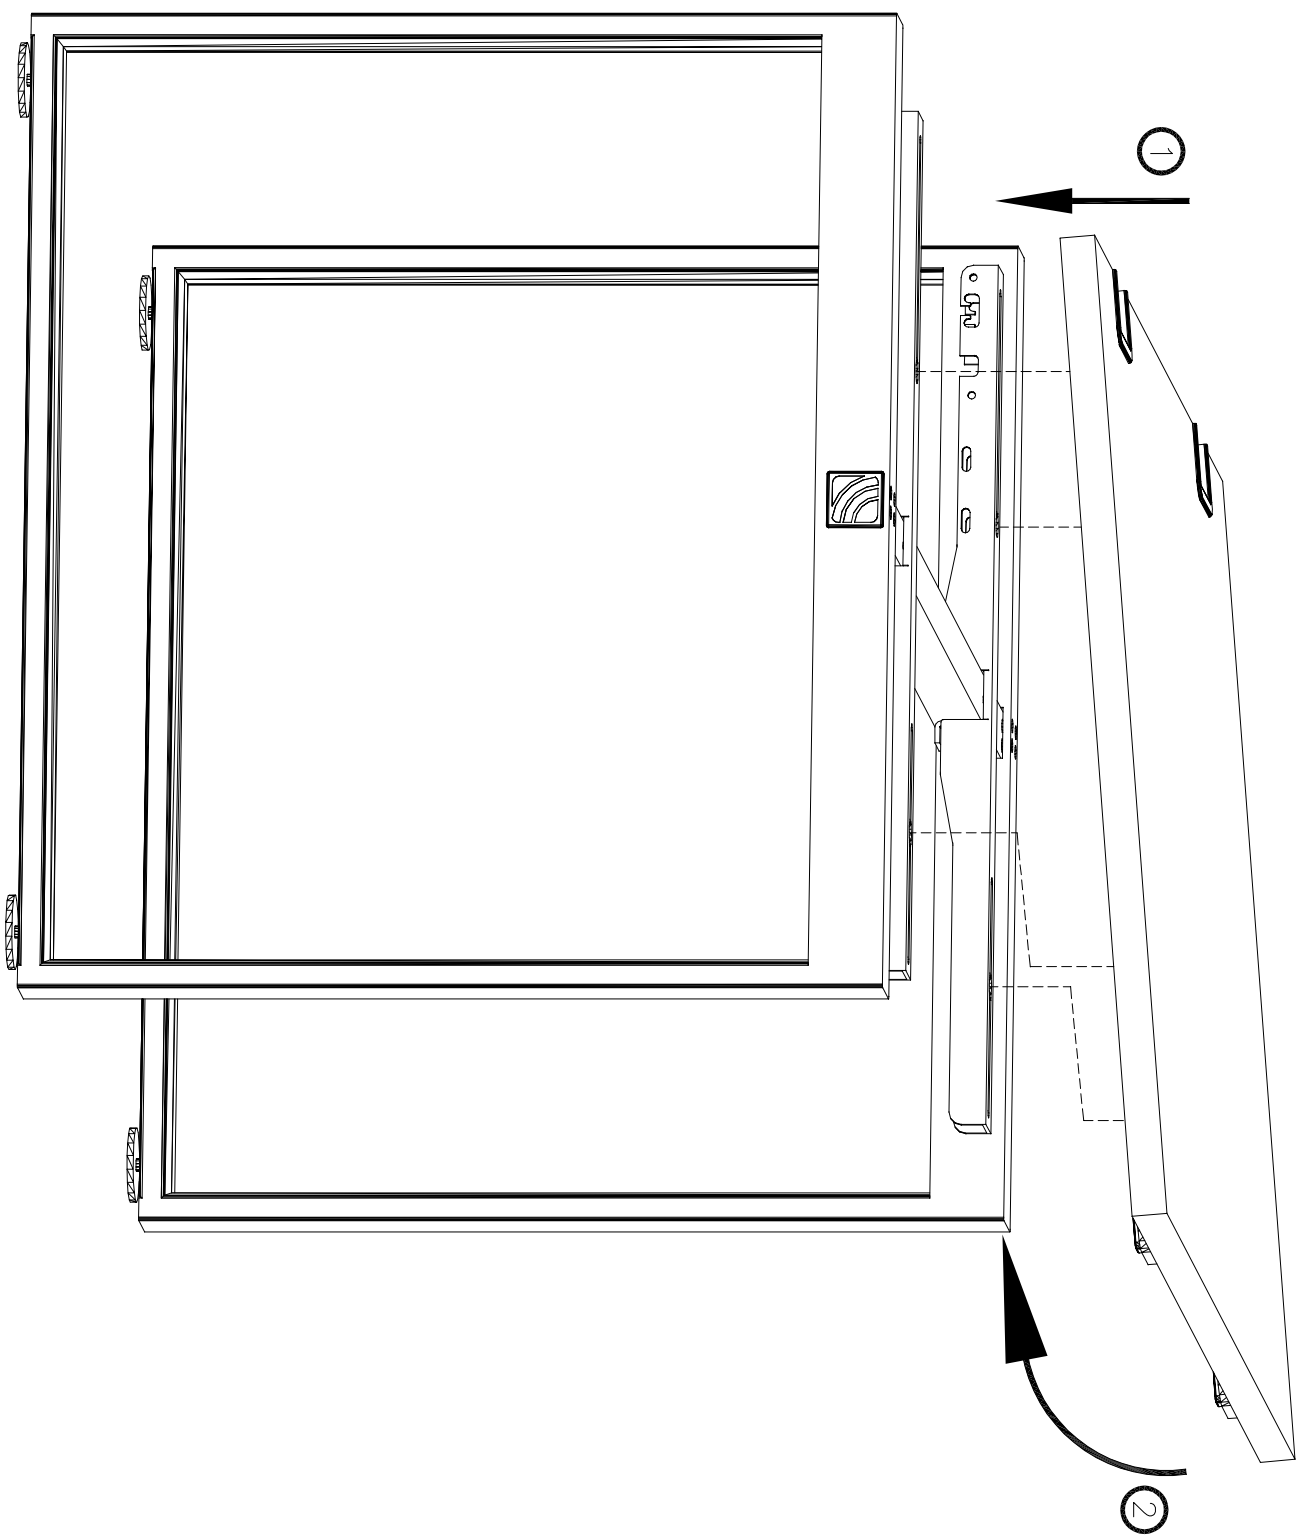

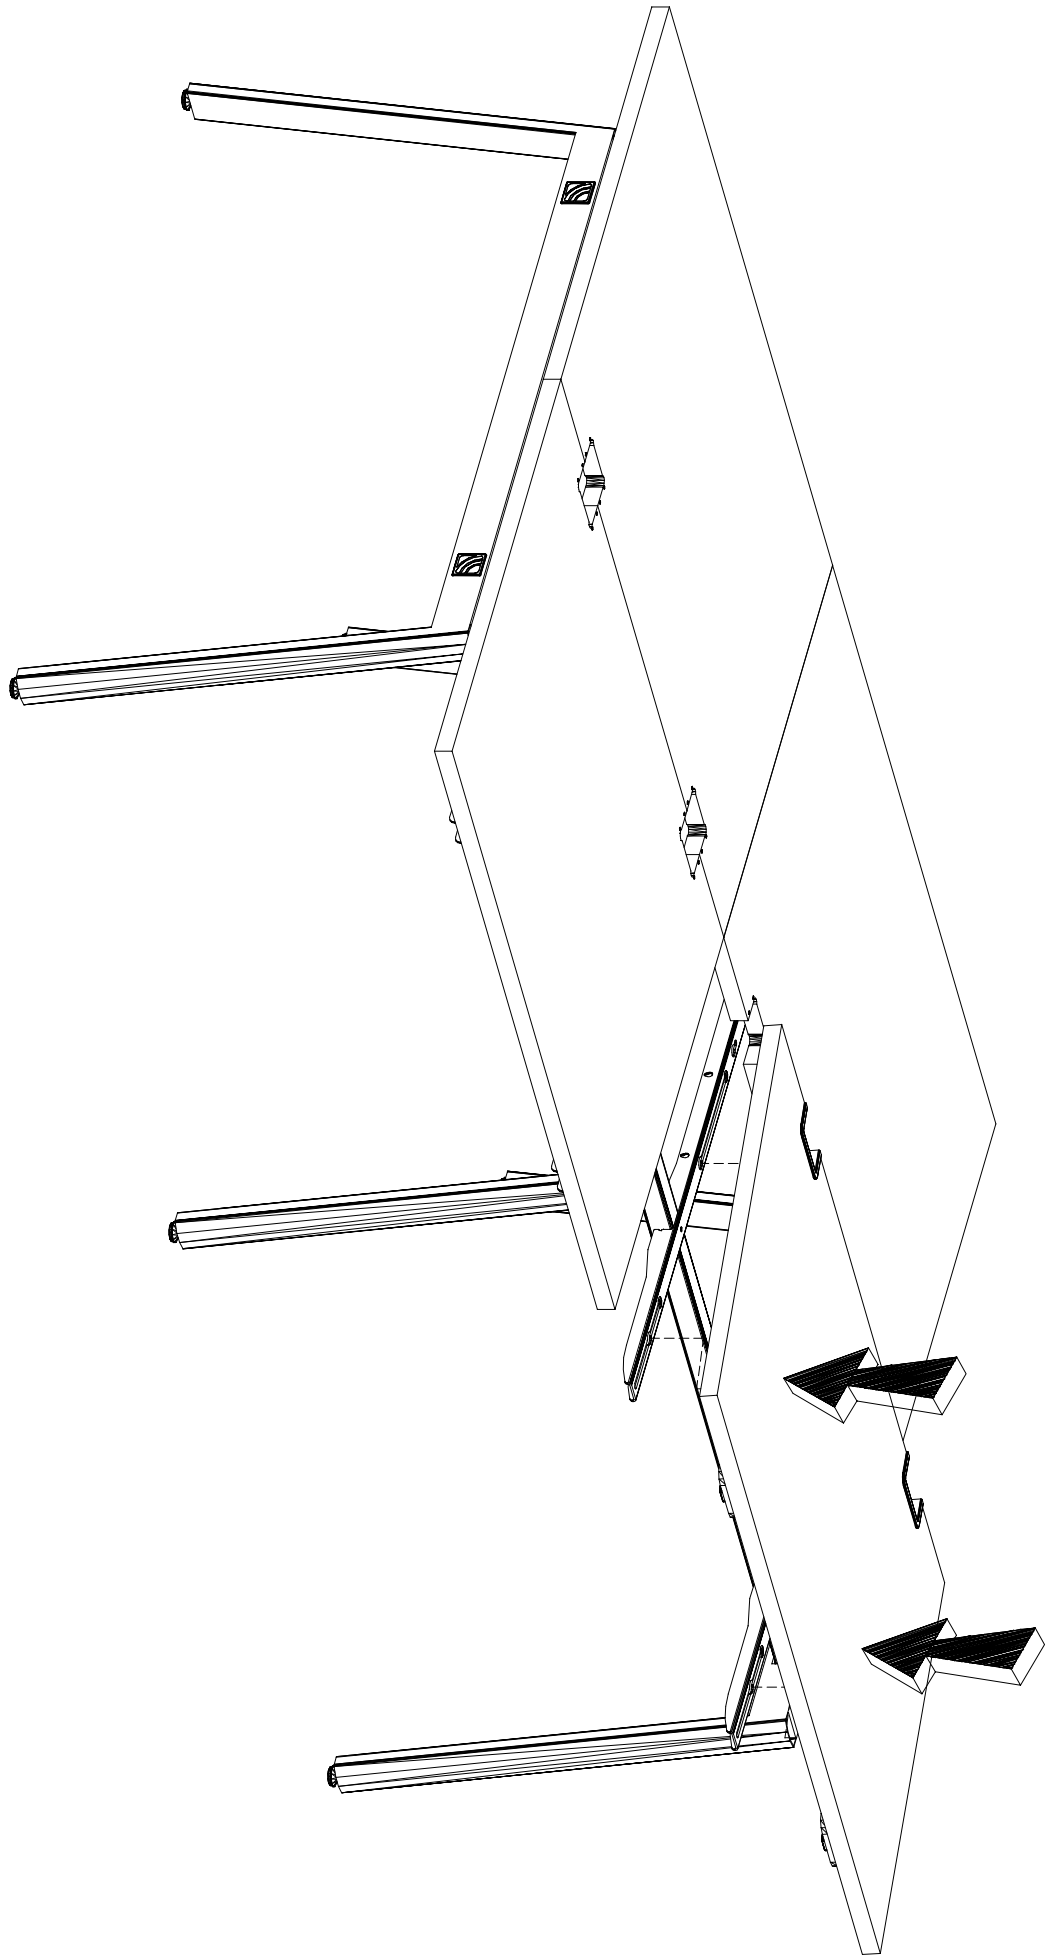


- | | |
|---|--|
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |
| 6 | |
| 7 | |
| 8 | |
| 9 | |


A12M

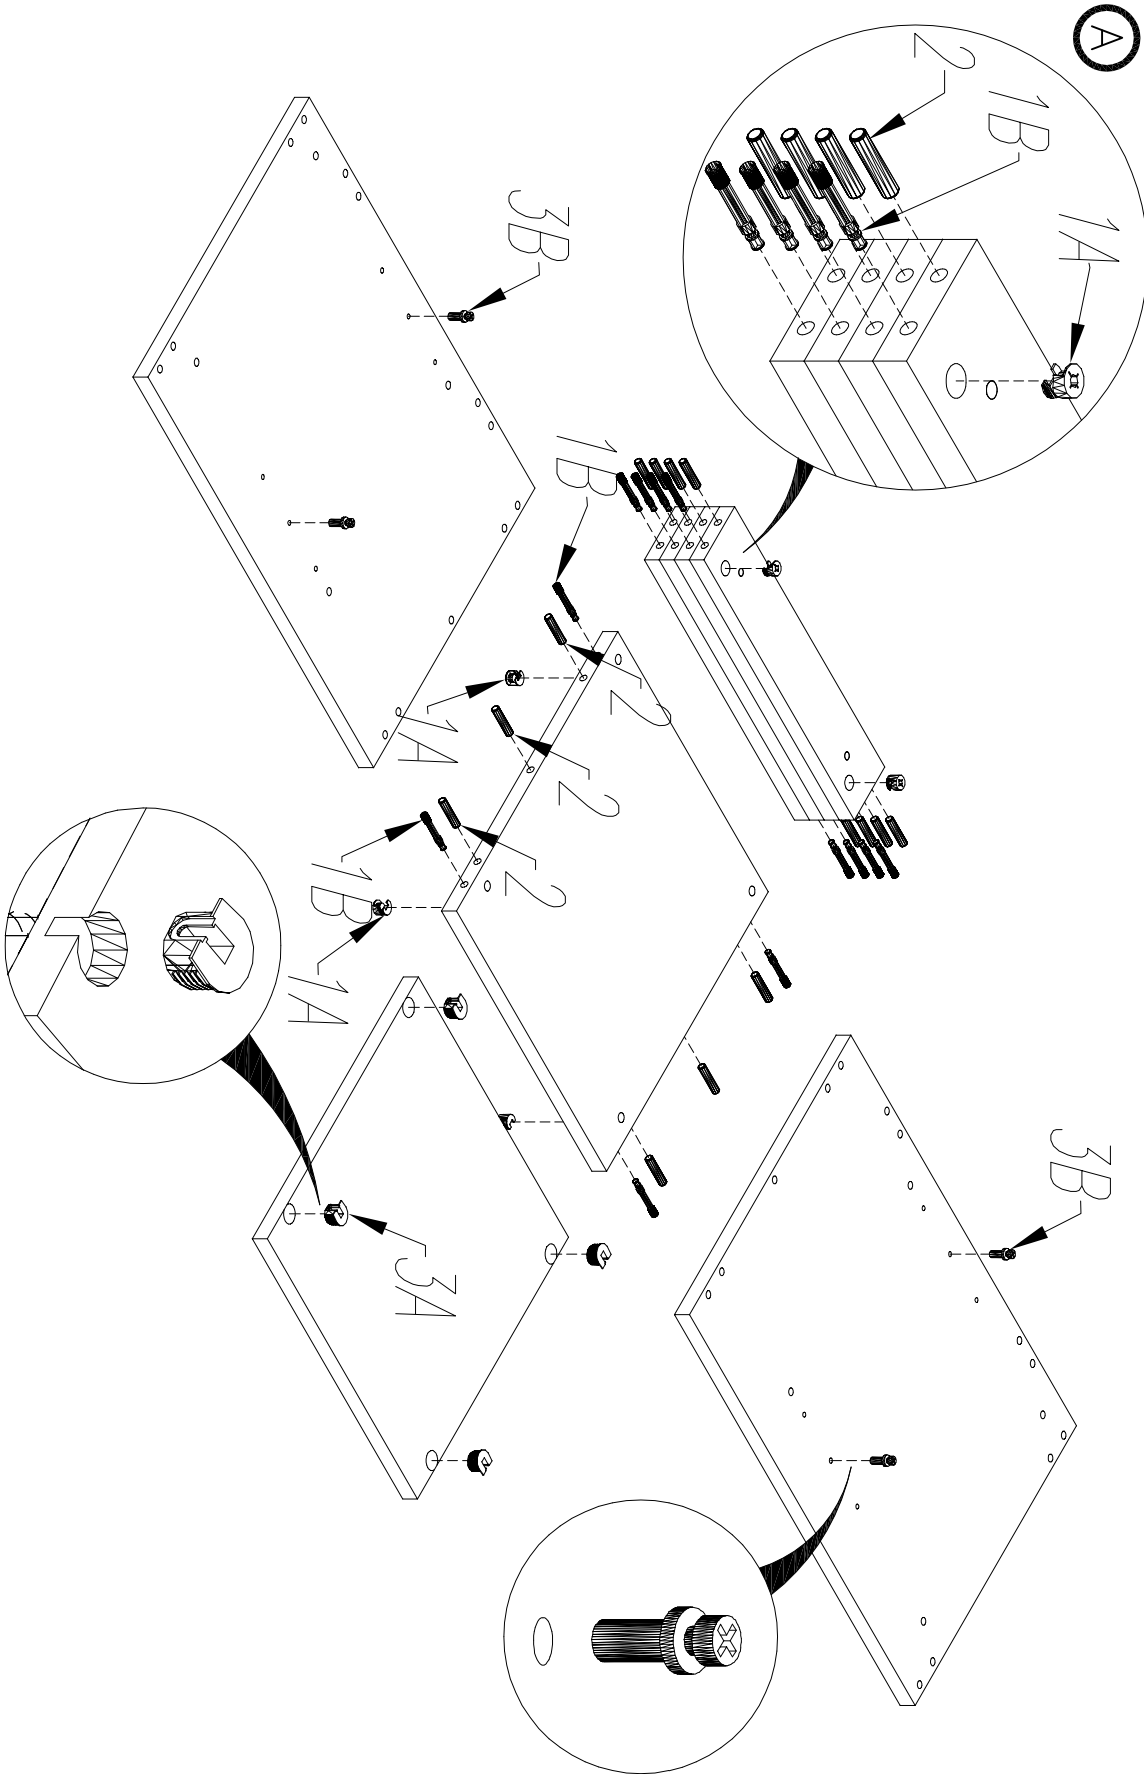


KOLEJNOŚĆ MONTAŻU
MIMOSRODÓW I KOLEKÓW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

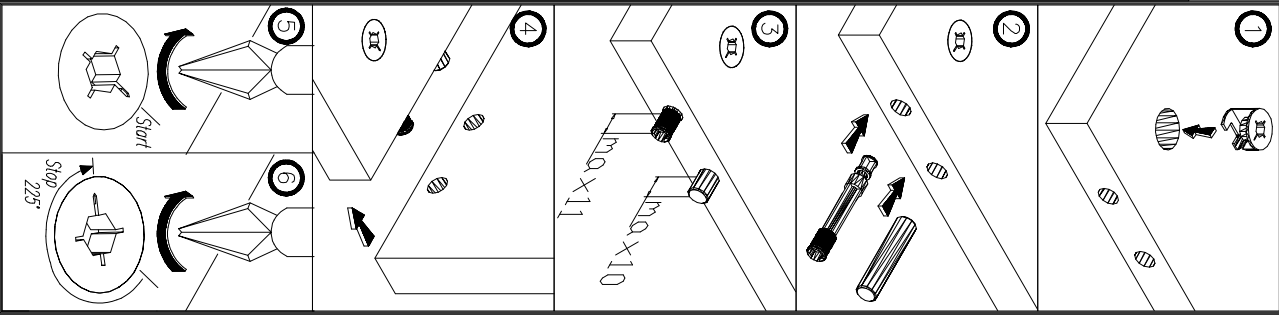

B

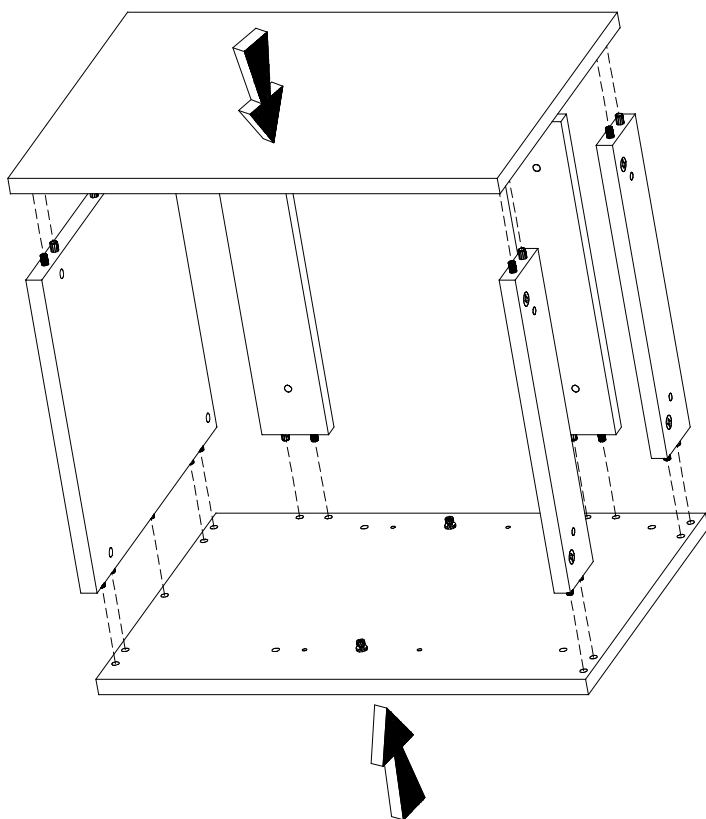

C

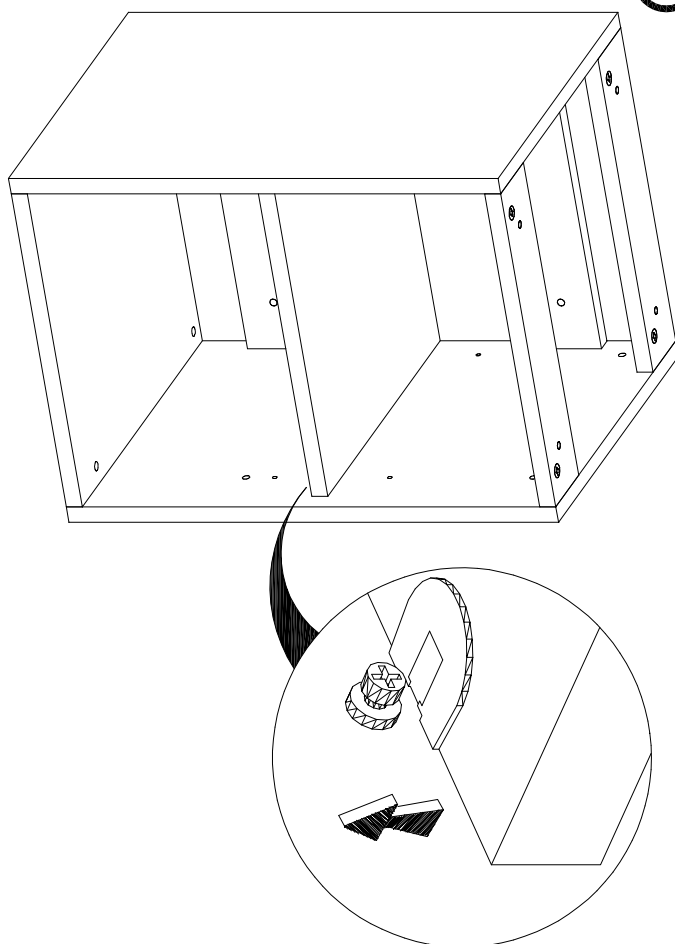

D

