



1  M8x20	2  H15	3  M8x45	 	ZUS_YAN_DESK
---	---	---	---	-----------------------



A

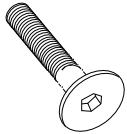


B



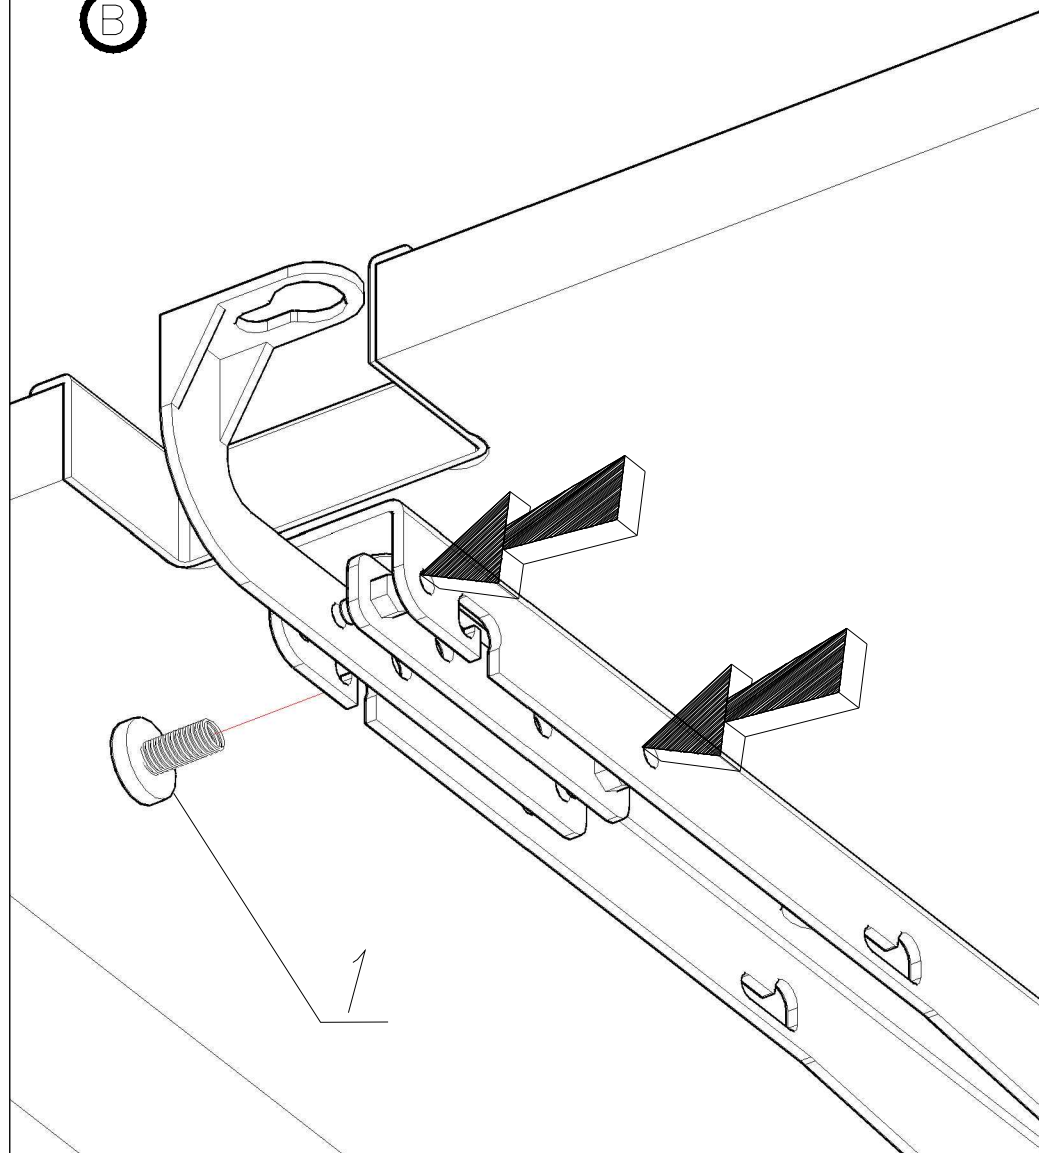


C

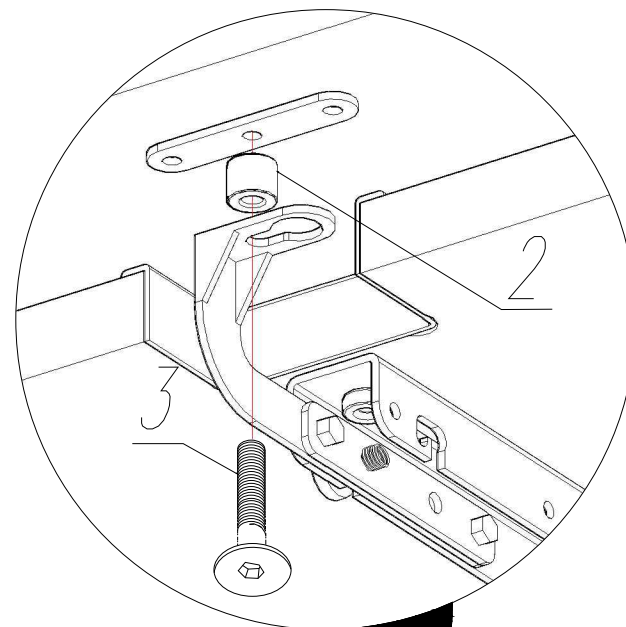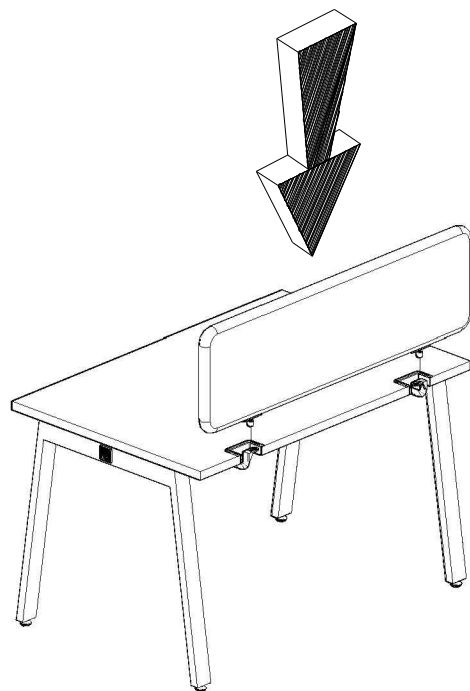


D

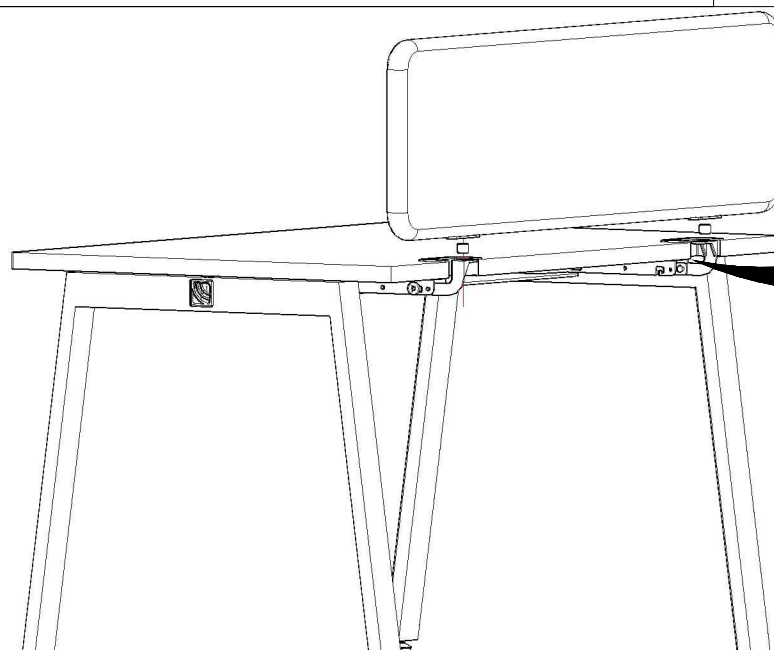


1  M8x20	2  M8x45	3  M8x30	4  M8x35	5  M8	6  M8x60	7  Ø5x17	YAN
8  M6x16	9  M6x14	10  Ø5x20	11  Ø5x25	12  M5	13  M5x12		


A

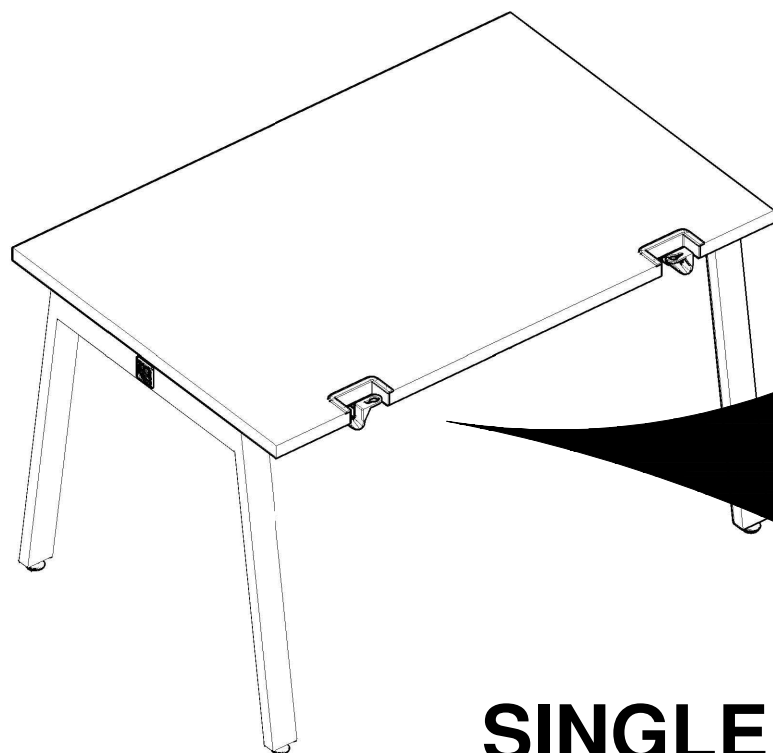


SINGLE DESK

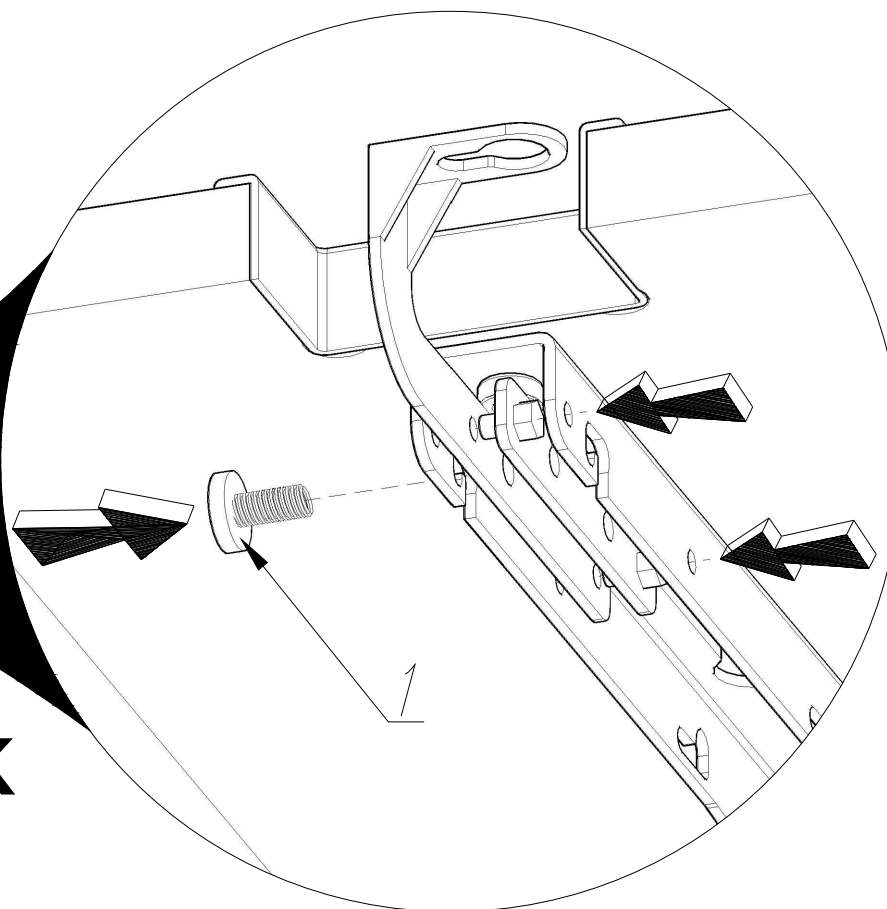


B

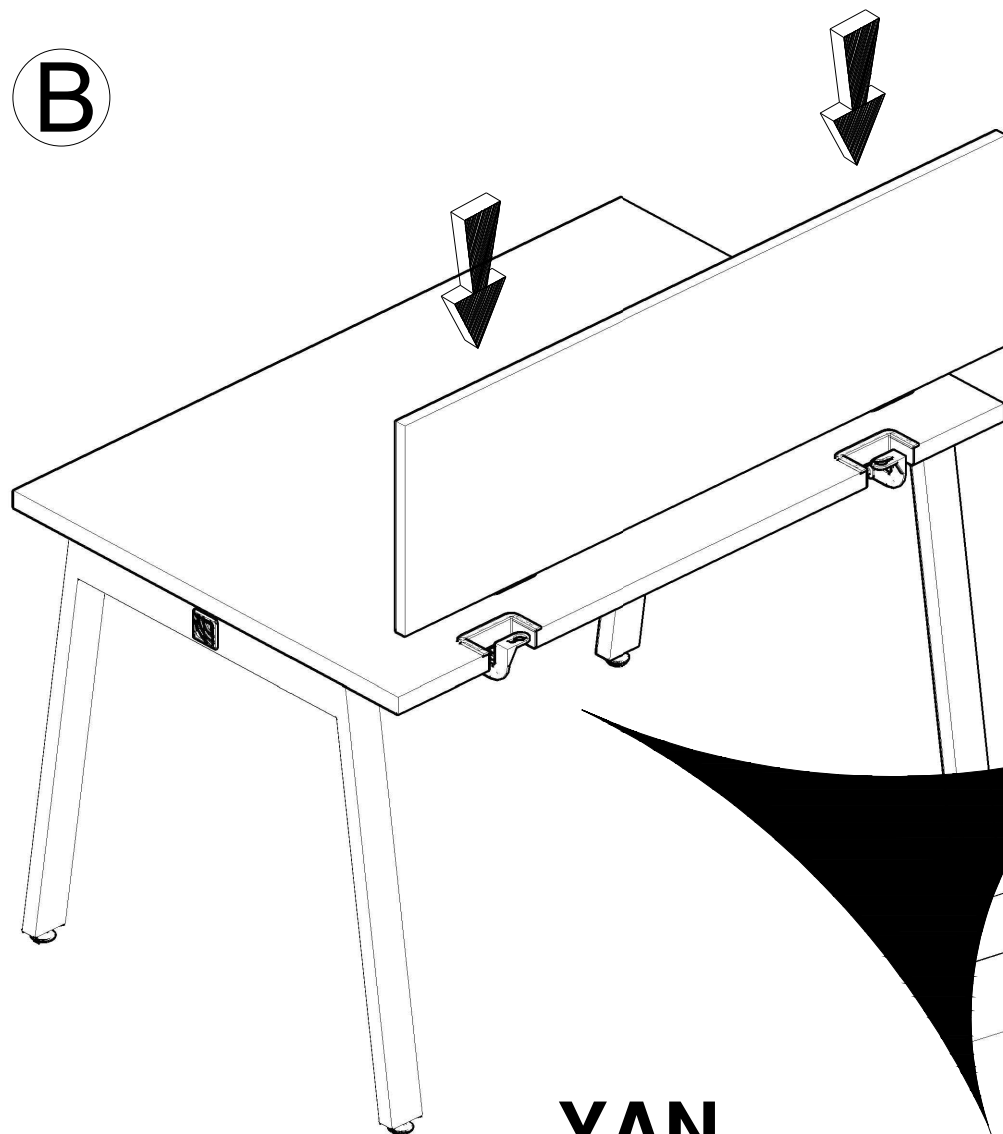


YAN

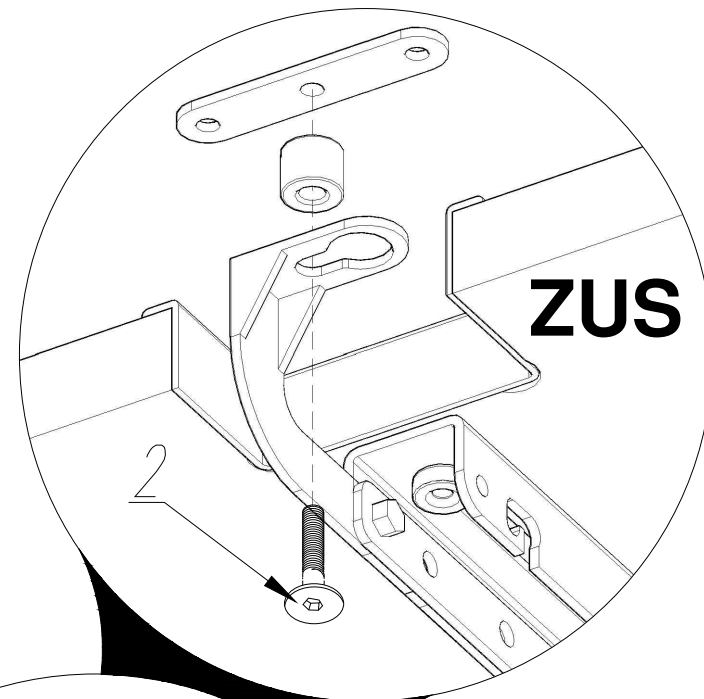





ZUS

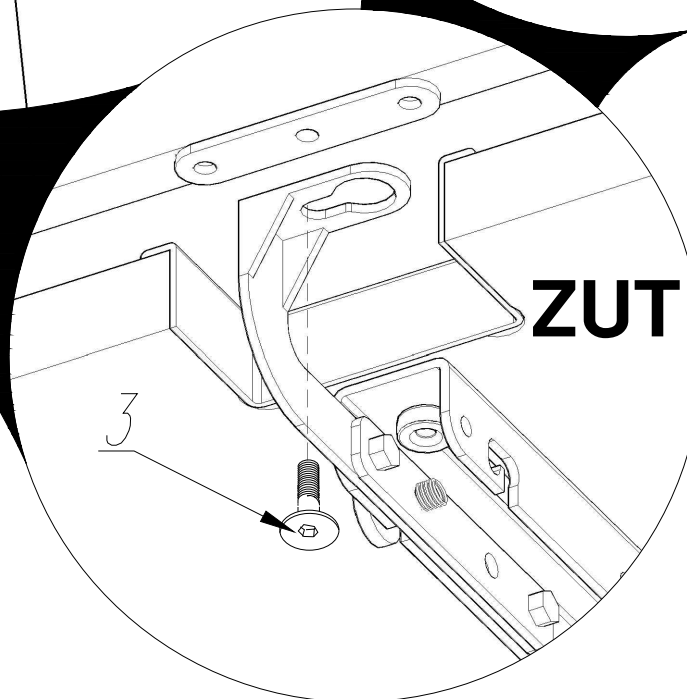


ZUT

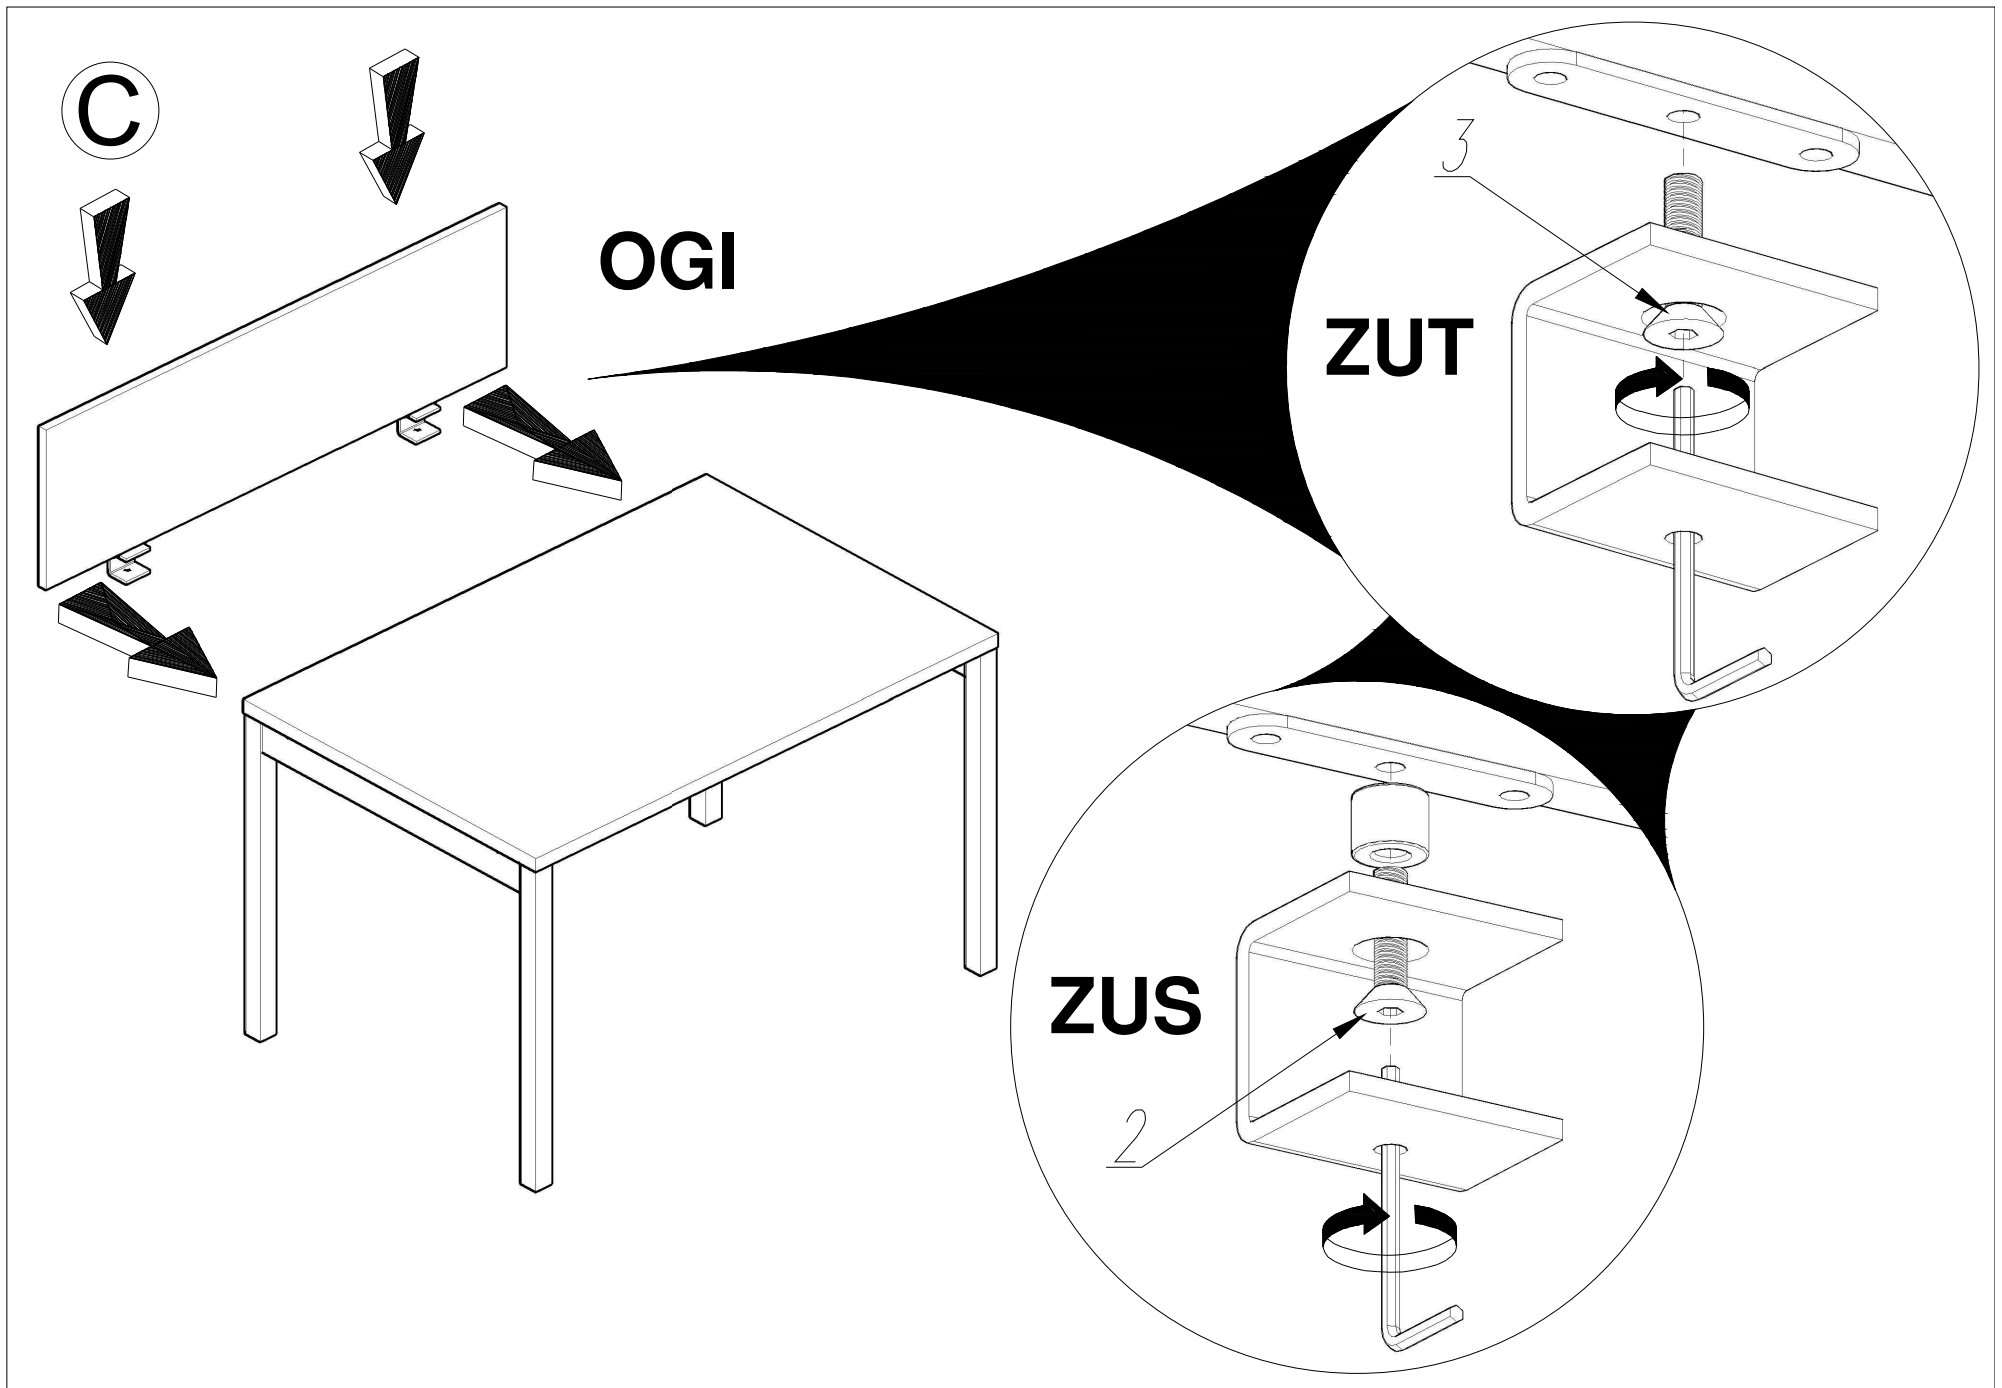


D

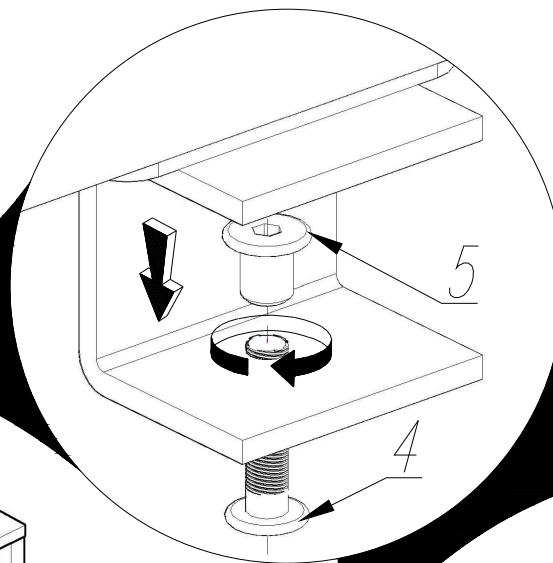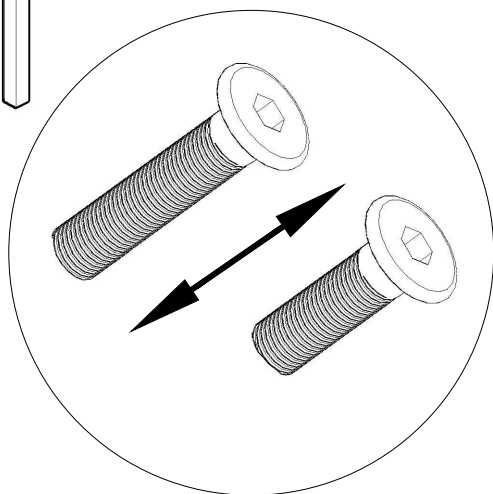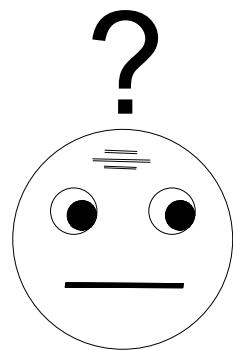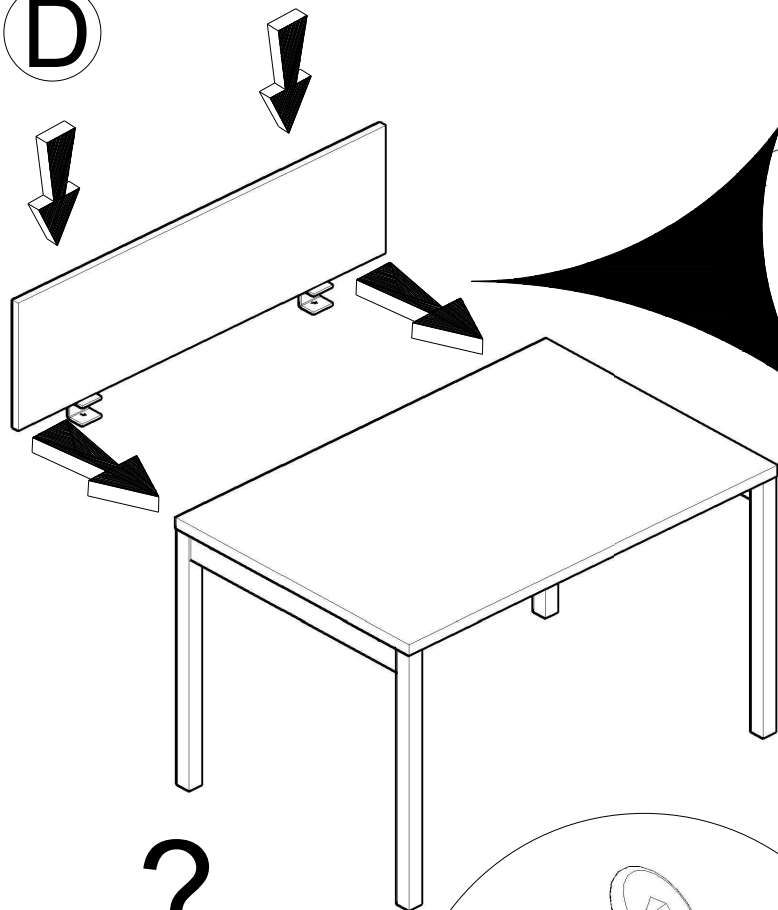

OGI




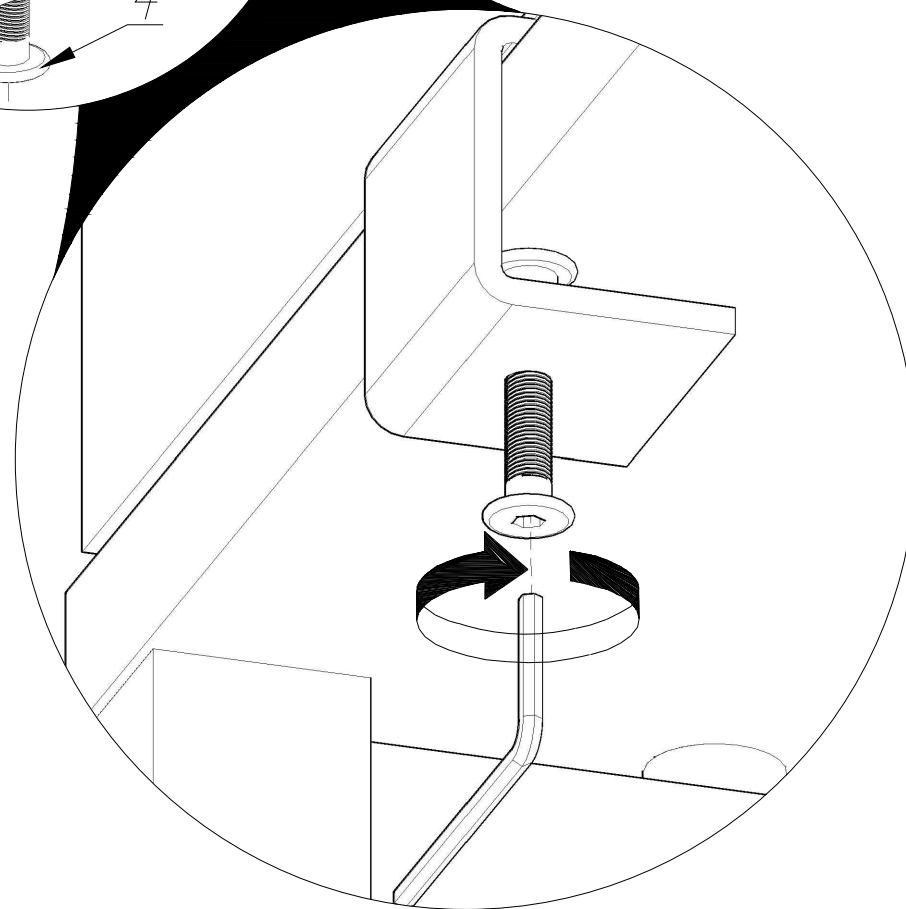


E

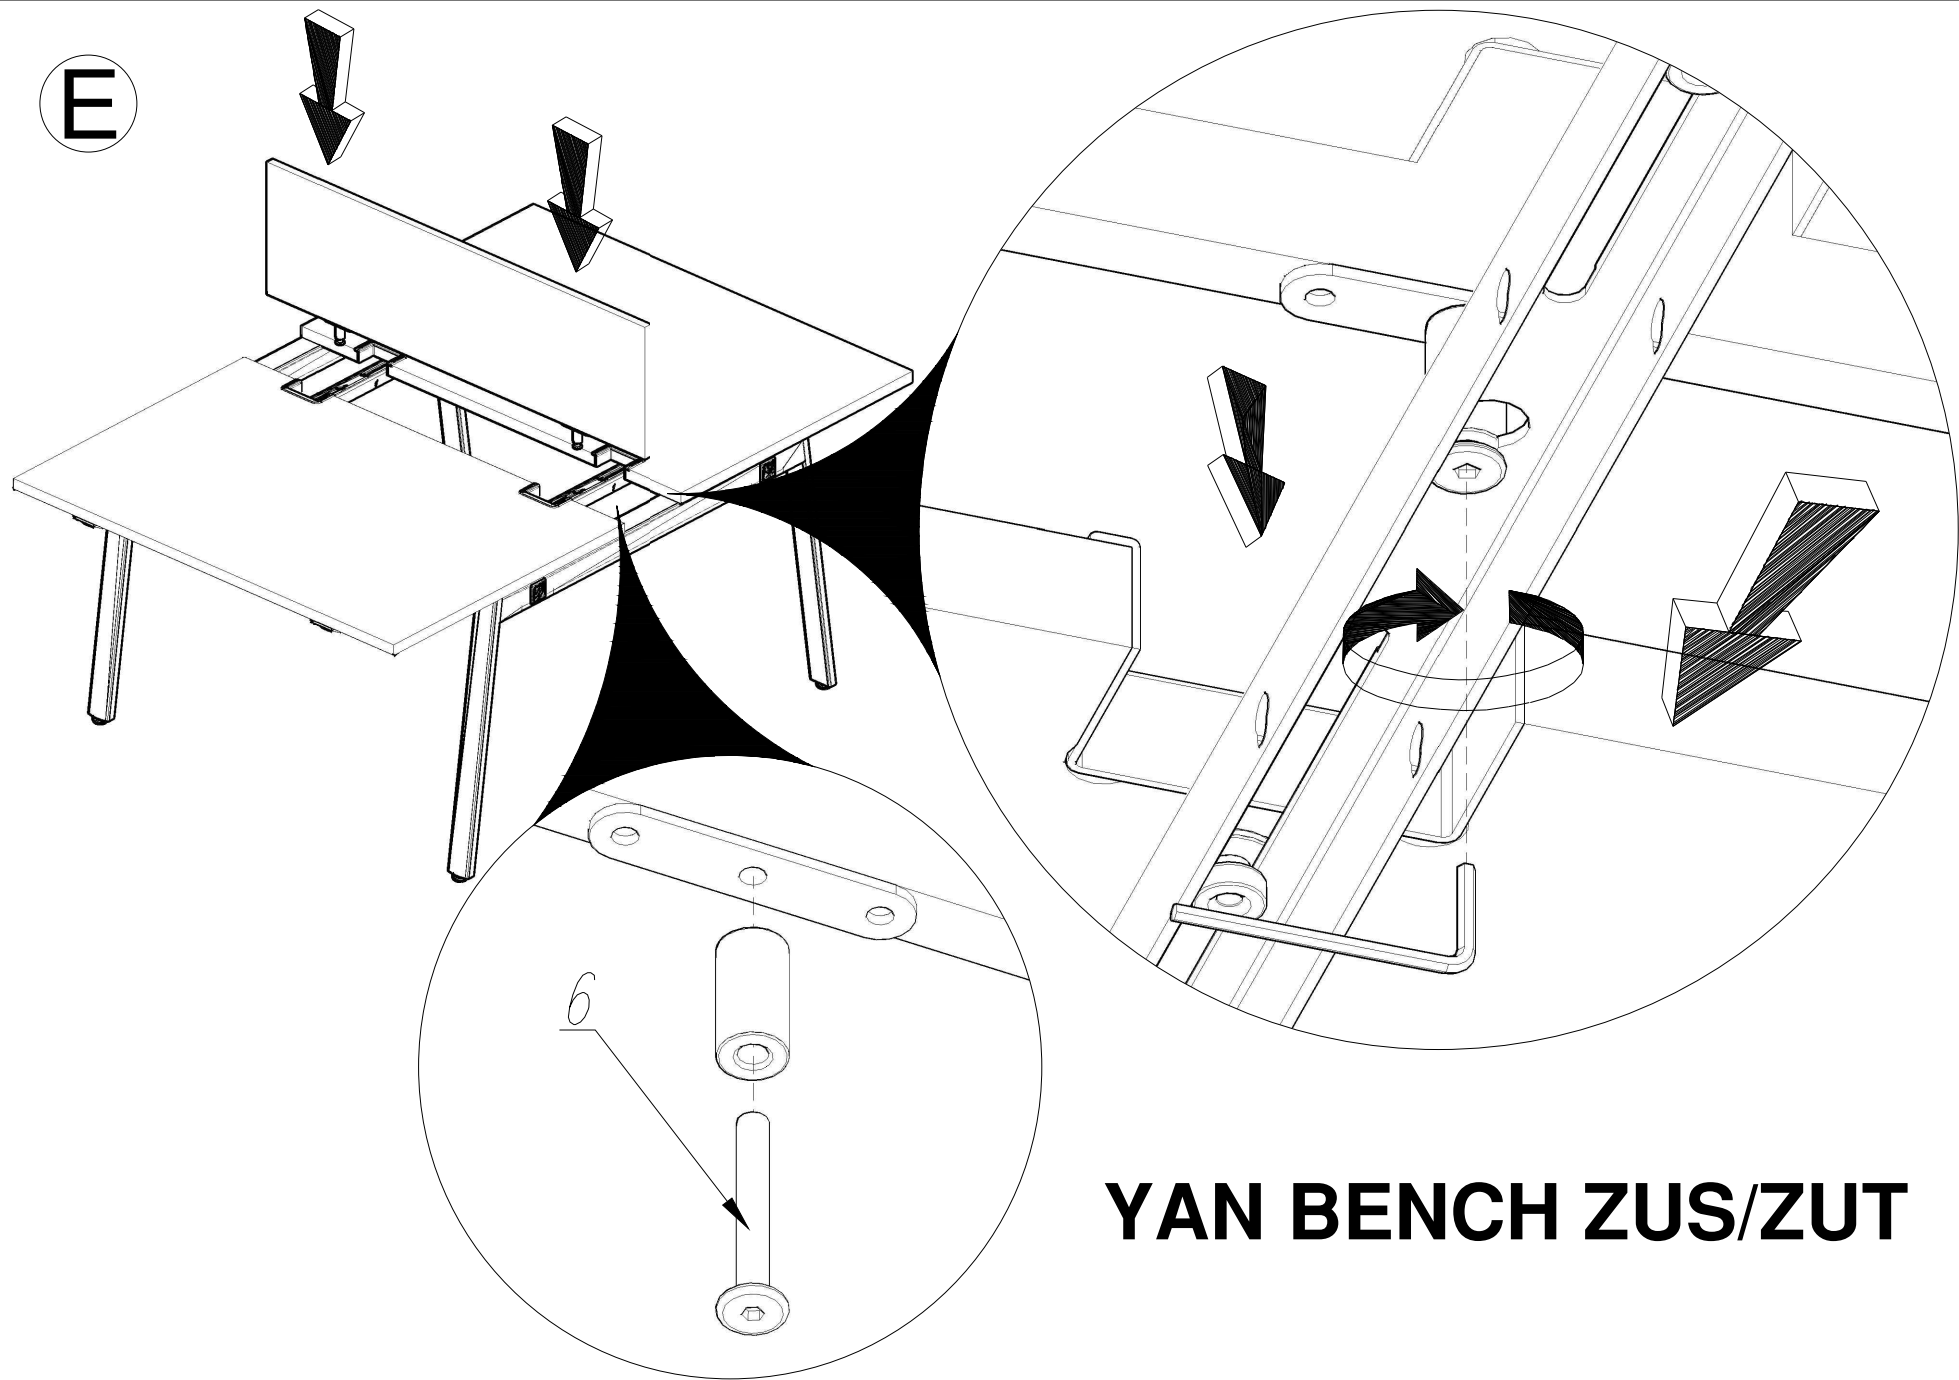

YAN BENCH ZUS/ZUT







F

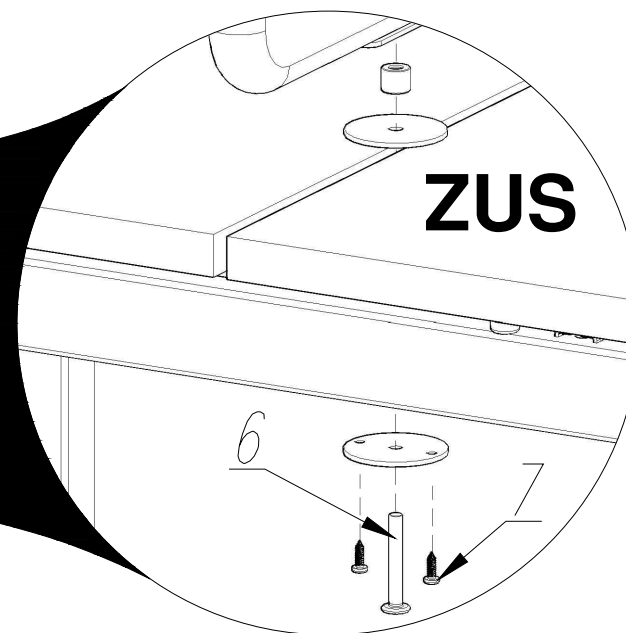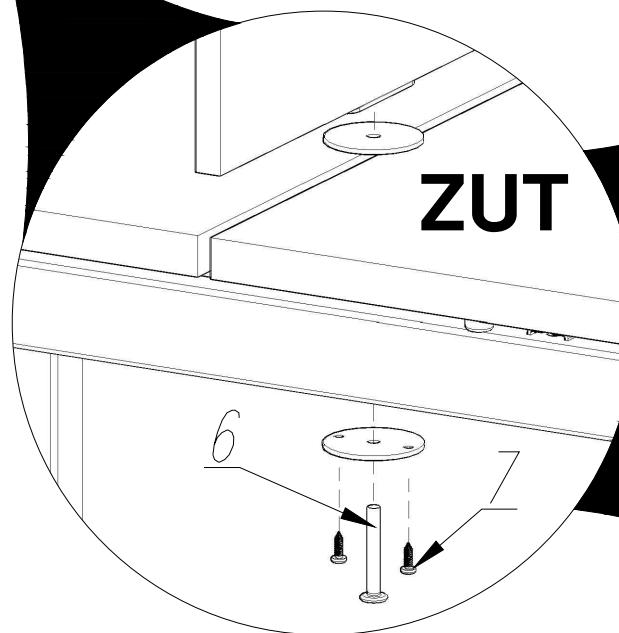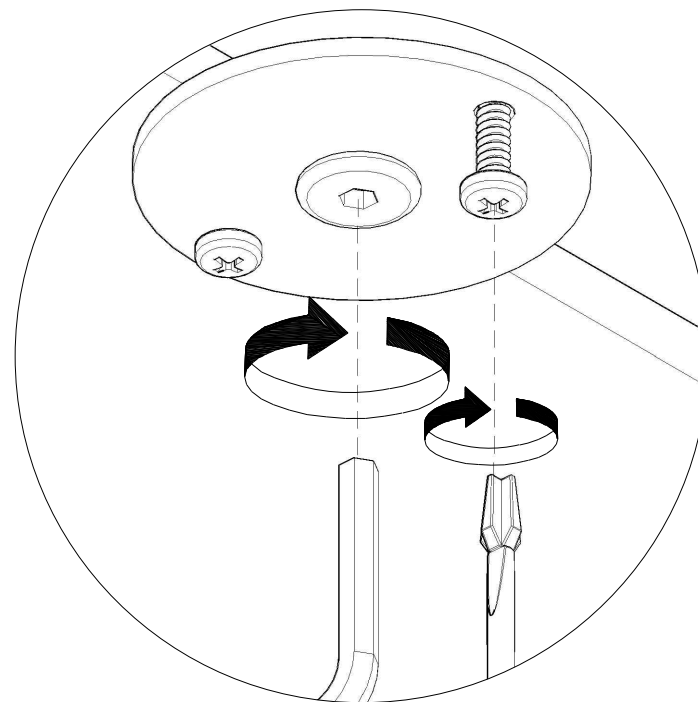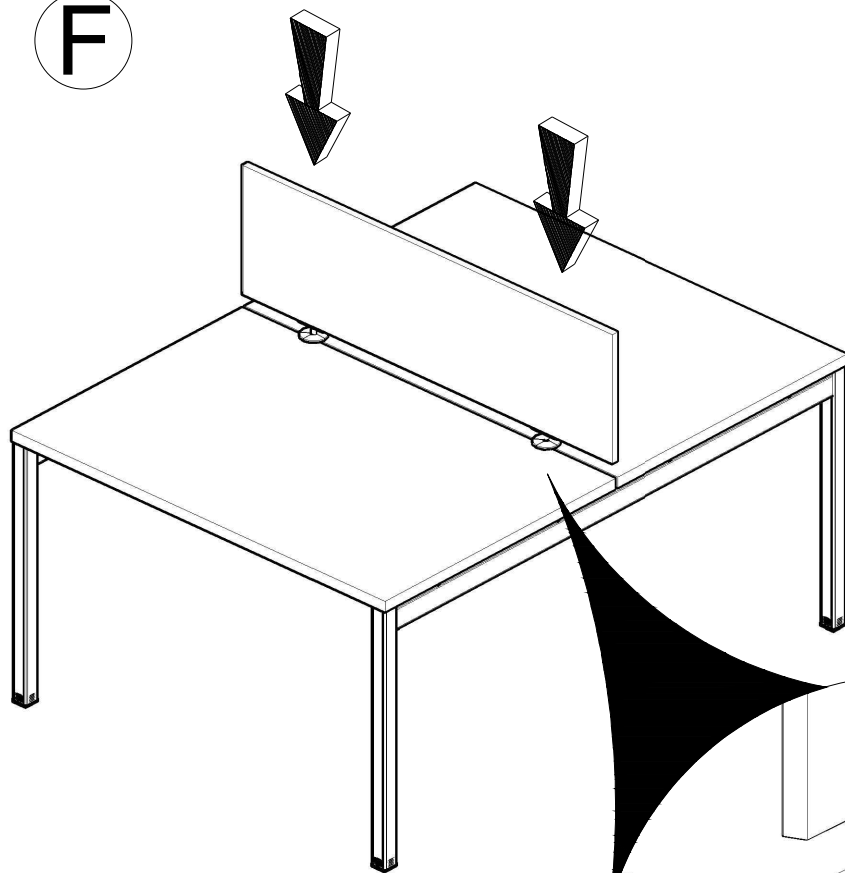




OGI BENCH

G

YAN UM

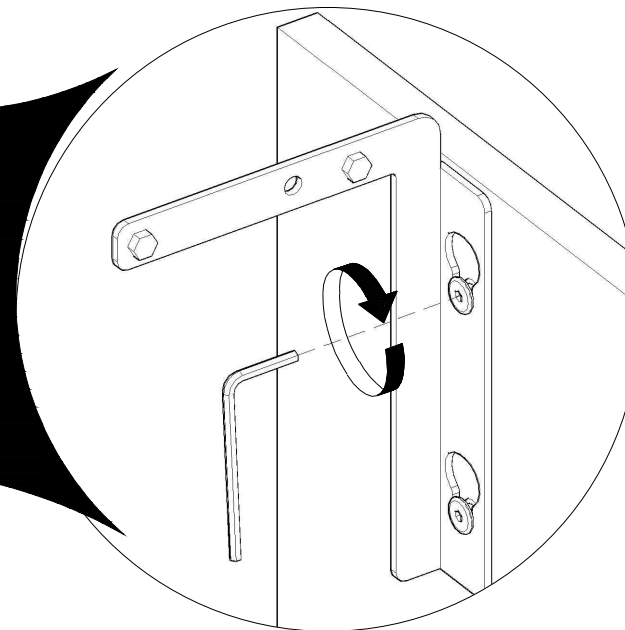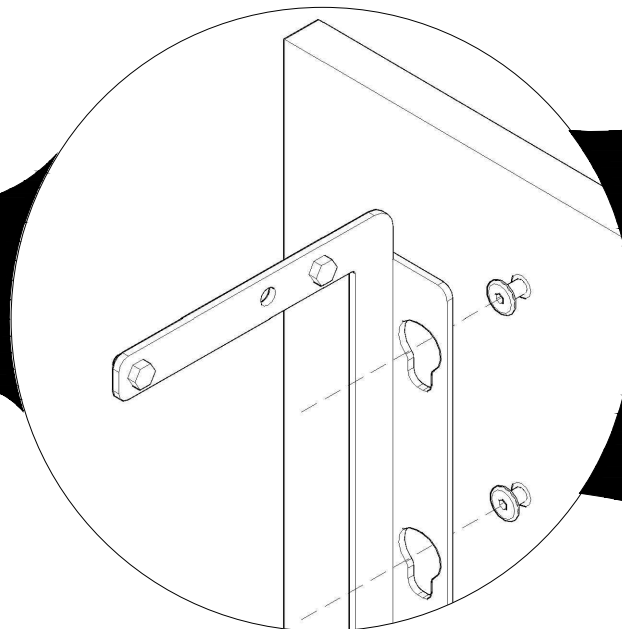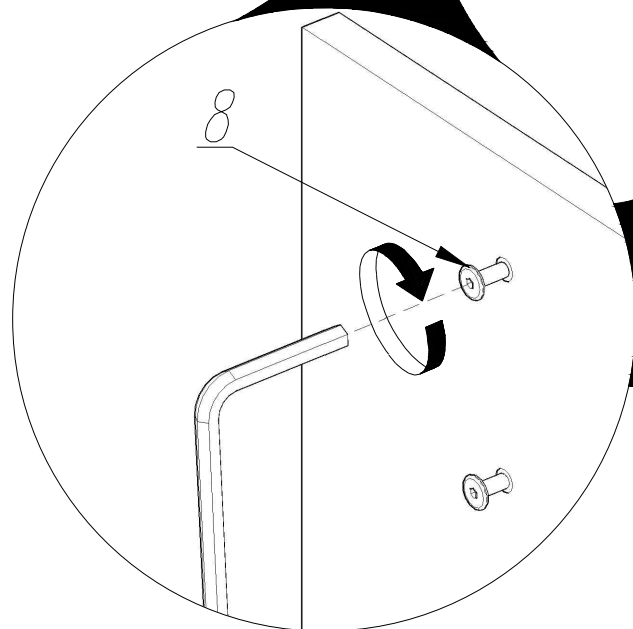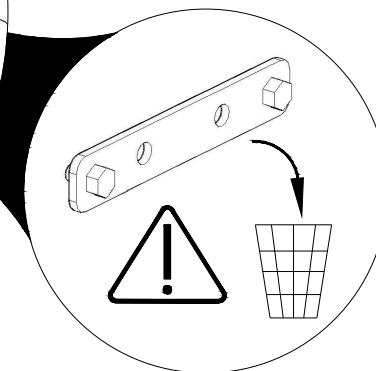
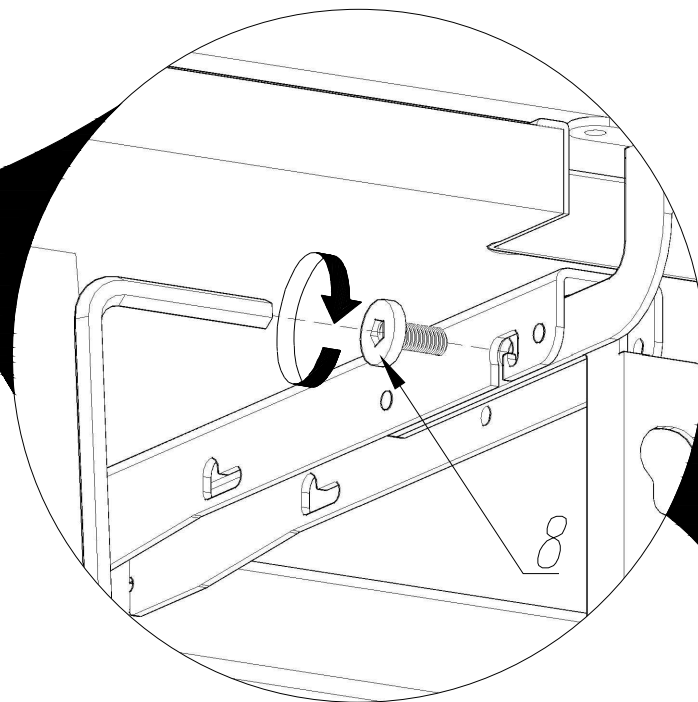
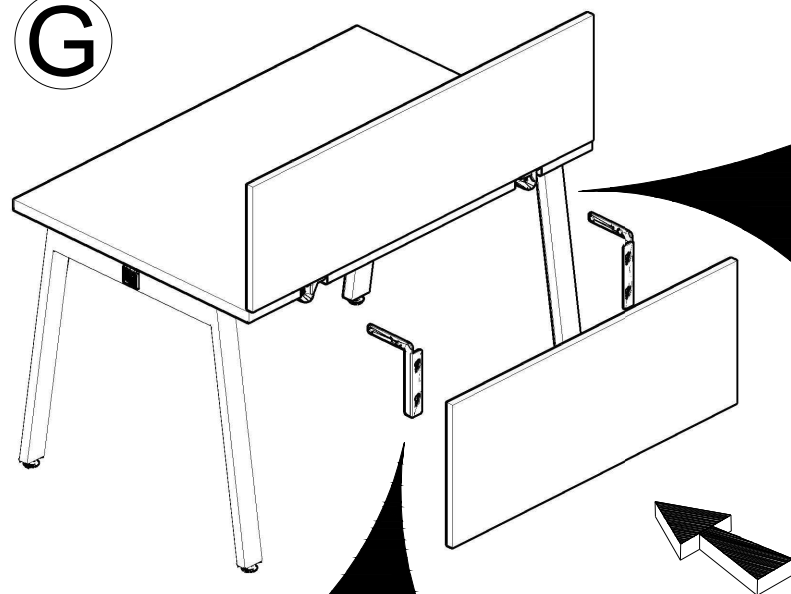


H

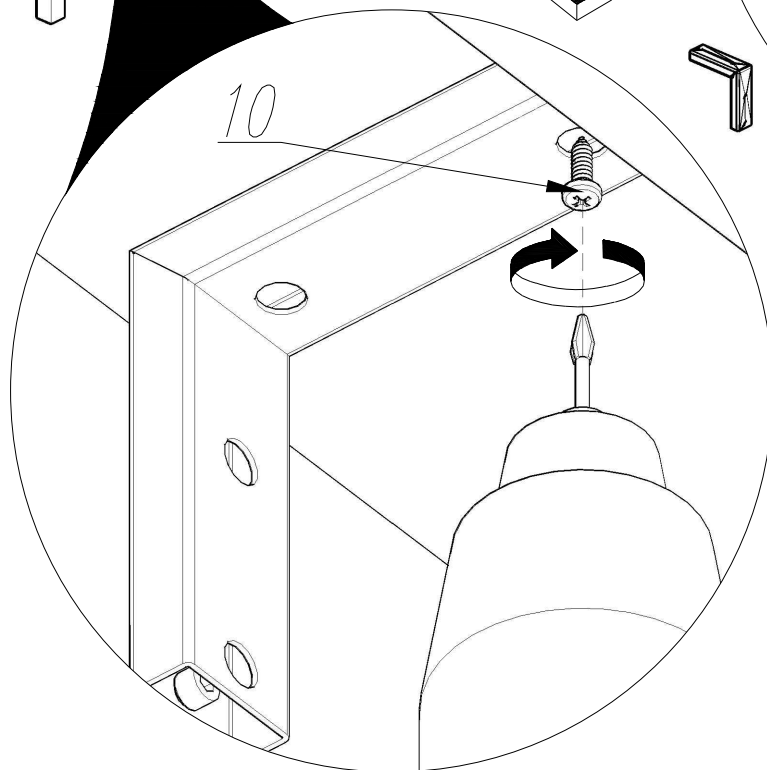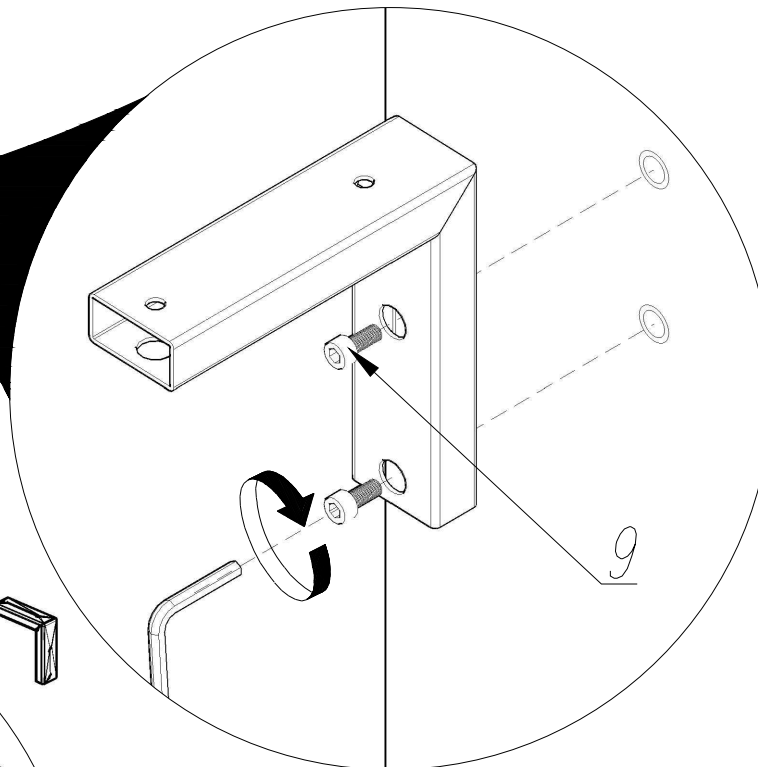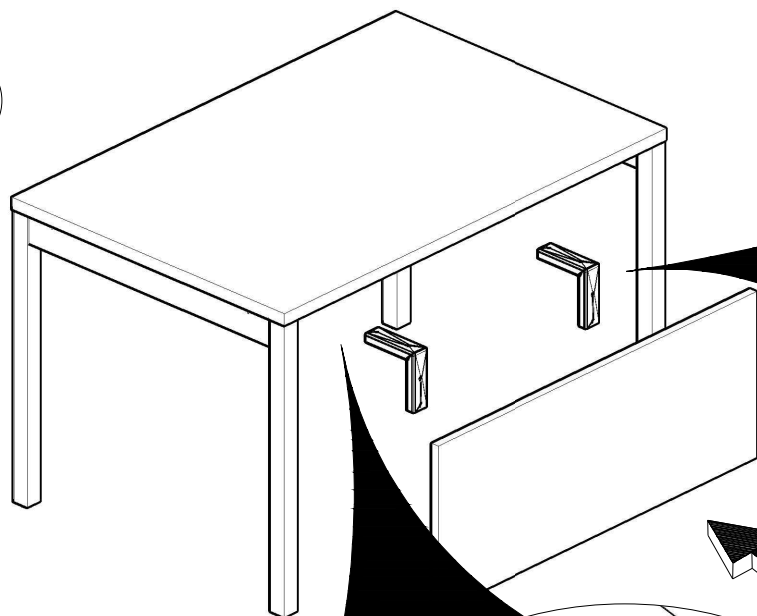




OGI UM

I

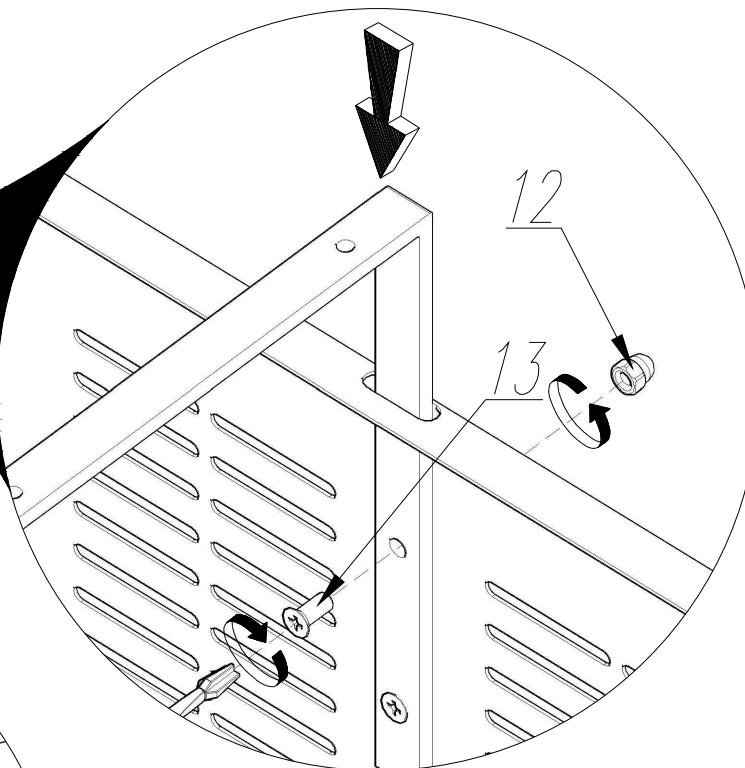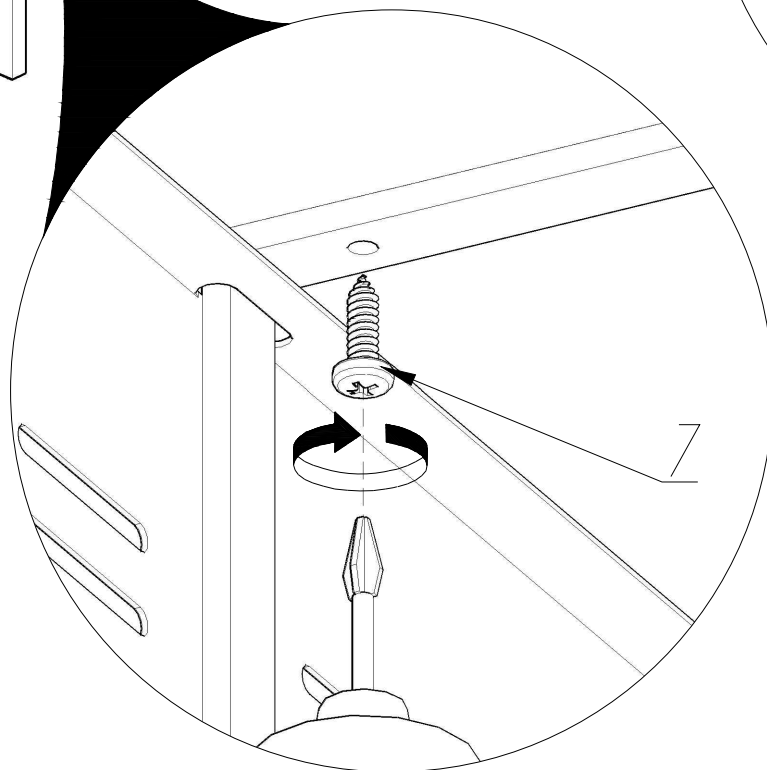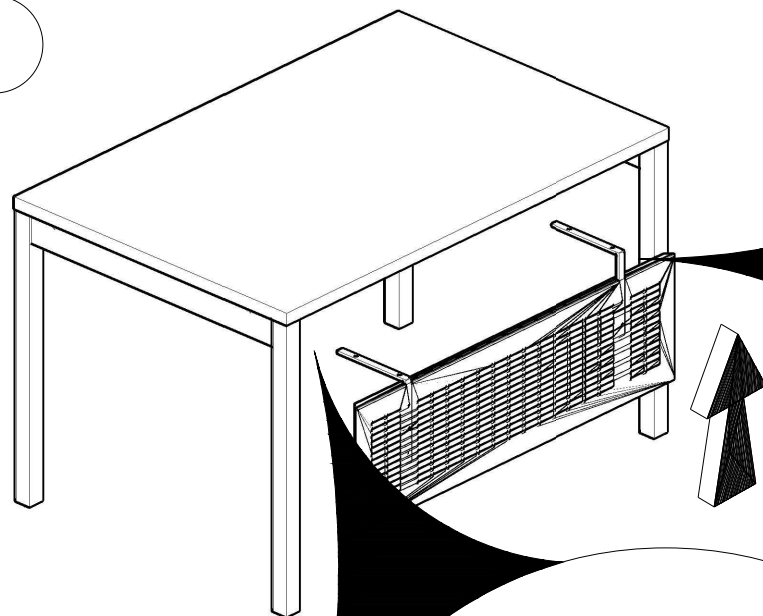





OGI UR

J

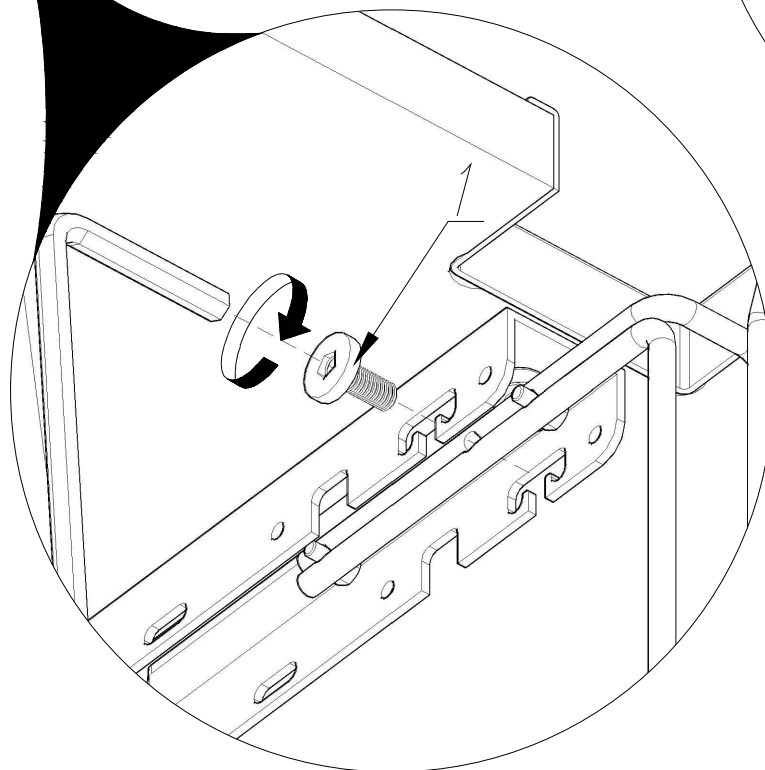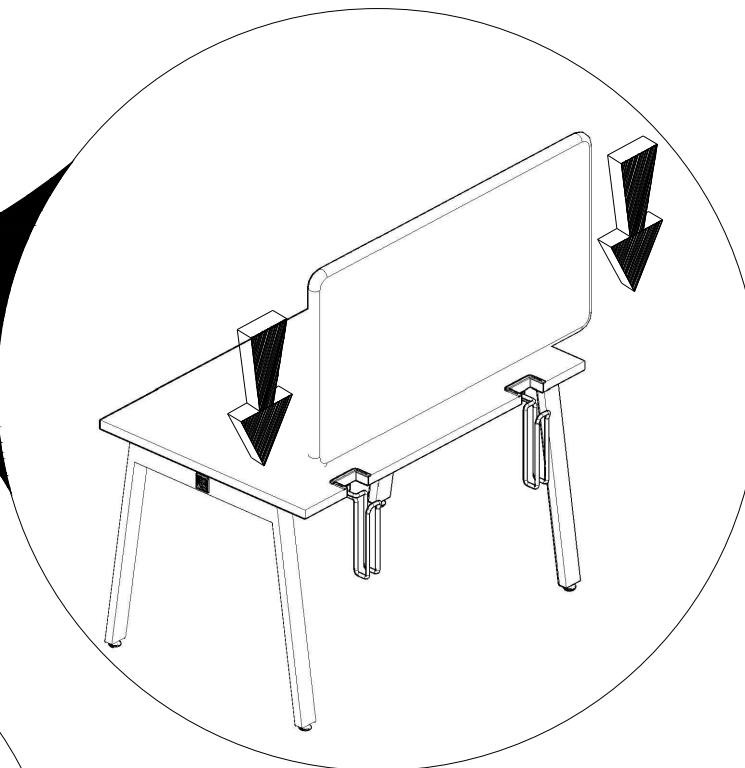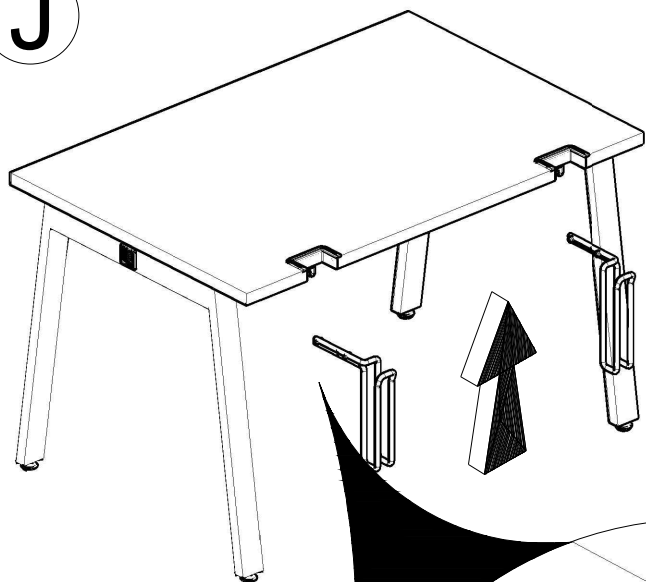


YAN ZPS

K

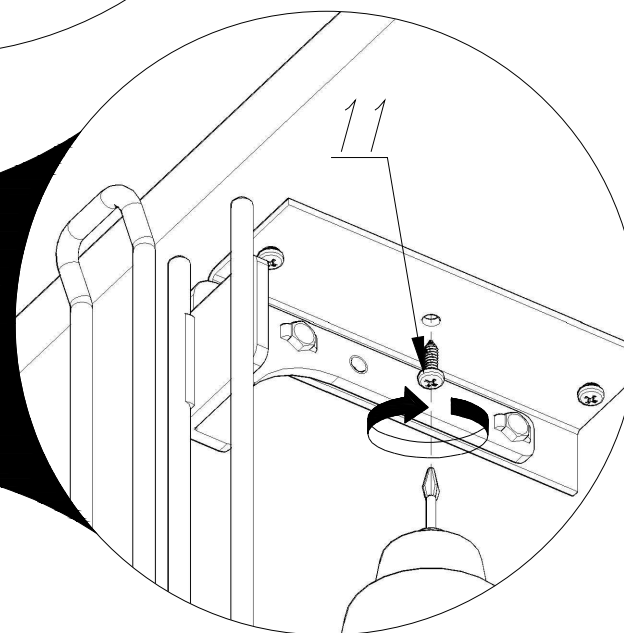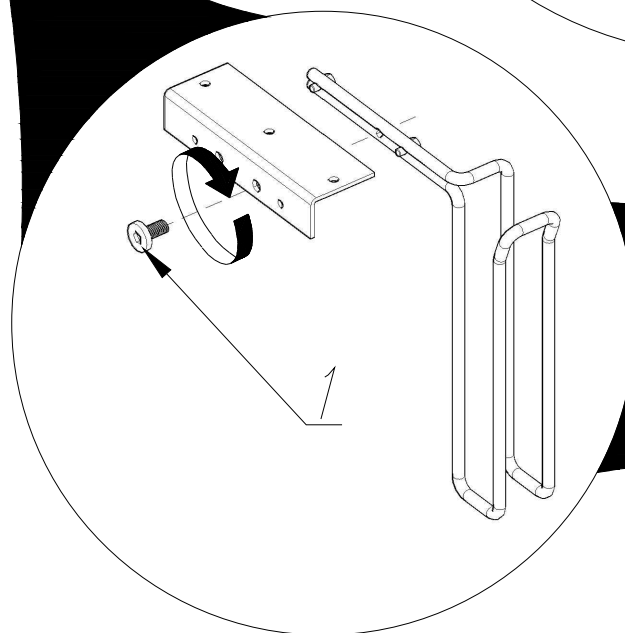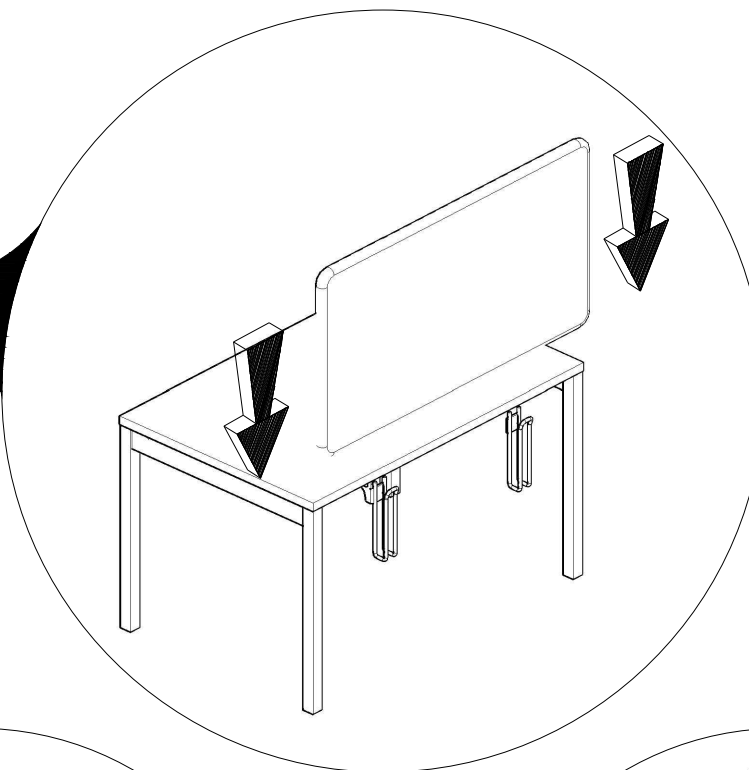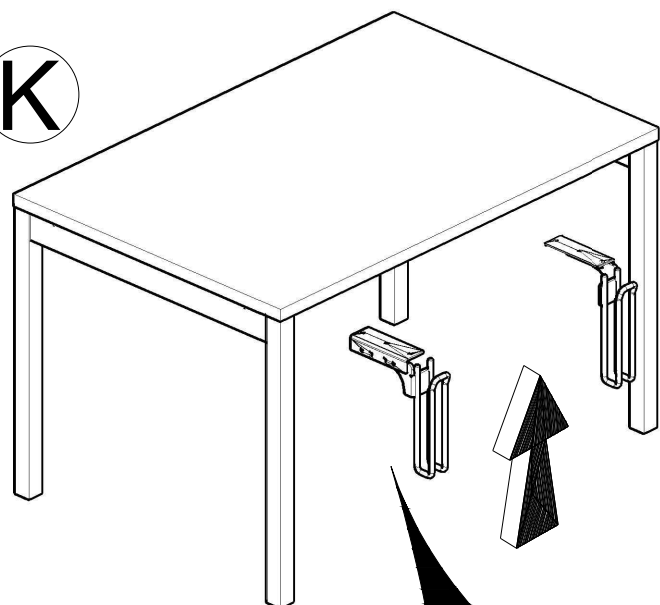


OGI ZPS

L

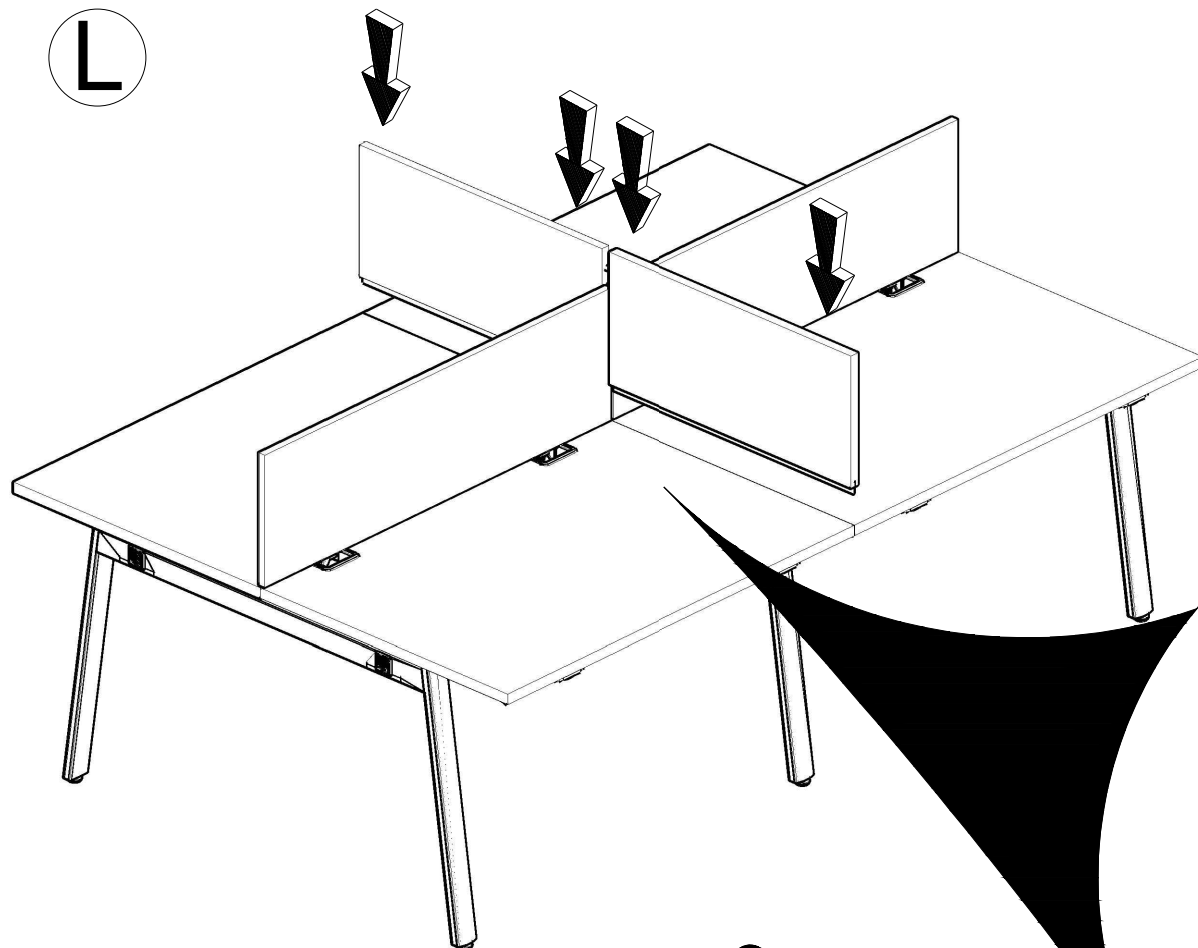


ZYT
ZYS

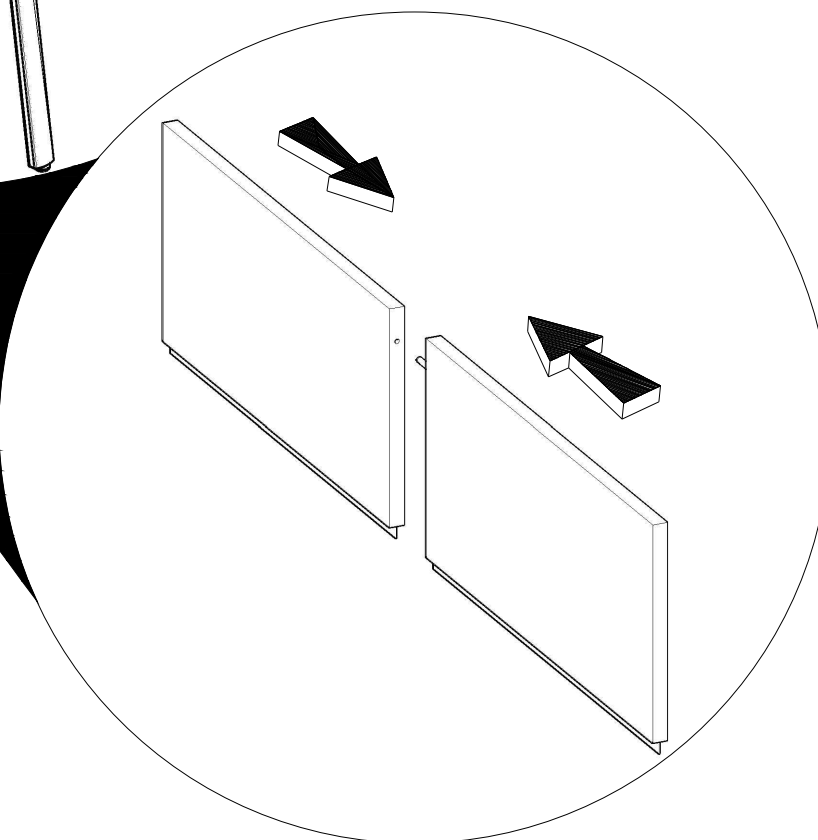


M

ZW

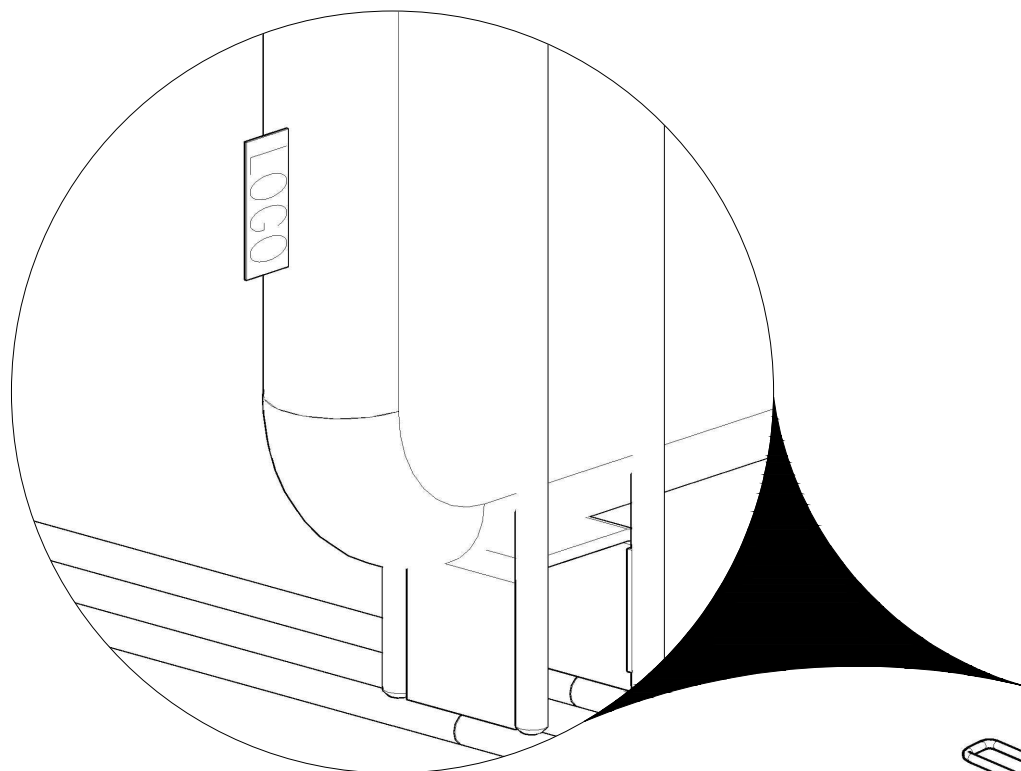


THIS SIDE DOWN

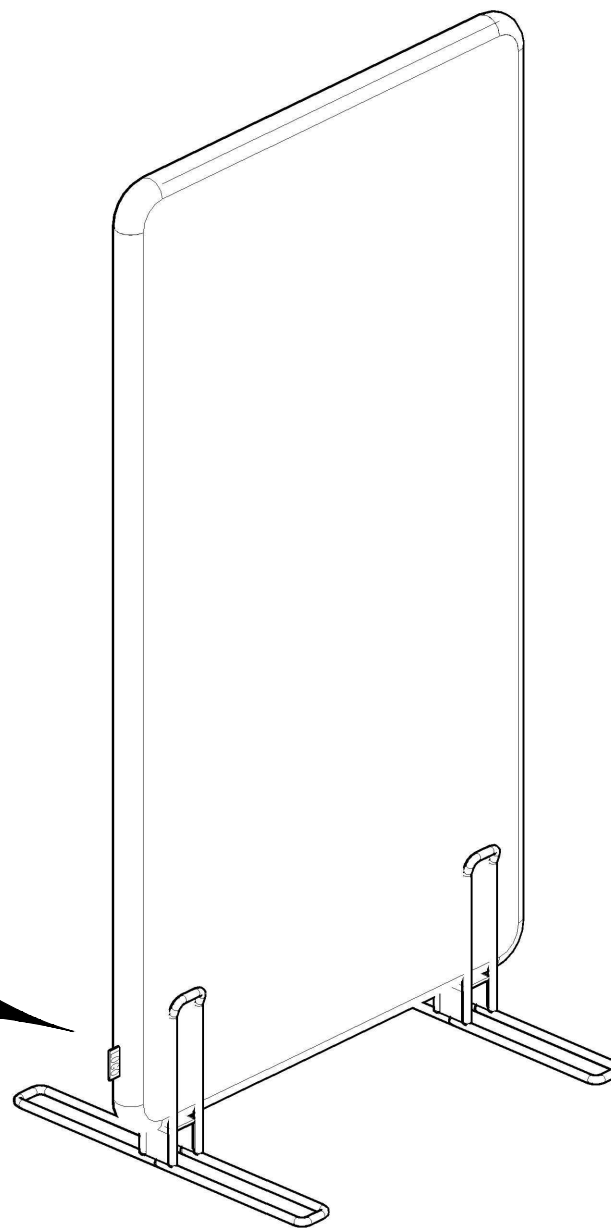

Assembling instruction – TWIN panels

1. Stick two bumpers onto rear side of your accessories in lower corners

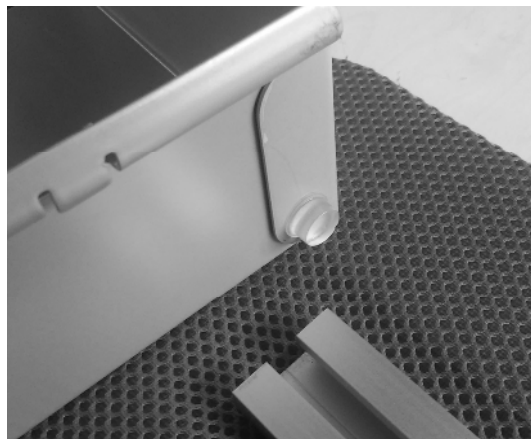

2. Hang your accessories on panel TWIN

